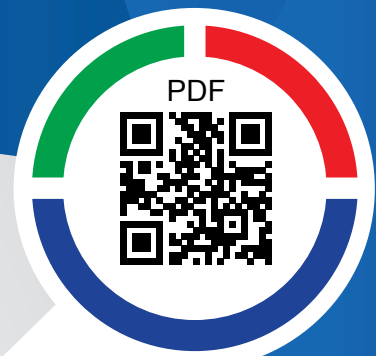


# GA500

## AC Micro Drives for Industrial Applications Technical Manual

Type CIPR-GA50Cxxxxxxxx

Models 200 V Class, Single-Phase Input: 0.1 to 4.0 kW  
200 V Class, Three-Phase Input: 0.1 to 22 kW  
400 V Class, Three-Phase Input: 0.37 to 30 kW



---

**This Page Intentionally Blank**

# Table of Contents

|     |   |    |
|-----|---|----|
| i.  | Preface and General Precautions . . . . .                         | 13 |
| i.1 | Receiving . . . . .   | 14 |
|     | Glossary . . . . .  | 14 |
|     | About Registered Trademarks . . . . .                             | 14 |
| i.2 | Using the Product Safely . . . . .                                | 15 |
|     | Explanation of Signal Words . . . . .                             | 15 |
|     | Section Safety . . . . .  | 15 |
|     | Warning Label Content and Location . . . . .                      | 17 |
| i.3 | Warranty Information . . . . .                                    | 18 |
|     | Exclusion of Liability . . . . .                                  | 18 |
| 1.  | Receiving . . . . .   | 19 |
| 1.1 | Section Safety . . . . .  | 20 |
| 1.2 | Model Number and Nameplate Check . . . . .                        | 21 |
|     | Nameplate . . . . .   | 21 |
|     | How to Read the Model Number . . . . .                            | 21 |
| 1.3 | Features and Advantages of Control Methods . . . . .              | 24 |
| 2.  | Mechanical Installation . . . . .                                 | 27 |
| 2.1 | Section Safety . . . . .  | 28 |
| 2.2 | Installation Environment . . . . .                                | 29 |
| 2.3 | Installation Position and Clearances . . . . .                    | 30 |
|     | Install Single Drive . . . . .                                    | 30 |
|     | Install the Drive Horizontally . . . . .                          | 30 |
|     | Install Drives Side-by-Side . . . . .                             | 32 |
| 2.4 | Moving the Drive . . . . .  | 33 |
| 2.5 | Drive Models and Drive Watt Loss . . . . .                        | 34 |
|     | Drive Watt Loss (without Built-in EMC Filter) . . . . .           | 34 |
|     | Drive Watt Loss (with Built-in EMC Filter) . . . . .              | 37 |
| 2.6 | Removing/Reattaching Covers . . . . .                             | 41 |
|     | Remove the Front Cover . . . . .                                  | 41 |
|     | Reattach the Front Cover . . . . .                                | 41 |
| 2.7 | Remove and Reattach the Keypad . . . . .                          | 43 |
|     | Remove the Keypad . . . . .                                       | 43 |
|     | Reattach the Keypad . . . . .                                     | 43 |
| 2.8 | Install the Keypad in a Control Panel or Another Device . . . . . | 44 |
|     | Operate the Keypad from a Remote Location . . . . .               | 44 |
| 2.9 | Installation Methods . . . . .                                    | 45 |
|     | Standard Installation . . . . .                                   | 45 |
|     | External Heatsink . . . . .                                       | 45 |
| 3.  | Electrical Installation . . . . .                                 | 47 |

|      |  |     |
|------|--|-----|
| 3.1  | Section Safety   | 48  |
| 3.2  | Electrical Installation  | 50  |
|      | Standard Connection Diagram  | 50  |
| 3.3  | Main Circuit Wiring  | 53  |
|      | Motor and Main Circuit Connections   | 53  |
|      | Configuration of Main Circuit Terminal Block   | 53  |
|      | Main Circuit Terminal Functions  | 62  |
|      | Wire Selection   | 62  |
|      | Main Circuit Terminal and Motor Wiring   | 70  |
| 3.4  | Main Circuit Terminal Block Wiring Procedure   | 74  |
|      | Wire to the Main Circuit Terminal Block  | 74  |
| 3.5  | Control Circuit Wiring   | 78  |
|      | Control Circuit Connection Diagram   | 78  |
|      | Control Circuit Terminal Block Functions   | 79  |
|      | Control Circuit Terminal Configuration   | 82  |
|      | Wiring the Control Circuit Terminal  | 83  |
|      | Switches and Jumpers on the Terminal Board   | 84  |
| 3.6  | Control I/O Connections  | 86  |
|      | Set Sinking Mode/Sourcing Mode   | 86  |
|      | Pulse Train Output   | 86  |
|      | Set the Input Signal for the MFAI Terminal A2  | 87  |
|      | Set the Output Signal for the MFAO Terminal AM   | 88  |
|      | Switch ON Termination Resistor for MEMOBUS/Modbus Communications                             | 88  |
| 3.7  | Connect the Drive to a PC  | 89  |
| 3.8  | External Interlock   | 90  |
| 3.9  | Braking Resistor Installation  | 91  |
|      | Install a Braking Resistor: ERF-Type   | 91  |
|      | Install a Braking Resistor Unit: LKEB-Type   | 91  |
|      | Dynamic Braking Option Overload Protection   | 92  |
| 3.10 | Drive Wiring Protection  | 93  |
|      | Installing a Residual Current Monitoring/Detection (RCM/RCD)                                 | 93  |
|      | Installing a Molded-Case Circuit Breaker (MCCB) or Residual Current Monitor/Device (RCM/RCD) | 93  |
| 3.11 | Dynamic Braking Option, Motor Protection   | 94  |
|      | Install an Electromagnetic Contactor (MC) at the Input Side of the Drive                     | 94  |
|      | Installing a Thermal Overload Relay on the Drive Output                                      | 94  |
| 3.12 | Improve the Power Factor   | 96  |
|      | Connect an AC Reactor or a DC Reactor  | 96  |
| 3.13 | Prevent Switching Surge  | 97  |
| 3.14 | Decrease Noise   | 98  |
|      | Connect a Noise Filter to the Input Side (Primary Side)                                      | 98  |
|      | Connect a Noise Filter to the Output Side (Secondary Side)                                   | 98  |
| 3.15 | Protect the Drive during Failures  | 100 |
|      | Factory-Recommended Branch Circuit Protection for UL Listing                                 | 100 |
| 3.16 | Wiring Checklist   | 102 |
| 3.17 | Motor Application Precautions  | 104 |
|      | Precautions for Existing Standard Motors   | 104 |
|      | Precautions for PM Motors  | 105 |
|      | Precautions for Specialized Motors   | 105 |
|      | Notes on the Power Transmission Mechanism  | 106 |
| 4.   | Startup Procedure and Test Run   | 107 |
| 4.1  | Section Safety   | 108 |
| 4.2  | Overview of Keypad Components and Functions  | 109 |

|      |  |     |
|------|--|-----|
|      | Indicator flashing statuses .....  | 110 |
|      | Keypad Mode and Menu Displays .....  | 111 |
| 4.3  | Set up the Drive with General-Purpose Setup Mode .....                                       | 112 |
| 4.4  | Drive Mode and Programming Mode .....  | 114 |
|      | Drive Mode .....   | 115 |
|      | Programming Mode .....   | 115 |
|      | Change Parameter Settings .....  | 116 |
|      | Verify and Set the Changed Parameters (Verify Menu) .....                                    | 116 |
|      | How to Switch between LOCAL and REMOTE .....   | 117 |
| 4.5  | Start-up Procedures .....  | 118 |
|      | Flowchart A: Connect and Run the Motor with Minimal Setting Changes .....                    | 118 |
|      | Sub-Chart A-1: Induction Motor Auto-Tuning and Test Run Procedure .....                      | 120 |
|      | Sub-Chart A-2: PM Motor Auto-Tuning and Test Run Procedure .....                             | 120 |
|      | Subchart A-3: EZ Open Loop Vector Control Test Run Procedure .....                           | 121 |
| 4.6  | Items to Check before Starting Up the Drive .....  | 123 |
|      | Check before You Energize the Drive .....  | 123 |
|      | Check after You Energize the Drive .....   | 123 |
| 4.7  | Keypad Operation .....   | 124 |
|      | Digital character mapping table .....  | 124 |
|      | Show the Monitor .....   | 124 |
|      | Check Modified Parameters .....  | 124 |
|      | Set and View Quick Setup Parameters .....  | 125 |
|      | Change Parameter Settings .....  | 125 |
|      | Save a Backup of Parameters .....  | 126 |
|      | Write Backed-up Parameters to the Drive .....  | 127 |
|      | Verify Keypad Parameters and Drive Parameters .....  | 127 |
|      | Delete Parameters Backed Up to the Keypad .....  | 128 |
| 4.8  | Automatic Parameter Settings Optimized for Specific Applications (Application Presets) ..... | 129 |
| 4.9  | Auto-Tuning .....  | 130 |
|      | Auto-Tuning for Induction Motors .....   | 130 |
|      | Auto-Tuning for PM Motors .....  | 131 |
|      | Auto-Tuning in EZ Open Loop Vector Control Method .....                                      | 132 |
|      | ASR and Inertia Tuning .....   | 133 |
|      | Precautions before Auto-Tuning .....   | 134 |
| 4.10 | Test Run .....   | 137 |
|      | No-Load Test Run .....   | 137 |
|      | Do a No-Load Test Run .....  | 137 |
|      | Actual-Load Test Run .....   | 137 |
|      | Do an Actual-Load Test Run .....   | 138 |
| 4.11 | Fine Tuning during Test Runs (Adjust the Control Function) .....                             | 139 |
|      | V/f Control .....  | 139 |
|      | Open Loop Vector Control Method .....  | 140 |
|      | Open Loop Vector Control for PM Motors .....   | 141 |
|      | Advanced Open Loop Vector Control Method for PM Motors .....                                 | 142 |
|      | EZ Open Loop Vector Control Method .....   | 143 |
| 4.12 | Test Run Checklist .....   | 144 |
| 5.   | Standards Compliance .....   | 147 |
| 5.1  | Section Safety .....   | 148 |
| 5.2  | European Standards .....   | 150 |
|      | EU Declaration of Conformity .....   | 151 |
|      | CE Low Voltage Directive Compliance .....  | 156 |
|      | EMC Directive .....  | 168 |
| 5.3  | UL Standards .....   | 176 |

|      |  |     |
|------|--|-----|
|      | Area of Use . . . . .  | 176 |
|      | Wire the Main Circuit Terminal Block . . . . .   | 176 |
|      | Low Voltage Wiring for Control Circuit Terminals . . . . .   | 188 |
|      | Drive Motor Overload and Overheat Protection . . . . .   | 188 |
| 5.4  | China RoHS Compliance . . . . .  | 194 |
|      | Information on Hazardous Substances in This Product . . . . .  | 194 |
| 5.5  | 对应中国RoHS指令 . . . . .   | 195 |
|      | 本产品中含有有害物质的信息 . . . . .  | 195 |
| 5.6  | Safe Disable Input . . . . .   | 196 |
|      | Safe Disable Specifications . . . . .  | 196 |
|      | Notes . . . . .  | 197 |
|      | Using the Safe Disable Function . . . . .  | 197 |
| 6.   | Network Communications . . . . .   | 203 |
| 6.1  | Section Safety . . . . .   | 204 |
| 6.2  | Field Bus Network Support . . . . .  | 205 |
| 6.3  | MEMOBUS/Modbus Communications . . . . .  | 206 |
|      | Configure Master/Slave . . . . .   | 206 |
|      | Communication Specifications . . . . .   | 206 |
|      | Communication with the PLC . . . . .   | 206 |
|      | MEMOBUS/Modbus Drive Operations . . . . .  | 208 |
|      | Communications Timing . . . . .  | 208 |
|      | Message Format . . . . .   | 209 |
|      | Examples of Messages for Commands/Responses . . . . .  | 211 |
|      | Enter Command . . . . .  | 215 |
|      | Self-Diagnostics . . . . .   | 216 |
|      | Communications Data Table . . . . .  | 217 |
|      | Error Codes . . . . .  | 232 |
| 7.   | Troubleshooting . . . . .  | 235 |
| 7.1  | Section Safety . . . . .   | 236 |
| 7.2  | Types of Faults, Minor Faults, Alarms, and Errors. . . . .   | 238 |
| 7.3  | List of Fault, Minor Fault, Alarm, and Error Codes . . . . .   | 239 |
| 7.4  | Fault . . . . .  | 244 |
| 7.5  | Minor Faults/Alarms. . . . .   | 260 |
| 7.6  | Parameter Setting Errors . . . . .   | 270 |
| 7.7  | Auto-Tuning Errors . . . . .   | 275 |
| 7.8  | Backup Function Operating Mode Display and Errors . . . . .  | 279 |
| 7.9  | Diagnosing and Resetting Faults . . . . .  | 281 |
|      | Fault Occurs Without Power Loss . . . . .  | 281 |
|      | Fault Occurs Without Power Loss . . . . .  | 281 |
|      | Fault Reset Procedure . . . . .  | 281 |
| 7.10 | Troubleshooting Without Fault Display. . . . .   | 282 |
|      | Typical Problems . . . . .   | 282 |
|      | The Parameter Settings Will Not Change . . . . .   | 282 |
|      | The Motor Does Not Rotate after You Enter a Run Command . . . . .                                    | 283 |
|      | The Motor Rotates in the Opposite Direction from the Run Command . . . . .                           | 283 |
|      | The Motor Rotates in Only One Direction . . . . .  | 284 |
|      | The Motor Is Too Hot . . . . .   | 284 |
|      | The Correct Auto-Tuning Mode Is Not Available . . . . .  | 284 |
|      | The Motor Stalls during Acceleration or Accel/Decel Time Is Too Long . . . . .                       | 284 |
|      | The Drive Frequency Reference Is Different than the Controller Frequency Reference Command . . . . . | 285 |
|      | The Motor Speed Is Not Stable When Using a PM Motor . . . . .  | 285 |
|      | There Is Too Much Motor Oscillation and the Rotation Is Irregular . . . . .                          | 286 |

|   |            |
|---|------------|
| Deceleration Takes Longer Than Expected When Dynamic Braking Is Enabled . . . . .           | 286        |
| The Load Falls When a Brake Is Applied . . . . .  | 286        |
| There Is Audible Noise from the Drive or Motor Cables When the Drive Is Energized . . . . . | 286        |
| Residual Current Monitoring/Detection (RCM/RCD) Trips During Run . . . . .                  | 287        |
| Motor Rotation Causes Unexpected Audible Noise from Connected Machinery . . . . .           | 287        |
| Motor Rotation Causes Oscillation or Hunting . . . . .                                      | 287        |
| PID Output Fault . . . . .  | 287        |
| The Starting Torque Is Not Sufficient . . . . .   | 287        |
| The Motor Rotates after the Drive Output Is Shut Off . . . . .                              | 288        |
| The Output Frequency Is Lower Than the Frequency Reference . . . . .                        | 288        |
| The Motor Will Not Restart after a Loss of Power . . . . .                                  | 288        |
| <b>8. Periodic Inspection and Maintenance . . . . .</b>                                     | <b>289</b> |
| 8.1 Section Safety . . . . .  | 290        |
| 8.2 Inspection . . . . .  | 292        |
| Recommended Daily Inspection . . . . .  | 292        |
| Recommended Periodic Inspection . . . . .   | 292        |
| 8.3 Maintenance . . . . .   | 294        |
| 8.4 Replace Cooling Fans . . . . .  | 296        |
| Number of Cooling Fans . . . . .  | 296        |
| Replace the Cooling Fan (Procedure A) . . . . .   | 296        |
| Replace the Cooling Fan (Procedure B) . . . . .   | 299        |
| 8.5 Replace the Drive . . . . .   | 301        |
| About the Control Circuit Board . . . . .   | 301        |
| Replace the Drive . . . . .   | 301        |
| 8.6 Storage Guidelines . . . . .  | 305        |
| <b>9. Disposal . . . . .</b>  | <b>307</b> |
| 9.1 Section Safety . . . . .  | 308        |
| 9.2 Disposal Instructions . . . . .   | 309        |
| 9.3 WEEE Directive . . . . .  | 310        |
| <b>10. Specifications . . . . .</b>   | <b>311</b> |
| 10.1 Section Safety . . . . .   | 312        |
| 10.2 Drive Duty Modes . . . . .   | 313        |
| 10.3 Model Specifications (Single-Phase 200 V Class) . . . . .                              | 314        |
| 10.4 Model Specifications (Three-Phase 200 V Class) . . . . .                               | 315        |
| 10.5 Model Specifications (Three-Phase 400 V Class) . . . . .                               | 319        |
| 10.6 Drive Specifications . . . . .   | 321        |
| 10.7 Drive Derating . . . . .   | 324        |
| Carrier Frequency Settings and Rated Current Values . . . . .                               | 324        |
| Derating Depending on Ambient Temperature . . . . .   | 326        |
| Altitude Derating . . . . .   | 327        |
| 10.8 Drive Exterior and Mounting Dimensions . . . . .                                       | 328        |
| Drive Models and Exterior and Mounting Dimensions . . . . .                                 | 328        |
| IP20/UL Open Type . . . . .   | 328        |
| 10.9 Peripheral Devices and Options . . . . .   | 333        |
| <b>11. Parameter List . . . . .</b>   | <b>335</b> |
| 11.1 Section Safety . . . . .   | 336        |
| 11.2 How to Read the Parameter List . . . . .   | 337        |
| Icons and Terms that Identify Parameters and Control Modes . . . . .                        | 337        |
| 11.3 Parameter Groups . . . . .   | 338        |

|       |  |     |
|-------|--|-----|
| 11.4  | A: Initialization Parameters                                   | 339 |
|       | A1: Initialization   | 339 |
|       | A2: User Parameters  | 340 |
| 11.5  | b: Application   | 341 |
|       | b1: Operation Mode Selection                                   | 341 |
|       | b2: DC Injection Braking and Short Circuit Braking             | 342 |
|       | b3: Speed Search   | 342 |
|       | b4: Timer Function   | 344 |
|       | b5: PID control  | 345 |
|       | b6: Dwell Function   | 348 |
|       | b8: Energy Saving  | 348 |
| 11.6  | C: Tuning  | 350 |
|       | C1: Accel & Decel Time   | 350 |
|       | C2: S-Curve Characteristics                                    | 350 |
|       | C3: Slip Compensation  | 351 |
|       | C4: Torque Compensation  | 352 |
|       | C5: Automatic Speed Regulator (ASR: Automatic Speed Regulator) | 352 |
|       | C6: Duty & Carrier Frequency                                   | 353 |
| 11.7  | d: Reference Settings  | 354 |
|       | d1: Frequency Reference  | 354 |
|       | d2: Reference Limits   | 355 |
|       | d3: Jump Frequency   | 356 |
|       | d4: Frequency Ref Up/Down & Hold                               | 356 |
|       | d6: Field Weakening /Forcing                                   | 357 |
|       | d7: Offset Frequency   | 357 |
| 11.8  | E: Motor Parameters  | 358 |
|       | E1: V/f Pattern for Motor 1                                    | 358 |
|       | E2: Motor Parameters   | 359 |
|       | E3: V/f Pattern for Motor 2                                    | 359 |
|       | E4: Motor 2 Parameters   | 360 |
|       | E5: PM Motor Settings  | 361 |
|       | E9: Motor Setting  | 361 |
| 11.9  | F: Options   | 363 |
|       | F1: Fault Detection in PG Speed Control                        | 363 |
|       | F6: Communication Options                                      | 364 |
|       | F7: Communication Options                                      | 367 |
| 11.10 | H: Terminal Functions  | 372 |
|       | H1: Digital Inputs   | 372 |
|       | H2: Digital Outputs  | 377 |
|       | H3: Analog Inputs  | 383 |
|       | H4: Analog Outputs   | 385 |
|       | H5: Modbus Communication                                       | 385 |
|       | H6: Pulse Train Input/Output                                   | 387 |
|       | H7: Virtual MFIO selection                                     | 387 |
| 11.11 | L: Protection Functions  | 389 |
|       | L1: Motor Protection   | 389 |
|       | L2: Power Loss Ride Through                                    | 390 |
|       | L3: Stall Prevention   | 391 |
|       | L4: Speed Detection  | 392 |
|       | L5: Fault Restart  | 393 |
|       | L6: Torque Detection   | 394 |
|       | L7: Torque Limit   | 395 |
|       | L8: Drive Protection   | 396 |
| 11.12 | n: Special Adjustment  | 399 |
|       | n1: Hunting Prevention   | 399 |
|       | n2: Auto Freq Regulator (AFR)                                  | 399 |
|       | n3: High Slip/Overexcite Braking                               | 399 |



|  |            |
|--|------------|
| n5: Feed Forward Control   | 400        |
| n6: Online Tuning  | 400        |
| n7: EZ Drive   | 400        |
| n8: PM Motor Control Tuning  | 401        |
| nA: PM Motor Control Tuning  | 404        |
| 11.13 o: Keypad-Related Settings   | 405        |
| o1: Keypad Display   | 405        |
| o2: Keypad Operation   | 407        |
| o3: Copy Keypad Function   | 408        |
| o4: Maintenance Monitors   | 408        |
| o5: Log Function   | 409        |
| 11.14 q: DriveWorksEZ Parameters   | 411        |
| q1-01 to qx-xx: Reserved for DriveWorksEZ  | 411        |
| 11.15 r: DWEZ Connection 1-20  | 412        |
| r1-01 to r1-40: DriveWorksEZ Connection Parameters 1 to 20 (Upper / Lower)                         | 412        |
| 11.16 T: Motor Tuning  | 413        |
| T0: Tuning Mode Selection  | 413        |
| T1: Induction Motor Auto-Tuning  | 413        |
| T2: PM Motor Auto-Tuning   | 414        |
| T3: ASR and Inertia Tuning   | 415        |
| T4: EZ Tuning  | 415        |
| 11.17 U: Monitors  | 416        |
| U1: Operation Status Monitors  | 416        |
| U2: Fault Trace  | 418        |
| U3: Fault History  | 420        |
| U4: Maintenance Monitors   | 420        |
| U5: PID Monitors   | 424        |
| U6: Operation Status Monitors  | 425        |
| U8: DriveWorksEZ Monitors  | 426        |
| 11.18 Parameters that Change from the Default Settings with A1-02 [Control Method Selection]       | 430        |
| 11.19 Parameters that Change from the Default Settings with E3-01 [Motor 2 Control Mode Selection] | 434        |
| 11.20 Parameters Changed by E1-03 [V/f Pattern Selection]  | 435        |
| 11.21 Defaults by Drive Model and Duty Rating ND/HD  | 436        |
| Single-Phase 200 V Class   | 436        |
| Three-Phase 200 V Class  | 438        |
| Three-Phase 400 V Class  | 444        |
| 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]  | 450        |
| Yaskawa SMRA Series SPM Motors   | 450        |
| Yaskawa SMRD Series SPM Motors   | 451        |
| Yaskawa SSR1 Series IPM Motors (Derated Torque)  | 452        |
| <b>12. Parameter Details</b>   | <b>459</b> |
| 12.1 Section Safety  | 460        |
| 12.2 A: Initialization Parameters  | 461        |
| A1: Initialization   | 461        |
| A2: User Parameters  | 478        |
| 12.3 b: Application  | 480        |
| b1: Operation Mode Selection   | 480        |
| b2: DC Injection Braking and Short Circuit Braking   | 490        |
| b3: Speed Search   | 493        |
| b4: Timer Function   | 501        |
| b5: PID control  | 502        |
| b6: Dwell Function   | 519        |

|       |  |     |
|-------|--|-----|
|       | b8: Energy Saving . . . . .                                      | 520 |
| 12.4  | C: Tuning . . . . .  | 524 |
|       | C1: Accel & Decel Time . . . . .                                 | 524 |
|       | C2: S-Curve Characteristics . . . . .                            | 529 |
|       | C3: Slip Compensation . . . . .                                  | 530 |
|       | C4: Torque Compensation . . . . .                                | 534 |
|       | C5: Auto Speed Regulator (ASR) . . . . .                         | 535 |
|       | C6: Duty & Carrier Frequency . . . . .                           | 540 |
| 12.5  | d: References . . . . .  | 544 |
|       | d1: Frequency Reference . . . . .                                | 544 |
|       | d2: Reference Limits . . . . .                                   | 550 |
|       | d3: Jump Frequency . . . . .                                     | 550 |
|       | d4: Frequency Ref Up/Down & Hold . . . . .                       | 552 |
|       | d6: Field Weakening /Forcing . . . . .                           | 558 |
|       | d7: Offset Frequency . . . . .                                   | 558 |
| 12.6  | E: Motor Parameters . . . . .                                    | 560 |
|       | E1: V/f Pattern for Motor 1 . . . . .                            | 560 |
|       | E2: Motor Parameters . . . . .                                   | 568 |
|       | E3: V/f Pattern for Motor 2 . . . . .                            | 570 |
|       | E4: Motor 2 Parameters . . . . .                                 | 572 |
|       | E5: PM Motor Settings . . . . .                                  | 575 |
|       | E9: Motor Setting . . . . .                                      | 577 |
| 12.7  | F: Options . . . . .   | 580 |
|       | F1: Fault Detection in PG Speed Control . . . . .                | 580 |
|       | F6, F7: Communication Options . . . . .                          | 582 |
| 12.8  | H: Terminal Function Selection . . . . .                         | 603 |
|       | H1: Digital Inputs . . . . .                                     | 603 |
|       | MFDI Setting Values . . . . .                                    | 606 |
|       | H2: Digital Outputs . . . . .                                    | 624 |
|       | H2 MFDO Parameters . . . . .                                     | 626 |
|       | MFDO Setting Values . . . . .                                    | 632 |
|       | H3: Analog Inputs . . . . .                                      | 645 |
|       | H3: MFAI Parameters . . . . .                                    | 647 |
|       | Multi-Function Analog Input Terminal Settings . . . . .          | 650 |
|       | H4: Analog Outputs . . . . .                                     | 656 |
|       | H5: Memobus/Modbus Communication . . . . .                       | 658 |
|       | H6: Pulse Train Input/Output . . . . .                           | 662 |
|       | H7: Virtual MFIO Selection . . . . .                             | 665 |
| 12.9  | L: Protection Functions . . . . .                                | 669 |
|       | L1: Motor Protection . . . . .                                   | 669 |
|       | L2: Power Loss Ride Through . . . . .                            | 675 |
|       | L3: Stall Prevention . . . . .                                   | 685 |
|       | L4: Speed Detection . . . . .                                    | 694 |
|       | L5: Fault Restart . . . . .                                      | 696 |
|       | L6: Torque Detection . . . . .                                   | 699 |
|       | L7: Torque Limit . . . . .                                       | 704 |
|       | L8: Drive Protection . . . . .                                   | 707 |
| 12.10 | n: Special Adjustment . . . . .                                  | 714 |
|       | n1: Hunting Prevention . . . . .                                 | 714 |
|       | n2: Auto Freq Regulator (AFR) . . . . .                          | 715 |
|       | n3: High Slip Braking (HSB) and Overexcitation Braking . . . . . | 716 |
|       | n5: Feed Forward Control . . . . .                               | 719 |
|       | n6: Online Tuning . . . . .                                      | 722 |
|       | n7: EZ Drive . . . . .   | 722 |
|       | n8: PM Motor Control Tuning . . . . .                            | 724 |
|       | nA: PM Motor Control Tuning . . . . .                            | 732 |
| 12.11 | o: Keypad-Related Settings . . . . .                             | 733 |

---

|                                      |     |
|--------------------------------------|-----|
| o1: Keypad Display Selection .....   | 733 |
| o2: Keypad Operation .....           | 740 |
| o3: Copy Function .....              | 743 |
| o4: Maintenance Mon Settings .....   | 745 |
| o5: Log Function.....                | 748 |
| 12.12 T: Auto-Tuning .....           | 753 |
| T0: Tuning Mode Selection .....      | 753 |
| T1: Induction Motor Auto-Tuning..... | 753 |
| T2: PM Motor Auto-Tuning.....        | 756 |
| T3: ASR and Inertia Tuning .....     | 758 |
| T4: EZ Tuning.....                   | 758 |
| Index.....                           | 761 |
| Revision History.....                | 769 |



# Preface and General Precautions

---

This chapter gives information about important safety precautions for the use of this product. Failure to obey these precautions can cause serious injury or death, or damage to the product or related devices and systems. Yaskawa must not be held responsible for any injury or equipment damage as a result of the failure to observe these precautions and instructions.

|            |                                       |           |
|------------|---------------------------------------|-----------|
| <b>i.1</b> | <b>Receiving</b> .....                | <b>14</b> |
| <b>i.2</b> | <b>Using the Product Safely</b> ..... | <b>15</b> |
| <b>i.3</b> | <b>Warranty Information</b> .....     | <b>18</b> |

## i.1 Receiving

These instructions contain the information necessary to use the product correctly. Read and understand the safety information and precautions before you start to use the product.

### ◆ Glossary

| Phrase    | Definition  |
|-----------|---|
| AOLV/PM   | Advanced Open Loop Vector Control for Permanent Magnet Motors                   |
| Drive     | YASKAWA AC Drive GA500  |
| EDM       | External Device Monitor   |
| EZOLV     | EZ Open Loop Vector Control   |
| HD        | Heavy Duty  |
| IPM motor | Interior Permanent Magnet Synchronous Motor                                     |
| MFAI      | Multi-Function Analog Input   |
| MFAO      | Multi-Function Analog Output  |
| MFDI      | Multi-Function Digital Input  |
| MFDO      | Multi-Function Digital Output   |
| ND        | Normal Duty   |
| OLV       | Open Loop Vector Control  |
| OLV/PM    | Open Loop Vector Control for Permanent Magnet Motors                            |
| PM motor  | Permanent Magnet Synchronous Motor (generic name for IPM motors and SPM motors) |
| SIL       | Safety Integrity Level  |
| SPM motor | Surface Permanent Magnet Synchronous Motor                                      |
| V/f       | V/f Control   |

### ◆ About Registered Trademarks

- CANopen is a registered trademark of CAN in Automation (CIA).
- CC-Link is a registered trademark of CC-Link Partner Association.
- DeviceNet is a registered trademark of Open DeviceNet Vendor Association, Inc. (ODVA).
- EtherCAT is a registered trademark of Beckhoff Automation GmbH.
- EtherNet/IP is a registered trademark of Open DeviceNet Vendor Association, Inc. (ODVA).
- LonWorks and LonTalk are registered trademarks of Echelon Corporation.
- MECHATROLINK-I, MECHATROLINK-II, and MECHATROLINK-III are registered trademarks of MECHATROLINK Members Association (MMA).
- Modbus is a registered trademark of Schneider Electric SA.
- PROFIBUS-DP and PROFINET are registered trademarks of PROFIBUS International.
- Other company names and product names in this document are trademarks or registered trademarks of the respective companies.

## i.2 Using the Product Safely

### ◆ Explanation of Signal Words

#### **⚠ WARNING**

**Read and understand this manual before you install, operate, or do maintenance on the drive. Install the drive as specified by this manual and local codes.**

The symbols in this section identify safety messages in this manual. If you do not obey these safety messages, the hazards can cause serious injury, death, or damage to the products and related equipment and systems.

These identifier words categorize and emphasize important safety precautions in these instructions.

#### **⚠ DANGER**

**This signal word identifies a hazard that will cause serious injury or death if you do not prevent it.**

#### **⚠ WARNING**

**This signal word identifies a hazard that can cause death or serious injuries if you do not prevent it.**

#### **⚠ CAUTION**

**Identifies a hazardous situation, which, if not avoided, can cause minor or moderate injury.**

#### **NOTICE**

**This signal word identifies a property damage message that is not related to personal injury.**

### ◆ Section Safety

#### **General Precautions**

- Some figures in the instructions include options and drives without covers or safety shields to more clearly show the inside of the drive. Replace covers and shields before operation. Use options and drives only as specified by the instructions.
- The figures in this manual are examples only. All figures do not apply to all products included in this manual.
- Yaskawa can change the products, specifications, and content of the instructions without notice to make the product and/or the instructions better.
- If you damage or lose these instructions, contact a Yaskawa representative or the nearest Yaskawa sales office on the rear cover of the manual, and tell them the document number on the front cover to order new copies.

#### **⚠ DANGER**

**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

#### **Electrical Shock Hazard**

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**⚠ WARNING**

**Crush Hazard**

**Test the system to make sure that the drive operates safely after you wire the drive and set parameters.**

If you do not test the system, it can cause damage to equipment or serious injury or death.

**Sudden Movement Hazard**

**Before you do a test run, make sure that the setting values for virtual input and output function parameters are correct. Virtual input and output functions can have different default settings and operation than wired input and output functions.**

Incorrect function settings can cause serious injury or death.

**Remove all personnel and objects from the area around the drive, motor, and machine and attach covers, couplings, shaft keys, and machine loads before you energize the drive.**

If personnel are too close or if there are missing parts, it can cause serious injury or death.

**Examine the I/O signals and internal sequence with the engineer who made the DriveWorksEZ program before you operate the drive.**

If you do not know how the drive will operate, it can cause serious injury or death. When you use DriveWorksEZ to make custom programming, the drive I/O terminal functions change from factory settings and the drive will not operate as written in this manual.

**Electrical Shock Hazard**

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

**After the drive blows a fuse or trips an RCM/RCD, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices.**

If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

**Damage to Equipment**

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

**Fire Hazard**

**Install sufficient branch circuit short circuit protection as specified by applicable codes and this manual. The drive is suited for circuits that supply not more than 31,000 RMS symmetrical amperes, 240 Vac maximum (200 V Class), 480 Vac maximum (400 V Class).**

Incorrect branch circuit short circuit protection can cause serious injury or death.

**⚠ CAUTION**

**Crush Hazard**

**Tighten terminal cover screws and hold the case safely when you move the drive.**

If the drive or covers fall, it can cause moderate injury.



## NOTICE

**Use an inverter-duty motor or vector-duty motor with reinforced insulation and windings applicable for use with an AC drive.**

If the motor does not have the correct insulation, it can cause a short circuit or ground fault from insulation deterioration.

### Damage to Equipment

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Do not do a withstand voltage test or use a megohmmeter or megger insulation tester on the drive.**

These tests can cause damage to the drive.

**Do not operate a drive or connected equipment that has damaged or missing parts.**

You can cause damage to the drive and connected equipment.

**Do not use steam or other disinfectants to fumigate wood for packaging the drive. Use alternative methods, for example heat treatment, before you package the components.**

Gas from wood packaging fumigated with halogen disinfectants, for example fluorine, chlorine, bromine, iodine or DOP gas (phthalic acid ester), can cause damage to the drive.

## ◆ Warning Label Content and Location

The drive warning label is in the location shown in [Figure i.1](#). Use the drive as specified by this information.



A - Warning label

Figure i.1 Warning Label Content and Location

## **i.3 Warranty Information**

---

### **◆ Exclusion of Liability**

- This product is not designed and manufactured for use in life-support machines or systems.
- Contact a Yaskawa representative or your Yaskawa sales representative if you are considering the application of this product for special purposes, such as machines or systems used for passenger cars, medicine, airplanes and aerospace, nuclear power, electric power, or undersea relaying.

### **⚠ WARNING**

#### **Injury to Personnel**

**When you use this product in applications where its failure could cause the loss of human life, a serious accident, or physical injury, you must install applicable safety devices.**

If you do not correctly install safety devices, it can cause serious injury or death.

## Receiving

---

This chapter gives information about the different drive models and features, and how to examine the drive when you receive it.

|            |  |           |
|------------|--|-----------|
| <b>1.1</b> | <b>Section Safety .....</b>                            | <b>20</b> |
| <b>1.2</b> | <b>Model Number and Nameplate Check.....</b>           | <b>21</b> |
| <b>1.3</b> | <b>Features and Advantages of Control Methods.....</b> | <b>24</b> |

## 1.1 Section Safety

 **DANGER**

**Do not ignore the safety messages in this manual.**

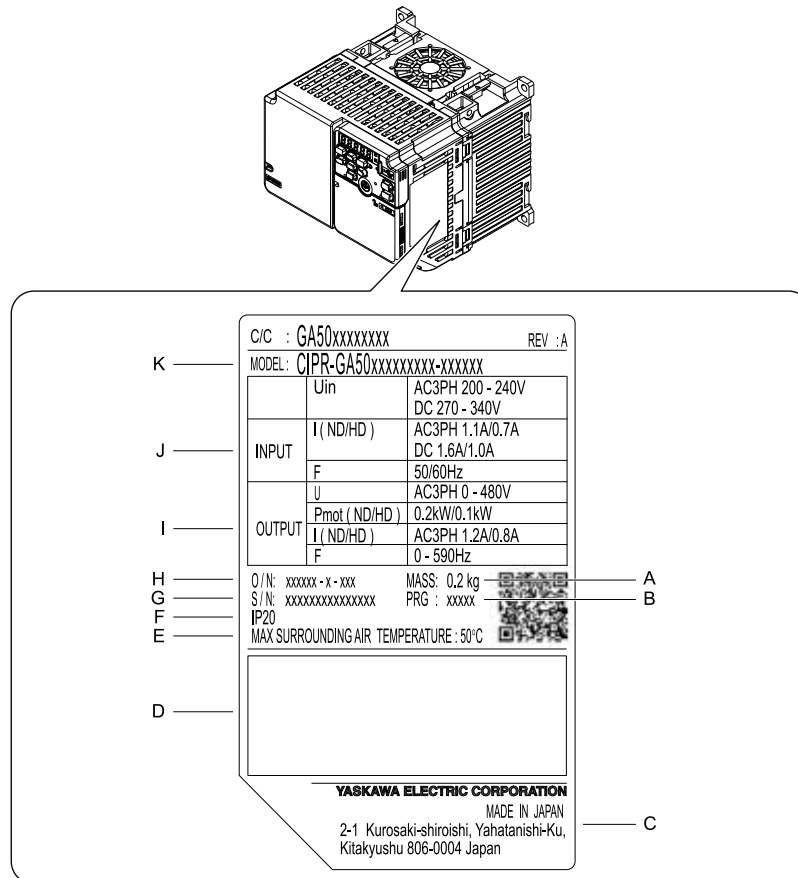
If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

## 1.2 Model Number and Nameplate Check

Please examine these items after you receive the drive:

- Examine the drive for damage. Immediately contact the shipping company if the drive is damaged. The Yaskawa warranty does not cover damage from shipping.
- Examine the drive model number to make sure that you received the correct model. Examine the model number in the “MODEL” section of the drive nameplate to make sure that you received the correct model.
- If you received the incorrect product or a product with a defect, contact Yaskawa or your nearest sales representative.

### ◆ Nameplate



- A - Weight
- B - Drive software version
- C - The address of the head office of Yaskawa Electric Corporation
- D - Accreditation standards
- E - Ambient temperature setting
- F - Enclosure protection design
- G - Product number
- H - Serial number
- I - Output specifications
- J - Input specifications
- K - Drive model

Figure 1.1 Nameplate Information Example

### ◆ How to Read the Model Number

Use the information in [Figure 1.2](#) and [Table 1.1](#) to read the drive model numbers.

CIPR - GA50 A 4 004 A B A A - C A A A S A

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Figure 1.2 Drive model

## 1.2 Model Number and Nameplate Check

**Table 1.1 Model Number Details**

| No. | Description   |
|-----|---|
| 1   | Drive   |
| 2   | Product series  |
| 3   | Region code <ul style="list-style-type: none"> <li>• A: Japan</li> <li>• B: China</li> <li>• C: Europe</li> <li>• T: Asia (Singapore, Taiwan, India, and Korea)</li> <li>• U: Americas</li> </ul> |
| 4   | Input power supply voltage <ul style="list-style-type: none"> <li>• B: Single-Phase AC 200 V Class</li> <li>• 2: Three-Phase AC 200 V Class</li> <li>• 4: Three-Phase AC 400 V Class</li> </ul>   |
| 5   | Rated Output Current<br><b>Note:</b><br>Refer to page 22 for more information.  |
| 6   | EMC noise filter <ul style="list-style-type: none"> <li>• A: No internal EMC filter</li> <li>• E: Built-in EMC Filter</li> </ul>  |
| 7   | Enclosure protection design <ul style="list-style-type: none"> <li>• B: IP20/UL Open Type</li> <li>• F: IP20/UL Type 1</li> </ul>   |
| 8   | Environmental specification   |
| 9   | Design revision order   |
| 10  | Control circuit board   |
| 11  | Option  |
| 12  | A: Standard   |
| 13  | A: Standard   |
| 14  | Keypad  |
| 15  | Special applications  |

### ■ Rated Output Current

Table 1.2, Table 1.3, and Table 1.4 give the rated output current values.

**Note:**

- Rated output current values are applicable for drives that operate at standard specifications.
- Derate the output current in applications that:
  - Increase the carrier frequency
  - Have high ambient temperature
  - Install drives side-by-side
- Use C6-01 [*Normal / Heavy Duty Selection*] to select Normal Duty rating (ND) or Heavy Duty rating (HD).

**Table 1.2 Single-Phase AC 200 V Class**

| Model | Heavy Duty Rating (HD)<br>[C6-01 = 0]<br>(Default) |                           | Normal Duty Rating (ND)<br>[C6-01 = 1]     |                           |
|-------|--|---------------------------|--|---------------------------|
|       | Maximum Applicable Motor Output<br>kW (HP)         | Rated Output Current<br>A | Maximum Applicable Motor Output<br>kW (HP) | Rated Output Current<br>A |
| B001  | 0.1 (1/6)  | 0.8                       | 0.18 (1/6)                                 | 1.2                       |
| B002  | 0.25 (1/4)   | 1.6                       | 0.37 (1/4)                                 | 1.9                       |
| B004  | 0.55 (1/2)   | 3.0                       | 0.75 (3/4)                                 | 3.5                       |
| B006  | 1.1 (1)  | 5.0                       | 1.1 (1.5)                                  | 6.0                       |
| B010  | 1.5 (2)  | 8.0                       | 2.2 (3)                                    | 9.6                       |
| B012  | 2.2 (3)  | 11.0                      | 3.0 (3)                                    | 12.2                      |
| B018  | 4.0 (5)  | 17.6                      | -  | -                         |

Table 1.3 Three-Phase AC 200 V Class

| Model | Heavy Duty Rating (HD)<br>[C6-01 = 0]<br>(Default) |                           | Normal Duty Rating (ND)<br>[C6-01 = 1]     |                           |
|-------|--|---------------------------|--|---------------------------|
|       | Maximum Applicable Motor Output<br>kW (HP)         | Rated Output Current<br>A | Maximum Applicable Motor Output<br>kW (HP) | Rated Output Current<br>A |
| 2001  | 0.1 (1/6)  | 0.8                       | 0.18 (1/6)                                 | 1.2                       |
| 2002  | 0.25 (1/4)   | 1.6                       | 0.37 (1/4)                                 | 1.9                       |
| 2004  | 0.55 (1/2)   | 3.0                       | 0.75 (3/4)                                 | 3.5                       |
| 2006  | 1.1 (1)  | 5.0                       | 1.1 (1.5)                                  | 6.0                       |
| 2008  | 1.1 (1.5)  | 6.9                       | 1.5 (2)                                    | 8.0                       |
| 2010  | 1.5 (2)  | 8.0                       | 2.2 (3)                                    | 9.6                       |
| 2012  | 2.2 (3)  | 11.0                      | 3.0 (4)                                    | 12.2                      |
| 2018  | 3.0 (4)  | 14.0                      | 4.0 (5)                                    | 17.5                      |
| 2021  | 4.0 (5)  | 17.6                      | 5.5 (5)                                    | 21.0                      |
| 2030  | 5.5 (7.5)  | 25.0                      | 7.5 (10)                                   | 30.0                      |
| 2042  | 7.5 (10)   | 33.0                      | 11.0 (15)                                  | 42.0                      |
| 2056  | 11.0 (15)  | 47.0                      | 15.0 (20)                                  | 56.0                      |
| 2070  | 15.0 (20)  | 60.0                      | 18.5 (25)                                  | 70.0                      |
| 2082  | 18.5 (25)  | 75.0                      | 22.0 (30)                                  | 82.0                      |

Table 1.4 Three-Phase AC 400 V Class

| Model | Heavy Duty Rating (HD)<br>[C6-01 = 0]<br>(Default) |                           | Normal Duty Rating (ND)<br>[C6-01 = 1]     |                           |
|-------|--|---------------------------|--|---------------------------|
|       | Maximum Applicable Motor Output<br>kW (HP)         | Rated Output Current<br>A | Maximum Applicable Motor Output<br>kW (HP) | Rated Output Current<br>A |
| 4001  | 0.37 (1/2)   | 1.2                       | 0.37 (1/2)                                 | 1.2                       |
| 4002  | 0.55 (3/4)   | 1.8                       | 0.75 (1)                                   | 2.1                       |
| 4004  | 1.1 (2)  | 3.4                       | 1.5 (2)                                    | 4.1                       |
| 4005  | 1.5 (3)  | 4.8                       | 2.2 (3)                                    | 5.4                       |
| 4007  | 2.2 (3)  | 5.6                       | 3.0 (4)                                    | 7.1                       |
| 4009  | 3.0 (4)  | 7.3                       | 4.0 (5)                                    | 8.9                       |
| 4012  | 4.0 (5)  | 9.2                       | 5.5 (7.5)                                  | 11.9                      |
| 4018  | 5.5 (10)   | 14.8                      | 7.5 (10)                                   | 17.5                      |
| 4023  | 7.5 (10)   | 18.0                      | 11.0 (15)                                  | 23.4                      |
| 4031  | 11.0 (15)  | 24.0                      | 15.0 (20)                                  | 31.0                      |
| 4038  | 15.0 (20)  | 31.0                      | 18.5 (25)                                  | 38.0                      |
| 4044  | 18.5 (25)  | 39.0                      | 22.0 (30)                                  | 44.0                      |
| 4060  | 22.0 (30)  | 45.0                      | 30.0 (40)                                  | 60.0                      |

## 1.3 Features and Advantages of Control Methods

This drive has 5 available control methods from which you can select for different applications. [Table 1.5](#), [Table 1.6](#), and [Table 1.7](#) give information about the features of each control method.

**Table 1.5 Features and Advantages of V/f Control**

| Control Method Selection  | Open Loop V/f Control (V/f)  | Notes   |
|---|--|---|
| Controlled Motor  | Induction Motor  | -   |
| Parameter Settings  | A1-02 = 0 (Default)  | -   |
| Basic Control   | V/f  | -   |
| Main Applications   | <ul style="list-style-type: none"> <li>General-purpose variable speed control</li> <li>Applications in which more than one motor are connected to one drive</li> </ul> | -   |
| Maximum Output Frequency  | 590 Hz   | -   |
| Speed Control Range   | 1:40   | This is the range of variable control. When you connect and operate motors in this mode, think about the increase in motor temperature.   |
| Starting Torque   | 150% / 3 Hz  | This is the motor torque that the drive can supply at low speed during start-up and the related output frequency (rotation speed). You must think about drive capacity when a large quantity of torque is necessary at low speed. |
| Auto-Tuning <sup>*1</sup>                                       | Rotational and Line-to-Line Resistance (usually not necessary)   | Automatically tunes electrical motor parameters.  |
| Torque Limits   | No   | Controls maximum motor torque to prevent damage to machines and loads.  |
| Speed Search <sup>*1</sup>                                      | Yes  | Immediately estimates (or detects) motor speed and direction when coasting to a stop to quickly start-up the drive without stopping the motor.  |
| Automatic Energy-saving Control <sup>*1</sup>                   | Yes  | Automatically adjusts the voltage that the drive applies to the motor to maximize motor efficiency for small and large loads.   |
| High Slip Braking (HSB) <sup>*1</sup>                           | Yes  | Increases motor loss to let the motor decelerate faster than usual without a braking resistor. Motor characteristics have an effect on this function.   |
| Feed Forward Control  | No   | Compensates effects of the system inertia to increase the speed precision when the load changes.  |
| KEB Ride-Thru Function <sup>*1</sup>                            | Yes  | Quickly and safely stops the motor during power loss and automatically starts operation at the previous speed when the drive applies power again without coasting the motor.  |
| Overexcitation Deceleration <sup>*1</sup>                       | Yes  | Sets the V/f higher than the setting value during deceleration to increase motor loss and decrease deceleration time.   |
| Overvoltage Suppression Function <sup>*1</sup><br><sup>*2</sup> | Yes  | Adjusts speed during regeneration to prevent overvoltage.   |

\*1 Note these points when you use this function:

- When you can decouple the motor and machine for a test run, use Rotational Auto-Tuning. You must make adjustments to the control in the range where there is no vibration in the machine after Rotational Auto-Tuning.
- Motor loss increases during overexcitation braking and high-slip braking. Use a maximum braking frequency of 5% ED and a maximum braking time of 90 seconds. After you start high-slip braking, you cannot restart the motor until it stops. Use overexcitation braking to decelerate over a shorter time at a pre-determined speed.

\*2 Do not use this function with hoist application.

**Table 1.6 Features and Advantages of OLV Control**

| Control Method Selection | Open Loop Vector (OLV)   | Notes   |
|--------------------------|--|---|
| Controlled Motor         | Induction Motor  | -   |
| Parameter Settings       | A1-02 = 2  | -   |
| Basic Control            | Open Loop Current Vector Control   | -   |
| Main Applications        | <ul style="list-style-type: none"> <li>General-purpose variable speed control</li> <li>Applications in which high performance is necessary without machine encoders</li> </ul> | -   |
| Maximum Output Frequency | 590 Hz   | -   |
| Speed Control Range      | 1:100  | This is the range of variable control. When you connect and operate motors in this mode, think about the increase in motor temperature. |



| Control Method Selection                          | Open Loop Vector (OLV)                              | Notes  |
|---|---|--|
| Controlled Motor                                  | Induction Motor                                     | -  |
| Starting Torque                                   | 150% / 1 Hz <sup>*1</sup>                           | This is the motor torque that the drive can supply at low speed during start-up and the related output frequency (rotation speed).<br>You must think about drive capacity when a large quantity of torque is necessary at low speed. |
| Auto-Tuning <sup>*2</sup>                         | Rotational, Stationary, and Line-to-Line Resistance | Automatically tunes electrical motor parameters.   |
| Torque Limits <sup>*2</sup>                       | Yes   | Controls maximum motor torque to prevent damage to machines and loads.   |
| Speed Search <sup>*2</sup>                        | Yes   | Immediately estimates (or detects) motor speed and direction when coasting to a stop to quickly start-up the drive without stopping the motor.   |
| Automatic Energy-saving Control <sup>*2</sup>     | Yes   | Automatically adjusts the voltage that the drive applies to the motor to maximize motor efficiency for small and large loads.  |
| High Slip Braking (HSB) Activate                  | No  | Increases motor loss to let the motor decelerate faster than usual without a braking resistor. Motor characteristics have an effect on this function.  |
| Feed Forward Control                              | No  | Compensates effects of the system inertia to increase the speed precision when the load changes.   |
| KEB Ride-Thru Function <sup>*2</sup>              | Yes   | Quickly and safely stops the motor during power loss and automatically starts operation at the previous speed when the drive applies power again without coasting the motor.   |
| Overexcitation Deceleration <sup>*2</sup>         | Yes   | Sets the V/f higher than the setting value during deceleration to increase motor loss and decrease deceleration time.  |
| Overvoltage Suppression Function <sup>*2 *3</sup> | Yes   | Adjusts speed during regeneration to prevent overvoltage.  |

\*1 Select the drive capacity accordingly.

\*2 Note these points when you use this function:

- When you can decouple the motor and machine for a test run, use Rotational Auto-Tuning. You must make adjustments to the control in the range where there is no vibration in the machine after Rotational Auto-Tuning.
- For vector control, use a 1:1 drive to motor ratio. You cannot use vector control when more than one motor is connected to one drive. Select a drive capacity so that the motor rated current is 50% to 100% of the drive rated current. If the carrier frequency is too high, the drive rated current is derated.
- Motor loss increases during overexcitation braking and high-slip braking. Use a maximum braking frequency of 5% ED and a maximum braking time of 90 seconds. After you start high-slip braking, you cannot restart the motor until it stops. Use overexcitation braking to decelerate over a shorter time at a pre-determined speed.
- Acceleration and deceleration have priority over torque limits in Open Loop Vector Control during acceleration and deceleration (soft start changes). The drive will not operate until the speed is at the minimum frequency or the reverse direction of motor rotation when the motor speed decreases because of torque limits during constant speed control. Set  $L7-07 = 1$  [*Torque Limit during Accel/Decel = Proportional & Integral control*] to enable torque limits during acceleration/deceleration (for winding applications).

\*3 Do not use this function with hoist application.

Table 1.7 Features and Advantages of OLV/PM, AOLV/PM, and EZOLV Control

| Control Method Selection  | PM Open Loop Vector Control (OLV/PM)   | PM Advanced Open Loop Vector (AOLV/PM)   | EZ Open Loop Vector Control (EZOLV)                              | Notes  |
|---------------------------|--|--|--|--|
| Controlled Motor          | PM motor   |  | Induction Motors/PM Motors/SynRM (Synchronous Reluctance Motors) | -  |
| Parameter Settings        | A1-02 = 5  | A1-02 = 6  | A1-02 = 8  | -  |
| Basic Control             | PM Open Loop Vector Control (no speed controller)  | PM Open Loop Current Vector Control (with speed controller)  | Open Loop Current Vector Control                                 | -  |
| Main Applications         | <ul style="list-style-type: none"> <li>• General-purpose variable speed control for PM motors</li> <li>• Applications in which a high level of responsiveness and accurate speed control are not necessary.</li> </ul> | <ul style="list-style-type: none"> <li>• General-purpose variable speed control for IPM motors</li> <li>• Applications in which high-precision speed control and torque limits are necessary.</li> </ul> | Low-speed torque applications<br>Example: Fans and pumps         | -  |
| Maximum Output Frequency  | 590 Hz   | 270 Hz   | 120 Hz   | -  |
| Speed Control Range       | 1:10   | 1:10<br>1:100 <sup>*1 *2 *3</sup>  | 1:10   | This is the range of variable control. When you connect and operate motors in this mode, think about the increase in motor temperature.  |
| Starting Torque           | 100% / 5% speed  | 100% / 5% speed<br>100% / 0 min <sup>-1</sup> <sup>*1</sup>  | 100% / 10% speed   | This is the motor torque that the drive can supply at low speed during start-up and the related output frequency (rotation speed).<br>You must think about drive capacity when a large quantity of torque is necessary at low speed. |
| Auto-Tuning <sup>*5</sup> | Stationary, Stator Resistance, Rotational  | Stationary, Stator Resistance, Rotational  | Line-to-Line Resistance  | Automatically tunes electrical motor parameters.   |

### 1.3 Features and Advantages of Control Methods

| Control Method Selection               | PM Open Loop Vector Control (OLV/PM)   | PM Advanced Open Loop Vector (AOLV/PM) | EZ Open Loop Vector Control (EZOLV)                                      | Notes  |
|--|--|--|--|--|
| Controlled Motor                       | PM motor                               |  | Induction Motors/PM Motors/SynRM (Synchronous Reluctance Motors)         | -  |
| Torque Limits *5                       | No                                     | Yes                                    | Yes  | Controls maximum motor torque to prevent damage to machines and loads.   |
| Speed Search *5                        | Yes                                    | Yes                                    | Yes (Although NOT operation in the reverse direction of the Run command) | Immediately estimates (or detects) motor speed and direction when coasting to a stop to quickly start-up the drive without stopping the motor.                               |
| Automatic Energy-saving Control *5     | No                                     | Yes (IPM motors only)                  | Yes  | Automatically adjusts the voltage that the drive applies to the motor to maximize motor efficiency for small and large loads.  |
| High Slip Braking (HSB) Activate       | No (induction motor-specific function) | No (induction motor-specific function) | No   | Increases motor loss to let the motor decelerate faster than usual without a braking resistor. Motor characteristics have an effect on this function.                        |
| Feed Forward Control *5                | No                                     | Yes                                    | No   | Compensates effects of the system inertia to increase the speed precision when the load changes.   |
| KEB Ride-Thru Function *5              | Yes                                    | Yes                                    | Yes  | Quickly and safely stops the motor during power loss and automatically starts operation at the previous speed when the drive applies power again without coasting the motor. |
| Overexcitation Deceleration            | No (induction motor-specific function) | No (induction motor-specific function) | No   | Sets the V/f higher than the setting value during deceleration to increase motor loss and decrease deceleration time.  |
| Overvoltage Suppression Function *5 *6 | Yes                                    | Yes                                    | Yes  | Adjusts speed during regeneration to prevent overvoltage.  |

\*1 Enabled when  $n8-57 = 1$  [HFI Overlap Selection = Enabled].

\*2 Rotational Auto-Tuning is necessary.

\*3 Contact Yaskawa or your nearest sales representative to drive non-Yaskawa PM motors (SSR1 series standard specifications).

\*4 Select the drive capacity accordingly.

\*5 Note these points when you use this function:

- When you can decouple the motor and machine for a test run, use Rotational Auto-Tuning. You must make adjustments to the control in the range where there is no vibration in the machine after Rotational Auto-Tuning.
- For vector control, use a 1:1 drive to motor ratio. You cannot use vector control when more than one motor is connected to one drive. Select a drive capacity so that the motor rated current is 50% to 100% of the drive rated current. If the carrier frequency is too high, the drive rated current is derated.

\*6 Do not use this function with hoist application.

# Mechanical Installation

---

This chapter gives information about the correct environment and clearances to install the drive.

|            |  |           |
|------------|--|-----------|
| <b>2.1</b> | <b>Section Safety .....</b>  | <b>28</b> |
| <b>2.2</b> | <b>Installation Environment .....</b>                                | <b>29</b> |
| <b>2.3</b> | <b>Installation Position and Clearances .....</b>                    | <b>30</b> |
| <b>2.4</b> | <b>Moving the Drive .....</b>  | <b>33</b> |
| <b>2.5</b> | <b>Drive Models and Drive Watt Loss .....</b>                        | <b>34</b> |
| <b>2.6</b> | <b>Removing/Reattaching Covers .....</b>                             | <b>41</b> |
| <b>2.7</b> | <b>Remove and Reattach the Keypad .....</b>                          | <b>43</b> |
| <b>2.8</b> | <b>Install the Keypad in a Control Panel or Another Device .....</b> | <b>44</b> |
| <b>2.9</b> | <b>Installation Methods .....</b>                                    | <b>45</b> |

## 2.1 Section Safety

### WARNING

#### Electrical Shock Hazard

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**  
If personnel are not approved, it can cause serious injury or death.

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

#### Fire Hazard

**Do not put flammable or combustible materials on top of the drive and do not install the drive near flammable or combustible materials. Attach the drive to metal or other noncombustible material.**

Flammable and combustible materials can start a fire and cause serious injury or death.

**When you install the drive in an enclosure, use a cooling fan or cooler to decrease the temperature around the drive. Make sure that the intake air temperature to the drive is 50 °C (122 °F) or less for IP20/UL Open Type drives, and 40 °C (104 °F) or less for IP20/UL Type 1 drives.**

If the air temperature is too hot, the drive can become too hot and cause a fire and serious injury or death.

### CAUTION

#### Crush Hazard

**Tighten terminal cover screws and hold the case safely when you move the drive.**

If the drive or covers fall, it can cause moderate injury.

### NOTICE

**Do not let unwanted objects, for example metal shavings or wire clippings, fall into the drive during drive installation. Put a temporary cover over the drive during installation. Remove the temporary cover before start-up.**

Unwanted objects inside of the drive can cause damage to the drive.

#### Damage to Equipment

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Install vibration-proof rubber on the base of the motor or use the frequency jump function in the drive to prevent specific frequencies that vibrate the motor.**

Motor or system resonant vibration can occur in fixed speed machines that are converted to variable speed. Too much vibration can cause damage to equipment.

**You can use the drive with an explosion-proof motor, but the drive is not explosion-proof. Install the drive only in the environment shown on the nameplate.**

If you install the drive in a dangerous environment, it can cause damage to the drive.

**Do not lift the drive with the covers removed.**

If the drive does not have covers, you can easily cause damage to the internal parts of the drive.

## 2.2 Installation Environment

The installation environment is important for the lifespan of the product and to make sure that the drive performance is correct. Make sure that the installation environment agrees with these specifications.

| Environment                 | Conditions   |
|-----------------------------|--|
| Area of Use                 | Indoors  |
| Power Supply                | Overvoltage Category III (IEC60664)  |
| Ambient Temperature Setting | IP20/UL Open Type: -10 °C to +50 °C (14 °F to 122 °F)<br>IP20/UL Type 1: -10 °C to +40 °C (14 °F to 104 °F)<br><ul style="list-style-type: none"> <li>When you install the drive in an enclosure, use a cooling fan or air conditioner to keep the internal air temperature in the permitted range.</li> <li>Do not let the drive freeze.</li> </ul>   |
| Humidity                    | 95%RH or less<br>Do not let condensation form on the drive.  |
| Storage Temperature         | -20 °C to +70 °C (-4 °F to +158 °F) (short-term temperature during transportation)   |
| Surrounding Area            | Pollution degree 2 or less (IEC 60664-1)<br>Install the drive in an area without: <ul style="list-style-type: none"> <li>Oil mist, corrosive or flammable gas, or dust</li> <li>Metal powder, oil, water, or other unwanted materials</li> <li>Radioactive or flammable materials.</li> <li>Harmful gas or fluids</li> <li>Salt</li> <li>Direct sunlight</li> </ul> Keep wood and other flammable materials away from the drive.   |
| Altitude                    | 1000 m (3281 ft) Maximum<br><b>Note:</b><br>Derate the output current by 1% for each 100 m (328 ft) to install the drive in altitudes between 1000 m to 4000 m (3281 ft to 13123 ft).<br>It is not necessary to derate the rated voltage in these conditions: <ul style="list-style-type: none"> <li>Installing the drive at 2000 m (6562 ft) or lower</li> <li>Installing the drive between 2000 m to 4000 m (6562 ft to 13123 ft) and grounding the neutral point on the power supply. Contact Yaskawa or your nearest sales representative when not grounding the neutral point.</li> </ul> |
| Vibration                   | <ul style="list-style-type: none"> <li>10 Hz to 20 Hz: 1 G (9.8 m/s<sup>2</sup>, 32.15 ft/s<sup>2</sup>)</li> <li>20 Hz to 55 Hz: 0.6 G (5.9 m/s<sup>2</sup>, 19.36 ft/s<sup>2</sup>)</li> </ul>   |
| Installation Orientation    | Install the drive vertically or horizontally for sufficient airflow to cool the drive.<br>Refer to the drive Technical Manual for more information.  |

**NOTICE:** Do not put drive peripheral devices, transformers, or other electronics near the drive. Shield the drive from electrical interference if components must be near the drive. Components near the drive can cause incorrect drive operation from electrical interference.

**NOTICE:** Do not let unwanted objects, for example metal shavings or wire clippings, fall into the drive during drive installation. Put a temporary cover over the drive during installation. Remove the temporary cover before start-up. Unwanted objects inside of the drive can cause damage to the drive.

## 2.3 Installation Position and Clearances

Install the drive as shown in [Figure 2.1](#) for sufficient airflow to cool the drive.

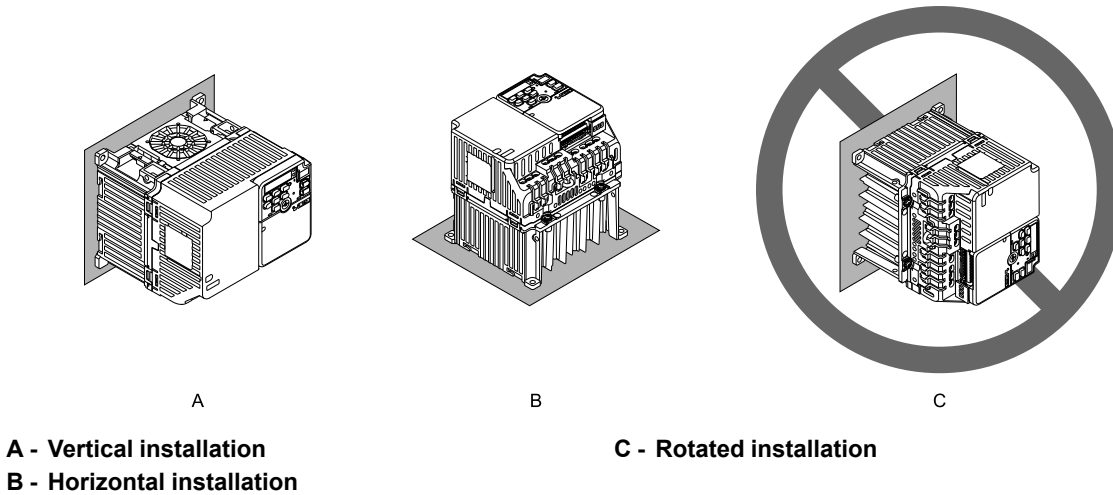


Figure 2.1 Installation Orientation

### ◆ Install Single Drive

Use the clearances specified in [Figure 2.2](#) to install the drive. Make sure that there is sufficient space for wiring and airflow.


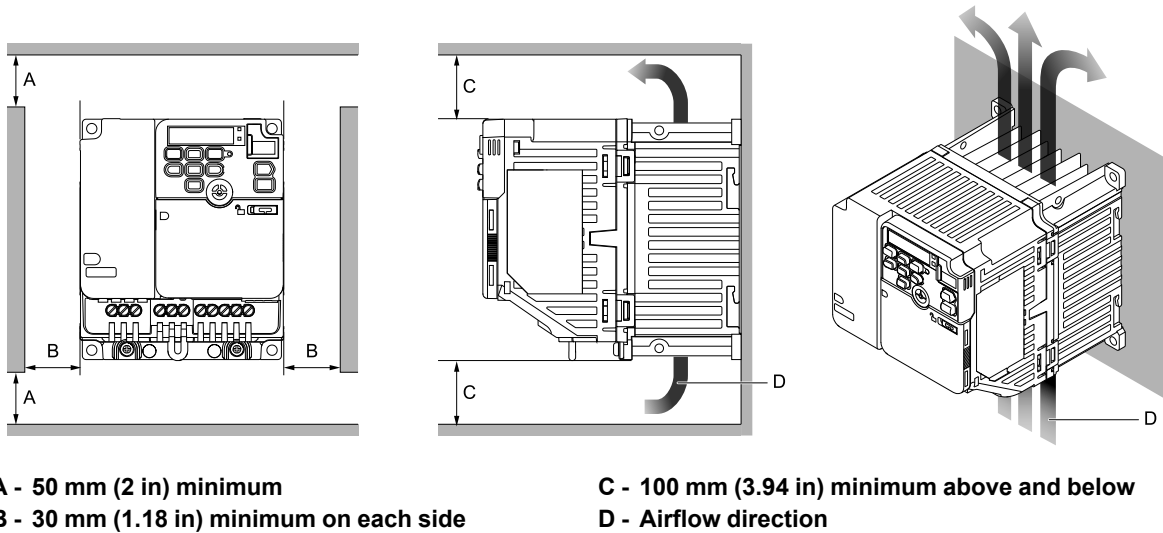


Figure 2.2 Installation Clearances for One Drive


### ◆ Install the Drive Horizontally

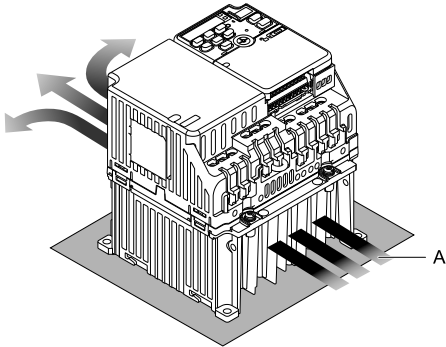When you install drives horizontally, set  $L8-12 = 40$  [Ambient Temperature Setting = 40 °C] and  $L8-35 = 1$  [Installation Method Selection = Side-by-Side Mounting]. Use the clearances specified in [Figure 2.4](#) and [Figure 2.5](#) to install the drive. Make sure that there is sufficient space for wiring and airflow. To install the drive models B001 - B012, 2001 - 2021, and 4001 - 4012 horizontally, install an external cooling fan. Refer to [Table 2.1](#) for more information about the external cooling fan.




A - Airflow direction

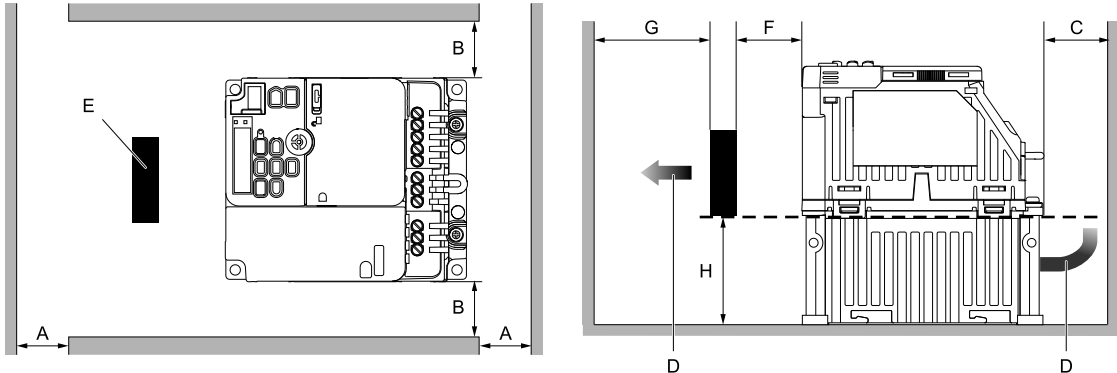Figure 2.3 Airflow Direction of Horizontal installation



- A - 50 mm (2 in) minimum
- B - 30 mm (1.18 in) minimum on each side
- C - 100 mm (3.94 in) minimum below
- D - Airflow direction
- E - External cooling fan
- F - 30 mm (1.18 in) between the drive and the external cooling fan
- G - 120 mm (4.72 in) minimum between the external cooling fan and the enclosure panel
- H - Heatsink height

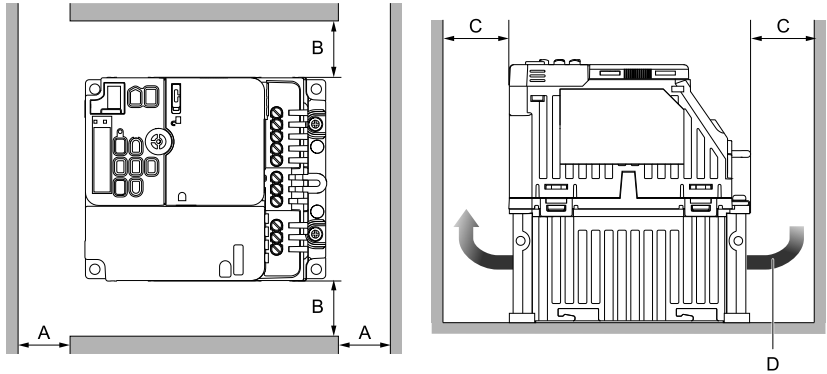Figure 2.4 Installation Clearances for Horizontal Installation: B001 - B012, 2001 - 2021, and 4001 - 4012



- A - 50 mm (2 in) minimum
- B - 30 mm (1.18 in) minimum on each side
- C - 100 mm (3.94 in) minimum above and below
- D - Airflow direction

Figure 2.5 Installation Clearances for Horizontal Installation: B018, 2030 - 2082, and 4018 - 4060

## 2.3 Installation Position and Clearances


**Table 2.1 Specifications of External Cooling Fan for Horizontal (Floor) Installation**

| Model                                     | Airflow (m <sup>3</sup> /min)         | Static Pressure (Pa) |
|---|---------------------------------------|----------------------|
| B001 - B004<br>2001 - 2006                | 0.18 minimum                          | 63.7 minimum         |
| B006 - B012<br>2008 - 2021<br>4001 - 4012 | 1.11 minimum                          | 244 minimum          |
| B018<br>2030 - 2082<br>4018 - 4060        | External cooling fan is not necessary |                      |

### ◆ Install Drives Side-by-Side

When you install drives side-by-side, set to  $L8-35 = 1$  [Installation Method Selection = Side-by-Side Mounting].

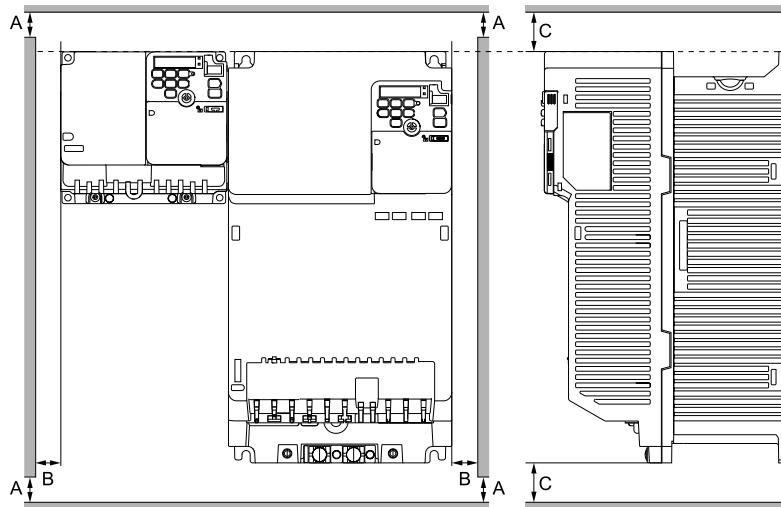Refer to [Derating Depending on Ambient Temperature on page 326](#) and set derating depending on ambient temperature.



**A - 50 mm (1.97 in) minimum**

**C - 100 mm (3.94 in) minimum above and below**

**B - 30 mm (1.18 in) minimum on each side**

**Figure 2.6 Installation Clearances for More than One Drive (Side-by-Side)**

**Note:**

Align the tops of drives that have different dimensions to help when you replace cooling fans.



## 2.4 Moving the Drive

Obey local laws and regulations when moving and installing this product.

**CAUTION!** *Crush Hazard. Do not hold the drive by the keypad or front cover. Tighten the screws correctly when you move the drive. If the drive or covers fall, it can cause moderate injury.*

## 2.5 Drive Models and Drive Watt Loss

| Specification               | Model | Ref. |
|-----------------------------|-------|------|
| Without Built-in EMC Filter | BxxxA | 34   |
|                             | 2xxxA | 35   |
|                             | 4xxxA | 36   |
| Built-in EMC Filter         | BxxxE | 37   |
|                             | 2xxxE | 37   |
|                             | 4xxxE | 39   |

### ◆ Drive Watt Loss (without Built-in EMC Filter)

#### ■ Single-Phase 200 V Class

Table 2.2 Drive Watt Loss (HD, Fc = 2 kHz)

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| B001  | 0.8                       | 2                        | 7                       | 4                     | 11              |
| B002  | 1.6                       | 2                        | 10                      | 7                     | 17              |
| B004  | 3                         | 2                        | 13                      | 13                    | 26              |
| B006  | 5                         | 2                        | 17                      | 23                    | 40              |
| B010  | 8                         | 2                        | 30                      | 37                    | 67              |
| B012  | 11                        | 2                        | 40                      | 48                    | 88              |
| B018  | 17.6                      | 2                        | 49                      | 72                    | 121             |

Table 2.3 Drive Watt Loss (HD, Fc = Default Setting)

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| B001  | 0.8                       | 10                       | 8                       | 5                     | 13              |
| B002  | 1.6                       | 10                       | 10                      | 9                     | 19              |
| B004  | 3                         | 10                       | 14                      | 16                    | 30              |
| B006  | 5                         | 10                       | 18                      | 28                    | 46              |
| B010  | 8                         | 8                        | 31                      | 42                    | 73              |
| B012  | 11                        | 8                        | 41                      | 55                    | 96              |
| B018  | 17.6                      | 8                        | 53                      | 98                    | 151             |

Table 2.4 Drive Watt Loss (ND)

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| B001  | 1.2                       | 2                        | 8                       | 6                     | 14              |
| B002  | 1.9                       | 2                        | 14                      | 11                    | 25              |
| B004  | 3.5                       | 2                        | 14                      | 17                    | 31              |
| B006  | 6.0                       | 2                        | 17                      | 26                    | 43              |
| B010  | 9.6                       | 2                        | 36                      | 50                    | 86              |
| B012  | 12.2                      | 2                        | 48                      | 60                    | 108             |
| B018  | -                         | 2                        | 49                      | 92                    | 141             |

### ■ Three-Phase 200 V Class

**Table 2.5 Drive Watt Loss (HD, Fc = 2 kHz)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2001  | 0.8                       | 2                        | 6                       | 4                     | 10              |
| 2002  | 1.6                       | 2                        | 7                       | 7                     | 14              |
| 2004  | 3.0                       | 2                        | 9                       | 13                    | 22              |
| 2006  | 5.0                       | 2                        | 13                      | 22                    | 35              |
| 2008  | 6.9                       | 2                        | 14                      | 30                    | 44              |
| 2010  | 8.0                       | 2                        | 17                      | 37                    | 54              |
| 2012  | 11.0                      | 2                        | 23                      | 49                    | 72              |
| 2018  | 14.0                      | 2                        | 26                      | 61                    | 87              |
| 2021  | 17.6                      | 2                        | 36                      | 83                    | 119             |
| 2030  | 25.0                      | 2                        | 45                      | 163                   | 208             |
| 2042  | 33.0                      | 2                        | 55                      | 200                   | 255             |
| 2056  | 47.0                      | 2                        | 77                      | 269                   | 346             |
| 2070  | 60.0                      | 2                        | 108                     | 411                   | 519             |
| 2082  | 75.0                      | 2                        | 132                     | 439                   | 571             |

**Table 2.6 Drive Watt Loss (HD, Fc = Default Setting)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2001  | 0.8                       | 10                       | 6                       | 5                     | 11              |
| 2002  | 1.6                       | 10                       | 7                       | 8                     | 15              |
| 2004  | 3.0                       | 10                       | 10                      | 16                    | 26              |
| 2006  | 5.0                       | 10                       | 14                      | 27                    | 41              |
| 2008  | 6.9                       | 8                        | 15                      | 35                    | 50              |
| 2010  | 8.0                       | 8                        | 18                      | 43                    | 61              |
| 2012  | 11.0                      | 8                        | 24                      | 56                    | 80              |
| 2018  | 14.0                      | 8                        | 30                      | 82                    | 112             |
| 2021  | 17.6                      | 8                        | 40                      | 108                   | 148             |
| 2030  | 25.0                      | 8                        | 49                      | 187                   | 236             |
| 2042  | 33.0                      | 8                        | 60                      | 232                   | 292             |
| 2056  | 47.0                      | 8                        | 85                      | 318                   | 403             |
| 2070  | 60.0                      | 8                        | 119                     | 473                   | 592             |
| 2082  | 75.0                      | 8                        | 148                     | 525                   | 673             |

**Table 2.7 Drive Watt Loss (ND)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2001  | 1.2                       | 2                        | 7                       | 5                     | 12              |
| 2002  | 1.9                       | 2                        | 9                       | 9                     | 18              |
| 2004  | 3.5                       | 2                        | 11                      | 16                    | 27              |
| 2006  | 6                         | 2                        | 14                      | 25                    | 39              |
| 2008  | 8                         | 2                        | 18                      | 37                    | 55              |
| 2010  | 9.6                       | 2                        | 25                      | 51                    | 76              |
| 2012  | 12.2                      | 2                        | 30                      | 61                    | 91              |
| 2018  | 17.5                      | 2                        | 35                      | 82                    | 117             |
| 2021  | 21                        | 2                        | 52                      | 111                   | 163             |
| 2030  | 30                        | 2                        | 63                      | 240                   | 303             |

## 2.5 Drive Models and Drive Watt Loss

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2042  | 42                        | 2                        | 84                      | 307                   | 391             |
| 2056  | 56                        | 2                        | 109                     | 367                   | 476             |
| 2070  | 70                        | 2                        | 142                     | 534                   | 676             |
| 2082  | 82                        | 2                        | 160                     | 531                   | 691             |

### ■ Three-Phase 400 V Class

**Table 2.8 Drive Watt Loss (HD, Fc = 2 kHz)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 4001  | 1.2                       | 2                        | 8                       | 7                     | 15              |
| 4002  | 1.8                       | 2                        | 10                      | 10                    | 20              |
| 4004  | 3.4                       | 2                        | 13                      | 21                    | 34              |
| 4005  | 4.8                       | 2                        | 15                      | 29                    | 44              |
| 4007  | 5.6                       | 2                        | 16                      | 33                    | 49              |
| 4009  | 7.3                       | 2                        | 21                      | 45                    | 66              |
| 4012  | 9.2                       | 2                        | 27                      | 60                    | 87              |
| 4018  | 14.8                      | 2                        | 48                      | 126                   | 174             |
| 4023  | 18                        | 2                        | 53                      | 152                   | 205             |
| 4031  | 24                        | 2                        | 68                      | 191                   | 259             |
| 4038  | 31                        | 2                        | 81                      | 256                   | 337             |
| 4044  | 39                        | 2                        | 109                     | 338                   | 447             |
| 4060  | 45                        | 2                        | 114                     | 328                   | 442             |

**Table 2.9 Drive Watt Loss (HD, Fc = Default Setting)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 4001  | 1.2                       | 8                        | 9                       | 11                    | 20              |
| 4002  | 1.8                       | 8                        | 11                      | 16                    | 27              |
| 4004  | 3.4                       | 8                        | 15                      | 31                    | 46              |
| 4005  | 4.8                       | 8                        | 18                      | 42                    | 60              |
| 4007  | 5.6                       | 8                        | 18                      | 49                    | 67              |
| 4009  | 7.3                       | 8                        | 25                      | 65                    | 90              |
| 4012  | 9.2                       | 8                        | 32                      | 85                    | 117             |
| 4018  | 14.8                      | 8                        | 55                      | 166                   | 221             |
| 4023  | 18                        | 8                        | 61                      | 200                   | 261             |
| 4031  | 24                        | 8                        | 79                      | 255                   | 334             |
| 4038  | 31                        | 8                        | 95                      | 338                   | 433             |
| 4044  | 39                        | 8                        | 127                     | 442                   | 569             |
| 4060  | 45                        | 8                        | 135                     | 446                   | 581             |

**Table 2.10 Drive Watt Loss (ND)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 4001  | 1.2                       | 2                        | 8                       | 7                     | 15              |
| 4002  | 2.1                       | 2                        | 13                      | 12                    | 25              |
| 4004  | 4.1                       | 2                        | 14                      | 24                    | 38              |
| 4005  | 5.4                       | 2                        | 16                      | 32                    | 48              |
| 4007  | 7.1                       | 2                        | 20                      | 44                    | 64              |
| 4009  | 8.9                       | 2                        | 28                      | 58                    | 86              |

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 4012  | 11.9                      | 2                        | 39                      | 83                    | 122             |
| 4018  | 17.5                      | 2                        | 52                      | 155                   | 207             |
| 4023  | 23.4                      | 2                        | 86                      | 236                   | 322             |
| 4031  | 31                        | 2                        | 101                     | 284                   | 385             |
| 4038  | 38                        | 2                        | 108                     | 341                   | 449             |
| 4044  | 44                        | 2                        | 137                     | 417                   | 554             |
| 4060  | 60                        | 2                        | 176                     | 490                   | 666             |

## ◆ Drive Watt Loss (with Built-in EMC Filter)

### ■ Single-Phase 200 V Class

Table 2.11 Drive Watt Loss (HD, Fc = 2 kHz)

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| B001E | 0.8                       | 2                        | 8                       | 4                     | 12              |
| B002E | 1.6                       | 2                        | 12                      | 7                     | 19              |
| B004E | 3                         | 2                        | 17                      | 13                    | 30              |
| B006E | 5                         | 2                        | 20                      | 23                    | 43              |
| B010E | 8                         | 2                        | 34                      | 37                    | 71              |
| B012E | 11                        | 2                        | 45                      | 48                    | 93              |

Table 2.12 Drive Watt Loss (HD, Fc = Default Setting)

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| B001E | 0.8                       | 10                       | 9                       | 5                     | 14              |
| B002E | 1.6                       | 10                       | 12                      | 9                     | 21              |
| B004E | 3                         | 10                       | 18                      | 16                    | 34              |
| B006E | 5                         | 10                       | 21                      | 28                    | 49              |
| B010E | 8                         | 8                        | 35                      | 42                    | 77              |
| B012E | 11                        | 8                        | 46                      | 55                    | 101             |

Table 2.13 Drive Watt Loss (ND)

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| B001E | 1.2                       | 2                        | 9                       | 6                     | 15              |
| B002E | 1.9                       | 2                        | 18                      | 11                    | 29              |
| B004E | 3.5                       | 2                        | 19                      | 17                    | 36              |
| B006E | 6.0                       | 2                        | 20                      | 26                    | 46              |
| B010E | 9.6                       | 2                        | 44                      | 50                    | 94              |
| B012E | 12.2                      | 2                        | 56                      | 60                    | 116             |

### ■ Three-Phase 200 V Class

Table 2.14 Drive Watt Loss (HD, Fc = 2 kHz)

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2001E | 0.8                       | 2                        | 7                       | 4                     | 11              |
| 2002E | 1.6                       | 2                        | 8                       | 7                     | 15              |
| 2004E | 3.0                       | 2                        | 12                      | 13                    | 25              |
| 2006E | 5.0                       | 2                        | 20                      | 22                    | 42              |

## 2.5 Drive Models and Drive Watt Loss

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2008E | 6.9                       | 2                        | 15                      | 30                    | 45              |
| 2010E | 8.0                       | 2                        | 18                      | 37                    | 55              |
| 2012E | 11.0                      | 2                        | 24                      | 49                    | 73              |
| 2018E | 14.0                      | 2                        | 27                      | 61                    | 88              |
| 2021E | 17.6                      | 2                        | 37                      | 83                    | 120             |
| 2030E | 25.0                      | 2                        | 46                      | 163                   | 209             |
| 2042E | 33.0                      | 2                        | 56                      | 200                   | 256             |
| 2056E | 47.0                      | 2                        | 78                      | 269                   | 347             |
| 2070E | 60.0                      | 2                        | 109                     | 411                   | 520             |
| 2082E | 75.0                      | 2                        | 133                     | 439                   | 572             |

**Table 2.15 Drive Watt Loss (HD, Fc = Default Setting)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2001E | 1.2                       | 10                       | 7                       | 5                     | 12              |
| 2002E | 1.9                       | 10                       | 8                       | 8                     | 16              |
| 2004E | 3.5                       | 10                       | 13                      | 16                    | 29              |
| 2006E | 6                         | 10                       | 21                      | 27                    | 48              |
| 2008E | 8                         | 8                        | 16                      | 35                    | 51              |
| 2010E | 9.6                       | 8                        | 19                      | 43                    | 62              |
| 2012E | 12.2                      | 8                        | 25                      | 56                    | 81              |
| 2018E | 17.5                      | 8                        | 31                      | 82                    | 113             |
| 2021E | 21                        | 8                        | 41                      | 108                   | 149             |
| 2030E | 30                        | 8                        | 50                      | 187                   | 237             |
| 2042E | 42                        | 8                        | 61                      | 232                   | 293             |
| 2056E | 56                        | 8                        | 86                      | 318                   | 404             |
| 2070E | 70                        | 8                        | 120                     | 473                   | 593             |
| 2082E | 82                        | 8                        | 149                     | 525                   | 674             |

**Table 2.16 Drive Watt Loss (ND)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 2001E | 1.2                       | 2                        | 8                       | 5                     | 13              |
| 2002E | 1.9                       | 2                        | 12                      | 9                     | 21              |
| 2004E | 3.5                       | 2                        | 15                      | 16                    | 31              |
| 2006E | 6                         | 2                        | 21                      | 25                    | 46              |
| 2008E | 8                         | 2                        | 19                      | 37                    | 56              |
| 2010E | 9.6                       | 2                        | 26                      | 51                    | 77              |
| 2012E | 12.2                      | 2                        | 31                      | 61                    | 92              |
| 2018E | 17.5                      | 2                        | 36                      | 82                    | 118             |
| 2021E | 21                        | 2                        | 53                      | 111                   | 164             |
| 2030E | 30                        | 2                        | 64                      | 240                   | 304             |
| 2042E | 42                        | 2                        | 85                      | 307                   | 392             |
| 2056E | 56                        | 2                        | 110                     | 367                   | 477             |
| 2070E | 70                        | 2                        | 143                     | 534                   | 677             |
| 2082E | 82                        | 2                        | 161                     | 531                   | 692             |

## ■ Three-Phase 400 V Class

**Table 2.17 Drive Watt Loss (HD, Fc = 2 kHz)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 4001E | 1.2                       | 2                        | 9                       | 7                     | 16              |
| 4002E | 1.8                       | 2                        | 11                      | 10                    | 21              |
| 4004E | 3.4                       | 2                        | 15                      | 21                    | 36              |
| 4005E | 4.8                       | 2                        | 17                      | 29                    | 46              |
| 4007E | 5.6                       | 2                        | 18                      | 33                    | 51              |
| 4009E | 7.3                       | 2                        | 24                      | 45                    | 69              |
| 4012E | 9.2                       | 2                        | 29                      | 60                    | 89              |
| 4018E | 14.8                      | 2                        | 52                      | 126                   | 178             |
| 4023E | 18                        | 2                        | 57                      | 152                   | 209             |
| 4031E | 24                        | 2                        | 73                      | 191                   | 264             |
| 4038E | 31                        | 2                        | 89                      | 256                   | 345             |
| 4044E | 39                        | 2                        | 119                     | 338                   | 457             |
| 4060E | 45                        | 2                        | 128                     | 328                   | 456             |

**Table 2.18 Drive Watt Loss (HD, Fc = Default Setting)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 4001E | 1.2                       | 8                        | 10                      | 11                    | 21              |
| 4002E | 1.8                       | 8                        | 12                      | 16                    | 28              |
| 4004E | 3.4                       | 8                        | 17                      | 31                    | 48              |
| 4005E | 4.8                       | 8                        | 20                      | 42                    | 62              |
| 4007E | 5.6                       | 8                        | 20                      | 49                    | 69              |
| 4009E | 7.3                       | 8                        | 28                      | 65                    | 93              |
| 4012E | 9.2                       | 8                        | 34                      | 85                    | 119             |
| 4018E | 14.8                      | 8                        | 59                      | 166                   | 225             |
| 4023E | 18                        | 8                        | 65                      | 200                   | 265             |
| 4031E | 24                        | 8                        | 84                      | 255                   | 339             |
| 4038E | 31                        | 8                        | 103                     | 338                   | 441             |
| 4044E | 39                        | 8                        | 137                     | 442                   | 579             |
| 4060E | 45                        | 8                        | 149                     | 446                   | 595             |

**Table 2.19 Drive Watt Loss (ND)**

| Model | Rated Output Current<br>A | Carrier Frequency<br>kHz | Interior Unit Loss<br>W | Cooling Fin Loss<br>W | Total Loss<br>W |
|-------|---------------------------|--------------------------|-------------------------|-----------------------|-----------------|
| 4001E | 1.2                       | 2                        | 9                       | 7                     | 16              |
| 4002E | 2.1                       | 2                        | 14                      | 12                    | 26              |
| 4004E | 4.1                       | 2                        | 16                      | 24                    | 40              |
| 4005E | 5.4                       | 2                        | 18                      | 32                    | 50              |
| 4007E | 7.1                       | 2                        | 23                      | 44                    | 67              |
| 4009E | 8.9                       | 2                        | 33                      | 58                    | 91              |
| 4012E | 11.9                      | 2                        | 41                      | 83                    | 124             |
| 4018E | 17.5                      | 2                        | 56                      | 155                   | 211             |
| 4023E | 23.4                      | 2                        | 94                      | 236                   | 330             |
| 4031E | 31                        | 2                        | 109                     | 284                   | 393             |
| 4038E | 38                        | 2                        | 119                     | 341                   | 460             |

## 2.5 Drive Models and Drive Watt Loss

---

| <b>Model</b> | <b>Rated Output Current<br/>A</b> | <b>Carrier Frequency<br/>kHz</b> | <b>Interior Unit Loss<br/>W</b> | <b>Cooling Fin Loss<br/>W</b> | <b>Total Loss<br/>W</b> |
|--------------|-----------------------------------|----------------------------------|---------------------------------|-------------------------------|-------------------------|
| 4044E        | 44                                | 2                                | 151                             | 417                           | 568                     |
| 4060E        | 60                                | 2                                | 200                             | 490                           | 690                     |

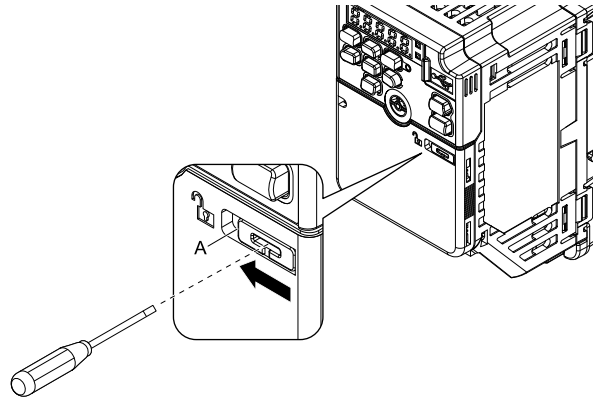


## 2.6 Removing/Reattaching Covers

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### ◆ Remove the Front Cover

1. Use a slotted screwdriver to unlock the front cover of the drive.  
Use a slotted screwdriver with a tip width of 2.5 mm (0.1 in) or less and a thickness of 0.4 mm (0.02 in) or less.



A - Front cover lock

Figure 2.7 Unlocking

2. Pull down, then pull away from the drive to remove the front cover.

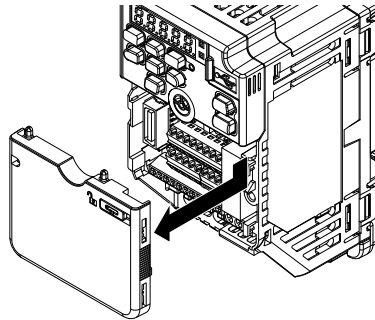


Figure 2.8 Remove the Front Cover

### ◆ Reattach the Front Cover

1. Reverse the steps to reattach the cover.

**Note:**

Make sure that you do not pinch wires or signal lines between the front cover and the drive before you reattach the cover.

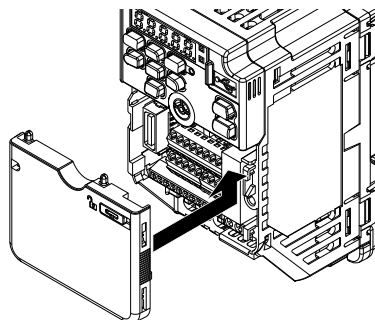



Figure 2.9 Reattach the Front Cover

## 2.6 Removing/Reattaching Covers

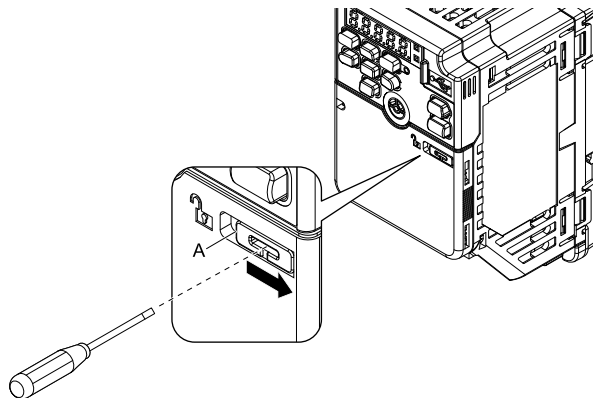---

2. Use a slotted screwdriver to lock the front cover of the drive.

Use a slotted screwdriver with a tip width of 2.5 mm (0.1 in) or less and a thickness of 0.4 mm (0.02 in) or less.



**A - Front cover lock**

**Figure 2.10 Locking the Front Cover**

## 2.7 Remove and Reattach the Keypad

### ◆ Remove the Keypad

Remove the front cover.

Push on the tab on the right side of the keypad, then pull the keypad forward to remove it from the drive.

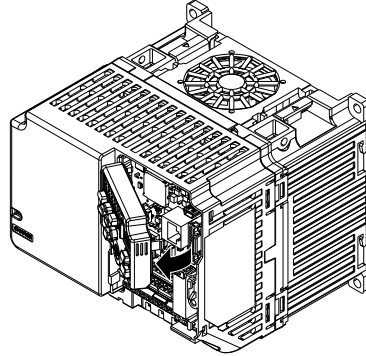


Figure 2.11 Remove the Keypad

### ◆ Reattach the Keypad

Push in the keypad from the front until the hooks click into place.

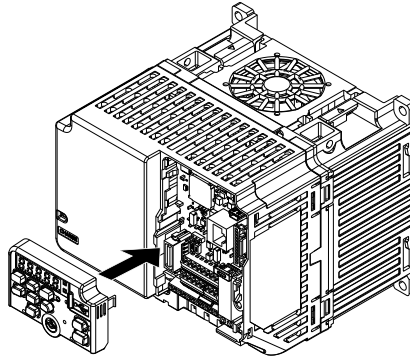


Figure 2.12 Reattach the Keypad

Attach the front cover.

## 2.8 Install the Keypad in a Control Panel or Another Device

### ◆ Operate the Keypad from a Remote Location

You can remove the keypad from the drive and connect it to a remote control extension cable 3 m (9.8 ft) long to make operation easier when you cannot access the drive. It is not necessary to open or close the panel door to operate a drive that is in a control panel. To order optional accessories, contact Yaskawa or your nearest sales representative.

| Name                       | Option Model        | Intended Use   |
|----------------------------|---------------------|--|
| Keypad Remote Cable        | WV001: 1 m (3.3 ft) | To connect the keypad and drive.   |
|                            | WV003: 3 m (9.8 ft) | This option is an RJ-45, 8-pin straight-through UTP CAT5e cable.   |
| Installation Support Set A | 900-192-933-001     | To attach the keypad to the control panel. This option uses screws.  |
| Installation Support Set B | 900-192-933-002     | To attach the keypad to the control panel. This option uses nut clamps.<br>Use this option when weld studs are located in the control panel. |

## 2.9 Installation Methods

The drive installation methods include standard installation and external heatsink installation.

### ◆ Standard Installation

Refer to *Drive Exterior and Mounting Dimensions on page 328* for more information about external dimensions.

### ◆ External Heatsink

The optional External Heatsink Installation Kit will let you install the drive with the heatsink external to the enclosure panel.

Table 2.20 shows the model number for the attachment. To order optional accessories, contact Yaskawa or your nearest sales representative.

**Table 2.20 External Heatsink Installation Kit**

| Drive Model | Kit Model     | Drive Model | Kit Model     |
|-------------|---------------|-------------|---------------|
| B001        | ZPSA-GA50V1-1 | 2056        | ZPSA-GA50V6-1 |
| B002        |               | 2070        | ZPSA-GA50V7-1 |
| B004        | ZPSA-GA50V1-2 | 2082        |               |
| B006        | ZPSA-GA50V2-2 | 4001        | ZPSA-GA50V2-1 |
| B010        | ZPSA-GA50V2-3 | 4002        | ZPSA-GA50V2-2 |
| B012        | ZPSA-GA50V3-1 | 4004        |               |
| B018        | ZPSA-GA50V4-1 | 4005        | ZPSA-GA50V2-3 |
| 2001        | ZPSA-GA50V1-1 | 4007        |               |
| 2002        |               | 4009        |               |
| 2004        | ZPSA-GA50V1-2 | 4012        | ZPSA-GA50V3-1 |
| 2006        | ZPSA-GA50V1-3 | 4018        | ZPSA-GA50V5-1 |
| 2008        | ZPSA-GA50V2-3 | 4023        |               |
| 2010        |               | 4031        | ZPSA-GA50V6-1 |
| 2012        |               | 4038        |               |
| 2018        | ZPSA-GA50V3-1 | 4044        | ZPSA-GA50V8-1 |
| 2021        |               | 4060        |               |
| 2030        | ZPSA-GA50V5-1 |             |               |
| 2042        |               |             |               |



# Electrical Installation

---

This chapter gives how to wire the control circuit terminals, motor, and power supply of the drive.

|             |   |            |
|-------------|---|------------|
| <b>3.1</b>  | <b>Section Safety .....</b>                               | <b>48</b>  |
| <b>3.2</b>  | <b>Electrical Installation.....</b>                       | <b>50</b>  |
| <b>3.3</b>  | <b>Main Circuit Wiring .....</b>                          | <b>53</b>  |
| <b>3.4</b>  | <b>Main Circuit Terminal Block Wiring Procedure .....</b> | <b>74</b>  |
| <b>3.5</b>  | <b>Control Circuit Wiring .....</b>                       | <b>78</b>  |
| <b>3.6</b>  | <b>Control I/O Connections .....</b>                      | <b>86</b>  |
| <b>3.7</b>  | <b>Connect the Drive to a PC .....</b>                    | <b>89</b>  |
| <b>3.8</b>  | <b>External Interlock .....</b>                           | <b>90</b>  |
| <b>3.9</b>  | <b>Braking Resistor Installation.....</b>                 | <b>91</b>  |
| <b>3.10</b> | <b>Drive Wiring Protection .....</b>                      | <b>93</b>  |
| <b>3.11</b> | <b>Dynamic Braking Option, Motor Protection .....</b>     | <b>94</b>  |
| <b>3.12</b> | <b>Improve the Power Factor .....</b>                     | <b>96</b>  |
| <b>3.13</b> | <b>Prevent Switching Surge .....</b>                      | <b>97</b>  |
| <b>3.14</b> | <b>Decrease Noise .....</b>                               | <b>98</b>  |
| <b>3.15</b> | <b>Protect the Drive during Failures .....</b>            | <b>100</b> |
| <b>3.16</b> | <b>Wiring Checklist .....</b>                             | <b>102</b> |
| <b>3.17</b> | <b>Motor Application Precautions .....</b>                | <b>104</b> |

## 3.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### WARNING

#### Electrical Shock Hazard

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Ground the neutral point on the power supply of drive models BxxxE, 2xxxE, and 4xxxE to comply with the EMC Directive before you turn on the EMC filter or if there is high resistance grounding.**

If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

**Make sure that the protective ground wire complies with technical standards and local safety regulations. The EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically de-energize when the protective ground wire disconnects. If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminal to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).**

If you do not obey the standards and regulations, it can cause serious injury or death.

**When there is a DC component in the protective earthing conductor, the drive can cause a residual current. When a residual current operated protective or monitoring device prevents direct or indirect contact, always use a type B Residual Current Monitor/Residual Current Device (RCM/RCD) as specified by IEC/EN 60755.**

If you do not use the correct RCM/RCD, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

#### Fire Hazard

**Tighten all terminal screws to the correct tightening torque.**

Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**Tighten screws at an angle in the specified range shown in this manual.**

If you tighten the screws at an angle not in the specified range, you can have loose connections that can cause damage to the terminal block or start a fire and cause serious injury or death.



**⚠ WARNING****Damage to Equipment**

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

**Fire Hazard**

**When you install a dynamic braking option, wire the components as specified by the wiring diagrams.**

Incorrect wiring can cause damage to braking components or serious injury or death.

**NOTICE**

**Do not let unwanted objects, for example metal shavings or wire clippings, fall into the drive during drive installation. Put a temporary cover over the drive during installation. Remove the temporary cover before start-up.**

Unwanted objects inside of the drive can cause damage to the drive.

**Damage to Equipment**

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Select a motor that is compatible with the load torque and speed range. When 100% continuous torque is necessary at low speed, use an inverter-duty motor or vector-duty motor. When you use a standard fan-cooled motor, decrease the motor torque in the low-speed range.**

If you operate a standard fan-cooled motor at low speed and high torque, it will decrease the cooling effects and can cause heat damage.

**Obey the speed range specification of the motor as specified by the manufacturer. When you must operate the motor outside of its specifications, contact the motor manufacturer.**

If you continuously operate oil-lubricated motors outside of the manufacturer specifications, it can cause damage to the motor bearings.

**When the input voltage is 440 V or higher or the wiring distance is longer than 100 m (328 ft), make sure that the motor insulation voltage is sufficient or use an inverter-duty motor or vector-duty motor with reinforced insulation.**

Motor winding and insulation failure can occur.

**Before you connect a dynamic braking option to the drive, make sure that qualified personnel read and obey the Braking Unit and Braking Resistor Unit Installation Manual (TOBPC72060001).**

If you do not read and obey the manual or if personnel are not qualified, it can cause damage to the drive and braking circuit.

**Make sure that all connections are correct after you install the drive and connect peripheral devices.**

Incorrect connections can cause damage to the drive.

**Note:**

- Torque characteristics are different than when you operate the motor directly from line power. Make sure that you understand the load torque characteristics for the application.
- The rated input current of submersible motors is higher than the rated input current of standard motors. Carefully select the correct drive capacity. When the distance between the motor and drive is long, use a wire that can connect the motor to the drive without a reduction in motor torque.
- Do not use unshielded wire for control wiring. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Unshielded wire can cause electrical interference and unsatisfactory system performance.

## 3.2 Electrical Installation

**DANGER!** *Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.*

**WARNING!** *Electrical Shock Hazard. De-energize the drive and wait 5 minutes minimum until the Charge LED turns off. Remove the front cover and terminal cover to do work on wiring, circuit boards, and other parts. Use terminals for their correct function only. Incorrect wiring, incorrect ground connections, and incorrect repair of protective covers can cause death or serious injury.*

**WARNING!** *Electrical Shock Hazard. Correctly ground the drive before you turn on the EMC filter switch. If you touch electrical equipment that is not grounded, it can cause serious injury or death.*

**WARNING!** *Electrical Shock Hazard. Use the terminals for the drive only for their intended purpose. Refer to the technical manual for more information about the I/O terminals. Wiring and grounding incorrectly or modifying the cover may damage the equipment or cause injury.*

### ◆ Standard Connection Diagram

Wire the drive as specified by [Figure 3.1](#).

**WARNING!** *Sudden Movement Hazard. Set the MFDI parameters before you close control circuit switches. Incorrect Run/Stop circuit sequence settings can cause serious injury or death from moving equipment.*

**WARNING!** *Sudden Movement Hazard. Correctly wire the start/stop and safety circuits before you energize the drive. If you momentarily close a digital input terminal, it can start a drive that is programmed for 3-Wire control and cause serious injury or death from moving equipment.*

**WARNING!** *Sudden Movement Hazard. When you use a 3-Wire sequence, set A1-03 = 3330 [Initialize Parameters = 3-Wire Initialization] and make sure that b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command] (default). If you do not correctly set the drive parameters for 3-Wire operation before you energize the drive, the motor can suddenly rotate when you energize the drive.*

**WARNING!** *Sudden Movement Hazard. Check the I/O signals and the external sequences for the drive before you set the Application Preset function. When you set the Application Preset function (A1-06 ≠ 0), it changes the I/O terminal functions for the drive and it can cause equipment to operate unusually. This can cause serious injury or death.*

**NOTICE:** *Fire Hazard. Install sufficient branch circuit short circuit protection as specified by applicable codes and this manual. The drive is suitable for circuits that supply not more than 31,000 RMS symmetrical amperes, 240 Vac maximum (200 V Class), 480 Vac maximum (400 V Class). Incorrect branch circuit short circuit protection can cause serious injury or death.*

**NOTICE:** *When the input voltage is 440 V or higher or the wiring distance is longer than 100 m (328 ft), make sure that the motor insulation voltage is sufficient or use an inverter-duty motor or vector-duty motor with reinforced insulation. Motor winding and insulation failure can occur.*

**Note:**

Do not connect the AC control circuit ground to the drive enclosure. Failure to obey can cause incorrect control circuit operation.

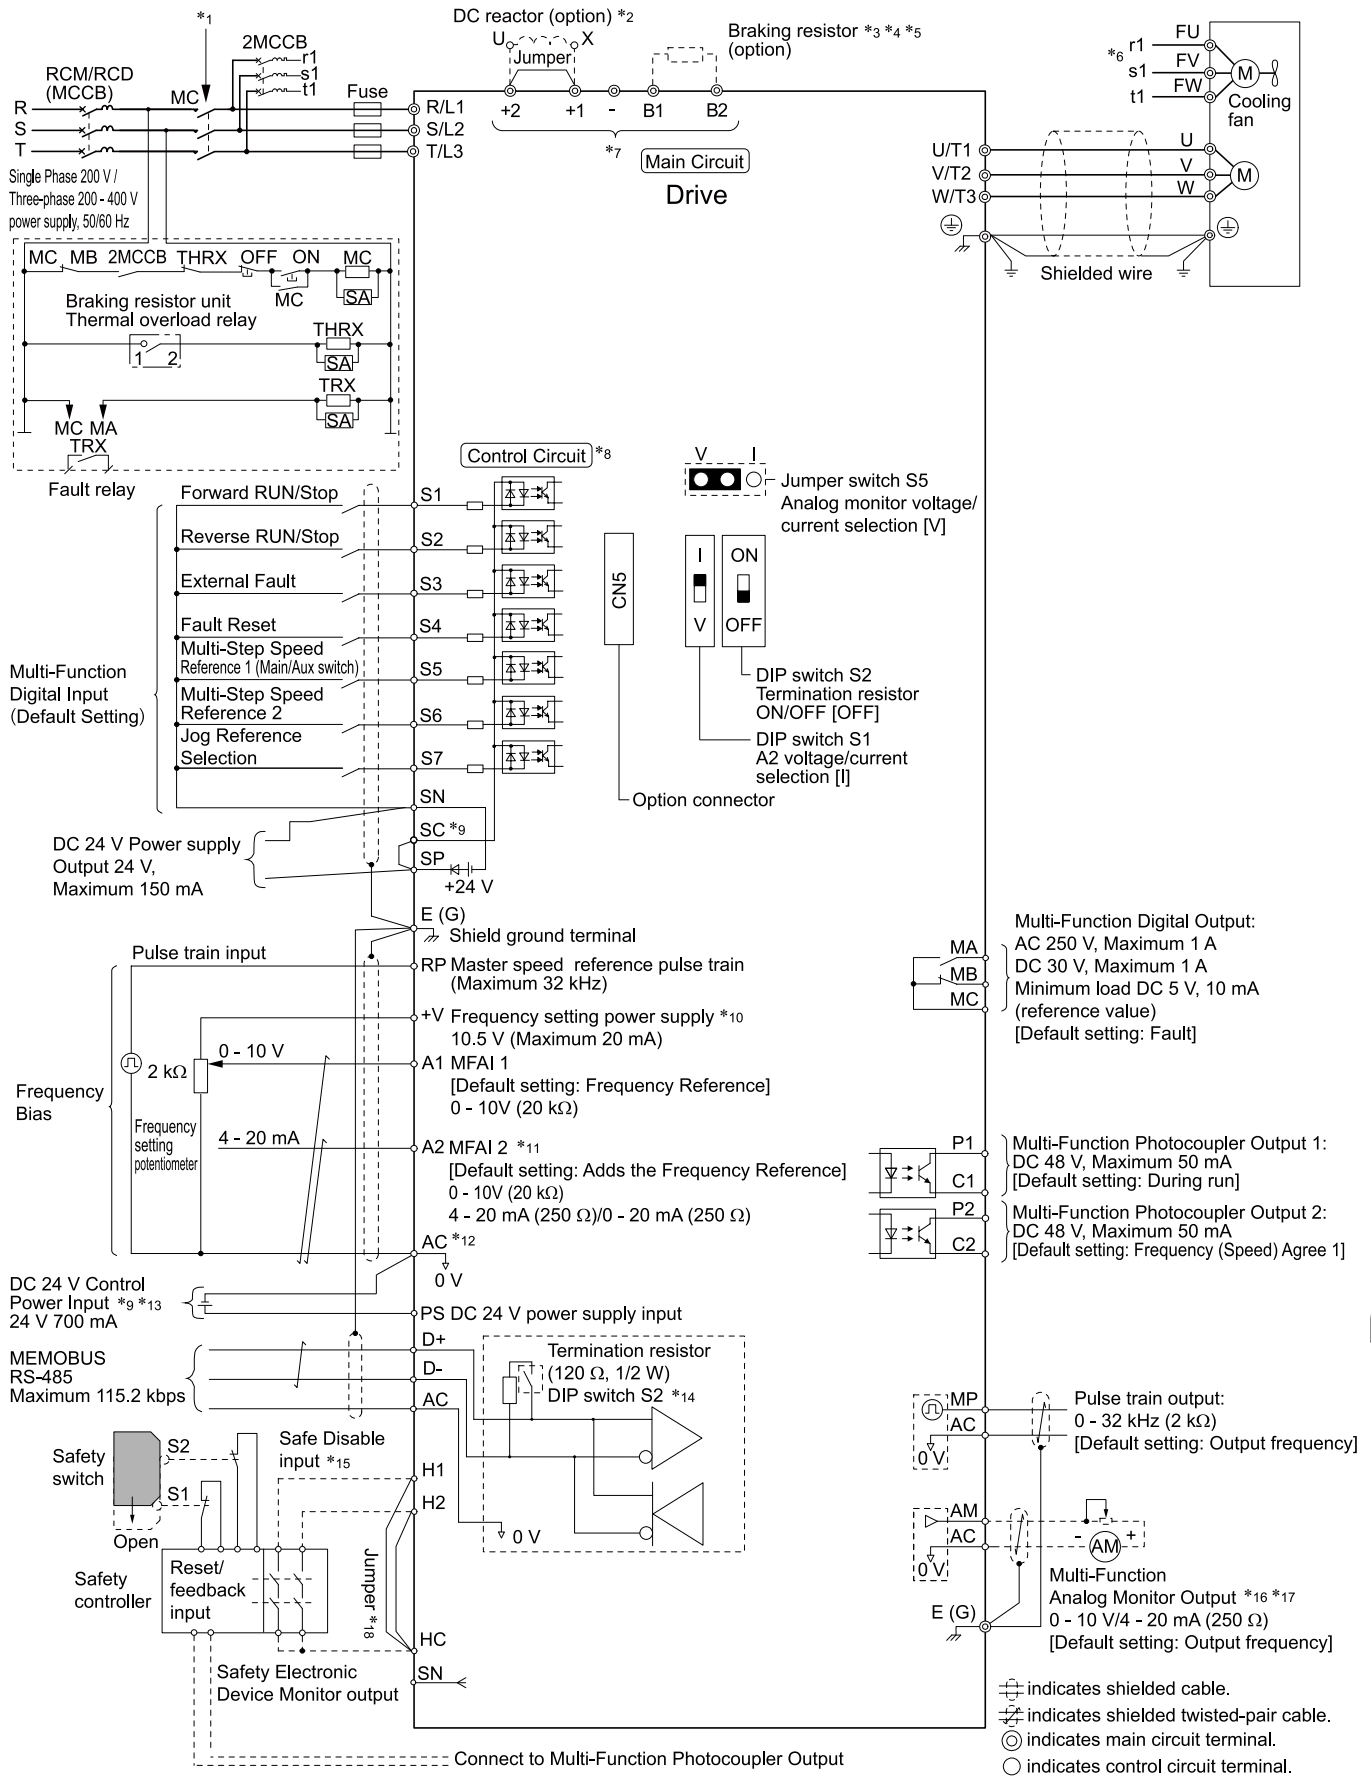


Figure 3.1 Standard Drive Connection Diagram

- \*1 Set the wiring sequence to de-energize the drive with the MFDO. If the drive outputs a fault during fault restart when you use the fault restart function, set L5-02 = 1 [Fault Contact at Restart Select = Always Active] to de-energize the drive. Be careful when you use a cut-off sequence. The default setting for L5-02 is 0 [Active Only when Not Restarting].
- \*2 When you install a DC reactor, you must remove the jumper between terminals +1 and +2.

## 3.2 Electrical Installation

---

- \*3 When you use a regenerative converter or regenerative unit, set  $L8-55 = 0$  [*Internal DB Transistor Protection = Disable*]. If  $L8-55 = 1$  [*Protection Enabled*], the drive will detect  $rF$  [*Braking Resistor Fault*].
- \*4 When you use a regenerative converter, regenerative unit, braking resistor, or braking resistor unit, set  $L3-04 = 0$  [*Stall Prevention during Decel = Disabled*]. If  $L3-04 = 1$  [*General Purpose*], the drive could possibly not stop in the specified deceleration time.
- \*5 When you use an ERF-type braking resistor, set  $L8-01 = 1$  [*3% ERF DB Resistor Protection = Enabled*] and set a wiring sequence to de-energize the drive with the MFDO.
- \*6 Cooling fan wiring is not necessary for self-cooling motors.
- \*7 Connect peripheral options to terminals -, +1, +2, B1, and B2.  
**WARNING! Fire Hazard.** Only connect factory-recommended devices or circuits to drive terminals B1, B2, -, +1, and +2. Do not connect an AC power supply lines to these terminals. Incorrect wiring can cause damage to the drive and serious injury or death from fire.
- \*8 Connect a 24 V power supply to terminals PS-AC to operate the control circuit while the main circuit power supply is OFF.
- \*9 To set the MFDI power supply (Sinking/Sourcing Mode or internal/external power supply), install or remove a jumper between terminals SC-SP or SC-SN depending on the application.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - Sinking Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SP.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - Sourcing Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SN.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - External power supply: Remove the jumper from the MFDI terminals. It is not necessary to close the circuit between terminals SC-SP and terminals SC-SN.
- \*10 The maximum output current capacity for terminal +V on the control circuit is 20 mA.  
**NOTICE: Damage to Equipment.** Do not install a jumper between terminals +V and AC. A closed circuit between these terminals will cause damage to the drive.
- \*11 DIP switch S1 sets terminal A2 for voltage or current input. The default setting for S1 is current input ("I" side).
- \*12 Do not ground the control circuit terminals AC or connect them to the drive chassis.  
**NOTICE: Do not ground the AC control circuit terminals and only connect the AC terminals according to the product instructions. If you connect the AC terminals incorrectly, it can cause damage to the drive.**
- \*13 Connect the positive lead from an external 24 Vdc power supply to terminal PS and the negative lead to terminal AC.  
**NOTICE: Connect terminals PS and AC correctly for the 24 V power supply. If you connect the wires to the incorrect terminals, it will cause damage to the drive.**
- \*14 Set DIP switch S2 to "ON" to enable the termination resistor in the last drive in a MEMOBUS/Modbus network.
- \*15 Use only Sourcing Mode for Safe Disable input.
- \*16 Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- \*17 Jumper S5 sets terminal AM for voltage or current output. The default setting for S5 is voltage output ("V" side).
- \*18 Disconnect the wire jumpers between H1 and HC and H2 and HC to use the Safe Disable input.

## 3.3 Main Circuit Wiring

This section gives information about the functions, specifications, and procedures necessary to safely and correctly wire the main circuit in the drive.

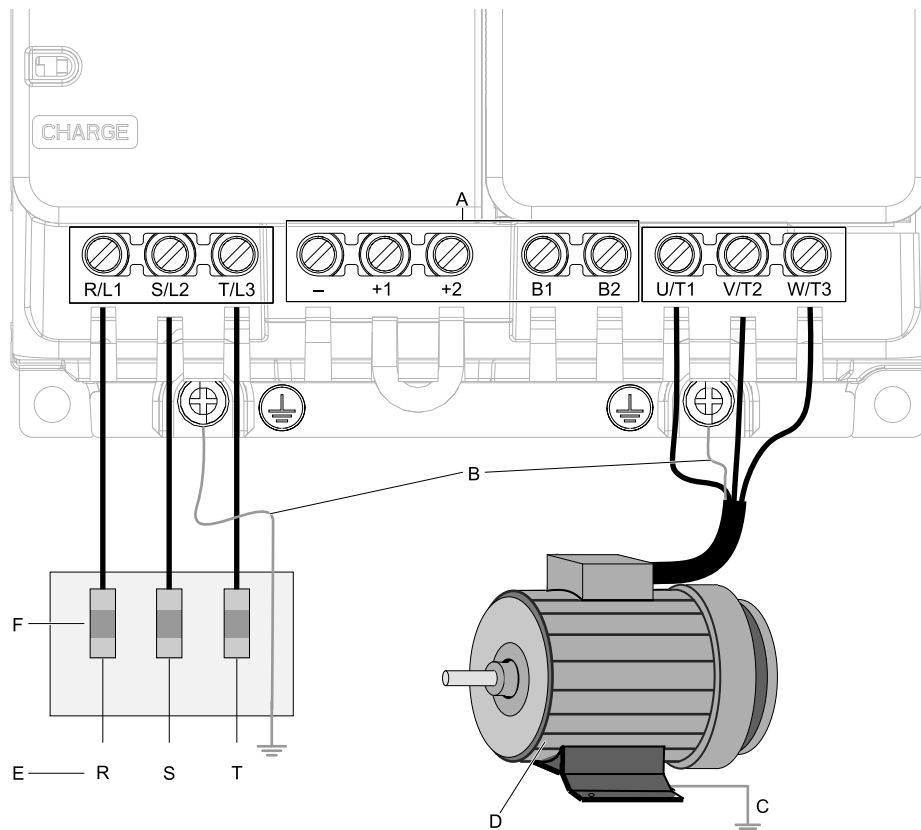
**NOTICE: Damage to Equipment.** Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.

**Note:**

Soldered wire connections can become loose over time and cause unsatisfactory drive performance.

### ◆ Motor and Main Circuit Connections

**WARNING! Electrical Shock Hazard.** Do not connect terminals R/L1, S/L2, T/L3, L/L1, N/L2, U/T1, V/T2, W/T3, -, +1, +2, B1, or B2 to the ground terminal. If you connect these terminals to earth ground, it can cause damage to the drive or serious injury or death.



**Note:**

The locations of terminals are different for different drive models.

**A - DC bus terminal**

**B - Connect to the drive ground terminal.**

**C - Ground the motor case.**

**D - Three-Phase Motor**

**E - Use terminals R/L1, S/L2, and T/L3 for three-phase power supply input. Use terminals L/L1 and N/L2 for single-phase power supply input.**

**F - Input Protection (Fuses or Circuit Breakers)**

Figure 3.2 Wiring the Main Circuit and Motor

### ◆ Configuration of Main Circuit Terminal Block

Use [Table 3.1](#) to find the correct main circuit terminal block figure for your drive.

Table 3.1 Configuration of Main Circuit Terminal Block

| Model       | Figure                     |                            |
|-------------|----------------------------|----------------------------|
|             | No internal EMC filter     | Built-in EMC Filter        |
| B001 - B004 | <a href="#">Figure 3.3</a> | <a href="#">Figure 3.4</a> |
| 2001 - 2006 | <a href="#">Figure 3.5</a> | <a href="#">Figure 3.6</a> |
| B006, B010  | <a href="#">Figure 3.7</a> | <a href="#">Figure 3.8</a> |

### 3.3 Main Circuit Wiring

| Model                    | Figure                 |                     |
|--------------------------|------------------------|---------------------|
|                          | No internal EMC filter | Built-in EMC Filter |
| 2008 - 2012, 4001 - 4009 | Figure 3.9             | Figure 3.10         |
| B012                     | Figure 3.11            | Figure 3.12         |
| 2018 - 2021, 4012        | Figure 3.13            | Figure 3.14         |
| B018                     | Figure 3.15            | -                   |
| 2030, 2042, 4018, 4023   | Figure 3.16            | Figure 3.17         |
| 2056, 4031, 4038         | Figure 3.18            | Figure 3.19         |
| 2070, 2082               | Figure 3.20            | Figure 3.21         |
| 4044, 4060               | Figure 3.22            | Figure 3.23         |

#### ■ Configuration of Main Circuit Terminal Block

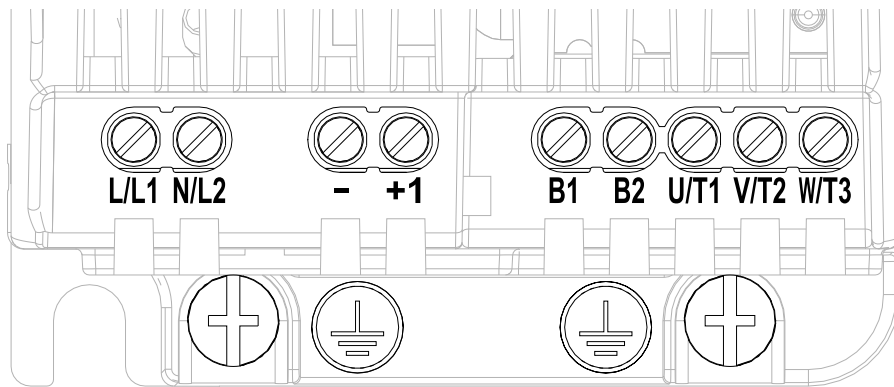


Figure 3.3 Configuration of Main Circuit Terminal Block (Single-Phase, Without a Built-in EMC Filter)

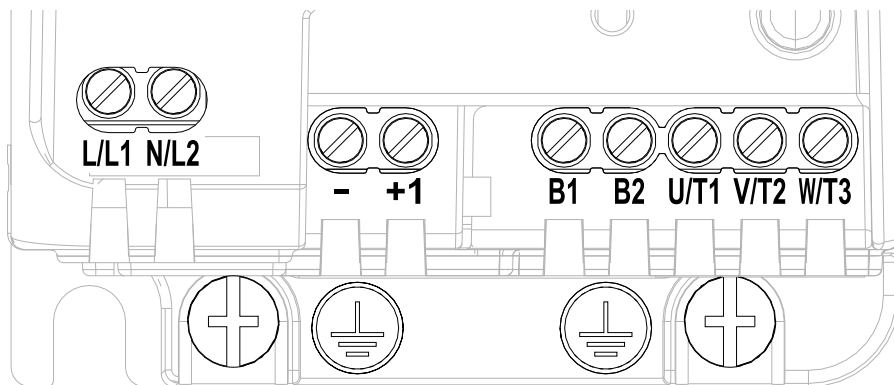


Figure 3.4 Configuration of Main Circuit Terminal Block (Single-Phase, With a Built-in EMC Filter)

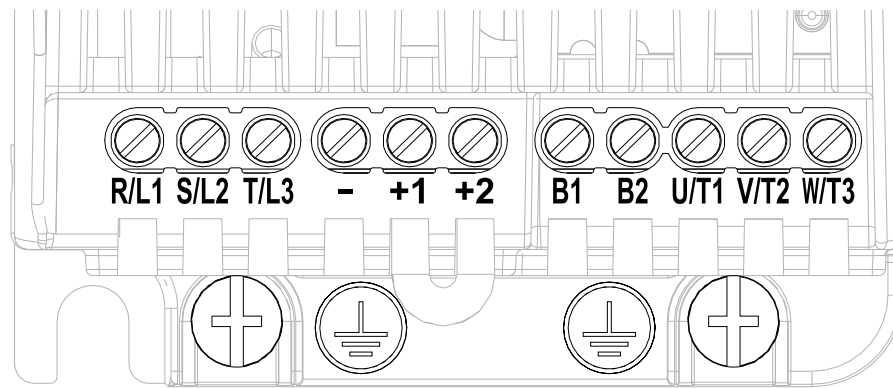


Figure 3.5 Configuration of Main Circuit Terminal Block (Three-Phase, Without a Built-in EMC Filter)

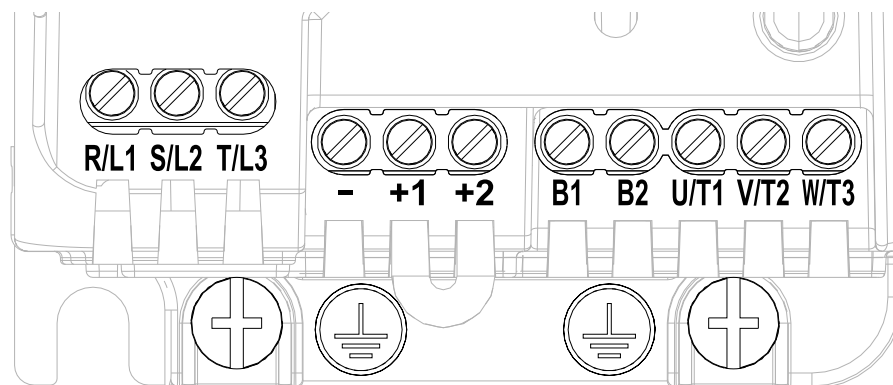


Figure 3.6 Configuration of Main Circuit Terminal Block (Three-Phase, With a Built-in EMC Filter)

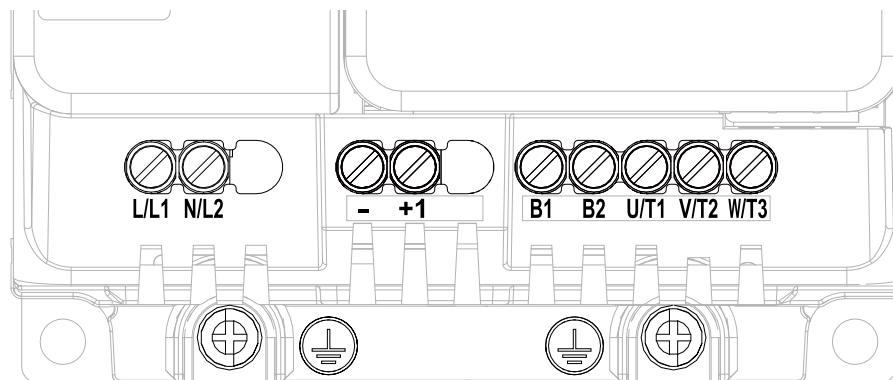


Figure 3.7 Configuration of Main Circuit Terminal Block (Single-Phase, Without a Built-in EMC Filter)

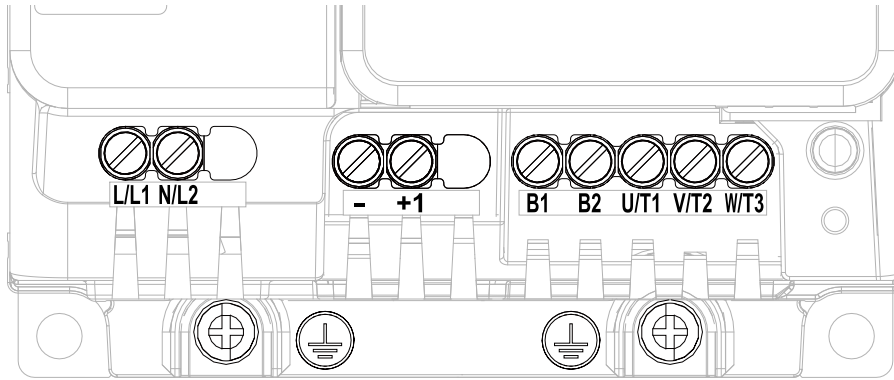


Figure 3.8 Configuration of Main Circuit Terminal Block (Single-Phase, With a Built-in EMC Filter)

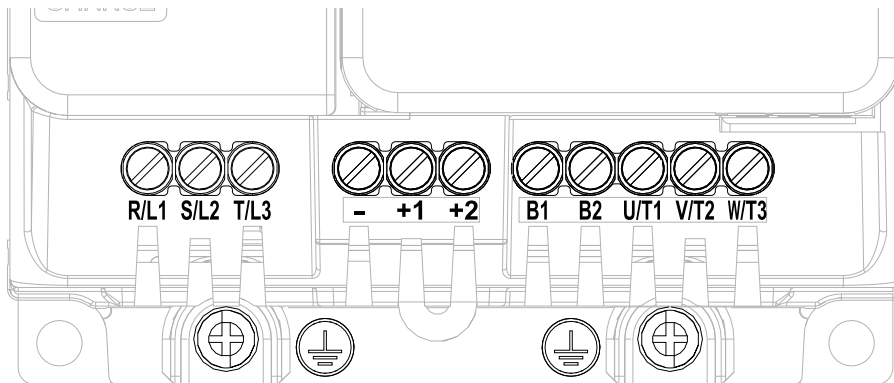


Figure 3.9 Configuration of Main Circuit Terminal Block (Three-Phase, Without a Built-in EMC Filter)

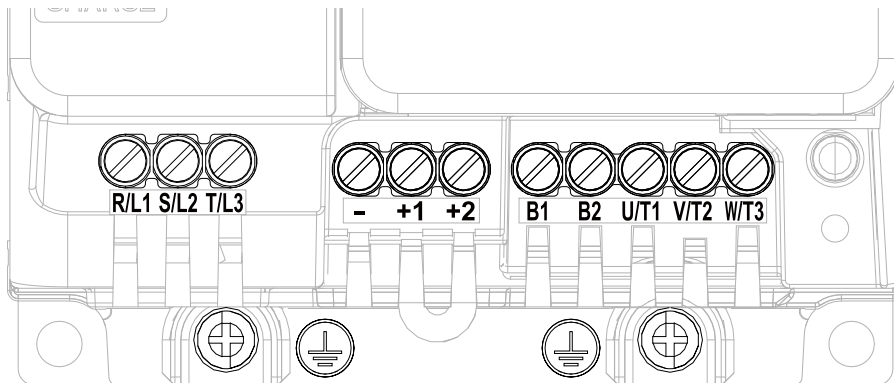


Figure 3.10 Configuration of Main Circuit Terminal Block (Three-Phase, With a Built-in EMC Filter)



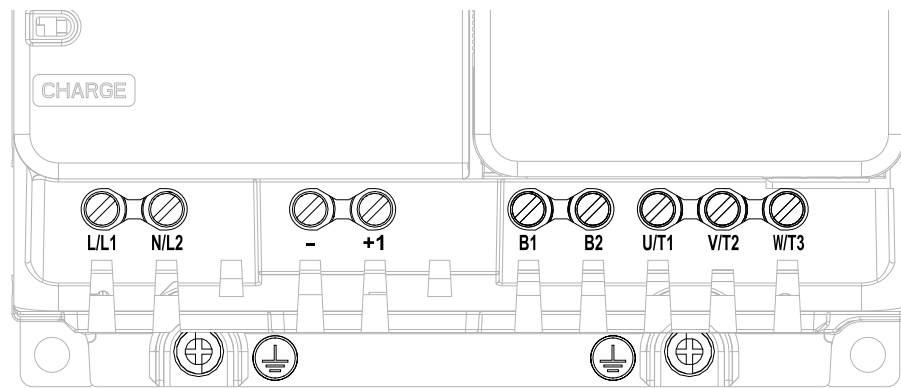


Figure 3.11 Configuration of Main Circuit Terminal Block (Single-Phase, Without a Built-in EMC Filter)

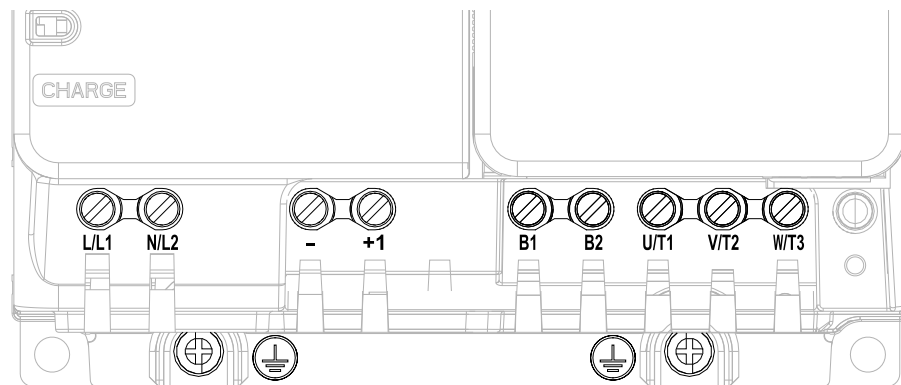


Figure 3.12 Configuration of Main Circuit Terminal Block (Single-Phase, With a Built-in EMC Filter)

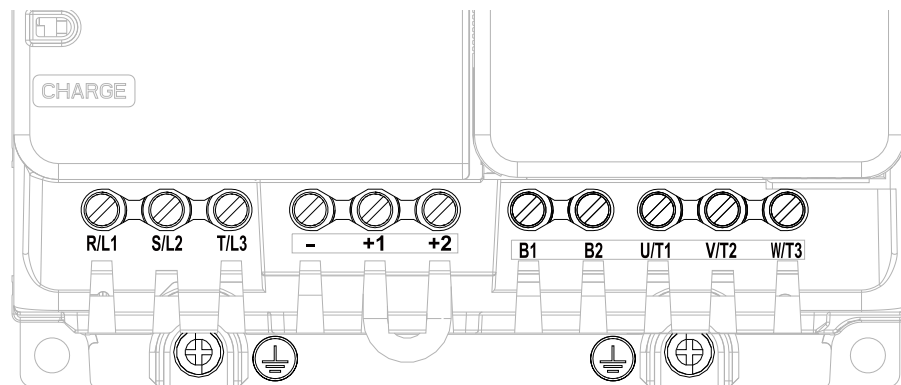


Figure 3.13 Configuration of Main Circuit Terminal Block (Three-Phase, Without a Built-in EMC Filter)

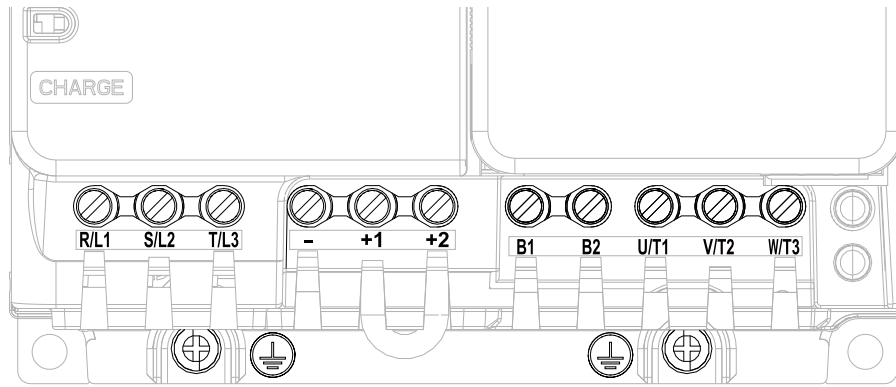


Figure 3.14 Configuration of Main Circuit Terminal Block (Three-Phase, With a Built-in EMC Filter)

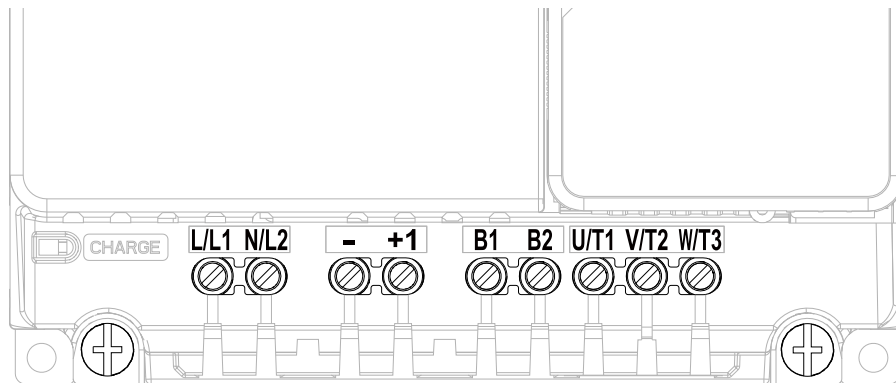


Figure 3.15 Configuration of Main Circuit Terminal Block (Single-Phase, Without a Built-in EMC Filter)

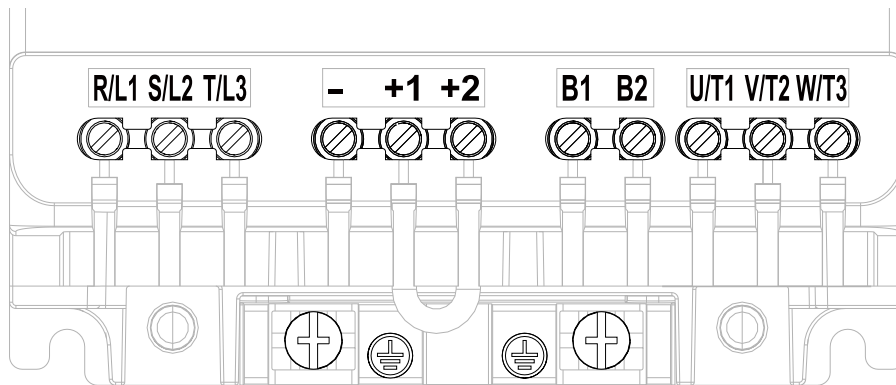


Figure 3.16 Configuration of Main Circuit Terminal Block (Three-Phase, Without a Built-in EMC Filter)

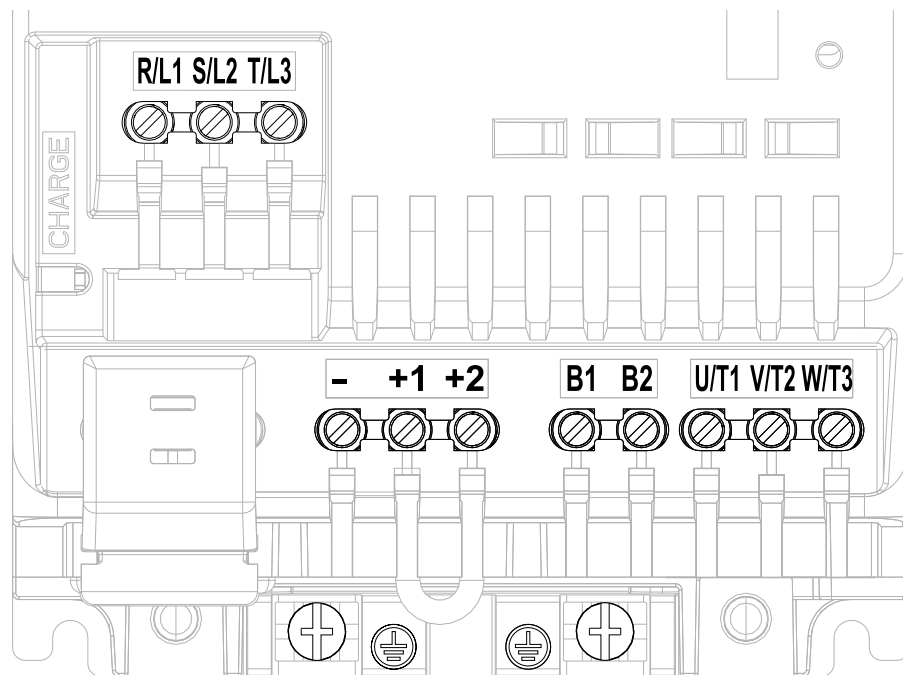


Figure 3.17 Configuration of Main Circuit Terminal Block (Three-Phase, With a Built-in EMC Filter)

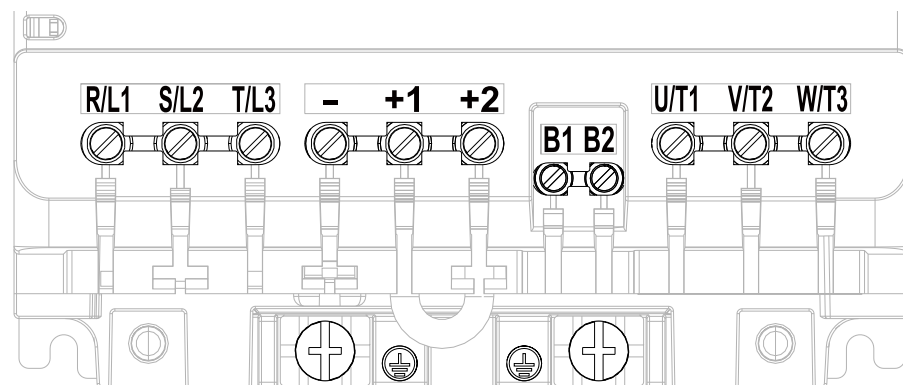


Figure 3.18 Configuration of Main Circuit Terminal Block (Three-Phase, Without a Built-in EMC Filter)

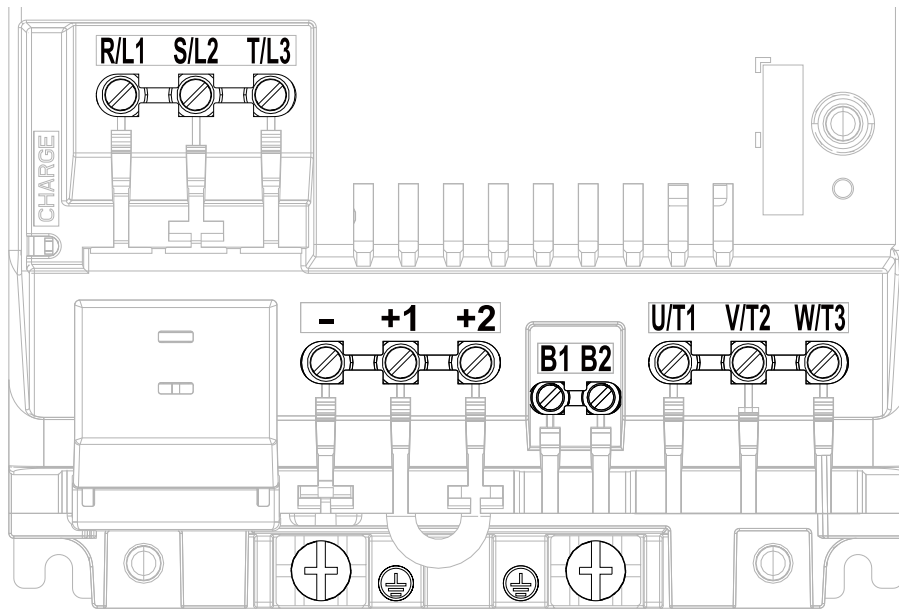


Figure 3.19 Configuration of Main Circuit Terminal Block (Three-Phase, With a Built-in EMC Filter)

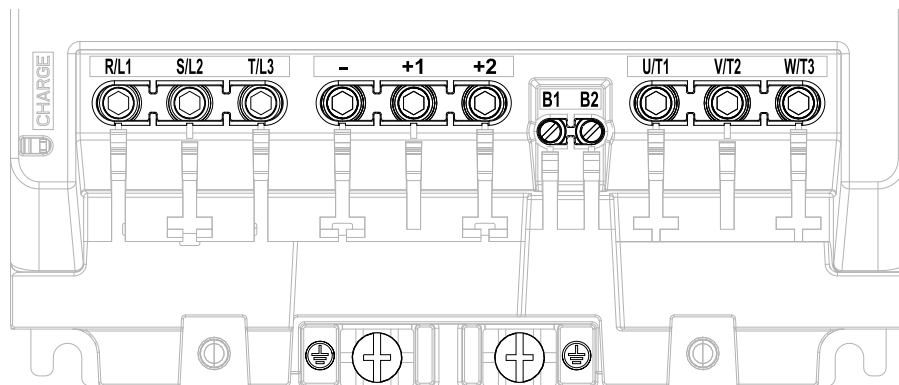


Figure 3.20 Configuration of Main Circuit Terminal Block (Three-Phase, Without a Built-in EMC Filter)

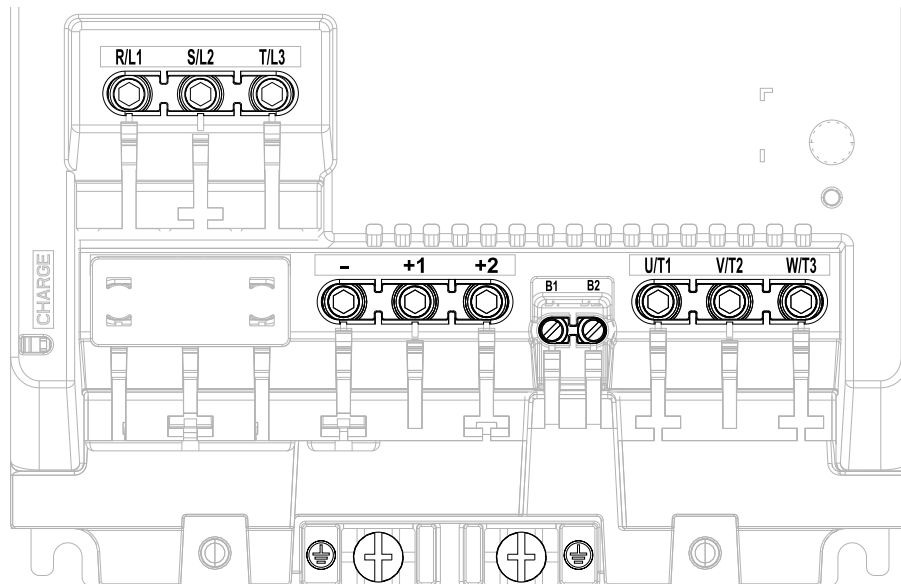


Figure 3.21 Configuration of Main Circuit Terminal Block (Three-Phase, With a Built-in EMC Filter)

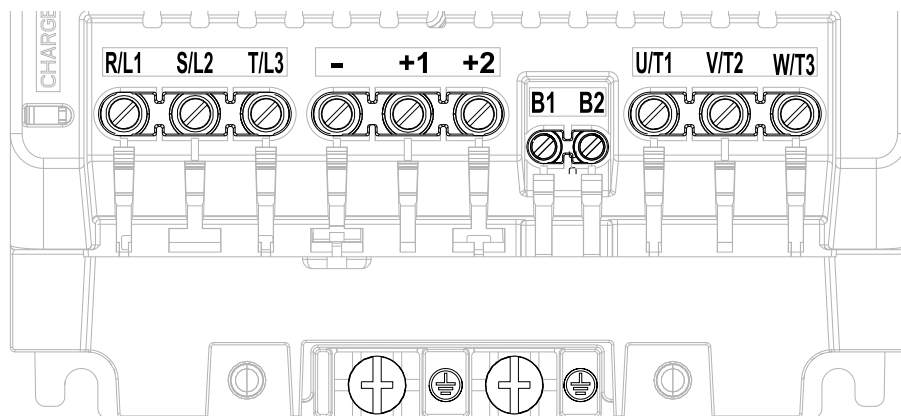


Figure 3.22 Configuration of Main Circuit Terminal Block (Three-Phase, Without a Built-in EMC Filter)

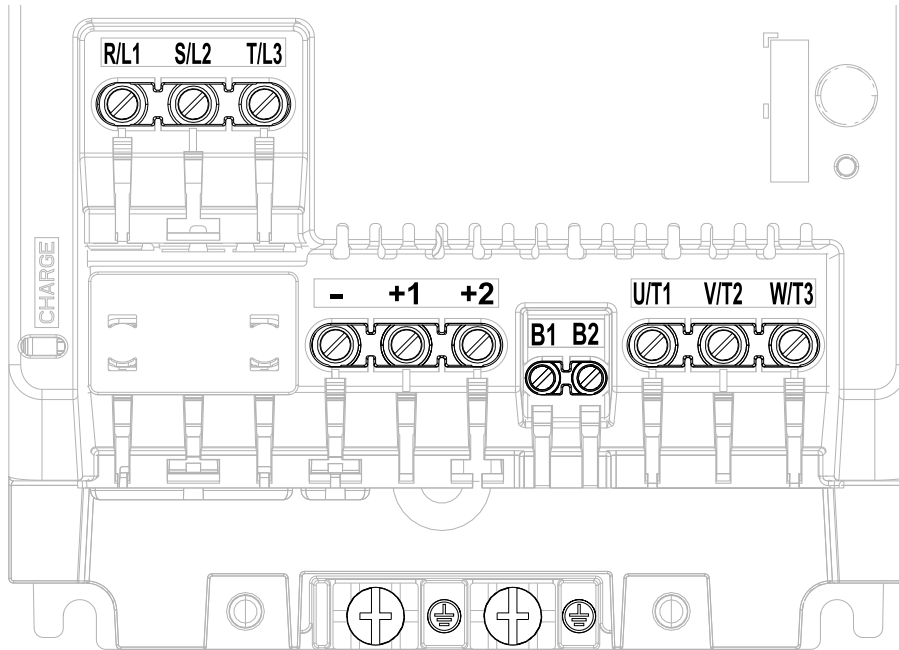


Figure 3.23 Configuration of Main Circuit Terminal Block (Three-Phase, With a Built-in EMC Filter)

#### ◆ Main Circuit Terminal Functions

Refer to [Table 3.2](#) for the functions of drive main circuit terminals.

Table 3.2 Main Circuit Terminal Functions

| Terminal | Name                            |                                 |                            | Function  |
|----------|---------------------------------|---------------------------------|----------------------------|---|
|          | Model                           | B001 - B018                     | 2001 - 2082<br>4001 - 4060 |   |
| R/L1     | -                               | Main circuit power supply input |                            | To connect a commercial power supply.   |
| S/L2     |                                 |                                 |                            |   |
| T/L3     |                                 |                                 |                            |   |
| L/L1     | Main circuit power supply input | -                               |                            |   |
| N/L2     |                                 |                                 |                            |   |
| U/T1     | Drive output                    | Drive output                    |                            | To connect a motor.   |
| V/T2     |                                 |                                 |                            |   |
| W/T3     |                                 |                                 |                            |   |
| -        | DC power input                  | DC power input                  | -                          | +1 and +2: To connect a DC reactor.<br><b>Note:</b><br>Remove the jumper between terminals +1 and +2 to connect a DC reactor.       |
| +1       |                                 |                                 |                            |   |
| +2       | -                               | -                               | DC reactor connection      |   |
| B1       | Braking resistor connection     |                                 |                            | To connect a braking resistor or braking resistor unit.   |
| B2       |                                 |                                 |                            |   |
| ⊕        | Ground Wiring                   |                                 |                            | To ground the drive.<br>• 200 V: D class grounding (ground to 100 Ω or less)<br>• 400 V: C class grounding (ground to 10 Ω or less) |

#### ◆ Wire Selection

Select the correct wires for main circuit wiring.

Refer to [Main Circuit Wire Gauges and Tightening Torques on page 158](#) for wire gauges and tightening torques as specified by European standards.

Refer to [Main Circuit Wire Gauges and Tightening Torques on page 177](#) for wire gauges and tightening torques as specified by UL standards.

## ■ Main Circuit Wire Gauges and Tightening Torques

**WARNING! Electrical Shock Hazard.** Make sure that the protective ground wire complies with technical standards and local safety regulations. The EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically de-energize when the protective ground wire disconnects. If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminal to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire). If you do not obey the standards and regulations, it can cause serious injury or death.

### Note:

- The recommended wire gauges are based on drive continuous current ratings with 75 °C (167 °F) 600 V class 2 heat-resistant indoor PVC wire. Assume these conditions:
  - Ambient temperature: 40 °C (104 °F) maximum
  - Wiring distance: 100 m (3281 ft) maximum
  - Normal Duty rated current value
- Use terminals +1, +2, -, B1, and B2 to connect peripheral options, for example a DC reactor or a braking resistor. Do not connect other items to these terminals.
- Refer to the instruction manual for each device for recommended wire gauges to connect peripheral devices or options to terminals +1, +2, -, B1, and B2. Contact Yaskawa or your nearest sales representative if the recommended wire gauges for the peripheral devices or options are out of the range of the applicable gauges for the drive.

### Single-Phase 200 V Class

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length <sup>*7</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|---|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |   | Size           | Shape |                                  |
| B001  | L/L1, N/L2       | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 *2                              | -   | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B002  | L/L1, N/L2       | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 *2                              | -   | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B004  | L/L1, N/L2       | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                                       | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 *2                              | -   | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |

### 3.3 Main Circuit Wiring

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length <sup>*1</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|---|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |   | Size           | Shape |                                  |
| B006  | L/L1, N/L2       | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| B010  | L/L1, N/L2       | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| B012  | L/L1, N/L2       | 4                                | 2.5 - 6                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1            | 4                                | 2.5 - 6                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| B018  | L/L1, N/L2       | 6                                | 2.5 - 10                            | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1            | 6                                | 2.5 - 10                            | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 6 *2                             | 4 - 10 *2                           | -   | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).



## Three-Phase 200 V Class

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|--------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                | Size           | Shape |                                  |
| 2001  | R/L1, S/L2, T/L3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5                              | 2.5                                 | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2002  | R/L1, S/L2, T/L3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5                              | 2.5                                 | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2004  | R/L1, S/L2, T/L3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5                              | 2.5                                 | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2006  | R/L1, S/L2, T/L3 | 2                                | 2.5 - 2.5                           | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2                                | 2.5 - 2.5                           | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2                                | 2.5 - 2.5                           | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2                                | 2.5 - 2.5                           | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2                                | 2.5 - 2.5                           | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2008  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4                                | 2.5 - 6                             | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

### 3.3 Main Circuit Wiring

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|--------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                | Size           | Shape |                                  |
| 2010  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4                                | 2.5 - 6                             | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2012  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4                                | 2.5 - 6                             | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2018  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 4                                | 2.5 - 6                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 6                                | 2.5 - 6                             | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2021  | R/L1, S/L2, T/L3 | 4                                | 2.5 - 6                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 6                                | 4 - 10                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 6                                | 2.5 - 6                             | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2030  | R/L1, S/L2, T/L3 | 6                                | 4 - 10                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 6                                | 4 - 10                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 10                               | 2.5 - 16                            | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 6                                | 6 - 16                              | -                              | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb)   |
|-------|------------------|----------------------------------|-------------------------------------|--------------------------------|----------------|-------|--|
|       |                  |                                  |                                     |                                | Size           | Shape |  |
| 2042  | R/L1, S/L2, T/L3 | 10                               | 2.5 - 16                            | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | U/T1, V/T2, W/T3 | 10                               | 2.5 - 16                            | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | -, +1, +2        | 16                               | 4 - 25                              | 18                             | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | B1, B2           | 4                                | 2.5 - 6                             | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 6 - 16                              | -                              | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)   |
| 2056  | R/L1, S/L2, T/L3 | 16                               | 4 - 25                              | 18                             | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | U/T1, V/T2, W/T3 | 16                               | 4 - 25                              | 18                             | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | -, +1, +2        | 25                               | 6 - 35                              | 18                             | M5             | ⊖     | <ul style="list-style-type: none"> <li>• ≤ 25 mm<sup>2</sup><br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>• 35 mm<sup>2</sup> ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | B1, B2           | 10                               | 4 - 16                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 10 - 25                             | -                              | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |
| 2070  | R/L1, S/L2, T/L3 | 25                               | 6 - 35                              | 20                             | M6             | ⊖     | 5 - 5.5<br>(45 - 49)   |
|       | U/T1, V/T2, W/T3 | 16                               | 6 - 25                              | 20                             | M6             | ⊖     | 5 - 5.5<br>(45 - 49)   |
|       | -, +1, +2        | 35                               | 10 - 50                             | 20                             | M6             | ⊖     | 5 - 5.5<br>(45 - 49)   |
|       | B1, B2           | 10                               | 4 - 16                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 16                               | 10 - 25                             | -                              | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |
| 2082  | R/L1, S/L2, T/L3 | 35                               | 10 - 50                             | 20                             | M6             | ⊖     | 5 - 5.5<br>(45 - 49)   |
|       | U/T1, V/T2, W/T3 | 25                               | 10 - 35                             | 20                             | M6             | ⊖     | 5 - 5.5<br>(45 - 49)   |
|       | -, +1, +2        | 50                               | 16 - 70                             | 20                             | M6             | ⊖     | 5 - 5.5<br>(45 - 49)   |
|       | B1, B2           | 16                               | 4 - 16                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 16                               | 10 - 25                             | -                              | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### 3.3 Main Circuit Wiring

#### Three-Phase 400 V Class

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length <sup>*7</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|---|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |   | Size           | Shape |                                  |
| 4001  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4002  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4004  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4005  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4007  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8   | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                   | Size           | Shape |                                  |
| 4009  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4012  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4018  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 4                                | 2.5 - 6                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 2.5 - 16                            | -                                 | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |
| 4023  | R/L1, S/L2, T/L3 | 4                                | 2.5 - 6                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 4                                | 2.5 - 6                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 4                                | 4 - 6                               | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 4 - 16                              | -                                 | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |
| 4031  | R/L1, S/L2, T/L3 | 6                                | 4 - 10                              | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 6                                | 4 - 10                              | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 10                               | 2.5 - 16                            | 18                                | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 6 *2                             | 6 - 16 *2                           | -                                 | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |

### 3.3 Main Circuit Wiring

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length <sup>*1</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb)   |
|-------|------------------|----------------------------------|-------------------------------------|---|----------------|-------|--|
|       |                  |                                  |                                     |   | Size           | Shape |  |
| 4038  | R/L1, S/L2, T/L3 | 10                               | 4 - 16                              | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | U/T1, V/T2, W/T3 | 6                                | 2.5 - 10                            | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | -, +1, +2        | 16                               | 4 - 25                              | 18  | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | B1, B2           | 4                                | 2.5 - 6                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 6 - 16                              | -   | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |
| 4044  | R/L1, S/L2, T/L3 | 16                               | 4 - 25                              | 18  | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | U/T1, V/T2, W/T3 | 10                               | 4 - 16                              | 18  | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | -, +1, +2        | 16                               | 6 - 25                              | 18  | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | B1, B2           | 6                                | 4 - 10                              | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 6 - 16                              | -   | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |
| 4060  | R/L1, S/L2, T/L3 | 25                               | 6 - 35                              | 18  | M5             | ⊖     | • ≤ 25 mm <sup>2</sup><br>2.3 - 2.5<br>(19.8 - 22)<br>• 35 mm <sup>2</sup> ≤<br>4.1 - 4.5<br>(36 - 40) |
|       | U/T1, V/T2, W/T3 | 16                               | 4 - 25                              | 18  | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | -, +1, +2        | 25                               | 6 - 35                              | 18  | M5             | ⊖     | • ≤ 25 mm <sup>2</sup><br>2.3 - 2.5<br>(19.8 - 22)<br>• 35 mm <sup>2</sup> ≤<br>4.1 - 4.5<br>(36 - 40) |
|       | B1, B2           | 10                               | 2.5 - 16                            | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 6 - 16                              | -   | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### ◆ Main Circuit Terminal and Motor Wiring

This section outlines the various steps, precautions, and checkpoints for wiring the main circuit terminals and motor terminals.

**WARNING! Fire Hazard.** Do not connect main power supply wiring to drive motor terminals U/T1, V/T2, and W/T3. Connect main power supply wiring to main circuit input terminals R/L1, S/L2, and T/L3. Incorrect wiring can cause serious injury or death from fire.

**WARNING! Sudden Movement Hazard.** Make sure that you align the phase order for the drive and motor when you connect the motor to drive output terminals U/T1, V/T2, and W/T3. If the phase order is incorrect, it can cause the motor to run in reverse. If the motor accidentally runs in reverse, it can cause serious injury or death.

**NOTICE:** Do not connect phase-advancing capacitors, LC/RC noise filters, or leakage breakers (RCM/RCD) to the motor circuit. If you connect these devices to the output circuits, it can cause damage to the drive and connected equipment.

### ■ Cable Length Between Drive and Motor

When the wiring between the drive and the motor is too long, voltage drop along the motor cable can decrease motor torque, usually at low frequency output. If you connect motors in parallel with long motor cable, this is also a problem. Drive output current increases when the leakage current from the cable increases. An increase in leakage current can cause overcurrent and decrease the precision of the current detection.

Use the values in [Table 3.3](#) to adjust the drive carrier frequency. For systems that have 100 m (328 ft) or longer motor wiring, if you use metal conduits or isolated cables for each phase, it will increase stray capacitance.

**Table 3.3 Carrier Frequency against Cable Length Between Drive and Motor**

| Wiring Distance Between the Drive and Motor | 50 m (164 ft) Maximum | 100 m (328 ft) Maximum | More than 100 m (328 ft) |
|---|-----------------------|------------------------|--------------------------|
| Carrier Frequency                           | 15 kHz or less        | 5 kHz or less          | 2 kHz or less            |

**Note:**

- To set the carrier frequency in a drive that is operating more than one motor, calculate the cable length as the total distance of wiring to all connected motors.
- If the length of the wire between the drive and an induction motor is longer than 100 m (328 ft), set  $A1-02 = 0[V/f]$ .
- The maximum cable length between the drive and a PM motor is 100 m (328 ft).
- If the cable length between the drive and the motor is too long when  $A1-02 = 6 [AOLV/PM]$  or  $8 [EZOLV]$ , change the setting to  $A1-02 = 5 [OLV/PM]$ .
- When you connect to a PM motor, it can be necessary to adjust the overcurrent detection. Refer to [L8-27: Overcurrent Detection Gain on page 710](#) for more information.

## ■ Ground Wiring

Follow the precautions to wire the ground for one drive or a series of drives.

**WARNING! Electrical Shock Hazard.** Make sure that the protective ground wire complies with technical standards and local safety regulations. The EN 61800-5-1:2007 standard specifies that you must wire the power supply to automatically de-energize when the protective ground wire disconnects. If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminal to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire). If you do not obey the standards and regulations, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** Ground the neutral point on the power supply of drive models BxxxE, 2xxxE, and 4xxxE to comply with the EMC Directive before you turn on the EMC filter or if there is high resistance grounding. If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** Use a ground wire that complies with technical standards on electrical equipment and use the minimum length of ground wire. Incorrect equipment grounding can cause serious injury or death from dangerous electrical potentials on the equipment chassis.

**WARNING! Electrical Shock Hazard.**

Correctly ground the ground terminals. Obey federal and local electrical wiring codes for correct grounding methods. The maximum grounding resistance is


- 200 V class: ground to 100 Ω or less
- 400 V class: ground to 10 Ω or less

If you touch electrical equipment that is not grounded, it can cause serious injury or death.

**Note:**

- Only use the drive grounding wire to ground the drive. Do not share the ground wire with other devices such as welding machines or large-current electrical equipment. Incorrect equipment grounding can cause drive or equipment malfunction from electrical interference.
- To connect more than one drive to the same grounding circuit, follow the instructions in the instruction manual. Incorrect equipment grounding can cause drive or equipment malfunction from electrical interference.

When you connect more than one drive, refer to [Figure 3.24](#). Do not loop the grounding wire.

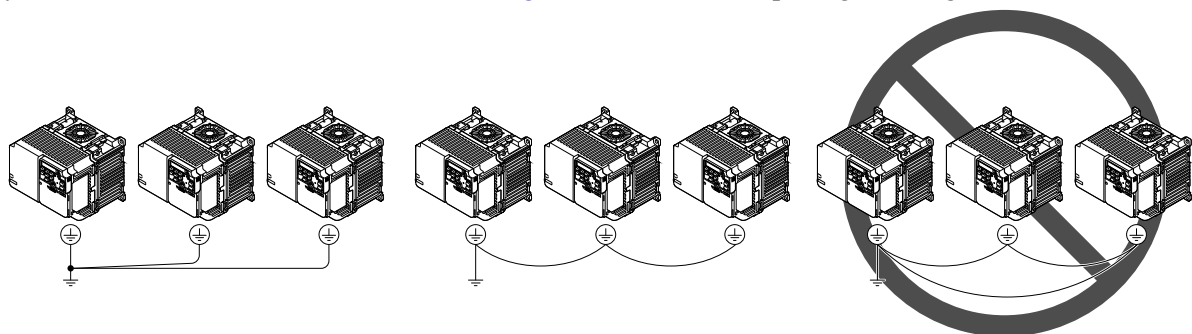

**Figure 3.24 Wiring More than One Drive**

## ■ Wiring the Main Circuit Terminal Block

**WARNING! Electrical Shock Hazard.** Before you wire the main circuit terminals, make sure that MCCB and MC are OFF. If you touch electrical equipment when MCCB and MC are ON, it can cause serious injury or death.

## ■ Main Circuit Configuration

The figures in this section show the different schematics of the drive main circuit. The connections change when the drive capacity changes. The DC power supply for the main circuit also supplies power to the control circuit.

### 3.3 Main Circuit Wiring


**Note:**

Drive models B001A to B018A, 2001A to 2082A, and 4001A to 4060A do not have a built-in EMC filter.


**WARNING! Fire Hazard.** Do not connect a braking resistor to terminals +1 or -. Use terminals B1 and B2 for the braking resistor connections. If you connect a braking resistor to the incorrect terminals, it can cause damage to the drive and braking circuit and serious injury or death.

**NOTICE:** Do not use the negative DC bus terminal “-” as a ground terminal. This terminal is at high DC voltage potential. Incorrect wiring connections can cause damage to the drive.

| Model                    | Figure      |
|--------------------------|-------------|
| B001 - B004              | Figure 3.25 |
| B006 - B018              | Figure 3.26 |
| 2001 - 2004, 4001 - 4004 | Figure 3.27 |
| 2006 - 2082, 4005 - 4060 | Figure 3.28 |

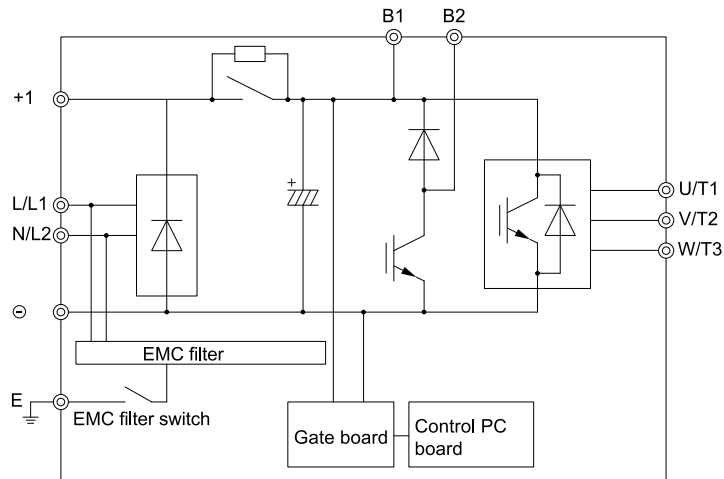

**Figure 3.25 Drive Main Circuit Configuration 1**

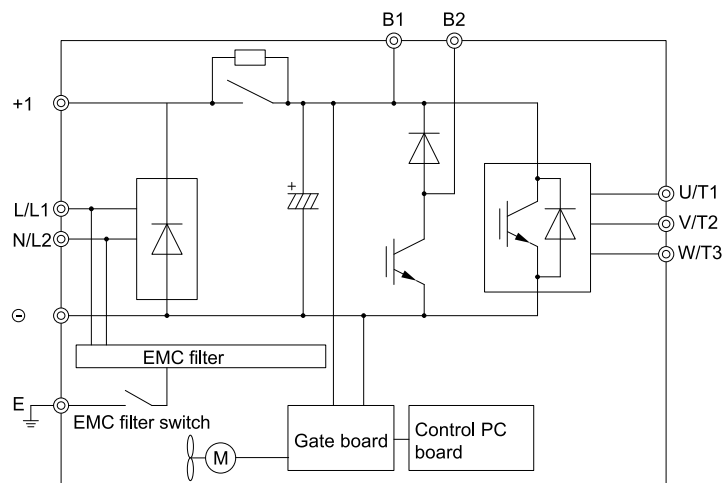

**Figure 3.26 Drive Main Circuit Configuration 2**



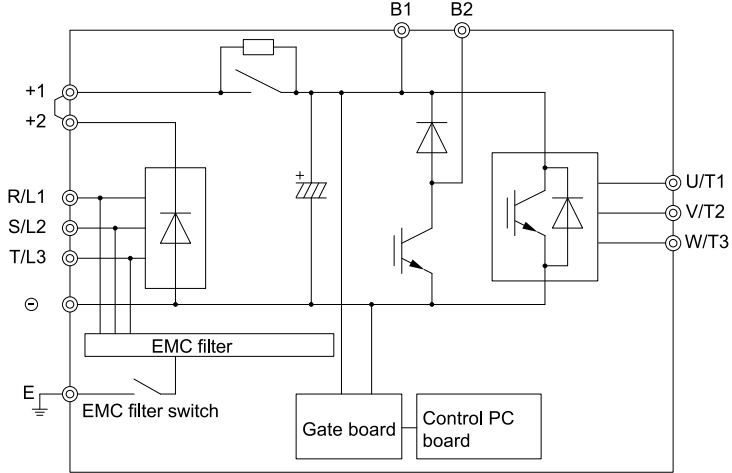


Figure 3.27 Drive Main Circuit Configuration 3

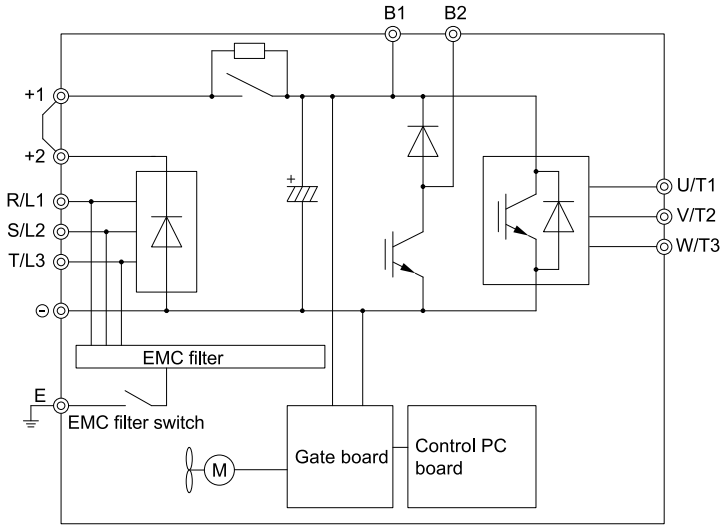


Figure 3.28 Drive Main Circuit Configuration 4

## 3.4 Main Circuit Terminal Block Wiring Procedure

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### ◆ Wire to the Main Circuit Terminal Block

Wire to the main circuit terminal block correctly as specified by the instructions in the manual.

Read these instructions before wiring the terminal block.

### ■ Notes on Wiring the Main Circuit Terminal Block

Read these notes before you wire the main circuit terminal block.

- Use UL-Listed, vinyl-coated insulated copper wires for operation with a continuous maximum permitted temperature of 75 °C at 600 V.
  - Remove all unwanted objects that are near the terminal block connections.
  - Remove the insulation from the connection wires to the wire stripping lengths shown in the manual.
  - Do not use bent or crushed wires. Remove the damaged end of the wire before you use it. Incorrect connections can cause death or serious injury from fire.
  - Do not solder stranded wire. Soldered wire connections can become loose over time and cause unsatisfactory drive performance.
  - If you use stranded wire, make sure that all of the wire strands are in the connection. Also, do not twist the stranded wire too much. Incorrect connections can cause death or serious injury from fire.
  - Put the wire all the way into the terminal block. Remove the insulation from the wire to the recommended wire stripping length to fit the wire with insulation in the plastic housing.
  - Use a torque driver, torque ratchet, or torque wrench for the screws. A slotted driver or a hex tool will be necessary to wire the screw clamp terminal. Use applicable tools as specified by the recommended conditions in the product manual.
  - If you use power tools to tighten the terminal screws, use a low speed setting (300 to 400 r/min). Failure to obey can cause damage to the terminal screws.
  - Wire gauges on existing drive models to be replaced may not match wire gauge ranges on new drives. Refer to the drive manuals for correct wire sizes.
  - Do not tighten the terminal screws at an angle of 5 degrees or more. Failure to obey can cause damage to the terminal screws.
- If you damage a terminal screw, contact Yaskawa or your nearest sales representative.

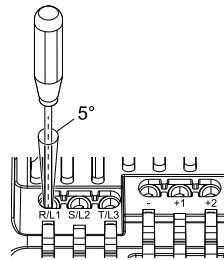


Figure 3.29 Permitted Angle

- Put the bit all the way into the hex socket to tighten the hex socket cap screw.
- When you tighten slotted screws, hold the straight-edge screwdriver perpendicularly to the screw. Make sure that you align the end of the straight-edge screwdriver with the screw groove.


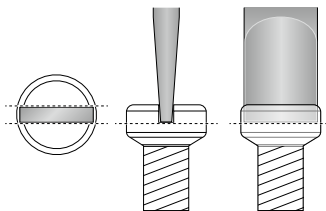


Figure 3.30 Tightening Slotted Screws

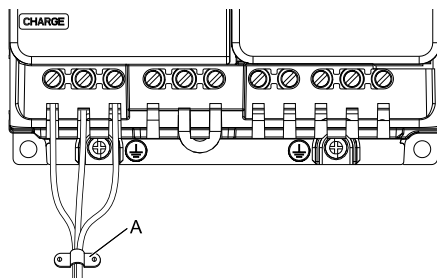- After you connect the wires to the terminal block, lightly pull on the wires to make sure that they do not come out of the terminals.
- Do not let strain on the wiring cause damage. Use a strain relief near the wiring to release the tension. Refer to [Figure 3.31](#) for an example.



A - Cable clamp

Figure 3.31 Strain Relief Example

Table 3.4 Recommended Wiring Tools

| Screw Size | Screw Shape      | Wire Gauge                       | Adapter | Bit                  |                 | Torque Driver Model (Tightening Torque)              | Torque Wrench (Tightening Torque)      |
|------------|------------------|----------------------------------|---------|----------------------|-----------------|--|--|
|            |                  |                                  |         | Model                | Manufacturer    |  |  |
| M3         | ⊖                | -                                | Bit     | SF-BIT-SL 0,5X3,0-70 | PHOENIX CONTACT | TSD-M 1,2NM<br>(0.3 - 1.2 N·m<br>(2.7 - 10.6 in·lb)) | -                                      |
| M4         | ⊖                | -                                | Bit     | SF-BIT-SL 1,0X4,0-70 | PHOENIX CONTACT | TSD-M 3NM<br>(1.2 - 3.0 N·m<br>(10.6 - 26.6 in·lb))  | -                                      |
| M5 *1      | ⊖                | ≤ 25 mm <sup>2</sup><br>(AWG 10) | Bit     | SF-BIT-SL 1,2X6,5-70 | PHOENIX CONTACT | TSD-M 3NM<br>(1.2 - 3.0 N·m<br>(10.6 - 26.6 in·lb))  | -                                      |
|            |                  | ≥ 30 mm <sup>2</sup><br>(AWG 8)  |         |                      |                 | -  |  |
| M6         | ⊕<br>(WAF: 5 mm) | -                                | Bit     | SF-BIT-HEX 5-50      | PHOENIX CONTACT | -  | 5 - 9 N·m<br>(44.3 - 79.7 in·lb) *2 *3 |

\*1 When you wire drive models 2042, 2056, 4031, 4038, 4044, and 4060, select the correct tools for the wire gauge.

\*2 Use 6.35 mm (0.25 in) bit socket holder.

\*3 Use a torque wrench that can apply this torque measurement range.


### ■ Remove IP20 Terminal Protective Cover

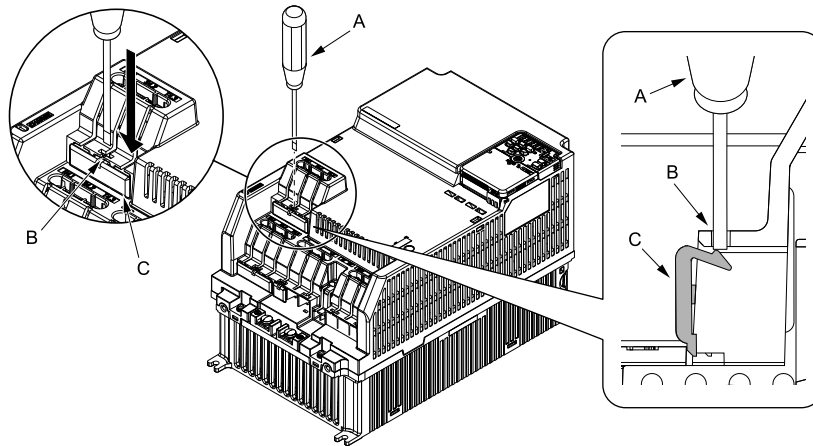These drives have IP20 terminal protective covers. Remove the covers for the application.

| Model                          | Terminal R/L1, S/L2, T/L3 | Terminal - |
|--------------------------------|---------------------------|------------|
| 2042<br>4031, 4038             | -                         | x          |
| 2056, 2070, 2082<br>4044, 4060 | x                         | x          |

### 3.4 Main Circuit Terminal Block Wiring Procedure

1. Put a slotted screwdriver blade into the slit to push the hook of the IP20 terminal protective cover.




A - Slotted screwdriver  
B - Slit

C - IP20 terminal protective cover

Figure 3.32 Put the Screwdriver Blade into the Slit

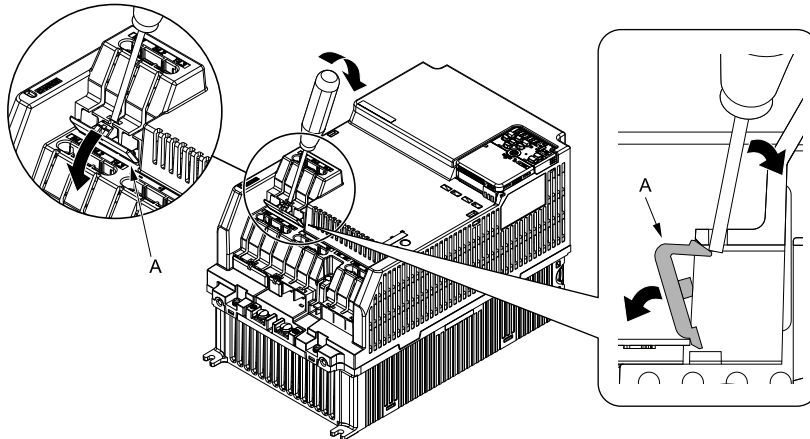2. Push up the screwdriver to release the IP20 terminal protective cover.



A - IP20 terminal protective cover

Figure 3.33 Release IP20 terminal protective cover

3. Remove IP20 terminal protective cover.

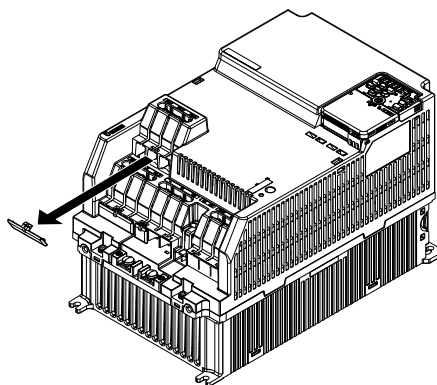
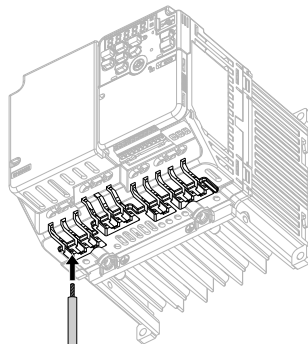


Figure 3.34 Remove IP20 Terminal Protective Cover

#### ■ Main Circuit Terminal Block Wiring Procedure

When terminals R/L1, S/L2, T/L3, and terminal - have IP20 terminal protective covers, remove the cover on the terminal where you will wire.

1. Put wires with prepared ends into the main circuit terminal block.  
Look through the opening in the drive case to make sure that you correctly installed the wires into the terminal block.

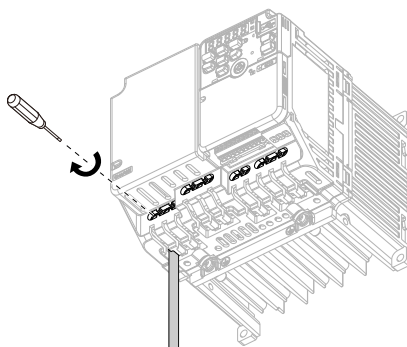


**Figure 3.35 Install the Electrical Wire**

**Note:**

There is a jumper between terminals +1 and +2. Remove the jumper, then wire to terminals +1 and +2.

2. Tighten the screws to the specified torque.




**Figure 3.36 Tighten Terminal Block Screws**

## 3.5 Control Circuit Wiring

This section gives information about how to correctly wire the control circuit.

### ◆ Control Circuit Connection Diagram

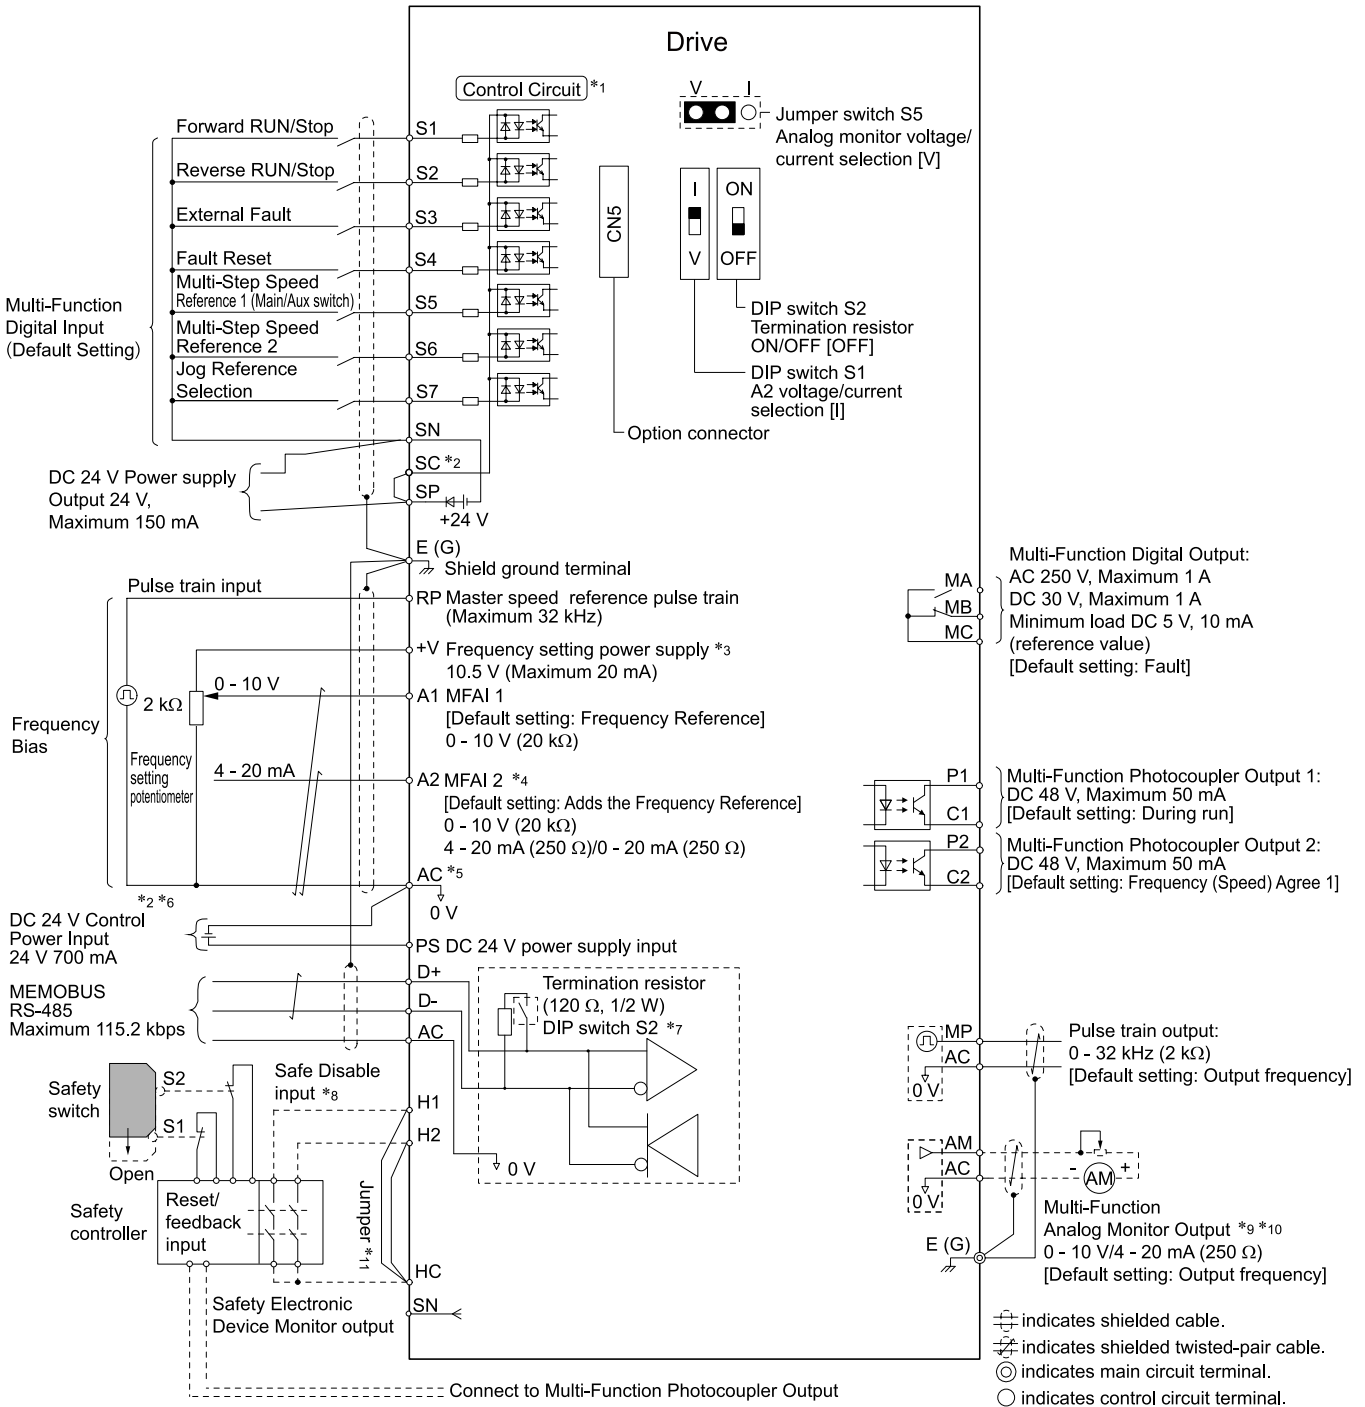Wire the drive control circuit as shown in Figure 3.37.



- \*2 To set the MFDI power supply (Sinking/Sourcing Mode or internal/external power supply), install or remove a jumper between terminals SC-SP or SC-SN depending on the application.
- NOTICE: Damage to Equipment.** Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
- Sinking Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SP.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - Sourcing Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SN.  
**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.
  - External power supply: Remove the jumper from the MFDI terminals. It is not necessary to close the circuit between terminals SC-SP and terminals SC-SN.
- \*3 The maximum output current capacity for terminal +V on the control circuit is 20 mA.
- NOTICE: Damage to Equipment.** Do not install a jumper between terminals +V and AC. A closed circuit between these terminals will cause damage to the drive.
- \*4 DIP switch S1 sets terminal A2 for voltage or current input. The default setting for S1 is current input ("I" side).
- \*5 Do not ground the control circuit terminals AC or connect them to the drive chassis.
- NOTICE: Do not ground the AC control circuit terminals and only connect the AC terminals according to the product instructions. If you connect the AC terminals incorrectly, it can cause damage to the drive.**
- \*6 Do not connect terminals PS and AC inversely. Failure to obey will cause damage to the drive.
- \*7 Set DIP switch S2 to the ON position to enable the termination resistor in the last drive when you use MEMOBUS/Modbus communications.
- \*8 To use the internal power supply with the Safe Disable input, use sourcing mode.
- \*9 Use multi-function analog monitor outputs with analog frequency meters, ammeters, voltmeters, and wattmeters. Do not use monitor outputs with feedback-type signal devices.
- \*10 Jumper S5 sets terminal AM for voltage or current output. The default setting for S5 is voltage output ("V" side).
- \*11 Disconnect the wire jumpers between H1 and HC and H2 and HC to use the Safe Disable input.

## ◆ Control Circuit Terminal Block Functions

*Hx-xx parameters* set functions for the multi-function input and output terminals.

**WARNING! Sudden Movement Hazard.** Correctly wire and test all control circuits to make sure that the control circuits operate correctly. If you use a drive that has incorrect control circuit wiring or operation, it can cause death or serious injury.

**WARNING! Sudden Movement Hazard.** Check the I/O signals and the external sequences for the drive before you set the Application Preset function. When you set the Application Preset function (A1-06 ≠ 0), it changes the I/O terminal functions for the drive and it can cause equipment to operate unusually. This can cause serious injury or death.

**NOTICE: Damage to Equipment.** Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.

### ■ Input Terminals

Refer to [Table 3.5](#) for a list of input terminals and functions.

**Table 3.5 Multi-function Input Terminals**

| Type                       | Terminal                  | Name (Default)   | Function (Signal Level)   |
|----------------------------|---------------------------|--|---|
| Digital Inputs             | S1                        | MFDI selection 1<br>(ON: Forward run, OFF: Stop)                             | <ul style="list-style-type: none"> <li>Photocoupler</li> <li>24 V, 6 mA</li> </ul> <p><b>Note:</b><br/>To set the MFDI power supply (Sinking/Sourcing Mode or internal/external power supply), install or remove a jumper between terminals SC-SP or SC-SN depending on the application.</p> <ul style="list-style-type: none"> <li>Sinking Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SP.</li> </ul> <p><b>NOTICE: Damage to Equipment. Do not close the circuit between terminals SC-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.</b></p> <ul style="list-style-type: none"> <li>Sourcing Mode, Internal power supply: Install the jumper to close the circuit between terminals SC-SN.</li> </ul> <p><b>NOTICE: Damage to Equipment. Do not close the circuit between terminals SC-SP. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.</b></p> <ul style="list-style-type: none"> <li>External power supply: Remove the jumper from the MFDI terminals. It is not necessary to close the circuit between terminals SC-SP and terminals SC-SN.</li> </ul> |
|                            | S2                        | MFDI selection 2<br>(ON: Reverse run OFF: Stop)                              |   |
|                            | S3                        | MFDI selection 3<br>(External fault (N.O.))                                  |   |
|                            | S4                        | MFDI selection 4<br>(Fault reset)  |   |
|                            | S5                        | MFDI selection 5<br>(Multi-step speed reference 1)                           |   |
|                            | S6                        | MFDI selection 6<br>(Multi-step speed reference 2)                           |   |
|                            | S7                        | MFDI selection 7<br>(Jog command)  |   |
|                            | SN                        | MFDI power supply 0 V  | MFDI power supply, 24 V (maximum 150 mA)  |
|                            | SC                        | MFDI selection common  | <b>NOTICE: Damage to Equipment. Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.</b>  |
| SP                         | MFDI power supply +24 Vdc |  |   |
| Safe Disable Input         | H1                        | Safe Disable input 1   | Remove the jumper between terminals H1-HC and H2-HC to use the Safe Disable input. <ul style="list-style-type: none"> <li>24 V, 6 mA</li> <li>ON: Normal operation</li> <li>OFF: Coasting motor</li> <li>Internal impedance 4.7 kΩ</li> <li>OFF Minimum OFF time of 3 ms.</li> </ul>  |
|                            | H2                        | Safe Disable input 2   |   |
|                            | HC                        | Safe Disable function common   | Safe Disable function common<br><b>NOTICE: Do not close the circuit between terminals HC and SN. A closed circuit between these terminals will cause damage to the drive.</b>   |
| Master Frequency Reference | RP                        | Master frequency reference pulse train input<br>(Master frequency reference) | <ul style="list-style-type: none"> <li>Response frequency: 0 to 32 kHz</li> <li>H level duty: 30% to 70%</li> <li>H level voltage: 3.5 V to 13.2 V</li> <li>L level voltage: 0.0 V to 0.8 V</li> <li>Input impedance: 3 kΩ</li> </ul>   |
|                            | +V                        | Power supply for frequency setting   | 10.5 V (allowable current 20 mA maximum)  |
|                            | A1                        | MFAI1<br>(Master frequency reference)  | Voltage input<br><ul style="list-style-type: none"> <li>0 V to 10 V/100% (input impedance: 20 kΩ)</li> </ul>  |
|                            | A2                        | MFAI2<br>(Combined to terminal A1)   | Voltage input or current input<br>Use DIP switch S1 and H3-09 [Terminal A2 Signal Level Select] to select the input. <ul style="list-style-type: none"> <li>0 V to 10 V/100% (input impedance: 20 kΩ)</li> <li>4 mA to 20 mA/100%, 0 mA to 20 mA/100% (input impedance: 250 Ω)</li> </ul>   |
|                            | AC                        | Frequency reference common   | 0 V   |

■ Output Terminals

Refer to Table 3.6 and Table 3.7 for a list of Output terminals and functions.

**Table 3.6 Control Circuit Output Terminals**

| Type                                | Terminal | Name (Default)  | Function (Signal Level)   |
|-------------------------------------|----------|---|---|
| Digital Outputs                     | MA       | N.O. output<br>(Fault)                                  | <ul style="list-style-type: none"> <li>Relay output</li> <li>30 Vdc, 10 mA to 1 A</li> <li>250 Vac, 10 mA to 1 A</li> <li>Minimum load: 5 V, 10 mA (Reference value)</li> </ul> |
|                                     | MB       | N.C. output<br>(Fault)                                  |   |
|                                     | MC       | Digital output common                                   |   |
| Multi-function Photocoupler Outputs | P1       | Multi-function photocoupler output 1<br>(During RUN)    | <ul style="list-style-type: none"> <li>Photocoupler output</li> <li>48 V, 2 mA to 50 mA</li> </ul>  |
|                                     | C1       |   |   |
|                                     | P2       | Multi-function photocoupler output 2<br>(Speed agree 1) |   |
|                                     | C2       |   |   |



Table 3.7 Control Circuit Monitor Output Terminals

| Type           | Terminal | Name (Default)                              | Function (Signal Level)  |
|----------------|----------|---|--|
| Monitor Output | MP       | Pulse train output<br>(Output frequency)    | 32 kHz (maximum)<br>Refer to "Pulse Train Output" (page 86) for more information.  |
|                | AM       | Analog monitor output<br>(Output frequency) | Select voltage or current output.<br><ul style="list-style-type: none"> <li>0 V to 10 V/0% to 100%</li> <li>4 mA to 20 mA (Receiver recommended impedance: 250 Ω)</li> </ul> <b>Note:</b><br>Use jumper S5 and H4-07 [Terminal AM Signal Level Select] to set the signal type. |
|                | AC       | Monitor common                              | 0 V  |

### External Power Supply Input Terminals

Refer to Table 3.8 for a list of the functions of the external power supply input terminals.

Table 3.8 External Power Supply Input Terminals

| Type                                  | Terminal | Name (Default)                    | Function  |
|---------------------------------------|----------|-----------------------------------|---|
| External Power Supply Input Terminals | PS       | External 24 V power supply input  | Supplies backup power to the drive control circuit, keypad, and option board.<br>21.6 VDC to 26.4 VDC, 700 mA |
|                                       | AC       | External 24 V power supply ground | 0 V   |

### Alarm Display When You Use External 24 V Power Supply

When you use an external 24 V power supply, the drive detects an alarm as shown in Table 3.9 if you set o2-23 [External 24V Powerloss Detection] and o2-26 [Alarm Display at Ext. 24V Power] for the main circuit power supply. Set the alarm display as necessary.

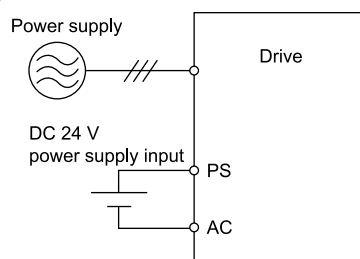


Table 3.9 Power Supply and Alarm Display

| Main Circuit Power Supply | External 24 V Power Supply | o2-23<br>[External 24V Powerloss<br>Detection] | o2-26<br>[Alarm Display at Ext. 24V<br>Power] | Alarm Display                           |
|---------------------------|----------------------------|--|---|---|
| ON                        | ON                         | -  | -   | -                                       |
| ON                        | OFF                        | 0 [Disabled]                                   | -   | -                                       |
|                           |                            | 1 [Enabled]                                    | -   | L24v [Loss of External Power 24 Supply] |
| OFF                       | ON                         | -  | 0 [Disabled]                                  | "Ready" LED light flashes quickly       |
|                           |                            | -  | 1 [Enabled]                                   | EP24v [External Power 24V Supply]       |

### Serial Communication Terminals


Refer to Table 3.10 for a list of serial communication terminals and functions.

Table 3.10 Serial Communication Terminals

| Type                 | Terminal | Terminal Name                  | Function (Signal Level)   |   |
|----------------------|----------|--------------------------------|---|---|
| Modbus Communication | D+       | Communication input/output (+) | MEMOBUS/Modbus communications<br>Use an RS-485 cable to connect the drive.<br><b>Note:</b><br>Set DIP switch S2 to ON to enable the termination resistor in the last drive in a MEMOBUS/Modbus network. | <ul style="list-style-type: none"> <li>RS-485</li> <li>MEMOBUS/Modbus communication protocol</li> <li>Maximum 115.2 kbps</li> </ul> |
|                      | D-       | Communication output (-)       |   |   |
|                      | AC       | Shield ground                  | 0 V   |   |

### ◆ Control Circuit Terminal Configuration

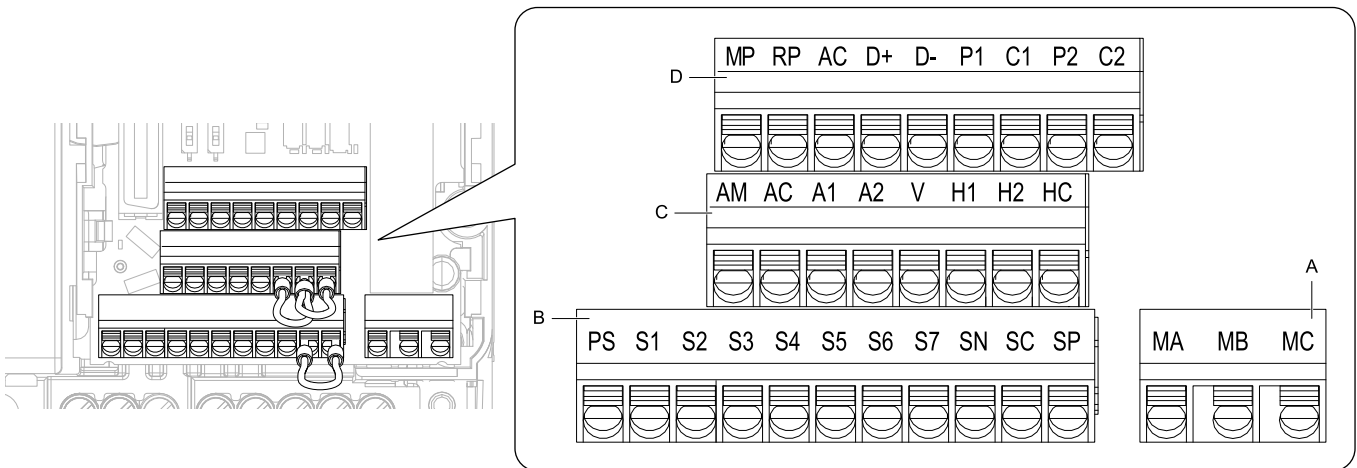The control circuit terminals are in the positions shown in [Figure 3.38](#).



A - Terminal block (TB2)  
 B - Terminal block (TB1-1)

C - Terminal block (TB1-2)  
 D - Terminal block (TB1-3)

Figure 3.38 Control Circuit Terminal Arrangement

### ■ Control Circuit Wire Gauges and Tightening Torques

Use the tables in this section to select the correct wires. Use shielded wire to wire the control circuit terminal block. Use crimp ferrules on the wire ends to make the wiring procedure easier and more reliable.

Table 3.11 Control Circuit Wire Gauges and Tightening Torques

| Terminal Block | Terminal                           | Bare Wire                           |   | Crimp Ferrule                       |  |
|----------------|------------------------------------|-------------------------------------|---|-------------------------------------|--|
|                |                                    | Recomm. Gauge mm <sup>2</sup> (AWG) | Applicable Gauge mm <sup>2</sup> (AWG)  | Recomm. Gauge mm <sup>2</sup> (AWG) | Applicable Gauge mm <sup>2</sup> (AWG) |
| TB1-1          | PS, S1 - S7, SN, SC, SP            | 0.75<br>(18)                        | <ul style="list-style-type: none"> <li>Stranded wire 0.25 - 1.0 (24 - 17)</li> <li>Solid wire 0.25 - 1.5 (24 - 16)</li> </ul> | 0.5<br>(20)                         | 0.25 - 0.5<br>(24 - 20)                |
| TB1-2          | AM, AC, A1, A2, +V, H1, H2, HC     |                                     |   |                                     |  |
| TB1-3          | MP, RP, AC, D+, D-, P1, C1, P2, C2 |                                     |   |                                     |  |
| TB2            | MA, MB, MC                         |                                     |   |                                     |  |

#### Crimp Ferrules

Attach an insulated sleeve when you use crimp ferrules. Refer to [Table 3.12](#) for the recommended external dimensions and model numbers of crimp ferrules.

Use the CRIMPFOX 6, a crimping tool made by PHOENIX CONTACT.

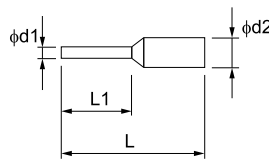


Figure 3.39 External Dimensions of Crimp Ferrules

Table 3.12 Crimp Ferrule Models and Sizes

| Wire Gauge mm <sup>2</sup> (AWG) | Model                        | L (mm) | L1 (mm) | φd1 (mm) | φd2 (mm) |
|----------------------------------|------------------------------|--------|---------|----------|----------|
| 0.25 (24)                        | AI 0.25-6 YE<br>AI 0.25-6 BU | 10.5   | 6.0     | 0.8      | 2.0      |
| 0.34 (22)                        | AI 0.34-6 TQ                 | 10.5   | 6.0     | 0.8      | 2.0      |
| 0.5 (20)                         | AI 0.5-6 WH<br>AI 0.5-6 OG   | 12.0   | 6.0     | 1.1      | 2.5      |
| 0.75 (18)                        | AI 0.75-6 GY<br>AI 0.75-6 WH | 12.0   | 6.0     | 1.3      | 2.8      |
| 1.0 (17)                         | AI 1-6 RD<br>AI 1-6 YE       | 12.0   | 6.0     | 1.5      | 3.0      |

## ◆ Wiring the Control Circuit Terminal

**WARNING! Electrical Shock Hazard.** Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

**NOTICE:** Do not let wire shields touch other signal lines or equipment. Insulate the wire shields with electrical tape or shrink tubing. If you do not insulate the wire shields, it can cause a short circuit and damage the drive.

**Note:**

- Use a Class 2 power supply to connect external power to the control terminals. If the power supply for peripheral devices is incorrect, it can cause a decrease in drive performance.
- Connect the shield of shielded cable to the applicable ground terminal. Incorrect equipment grounding can cause drive or equipment malfunction from electrical interference.
- Isolate wiring for contact output terminals MA, MB, MC, P1, C1, P2, and C2 from other control circuit wiring. Incorrect wiring procedures can cause the drive and connected equipment to malfunction and cause the drive to trip.
- Isolate control circuit wiring from main circuit wiring (terminals R/L1, S/L2, T/L3, L/L1, N/L2, B1, B2, U/T1, V/T2, W/T3, -, +1, +2) and other high-power wiring. If control circuit wiring is adjacent to main circuit wiring, it can cause incorrect operation of the drive and equipment from electrical interference.

Wire the grounding terminal and main circuit terminals, then wire the control circuit terminals.

1. Remove the front cover from the drive.  
You must remove the keypad to move Jumper S5.


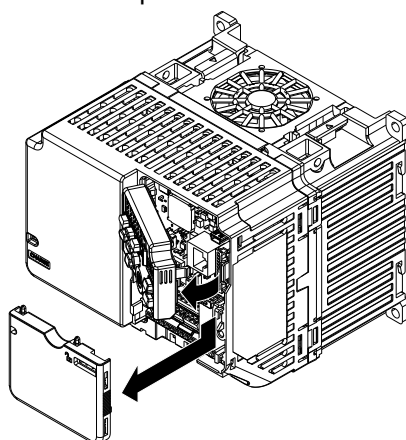


Figure 3.40 Remove the Front Cover

2. Refer to the figure and wire the control circuit.  
Use a slotted screwdriver with a blade width of 2.5 mm (0.1 in) or less and thickness of 0.4 mm (0.01 in) or less.  
**WARNING! Fire Hazard.** Tighten all terminal screws to the correct tightening torque. Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**Note:**

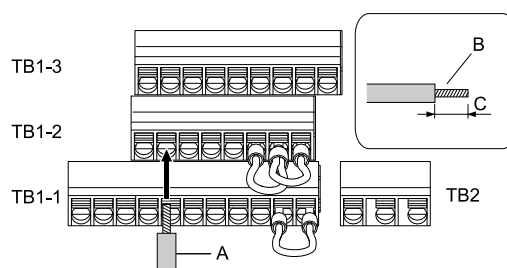- Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Incorrect equipment grounding can cause drive or equipment malfunction from electrical interference.
- Do not use control circuit wiring that is longer than 50 m (164 ft) to supply the analog frequency reference from a remote source. If the control circuit wiring is too long, it can cause unsatisfactory system performance.



**A - Wire with a crimp ferrule attached, or unsoldered wire with the core wires lightly twisted**


**B - Pull back the shielding and lightly twist the end with your fingers to keep the ends from fraying.**

**C - When you do not use crimp ferrules, remove approximately 5.5 mm (0.21 in) of the covering at the end of the wire.**

Figure 3.41 Wiring Procedure for the Control Circuit

**Note:**

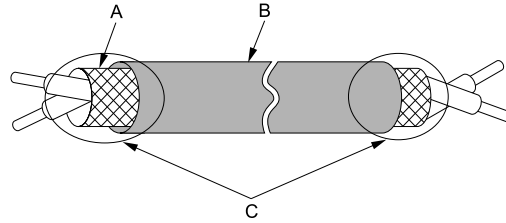- It is easier to wire TB1-1 first, then TB1-2, then TB1-3.
- Do not solder the core wire. Soldered wiring connections can become loose and cause the drive to malfunction.
- Refer to [Figure 3.42](#) for information to prepare terminal ends of the shielded wire.
- Prepare the wire ends of shielded twisted-pair wires as shown in [Figure 3.42](#) to use an analog reference from an external frequency setting potentiometer to set the frequency. Connect the shield to terminal E (G) of the drive.



**A - Connect the shield to terminal E (G) of the drive. C - Insulate with electrical tape or shrink tubing.  
B - Sheath**


**Figure 3.42 Prepare the Ends of Shielded Wire**

**3. Attach the front cover.**

If you moved Jumper S5, attach the keypad before you attach the front cover.

If you did not move Jumper S5, attach the front cover.


Make sure that you do not pinch wires or signal lines between the front cover and the drive before you reattach the cover.

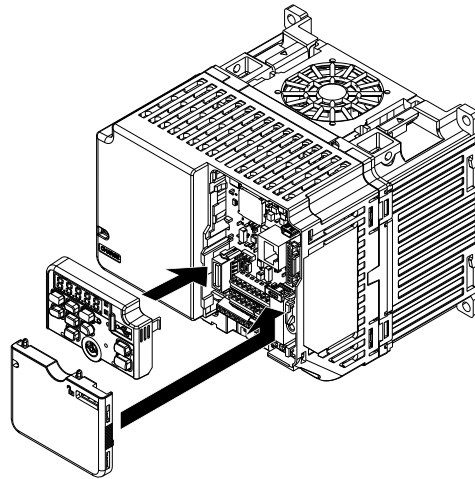

**Figure 3.43 Reattach the Front Cover**

### ◆ Switches and Jumpers on the Terminal Board

The terminal board has switches to adapt the drive I/Os to the external control signals as shown in [Figure 3.44](#). Set the switches to select the functions for each terminal.

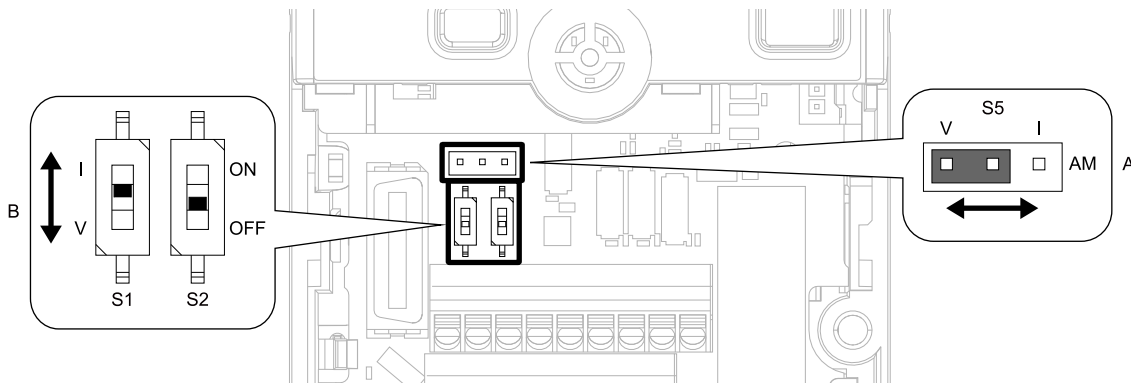

**Figure 3.44 Locations of Switches**

**Table 3.13 I/O Terminals and Switches Functions**

| Position | Switch           | Terminal | Function   | Default            |
|----------|------------------|----------|--|--------------------|
| A        | Jumper switch S5 | AM       | Sets the output method for terminal AM (voltage or current).                 | V (voltage output) |
| B        | DIP switch S1    | A2       | Sets the input method for terminal A2 (voltage or current).                  | I (current input)  |
|          | DIP switch S2    | -        | Enables and disables the MEMOBUS/Modbus communications termination resistor. | OFF                |

## 3.6 Control I/O Connections

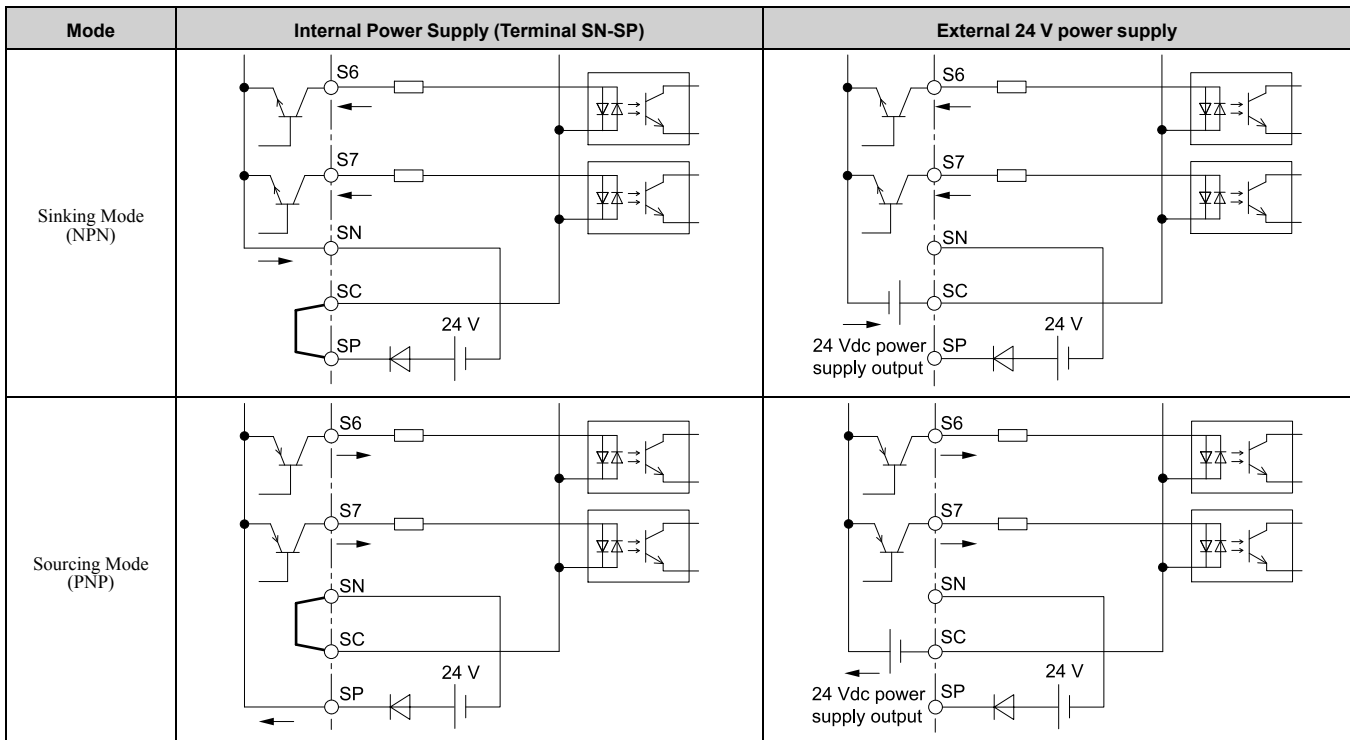
This section gives information about the settings for the listed control circuit I/O signals.

- MFDI (terminals S1 to S7)
- Pulse train output (terminal MP)
- MFAI (terminal A2)
- MFAO (terminal AM)
- MEMOBUS/Modbus communications (terminals D+, D-, AC)

### ◆ Set Sinking Mode/Sourcing Mode

Close the circuit between terminals SC-SP and SC-SN to set the sinking mode/sourcing mode and the internal/external power supply for the MFDI terminals. The default setting for the drive is internal power supply sinking mode.

**NOTICE: Damage to Equipment.** Do not close the circuit between terminals SP-SN. If you close the circuits between terminals SC-SP and terminals SC-SN at the same time, it will cause damage to the drive.



### ◆ Pulse Train Output

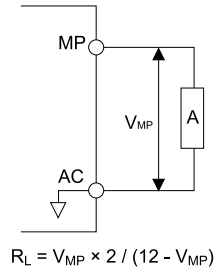
You can use pulse train monitor output terminal MP for sourcing mode or for sinking mode.

- Use for sourcing mode  
The load impedance changes the voltage level of the pulse train output signal.

| Load Impedance<br>$R_L(k\Omega)$ | Output Voltage<br>$V_{MP}(V)$ |
|----------------------------------|-------------------------------|
| 1.5 k $\Omega$ or more           | 5 V or more                   |
| 4.0 k $\Omega$ or more           | 8 V or more                   |
| 10 k $\Omega$ or more            | 10 V or more                  |

**Note:**

Use the formula in [Figure 3.45](#) to calculate the necessary load resistance (k $\Omega$ ) to increase output voltage  $V_{MP}(V)$ .




**A - Load Impedance**

**Figure 3.45 Wiring to Use Pulse Train Output in Sourcing Mode**

- Use in sinking mode  
The external power supply changes the voltage level of the pulse train output signal. Keep the voltage from an external source between 10.8 Vdc to 16.5 Vdc. Adjust the load impedance to keep the current at 16 mA or lower.
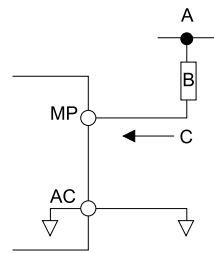
| External Power Supply (V) | Load Impedance (kΩ) | Sinking current (mA) |
|---------------------------|---------------------|----------------------|
| 10.8 Vdc to 16.5 Vdc      | 1.0 kΩ or more      | 16 mA maximum        |




**A - External power supply**  
**B - Load Impedance**

**C - Sinking current**

**Figure 3.46 Wiring to Use Pulse Train Output in Sinking Mode**

◆ **Set the Input Signal for the MFAI Terminal A2**

Use terminal A2 to input a voltage or a current signal. Set the signal type as shown in [Table 3.14](#).

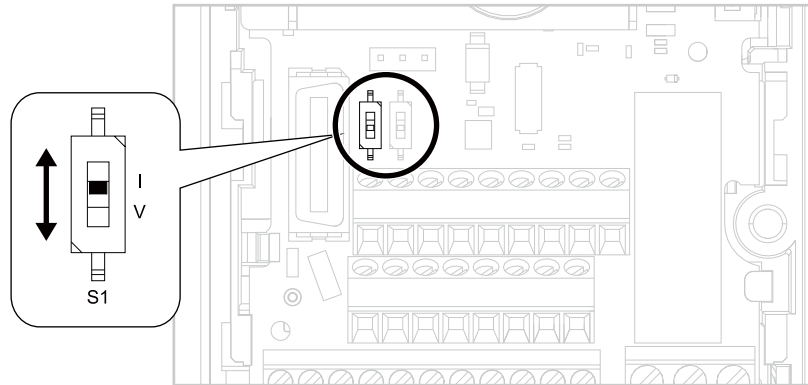

**Figure 3.47 Location of DIP Switch S1**

**Table 3.14 MFAI Terminal A2 Signal Settings**

| Terminal | Input Signal  | DIP Switch Settings |                | Parameter |   |
|----------|---------------|---------------------|----------------|-----------|---|
|          |               | Switch              | Setting        | No.       | Signal Level  |
| A2       | Current input | S1                  | I<br>(Default) | H3-09     | 2: 4 mA to 20 mA/0% to 100% (input impedance: 250 Ω)<br>3: 0 mA to 20 mA/0% to 100% (input impedance: 250 Ω)                                    |
|          | Voltage input |                     | V              |           | 0: 0 V to 10 V/0% to 100% (with zero limit) (input impedance: 20 kΩ)<br>1: 0 V to 10 V/0% to 100% (without zero limit) (input impedance: 20 kΩ) |

**Note:**

Use tweezers or a jig with a tip width of approximately 0.8 mm (0.03 in) to set DIP switches.

◆ **Set the Output Signal for the MFAO Terminal AM**

Set the signal type for terminal AM to voltage or current output. Use jumper S5 and H4-07 [Terminal AM Signal Level Select] to set the signal type.

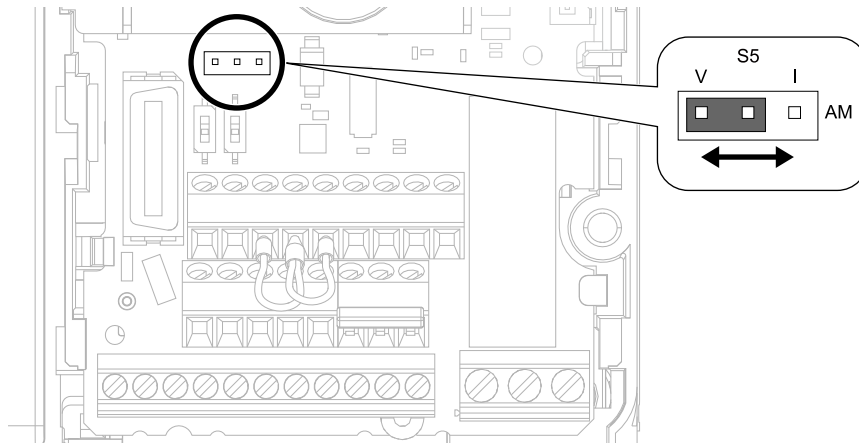
 
 


Figure 3.48 Location of Jumper Switch S5

| Terminal | Types of Output Signals  | Jumper S5   | Parameter |                  |
|----------|--------------------------|---|-----------|------------------|
|          |                          |   | No.       | Signal Level     |
| AM       | Voltage output (Default) |  | H4-07     | 0: 0 V to 10 V   |
|          | Current output           |  |           | 2: 4 mA to 20 mA |

◆ **Switch ON Termination Resistor for MEMOBUS/Modbus Communications**

When the drive is the last slave in a MEMOBUS/Modbus communications, set DIP switch S2 to the ON position. This drive has a built-in termination resistor for the RS-485 interface.

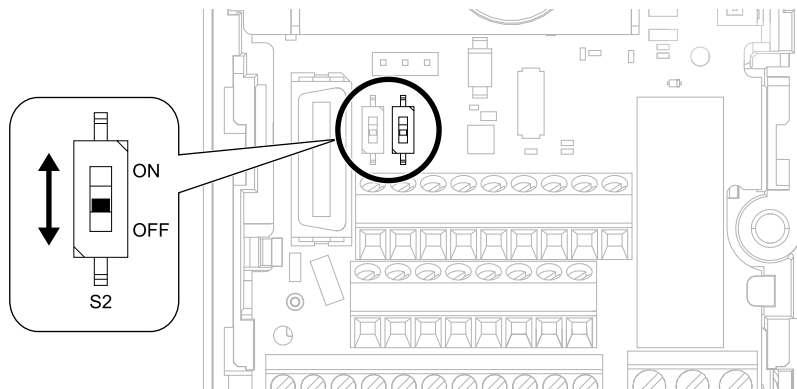


Figure 3.49 Location of DIP Switch S2

Table 3.15 MEMOBUS/Modbus Communications Termination Resistor Setting


| DIP switch S2 | Description                               |
|---------------|---|
| ON            | The built-in termination resistor is ON.  |
| OFF (Default) | The built-in termination resistor is OFF. |



## 3.7 Connect the Drive to a PC

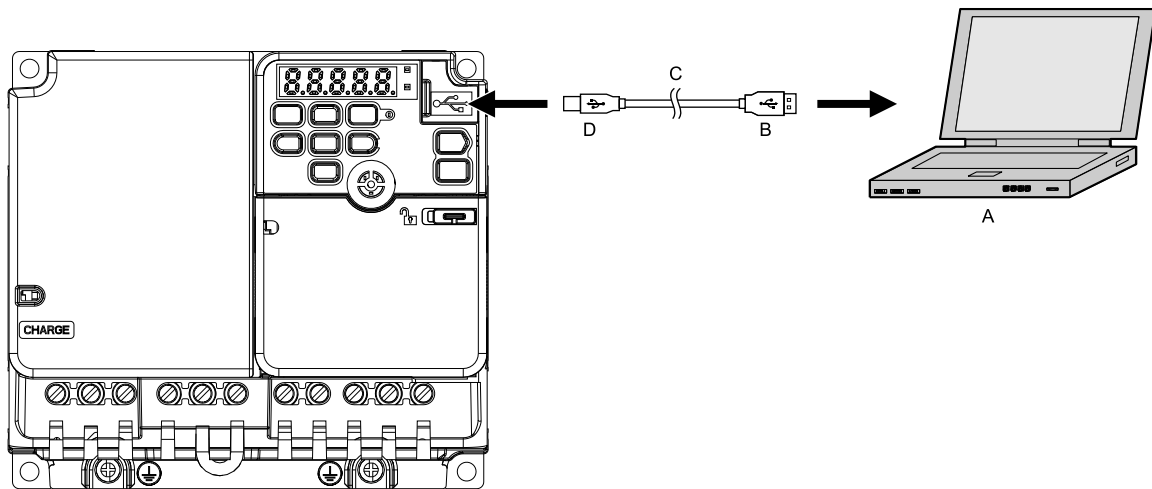The drive has a mini-B type USB port.

You can use a USB cable (USB 2.0, type: A - mini-B) to connect the drive to a type-A USB port on a PC. After you connect the drive to the PC, you can use Yaskawa DriveWizard software to monitor drive performance and manage parameter settings.



A - PC  
B - Type-A connector

C - USB 2.0, type A - mini-B cable  
D - Mini-B type connector

Figure 3.50 Connect to a PC (USB)

Yaskawa recommends that you use a USB cable with connectors connected with shielded wires.

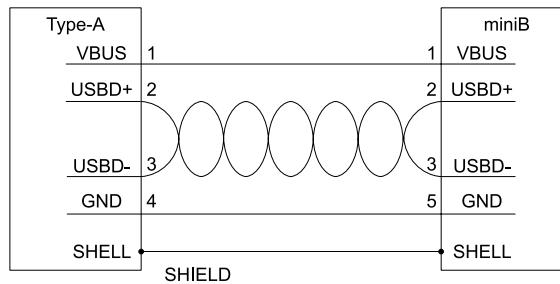


Figure 3.51 Recommended USB Cable

## 3.8 External Interlock

For applications that will have unwanted effects on the system if the drive stops, make an interlock between MFDO terminals set to  $H2-xx = E$  [MFDO Function Selection = Fault] and  $H2-xx = 6$  [Drive Ready].

### ◆ Drive ready

When the drive is operating or is prepared to accept a Run command, the MFDO terminal to which *Drive Ready* [ $H2-xx = 6$ ] is set will activate.

In these conditions, *Drive Ready* is OFF and the drive ignores Run commands:

- The drive is de-energized
- During a fault
- There is problem with the control power supply
- There is a parameter setting error that will not let the drive run, although a Run command is entered
- An overvoltage or undervoltage fault occurs when the Run command is entered
- The drive is in Programming Mode.

### ◆ Interlock Circuit Example

Refer to [Figure 3.52](#) for an example of how two drives that run one application use the Drive Ready and Fault output signals to interlock with the controller.

| Terminal   | Output Signal | Parameter Settings for Output Signal |
|------------|---------------|--------------------------------------|
| MA, MB, MC | Fault         | H2-01 = E                            |
| P1-C1      | Drive ready   | H2-02 = 6                            |

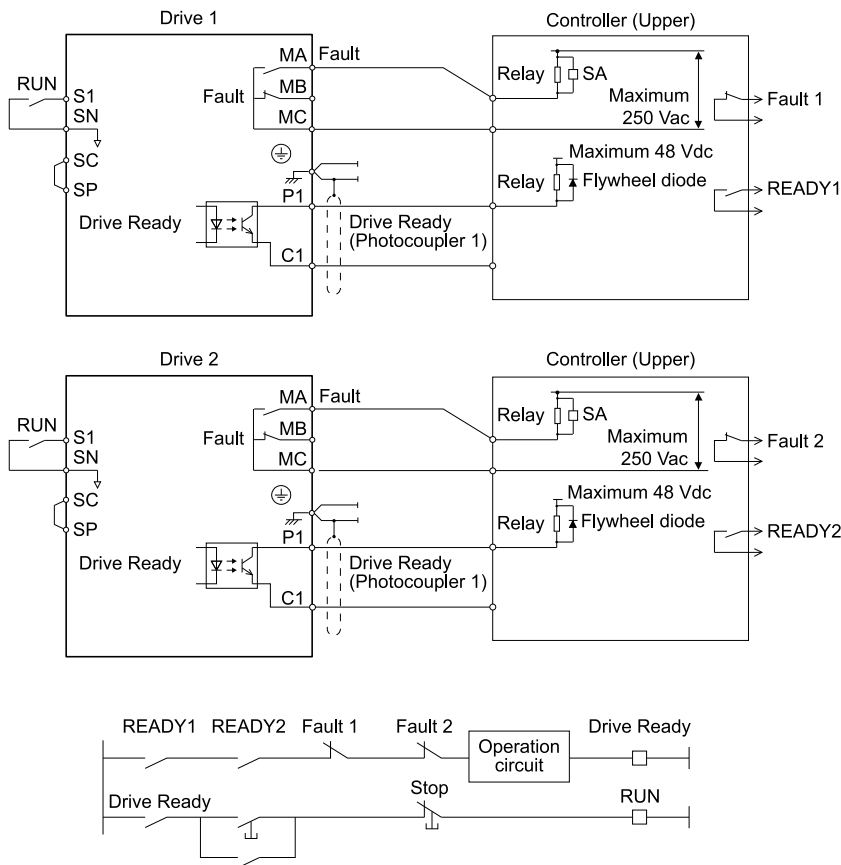


Figure 3.52 Interlock Circuit Example

## 3.9 Braking Resistor Installation

A braking resistor or braking resistor unit (dynamic braking option) helps stop the motor quickly and smoothly when there is high load inertia. If you try to decelerate a motor in less time than usual for a coast to stop, the motor will rotate faster than the synchronous speed that aligns with the set frequency. This will cause the motor to become an induction generator. The inertia energy of the motor and regenerate to the drive and charge the drive DC bus capacitor and increase the voltage. If the voltage is more than the overvoltage level, an *ov* [Overvoltage] will occur. To prevent these overvoltage faults, a dynamic braking option is necessary.

### WARNING!

Set  $L3-04 = 0$  [Stall Prevention during Decel = Disabled] when you operate the drive with:

- a regenerative converter
- regenerative unit
- braking resistor
- braking resistor unit.

If you set the parameter incorrectly, the drive can decelerate for too long and cause serious injury or death.

**NOTICE: Damage to Equipment.** Before you connect a dynamic braking option to the drive, make sure that qualified personnel read and obey the Braking Unit and Braking Resistor Unit Installation Manual (TOBPC72060001). If you do not read and obey the manual or if personnel are not qualified, it can cause damage to the drive and braking circuit.

### Note:

- Select the correct braking circuit size to dissipate the power that is necessary to decelerate the load in the correct time. Before you run the drive, make sure that the braking circuit can dissipate the energy for the set deceleration time.
- To install a dynamic braking option, set  $L8-01 = 0$  [3% ERF DB Resistor Protection = Disabled].

**WARNING! Fire Hazard.** Do not connect a braking resistor to terminals +1 or -. Use terminals B1 and B2 for the braking resistor connections. If you connect a braking resistor to the incorrect terminals, it can cause damage to the drive and braking circuit and serious injury or death.

**NOTICE:** Connect braking resistors to the drive as shown in the connection diagram examples. If you wire the braking circuits incorrectly, it can cause damage to the drive or equipment.

To connect a Yaskawa ERF series braking resistor to the drive, set  $L8-01 = 1$  [Enabled].

To use a non-ERF-type braking resistor, connect a thermal overload relay between the drive and the braking resistor and set a circuit to turn OFF the drive power at the trip contacts of the thermal overload relay.

### ◆ Install a Braking Resistor: ERF-Type

Connect the braking resistor to drive models B001 to B018, 2001 to 2021, and 4001 to 4012 as shown in [Figure 3.53](#).

When you use a braking resistor, set  $L8-01 = 1$  [3% ERF DB Resistor Protection = Enabled] and set one of the MFDO parameters  $H2-01$  to  $H2-03 = D$  [MFDO Function Selection = Braking Resistor Fault]. Use a sequence to turn OFF the power with a MFDO.

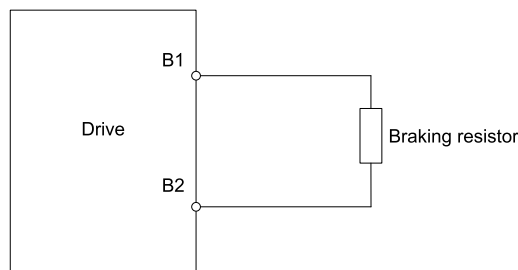



Figure 3.53 Install an ERF-Type Braking Resistor

### ◆ Install a Braking Resistor Unit: LKEB-Type

Connect the braking resistor unit as shown in [Figure 3.54](#). To install a braking resistor unit, set  $L8-01 = 0$  [3% ERF DB Resistor Protection = Disabled].

This product has a built-in braking transistor.


To prevent overheating the braking resistor unit, set a sequence to de-energize the drive at the trip contacts of the thermal overload relay.

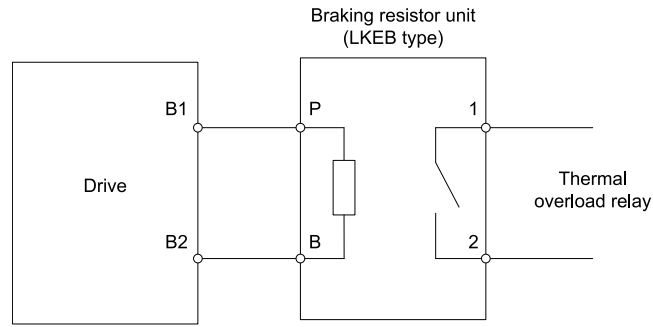

**Figure 3.54 Install a Braking Resistor Unit: LKEB-Type**

#### ◆ Dynamic Braking Option Overload Protection

To prevent overheating the dynamic braking option, set a sequence to de-energize the drive at the trip contacts of the thermal overload relay.

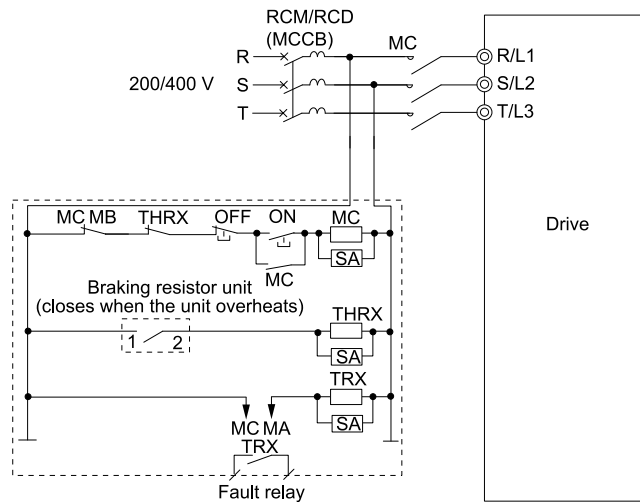

**Figure 3.55 Power Supply Interrupt for Overheat Protection Example**

**WARNING! Fire Hazard.** When you use a braking unit, use a thermal relay on the braking resistors and set a fault contact output for the braking resistor unit to disconnect drive main power through an input contactor. Incorrect braking circuit protection can cause the resistors to become too hot and cause serious injury or death.

## 3.10 Drive Wiring Protection

### ◆ Installing a Residual Current Monitoring/Detection (RCM/RCD)

When the drive output switches at high speeds, it causes high frequency leakage current. To prevent electrical shock and fires caused by ground fault protection that is not sufficient, install an RCM/RCD.

Use a high frequency RCM/RCD at the power input side of the drive and make sure that each drive has a minimum cumulative sensitivity amperage of 30 mA. The specialized breaker detects only the leakage current from frequency bands that are dangerous to humans.

If a device does not have protection against high frequencies, high frequency leakage currents can cause the device to malfunction. If you have a malfunction on a device that is not protected, decrease the carrier frequency of the drive, switch to a better breaker, or use an RCM/RCD with a minimum cumulative sensitivity amperage of 200 mA for each drive.

These conditions can have an effect on leakage current:

- Drive capacity
- Carrier frequency
- Wiring distance and types of motor cables
- EMI/RFI filter

To prevent damage and injury to personnel and drives, use a high-frequency RCM/RCD that is rated for AC and DC power supplies.

**Note:**

Yaskawa recommends these RCMs/RCDs, which are designed to operate with high frequencies:

- Mitsubishi Electric Corporation, NV series
- Schneider Electric, NS series

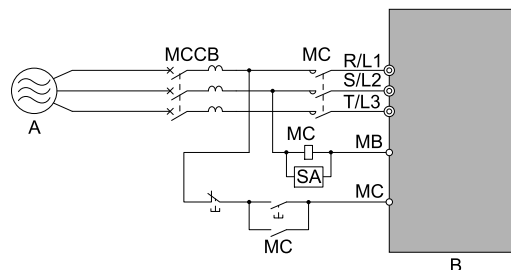
You can use a molded-case circuit breaker (MCCB) as a replacement for an RCM/RCD that is upstream in the power supply system.

### ◆ Installing a Molded-Case Circuit Breaker (MCCB) or Residual Current Monitor/Device (RCM/RCD)

Install a molded-case circuit breaker (MCCB) or a residual current monitor/device (RCM/RCD) for line protection between the power supply and main circuit power supply input terminals R/L1, S/L2, and T/L3. The MCCB or RCM/RCD gives overload protection and also prevent damage to the main circuit and the devices that are wired to the main circuit.

Use the information in this section to select the correct MCCB or RCM/RCD and to safely connect the device.

- The capacity of the MCCB or RCM/RCD must be 1.5 to 2 times the rated output current of the drive. Use an MCCB or RCM/RCD as an alternative to overheat protection (150% for one minute at the rated output current) to prevent drive faults.
- When you connect more than one drive or the drive and other device to an MCCB or RCM/RCD, refer to [Figure 3.56](#), use a magnetic contactor (MC), and set a sequence that de-energizes the drive when it outputs errors.



A - Power supply

B - Drive

Figure 3.56 Connect an MCCB

**WARNING! Electrical Shock Hazard.** Use an MCCB, RCM/RCD, or Magnetic Contactor (MC) to de-energize the drive before you wire the main circuit terminal. If the main circuit terminal is energized during wiring, it will cause serious injury or death.

## 3.11 Dynamic Braking Option, Motor Protection

### ◆ Install an Electromagnetic Contactor (MC) at the Input Side of the Drive

You can use an MC as an alternative to a molded case circuit breaker (MCCB) when:

- The protective functions of the drive have been triggered
- An emergency stop occurred, and the sequence de-energizes the drive.

If an MC on the input side of the drive (primary side) stops the drive, regenerative braking will not operate, and the drive will coast to stop.

**NOTICE:** *When you connect electromagnetic switches or magnetic contactors to the output motor circuits, make sure that you sequence them correctly. If the output motor circuit sequence is incorrect, it can cause damage to the drive.*

**NOTICE:** *Damage to Equipment. Do not energize and de-energize the drive more frequently than one time each 30 minutes. If you frequently energize and de-energize the drive, it can cause drive failure.*

**Note:**

- When machinery must not restart after recovery from a momentary power loss that occurred during run, install an MC at the input side of the drive and set a sequence that does not automatically set the Run command to ON after recovery of power.
- When it is necessary to stop momentary power loss, for example to maintain a circuit that has momentary power loss, use a delayed-release MC.
- Use an MC (magnetic contactor) to make sure that you can fully remove power to the drive when necessary. Wire the MC to open when a fault output terminal is triggered.

### ■ Protect the Braking Resistor/Braking Resistor Unit

Use an MC on the input side (primary side) to prevent damage to the braking resistor/braking resistor unit.

**WARNING! Fire Hazard.** *When you use a braking unit, use a thermal relay on the braking resistors and set a fault contact output for the braking resistor unit to disconnect drive main power through an input contactor. Incorrect braking circuit protection can cause the resistors to become too hot and cause serious injury or death.*

### ◆ Installing a Thermal Overload Relay on the Drive Output

A thermal overload relay disconnects the power line to the motor during a motor overload condition to prevent damage to the motor.

Install a thermal overload relay between the drive and motor in these conditions:

- When you operate more than one motor with one drive
- When you operate the motor directly from the power line with a power line bypass

When you operate one motor with one drive, it is not necessary to install a thermal overload relay. The drive has electronic motor overload protection in the drive software.

**Note:**

- When you install a thermal overload relay, set parameter  $LI-01 = 0$  [*Motor Overload (oLI) Protection = Disabled*].
- Set up a sequence that will trip an external fault (coast to stop) for the contacts of the thermal overload relay.

### ■ General Precautions When Using Thermal Overload Relays

When you use a motor thermal overload relay on the drive output to prevent nuisance trips and overheating of the motor at low speeds, be sure to think about these application precautions:

- Operation of a low speed motor
- When you operate more than one motor with one drive
- Length of the motor cables
- Nuisance tripping because of high drive carrier frequency

#### Operation of a Low Speed Motor

Usually, you use thermal overload relays on general-purpose motors (standard motors). When a drive drives a general-purpose motor, the motor current is approximately 5% to 10% more than with a commercial power supply. When a motor with a shaft-driven fan operates at low speeds, the cooling capacity decreases. This can cause the motor to overheat when the load current is in the motor rated value. Enable the electronic thermal protection in the drive when possible to prevent this problem.

The electronic thermal overload function uses the relation between the speed and heat characteristics in the variable speed control range to simulate the cooling ability of general-purpose motors and forced-vented motors to prevent damage to the motor.

**When You Operate More than One Motor with One Drive**

To disable the overload protection function of the electronic thermal protector of the drive, set  $LI-01 = 0$  [*Motor Overload (oL1) Protection = Disabled*].

**Note:**

If you operate more than one motor from one drive, you cannot use the electronic thermal protection of the drive.

**Length of the Motor Cables**

If you use long motor cables with a high carrier frequency, the increased leakage current can cause nuisance tripping of the thermal relay. To prevent this, decrease the carrier frequency or increase the tripping level of the thermal overload relay.

**Nuisance Tripping Because of High Drive Carrier Frequency**

High carrier frequency PWM drives make current waveforms that can increase the temperature in overload relays. It may be necessary to increase the trip level setting when encountering nuisance triggering of the relay.

**WARNING! Fire Hazard.** Before you increase the detection level of the thermal relay, make sure that a secondary problem is not the cause of the overload. Make sure that you know the local codes for electrical wiring, then adjust the electrothermal settings. Incorrect thermal relay adjustment and incorrect wiring can cause serious injury or death.

## 3.12 Improve the Power Factor

### ◆ Connect an AC Reactor or a DC Reactor

AC reactors and DC reactors decrease surges in current and improve the power factor on the input side of the drive.

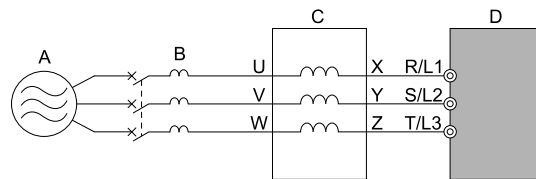
Connect an AC reactor or a DC reactor to the input side (primary side) in the these conditions:

- To decrease harmonic current or improve the power factor of the power supply
- When there is switching of phase advancing capacitor
- With a large capacity power supply transformer (600 kVA or more).

**Note:**

- You can use an AC reactor and DC reactor together.
- When you connect a thyristor converter (for example, a DC drive) to the same power supply system, use an AC reactor.
- The main circuit terminal block for the drive, and the terminal blocks for the AC and DC reactors come in different shapes. Correctly prepare the ends of the wiring.

### ■ Connect an AC Reactor




A - Power Supply  
B - MCCB

C - AC reactor  
D - Drive

Figure 3.57 AC Reactor Connection Example

### ■ Connect a DC Reactor

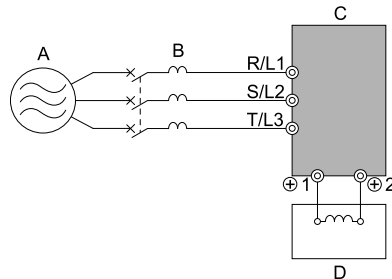When you install a DC reactor, remove the jumper between terminals +1 and +2. If you will not use a DC reactor, do not remove the jumper. Refer to [Figure 3.58](#) for an example of how to wire the DC reactor.



A - Power Supply  
B - MCCB

C - Drive  
D - DC reactor

Figure 3.58 DC Reactor Connection Example

**Note:**

You cannot connect a DC reactor to drive models B001 to B018.

For single-phase drives, an AC reactor has the same effect as a DC reactor. To improve the power factor on single-phase drives, install an AC reactor on the drive input side.



## 3.13 Prevent Switching Surge

### ◆ Connect a Surge Protective Device

A surge protective device decreases the surge voltage generated when you switch an inductive load near the drive. Inductive loads include:

- Magnetic contactors
- Electromagnetic relays
- Magnetic valves
- Solenoids
- Magnetic brakes.

Always use a surge protective device or diode with inductive loads.

**Note:**

Do not connect a surge protective device to the drive output side.

## 3.14 Decrease Noise

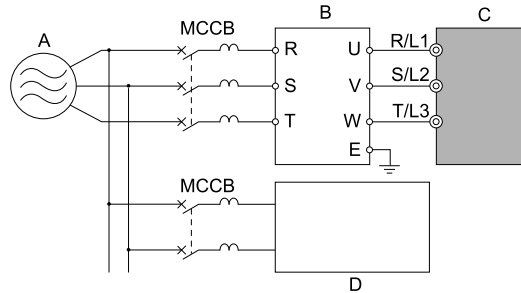
### Note:

The main circuit terminal block for the drive and the terminal blocks for the AC and DC reactors come in different shapes. Correctly prepare the ends of the wiring.

### ◆ Connect a Noise Filter to the Input Side (Primary Side)

High-speed switching makes noise in the drive output. This noise flows from the drive to the power supply, and can have an effect on other equipment. Install a noise filter to the input side of the drive to decrease the quantity of noise that flows to the power supply. A noise filter will also stop noise from entering the drive from the power supply.

- Use a noise filter specially designed for drives.
- Install the noise filter as close as possible to the drive.



A - Power supply

B - Input side (primary side) noise filter

C - Drive

D - Other controller

Figure 3.59 Example of Connecting the Noise Filter on the Input Side (Primary Side)

### Note:


Drive models GA50CxxxxExx have built-in input noise filters. When you use these drives, make sure that the filter specifications align with the application and applicable regulations. Refer to [European Standards on page 150](#) for more information.

### ◆ Connect a Noise Filter to the Output Side (Secondary Side)

A noise filter on the output side of the drive decreases inductive noise and radio frequency interference.

Figure 3.60 shows an example of noise filter wiring.

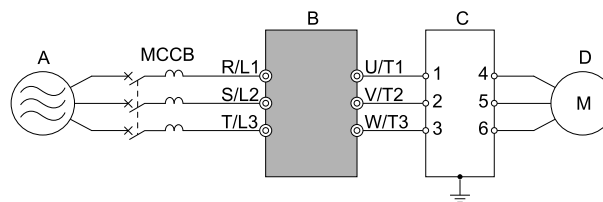**NOTICE:** Do not connect phase-advancing capacitors, LC/RC noise filters, or leakage breakers (RCM/RCD) to the motor circuit. If you connect these devices to the output circuits, it can cause damage to the drive and connected equipment.



A - Power supply

B - Drive

C - Noise filter on output side (secondary side)

D - Motor

Figure 3.60 Example of Connecting the Noise Filter on the Output Side (Secondary Side)

### Note:

#### Glossary

#### • Radio frequency interference:

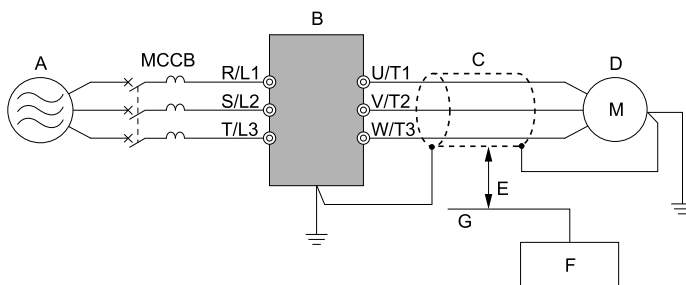
Electromagnetic waves radiated from the drive and cables make noise through the full radio bandwidth that can have an effect on nearby devices.

#### • Inductive noise:

The noise from electromagnetic induction can have an effect on the signal line and can cause the controller to malfunction.

### ■ Prevent Inductive Noise

In addition to installing a noise filter, you can also run all wiring through a grounded metal conduit to decrease inductive noise occurring at the output side. Put the cables a minimum of 30 cm (11.8 in) away from the signal line to prevent induced noise. Ground the cables to metal conduits.



- A - Power supply
- B - Drive
- C - Shielded motor cable
- D - Motor
- E - Minimum of 30 cm (11.8 in) apart
- F - Controller
- G - Signal line


Figure 3.61 Prevent Inductive Noise

### ■ Decrease Radio Frequency Interference

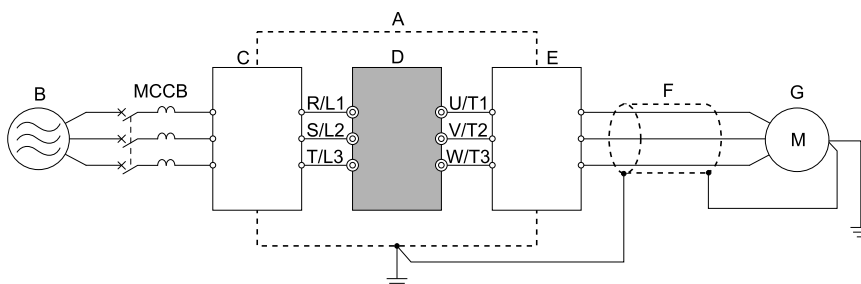The drive, input lines, and output lines generate radio frequency interference. Use noise filters on input and output sides and install the drive in a steel box to decrease radio frequency interference.

**Note:**

Keep the cable between the drive and motor as short as possible.



- A - Steel box
- B - Power supply
- C - Noise filter
- D - Drive
- E - Noise filter
- F - Shielded motor cable
- G - Motor

Figure 3.62 Decrease Radio Frequency Interference

## 3.15 Protect the Drive during Failures

### ◆ Factory-Recommended Branch Circuit Protection for UL Listing

Use branch circuit protection to protect against short circuits and to maintain compliance with UL61800-5-1. Yaskawa recommends connecting semiconductor protection fuses on the input side for branch circuit protection. Refer to *Three-Phase 400 V Class on page 101*, *Three-Phase 200 V Class on page 100*, and *Single-Phase 200 V Class on page 100* for more information.

**WARNING! Electrical Shock Hazard.** After the drive blows a fuse or trips an RCM/RCD, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

- 200 V class

Use the fuses specified in this document to prepare the drive for use on a circuit that supplies not more than 31,000 RMS and not more than 240 Vac when there is a short circuit in the power supply.

- 400 V class

Use the fuses specified in this document to prepare the drive for use on a circuit that supplies not more than 31,000 RMS and not more than 480 Vac when there is a short circuit in the power supply.

The built-in short circuit protection of the drive does not provide branch circuit protection. The user must provide branch circuit protection as specified by the National Electric Code (NEC), the Canadian Electric Code, Part I (CEC), and local codes.

### ■ Single-Phase 200 V Class

Table 3.16 Factory-Recommended Branch Circuit Protection: Single-Phase 200 V Class

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |            | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|------------|---|---|-------------------------|
|             | ND   | HD         | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| B001        | 0.18 (1/6)                                 | 0.1 (1/6)  | 2   | FWH-25A14F  | 25                      |
| B002        | 0.37 (1/4)                                 | 0.25 (1/4) | 3.5   | FWH-25A14F  | 25                      |
| B004        | 0.75 (3/4)                                 | 0.55 (1/2) | 9   | FWH-60B   | 60                      |
| B006        | 1.1 (1.5)                                  | 1.1 (1)    | 15  | FWH-80B   | 80                      |
| B010        | 2.2 (3)                                    | 1.5 (2)    | 20  | FWH-100B  | 100                     |
| B012        | 3.0 (3)                                    | 2.2 (3)    | 30  | FWH-125B  | 125                     |
| B018        | -  | 4.0 (5)    | 40  | FWH-150B  | 150                     |

### ■ Three-Phase 200 V Class

Table 3.17 Factory-Recommended Branch Circuit Protection: Three-Phase 200 V Class

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |            | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|------------|---|---|-------------------------|
|             | ND   | HD         | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| 2001        | 0.18 (1/6)                                 | 0.1 (1/6)  | 3   | FWH-25A14F  | 25                      |
| 2002        | 0.37 (1/4)                                 | 0.25 (1/4) | 3.5   | FWH-25A14F  | 25                      |
| 2004        | 0.75 (3/4)                                 | 0.55 (1/2) | 6   | FWH-25A14F  | 25                      |
| 2006        | 1.1 (1.5)                                  | 0.75 (1)   | 10  | FWH-25A14F  | 25                      |
| 2008        | 1.5 (2)                                    | 1.1 (1.5)  | 12  | FWH-70B   | 70                      |
| 2010        | 2.2 (3)                                    | 1.5 (2)    | 15  | FWH-70B   | 70                      |
| 2012        | 3.0 (4)                                    | 2.2 (3)    | 20  | FWH-70B   | 70                      |
| 2018        | 4.0 (5)                                    | 3.0 (4)    | 30  | FWH-90B   | 90                      |
| 2021        | 5.5 (5)                                    | 4.0 (5)    | 35  | FWH-90B   | 90                      |
| 2030        | 7.5 (10)                                   | 5.5 (7.5)  | 50  | FWH-100B  | 100                     |

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |           | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|-----------|---|---|-------------------------|
|             | ND   | HD        | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| 2042        | 11 (15)                                    | 7.5 (10)  | 70  | FWH-150B  | 150                     |
| 2056        | 15 (20)                                    | 11 (15)   | 90  | FWH-200B  | 200                     |
| 2070        | 18.5 (25)                                  | 15 (20)   | 110   | FWH-200B  | 200                     |
| 2082        | 22 (30)                                    | 18.5 (25) | 125   | FWH-225A  | 225                     |

■ Three-Phase 400 V Class

Table 3.18 Factory-Recommended Branch Circuit Protection: Three-Phase 400 V Class

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |            | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|------------|---|---|-------------------------|
|             | ND   | HD         | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| 4001        | 0.37 (1/2)                                 | 0.37 (1/2) | 3   | FWH-40B   | 40                      |
| 4002        | 0.75 (1)                                   | 0.55 (3/4) | 3.5   | FWH-40B   | 40                      |
| 4004        | 1.5 (2)                                    | 1.1 (2)    | 7   | FWH-50B   | 50                      |
| 4005        | 2.2 (3)                                    | 1.5 (3)    | 9   | FWH-70B   | 70                      |
| 4007        | 3.0 (4)                                    | 2.2 (3)    | 12  | FWH-70B   | 70                      |
| 4009        | 4.0 (5)                                    | 3.0 (4)    | 15  | FWH-90B   | 90                      |
| 4012        | 5.5 (7.5)                                  | 4.0 (5)    | 20  | FWH-90B   | 90                      |
| 4018        | 7.5 (10)                                   | 5.5 (10)   | 30  | FWH-80B   | 80                      |
| 4023        | 11.0 (15)                                  | 7.5 (10)   | 40  | FWH-100B  | 100                     |
| 4031        | 15.0 (20)                                  | 11.0 (15)  | 50  | FWH-125B  | 125                     |
| 4038        | 18.5 (25)                                  | 15.0 (20)  | 60  | FWH-175B  | 175                     |
| 4044        | 22.0 (30)                                  | 18.5 (25)  | 70  | FWH-200B  | 200                     |
| 4060        | 30.0 (40)                                  | 22.0 (30)  | 100   | FWH-200B  | 200                     |

### 3.16 Wiring Checklist

Wire the drive, examine these items, then do a test run.

**Table 3.19 Power Supply Voltage**

| Checked | No. | Item to Check   |
|---------|-----|---|
|         | 1   | The power supply voltage must be in the input voltage specification range of the drive. |

**Table 3.20 Main Circuit Wiring**

| Checked | No. | Item to Check  |
|---------|-----|--|
|         | 1   | <ul style="list-style-type: none"> <li>Put the power supply through a molded-case circuit breaker (MCCB) before it gets to the drive input.</li> <li>Connect an applicable MCCB.</li> </ul>  |
|         | 2   | Correctly wire the power supply to drive terminals R/L1, S/L2, and T/L3, or L/L1 and N/L2.   |
|         | 3   | Correctly wire the drive and motor together.<br>The motor lines and drive output terminals U/T1, V/T2, and W/T3 must align to make the correct phase order.<br><b>Note:</b><br>If the phase order is incorrect, the drive will rotate in the opposite direction.   |
|         | 4   | Use 600 V heat resistant indoor PVC wire for the power supply and motor lines.<br><b>Note:</b><br>Wire gauge recommendations assume use of 600 V class 2 heat-resistant indoor PVC wire.   |
|         | 5   | Use the correct wire gauges for the main circuit.<br><b>Note:</b><br><ul style="list-style-type: none"> <li>When the wiring distance between the drive and the motor is long, use this formula for the voltage drop in the wire: Motor rated voltage (V) <math>\times 0.02 \geq \sqrt{3} \times</math> wire resistance (<math>\Omega/\text{km}</math>) <math>\times</math> wiring distance (m) <math>\times</math> motor rated current (A) <math>\times 10^{-3}</math></li> <li>When the cable between the drive and motor is longer than 50 m (164 ft), use parameter C6-02 [Carrier Frequency Selection] to decrease the carrier frequency.</li> </ul> |
|         | 6   | Correctly ground the drive.  |
|         | 7   | Tighten the main circuit and grounding terminal screws of the drive to a correct tightening torque.  |
|         | 8   | <p>When operating more than one motor from one drive, set up overload protection circuits.</p> <div style="text-align: center;"> <p style="display: flex; justify-content: space-around;"><b>A - Power Supply</b>      <b>C - oL1, oL2: Thermal overload relay</b></p> <p><b>B - Drive</b></p> <p><b>Note:</b><br/>Set H1-03 = 25 [Terminal S3 Function Selection = External Fault (NC-Always-Coast)].</p> </div>  |
|         | 9   | When you use a braking resistor or a braking resistor unit, install an electromagnetic contactor (MC). Correctly install the resistor and make sure that overload protection uses the MC to shut off the power supply.   |
|         | 10  | Make sure you did not install phase advancing capacitors, input noise filters, or ELCBs, GFCIs, RCM/RCDs on the output side of the drive.  |

**Table 3.21 Control Circuit Wiring**

| Checked | No. | Item to Check   |
|---------|-----|---|
|         | 1   | Use twisted-pair cables for all drive control circuit wiring.   |
|         | 2   | Ground the shields of shielded wiring to terminal E (G).  |
|         | 3   | For 3-Wire sequence, set parameters for MFDI terminals and wire control circuits.                                 |
|         | 4   | Correctly install any options.  |
|         | 5   | Examine the drive for other wiring errors.<br>Only use a multimeter to check wiring.                              |
|         | 6   | Tighten the control circuit terminal screws of the drive to a correct tightening torque.                          |
|         | 7   | Pick up all wire clippings.   |
|         | 8   | Make sure that none of the wires on the terminal block touch other terminals or connections.                      |
|         | 9   | Make sure that you isolate the control circuit wiring from main circuit wiring in the control panel or in a duct. |

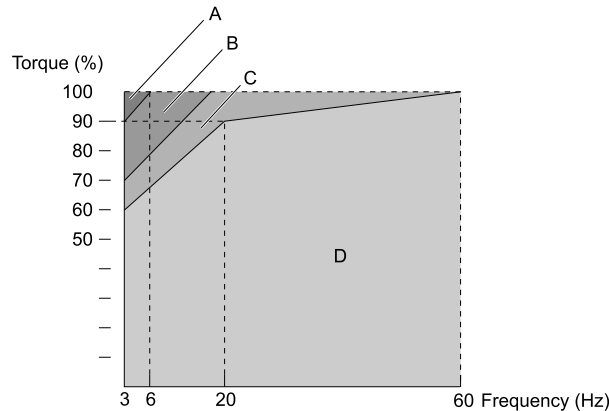
| Checked | No. | Item to Check   |
|---------|-----|---|
|         | 10  | Make sure that control circuit wiring is not longer than 50 m (164 ft).   |
|         | 11  | Make sure that Safe Disable input wiring is not longer than 30 m (98 ft). |

## 3.17 Motor Application Precautions

### ◆ Precautions for Existing Standard Motors

#### ■ Low-Speed Range

When a drive operates a standard motor, it will lose more power compared to operating the motor with a commercial power supply. In the low speed range, the temperature of the motor increases quickly because the motor cannot decrease its temperature when the speed decreases. In these conditions, decrease the load torque of the motor in the low-speed range. Figure 3.63 shows the permitted load characteristics for a Yaskawa standard motor. When 100% continuous torque is necessary at low speeds, use a motor designed to operate with a drive.



A - 25% ED (or 15 min)

B - 40% ED (or 20 min)

C - 60% ED (or 40 min)

D - Continuous operation

Figure 3.63 Permitted Load Characteristics for a Yaskawa Standard Motors

#### ■ Insulation Withstand Voltage

Consider motor voltage tolerance levels and motor insulation in applications with an input voltage of over 440 V or particularly long wiring distances. Use an insulated drive motor.

**NOTICE:** Use an inverter-duty motor or vector-duty motor with reinforced insulation and windings applicable for use with an AC drive. If the motor does not have the correct insulation, it can cause a short circuit or ground fault from insulation deterioration.

#### ■ High-Speed Operation

If you operate a motor more than its rated speed, you can have problems with the motor bearing durability and dynamic balance of the machine. Contact the motor or machine manufacturer.

#### ■ Torque Characteristics

When you operate a motor with a drive, the torque characteristics are different than when you operate the motor directly from line power. Make sure that you know about the load torque characteristics for your application.

#### ■ Vibration

Vibrations could occur in the these conditions:

- Resonance with the natural frequency of machinery  
Use caution if you add a variable-speed drive to applications that operate the motor from line power at a constant speed. If resonance occurs, install shock-absorbing rubber around the base of the motor and enable the Jump frequency control.
- The motor is not balanced  
Use caution if the motor speed is more than the rated motor speed.
- Subsynchronous resonance  
Subsynchronous resonance can occur with long motor shafts and in applications such as turbines, blowers, and fans with high inertia loads.



## ■ Audible Noise

The audible noise of the motor changes when the carrier frequency setting changes. When you use a high carrier frequency, audible noise from the motor is equivalent to the motor noise generated when you operate from line power. If you operate at speeds that are more than the rated rotation speed, the unwanted motor noise increases.

## ◆ Precautions for PM Motors

- Contact Yaskawa or your nearest sales representative to use a non-Yaskawa PM motor.
- You cannot operate a PM motor from a commercial power supply. If you must operate from a commercial power supply, use an induction motor.
- You cannot operate more than one PM motor from one drive. Use an induction motor and a variable-speed control drive.
- In OLV/PM, the motor can operate in the reverse direction for 1/2 turn (electrical angle) at start up.
- The quantity of generated starting torque changes when the control method and motor type change. Verify the starting torque, permitted load characteristics, impact load tolerance, and speed control range before you set up the motor with the drive. Contact Yaskawa or your nearest sales representative to use a motor that does not meet these specifications.
- In OLV/PM control, braking torque is always 125% or less when operating between 20% and 100% speed. A braking resistor unit will not change the value. Braking torque is 50% or less when operating at 20% speed or less.
- When you use a holding brake in OLV/PM control, release the brake before you start the motor. Failure to set the correct timing can cause a decrease in speed. Do not use these configurations in applications with heavy loads, for example conveyors or elevators.
- To restart a coasting motor that is rotating faster than 120 Hz, first use the Short Circuit Braking function to stop the motor. A special braking resistor unit is necessary for Short Circuit Braking. Contact Yaskawa or your nearest sales representative for more information.  
To restart a coasting motor that is rotating slower than 120 Hz, use the Speed Search function.  
If the motor cable is long, use Short Circuit Braking to stop the motor.

### Note:

The Short Circuit Braking function uses the drive to forcefully cause a short across the motor wires to stop the motor before it has time to coast to a stop.

- You can also use EZOLV to operate synchronous reluctance motors (SynRM). Contact Yaskawa or your nearest sales representative for more information.
- If *oC* [Overcurrent], *STPo* [Motor Step-Out Detected], or *LSo* [Low Speed Motor Step-Out] occur during restart, try Speed Search again and use the Short Circuit Braking function when you start to adjust the motor.

## ◆ Precautions for Specialized Motors

### ■ Pole Change Motors

The rated current of pole change motors is different than standard motors. Check the maximum current of the motor before you select a drive. Always stop the motor before you switch between the number of motor poles. If you change the number of poles while the motor is rotating, the overvoltage from regeneration or the overcurrent protection circuitry will make the motor coast to stop.

### ■ Submersible Motors

The rated current of a submersible motor is more than the rated current of a standard motor. Use a sufficiently large motor cable that will not let voltage drop decrease the maximum torque level.

### ■ Explosion-Proof Motors

You must test the motor and the drive together for explosion-proof certification. You must also test existing installations of explosion-proof motors. The drive is not designed for explosion-proof areas. Install the drive in a safe location.

The encoder used with pressure-resistant explosion-proof motors is intrinsically safe. When wiring between the drive and encoder, always connect through a specialized pulse coupler.

### ■ Geared Motors

The continuous speed range is different for different lubricating methods and manufacturers. For oil lubrication, continuous operation in the low-speed range can cause burnout. Contact the manufacturer for more information about applications where operating at more than the rated frequency is necessary.

### ■ Single-Phase Motors

Variable speed drives are not designed to operate with single-phase motors. The drive is for use with three-phase motors only. If you use capacitors to start the motor, it can cause a high frequency current to flow to the capacitors and can damage the capacitors. A split-phase start or a repulsion start can burn out the starter coils because the internal centrifugal switch is not activated.

### ■ Motors with Brakes

If you use a drive to operate a motor that has a brake connected to the output side, low voltage levels can cause the brake to possibly not release at start. Use a motor with a brake that has a dedicated source of power for the brake. Connect the brake power supply to the power supply side of the drive. Motors with built-in brakes make noise when operating at low speeds.

---

### ◆ Notes on the Power Transmission Mechanism

For power transmission machinery that uses oil to lubricate gearboxes, transmissions, or reduction gears, make sure that you use precaution if you operate the machinery continuously at low speed. Oil does not lubricate the system as well at low speeds. If you operate at frequencies higher than the rated frequency, it can cause problems with the power transmission mechanism. These problems include audible noise, decreased service life, and decreased durability.

# Startup Procedure and Test Run

---

|      |  |     |
|------|--|-----|
| 4.1  | Section Safety .....   | 108 |
| 4.2  | Overview of Keypad Components and Functions .....  | 109 |
| 4.3  | Set up the Drive with General-Purpose Setup Mode.....  | 112 |
| 4.4  | Drive Mode and Programming Mode.....   | 114 |
| 4.5  | Start-up Procedures .....  | 118 |
| 4.6  | Items to Check before Starting Up the Drive.....   | 123 |
| 4.7  | Keypad Operation .....   | 124 |
| 4.8  | Automatic Parameter Settings Optimized for Specific Applications<br>(Application Presets)..... | 129 |
| 4.9  | Auto-Tuning .....  | 130 |
| 4.10 | Test Run .....   | 137 |
| 4.11 | Fine Tuning during Test Runs (Adjust the Control Function).....                                | 139 |
| 4.12 | Test Run Checklist .....   | 144 |

## 4.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### WARNING

#### Electrical Shock Hazard

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

#### Sudden Movement Hazard

**When you use a mechanical holding brake with the drive in a lifting application, you must close the brake if an input terminal triggers the Baseblock command to stop drive output.**

If you enter the baseblock command, the motor will suddenly coast and the load will slip, which can cause serious injury or death.

**When you use the drive in a lifting application, you must also install external safety circuitry. The drive does not have protection against accidental load drops in lifting applications. Install electrical and/or mechanical safety circuit mechanisms that are isolated from the drive circuitry.**

If you do not use external safety circuitry, the drive could drop the load and cause serious injury or death.

## 4.2 Overview of Keypad Components and Functions

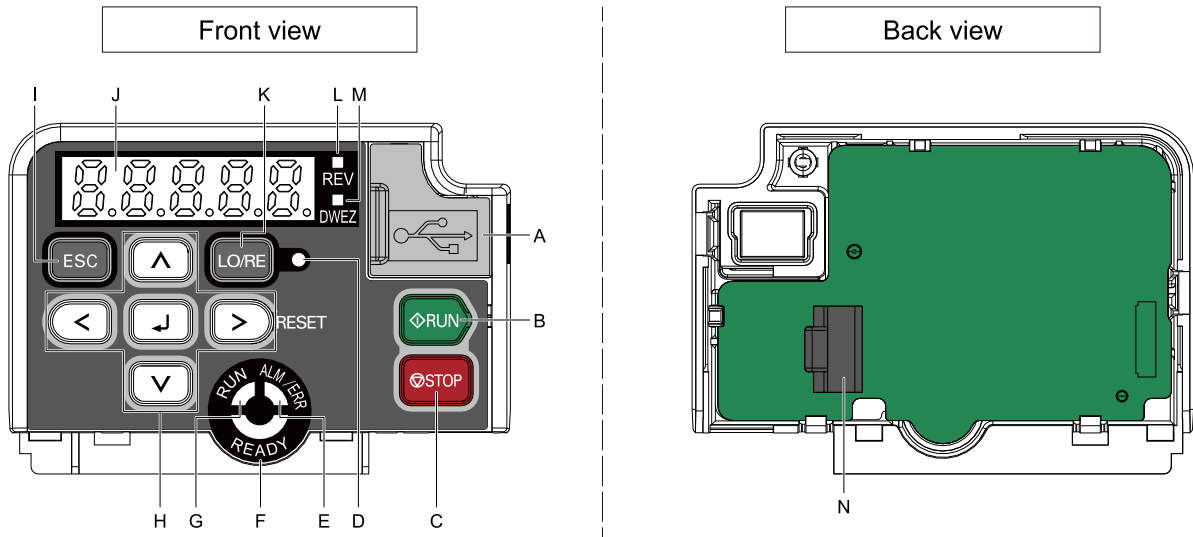













 







Figure 4.1 Keypad

Table 4.1 Keypad Components and Functions

| Symbol | Name   | Function  |
|--------|--|---|
| A      | USB Terminal Pass-through  | Pass-through point to connect a USB cable to the drive to support the DriveWizard PC tool and the DriveWizard Mobile App. Uses a USB cable (USB standard 2.0, type A - mini-B) to connect the drive to a PC, Android smartphone, or tablet.   |
| B      | RUN Key<br>     | Starts the drive in LOCAL Mode.<br>Starts the operation in Auto-Tuning Mode.<br><b>Note:</b><br>Before you use the keypad to operate the motor, push  on the keypad to set the drive to LOCAL Mode.   |
| C      | STOP Key<br>    | Stops drive operation.<br><b>Note:</b><br>Uses a stop-priority circuit. Push  to stop the motor. This will also apply when a Run command (REMOTE Mode) is active at an external Run command source. To disable  priority, set $o2-02 = 0$ [ <i>STOP Key Function Selection = Disabled</i> ].   |
| D      | LO/RE LED<br>   | Illuminated: The keypad controls the Run command (LOCAL Mode).<br>OFF: The control circuit terminal or serial transmission device controls the Run command (REMOTE Mode).<br><b>Note:</b><br>• LOCAL: Use the keypad to operate the drive. Use the keypad to enter Run/Stop commands and the frequency reference command.<br>• REMOTE: Use the control circuit terminal or serial transmission to operate the drive. Use the frequency reference source entered in <i>b1-01</i> and the Run command source selected in <i>b1-02</i> . |
| E      | ALM/ERR LED<br> | Illuminated: The drive detects a fault.<br>OFF: There are no drive faults or alarms.<br>Flashing:<br>• An alarm<br>• Operation Errors<br>• An Auto-Tuning error<br><b>Note:</b><br>The LED will illuminate to identify a fault if the drive detects a fault and an alarm at the same time.  |
| F      | READY LED<br>   | Illuminated: The drive is operating or is ready for operation.<br>OFF:<br>• The drive detects a fault.<br>• There is no fault and the drive received a Run command, but the drive cannot run. For example, in Programming Mode.<br>Flashing: The drive is in <i>Sto</i> [ <i>Safe Torque OFF</i> ] condition.<br>Flashing quickly: The voltage of the main circuit power supply is not in drive nameplate specifications, and the external 24 V power supply provides the only power to the drive.                                    |

## 4.2 Overview of Keypad Components and Functions

| Symbol | Name   | Function   |
|--------|--|--|
| G      | RUN LED<br>                     | <p>Illuminated: The drive is in normal operation.<br/>           OFF: The drive is stopped.</p> <p>Flashing:</p> <ul style="list-style-type: none"> <li>The drive is decelerating to stop.</li> <li>The drive received a Run command, but the frequency reference is 0 Hz.</li> </ul> <p>Flashing quickly:</p> <ul style="list-style-type: none"> <li>When the drive is in LOCAL Mode, the drive received a Run command from the MFDI terminals and is switched to REMOTE Mode.</li> <li>The drive received a Run command from the MFDI terminals when the drive is not in Drive Mode.</li> <li>The drive received a Fast Stop command.</li> <li>The safety function shut off the drive output.</li> <li>The user pushed  on the keypad while the drive is operating in REMOTE Mode.</li> <li>The drive is energized with an active Run command and <math>b1-17 = 0</math> [Run Command at Power Up = Disregard Existing RUN Command].</li> </ul> |
| H      | Left Arrow Key<br>              | Moves the cursor to the left.  |
|        | Up Arrow Key/Down Arrow Key<br> | <ul style="list-style-type: none"> <li>Moves to a different screen.</li> <li>Selects parameter numbers and increments or decrements setting values.</li> </ul>   |
|        | Right Arrow Key (RESET)<br>     | <ul style="list-style-type: none"> <li>Moves the cursor to the right.</li> <li>Resets the drive to clear a fault.</li> </ul>   |
|        | ENTER Key<br>                   | <ul style="list-style-type: none"> <li>Enters parameter values and settings.</li> <li>Selects each mode, parameter, and set value.</li> </ul>  |
| I      | ESC Key<br>                     | <ul style="list-style-type: none"> <li>Goes back to the previous screen.</li> <li>Push and hold to go back to the frequency reference screen (the initial screen).</li> </ul>  |
| J      | LED Display  | Shows parameters, errors, and other data.  |
| K      | LO/RE Selection Key<br>       | <p>Switches drive control for the Run command and frequency reference between the keypad (LOCAL) and an external source (REMOTE).</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The LOCAL/REMOTE Selection Key continuously stays enabled after the drive stops in Drive Mode. If the application must not switch from REMOTE to LOCAL because it will have a negative effect on system performance, set <math>o2-01 = 0</math> [LO/RE Key Function Selection = Disabled] to disable .</li> <li>The drive will not switch between LOCAL and REMOTE when it is receiving a Run command from an external source.</li> </ul>  |
| L      | REV LED<br>                   | Illuminated: The drive received a Reverse run command.   |
| M      | DWEZ LED<br>                  | Illuminated: The drive is In DriveWorksEZ operation.   |
| N      | RJ-45 Connector  | Connects to the drive. Use an RJ-45 8-pin straight through UTP CAT5e extension cable to install the keypad in a different location than the drive.   |

**WARNING! Sudden Movement Hazard.** If you change the control source when  $b1-07 = 1$  [LOCAL/REMOTE Run Selection = Accept Existing RUN Command], the drive can start suddenly. Before you change the control source, remove all personnel from the area around the drive, motor, and load. Sudden starts can cause serious injury or death.

### ◆ Indicator flashing statuses

Refer to [Figure 4.2](#) for the difference between “flashing” and “flashing quickly”.

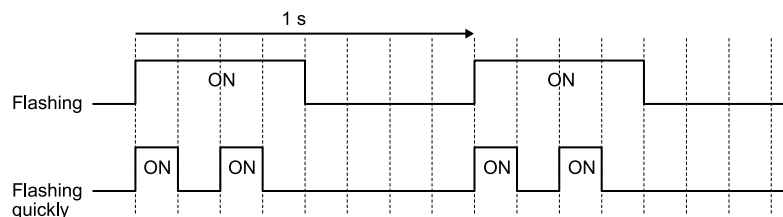


Figure 4.2 About indicator flashing statuses

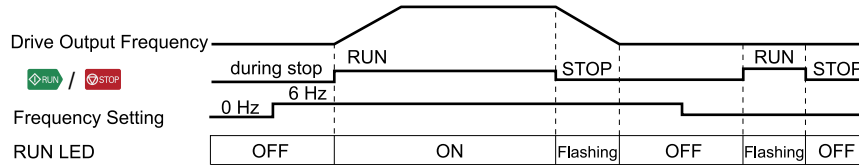


Figure 4.3 Relation between RUN indicator and Drive Operation

### ◆ Keypad Mode and Menu Displays

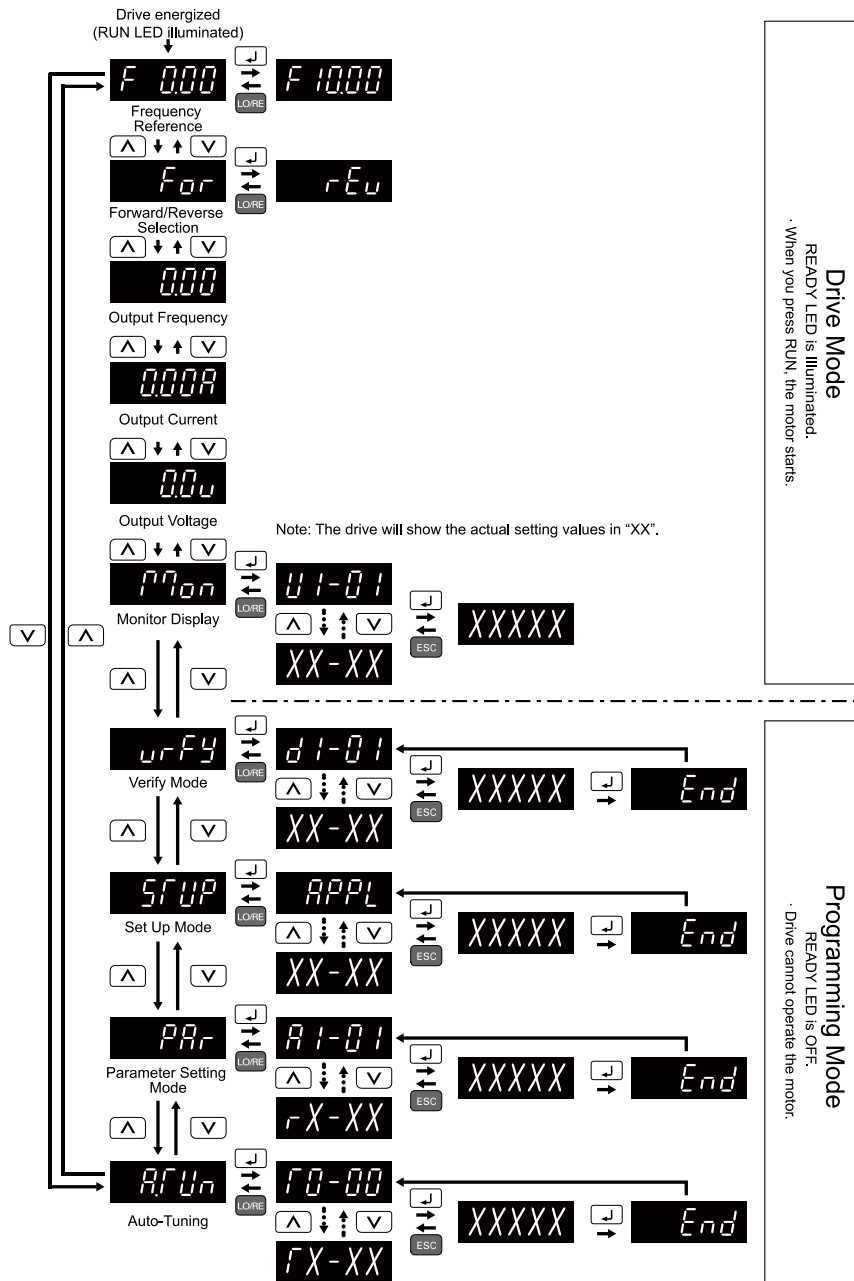


Figure 4.4 Keypad Functions and Display Levels

## 4.3 Set up the Drive with General-Purpose Setup Mode

Drive parameters are in letter groups from A to U. Setup Mode **SRUP** contains only the most frequently used parameters to help you set the drive more easily.

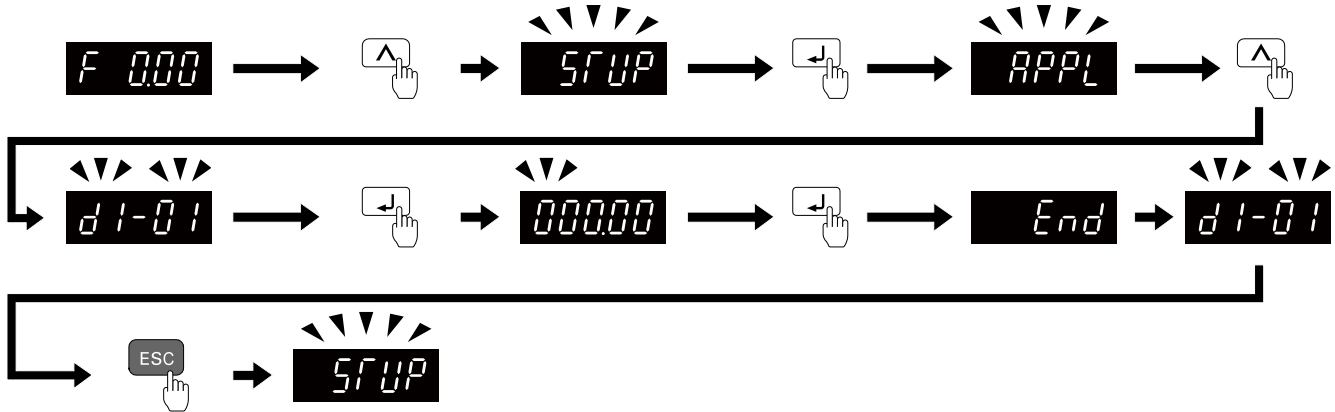


Figure 4.5 Parameters in General-Purpose Setup Mode


Table 4.2 shows the parameters available in Setup Mode. To access parameters not shown in the Setup Mode, use the **PR** menu.

Table 4.2 Parameters in General-Purpose Setup Mode

| User Parameter | Parameter | Name                            |
|----------------|-----------|---------------------------------|
| A2-01          | A1-02     | Control Method Selection        |
| A2-02          | b1-01     | Frequency Reference Selection 1 |
| A2-03          | b1-02     | Run Command Selection 1         |
| A2-04          | b1-03     | Stopping Method Selection       |
| A2-05          | C1-01     | Acceleration Time 1             |
| A2-06          | C1-02     | Deceleration Time 1             |
| A2-07          | C6-01     | Normal / Heavy Duty Selection   |
| A2-08          | C6-02     | Carrier Frequency Selection     |
| A2-09          | d1-01     | Reference 1                     |
| A2-10          | d1-02     | Reference 2                     |
| A2-11          | d1-03     | Reference 3                     |
| A2-12          | d1-04     | Reference 4                     |
| A2-13          | d1-17     | Jog Reference                   |
| A2-14          | E1-01     | Input AC Supply Voltage         |
| A2-15          | E1-03     | V/f Pattern Selection           |
| A2-16          | E1-04     | Maximum Output Frequency        |
| A2-17          | E1-05     | Maximum Output Voltage          |
| A2-18          | E1-06     | Base Frequency                  |
| A2-19          | E1-09     | Minimum Output Frequency        |
| A2-20          | E1-13     | Base Voltage                    |
| A2-21          | E2-01     | Motor Rated Current (FLA)       |
| A2-22          | E2-04     | Motor Pole Count                |
| A2-23          | E2-11     | Motor Rated Power               |
| A2-24          | H4-02     | Terminal AM Analog Output Gain  |
| A2-25          | L1-01     | Motor Overload (oL1) Protection |
| A2-26          | L3-04     | Stall Prevention during Decel   |



**Note:**

- When you change *A1-02 [Control Mode Selection]*, the settings of some parameters automatically change.
- This manual also shows parameters that are not in Setup Mode. Use  menu to set the parameters not shown in the Setup Mode.
- Display parameters change when the *A1-06 [Application Preset]* setting changes.

## 4.4 Drive Mode and Programming Mode

The keypad display of this drive has two modes: Drive Mode and Programming Mode.

- Drive Mode



Use this mode to operate the drive. These operations are available:

- Monitor operation statuses (for example, output frequency, output current, and output voltage)
- Set parameters that you can set while the drive is operating (for example, d1-01 to d1-17). Refer to *Parameter Details on page 459* for more information.

- Programming Mode

Use this mode to set parameters. These operations are available:

- Examine and set the parameters that are not at default settings (Verify Mode)
- See and set the basic parameters necessary for the drive operation (Setup Mode)
- See and set all parameters (Parameter Setting Mode)
- Automatically set motor parameters (Auto-Tuning Mode)

Table 4.3 gives information about the functions you can access when you push  / .

**Note:**

You can use *b1-08 [Run Command Select in PRG Mode]* to set the drive to accept Run commands from an external source while in Programming Mode.

- Set *b1-08 = 0 [Disregard RUN while Programming]* to reject the Run command from an external source while in Programming Mode.
- Set *b1-08 = 1 [Accept RUN while Programming]* to accept the Run command from an external source while in Programming Mode.
- Set *b1-08 = 2 [Allow Programming Only at Stop]* to prevent changes from Drive Mode to Programming Mode.

**Table 4.3 Overview of the Modes**

| Mode  | LED Display | Description                 | Description  | Ref.              |
|---|-------------|-----------------------------|--|-------------------|
| Drive Mode<br>(Operation of the motor and monitoring of operation status) |             | Frequency reference display | You can set and monitor frequency references. Refer to 114 for more information about frequency setting values and how to change them.<br><b>Note:</b><br>You can change what is shown on the keypad when you energize the drive. Use o1-02 [Monitor Selection at Power-up] to set the items. When <i>A1-02 = 6 [Control Method Selection = AOLV/PM]</i> , the display unit is %.<br>100% = Maximum Output Frequency | -                 |
|   |             | Monitor display             | The keypad shows <i>Ux-xx [Monitor]</i> .  | -                 |
|   |             | Output voltage display      | You can monitor the output voltage reference.<br>Use <i>o1-01 [User Monitor Selection]</i> to change the items shown on this display.  | 335               |
|   |             | Output current display      | You can monitor the output current.  | -                 |
|   |             | Output frequency indicator  | You can monitor the frequency output from the drive.   | -                 |
|   |             | Forward/reverse selection   | <i>For</i> : Motor rotates in forward direction<br><i>rEv</i> : Motor rotates in reverse direction<br><b>Note:</b><br>For applications where the motor must not rotate in reverse direction (for example, for fans and pumps), you can use <i>b1-04 [Reverse Operation Selection]</i> to prevent reverse rotation.<br><br>How to set reverse operation <i>rEv</i><br>  | -                 |
| Programming Mode<br>(Parameter Settings)                                  |             | Auto-Tuning Mode            | The drive automatically calculates and sets the motor parameters.  | 130<br>131<br>132 |
|   |             | Parameter Setting Mode      | You can see and set all parameters.  | 116               |
|   |             | Setup Mode                  | You can see and set the basic parameters necessary for drive operation.<br><b>Note:</b><br>The parameters shown change when the setting of <i>A1-06 [Application Preset]</i> changes. Refer to 129 for more information.   | 115               |
|   |             | Verify Menu                 | You can examine and set the parameters that are not at default settings.   | 116               |

## ◆ Drive Mode

These operations are available in Drive Mode:

- Operate and stop the drive
- Show the drive status monitors (for example, frequency reference, output frequency, output current, and output voltage)
- Show the alarm content
- Show the alarm history

### Note:

To operate the drive, select Drive Mode. You can switch to other modes when the drive stops, but the drive must be in Drive Mode to start operation.

These steps show how to set the frequency reference source to LOCAL (keypad) and change the frequency reference from 0 Hz to 6 Hz.

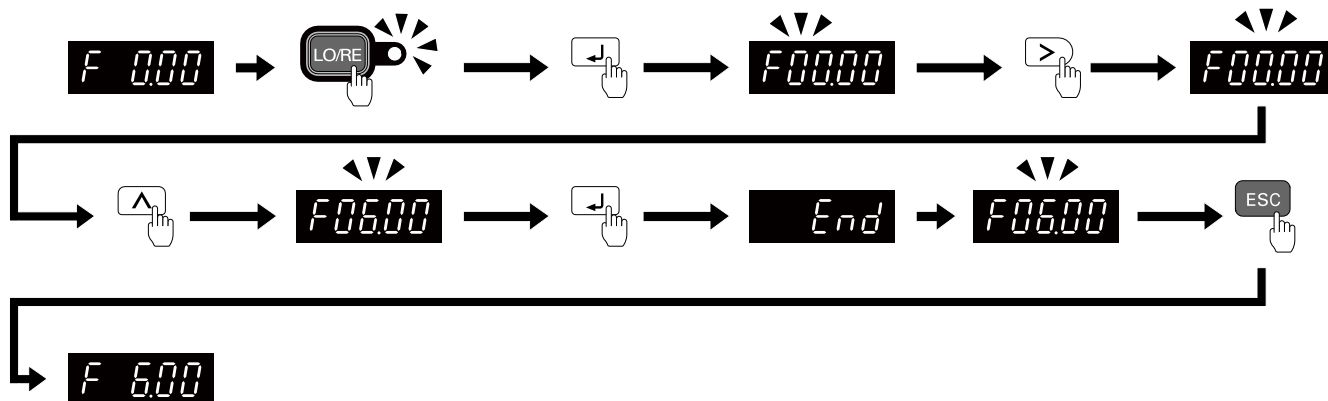


Figure 4.6 Frequency Reference Setting in Drive Mode

### Note:

To prevent an incorrect setting, after you enter the frequency reference, you must push the ENTER key to change the frequency reference. Set *o2-05 = 1* [*Home Mode Freq Ref Entry Mode = Immediate / MOP-style*] to change the frequency reference value without pushing the ENTER key.

## ◆ Programming Mode

In Programming Mode, you can set parameters or do Auto-Tuning. This mode has 4 sub-modes for different programming requirements:

- Verify Menu: Use this mode to examine and set the parameters that are not at default settings.
- Setup Mode: Use this mode to see and set the minimum parameters necessary for drive operation. Refer to [Verify and Set the Changed Parameters \(Verify Menu\) on page 116](#) for more information.
- Parameter Setting Mode: Use this mode to see and set all parameters.
- Auto-Tuning Mode: Use this mode to automatically set the motor parameters necessary for each control method.

### ■ Setup Mode

In Setup Mode, you can see and set the minimum parameters necessary for drive operation. Refer to [Figure 4.7](#) for an example.

#### Note:

1. Refer to [Set up the Drive with General-Purpose Setup Mode on page 112](#) and [Automatic Parameter Settings Optimized for Specific Applications \(Application Presets\) on page 129](#) for more information about Setup mode parameters.
2. Push **APPL** and **↓** to continue to the application selection screen. When you change the setting, it will optimize the parameter for the application. The default setting is 0 [*General-purpose*].
3. To go back to the initial screen, push **ESC**. To change another parameter in Setup Mode, push **↑** or **↓**.

Change *b1-01* [*Frequency Reference Selection 1*] from 1 [*Analog Input*] to 0 [*Keypad*].

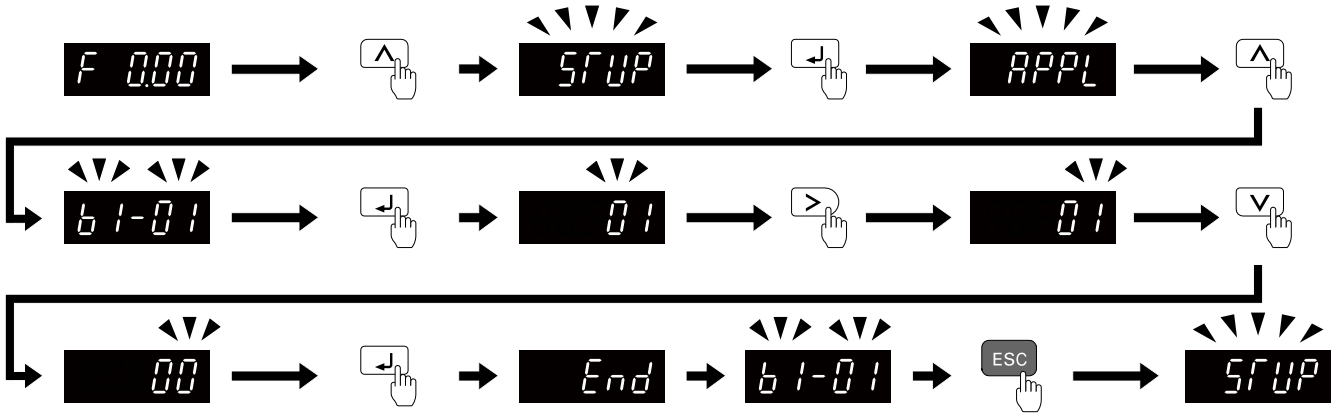


Figure 4.7 Key operation examples in Setup Mode

### ◆ Change Parameter Settings

Show the frequency reference screen in advance.

Note:

Push and hold **ESC** to go back to the frequency reference screen from any screen.

Use these steps to change *C1-01* [Acceleration Time 1] from 1.0 s (default) to 2.0 s.

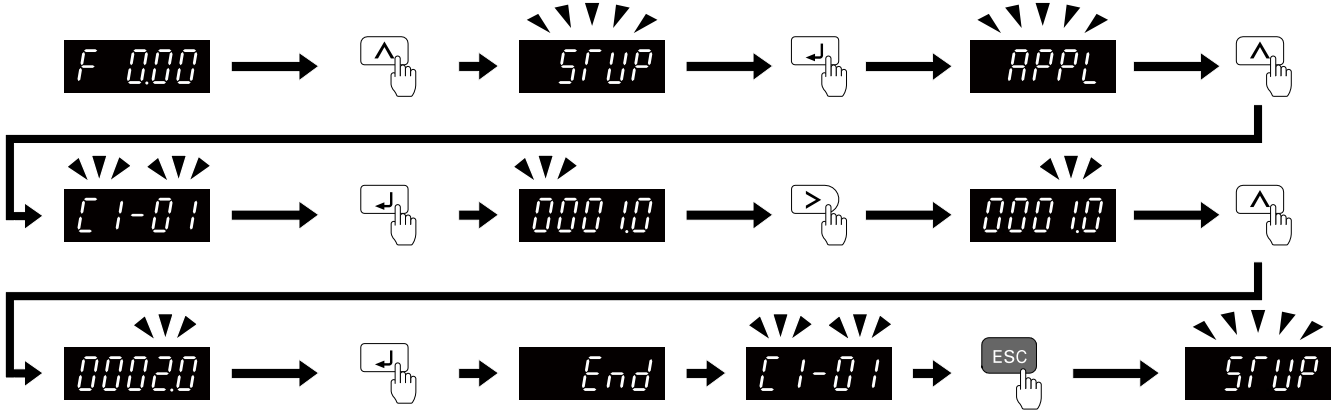


Figure 4.8 Key Operation Examples for Parameter Settings

### ◆ Verify and Set the Changed Parameters (Verify Menu)

Show the frequency reference screen.

Note:

Push and hold **ESC** to return to frequency reference screen from any screen.

Use Verify mode to view all parameters that are not at default settings. This is very useful when you replace a drive. When there are no changes to parameter settings, the display shows *none*. This lets you quickly access and re-edit changed parameters. [Figure 4.9](#) shows the procedure.

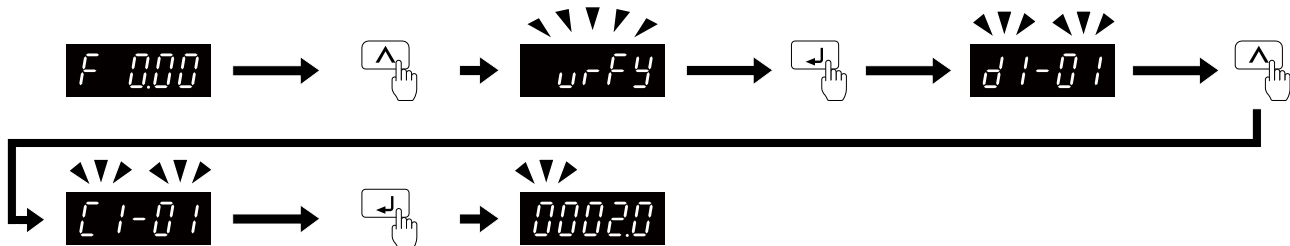


Figure 4.9 Verify and Set the Changed Parameters


## ◆ How to Switch between LOCAL and REMOTE

LOCAL mode lets you use the keypad to input Run commands. REMOTE mode lets you use other sources than the keypad to input Run commands.

**WARNING! Sudden Movement Hazard.** If you change the control source when  $b1-07 = 1$  [LOCAL/REMOTE Run Selection = Accept Existing RUN Command], the drive can start suddenly. Before you change the control source, remove all personnel from the area around the drive, motor, and load. Sudden starts can cause serious injury or death.

You can use  or MFDI functions (LOCAL/REMOTE Selection) to switch between LOCAL and REMOTE.

Note:

1.  illuminates while the drive is in LOCAL Mode.
2. While you are entering a Run command, you cannot switch between LOCAL and REMOTE.

### ■ Use the LO/RE Selection Key on the Keypad to Switch between LOCAL and REMOTE


Each time you push , the mode switches between LOCAL and REMOTE. The LED illuminates in LOCAL Mode.



Figure 4.10 Use the LO/RE Selection Key to Switch between LOCAL and REMOTE

### ■ Use MFDI Terminals (S1 to S7) to Switch between LOCAL and REMOTE

When you set  $H1-xx = 1$  [MFDI Function Selection = LOCAL/REMOTE Selection], you can activate/deactivate the terminal to switch between LOCAL and REMOTE. Set  $H1-xx = 1$  to disable the LO/RE key on the keypad. For information about the MFDI functions, refer to the list in [H1: Digital Inputs on page 603](#).

### 4.5 Start-up Procedures

This section gives the basic steps necessary to start up the drive.

Use the flowcharts in this section to find the most applicable start-up method for your application.

This section gives information about only the most basic settings.

**Note:**

Refer to the *A1-06* section to use an Application Preset to set up the drive.

---

#### ◆ Flowchart A: Connect and Run the Motor with Minimal Setting Changes

Flowchart A shows a basic start-up sequence to connect and run a motor with a minimum of setting changes. Settings can change when the application changes.

Use the drive default parameter settings for basic applications where high precision is not necessary.

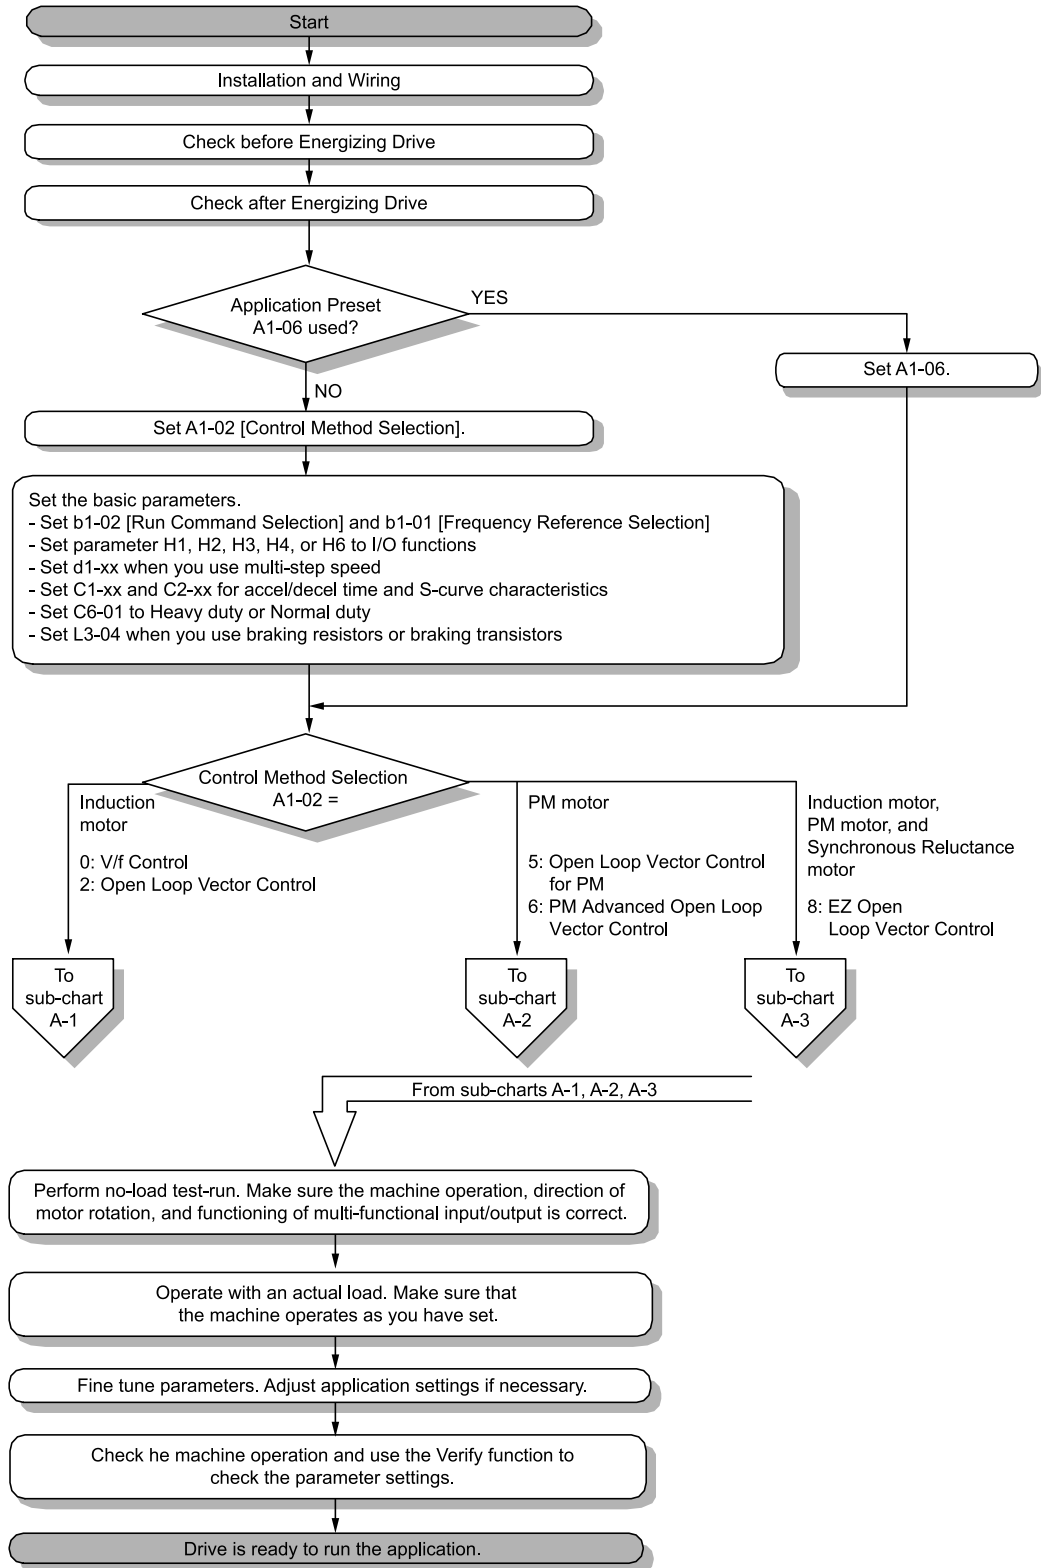


Figure 4.11 Basic Steps before Startup

◆ Sub-Chart A-1: Induction Motor Auto-Tuning and Test Run Procedure

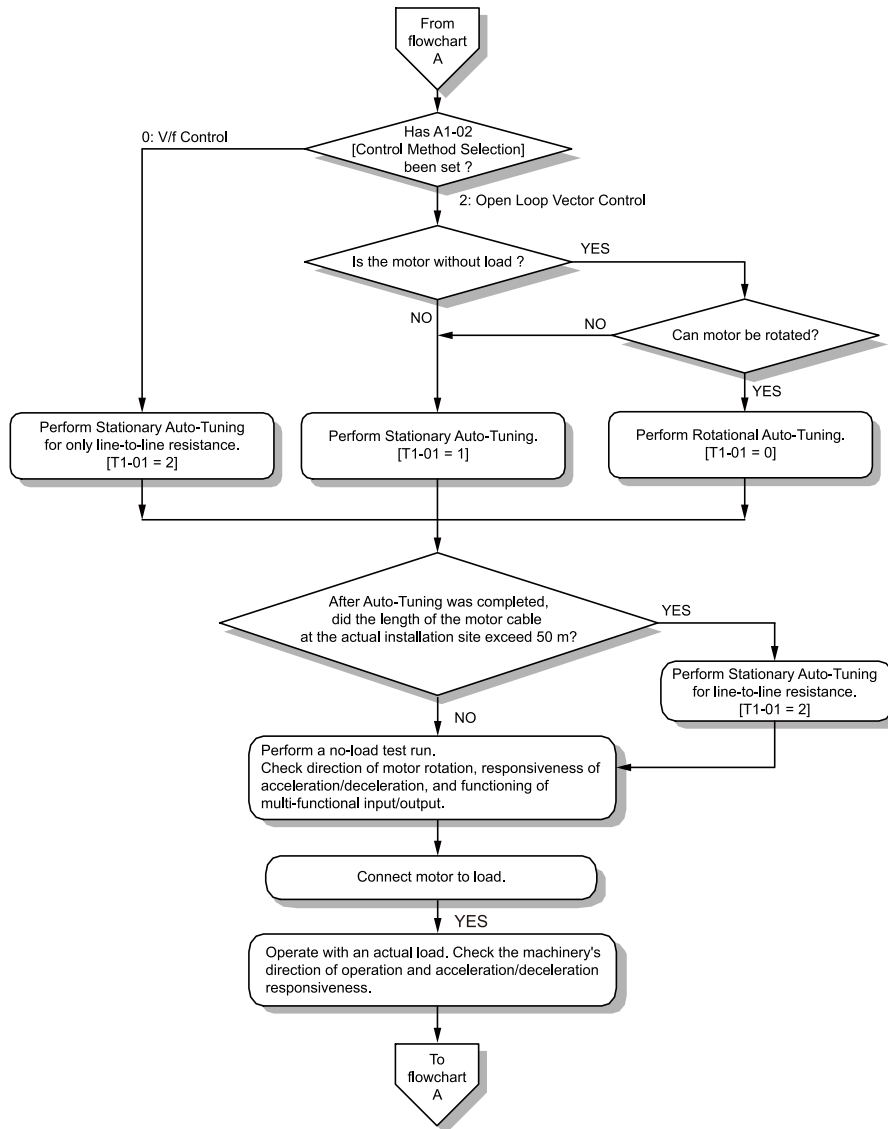



Figure 4.12 Induction Motor Auto-Tuning and Test Run Procedure

◆ Sub-Chart A-2: PM Motor Auto-Tuning and Test Run Procedure

Sub-Chart A-2 gives the basic steps to start up the drive for a PM motor.

**WARNING! Crush Hazard.** Test the system to make sure that the drive operates safely after you wire the drive and set parameters. If you do not test the system, it can cause damage to equipment or serious injury or death.



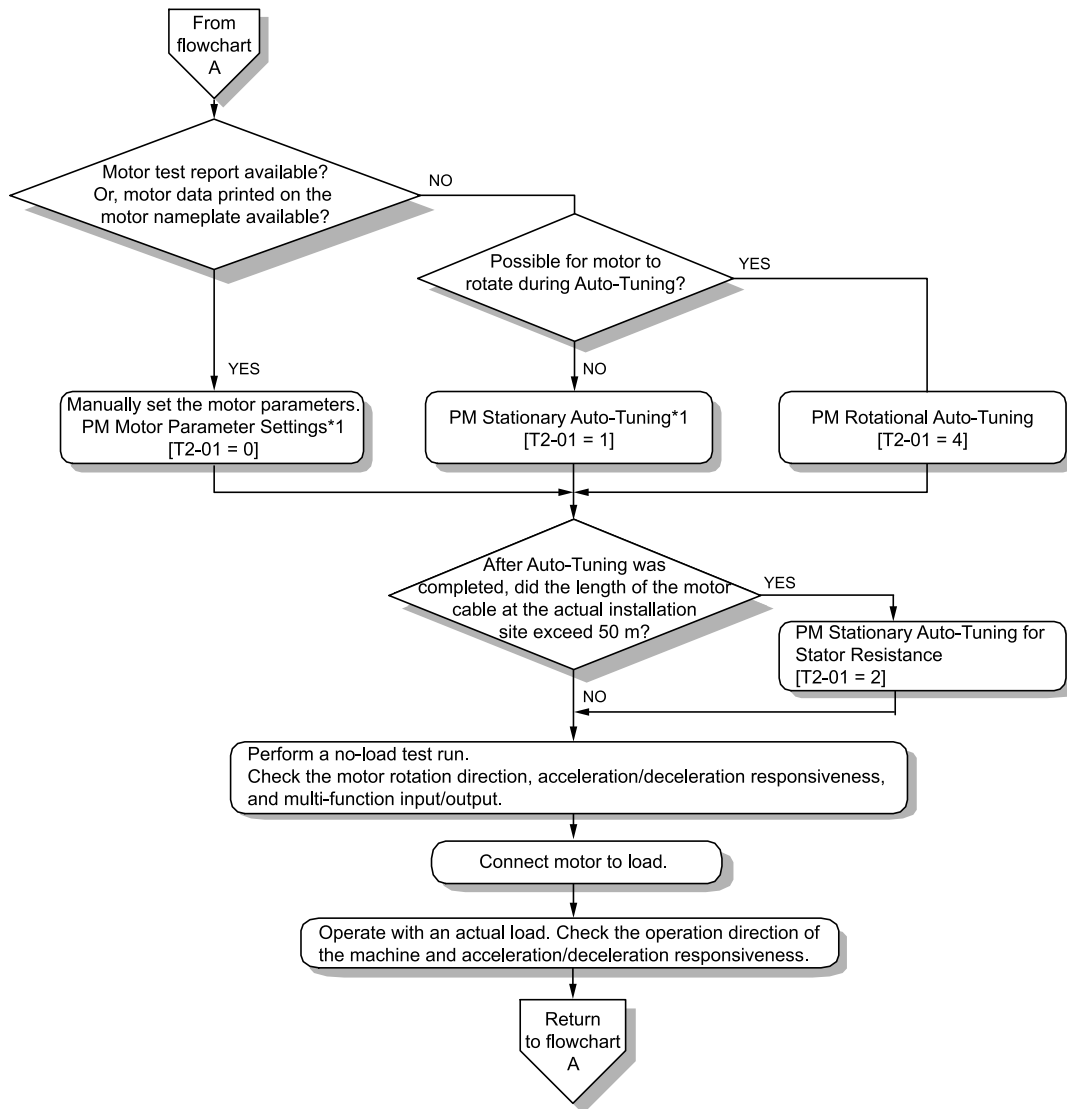

**Figure 4.13 PM Motor Auto-Tuning and Test Run Procedure**

\*1 For Yaskawa PM motors (SMRD, SMRA-series, or SSR1-series), set *E5-01 (Motor Code)*. For PM motors from a different manufacturer, set *E5-01 = FFFF*.

### ◆ Subchart A-3: EZ Open Loop Vector Control Test Run Procedure

Subchart A-3 gives the setup procedure to run a PM motor in EZ Open Loop Vector Control.

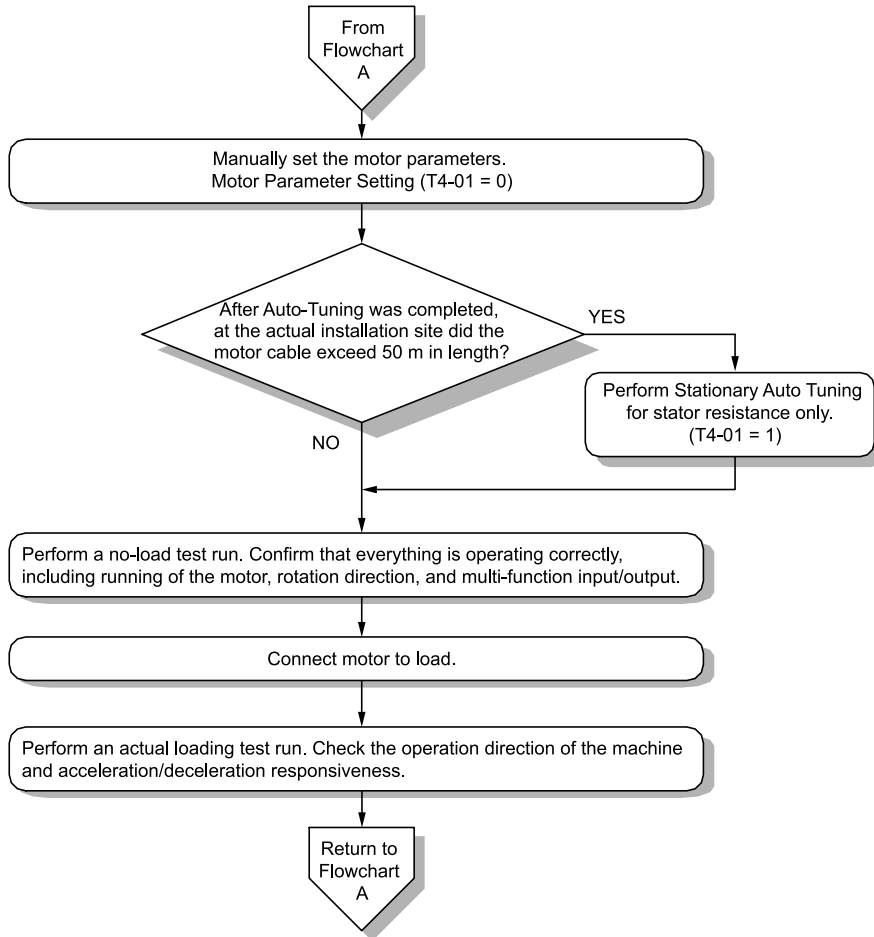


Figure 4.14 Procedure for Test Run of EZ Open Loop Vector Control Method

## 4.6 Items to Check before Starting Up the Drive

### ◆ Check before You Energize the Drive

Check the items in [Table 4.4](#) before you energize the drive.



**Table 4.4 Items to Check before You Energize the Drive**

| Items to Check  | Description  |
|---|--|
| Input Power Supply Voltage                                    | The voltage of the input power supply must be:<br>Single-phase 200 V class: single-phase 200 Vac to 240 Vac 50/60 Hz, 270 Vdc to 340 Vdc<br>Three-phase 200 V class: three-phase 200 Vac to 240 Vac 50/60 Hz, 270 Vdc to 340 Vdc<br>Three-phase 400 V class: three-phase 380 Vac to 480 Vac 50/60 Hz, 513 Vdc to 679 Vdc |
|   | Correctly wire power supply input terminals R/L1, S/L2, and T/L3, or L and N.  |
|   | Correctly ground the drive and motor.  |
| Connection between Drive Output Terminals and Motor Terminals | Make sure that you connected drive output terminals U/T1, V/T2, and W/T3 in the correct sequence to align with motor terminals U, V, and W and tighten the screws to a correct tightening torque.  |
| Control Circuit Terminal Wiring                               | Make sure that you connected the drive control circuit terminals in the correct sequence to align with devices and switches and tighten the screws to a correct tightening torque.   |
| Control Circuit Terminal Status                               | Turn OFF the inputs from all devices and switches connected to the drive control circuit terminals.  |
| Connection between Machinery and Motor                        | Disengage all couplings and belts that connect the motor and machinery.  |

### ◆ Check after You Energize the Drive

Check the items in [Table 4.5](#) after you energize the drive. The keypad display is different depending on drive status.

**Table 4.5 Display Status after You Energize the Drive**

| Status                         | Display   | Description  |
|--------------------------------|---|--|
| During Usual Operation         |  | The LED display shows the frequency reference.   |
| When the Drive Detects a Fault |  | The display is different for different faults. Refer to "Troubleshooting" to remove the cause of the fault. The ALM/ERR LED will illuminate. |

## 4.7 Keypad Operation

### ◆ Digital character mapping table

The LED keypad shows the digital characters as shown in Table 4.6

Table 4.6 Digital character mapping table

| Characters | LED Display | Characters | LED Display | Characters | LED Display | Characters | LED Display   |
|------------|-------------|------------|-------------|------------|-------------|------------|---------------|
| 0          | 0           | 9          | 9           | I          | i           | R          | r             |
| 1          | 1           | A          | A           | J          | j           | S          | S             |
| 2          | 2           | B          | b           | K          | k           | T          | T             |
| 3          | 3           | C          | C           | L          | L           | U          | U             |
| 4          | 4           | D          | d           | M          | m*1         | V          | v             |
| 5          | 5           | E          | E           | N          | n           | W          | w*1           |
| 6          | 6           | F          | F           | O          | o           | X          | No indication |
| 7          | 7           | G          | G           | P          | P           | Y          | Y             |
| 8          | 8           | H          | H           | Q          | q           | Z          | No indication |

\*1 Shown across two digits.

### ◆ Show the Monitor

Show the frequency reference screen.

Note:

Push and hold **ESC** to return to frequency reference screen from any screen.

Use these steps to access **P7on** menu and check drive operation status.

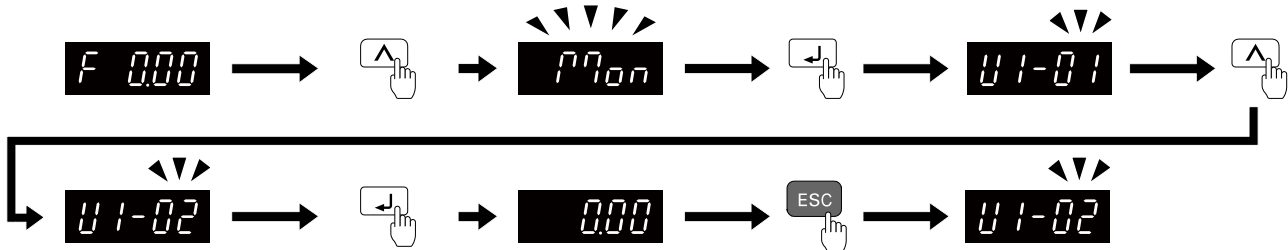


Figure 4.15 How to Monitor the Parameter Setting Values

### ◆ Check Modified Parameters

Show the frequency reference screen.

Note:

Push and hold **ESC** to return to frequency reference screen from any screen.

Use Verify mode to view all parameters that are not at default settings. This is very useful when you replace a drive. This lets you quickly access and re-edit changed parameters.

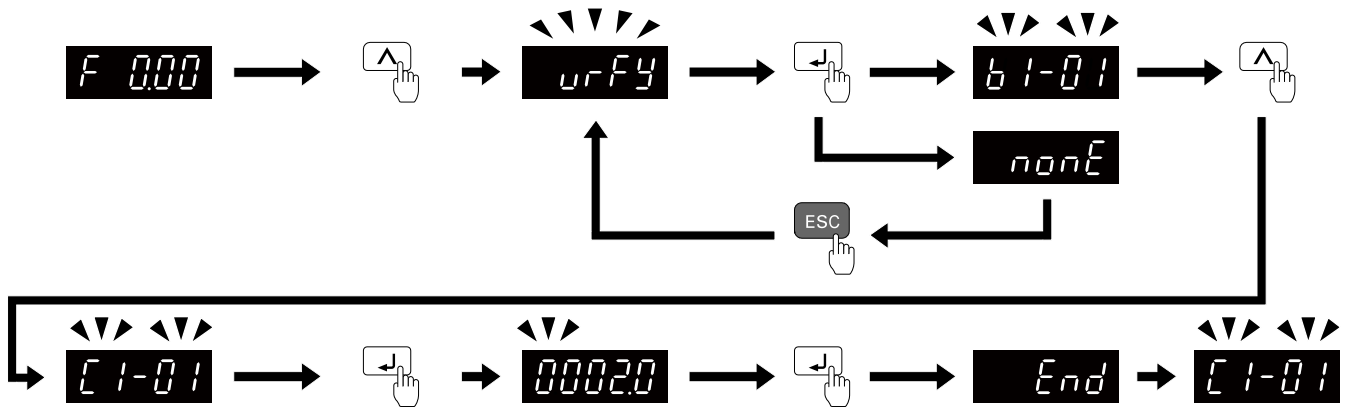


Figure 4.16 How to Examine the Changed Parameters

### ◆ Set and View Quick Setup Parameters

Show the frequency reference screen.

Note:

Push and hold **ESC** to return to frequency reference screen from any screen.

The setup mode shows the parameters set in *A2-01 to A2-32* [User Parameter 1 to User Parameter 32]. This lets you quickly access and change these parameters.

Note:

Setup mode always shows **APPL** (*A1-06* [Application Preset]) at the top of the list. When you change the setting, the settings for *A2-01 to A2-32* change.

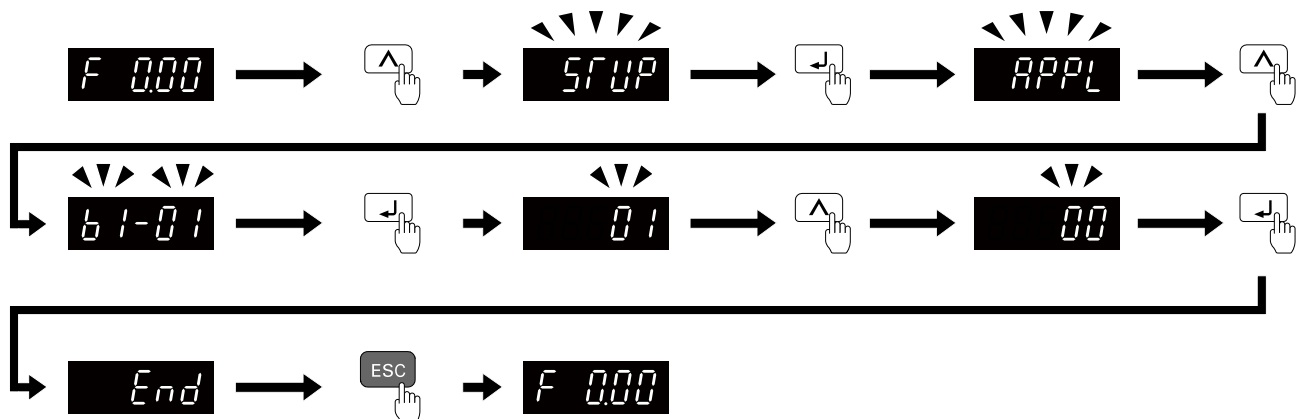


Figure 4.17 Set and View Quick Setup Parameters

Continue to change the parameters or press and hold **ESC** to go back to the frequency reference screen.

### ◆ Change Parameter Settings

Show the frequency reference screen in advance.

Note:

Push and hold **ESC** to go back to the frequency reference screen from any screen.

This example shows how to change *C1-01* [Acceleration Time 1]. Set the parameter to the necessary value.

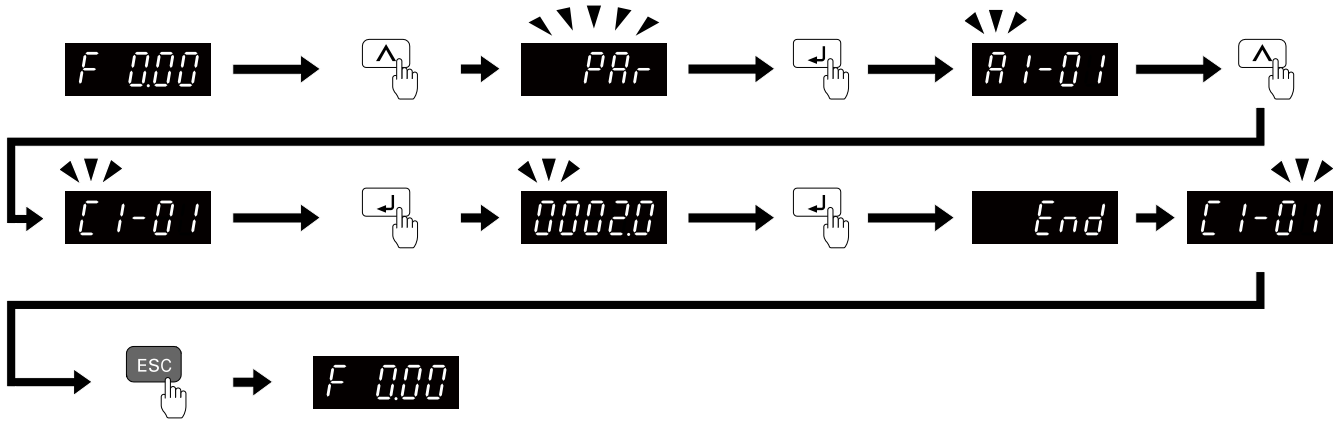


Figure 4.18 How to Change the Parameter Setting

Continue to change parameters or push and hold **ESC** to go back to the frequency reference screen.

### ◆ Save a Backup of Parameters

Show the frequency reference screen in advance.

**Note:**

Push and hold **ESC** to go back to the frequency reference screen from any screen.

Use these steps to save a backup of the drive parameters to the keypad.

Making backups of the parameter settings can save time when setting parameters after replacing a drive. If you set up more than one drive, you can copy the parameter settings from a drive that completed a test run to the other drives.

**Note:**

- Make sure that you stop the motor before you back up parameters.
- The drive does not accept Run commands while it is making a backup.
- Set  $\alpha 3-02 = 0$  [Copy Allowed Selection = Disabled] to protect the parameters saved in the keypad.

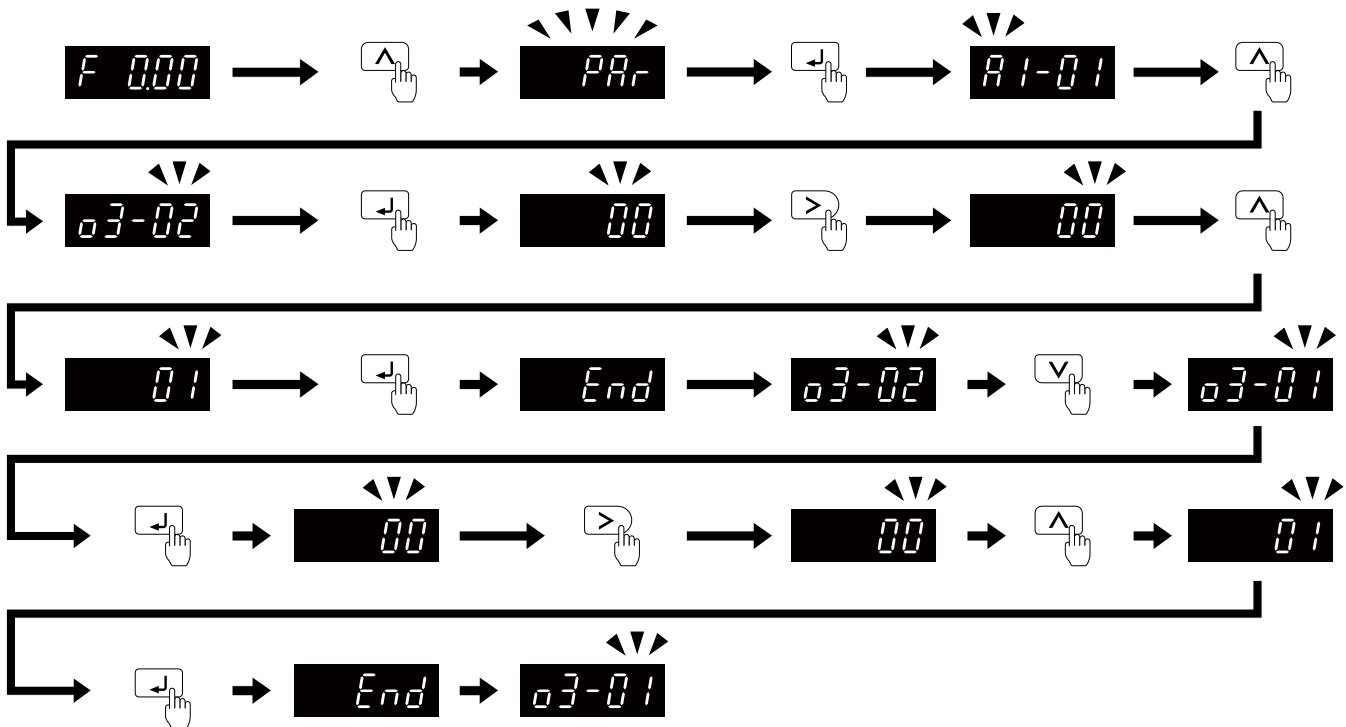


Figure 4.19 How to Save Backed-up Parameters

Push and hold **ESC** to go back to the frequency reference screen.

## ◆ Write Backed-up Parameters to the Drive

Show the frequency reference screen in advance.

**Note:**

Push and hold **ESC** to go back to the frequency reference screen from any screen.

Use these steps to write the parameters backed up in the keypad into a different drive.

**Note:**

- Make sure that you stop the drive before you restore the backed-up parameters.
- The drive does not accept Run commands while it is restoring parameters.

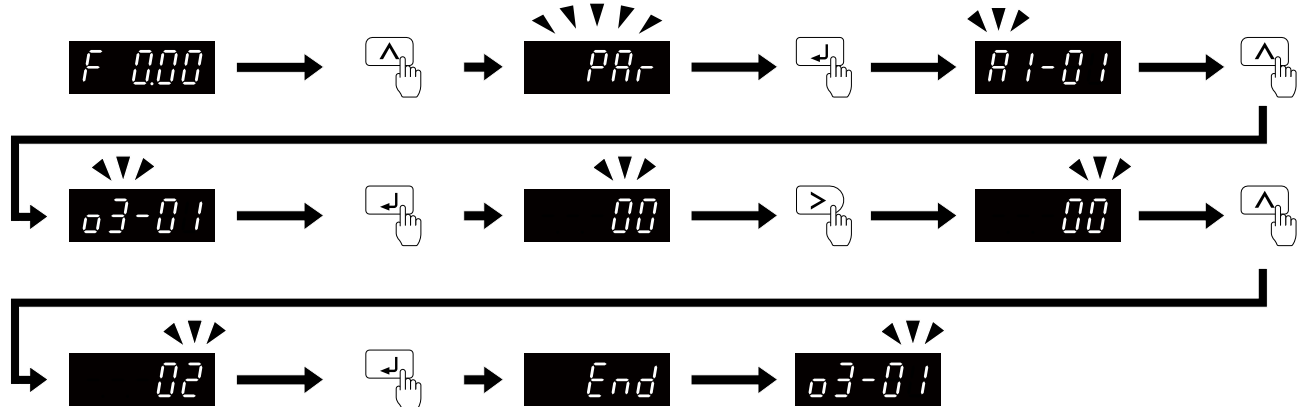


Figure 4.20 Writing backed up parameters

Push and hold **ESC** to go back to the frequency reference screen.

## ◆ Verify Keypad Parameters and Drive Parameters

Show the frequency reference screen in advance.

**Note:**

Push and hold **ESC** to go back to the frequency reference screen from any screen.

This procedure verifies that the parameter setting values that were backed up in the keypad agree with the parameter setting values in the drive.

**Note:**

- Make sure that you stop the drive before you examine parameters.
- The drive does not accept Run commands while it is restoring parameters.

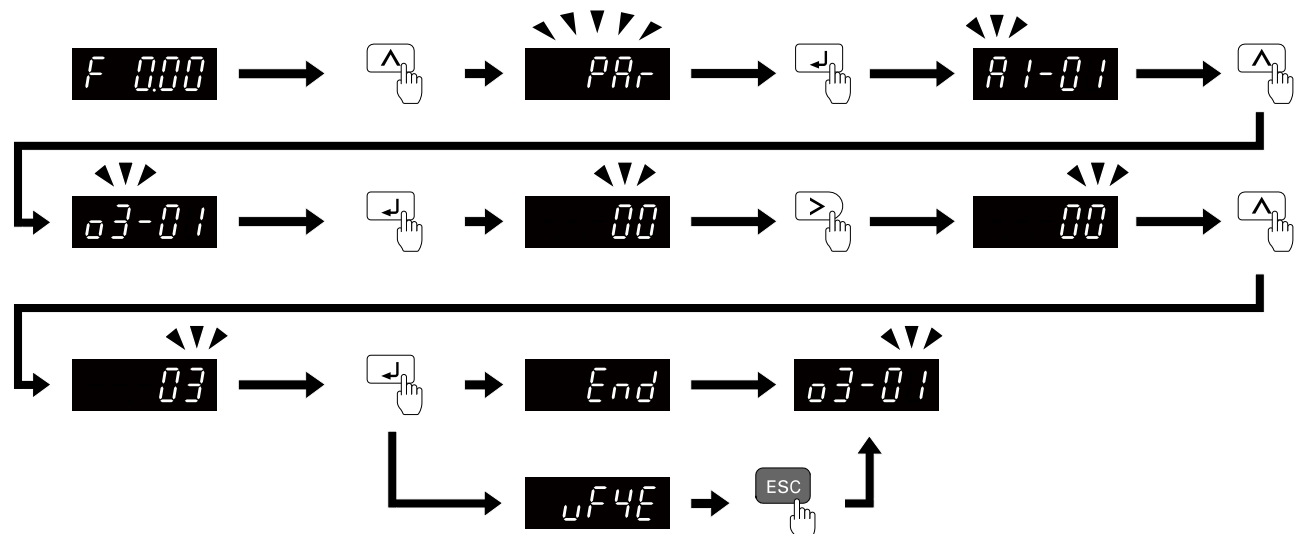


Figure 4.21 Verify Keypad Parameters and Drive Parameters

Push and hold **ESC** to go back to the frequency reference screen.

◆ Delete Parameters Backed Up to the Keypad

Show the frequency reference screen in advance.

Note:

Push and hold **ESC** to go back to the frequency reference screen from any screen.

Use these steps to erase the parameters backed up in the keypad.

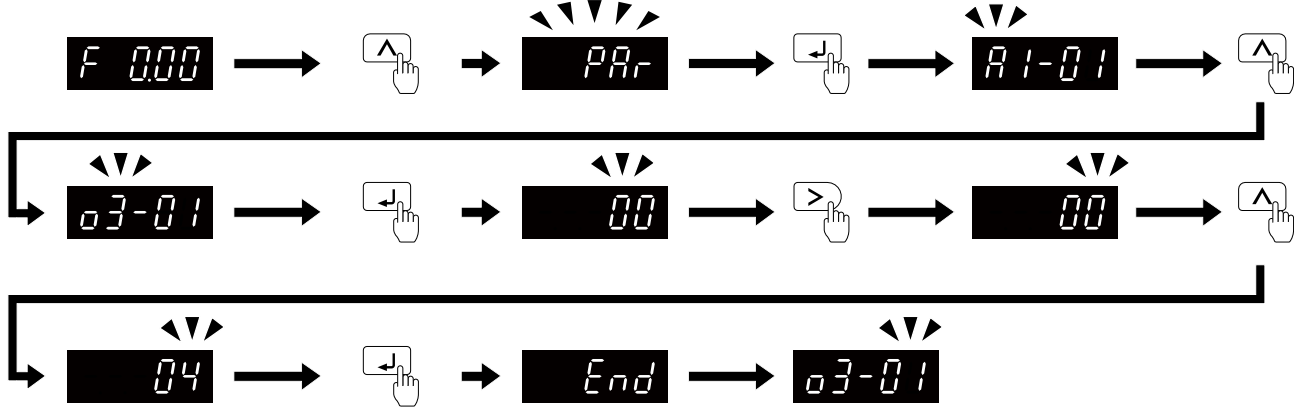


Figure 4.22 How to Erase the Backed-up Parameters

Push and hold **ESC** to go back to the frequency reference screen.



## 4.8 Automatic Parameter Settings Optimized for Specific Applications (Application Presets)

Show the frequency reference screen.

**Note:**

Press and hold **ESC** to return to the frequency reference screen from any screen.

Use this procedure to set an application preset.

The drive has application presets to set the necessary parameters for different applications to their best values. Use **u-rFy** to find parameters that were changed automatically by the application preset function in *A1-06*.

**Note:**

Before you set *A1-06*, make sure that you set *A1-03* = 2220, 3330 [*Initialize Parameters* = 2-Wire Initialization, 3-Wire Initialization] to initialize parameters.

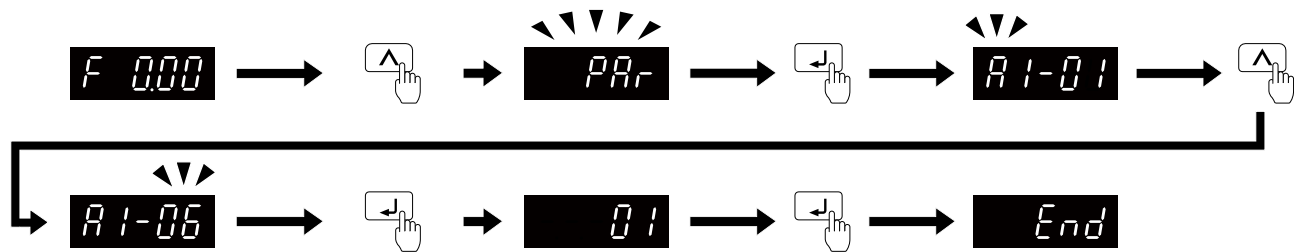


Figure 4.23 Automatic Parameter Settings

Press and hold **ESC** to go back to the frequency reference screen.

**Note:**

- Make sure that you do Auto-Tuning after you set *A1-06* for a hoist application.
- You cannot directly set parameter *A1-06*. To set an application preset, first set *A1-03* = 2220 to initialize parameters, then set this parameter. If initializing all parameters will cause a problem, do not change the settings.
- When the drive applies the *A1-06* setting, it will also reset the parameters automatically registered to *A2-17* to *A2-32* [*User Parameters 17 to 32*] when *A2-33* = 1 [*User Parameter Auto Selection* = Enabled: Auto Save Recent Parm].

## 4.9 Auto-Tuning

Auto-Tuning uses motor characteristics to automatically set drive parameters for vector control. Think about the type of motor, drive control method, and the motor installation environment and select the best Auto-Tuning method.

**WARNING! Injury to Personnel.** Rotational Auto-Tuning rotates the motor at 50% or more of the motor rated frequency. Make sure that there are no issues related to safety in the area around the drive and motor. Increased motor frequency can cause serious injury or death.

### ◆ Auto-Tuning for Induction Motors

This section gives information about Auto-Tuning for induction motors. Set motor parameters *E1-xx* and *E2-xx* (or, for motor 2, *E3-xx* and *E4-xx*) for Auto-Tuning.

**Note:**

Do Stationary Auto-Tuning if you cannot do Rotational Auto-Tuning. There can be large differences between the measured results and the motor characteristics when Auto-Tuning is complete. Examine the parameters for the measured motor characteristics after you do Stationary Auto-Tuning.

**Table 4.7 Auto-Tuning Mode Selection**

| Method                          | Parameter Settings | Application Conditions and Benefits   | Applicable Control Method (A1-02 Setting) |         |
|---------------------------------|--------------------|---|---|---------|
|                                 |                    |   | V/f (0)                                   | OLV (2) |
| Rotational Auto-Tuning          | T1-01 = 0          | <ul style="list-style-type: none"> <li>When you can decouple the motor and load the motor can rotate freely while Auto-Tuning.</li> <li>When operating motors that have fixed output characteristics.</li> <li>When it is necessary to use motors that have high-precision control.</li> <li>When you cannot decouple the motor and load, but the motor load is less than 30%.</li> </ul>   | x   | x       |
| Stationary Auto-Tuning 1        | T1-01 = 1          | <ul style="list-style-type: none"> <li>When you cannot decouple the motor and load.</li> <li>When the motor load is more than 30%.</li> <li>When the information from the motor test report or motor nameplate is not available. With Stationary Auto-Tuning, the energized drive stays stopped for approximately 1 minute. During this time, the drive automatically measures the necessary motor parameters.</li> <li>When you operate the motor with less than 30% load after Auto-Tuning. Set <math>T1-12 = 1</math> [Test Mode Selection = Yes] to do a test run after Auto-Tuning.</li> </ul> | -   | x       |
| Stationary Line-Line Resistance | T1-01 = 2          | <ul style="list-style-type: none"> <li>After Auto-Tuning, the wiring distance between the drive and motor changed by 50 m or more.</li> <li>When the wiring distance is 50 m or more in the V/f Control mode.</li> <li>When the motor output and drive capacity are different.</li> </ul>   | x   | x       |

### ■ Input Data for Induction Motor Auto-Tuning

To do Auto-Tuning, input data for the items in [Table 4.8](#) that have an "x". Before you start Auto-Tuning, prepare the motor test report or record the information from the motor nameplate as a reference.

**Table 4.8 Input Data for Induction Motor Auto-Tuning**

| Input Data            | Parameter | Unit              | Auto-Tuning Mode (T1-01 Setting) |                              |                                     |
|-----------------------|-----------|-------------------|----------------------------------|------------------------------|-------------------------------------|
|                       |           |                   | Rotational Auto-Tuning (0)       | Stationary Auto-Tuning 1 (1) | Stationary Line-Line Resistance (2) |
| Motor Rated Power     | T1-02     | kW                | x                                | x                            | x                                   |
| Motor Rated Voltage   | T1-03     | V                 | x                                | x                            | -                                   |
| Motor Rated Current   | T1-04     | A                 | x                                | x                            | x                                   |
| Motor Base Frequency  | T1-05     | Hz                | x                                | x                            | -                                   |
| Number of Motor Poles | T1-06     | -                 | x                                | x                            | -                                   |
| Motor Base Speed      | T1-07     | min <sup>-1</sup> | x                                | x                            | -                                   |
| Motor No-Load Current | T1-09     | A                 | -                                | x                            | -                                   |

| Input Data                 | Parameter | Unit | Auto-Tuning Mode<br>(T1-01 Setting) |                                    |   |
|----------------------------|-----------|------|-------------------------------------|------------------------------------|---|
|                            |           |      | Rotational Auto-Tuning<br>(0)       | Stationary Auto-Tuning<br>1<br>(1) | Stationary Line-Line<br>Resistance<br>(2) |
| Motor Rated Slip Frequency | T1-10     | Hz   | -                                   | x *1                               | -   |
| Motor Iron Loss            | T1-11     | W    | x *2                                | -                                  | -   |
| Test Mode Selection *3     | T1-12     | -    | -                                   | x *4                               | -   |
| No-Load Voltage            | T1-13     | V    | x *5                                | x *5                               | -   |

- \*1 Shows 0 Hz as the default value. If you do not know the Motor Rated Slip Frequency, keep the setting at 0 Hz.
- \*2 Input this value when A1-02 = 0 [Control Method Selection = V/f].
- \*3 If T1-12 = 1 [Test Mode Selection = Yes], when you run the motor in Drive Mode for the first time after Auto-Tuning, the drive will automatically set E2-02 [Motor Rated Slip] and E2-03 [Motor No-Load Current].
- \*4 Input this value when T1-10 [Motor Rated Slip Frequency] = 0 Hz.
- \*5 Set the same value to No-Load Voltage as T1-03 [Motor Rated Voltage] to get the same characteristics using Yaskawa 1000-Series drives or other legacy models.

### ◆ Auto-Tuning for PM Motors

This section gives information about Auto-Tuning for PM motors. Auto-Tuning sets motor parameters E1-xx and E5-xx.

Table 4.9 Auto-Tuning for PM Motors

| Mode  | Parameter Settings | Application Conditions and Benefits   | Applicable Control Method<br>(A1-02 Setting) |                |
|---|--------------------|---|--|----------------|
|   |                    |   | OLV/PM<br>(5)                                | AOLV/PM<br>(6) |
| Manual Entry w/ Motor Data Sheet                | T2-01 = 0          | <ul style="list-style-type: none"> <li>• When the information from the motor test report or motor nameplate is available.</li> <li>• Rotational/Stationary Auto-Tuning that energizes the motor is not done. Manually input the necessary motor parameters.</li> </ul>  | x  | x              |
| PM Stationary Auto-Tuning                       | T2-01 = 1          | <ul style="list-style-type: none"> <li>• When the information from the motor test report or motor nameplate is not available.</li> </ul> <p><b>Note:</b><br/>With Stationary Auto-Tuning, the energized drive stays stopped for approximately 1 minute. During this time, the drive automatically measures the necessary motor parameters.</p>  | x  | x              |
| PM Stationary Auto-Tuning for Stator Resistance | T2-01 = 2          | <ul style="list-style-type: none"> <li>• After Auto-Tuning, the wiring distance between the drive and motor changed by 50 m (164 ft) or more.</li> <li>• When the motor output and drive capacity are different.</li> </ul>   | x  | x              |
| PM Rotational Auto-Tuning                       | T2-01 = 4          | <ul style="list-style-type: none"> <li>• When the information from the motor test report or motor nameplate is not available.</li> <li>• When you can decouple the motor and load and the motor can rotate freely while Auto-Tuning.</li> <li>• The drive will automatically set the values measured during Auto-Tuning to the motor parameters.</li> </ul>   | x  | x              |
| High Frequency Injection                        | T2-01 = 5          | <ul style="list-style-type: none"> <li>• Automatically sets the control parameters that are necessary to set n8-35 = 1 [Initial Pole Detection Method = High Frequency Injection] or n8-57 = 1 [HFI Overlap Selection = Enabled].</li> <li>• Applicable to IPM motors only.</li> <li>• Do Auto-Tuning with the motor connected to the drive.</li> </ul> <p><b>Note:</b><br/>When you set n8-35 = 1 or n8-57 = 1, do High Frequency Injection Auto-Tuning. Set the data on the motor nameplate to the drive before you do High Frequency Injection Auto-Tuning. In High Frequency Injection Auto-Tuning, the drive energizes the stopped motor and automatically adjusts the parameters.</p> | x  | x              |

Startup Procedure and Test Run

### ■ Input Data for PM Motor Auto-Tuning

To do Auto-Tuning, input data for the items in Table 4.10 and Table 4.11 that have an "x". Before you start Auto-Tuning, prepare the motor test report or record the information from the motor nameplate as a reference.

Table 4.10 Input Data for PM Motor Auto-Tuning

| Input Data                     | Parameter | Unit              | Auto-Tuning Mode<br>(T2-01 Setting) |         |         |                                     |   |   |
|--------------------------------|-----------|-------------------|-------------------------------------|---------|---------|-------------------------------------|---|---|
|                                |           |                   | PM Motor Parameter Settings<br>(0)  |         |         | PM Stationary<br>Auto-Tuning<br>(1) |   | PM Stationary Auto-<br>Tuning for Stator<br>Resistance<br>(2) |
| Control Method Selection       | A1-02     | -                 | 5, 6                                | 5       | 6       | 5                                   | 6 | 5, 6  |
| PM Motor Code Selection        | T2-02     | -                 | Motor code of Yaskawa motor *1      | FFFF *2 | FFFF *2 | -                                   | - | -   |
| PM Motor Type                  | T2-03     | -                 | -                                   | -       | -       | x                                   | x | -   |
| PM Motor Rated Power           | T2-04     | kW                | -                                   | x       | x       | x                                   | x | -   |
| PM Motor Rated Voltage         | T2-05     | V                 | -                                   | x       | x       | x                                   | x | -   |
| PM Motor Rated Current         | T2-06     | A                 | -                                   | x       | x       | x                                   | x | x   |
| PM Motor Base Frequency        | T2-07     | Hz                | -                                   | x       | -       | x                                   | - | -   |
| Number of PM Motor Poles       | T2-08     | -                 | -                                   | x       | x       | x                                   | x | -   |
| PM Motor Base Speed            | T2-09     | min <sup>-1</sup> | -                                   | -       | x       | -                                   | x | -   |
| PM Motor Stator Resistance     | T2-10     | Ω                 | x                                   | x       | x       | -                                   | - | -   |
| PM Motor d-Axis Inductance     | T2-11     | mH                | x                                   | x       | x       | -                                   | - | -   |
| PM Motor q-Axis Inductance     | T2-12     | mH                | x                                   | x       | x       | -                                   | - | -   |
| Back-EMF Units Selection       | T2-13     | -                 | x                                   | x       | x       | -                                   | - | -   |
| Back-EMF Voltage Constant (Ke) | T2-14     | *3                | x                                   | x       | x       | -                                   | - | -   |
| Pull-In Current Level          | T2-15     | %                 | -                                   | -       | -       | x                                   | x | -   |

\*1 Set the motor code for a Yaskawa PM motor.

\*2 Set the motor code to FFFF for a PM motor from a different manufacturer.

\*3 Changes when the value set in T2-13 changes.

Table 4.11 Input Data for PM Motor Auto-Tuning

| Input Data               | Parameter | Unit              | Auto-Tuning Mode<br>(T2-01 Setting) |   |                                    |
|--------------------------|-----------|-------------------|-------------------------------------|---|------------------------------------|
|                          |           |                   | PM Rotational Auto-Tuning<br>(4)    |   | High Frequency<br>Injection<br>(5) |
| Control Method Selection | A1-02     | -                 | 5                                   | 6 | 5, 6                               |
| PM Motor Code Selection  | T2-02     | -                 | -                                   | - | -                                  |
| PM Motor Type            | T2-03     | -                 | x                                   | x | -                                  |
| PM Motor Rated Power     | T2-04     | kW                | x                                   | x | -                                  |
| PM Motor Rated Voltage   | T2-05     | V                 | x                                   | x | -                                  |
| PM Motor Rated Current   | T2-06     | A                 | x                                   | x | -                                  |
| PM Motor Base Frequency  | T2-07     | Hz                | x                                   | - | -                                  |
| Number of PM Motor Poles | T2-08     | -                 | x                                   | x | -                                  |
| PM Motor Base Speed      | T2-09     | min <sup>-1</sup> | -                                   | x | -                                  |
| Pull-In Current Level    | T2-15     | %                 | x                                   | x | -                                  |

### ◆ Auto-Tuning in EZ Open Loop Vector Control Method

This section gives information about the Auto-Tuning mode for EZ Open Loop Vector Control. Auto-Tuning will set the E9-xx parameters.

Table 4.12 EZ Tuning Mode Selection

| Mode                    | Parameter Settings | Application Conditions and Benefits  | Applicable Control Method (A1-02 Setting) |
|-------------------------|--------------------|--|---|
| Motor Parameter Setting | T4-01 = 0          | <ul style="list-style-type: none"> <li>Applicable when driving an induction motor or a PM motor</li> <li>Suitable for derating torque applications, for example fans and pumps.</li> </ul>                     | EZOLV (8)                                 |
| Line-to-Line Resistance | T4-01 = 1          | <ul style="list-style-type: none"> <li>After Auto-Tuning, the wiring distance between the drive and motor changed by 50 m or more.</li> <li>When the motor output and drive capacity are different.</li> </ul> | EZOLV (8)                                 |

### ■ Auto-Tuning Input Data in EZ Open Loop Vector Control Method

To do Auto-Tuning, input data for the items in Table 4.13 that have an "x". Before you start Auto-Tuning, prepare the motor test report or record the information from the motor nameplate as a reference.

Table 4.13 Auto-Tuning Input Data in EZ Open Loop Vector Control Method

| Input Data                | Parameter | Unit              | Auto-Tuning Mode (T4-01 Setting) |                             |
|---------------------------|-----------|-------------------|----------------------------------|-----------------------------|
|                           |           |                   | Motor Parameter Setting (0)      | Line-to-Line Resistance (1) |
| Motor Type Selection      | T4-02     | -                 | x                                | -                           |
| Motor Max Revolutions     | T4-03     | min <sup>-1</sup> | x                                | -                           |
| Motor Rated Revolutions   | T4-04     | min <sup>-1</sup> | x                                | -                           |
| Motor Rated Frequency     | T4-05     | Hz                | x                                | -                           |
| Motor Rated Voltage       | T4-06     | V                 | x                                | -                           |
| Motor Rated Current (FLA) | T4-07     | A                 | x                                | x                           |
| PM Motor Rated Power (kW) | T4-08     | kW                | x                                | x                           |
| Number of Motor Poles     | T4-09     | -                 | x                                | -                           |

### ◆ ASR and Inertia Tuning

To increase drive responsiveness and prevent hunting, use Auto-Tuning to automatically adjust the control-related parameters.

These types of Auto-Tuning are available for the control system:

- Deceleration Rate Tuning
- KEB Tuning

#### Note:

If you do Control Tuning, you cannot set  $HI-xx = 16$  [Motor 2 Selection]. Do not do Control Tuning for applications that switch between motor 1 and motor 2.

Table 4.14 Control Loop Tuning Selection

| Mode                     | Parameter Settings | Application Conditions and Benefits  | Applicable Control Methods (A1-02 Settings) |         |            |             |           |
|--------------------------|--------------------|--|---|---------|------------|-------------|-----------|
|                          |                    |  | V/f (0)                                     | OLV (2) | OLV/PM (5) | AOLV/PM (6) | EZOLV (8) |
| Deceleration Rate Tuning | T3-00 = 2          | To automatically adjust the deceleration rate to prevent an <i>ov</i> [Overvoltage] fault.   | x   | x       | x          | x           | x         |
| KEB Tuning               | T3-00 = 3          | <ul style="list-style-type: none"> <li>To automatically adjust parameter settings to prevent an <i>ov</i> [Overvoltage] fault with the KEB Ride-Thru function.</li> <li>When <math>L3-11 = 1</math> [Overvoltage Suppression Select = Enabled].</li> </ul> | x   | x       | x          | x           | x         |

### ■ Deceleration Rate Tuning

Deceleration Rate Tuning automatically sets the deceleration rate to prevent an *ov* [Overvoltage] fault during motor deceleration. Set  $C1-11$  [Accel/Decel Time Switchover Freq] first to automatically set parameters  $C1-02$  [Deceleration Time 1] (high speed range) and  $C1-08$  [Deceleration Time 4] (low speed range).

### ■ KEB Tuning

KEB Tuning automatically sets parameters used for the KEB Ride-Thru function and for the overvoltage suppression function.

## 4.9 Auto-Tuning

Control Tuning automatically sets the parameters in [Table 4.15](#) to the best values.

**Table 4.15 Parameters set in Control Tuning**

| Parameters Automatically Set             | Deceleration Rate Tuning | KEB Tuning      |
|--|--------------------------|-----------------|
| C1-02 [Deceleration Time 1]              | x                        | -               |
| C1-08 [Deceleration Time 4]              | x <sup>*1</sup>          | -               |
| C1-09 [Fast Stop Time]                   | -                        | x <sup>*2</sup> |
| L2-06 [Kinetic Energy Backup Decel Time] | -                        | x <sup>*3</sup> |
| L3-25 [Load Inertia Ratio]               | -                        | x               |

\*1 The drive automatically sets C1-08 [Deceleration Time 4] only when C1-11 [Accel/Decel Time Switchover Freq] ≠ 0.

\*2 When L2-29 = 0 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 1], the drive will automatically adjust C1-09 [Fast Stop Time] and will not adjust L2-06 [Kinetic Energy Backup Decel Time]. If you must not change the Fast Stop time, do not do KEB Tuning.

\*3 When L2-29 = 1, 2, or 3 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 2, System KEB Ride-Thru 1, or System KEB Ride-Thru 2], the drive will automatically adjust L2-06 [Kinetic Energy Backup Decel Time].

### ◆ Precautions before Auto-Tuning


Examine the topics in this section before you start Auto-Tuning.

#### ■ Prepare for Basic Auto-Tuning

- You must input data from the motor nameplate or motor test report to do Auto-Tuning. Make sure that this data is available before you do Auto-Tuning.
- For best performance, make sure that the drive input supply voltage is equal to or more than the motor rated voltage.

##### Note:

Better performance is possible when you use a motor with a rated voltage that is less than the input supply voltage (by 20 V for 200 V class models or by 40 V for 400 V class models). This is very important when you operate the motor at more than 90% of base speed, where high torque precision is necessary. If the input power supply is equal to the motor rated voltage, the drive output voltage will not be sufficient and performance will decrease.

- Push  on the keypad to cancel Auto-Tuning.
- If a Safe Disable input signal is input to the drive during Auto-Tuning, Auto-Tuning measurements will not complete successfully. If this occurs, cancel the Auto-Tuning, then do it again.
- [Table 4.16](#) shows the status of multi-function input/output terminals during Auto-Tuning.

**Table 4.16 Status of Input/Output Terminals during Auto-Tuning**

| Auto-Tuning Type            | Mode       | Parameter                                       | Multi-Function Input | Multi-Function Output <sup>*1</sup> |   |
|-----------------------------|------------|---|----------------------|-------------------------------------|---|
| Induction Motor Auto-Tuning | Rotational | Rotational Auto-Tuning                          | T1-01 = 0            | Disabled                            | Functions the same as during usual operation. |
|                             | Stationary | Stationary Auto-Tuning 1                        | T1-01 = 1            | Disabled                            | Keeps the status at the start of Auto-Tuning. |
|                             |            | Line-to-Line Resistance                         | T1-01 = 2            | Disabled                            | Keeps the status at the start of Auto-Tuning. |
| PM Motor Auto-Tuning        | Rotational | PM Rotational Auto-Tuning                       | T2-01 = 4            | Disabled                            | Functions the same as during usual operation. |
|                             | Stationary | PM Motor Parameter Settings                     | T2-01 = 0            | Disabled                            | Disabled                                      |
|                             |            | PM Stationary Auto-Tuning                       | T2-01 = 1            | Disabled                            | Keeps the status at the start of Auto-Tuning. |
|                             |            | PM Stationary Auto-Tuning for Stator Resistance | T2-01 = 2            | Disabled                            | Keeps the status at the start of Auto-Tuning. |
|                             |            | High Frequency Injection                        | T2-01 = 5            | Disabled                            | Keeps the status at the start of Auto-Tuning. |
| EZ Tuning                   | Stationary | Motor Parameter Setting                         | T4-01 = 0            | Disabled                            | Disabled                                      |
|                             |            | Line-to-Line Resistance                         | T4-01 = 1            | Disabled                            | Keeps the status at the start of Auto-Tuning. |
| ASR and Inertia Tuning      | Rotational | Deceleration Rate Tuning                        | T3-00 = 2            | Disabled                            | Functions the same as during usual operation. |
|                             |            | KEB Tuning                                      | T3-00 = 3            | Disabled                            | Functions the same as during usual operation. |

\*1 When you set a terminal to H2-xx = E [MFDO Function Selection = Fault], it will function the same as during usual operation.

**WARNING! Crush Hazard.** Wire a sequence that will not let a multi-function output terminal open the holding brake during Stationary Auto-Tuning. If the holding brake is open during Stationary Auto-Tuning, it can cause serious injury or death.

**WARNING! Sudden Movement Hazard.** Before you do Rotational Auto-Tuning, disconnect the load from the motor. The load can move suddenly and cause serious injury or death.

**WARNING!** *Injury to Personnel. Rotational Auto-Tuning rotates the motor at 50% or more of the motor rated frequency. Make sure that there are no issues related to safety in the area around the drive and motor. Increased motor frequency can cause serious injury or death.*

**WARNING!** *Electrical Shock Hazard. During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.*

### ■ Precautions before Rotational Auto-Tuning

**WARNING!** *Electrical Shock Hazard. During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.*

- Before you do Rotational Auto-Tuning to prevent drive malfunction, uncouple the motor from the load. If you do Rotational Auto-Tuning with the motor connected to a load that is more than 30% of the motor duty rating, the drive will not correctly calculate the motor parameters and the motor can operate incorrectly.
- When the load is 30% or less of the motor duty rating, you can do Auto-Tuning with the motor connected to a load.
- Make sure that the motor magnetic brake is released.
- Make sure that external force from the machine will not cause the motor to rotate.

### ■ Precautions before Stationary Auto-Tuning

- Make sure that the motor magnetic brake is not open.
- Make sure that external force from the machine will not cause the motor to rotate.

**WARNING!** *Electrical Shock Hazard. During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.*

### ■ Automatically Set E2-02 [Motor Rated Slip] and E2-03 [Motor No-Load Current]

If  $T1-12 = 1$  [Test Mode Selection = Yes] when selecting Stationary Auto-Tuning, the drive will automatically set motor parameters E2-02 [Motor Rated Slip] and E2-03 [Motor No-Load Current] after Auto-Tuning is complete when you use the motor for the first time in Drive Mode.

After Stationary Auto-Tuning is complete, use this procedure to do the operation in test mode:

1. Check the E2-02 and E2-03 values on the “Modified Parameters/Fault Log” screen or the “Parameters” screen.
2. Operate the motor in Drive Mode with these conditions:
  - Make sure that you connect all wiring between the drive and motor
  - Make sure that a mechanical brake on the motor shaft is not locked
  - The maximum motor load must be 30% of the rated load.
  - Keep a constant speed of 30% of E1-06 [Base Frequency] (default value = maximum frequency) or more for 1 second or longer.
3. After the motor stops, examine the values of E2-02 and E2-03 again in the Verify Menu or Parameter Setting Mode.
4. Make sure that the input data is correct.  
When the settings in E2-02 and E2-03 are different than in step 1, the drive set the values automatically.

### ■ Precautions before Stationary Auto-Tuning for Line-to-Line Resistance and Stator Resistance Auto-Tuning

In V/f control, when the motor cable is 50 meters (164 feet) or longer, do Stationary Auto-Tuning for Line-to-Line Resistance.

**WARNING!** *Electrical Shock Hazard. During Auto-Tuning, the motor will receive high voltage when the motor is stopped. Do not touch the motor until Auto-Tuning is complete. If you touch a motor that is energized, it can cause serious injury or death.*

### ■ Precautions before Using Deceleration Rate Tuning and KEB Tuning

Before Deceleration Rate Tuning or KEB Tuning, check these items:

## 4.9 Auto-Tuning

---

**Note:**

- Do not do Deceleration Rate Tuning if you use a braking resistor unit or a regenerative converter.
- Do Deceleration Rate Tuning and KEB Tuning with the load attached to the motor.
- Do not do Deceleration Rate Tuning or KEB Tuning for these applications:  
In Deceleration Rate Tuning and KEB Tuning, the drive will automatically rotate the motor forward and accelerate and decelerate the motor again and again.
  - On a machine that does not let the motor rotate forward
  - In applications with a small range of operation (trolleys and other such applications that can only move linearly)
  - In elevator applications
  - Applications where sudden acceleration and sudden deceleration are not applicable.
- To do KEB Tuning with the external main circuit capacitors connected to the drive, set *L3-26 [Additional DC Bus Capacitors]* then do KEB Tuning.
- Do not do KEB Tuning or Deceleration Rate Tuning if the drive is set to use *H1-xx = 16 [MFDI Function Select = Motor 2 Selection]*. Failure to obey can cause an *ov [Overvoltage]* fault.



## 4.10 Test Run

After you set the basic parameters and do Auto-Tuning, do a test run.

**WARNING!** *Crush Hazard. Test the system to make sure that the drive operates safely after you wire the drive and set parameters. If you do not test the system, it can cause damage to equipment or serious injury or death.*

### ◆ No-Load Test Run

Before connecting the motor to the machine, make sure that you check the operation status of the motor.

#### ■ Precautions before Operation

Before rotating the motor, check these items:

- Check for safety issues near the drive, motor, and machine.
- Make sure that all emergency stop circuits and machine safety mechanisms are operating correctly.

#### ■ Items to Check before Operation

 
Check these items before operation:

- Is the motor rotating in the forward direction?
- Is the motor rotating smoothly (no unusual sounds or unusual vibrations)?
- Does the motor accelerate/decelerate smoothly?

### ◆ Do a No-Load Test Run

Do these steps for a no-load test run:

1. Energize the drive, or push **ESC** to show the frequency reference screen.
2. Push **LO/RE** to illuminate the LOCAL/REMOTE LED.
3. Use **▲** / **▼** / **◀** / **▶** to set  $d1-01 = 6.00$  [Frequency Reference 1 = 6.00 Hz], then push **↵**.
4. Push **▶RUN**.  
The RUN indicator illuminates, and the motor runs at 6.00 Hz in the forward direction.
5. Make sure that the motor is rotating in the correct direction and that the drive does not show a fault.  
If the drive detects a fault, remove the cause.



#### A - Forward Rotation of Motor (Counter Clockwise Direction as Seen from Load Shaft)

6. Push **▲** to increase the frequency reference value.  
Change the setting value in increments of 10 Hz if necessary and examine the response.  
Ex.: 6 Hz → 20 Hz → 30 Hz → 40 Hz → 50 Hz → 60 Hz
7. Each time you increase the setting value, use  $U1-03$  [Output Current] to check the drive output current.  
When the output current of the drive is not more than the motor rated current, the status is correct.
8. Make sure that the motor rotates correctly, then push **STOP**.  
The RUN LED flashes and goes off when the motor stops completely.


### ◆ Actual-Load Test Run

Test the operation without a load, then connect the motor and machine to do a test run.

#### ■ Precautions before Operation

Before rotating the motor, check these items:

- Check for safety issues near the drive, motor, and machine.
- Make sure that all emergency stop circuits and machine safety mechanisms are operating correctly.

- Make sure that the motor is fully stopped.
- Connect the motor with the machine.  
Make sure that there are no loose installation screws and that the motor load shafts and machine junctions are correctly secured.
- Keep the keypad near you to push  immediately if there is unusual or incorrect operation.

### ■ Items to Check before Operation






 




- Make sure that the direction of the machine operation is correct (The motor must rotate in the correct direction).
- Make sure that the motor accelerates and decelerates smoothly.

### ◆ Do an Actual-Load Test Run

**Note:**

During a test run, make sure that *U1-03 [Output Current]* is not too high.

Connect the motor and machine, then do the test run with the same procedure that you used for the no-load test run.

1. Energize the drive, or push  to show the frequency reference screen.
2. Use  /  /  /  to set *d1-01 = 6.00 [Frequency Reference 1 = 6.00 Hz]*, then push .
3. Push  to illuminate the LOCAL/REMOTE LED.
4. Push .  
The RUN indicator illuminates, and the motor runs at 6.00 Hz in the forward direction.
5. Make sure that the motor is rotating in the correct direction and that the drive does not show a fault.  
If the drive detects a fault, remove the cause.
6. Push  to increase the frequency reference value.  
Change the setting value in increments of 10 Hz if necessary and examine the response.  
Ex.: 6 Hz → 20 Hz → 30 Hz → 40 Hz → 50 Hz → 60 Hz
7. Each time you increase the setting value, use *U1-03 [Output Current]* to check the drive output current.  
When the output current of the drive is not more than the motor rated current, the status is correct.
8. Make sure that the motor rotates correctly, then push .  
The RUN LED flashes and goes off when the motor stops completely.
9. Change the frequency reference and direction of motor rotation, and make sure that there are no unusual sounds or vibrations.
10. If the control function causes hunting or oscillation errors, adjust the settings to stop the errors.

## 4.11 Fine Tuning during Test Runs (Adjust the Control Function)

This section gives information about the adjustment procedures to stop hunting or oscillation errors caused by the control function during a test run. Adjust the applicable parameters as specified by your control method and drive status.

- *V/f Control on page 139*
- *Open Loop Vector Control for PM Motors on page 141*
- *Advanced Open Loop Vector Control Method for PM Motors on page 142*
- *EZ Open Loop Vector Control Method on page 143*

**Note:**

This section only lists frequently adjusted parameters. If you must adjust parameters that have a higher degree of precision, contact Yaskawa.

### ◆ V/f Control

**Table 4.17 Parameters for Fine Tuning the Drive (A1-02 = 0 [V/f])**

| Issue   | Parameter Number  | Possible Solutions   | Default  | Recommended Setting        |
|---|---|--|--|----------------------------|
| Hunting or oscillation at mid-range speeds (10 Hz to 40 Hz)   | n1-02 [Hunting Prevention Gain Setting]   | <ul style="list-style-type: none"> <li>• If torque is not sufficient with heavy loads, decrease the setting value.</li> <li>• If hunting or oscillation occur with light loads, increase the setting value.</li> <li>• If hunting occurs with a low-inductance motor, for example a motor with a larger frame size or a high-frequency motor, lower the setting value. Set <i>n1-01 = 1</i> [Hunting Prevention Selection = Enabled].</li> </ul> | 1.00   | 0.10 - 2.00                |
| <ul style="list-style-type: none"> <li>• The volume of the motor excitation sound is too high.</li> <li>• Hunting or oscillation at low speeds (10 Hz or lower), or at mid-range speeds (10 Hz to 40 Hz)</li> </ul>       | C6-02 [Carrier Frequency Selection]   | <ul style="list-style-type: none"> <li>• If the volume of the motor excitation sound is too high, increase the carrier frequency.</li> <li>• If hunting or oscillation occur at low or mid-range speeds, decrease the carrier frequency.</li> </ul>  | 1 (2 kHz) *1   | 1 to upper limit value     |
| <ul style="list-style-type: none"> <li>• Unsatisfactory motor torque and speed response</li> <li>• Hunting or oscillation</li> </ul>  | C4-02 [Torque Compensation Delay Time]  | <ul style="list-style-type: none"> <li>• If torque or speed response are slow, decrease the setting value.</li> <li>• If hunting or oscillation occur, increase the setting value.</li> </ul>  | 200 ms *2  | 100 ms to 1000 ms          |
| <ul style="list-style-type: none"> <li>• Torque at low speeds (10 Hz or lower) is not sufficient.</li> <li>• Hunting or oscillation</li> </ul>  | C4-01 [Torque Compensation Gain]  | <ul style="list-style-type: none"> <li>• If torque at low speeds (10 Hz or lower) is not sufficient, increase the setting value.</li> <li>• If hunting or oscillation occur with light loads, decrease the setting value.</li> </ul>   | 1.00   | 0.50 - 1.50                |
| <ul style="list-style-type: none"> <li>• If you use the drive with an IE3 high efficiency motor, the current that is more than the motor rated current will flow and trip at overload. Hunting or oscillation.</li> </ul> | C4-01 [Torque Compensation Gain]  | Decrease the setting value in these conditions: <ul style="list-style-type: none"> <li>• Drive trips at overload.</li> <li>• Hunting or oscillation.</li> </ul>  | 1.00   | 0.00 - 1.00                |
| <ul style="list-style-type: none"> <li>• Torque at low speeds (10 Hz or lower) is not sufficient.</li> <li>• Large initial vibration at start up.</li> </ul>  | <ul style="list-style-type: none"> <li>• E1-08 [Mid Point A Voltage]</li> <li>• E1-10 [Minimum Output Voltage]</li> </ul> | <ul style="list-style-type: none"> <li>• If torque at low speeds (10 Hz or lower) is not sufficient, increase the setting value.</li> <li>• If there is large initial vibration at start up, decrease the setting value</li> </ul>   | <ul style="list-style-type: none"> <li>• E1-08: 16.0 V *3</li> <li>• E1-10: 12.0 V *3</li> </ul> | Default setting +/- 5 V *4 |
| Speed precision is unsatisfactory.  | C3-01 [Slip Compensation Gain]  | Set <i>E2-01</i> [Motor Rated Current], <i>E2-02</i> [Motor Rated Slip], and <i>E2-03</i> [Motor No-Load Current], then adjust <i>C3-01</i> .  | 0.0 (no slip compensation)   | 0.5 - 1.5                  |

\*1 The default setting changes when the settings for *C6-01* [Normal / Heavy Duty Selection] and *o2-04* [Drive Model (KVA) Selection] change.

\*2 The default setting changes when the settings for *A1-02* [Control Method Selection] and *o2-04* change.

\*3 The default setting changes when the settings for *A1-02* and *E1-03* [V/f Pattern Selection] change.

\*4 Recommended settings are for 200 V class drives. Multiply the voltage by 2 for 400 V class drives.

◆ **Open Loop Vector Control Method**

In Open Loop Vector Control, keep *C4-01 [Torque Compensation Gain]* at its default setting (1.00).  
 If you cannot get speed precision during regeneration in Open Loop Vector Control, set *C3-04 = 1 [Slip Compensation at Regen = Enabled Above 6 Hz]*.

**Table 4.18 Parameters for Fine Tuning the Drive (A1-02 = 2 [OLV])**

| Issue   | Parameter Number                        | Possible Solutions   | Default  | Recommended Setting |
|---|---|--|----------|---------------------|
| <ul style="list-style-type: none"> <li>Unsatisfactory motor torque and speed response</li> <li>Hunting or oscillation at mid-range speeds (10 Hz to 40 Hz)</li> </ul> | n2-01 [Automatic Freq Regulator Gain]   | <ul style="list-style-type: none"> <li>To increase the speed of torque or speed response, decrease the setting value in 0.05-unit increments.</li> <li>If hunting or oscillation occur, decrease the setting value in 0.05-unit increments.</li> </ul>   | 1.00     | 0.50 to 2.00        |
|   | n2-02 [Automatic Freq Regulator Time 1] | <ul style="list-style-type: none"> <li>To increase the speed of torque or speed response, decrease the setting value in 10 ms increments and examine the response.</li> <li>If hunting or oscillation occur or if the load inertia is too much, increase the setting value in 50 ms increments and examine the response.</li> </ul> <p><b>Note:</b><br/>                     Make sure that this parameter setting is: <math>n2-02 \leq n2-03</math> [Automatic Freq Regulator Time 2].<br/>                     When you adjust <i>n2-02</i>, you must also increase the <i>C4-02 [Torque Compensation Delay Time]</i> value by the same ratio.</p> | 50 ms    | 50 ms to 2000 ms    |
| <i>ov [Overvoltage]</i> occurs when the drive stops accelerating, starts to decelerate, or when there are large changes in the load.                                  | n2-03 [Automatic Freq Regulator Time 2] | <ul style="list-style-type: none"> <li>If <i>ov</i> occurs, increase the setting value in 50 ms increments and examine the response.</li> <li>If the response is not sufficient, decrease the setting value in 10 ms increments and examine the response.</li> </ul> <p><b>Note:</b><br/>                     Make sure that this parameter setting is: <math>n2-02</math> [Automatic Freq Regulator Time 1] <math>\leq</math> <math>n2-03</math>. When you adjust <i>n2-03</i>, you must also increase the <i>C4-06 [Motor 2 Torque Comp Delay Time]</i> value by the same ratio.</p>   | 750 ms   | 750 ms to 2000 ms   |
|   | C4-06 [Motor 2 Torque Comp Delay Time]  | <ul style="list-style-type: none"> <li>If <i>ov</i> occurs, increase the setting value in 10 ms increments and examine the response.</li> <li>If the response is not sufficient, decrease the setting value in 2 ms increments and examine the response.</li> </ul> <p><b>Note:</b><br/>                     Make sure that this parameter setting is: <math>C4-02</math> [Torque Compensation Delay Time] <math>\leq</math> <math>C4-06</math>.<br/>                     When you adjust <i>C4-06</i>, you must also increase the <i>n2-03</i> [Automatic Freq Regulator Time 2] value by the same ratio.</p>                                       | 150 ms   | 150 ms to 750 ms    |
| <ul style="list-style-type: none"> <li>Unsatisfactory motor torque and speed response</li> <li>Hunting or oscillation</li> </ul>                                      | C4-02 [Torque Compensation Delay Time]  | <ul style="list-style-type: none"> <li>If torque or speed response are slow, decrease the setting value in 2 ms increments.</li> <li>If hunting or oscillation occur, increase the setting value in 10 ms increments.</li> </ul> <p><b>Note:</b><br/>                     Make sure that this parameter setting is: <math>C4-02 \leq C4-06</math> [Motor 2 Torque Comp Delay Time].<br/>                     When you adjust <i>C4-02</i>, you must also increase the <i>n2-02</i> [Automatic Freq Regulator Time 1] value by the same ratio.</p>  | 20 ms *I | 20 ms - 100 ms *I   |

## 4.11 Fine Tuning during Test Runs (Adjust the Control Function)

| Issue   | Parameter Number  | Possible Solutions  | Default   | Recommended Setting        |
|---|---|---|---|----------------------------|
| <ul style="list-style-type: none"> <li>Speed response is slow.</li> <li>Speed is not stable.</li> </ul>   | C3-02 [Slip Compensation Delay Time]  | <ul style="list-style-type: none"> <li>If speed response is slow, decrease the setting value in 10 ms increments.</li> <li>If speed is not stable, increase the value in 10 ms increments.</li> </ul>   | 200 ms *1   | 100 ms to 500 ms           |
| Speed precision is unsatisfactory.  | C3-01 [Slip Compensation Gain]  | <ul style="list-style-type: none"> <li>If speed is too slow, increase the setting value in 0.1 unit increments.</li> <li>If speed is too fast, decrease the setting value in 0.1 unit increments.</li> </ul>  | 1.0 *2  | 0.5 to 1.5                 |
| <ul style="list-style-type: none"> <li>The volume of the motor excitation sound is too high.</li> <li>Hunting or oscillation at low speeds (10 Hz or lower)</li> </ul>  | C6-02 [Carrier Frequency Selection]   | <ul style="list-style-type: none"> <li>If the volume of the motor excitation sound is too high, increase the carrier frequency.</li> <li>If hunting or oscillation occur at low speeds, decrease the carrier frequency.</li> </ul>  | 7 (Swing PWM1) *3   | 0 to upper limit value     |
| <ul style="list-style-type: none"> <li>Torque at low speeds (10 Hz or lower) is not sufficient. speed response is slow.</li> <li>Speed response is slow.</li> <li>Large initial vibration at start up.</li> </ul> | <ul style="list-style-type: none"> <li>E1-08 [Mid Point A Voltage]</li> <li>E1-10 [Minimum Output Voltage]</li> </ul> | <ul style="list-style-type: none"> <li>If torque or speed response are slow, increase the setting value.</li> <li>If there is large initial vibration at start up, decrease the setting value</li> </ul> <p><b>Note:</b><br/>If you set the value too high, the drive can output a large torque reference although the load is light.</p> | <ul style="list-style-type: none"> <li>E1-08: 12.0 V *2</li> <li>E1-10: 2.5 V *2</li> </ul> | Default setting +/- 2 V *4 |

- \*1 The default setting changes when the settings for A1-02 [Control Method Selection] and o2-04 [Drive Model (KVA) Selection] change.
- \*2 The default setting changes when the settings for A1-02 [Control Method Selection] and E1-03 [V/f Pattern Selection] change.
- \*3 The default setting changes when the settings for C6-01 [Normal / Heavy Duty Selection] and o2-04 change.
- \*4 Recommended settings are for 200 V class drives. Multiply the voltage by 2 for 400 V class drives.

### ◆ Open Loop Vector Control for PM Motors

Table 4.19 Parameters for Fine Tuning the Drive (A1-02 = 5 [OLV/PM])

| Issue   | Parameter Number  | Possible Solutions  | Default   | Recommended Setting   |
|---|---|---|---|---|
| Unsatisfactory motor performance  | E1-xx parameters, E5-xx parameters  | <ul style="list-style-type: none"> <li>Check the settings for E1-06, E1-04 [Base Frequency, Maximum Output Frequency].</li> <li>Check the E5-xx and make sure that you set all motor data correctly.</li> </ul> <p><b>Note:</b><br/>Do not set E5-05 [PM Motor Resistance (ohms/phase)] to a line-to-line resistance value.</p> <ul style="list-style-type: none"> <li>Do Auto-Tuning.</li> </ul> | -   | -   |
| Unsatisfactory motor torque and speed response  | n8-55 [Motor to Load Inertia Ratio]   | Adjust to align the load inertia ratio of the motor and machine.  | 0   | Near the load inertia ratio.  |
|   | n8-45 [Speed Feedback Detection Gain]   | Decrease the setting value in increments of 0.05.   | 0.80  | -   |
|   | C4-01 [Torque Compensation Gain]  | Adjust the setting value.<br><b>Note:</b><br>If you set this value too high, it can cause overcompensation and motor oscillation.   | 0.00  | 1.00  |
| <ul style="list-style-type: none"> <li>Oscillation when the motor starts.</li> <li>Motor stalls.</li> </ul> | n8-51 [Pull-in Current @ Accel/Decel]   | Increase the setting value in increments of 5%.   | 50%   | -   |
|   | <ul style="list-style-type: none"> <li>b2-02 [DC Injection Braking Current]</li> <li>b2-03 [DC Inject Braking Time at Start]</li> </ul> | Use DC Injection Braking at start.<br><b>Note:</b><br>This can cause the motor to rotate in reverse for approximately 1/8 of a turn at start.   | <ul style="list-style-type: none"> <li>b2-02: 50%</li> <li>b2-03: 0.00 s</li> </ul> | <ul style="list-style-type: none"> <li>b2-02: Adjust as necessary.</li> <li>b2-03: 0.5 s</li> </ul> |
|   | n8-55 [Motor to Load Inertia Ratio]   | Increase the setting value.<br><b>Note:</b><br>When you operate a single motor or with a minimum quantity of inertia, if you set this value too high, it can cause motor oscillation.   | 0   | Near the load inertia ratio.  |

## 4.11 Fine Tuning during Test Runs (Adjust the Control Function)

| Issue  | Parameter Number  | Possible Solutions  | Default  | Recommended Setting  |
|--|---|---|--|--|
| There is too much current during deceleration.   | n8-79 [Pull-in Current at Deceleration]   | Set $n8-79 < n8-51$ .   | 50%<br><b>Note:</b><br>When $n8-79 = 0$ , the drive will apply the $n8-51$ setting to the pull-in current during deceleration. | Decrease in increments of 5%.  |
| Stalling or oscillation occurs when you apply the load during constant speed                                   | n8-47 [Pull-in Current Comp Filter Time]  | Decrease the setting value in increments of 0.2 s.  | 5.0 s  | -  |
|  | n8-48 [Pull-in/Light Load Id Current]   | Increase the setting value in increments of 5%.   | 30%  | -  |
|  | n8-55 [Motor to Load Inertia Ratio]   | Increase the setting value.<br><b>Note:</b><br>When you operate a single motor or with a minimum quantity of inertia, if you set this value too high, it can cause motor oscillation.                           | 0  | Near the load inertia ratio.   |
| Hunting or oscillation   | n8-45 [Speed Feedback Detection Gain]   | Increase the setting value in increments of 0.05.   | 0.80   | -  |
| The drive detects <i>STPo</i> [Motor Step-Out Detected] fault when the load is not too high.                   | <ul style="list-style-type: none"> <li>E5-09 [PM Back-EMF Vpeak (mV/(rad/s))]</li> <li>E5-24 [PM Back-EMF L-L Vrms (mV/rpm)]</li> </ul> | <ul style="list-style-type: none"> <li>Adjust the setting value.</li> <li>Examine the motor code on the motor nameplate or the data sheet, then set correct values for <i>E5-09</i> or <i>E5-24</i>.</li> </ul> | *1   | <ul style="list-style-type: none"> <li>Yaskawa motor<br/>Set the motor code from the motor nameplate.</li> <li>Motor from another manufacturer<br/>Set the values from the test report.</li> </ul> |
| The drive detected stalling or <i>STPo</i> [Motor Step-Out Detected] at high speed and maximum output voltage. | n8-62 [Output Voltage Limit Level]  | Set to a value lower than the actual input voltage.   | <ul style="list-style-type: none"> <li>200.0 V</li> <li>400.0 V</li> </ul>   | -  |

\*1 The default setting changes when the settings for *E5-01* [Motor Code Selection] and *o2-04* [Drive Model (KVA) Selection] change.

## ◆ Advanced Open Loop Vector Control Method for PM Motors

Table 4.20 Parameters for Fine Tuning the Drive (A1-02 = 6 [AOLV/PM])

| Issue  | Parameter Number  | Possible Solutions  | Default | Recommended Setting            |
|--|---|---|---------|--------------------------------|
| <ul style="list-style-type: none"> <li>Unsatisfactory motor torque and speed response</li> <li>Hunting or oscillation</li> </ul> | <ul style="list-style-type: none"> <li>High speed<br/>C5-01 [ASR Proportional Gain 1]</li> <li>Low speed<br/>C5-03 [ASR Proportional Gain 2]</li> </ul> | <ul style="list-style-type: none"> <li>If torque or speed response are slow, increase the setting value in increments of 5.00.</li> <li>If hunting or oscillation occur, decrease the setting value.</li> </ul> | 10.00   | 5.00 to 30.00 *1               |
|  | <ul style="list-style-type: none"> <li>High speed<br/>C5-02 [ASR Integral Time 1]</li> <li>Low speed<br/>C5-04 [ASR Integral Time 2]</li> </ul>         | <ul style="list-style-type: none"> <li>If torque or speed response are slow, decrease the setting value.</li> <li>If hunting or oscillation occur, increase the setting value.</li> </ul>                       | 0.500 s | 0.300 s to 1.000 s *1          |
| The drive cannot find ASR proportional gain or integral time for low speed or high speed.  | C5-07 [ASR Gain Switchover Frequency]   | Change the ASR proportional gain and ASR integral time to conform to the output frequency.  | 0.0%    | 0.0% to maximum rotation speed |
| Hunting or oscillation   | C5-06 [ASR Delay Time]  | If the rigidity of the machine is unsatisfactory and vibration is possible, increase the setting value in increments of 0.010.  | 0.016 s | 0.016 s to 0.035 s *1          |
| Step-out   | E1-xx parameters, E5-xx parameters  | Refer to the motor nameplate or test report and set <i>E1-xx</i> or <i>E5-xx</i> correctly.   | -       | -                              |

\*1 The best values for a no-load operation are different than the best values for actual loading operation.

## ◆ EZ Open Loop Vector Control Method

Table 4.21 Parameters for Fine Tuning the Drive (A1-02 = 8[EZOLV])

| Issue  | Parameter Number  | Possible Solutions  | Default | Recommended Setting              |
|--|---|---|---------|----------------------------------|
| <ul style="list-style-type: none"> <li>Unsatisfactory motor torque and speed response</li> <li>Hunting or oscillation</li> </ul> | <ul style="list-style-type: none"> <li>High speed C5-01 [ASR Proportional Gain 1]</li> <li>Low speed C5-03 [ASR Proportional Gain 2]</li> </ul> | <ul style="list-style-type: none"> <li>If torque or speed response are slow, increase the setting value in increments of 5.00.</li> <li>If hunting or oscillation occur, decrease the setting value.</li> </ul> | 10.00   | 10.00 to 50.00 <sup>*1</sup>     |
|  | <ul style="list-style-type: none"> <li>High speed C5-02 [ASR Integral Time 1]</li> <li>Low speed C5-04 [ASR Integral Time 2]</li> </ul>         | <ul style="list-style-type: none"> <li>If torque or speed response are slow, decrease the setting value.</li> <li>If hunting or oscillation occur, increase the setting value.</li> </ul>                       | 0.500 s | 0.300 s to 1.000 s <sup>*1</sup> |
| The drive cannot find ASR proportional gain or integral time for low speed or high speed.  | C5-07 [ASR Gain Switchover Frequency]   | Change the ASR proportional gain and ASR integral time to conform to the output frequency.  | 0.0%    | 0.0% to maximum rotation speed   |
| Hunting or oscillation   | C5-06 [ASR Delay Time]  | If the rigidity of the machine is unsatisfactory and vibration is possible, increase the setting value in increments of 0.010.  | 0.004 s | 0.004 s to 0.020 s <sup>*1</sup> |
| Step-out   | E9-xx parameters  | Refer to the motor nameplate or test report and set E9-xx correctly.  | -       | -                                |
| Oscillation when the motor starts.   | n8-51 [Accel / Decel Pull-In Current]   | Increase the setting value.   | 80%     | Increase in increments of 5%.    |
| Motor stalls.  | L7-01 to L7-04 [Torque Limit]   | Increase the setting value.   | 200%    | Increase in increments of 10%.   |

\*1 The best values for a no-load operation are different than the best values for actual loading operation.

## 4.12 Test Run Checklist

Examine the items in this checklist and check each item before a test run.

| Checked | No. | Description  |
|---------|-----|--|
|         | 1   | Correctly install and wire the drive as specified by this manual.        |
|         | 2   | Energize the drive.  |
|         | 3   | Set the voltage for the power supply in E1-01 [Input AC Supply Voltage]. |

Check the applicable items as specified by your control method.

**WARNING! Sudden Movement Hazard.** Correctly wire the start/stop and safety circuits before you energize the drive. If you momentarily close a digital input terminal, it can start a drive that is programmed for 3-Wire control and cause serious injury or death from moving equipment.

**Table 4.22 V/f [A1-02 = 0]**

| Checked | No. | Description  |
|---------|-----|--|
|         | 4   | Select the best V/f pattern for your application and motor characteristics.<br>Example: For a motor with a rated frequency of 60 Hz, set E1-03 = 1 [V/f Pattern Selection = Const Trq, 60Hz base, 60Hz max] as a standard V/f pattern. |

**Table 4.23 OLV [A1-02 = 2]**

| Checked | No. | Description  |
|---------|-----|--|
|         | 5   | Decouple motor shafts and machines.  |
|         | 6   | Refer to the information on the motor nameplate and set this data correctly: <ul style="list-style-type: none"> <li>• Motor rated power (kW) to T1-02</li> <li>• Motor rated voltage (V) to T1-03</li> <li>• Motor rated current (A) to T1-04</li> <li>• Motor base frequency (Hz) to T1-05</li> <li>• Number of motor poles to T1-06</li> <li>• Motor base speed (min<sup>-1</sup>) to T1-07</li> </ul> |
|         | 7   | Do Rotational Auto-Tuning.   |

**Table 4.24 OLV/PM [A1-02 = 5]**

| Checked | No. | Description   |
|---------|-----|---|
|         | 8   | Set E5-01 to E5-24 [PM Motor Settings] according to manufacturer data, or do Rotational Auto-Tuning |

**Table 4.25 AOLV/PM [A1-02 = 6]**

| Checked | No. | Description   |
|---------|-----|---|
|         | 9   | Set E5-01 to E5-24 [PM Motor Settings] according to manufacturer data, or do Rotational Auto-Tuning |
|         | 10  | Set C5-01 [ASR Proportional Gain 1] and C5-02 [ASR Integral Time 1].                                |

| Checked | No. | Description  |
|---------|-----|--|
|         | 11  | Make sure that the keypad shows READY LED before you start to operate the motor.   |
|         | 12  | To give the Run command and frequency reference from the keypad, push <b>LO/RE</b> to set to LOCAL Mode (when in LOCAL Mode, the LO/RE LED illuminates).   |
|         | 13  | If the motor rotates in the opposite direction during test run, switch two of the motor cables (U/T1, V/T2, W/T3).   |
|         | 14  | Set Heavy Duty or Normal Duty Mode with C6-01 [Normal / Heavy Duty Selection] to conform to the load condition.  |
|         | 15  | Set E2-01 [Motor Rated Current (FLA)] and L1-01 [Motor Overload (oL1) Protection] correctly for motor thermal protection.  |
|         | 16  | Set the drive for REMOTE Mode when the control circuit terminals supply the Run command and frequency reference (in REMOTE Mode, the LO/RE LED turns OFF).   |
|         | 17  | When you use terminal A1 for the frequency reference: <ul style="list-style-type: none"> <li>• Set H3-01 = 0, 1 [Terminal A1 Signal Level Select = 0 to 10 V (Lower Limit at 0), 0 V to 10 V (Without Lower Limit)].</li> <li>• Set H3-02 = 0 [Terminal A1 Function Selection = Frequency Reference].</li> </ul> |



| Checked | No. | Description   |
|---------|-----|---|
|         | 18  | <p>When you use terminal A2 for the frequency reference:</p> <ul style="list-style-type: none"> <li>• Voltage input <ul style="list-style-type: none"> <li>– Set DIP Switch S1 on the drive to “V”.</li> <li>– Set H3-09 = 0, 1 [Terminal A2 Signal Level Select = 0-10V (LowLim=0), 0-10V (Without Lower Limit)].</li> <li>– Set H3-10 = 0 [Terminal A2 Function Selection = Frequency Reference].</li> </ul> </li> <li>• Current input <ul style="list-style-type: none"> <li>– Set DIP Switch S1 on the drive to “I”.</li> <li>– Set H3-09 = 2, 3 [Terminal A2 Signal Level Select = 4 to 20 mA, 0 to 20 mA].</li> <li>– Set H3-10 = 0 [Terminal A2 Function Selection = Frequency Reference].</li> </ul> </li> </ul>  |
|         | 19  | <p>Make sure that the frequency reference gets to the necessary minimum and maximum values.<br/>If drive operation is incorrect, make these adjustments:</p> <ul style="list-style-type: none"> <li>• Gain Adjustment<br/>Set the maximum voltage and current values, then adjust the analog input gain until the frequency reference is at the necessary value. <ul style="list-style-type: none"> <li>– For terminal A1 input: H3-03</li> <li>– For terminal A2 input: H3-11</li> </ul> </li> <li>• Bias adjustment<br/>Set the maximum voltage and current values, then adjust the analog input gain until the frequency reference is at the necessary value. <ul style="list-style-type: none"> <li>– For terminal A1 input: H3-04</li> <li>– For terminal A2 input: H3-12</li> </ul> </li> </ul> |



# Standards Compliance

---

This chapter gives information about how to make the machines and devices that use this product comply with European standards and UL standards.

|            |                                    |            |
|------------|------------------------------------|------------|
| <b>5.1</b> | <b>Section Safety .....</b>        | <b>148</b> |
| <b>5.2</b> | <b>European Standards.....</b>     | <b>150</b> |
| <b>5.3</b> | <b>UL Standards.....</b>           | <b>176</b> |
| <b>5.4</b> | <b>China RoHS Compliance .....</b> | <b>194</b> |
| <b>5.5</b> | <b>对应中国RoHS指令 .....</b>            | <b>195</b> |
| <b>5.6</b> | <b>Safe Disable Input .....</b>    | <b>196</b> |

## 5.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### WARNING

#### Electrical Shock Hazard

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Always ground the motor-side grounding terminal.**

If you do not ground the equipment correctly, it can cause serious injury or death if you touch the motor case.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

#### Fire Hazard

**Tighten all terminal screws to the correct tightening torque.**

Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**Tighten screws at an angle in the specified range shown in this manual.**

If you tighten the screws at an angle not in the specified range, you can have loose connections that can cause damage to the terminal block or start a fire and cause serious injury or death.

#### Damage to Equipment

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

#### Fire Hazard

**Do not put flammable or combustible materials on top of the drive and do not install the drive near flammable or combustible materials. Attach the drive to metal or other noncombustible material.**

Flammable and combustible materials can start a fire and cause serious injury or death.

**⚠ WARNING****Crush Hazard**

**Wear eye protection when you do work on the drive.**

If you do not use correct safety equipment, it can cause serious injury or death.

**Electrical Shock Hazard**

**After the drive blows a fuse or trips an RCM/RCD, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices.**

If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

**NOTICE****Damage to Equipment**

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Do not break the electrical connection between the drive and the motor when the drive is outputting voltage.**

Incorrect equipment sequencing can cause damage to the drive.

**Before you connect a dynamic braking option to the drive, make sure that qualified personnel read and obey the Braking Unit and Braking Resistor Unit Installation Manual (TOBPC72060001).**

If you do not read and obey the manual or if personnel are not qualified, it can cause damage to the drive and braking circuit.

**Make sure that all connections are correct after you install the drive and connect peripheral devices.**

Incorrect connections can cause damage to the drive.

**Note:**

Do not use unshielded cable for control wiring. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Unshielded wire can cause electrical interference and unsatisfactory system performance.

## 5.2 European Standards



**Figure 5.1 CE Mark**

The CE Mark identifies that the product meets environmental and safety standards in the European Union. Products manufactured, sold, or imported in the European Union must display the CE Mark.

European Union standards include standards for electrical appliances (Low Voltage Directive), standards for electrical noise (EMC Directive), and standards for machinery (Machinery Directive).

This product displays the CE Mark in accordance with the Low Voltage Directive, the EMC Directive, and the Machinery Directive.

**Table 5.1 Harmonized Standards**

| European Directive                                | Harmonized Standard   |
|---|---|
| CE Low Voltage Directive Compliance<br>2014/35/EU | EN 61800-5-1:2007   |
| EMC Directive<br>2014/30/EU                       | EN 61800-3:2004/A1:2012   |
| Machinery Directive<br>2006/42/EC                 | <ul style="list-style-type: none"> <li>• EN ISO 13849-1:2015 (PL e (Cat.III))</li> <li>• EN 62061:2005/A2:2015 (SILCL3)</li> <li>• EN 61800-5-2:2007</li> </ul> |

The customer must display the CE Mark on the final device containing this product. Customers must verify that the final device complies with EU standards.

## ◆ EU Declaration of Conformity

### EU Declaration of Conformity

Original

**YASKAWA**

Ref.No. VKOHIN-S1902-01

YASKAWA ELECTRIC CORPORATION  
2-13-1 Nishimiyaichi Yukuhashi City  
Fukuoka Pref., 824-8511 Japan

declares under sole responsibility conformity of the following products

GA500 Series AC Drive

Model: CIPR-GA50                     

Directive of the European Parliament and Council:

Low Voltage Directive (LVD) : 2014/35/EU

Electromagnetic Compatibility Directive (EMC) : 2014/30/EU

Machine Directive (MD) : 2006/42/EC

Restriction of the use of certain hazardous substances (RoHS) : 2011/65/EU

Applied harmonized Standards:

EN 61800-5-1:2007  
EN 61800-3:2004/A1:2012  
EN ISO 13849-1:2015 (Cat.3, PL e)  
EN 62061:2005/A2:2015 (SILCL3)  
EN 61800-5-2:2007 (SIL3)  
EN 50581:2012

Place / Date  
YASKAWA ELECTRIC CORPORATION  
2-13-1 Nishimiyaichi Yukuhashi City  
Fukuoka Pref., 824-8511 Japan

14<sup>th</sup>. Mar. 2019

陣内信朗

Drives Division  
General Manager

Nobuaki Jinnouchi

**EU Declaration of Conformity**

Translation – German | French | Italian | Spanish | Portuguese

**YASKAWA**

Ref.No. VKOHIN-S1902-01

EG-Konformitätserklärung | Déclaration de conformité CE  
 Dichiarazione di conformità CE | Declaración de Conformidad de la CE  
 Declaração de Conformidade CE

**YASKAWA ELECTRIC CORPORATION**  
 2-13-1 Nishimiyaichi Yukuhashi City  
 Fukuoka Pref., 824-8511 Japan

**declares under sole responsibility conformity of the following products**

erklärt in alleiniger Verantwortung die Konformität für folgende Produkte  
 déclare, sous sa seule responsabilité, que les produits  
 dichiara sotto la propria esclusiva responsabilità la conformità dei seguenti prodotti  
 bajo su exclusiva responsabilidad la conformidad para los siguientes productos  
 declara, sob a sua exclusiva responsabilidade, a conformidade dos seguintes produtos

GA500 Series AC Drive

Model: CIPR-GA50 □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □

**Directive of the European Parliament and Council**

Richtlinie des Europäischen Parlamentes und Rates / Directive du Parlement européen et du Conseil  
 Direttiva del Parlamento europeo e del Consiglio / Directiva del Parlamento Europeo y del Consejo /  
 Diretiva do Parlamento Europeu e do Conselho

**Low Voltage Directive (LVD)**

Niederspannungsrichtlinie / Directive Basse Tension  
 Direttiva sulla bassa tensione / Directiva de Baja Tensión / Diretiva "Baixa Tensão"

: 2014/35/EU

**Electromagnetic Compatibility Directive (EMC)**

EMV-Richtlinie / Directive CEM  
 Direttiva EMC / Directiva sobre Compatibilidad Electromagnética / Diretiva CEM

: 2014/30/EU

**Machine Directive (MD)**

Maschinenrichtlinie / Directive machines  
 Direttiva Macchine / Directiva de Máquinas / Directiva de máquinas

: 2006/42/EC

**Restriction of the use of certain Hazardous Substances (RoHS)**

Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten.  
 Relative à la limitation de l'utilisation de certaines substances dangereuses dans les équipements électriques et électroniques.  
 Sulla restrizione dell'uso di determinate sostanze pericolose nelle apparecchiature elettriche ed elettroniche.  
 Sobre restricciones a la utilización de determinadas sustancias peligrosas en aparatos eléctricos y electrónicos.  
 Relativa à restrição do uso de determinadas substâncias perigosas em equipamentos elétricos e eletrônicos.

: 2011/65/EU

**Applied harmonized Standards:**

|                          |                                   |
|--------------------------|-----------------------------------|
| EN 61800-5-1:2007        | EN ISO 13849-1:2015 (Cat.3, PL e) |
| EN 61800-3:2004/A1:2012  | EN 62061:2005/A2:2015 (SILCL3)    |
| EN 61800-5-2:2007 (SIL3) | EN 50581:2012                     |

**Place / Date**

Ort, Datum / Lieu et date / Luogo, data / Lugar, Fecha / Local, data

**YASKAWA ELECTRIC CORPORATION**  
 2-13-1 Nishimiyaichi Yukuhashi City  
 Fukuoka Pref., 824-8511 Japan

14<sup>th</sup>. Mar. 2019

陣内信郎

Drives Division  
 General Manager

Nobuaki Jinnouchi



## EU Declaration of Conformity

Translation – Dutch | Irish | Greek | Bulgarian | Romanian

# YASKAWA

Ref.No. VKOHIN-S1902-01

EG-conformiteitsverklaring | Dearbhú Comhréachta AE  
Δήλωση Συμμόρφωσης ΕΚ | ΕΟ-Декларация за съответствие  
Declarație de conformitate CE

### YASKAWA ELECTRIC CORPORATION

2-13-1 Nishimiyaichi Yukuhashi City  
Fukuoka Pref., 824-8511 Japan

#### declares under sole responsibility conformity of the following products

verklaart onder eigen verantwoordelijkheid de conformiteit van de volgende producten  
a dhearbhaíonn faoi fhreagracht aonair comhréachta na dtáirgí seo a leanas  
επιβεβαιώνει, με αποκλειστική του ευθύνη, τη συμμόρφωση των ακόλουθων προϊόντων  
декларира на собствена отговорност съответствието на следния продукт  
declară pe răspunderea sa exclusivă conformitatea următoarelor produse

GA500 Series AC Drive

Model: CIPR-GA50 □

#### Directive of the European Parliament and Council

Richtlijn van het Europees Parlement en de Europese Raad  
Treoir ó Pharlaimint na hEorpa agus ón gComhairle / Οδηγία του Ευρωπαϊκού Κοινοβουλίου και του Συμβουλίου  
Директива на Европейския парламент и Съвета / Directiva Parlamentului European și a Consiliului

#### Low Voltage Directive (LVD)

: 2014/35/EU

Laagspanningsrichtlijn / Treoir maidir le hÍsealvoltas  
Οδηγία για τη χαμηλή τάση / Директивата за ниско напрежение  
Directive voltaj scăzut

#### Electromagnetic Compatibility Directive (EMC)

: 2014/30/EU

EMC-richtlijn / Treoir maidir le Comhoiriúnacht Leictreamaighnéadach  
Οδηγία ηλεκτρομαγνητικής συμβατότητας (EMC) / Директива за електромагнитна съвместимост  
Directive CEM

#### Machine Directive (MD)

: 2006/42/EC

Machinerichtlijn / Treoir maidir le hinnill (MD)  
Οδηγία για τα μηχανήματα / Директива Машини (ДМ) / Directive mașinării

#### A Restriction of the use of certain hazardous substances (RoHS)

: 2011/65/EU

Betreffende beperking van het gebruik van bepaalde gevaarlijke stoffen in elektrische en elektronische apparatuur.  
για τον περιορισμό της χρήσης ορισμένων επικίνδυνων ουσιών σε ηλεκτρικό και ηλεκτρονικό εξοπλισμό.  
относно ограничението за употребата на определени опасни вещества в електрическото и електронното оборудване.  
Prinvid restricțiile de utilizare a anumitor substanțe periculoase în echipamentele electrice și electronice.

#### Applied harmonized Standards:

|                          |                                   |
|--------------------------|-----------------------------------|
| EN 61800-5-1:2007        | EN ISO 13849-1:2015 (Cat.3, PL e) |
| EN 61800-3:2004/A1:2012  | EN 62061:2005/A2:2015 (SILCL3)    |
| EN 61800-5-2:2007 (SIL3) | EN 50581:2012                     |

#### Place / Date

Plaats, Datum / Áit, Dáta / Τόπος, ημερομηνία / Място, Дата / Locul, data

#### YASKAWA ELECTRIC CORPORATION

2-13-1 Nishimiyaichi Yukuhashi City  
Fukuoka Pref., 824-8511 Japan

14<sup>th</sup>. Mar. 2019

陣内 信朗

Drives Division  
General Manager

Nobuaki Jinnouchi

**EU Declaration of Conformity**

Translation – Polish | Lithuanian | Czech | Slovak | Hungarian

**YASKAWA**

Ref.No. VKOHIN-S1902-01

Deklaracja zgodności WE | EB atitikties deklaracija  
 ES Prohlášení o shodě | Vyhlášení o zhode ES  
 EK megfeleléségi nyilatkozat

**YASKAWA ELECTRIC CORPORATION**

2-13-1 Nishimiyachi Yukuhashi City  
 Fukuoka Pref., 824-8511 Japan

**declares under sole responsibility conformity of the following products**

oświadcza z wyłączną odpowiedzialnością, że niżej wymienione wyroby są zgodne z odpowiednimi przepisami unijnymi  
 prisiŕmdama atsakomybę patvirtina toliau nurodytų gaminių atitikti  
 Prohlašuje na svou výhradní odpovědnost shodu níže uvedených výrobků  
 potvrdzuje výlučnú zodpovednosť za zhodu pre nasledujúce výrobky  
 saját kizárólagos felelősségére kijelenti, hogy a következı termékek megfelelenek az alábbiakban megfogalmazott követelményeknek

GA500 Series AC Drive

Model: CIPR-GA50         -       **Directive of the European Parliament and Council**

Dyrektywa Parlamentu Europejskiego i Rady / Europos Parlamento ir Tarybos direktyva  
 Směrnice Evropského parlamentu a Rady / Smernice Európskeho parlamentu a Rady  
 Az Európai Parlament és az Európai Tanács irányelve

**Low Voltage Directive (LVD)**

: 2014/35/EU

Dyrektywa dot. niskich napięć / Žemos įtampos direktyva  
 Směrnice o zařizeních nízkého napětí / Smernica o nízkom napätí  
 Kisfeszültségről szóló irányelv

**Electromagnetic Compatibility Directive (EMC)**

: 2014/30/EU

Dyrektywa EMC / EMS direktyva / Směrnice o elektromagnetické kompatibilitě  
 Smernica EMC / Elektromágneses összeférhetőségről szóló irányelv

**Machine Directive (MD)**

: 2006/42/EC

Dyrektywa w sprawie maszyn / Direktyva dėl mašinų  
 Směrnice o strojních zařizeních / Smernica o strojových zariadeniach / Gépekről szóló irányelv

**Restriction of the use of certain hazardous substances (RoHS)**

: 2011/65/EU

W sprawie ograniczenia stosowania niektórych niebezpiecznych substancji w sprzęcie elektrycznym i elektronicznym.  
 Dėl tam tikrų pavojingų medžiagų naudojimo elektros ir elektroninėje įrangoje apribojimo.  
 O omezení používání některých nebezpečných látek v elektrických a elektronických zařizeních.  
 O obmedzení používania určitých nebezpečných látok v elektrických a elektronických zariadeniach.  
 Egyes veszélyes anyagok elektromos és elektronikus berendezésekben való alkalmazásának korlátozásáról.

**Applied harmonized Standards:**

|                          |                                   |
|--------------------------|-----------------------------------|
| EN 61800-5-1:2007        | EN ISO 13849-1:2015 (Cat.3, PL e) |
| EN 61800-3:2004/A1:2012  | EN 62061:2005/A2:2015 (SILCL3)    |
| EN 61800-5-2:2007 (SIL3) | EN 50581:2012                     |

**Place / Date**

Miejscowość, data / Vieta, data / Misto, datum / Miesto, dátum / Hely, dátum

**YASKAWA ELECTRIC CORPORATION**

2-13-1 Nishimiyachi Yukuhashi City  
 Fukuoka Pref., 824-8511 Japan

14<sup>th</sup>. Mar. 2019

陣内 信朗

Drives Division  
 General Manager

Nobuaki Jinnouchi

**EU Declaration of Conformity**

Translation - Danish | Swedish | Finnish | Latvian | Estonian

**YASKAWA**

Ref.No. VKOHIN-S1902-01

EF-overensstemmelseserklæring | EG-försäkran om överensstämmelse  
 EY-vaatimustenmukaisuusvakuutus | EK atbilstības deklarācija  
 EÜ vastavusdeklaratsioon

**YASKAWA ELECTRIC CORPORATION**

2-13-1 Nishimiyaichi Yukuhashi City  
 Fukuoka Pref., 824-8511 Japan

**declares under sole responsibility conformity of the following products**

erklærer som eneste ansvarlig overensstemmelsen for følgende produkter  
 försäkrar på eget ansvar att följande produkter uppfyller kraven på överensstämmelse  
 vakuuttaa yksinomaisella vastuullaan seuraavien tuotteiden vaatimustenmukaisuuden  
 uz savu atbildību paziņo par tālāk minēto izstrādājumu atbilstību  
 deklareerib ainuvastutusel järgmistele toodete vastavust

GA500 Series AC Drive

Model: CIPR-GA50 □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □

**Directive of the European Parliament and Council**

Europa-Parlamentets og Rådets direktiv / EU-direktiv / Euroopan parlamentin ja neuvoston direktiivi  
 Euroopa Parlamendi ja Nõukogu direktiiv

**Low Voltage Directive (LVD)**

: 2014/35/EU

Lavspændingsdirektivet / Lågspänningsdirektivet / Pienjännitedirektiivi  
 Zemsprieguma direktīva / Madalpingedirektiiv

**Electromagnetic Compatibility Directive (EMC)**

: 2014/30/EU

EMC-direktivet / EMC-direktivet / EMC-direktiivi  
 EMS direktīva / Elektromagnētiskās ūhilduvuse direktiiv

**Machine Directive (MD)**

: 2006/42/EC

Maskindirektivet / Maskindirektivet / Konedirektiivi  
 Mašīnu direktīva / Masinadirektiiv

**Restriction of the use of certain hazardous substances (RoHS)**

: 2011/65/EU

Om begrænsning af anvendelsen af visse farlige stoffer i elektrisk og elektronisk udstyr.  
 Om begrænsning av användning av vissa farliga ämnen i elektrisk och elektronisk utrustning.  
 Tiettyjen vaarallisten aineiden käytön rajoittamisesta sähkö- ja elektroniikkalaitteissa.  
 Par dažu bīstamu vielu izmantošanas ierobežošanu elektriskās un elektroniskās iekārtās.  
 Dēļ tam tikrų pavojingų medžiagų naudojimo elektros ir elektroninėje įrangoje apribojimo.

**Applied harmonized Standards:**

|                          |                                   |
|--------------------------|-----------------------------------|
| EN 61800-5-1:2007        | EN ISO 13849-1:2015 (Cat.3, PL e) |
| EN 61800-3:2004/A1:2012  | EN 62061:2005/A2:2015 (SILCL3)    |
| EN 61800-5-2:2007 (SIL3) | EN 50581:2012                     |

**Place / Date**

By, dato / Ort och datum / Paikka, pvm / Vieta, datums / Koht, kuupäev

**YASKAWA ELECTRIC CORPORATION**

2-13-1 Nishimiyaichi Yukuhashi City  
 Fukuoka Pref., 824-8511 Japan

14<sup>th</sup>. Mar. 2019

陣内 信朗

Drives Division  
 General Manager

Nobuaki Jinnouchi

**EU Declaration of Conformity**

Translation - Croatian | Slovene | Maltese

**YASKAWA**

Ref.No. VKOHIN-S1902-01

EZ Izjava o sukladnosti | Deklaracija o skladnosti ES  
Dikjarazzjoni tal-KE dwar il-KonformitàYASKAWA ELECTRIC CORPORATION  
2-13-1 Nishimiyaichi Yukuhashi City  
Fukuoka Pref., 824-8511 Japan**declares under sole responsibility conformity of the following products**pod isključivom odgovornošću izjavljuje sukladnost sljedećih proizvoda  
na lastno odgovornost potrjuje skladnost naslednjih izdelkov  
tiddkjara taht ir-responsabbiltà unika taghha l-konformità tal-prodotti li gėjjin

GA500 Series AC Drive

Model: CIPR-GA50 □ □ □ □ □ □ □ □ □ □ □ □ □ □ □ □

**Directive of the European Parliament and Council**Direktiva Evropskog parlamenta i Vijeća / Direktiva Evropskega parlamenta in Sveta  
Eiropas Parlamenta un Padomes Direktiva / Euroopa Parlamendi ja nõukogu direktiv  
Direttiva tal-Parlament Ewropew u tal-Kunsill**Low Voltage Directive (LVD)**Direktiva o niskom naponu / Niskonapetostna direktiva  
Direttiva dwar il-Voltagg Baxx

: 2014/35/EU

**Electromagnetic Compatibility Directive (EMC)**Direktiva o elektromagnetskoj kompatibilnosti (EMC) / EMC direktiva  
Direttiva dwar l-EMC

: 2014/30/EU

**Machine Directive (MD)**Direktiva o strojevima / Direktiva o strojih  
Direttiva dwar il-Makkinarju (MD)

: 2006/42/EC

**Restriction of the use of certain hazardous substances (RoHS)**O ograničenju uporabe određenih opasnih tvari u električnoj i elektroničkoj opremi.  
O omejevanju uporabe nekaterih nevarnih snovi v električni in elektronski opremi.  
Dwar ir-restrizzjoni tal-użu ta' čerti sustanzi perikoluži fit-taghmir elettriku u elektroniku.

: 2011/65/EU

**Applied harmonized Standards:**

|                          |                                   |
|--------------------------|-----------------------------------|
| EN 61800-5-1:2007        | EN ISO 13849-1:2015 (Cat.3, PL e) |
| EN 61800-3:2004/A1:2012  | EN 62061:2005/A2:2015 (SILCL3)    |
| EN 61800-5-2:2007 (SIL3) | EN 50581:2012                     |

**Place / Date**

Mjesto, datum / Kraj, datum / Post, Data

**YASKAWA ELECTRIC CORPORATION**

2-13-1 Nishimiyaichi Yukuhashi City

Fukuoka Pref., 824-8511 Japan

14<sup>th</sup>. Mar. 2019Drives Division  
General Manager

陣内 信朗

Nobuaki Jinnouchi

**◆ CE Low Voltage Directive Compliance**

It has been confirmed that this product complies with the CE Low Voltage Directive by conducting a test according to EN 61800-5-1:2007.

The following conditions must be satisfied for machines and devices incorporating this product to comply with the CE Low Voltage Directive.

**■ Area of Use**

Install this product in a location with Overvoltage Category III and pollution degree 2 or less as specified in IEC/CE 60664.

### Guarding Against Debris

When you install IP20/UL Open type drives, use an enclosure that does not let unwanted material enter the drive from above or below.

### Wiring Diagram

Refer to Figure 5.2 for an example of a drive that is wired to comply with the CE Low Voltage Directive.

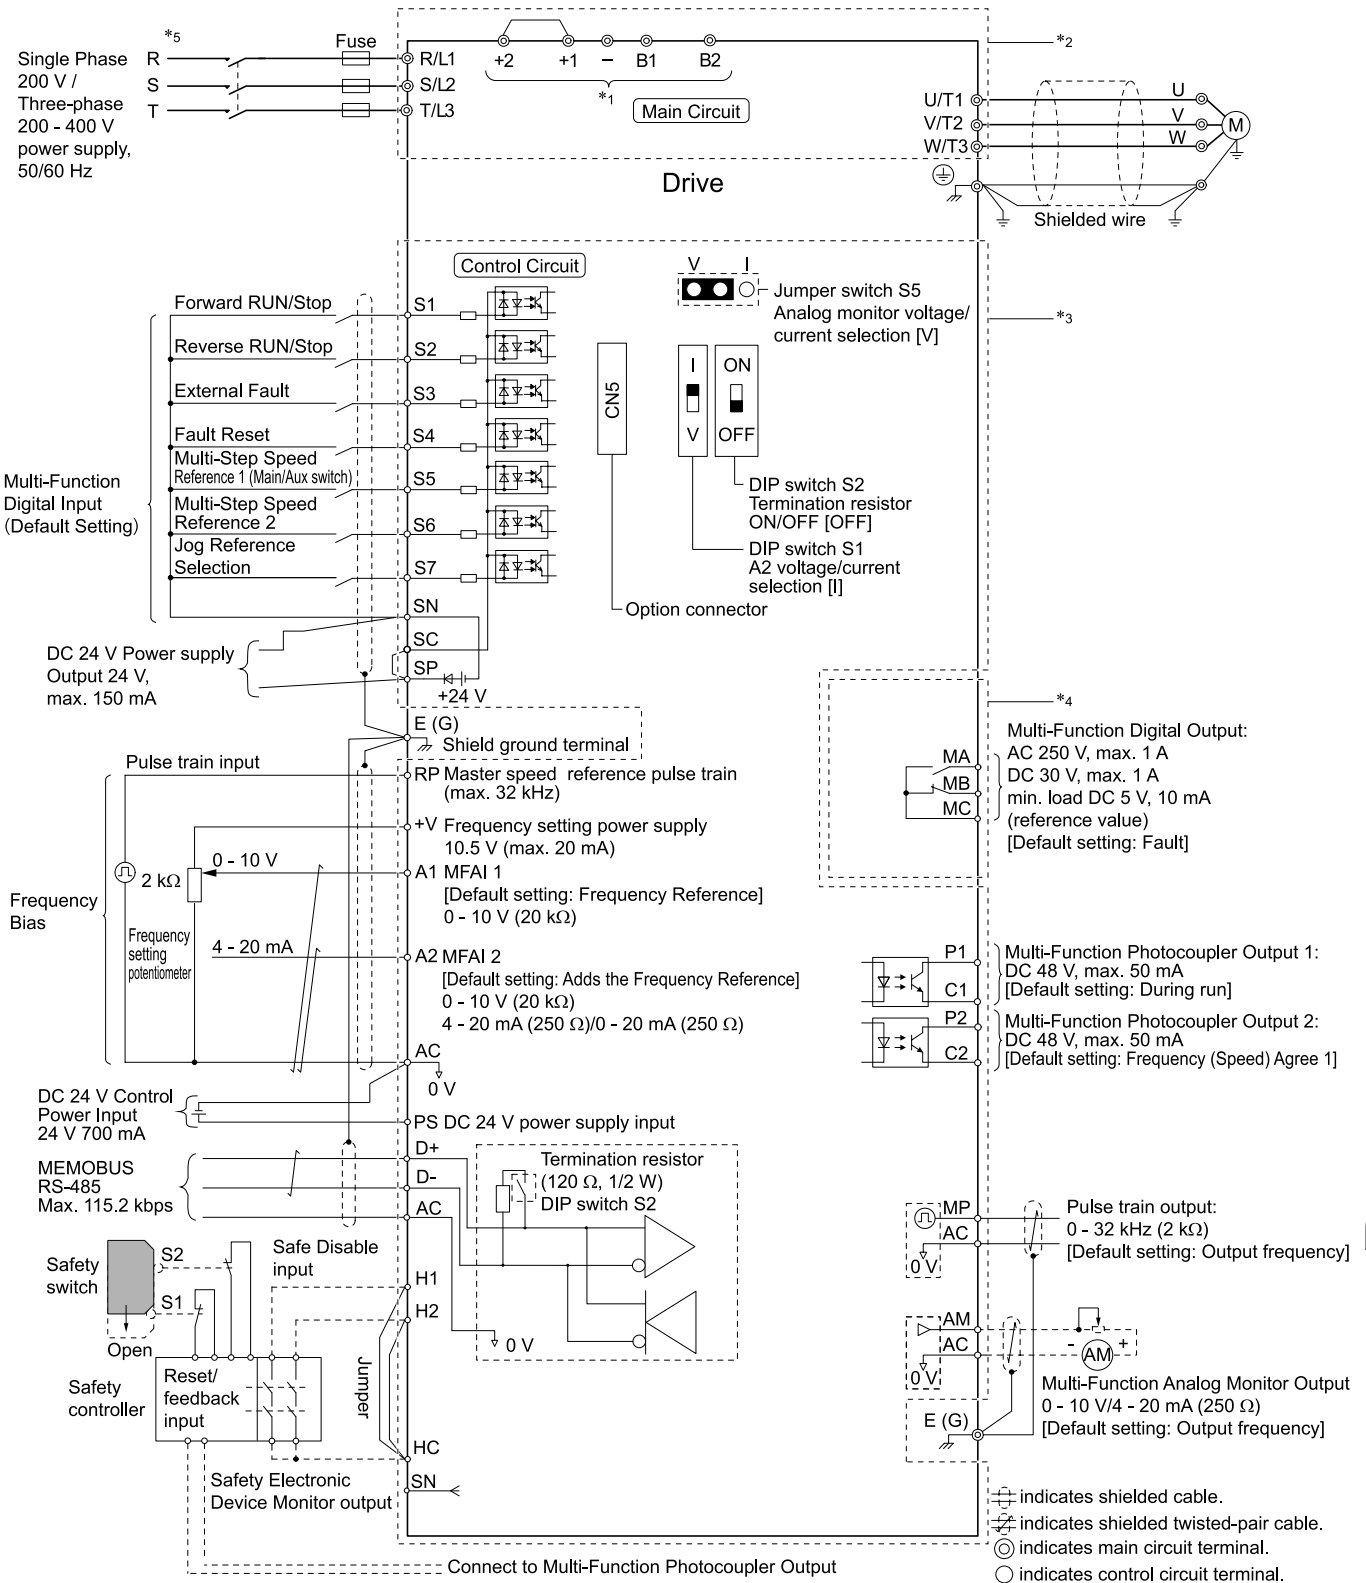


Figure 5.2 Wiring Diagram for CE Low Voltage Directive Compliance

## 5.2 European Standards

\*1 Use terminals B1, B2, -, +1, and +2 to connect options to the drive.

**WARNING! Fire Hazard.** Only connect factory-recommended devices or circuits to drive terminals B1, B2, -, +1, and +2. Do not connect an AC power supply lines to these terminals. Incorrect wiring can cause damage to the drive and serious injury or death from fire.

\*2 For circuit protection, the main circuit is separated from the surface case that can touch the main circuit.

\*3 The control circuit is a Safety Extra-Low Voltage circuit. Separate this circuit from other circuits with reinforced insulation. Make sure that the Safety Extra-Low Voltage circuit is connected as specified.

\*4 Reinforced insulation separates the output terminals from other circuits. Users can also connect circuits that are not Safety Extra-Low Voltage circuits if the drive output is 250 Vac 1 A maximum or 30 Vdc 1 A maximum.

\*5 Set L8-05 = 1 [Output Phase Loss Protect Select = Enabled] or set the wiring sequence to prevent input phase loss.

### ■ Main Circuit Wire Gauges and Tightening Torques

**WARNING! Electrical Shock Hazard.** Make sure that the protective ground wire complies with technical standards and local safety regulations. The EN 61800-5-1: 2007 standard specifies that users must wire the power supply to automatically turn off when the protective ground wire disconnects. If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. You can also connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire). If you do not obey the standards and regulations, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** Only connect factory-recommended devices or circuits to drive terminals B1, B2, -, +1, and +2. Do not connect AC power to these terminals. Incorrect wiring can cause damage to the drive and serious injury or death from fire.

#### Note:

- The recommended wire gauges are based on drive continuous current ratings with 75 °C (167 °F) 600 V class 2 heat-resistant indoor PVC wire. Assume these conditions:
  - Ambient temperature: 40 °C (104 °F) maximum
  - Wiring distance: 100 m (3281 ft) maximum
  - Normal Duty rated current value
- Refer to the instruction manual for each device for recommended wire gauges to connect peripheral devices or options to terminals +1, +2, -, B1, and B2. Contact Yaskawa or your nearest sales representative if the recommended wire gauges for the peripheral devices or options are out of the range of the applicable gauges for the drive.

### Wire Selection Precautions

Think about line voltage drop before selecting wire gauges. Select wire gauges that drop the voltage by 2% or less of the rated voltage. Increase the wire gauge and the cable length when the risk of voltage drops increases.

Calculate line voltage drop with this formula:

$$\text{Line voltage drop (V)} = \sqrt{3} \times \text{wire resistance } (\Omega/\text{km}) \times \text{wiring distance (m)} \times \text{motor rated current (A)} \times 10^{-3}$$

### Precautions during Wiring




- Refer to “Yaskawa AC Drive Option Braking Unit, Braking Resistor Unit Instruction Manual (TOBPC72060001)” for information about wire gauges and tightening torques to connect braking resistor units.
- Use terminals +1 and - to connect a regenerative converter or regenerative unit.

**WARNING! Fire Hazard.** Do not connect a braking resistor to terminals +1 or -. Use terminals B1 and B2 for the braking resistor connections. If you connect a braking resistor to the incorrect terminals, it can cause damage to the drive and braking circuit and serious injury or death.

### Screw Shape

These tables use icons in [Table 5.2](#) to show the shapes of the screw heads.

**Table 5.2 Icons to Identify Screw Shapes**

| Icon  | Screw Shape                |
|---|----------------------------|
|  | +/-                        |
|  | Slotted (-)                |
|  | Hex socket cap (WAF: 5 mm) |

## Single-Phase 200 V Class

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|--------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                | Size           | Shape |                                  |
| B001  | L/L1, N/L2       | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 *2                              | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B002  | L/L1, N/L2       | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 *2                              | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B004  | L/L1, N/L2       | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 *2                              | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B006  | L/L1, N/L2       | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| B010  | L/L1, N/L2       | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                              | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

## 5.2 European Standards

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length <sup>*1</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|---|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |   | Size           | Shape |                                  |
| B012  | L/L1, N/L2       | 4                                | 2.5 - 6                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1            | 4                                | 2.5 - 6                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -   | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| B018  | L/L1, N/L2       | 6                                | 2.5 - 10                            | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1            | 6                                | 2.5 - 10                            | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 6 *2                             | 4 - 10 *2                           | -   | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### Three-Phase 200 V Class

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|-----------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                             | Size           | Shape |                                  |
| 2001  | R/L1, S/L2, T/L3 | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5                              | 2.5                                 | -                           | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2002  | R/L1, S/L2, T/L3 | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                         | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5                              | 2.5                                 | -                           | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |



| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire<br>Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                   | Size           | Shape |                                  |
| 2004  | R/L1, S/L2, T/L3 | 2.5                              | 2.5                                 | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5                                 | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5                                 | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5                                 | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5                              | 2.5                                 | -                                 | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2006  | R/L1, S/L2, T/L3 | 2                                | 2.5 - 2.5                           | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2                                | 2.5 - 2.5                           | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2                                | 2.5 - 2.5                           | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2                                | 2.5 - 2.5                           | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2                                | 2.5 - 2.5                           | -                                 | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2008  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4                                | 2.5 - 6                             | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2010  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4                                | 2.5 - 6                             | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2012  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4                                | 2.5 - 6                             | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

## 5.2 European Standards

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb)   |
|-------|------------------|----------------------------------|-------------------------------------|-----------------------------|----------------|-------|--|
|       |                  |                                  |                                     |                             | Size           | Shape |  |
| 2018  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | -, +1, +2        | 4                                | 2.5 - 6                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 6                                | 2.5 - 6                             | -                           | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)   |
| 2021  | R/L1, S/L2, T/L3 | 4                                | 2.5 - 6                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | -, +1, +2        | 6                                | 4 - 10                              | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 6                                | 2.5 - 6                             | -                           | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)   |
| 2030  | R/L1, S/L2, T/L3 | 6                                | 4 - 10                              | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | U/T1, V/T2, W/T3 | 6                                | 4 - 10                              | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | -, +1, +2        | 10                               | 2.5 - 16                            | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 6                                | 6 - 16                              | -                           | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)   |
| 2042  | R/L1, S/L2, T/L3 | 10                               | 2.5 - 16                            | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | U/T1, V/T2, W/T3 | 10                               | 2.5 - 16                            | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | -, +1, +2        | 16                               | 4 - 25                              | 18                          | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | B1, B2           | 4                                | 2.5 - 6                             | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 6 - 16                              | -                           | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)   |
| 2056  | R/L1, S/L2, T/L3 | 16                               | 4 - 25                              | 18                          | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | U/T1, V/T2, W/T3 | 16                               | 4 - 25                              | 18                          | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | -, +1, +2        | 25                               | 6 - 35                              | 18                          | M5             | ⊖     | • ≤ 25 mm <sup>2</sup><br>2.3 - 2.5<br>(19.8 - 22)<br>• 35 mm <sup>2</sup> ≤<br>4.1 - 4.5<br>(36 - 40) |
|       | B1, B2           | 10                               | 4 - 16                              | 10                          | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 10 - 25                             | -                           | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|--------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                | Size           | Shape |                                  |
| 2070  | R/L1, S/L2, T/L3 | 25                               | 6 - 35                              | 20                             | M6             | ⊕     | 5 - 5.5<br>(45 - 49)             |
|       | U/T1, V/T2, W/T3 | 16                               | 6 - 25                              | 20                             | M6             | ⊕     | 5 - 5.5<br>(45 - 49)             |
|       | -, +1, +2        | 35                               | 10 - 50                             | 20                             | M6             | ⊕     | 5 - 5.5<br>(45 - 49)             |
|       | B1, B2           | 10                               | 4 - 16                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 16                               | 10 - 25                             | -                              | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |
| 2082  | R/L1, S/L2, T/L3 | 35                               | 10 - 50                             | 20                             | M6             | ⊕     | 5 - 5.5<br>(45 - 49)             |
|       | U/T1, V/T2, W/T3 | 25                               | 10 - 35                             | 20                             | M6             | ⊕     | 5 - 5.5<br>(45 - 49)             |
|       | -, +1, +2        | 50                               | 16 - 70                             | 20                             | M6             | ⊕     | 5 - 5.5<br>(45 - 49)             |
|       | B1, B2           | 16                               | 4 - 16                              | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 16                               | 10 - 25                             | -                              | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### Three-Phase 400 V Class

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length *1<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                   | Size           | Shape |                                  |
| 4001  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4002  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 2.5 *2                           | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

## 5.2 European Standards

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                   | Size           | Shape |                                  |
| 4004  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4005  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4007  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4009  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4012  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 2.5 - 6 *2                          | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping<br>Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|----------------------------------|-------------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                                  |                                     |                                   | Size           | Shape |                                  |
| 4018  | R/L1, S/L2, T/L3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 4                                | 2.5 - 6                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 2.5 - 16                            | -                                 | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |
| 4023  | R/L1, S/L2, T/L3 | 4                                | 2.5 - 6                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 4                                | 2.5 - 6                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 4                                | 4 - 6                               | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4 *2                             | 4 - 16                              | -                                 | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |
| 4031  | R/L1, S/L2, T/L3 | 6                                | 4 - 10                              | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 6                                | 4 - 10                              | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 10                               | 2.5 - 16                            | 18                                | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)         |
|       | B1, B2           | 2.5                              | 2.5 - 4                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 6 *2                             | 6 - 16 *2                           | -                                 | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |
| 4038  | R/L1, S/L2, T/L3 | 10                               | 4 - 16                              | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 6                                | 2.5 - 10                            | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 16                               | 4 - 25                              | 18                                | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)         |
|       | B1, B2           | 4                                | 2.5 - 6                             | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 10                               | 6 - 16                              | -                                 | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |
| 4044  | R/L1, S/L2, T/L3 | 16                               | 4 - 25                              | 18                                | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)         |
|       | U/T1, V/T2, W/T3 | 10                               | 4 - 16                              | 18                                | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)         |
|       | -, +1, +2        | 16                               | 6 - 25                              | 18                                | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)         |
|       | B1, B2           | 6                                | 4 - 10                              | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 10                               | 6 - 16                              | -                                 | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |

## 5.2 European Standards

| Model | Terminal         | Recomm. Gauge<br>mm <sup>2</sup> | Applicable Gauge<br>mm <sup>2</sup> | Wire Stripping Length <sup>*1</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N-m (in-lb)   |
|-------|------------------|----------------------------------|-------------------------------------|---|----------------|-------|--|
|       |                  |                                  |                                     |   | Size           | Shape |  |
| 4060  | R/L1, S/L2, T/L3 | 25                               | 6 - 35                              | 18  | M5             | ⊖     | <ul style="list-style-type: none"> <li>≤ 25 mm<sup>2</sup><br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>35 mm<sup>2</sup> ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | U/T1, V/T2, W/T3 | 16                               | 4 - 25                              | 18  | M5             | ⊖     | 2.3 - 2.5<br>(19.8 - 22)   |
|       | -, +1, +2        | 25                               | 6 - 35                              | 18  | M5             | ⊖     | <ul style="list-style-type: none"> <li>≤ 25 mm<sup>2</sup><br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>35 mm<sup>2</sup> ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | B1, B2           | 10                               | 2.5 - 16                            | 10  | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)   |
|       | ⊕                | 10                               | 6 - 16                              | -   | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)   |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### ■ Connect a Fuse to the Input Side (Primary Side)

The drive circuit protection must comply with EN 61800-5-1:2007 for protection against a short circuit in the internal circuitry. Connect semiconductor fuses on the input side for branch circuit protection.

Refer to [Single-Phase 200 V Class on page 166](#), [Three-Phase 200 V Class on page 166](#), and [Three-Phase 400 V Class on page 167](#) for more information about recommended fuses.

**WARNING! Electrical Shock Hazard.** After the drive blows a fuse or trips an RCM/RCD, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

#### Single-Phase 200 V Class

Table 5.3 Factory-Recommended Branch Circuit Protection: Single-Phase 200 V Class

| Drive Model | Semiconductor Protection Fuse Rated Current<br>Manufacturer: Eaton/Bussmann | Drive Model | Semiconductor Protection Fuse Rated Current<br>Manufacturer: Eaton/Bussmann |
|-------------|---|-------------|---|
| B001        | FWH-25A14F  | B010        | FWH-100B  |
| B002        | FWH-25A14F  | B012        | FWH-125B  |
| B004        | FWH-60B   | B018        | FWH-150B  |
| B006        | FWH-80B   |             |   |

#### Three-Phase 200 V Class

Table 5.4 Factory-Recommended Branch Circuit Protection: Three-Phase 200 V Class

| Drive Model | Semiconductor Protection Fuse Rated Current<br>Manufacturer: Eaton/Bussmann | Drive Model | Semiconductor Protection Fuse Rated Current<br>Manufacturer: Eaton/Bussmann |
|-------------|---|-------------|---|
| 2001        | FWH-25A14F  | 2018        | FWH-90B   |
| 2002        | FWH-25A14F  | 2021        | FWH-90B   |
| 2004        | FWH-25A14F  | 2030        | FWH-100B  |
| 2006        | FWH-25A14F  | 2042        | FWH-150B  |
| 2008        | FWH-70B   | 2056        | FWH-200B  |
| 2010        | FWH-70B   | 2070        | FWH-200B  |
| 2012        | FWH-70B   | 2082        | FWH-225A  |

Three-Phase 400 V Class

Table 5.5 Factory-Recommended Branch Circuit Protection: Three-Phase 400 V Class

| Drive Model | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann | Drive Model | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |
|-------------|---|-------------|---|
| 4001        | FWH-40B   | 4018        | FWH-80B   |
| 4002        | FWH-40B   | 4023        | FWH-100B  |
| 4004        | FWH-50B   | 4031        | FWH-125B  |
| 4005        | FWH-70B   | 4038        | FWH-175B  |
| 4007        | FWH-70B   | 4044        | FWH-200B  |
| 4009        | FWH-90B   | 4060        | FWH-200B  |
| 4012        | FWH-90B   |             |   |

■ CE Standards Compliance for DC Power Supply Input

To comply with CE Standards, install a fuse for the DC power supply input.

Figure 5.3 shows a wiring example for a DC power supply that has two drives connected in parallel.

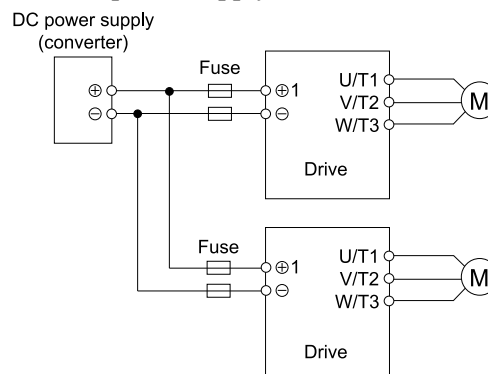


Figure 5.3 Wiring Example for DC Power Supply Input

**WARNING! Electrical Shock Hazard.** Do not ground the main circuit bus. Incorrect wiring can cause serious injury or death.

Note:

- Install a fuse for each drive when operating more than one drive. If one fuse blows, replace all fuses.
- Install the external filter (system) to comply with the EMC Directive.

Refer to Table 5.6, Table 5.7, and Table 5.8 for the recommended fuses.

Table 5.6 Recommended Fuse: Single-Phase 200 V Class

| Drive Model | Fuse<br>Manufacturer: Bussmann | Drive Model | Fuse<br>Manufacturer: Bussmann |
|-------------|--------------------------------|-------------|--------------------------------|
|             | Model                          |             | Model                          |
| B001        | FWH-25A14F                     | B010        | FWH-100B                       |
| B002        | FWH-25A14F                     | B012        | FWH-125B                       |
| B004        | FWH-60B                        | B018        | FWH-150B                       |
| B006        | FWH-80B                        |             |                                |

Table 5.7 Recommended Fuse: Three-Phase 200 V Class

| Drive Model | Fuse<br>Manufacturer: Bussmann | Drive Model | Fuse<br>Manufacturer: Bussmann |
|-------------|--------------------------------|-------------|--------------------------------|
|             | Model                          |             | Model                          |
| 2001        | FWH-25A14F                     | 2012        | FWH-70B                        |
| 2002        | FWH-25A14F                     | 2018        | FWH-90B                        |
| 2004        | FWH-25A14F                     | 2021        | FWH-90B                        |
| 2006        | FWH-25A14F                     | 2030        | FWH-100B                       |
| 2008        | FWH-70B                        | 2042        | FWH-150B                       |
| 2010        | FWH-70B                        | 2056        | FWH-200B                       |

## 5.2 European Standards

| Drive Model | Fuse<br>Manufacturer: Bussmann | Drive Model | Fuse<br>Manufacturer: Bussmann |
|-------------|--------------------------------|-------------|--------------------------------|
|             | Model                          |             | Model                          |
| 2070        | FWH-200B                       | 2082        | FWH-225A                       |

**Table 5.8 Recommended Fuse: Three-Phase 400 V Class**

| Drive Model | Fuse<br>Manufacturer: Bussmann | Drive Model | Fuse<br>Manufacturer: Bussmann |
|-------------|--------------------------------|-------------|--------------------------------|
|             | Model                          |             | Model                          |
| 4001        | FWH-40B                        | 4018        | FWH-80B                        |
| 4002        | FWH-40B                        | 4023        | FWH-100B                       |
| 4004        | FWH-50B                        | 4031        | FWH-125B                       |
| 4005        | FWH-70B                        | 4038        | FWH-175B                       |
| 4007        | FWH-70B                        | 4044        | FWH-200B                       |
| 4009        | FWH-90B                        | 4060        | FWH-200B                       |
| 4012        | FWH-90B                        |             |                                |

### ◆ EMC Directive

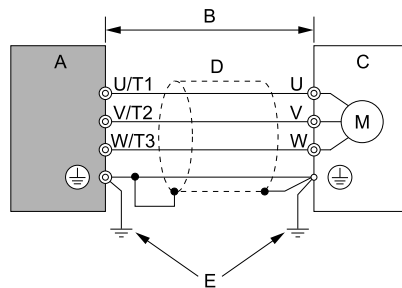
Use drives with built-in EMC filters or install external EMC filters to the drive input side to comply with the EMC Directive.

Drives with built-in EMC filters (models BxxxE, 2xxxE, 4xxxE) were tested in accordance with European standard EN 61800-3:2004/A1:2012, and comply with the EMC Directive.

### ■ Install a Drive to Conform to the EMC Directive

Install drive models BxxxE, 2xxxE, and 4xxxE with this procedure to comply with the EMC Directive when the drive is a single unit or installed in a larger device.

1. Install the drive on a grounded metal plate.
2. Wire the drive and motor.
3. Ground the wire shielding on the drive side and motor side.



A - Drive

B - Wiring length \*1

C - Motor

D - Metal conduit

E - Grounding wire

**Figure 5.4 Wiring the Drive and Motor**

\*1 The maximum wiring length between the drive and motor is:

- BxxxE: 10 m (32.8 ft)
- 2xxxE, 4xxxE: 20 m (65.6 ft)

**Note:**

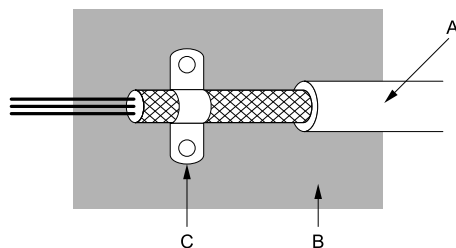
- Use a braided shield cable for the drive and motor wiring or put the wires through a metal conduit.
- Keep the cable between the drive and motor and the grounding wire as short as possible.

4. Use a cable clamp to ground the motor cable to the metal plate.

**Note:**

Make sure that the protective ground wire complies with technical specifications or local safety standards.






A - Braided shield cable  
B - Metal plate

C - Cable clamp (conductive)

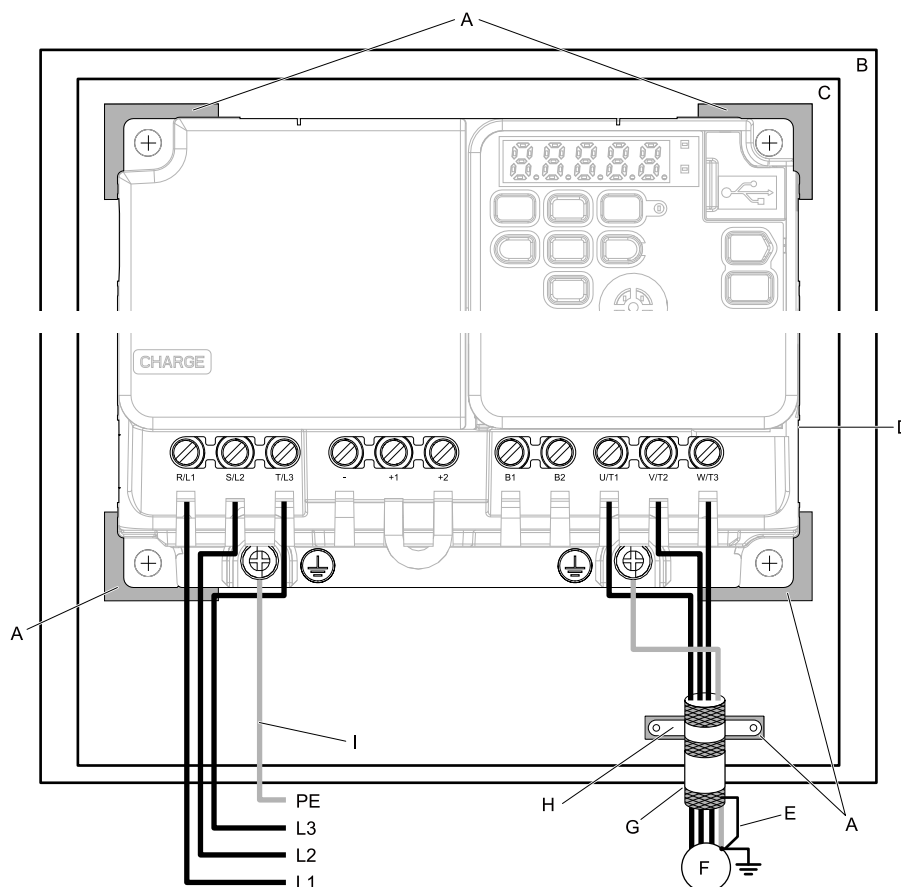Figure 5.5 Ground the Shield



A - Grounding surface (Remove any paint or sealant.)

B - Enclosure panel

C - Metal plate

D - Drive

E - Shielded wire

F - Motor

G - Motor cable

H - Cable clamp

I - Grounding wire

Figure 5.6 Install a Drive with a Built-in EMC Filter

5. Connect an AC reactor or DC reactor to decrease harmonic distortion. Refer to [DC Reactors on page 174](#) to select a DC reactor.

**Note:**

- To comply with EN 61000-3-2 on drive models 2001 to 2006, 4001 to 4004, install a DC reactor.

**Ground Wiring**

**WARNING! Electrical Shock Hazard.** Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** Ground the neutral point on the power supply of drive models BxxxE, 2xxxE, and 4xxxE to comply with the EMC Directive before you turn on the EMC filter or if there is high resistance grounding. If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

**Enable the Internal EMC Filter**

On drive models BxxxE, 2xxxE, and 4xxxE, move the screw or screws to turn ON and OFF (enable and disable) the EMC filter.

Make sure that the symmetric grounding network is applied, and install the screw or screws in the ON position to enable the built-in EMC filter in compliance with the EMC Directive. The EMC filter switch screw or screws are installed in the OFF position by default.

**WARNING! Electrical Shock Hazard.** Disconnect all power to the drive, wait for the time specified on the warning label, and check the drive for dangerous voltages before you remove covers or touch EMC filter screws. If you touch the screws when there are dangerous voltages, it will cause serious injury or death.


**WARNING! Electrical Shock Hazard.** Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** Ground the neutral point on the power supply of drive models BxxxE, 2xxxE, and 4xxxE to comply with the EMC Directive before you turn on the EMC filter or if there is high resistance grounding. If you turn ON the EMC filter, but you do not ground the neutral point, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** Connect the ground cable correctly. If you touch electrical equipment that is not grounded, it can cause serious injury or death.

**NOTICE:** To disable the internal EMC filter, move the screws from ON to OFF and then tighten to the specified torque. If you fully remove the screws or tighten the screws to an incorrect torque, it can cause drive failure.

**NOTICE:** Move the EMC switch screw or screws to the OFF position for networks that are not symmetrically grounded. If the screws are not in the correct position, it can cause damage to the drive.

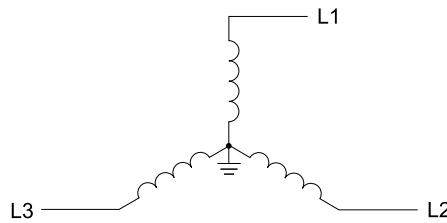

**Figure 5.7 Symmetric Grounding**

**NOTICE:** When you use the drive with a non-grounding, high-resistance grounding, or asymmetric-grounding network, put the EMC Filter screw or screws in the OFF position to disable the built-in EMC filter. Failure to obey the instructions can damage the drive.


Table 5.9 shows asymmetric grounding networks.

**Table 5.9 Asymmetric Grounding**

| Type of Grounding   | Diagram   |
|---|---|
| Grounded at the corner of the delta connection                    | <p>The diagram shows a delta (Δ) connection of three inductors. The top vertex is labeled L1, the bottom-left is L3, and the bottom-right is L2. The bottom-right vertex (L2) is connected to a ground symbol.</p>                  |
| Grounded at the middle of the side                                | <p>The diagram shows a delta (Δ) connection of three inductors. The top vertex is labeled L1, the bottom-left is L3, and the bottom-right is L2. The bottom side (between L3 and L2) is connected to a ground symbol.</p>           |
| Single-phase, grounded at the end point                           | <p>The diagram shows a single-phase winding represented by a vertical inductor. The top end is labeled L1 and the bottom end is connected to a ground symbol and labeled N.</p>   |
| Three-phase variable transformer without solidly grounded neutral | <p>The diagram shows three separate vertical windings. The top winding is labeled L1, the middle is L2, and the bottom is L3. Each winding has an arrow pointing to its top terminal, also labeled L1, L2, and L3 respectively.</p> |

**Table 5.10 EMC Filter Switch Location**

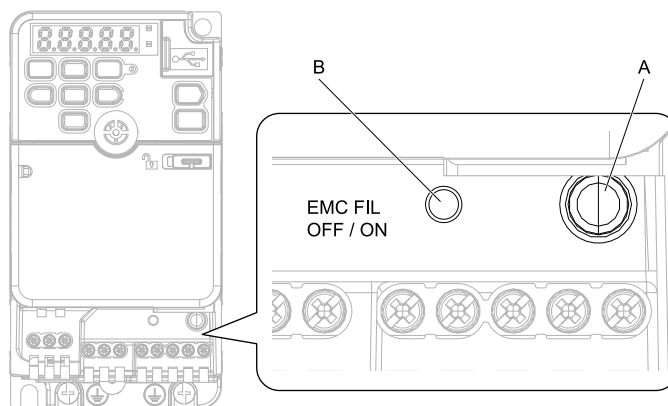
| Model   | Switch Location Diagram |
|---|-------------------------|
| B001E - B004E<br>2001E - 2006E                  | Figure 5.8              |
| B006E - B012E<br>2008E - 2021E<br>4001E - 4012E | Figure 5.9              |
| 2030E - 2082E<br>4018E - 4060E                  | Figure 5.10             |



**A - SW (ON)**

**B - SW (OFF)**

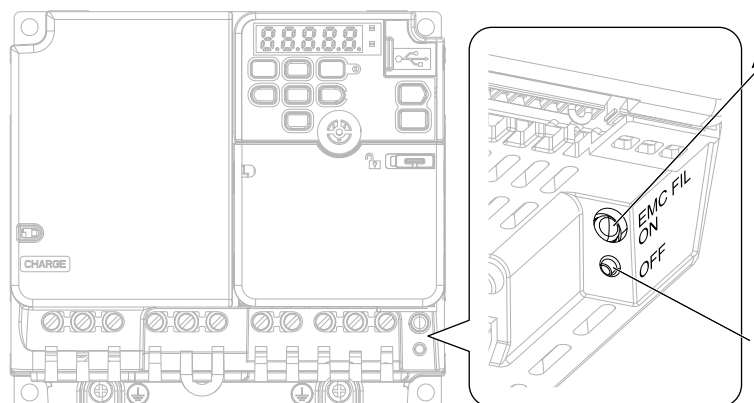
**Figure 5.8 EMC Filter Switch Location 1**



**A - SW (ON)**

**B - SW (OFF)**

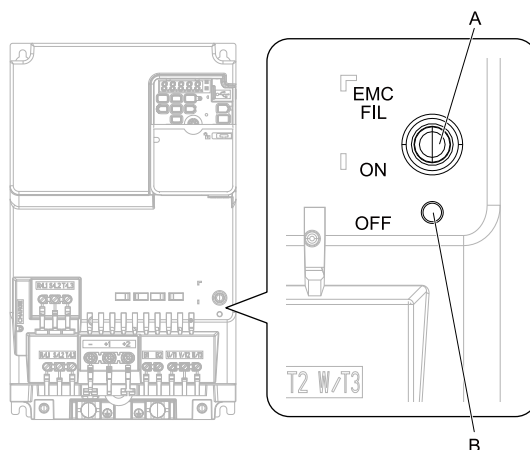**Figure 5.9 EMC Filter Switch Location 2**



**A - SW (ON)**

**B - SW (OFF)**

**Figure 5.10 EMC Filter Switch Location 3**

## 5.2 European Standards

If you lose an EMC filter switch screw, use [Table 5.11](#) to find the correct replacement screw and install the new screw with the correct tightening torque.

**NOTICE:** Only use the screws specified in this manual. If you use screws that are not approved, it can cause damage to the drive.

**Table 5.11 Screw Sizes and Tightening Torques**

| Model                                     | Screw Size | Tightening Torque<br>N·m (in·lb) |
|---|------------|----------------------------------|
| B001 - B004<br>2001 - 2006                | M3 × 16    | 0.5 - 0.7<br>(4.4 - 6.2)         |
| B006 - B012<br>2008 - 2021<br>4001 - 4012 | M3 × 20    | 0.5 - 0.7<br>(4.4 - 6.2)         |
| 2030 - 2082<br>4018 - 4060                | M4 × 20    | 1.0 - 1.3<br>(8.9 - 11.5)        |

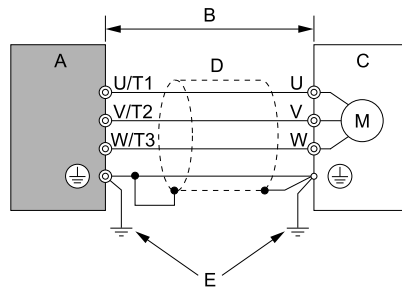
### ■ Installing the External EMC Noise Filter

Drive models BxxxA, 2xxxA, and 4xxxA must align with the conditions in this section to comply with EN 61800-3:2004/A1:2012.

Connect an EMC noise filter that complies with European standards as specified by Yaskawa to the input side (primary side). Refer to [External EMC Noise Filter Selection on page 174](#) to select the correct EMC noise filter.

Use this procedure to install an EMC noise filter to make equipment and devices added to the drive comply with the EMC Directive.

1. Install the drive and EMC noise filter on the same grounded metal plate.
2. Wire the drive and motor.
3. Ground the wire shielding on the drive side and motor side.



**A - Drive**

**B - 10 m (32.8 ft) maximum**

**C - Motor**

**D - Metal conduit**

**E - Grounding wire**

**Figure 5.11 Wiring the Drive and Motor**

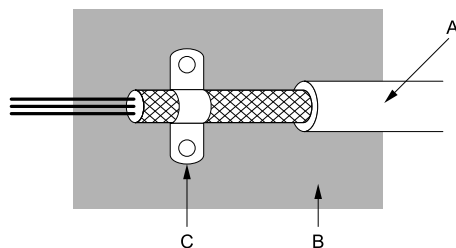
**Note:**

- Use a braided shield cable for the drive and motor wiring or put the wires through a metal conduit.
- Keep the wire as short as possible. The maximum wiring length between the drive and motor is:  
–BxxxA, 2xxxA, 4xxxA: 10 m (32.8 ft)
- Keep the grounding wire as short as possible.

4. Use a cable clamp to ground the motor cable to the metal plate.

**Note:**


Make sure that the protective ground wire complies with technical specifications or local safety standards.



A - Braided shield cable  
B - Metal plate

C - Cable clamp (conductive)

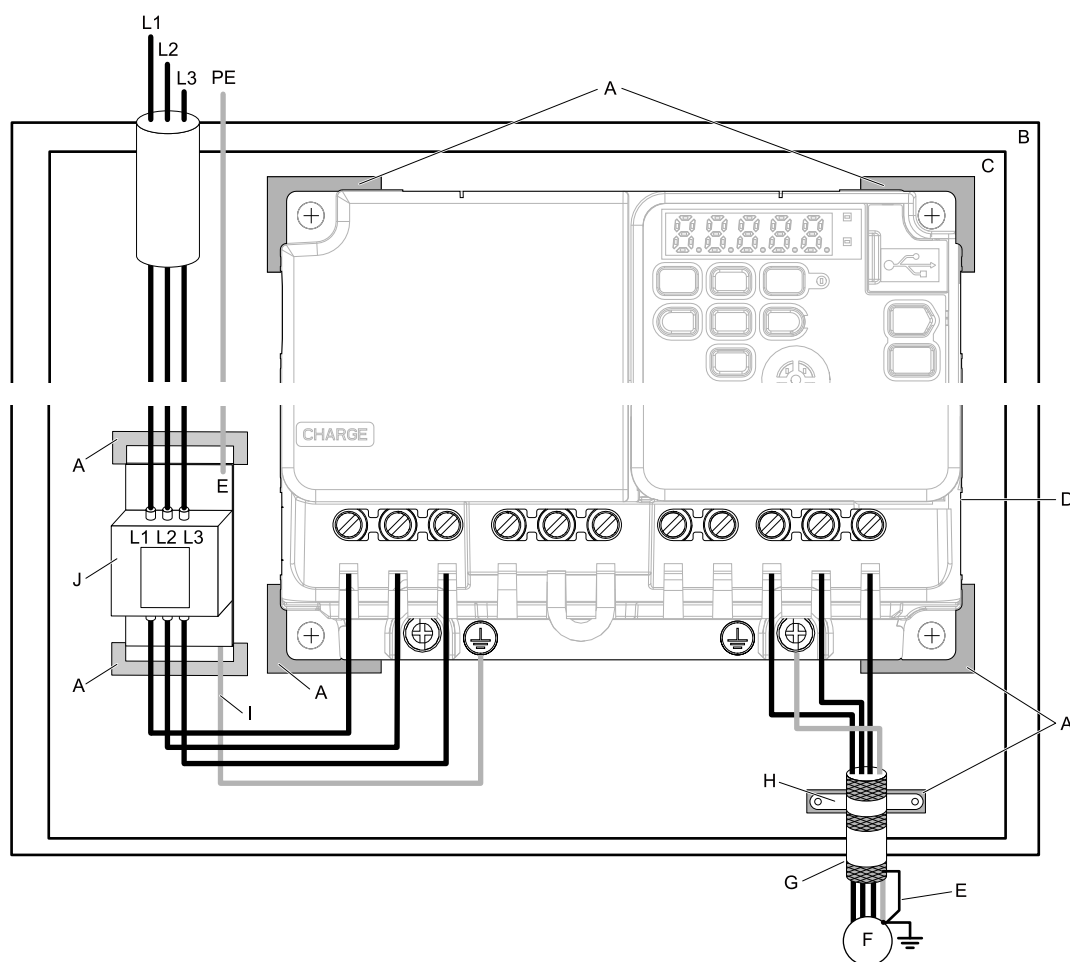Figure 5.12 Ground the Shield



A - Grounding surface (Remove any paint or sealant.)

B - Enclosure panel

C - Metal plate

D - Drive

E - Ground the shield.

F - Motor

G - Motor cable (Braided shield cable: 10 m (32.8 ft) maximum)

H - Cable clamp

I - Grounding wire

J - EMC noise filter

Figure 5.13 EMC Noise Filter and Drive Installation Procedure

5. Connect the DC reactor to decrease harmonic distortion.  
Refer to [DC Reactors on page 174](#) to select a DC reactor.

**Note:**

- To comply with EN 61000-3-2 on drive models 2001 to 2006, 4001 to 4004, install a DC reactor.

**Ground Wiring**

**WARNING!** Electrical Shock Hazard. Do not remove covers or touch circuit boards while the drive is energized. If you touch the internal components of an energized drive, it can cause serious injury or death.

## External EMC Noise Filter Selection

Table 5.12 External EMC Noise Filter (BxxxA)

| Drive model | EMC Noise Filter Model | Quantity | Manufacturer |
|-------------|------------------------|----------|--------------|
| B001        | FS23638-10-07          | 1        | Schaffner    |
| B002        | FS23638-10-07          | 1        | Schaffner    |
| B004        | FS23638-10-07          | 1        | Schaffner    |
| B006        | FS23638-20-07          | 1        | Schaffner    |
| B010        | FS23638-20-07          | 1        | Schaffner    |
| B012        | FS23638-30-07          | 1        | Schaffner    |
| B018        | FS23638-40-07          | 1        | Schaffner    |

Table 5.13 External EMC Noise Filter (2xxxA)

| Drive model | EMC Noise Filter Model  | Quantity | Manufacturer |
|-------------|-------------------------|----------|--------------|
| 2001        | FS23637-8-07            | 1        | Schaffner    |
| 2002        | FS23637-8-07            | 1        | Schaffner    |
| 2004        | FS23637-8-07            | 1        | Schaffner    |
| 2006        | FS23637-8-07            | 1        | Schaffner    |
| 2008        | FS23637-14-07           | 1        | Schaffner    |
| 2010        | FS23637-14-07           | 1        | Schaffner    |
| 2012        | FS23637-14-07           | 1        | Schaffner    |
| 2018        | FS23637-24-07           | 1        | Schaffner    |
| 2021        | FS23637-24-07           | 1        | Schaffner    |
| 2030        | FSS973-35-07 <i>*I</i>  | 1        | Schaffner    |
| 2042        | FSS973-60-07 <i>*I</i>  | 1        | Schaffner    |
| 2056        | FSS973-100-07 <i>*I</i> | 1        | Schaffner    |
| 2070        | FSS973-100-07 <i>*I</i> | 1        | Schaffner    |
| 2082        | RTEN-5200               | 1        | TDK          |

\*1 When you install an external EMC noise filter, change the terminals or use the junction terminal.

Table 5.14 External EMC Noise Filter (4xxxA)

| Drive model | EMC Noise Filter Model | Quantity | Manufacturer |
|-------------|------------------------|----------|--------------|
| 4001        | FS23639-5-07           | 1        | Schaffner    |
| 4002        | FS23639-5-07           | 1        | Schaffner    |
| 4004        | FS23639-5-07           | 1        | Schaffner    |
| 4005        | FS23639-10-07          | 1        | Schaffner    |
| 4007        | FS23639-10-07          | 1        | Schaffner    |
| 4009        | FS23639-10-07          | 1        | Schaffner    |
| 4012        | FS23639-15-07          | 1        | Schaffner    |
| 4018        | FSS972-35-07 <i>*I</i> | 1        | Schaffner    |
| 4023        | FSS972-35-07 <i>*I</i> | 1        | Schaffner    |
| 4031        | FSS972-60-07 <i>*I</i> | 1        | Schaffner    |
| 4038        | FSS972-60-07 <i>*I</i> | 1        | Schaffner    |
| 4044        | RTEN-5100              | 1        | TDK          |
| 4060        | RTEN-5100              | 1        | TDK          |

\*1 When you install an external EMC noise filter, change the terminals or use the junction terminal.

## ■ DC Reactors

To comply with EN 61000-3-2 on drive models 2001 to 2006, and 4001 to 4004, install a DC reactor when you use an internal or external EMC filter. Refer to [Table 5.15](#) to select the correct DC reactor.

**Table 5.15 DC Reactors for Harmonic Suppression (Manufacturer: Yaskawa Electric)**

| Drive Model | DC reactor<br>Manufacturer: Yaskawa |            |
|-------------|-------------------------------------|------------|
|             | Model                               | Rating     |
| 2001 - 2006 | UZDA-B                              | 5.4A, 8mA  |
| 4001 - 4004 | UZDA-B                              | 3.2A, 28mA |

## 5.3 UL Standards



Figure 5.14 UL/cUL Mark

The UL/cUL Mark indicates that this product satisfies stringent safety standards. This mark appears on products in the United States and Canada. It shows UL approval, indicating that it has been determined that the product complies with safety standards after undergoing strict inspection and assessment.

You must use UL Listed or UL Recognized parts for all primary components that are built into electrical equipment that has UL approval.

This product has been tested in accordance with UL standard UL61800-5-1, and has been verified to be in compliance with UL standards.

Machines and devices integrated with this product must satisfy the following conditions for compliance with UL standards.

### ◆ Area of Use

Install this product in a location with Overvoltage Category III and pollution degree 2 or less as specified in UL61800-5-1.

### ■ Ambient Temperature Setting

Maintain the ambient temperature within the following ranges according to the enclosure type.

- IP20/UL Type 1: -10 °C to +40 °C (14 °F to 104 °F)
- IP20/UL Open Type: -10 °C to +50 °C (14 °F to 122 °F)

### ◆ Wire the Main Circuit Terminal Block

Wire the main circuit terminal block correctly as specified by the instructions in the manual.


To select the correct wire gauge, refer to [Main Circuit Wire Gauges and Tightening Torques on page 177](#).

### ■ Notes on Wiring the Main Circuit Terminal Block

Read these notes before you wire the main circuit terminal block.


- Use UL-Listed, vinyl-coated insulated copper wires for operation with a continuous maximum permitted temperature of 75 °C at 600 V.
  - Remove all unwanted objects that are near the terminal block connections.
  - Remove the insulation from the connection wires to the wire stripping lengths shown in the manual.
  - Do not use bent or crushed wires. Remove the damaged end of the wire before you use it. Incorrect connections can cause death or serious injury from fire.
  - Do not solder stranded wire. Soldered wire connections can become loose over time and cause unsatisfactory drive performance.
  - If you use stranded wire, make sure that all of the wire strands are in the connection. Also, do not twist the stranded wire too much. Incorrect connections can cause death or serious injury from fire.
  - Put the wire all the way into the terminal block. Remove the insulation from the wire to the recommended wire stripping length to fit the wire with insulation in the plastic housing.
  - Use a torque driver, torque ratchet, or torque wrench for the screws. A slotted driver or a hex tool will be necessary to wire the screw clamp terminal. Use applicable tools as specified by the recommended conditions in the product manual.
  - If you use power tools to tighten the terminal screws, use a low speed setting (300 to 400 r/min). Failure to obey can cause damage to the terminal screws.
  - Wire gauges on existing drive models to be replaced may not match wire gauge ranges on new drives. Refer to the drive manuals for correct wire sizes.
  - Do not tighten the terminal screws at an angle of 5 degrees or more. Failure to obey can cause damage to the terminal screws.
- If you damage a terminal screw, contact Yaskawa or your nearest sales representative.



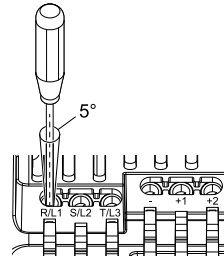


**Figure 5.15 Permitted Angle**

- Put the bit all the way into the hex socket to tighten the hex socket cap screw.
- When you tighten slotted screws, hold the straight-edge screwdriver perpendicularly to the screw. Make sure that you align the end of the straight-edge screwdriver with the screw groove.

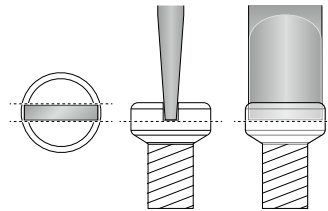

**Figure 5.16 Tightening Slotted Screws**

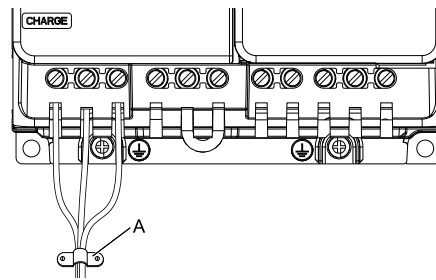- After you connect the wires to the terminal block, lightly pull on the wires to make sure that they do not come out of the terminals.
- Do not let strain on the wiring cause damage. Use a strain relief near the wiring to release the tension. Refer to [Figure 5.17](#) for an example.



**A - Cable clamp**

**Figure 5.17 Strain Relief Example**

**Table 5.16 Recommended Wiring Tools**

| Screw Size | Screw Shape      | Wire Gauge                       | Adapter | Bit                  |                 | Torque Driver Model (Tightening Torque)              | Torque Wrench (Tightening Torque)      |
|------------|------------------|----------------------------------|---------|----------------------|-----------------|--|--|
|            |                  |                                  |         | Model                | Manufacturer    |  |  |
| M3         | ⊖                | -                                | Bit     | SF-BIT-SL 0,5X3,0-70 | PHOENIX CONTACT | TSD-M 1,2NM<br>(0.3 - 1.2 N·m<br>(2.7 - 10.6 in·lb)) | -                                      |
| M4         | ⊖                | -                                | Bit     | SF-BIT-SL 1,0X4,0-70 | PHOENIX CONTACT | TSD-M 3NM<br>(1.2 - 3.0 N·m<br>(10.6 - 26.6 in·lb))  | -                                      |
| M5 *1      | ⊖                | ≤ 25 mm <sup>2</sup><br>(AWG 10) | Bit     | SF-BIT-SL 1,2X6,5-70 | PHOENIX CONTACT | TSD-M 3NM<br>(1.2 - 3.0 N·m<br>(10.6 - 26.6 in·lb))  | -                                      |
|            |                  | ≥ 30 mm <sup>2</sup><br>(AWG 8)  |         |                      |                 | -  |  |
| M6         | ⊕<br>(WAF: 5 mm) | -                                | Bit     | SF-BIT-HEX 5-50      | PHOENIX CONTACT | -  | 5 - 9 N·m<br>(44.3 - 79.7 in·lb) *2 *3 |

\*1 When you wire drive models 2042, 2056, 4031, 4038, 4044, and 4060, select the correct tools for the wire gauge.

\*2 Use 6.35 mm (0.25 in) bit socket holder.

\*3 Use a torque wrench that can apply this torque measurement range.

**■ Main Circuit Wire Gauges and Tightening Torques**

Refer to [Single-Phase 200 V Class on page 179](#), [Three-Phase 200 V Class on page 180](#), and [Three-Phase 400 V Class on page 183](#) for the recommended wire gauges and tightening torques of the main circuit terminals.

Comply with local standards for correct wire gauges in the region where you will use the drive.

**WARNING! Electrical Shock Hazard.** Only connect factory-recommended devices or circuits to drive terminals B1, B2, -, +1, and +2. Do not connect AC power to these terminals. Incorrect wiring can cause damage to the drive and serious injury or death from fire.

**Note:**

- The recommended wire gauges are based on drive continuous current ratings with 75 °C (167 °F) 600 V class 2 heat-resistant indoor PVC wire. Assume these conditions:
  - Ambient temperature: 40 °C (104 °F) maximum
  - Wiring distance: 100 m (3281 ft) maximum
  - Normal Duty rated current value
- Refer to the instruction manual for each device for recommended wire gauges to connect peripheral devices or options to terminals +1, +2, -, B1, and B2. Contact Yaskawa or your nearest sales representative if the recommended wire gauges for the peripheral devices or options are out of the range of the applicable gauges for the drive.

### Wire Selection Precautions

Think about line voltage drop before selecting wire gauges. Select wire gauges that drop the voltage by 2% or less of the rated voltage. Increase the wire gauge and the cable length when the risk of voltage drops increases.

Calculate line voltage drop with this formula:

$$\text{Line voltage drop (V)} = \sqrt{3} \times \text{wire resistance } (\Omega/\text{km}) \times \text{wiring distance (m)} \times \text{motor rated current (A)} \times 10^{-3}.$$

### Precautions during Wiring




- Refer to “Yaskawa AC Drive Option Braking Unit, Braking Resistor Unit Instruction Manual (TOBPC72060001)” for information about wire gauges and tightening torques to connect braking resistor units.
- Use terminals +1 and - to connect a regenerative converter or regenerative unit.

**WARNING! Fire Hazard.** Do not connect a braking resistor to terminals +1 or -. Use terminals B1 and B2 for the braking resistor connections. If you connect a braking resistor to the incorrect terminals, it can cause damage to the drive and braking circuit and serious injury or death.

### Screw Shape

These tables use icons in [Table 5.17](#) to show the shapes of the screw heads.

**Table 5.17 Icons to Identify Screw Shapes**

| Icon  | Screw Shape                |
|---|----------------------------|
|  | +/-                        |
|  | Slotted (-)                |
|  | Hex socket cap (WAF: 5 mm) |

## Single-Phase 200 V Class

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire<br>Stripping<br>Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|-----------------------------|--------------------------------|--------------------------------------|----------------|-------|----------------------------------|
|       |                  |                             |                                |                                      | Size           | Shape |                                  |
| B001  | L/L1, N/L2       | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14 *2                       | 14 *2                          | -                                    | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B002  | L/L1, N/L2       | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14 *2                       | 14 *2                          | -                                    | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B004  | L/L1, N/L2       | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14                             | 6.5                                  | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14 *2                       | 14 *2                          | -                                    | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| B006  | L/L1, N/L2       | 12                          | 14 - 10                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 12                          | 14 - 10                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10 *2                       | 14 - 10 *2                     | -                                    | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| B010  | L/L1, N/L2       | 10                          | 12 - 10                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1            | 10                          | 12 - 10                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10 *2                       | 14 - 10 *2                     | -                                    | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

## 5.3 UL Standards

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire Stripping<br>Length <sup>*1</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N-m (in-lb) |
|-------|------------------|-----------------------------|--------------------------------|--|----------------|-------|----------------------------------|
|       |                  |                             |                                |  | Size           | Shape |                                  |
| B012  | L/L1, N/L2       | 8                           | 14 - 8                         | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 12                          | 14 - 10                        | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1            | 8                           | 14 - 8                         | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 14                          | 14 - 12                        | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 10 <sup>*2</sup>            | 14 - 10 <sup>*2</sup>          | -  | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| B018  | L/L1, N/L2       | 8                           | 12 - 6                         | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 10                          | 14 - 8                         | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1            | 8                           | 12 - 6                         | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 14                          | 14 - 12                        | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 8 <sup>*2</sup>             | 12 - 8 <sup>*2</sup>           | -  | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)       |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### Three-Phase 200 V Class

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N-m (in-lb) |
|-------|------------------|-----------------------------|--------------------------------|--------------------------------|----------------|-------|----------------------------------|
|       |                  |                             |                                |                                | Size           | Shape |                                  |
| 2001  | R/L1, S/L2, T/L3 | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14                          | 14                             | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2002  | R/L1, S/L2, T/L3 | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14                             | 6.5                            | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14                          | 14                             | -                              | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire<br>Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|-----------------------------|--------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                             |                                |                                   | Size           | Shape |                                  |
| 2004  | R/L1, S/L2, T/L3 | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14                          | 14                             | -                                 | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2006  | R/L1, S/L2, T/L3 | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14                             | 6.5                               | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14                          | 14                             | -                                 | M3.5           | ⊕     | 0.8 - 1.0<br>(7.1 - 8.9)         |
| 2008  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10                          | 14 - 10                        | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2010  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 12                          | 14 - 10                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10                          | 14 - 10                        | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 2012  | R/L1, S/L2, T/L3 | 12                          | 14 - 10                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 12                          | 14 - 10                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 10                          | 12 - 10                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10                          | 14 - 10                        | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

### 5.3 UL Standards

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N-m (in-lb)  |
|-------|------------------|-----------------------------|--------------------------------|--------------------------------|----------------|-------|---|
|       |                  |                             |                                |                                | Size           | Shape |   |
| 2018  | R/L1, S/L2, T/L3 | 10                          | 14 - 8                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 10                          | 14 - 8                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 10                          | 14 - 8                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | B1, B2           | 14                          | 14 - 12                        | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 8                           | 14 - 8                         | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)  |
| 2021  | R/L1, S/L2, T/L3 | 8                           | 14 - 8                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 10                          | 14 - 8                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 8                           | 14 - 8                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | B1, B2           | 14                          | 14 - 10                        | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 8                           | 14 - 8                         | -                              | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)  |
| 2030  | R/L1, S/L2, T/L3 | 8                           | 12 - 6                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 8                           | 12 - 6                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 6                           | 12 - 6                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | B1, B2           | 12                          | 12 - 8                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 8                           | 10 - 6                         | -                              | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)  |
| 2042  | R/L1, S/L2, T/L3 | 6                           | 12 - 6                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 6                           | 12 - 6                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 4                           | 10 - 2                         | 18                             | M5             | ⊖     | <ul style="list-style-type: none"> <li>• ≤ AWG 10<br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>• AWG 8 ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | B1, B2           | 10                          | 14 - 6                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 6                           | 10 - 6                         | -                              | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)  |
| 2056  | R/L1, S/L2, T/L3 | 4                           | 10 - 2                         | 18                             | M5             | ⊖     | 4.1 - 4.5<br>(36 - 40)  |
|       | U/T1, V/T2, W/T3 | 4                           | 10 - 2                         | 18                             | M5             | ⊖     | <ul style="list-style-type: none"> <li>• ≤ AWG 10<br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>• AWG 8 ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | -, +1, +2        | 2                           | 8 - 2                          | 18                             | M5             | ⊖     | 4.1 - 4.5<br>(36 - 40)  |
|       | B1, B2           | 8                           | 12 - 6                         | 10                             | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 6                           | 8 - 4                          | -                              | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)  |

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire<br>Stripping<br>Length<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|-----------------------------|--------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                             |                                |                                   | Size           | Shape |                                  |
| 2070  | R/L1, S/L2, T/L3 | 2                           | 6 - 1                          | 20                                | M6             | ⊖     | 5 - 5.5<br>(45 - 49)             |
|       | U/T1, V/T2, W/T3 | 2                           | 8 - 1                          | 20                                | M6             | ⊖     | 5 - 5.5<br>(45 - 49)             |
|       | -, +1, +2        | 1                           | 6 - 1/0                        | 20                                | M6             | ⊖     | 5 - 5.5<br>(45 - 49)             |
|       | B1, B2           | 8                           | 12 - 6                         | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4                           | 6 - 4                          | -                                 | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |
| 2082  | R/L1, S/L2, T/L3 | 1                           | 6 - 1/0                        | 20                                | M6             | ⊖     | 5 - 5.5<br>(45 - 49)             |
|       | U/T1, V/T2, W/T3 | 2                           | 6 - 1                          | 20                                | M6             | ⊖     | 5 - 5.5<br>(45 - 49)             |
|       | -, +1, +2        | 2/0                         | 2 - 2/0                        | 20                                | M6             | ⊖     | 5 - 5.5<br>(45 - 49)             |
|       | B1, B2           | 6                           | 10 - 6                         | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 4                           | 6 - 4                          | -                                 | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)       |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### Three-Phase 400 V Class

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire<br>Stripping<br>Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb) |
|-------|------------------|-----------------------------|--------------------------------|--------------------------------------|----------------|-------|----------------------------------|
|       |                  |                             |                                |                                      | Size           | Shape |                                  |
| 4001  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14 *2                       | 14 - 10 *2                     | -                                    | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4002  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                    | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 14 *2                       | 14 - 10 *2                     | -                                    | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |

### 5.3 UL Standards

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire Stripping<br>Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N-m (in-lb) |
|-------|------------------|-----------------------------|--------------------------------|-----------------------------------|----------------|-------|----------------------------------|
|       |                  |                             |                                |                                   | Size           | Shape |                                  |
| 4004  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10 *2                       | 14 - 10 *2                     | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4005  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10 *2                       | 14 - 10 *2                     | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4007  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10 *2                       | 14 - 10 *2                     | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4009  | R/L1, S/L2, T/L3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | -, +1, +2        | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | B1, B2           | 14                          | 14 - 12                        | 8                                 | M3             | ⊖     | 0.5 - 0.6<br>(4.4 - 5.3)         |
|       | ⊕                | 10 *2                       | 14 - 10 *2                     | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |
| 4012  | R/L1, S/L2, T/L3 | 12                          | 14 - 10                        | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | U/T1, V/T2, W/T3 | 14                          | 14 - 12                        | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | -, +1, +2        | 10                          | 12 - 8                         | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | B1, B2           | 14                          | 14 - 12                        | 10                                | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)         |
|       | ⊕                | 10 *2                       | 14 - 10 *2                     | -                                 | M4             | ⊕     | 1.2 - 1.5<br>(10.6 - 13.3)       |



| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire<br>Stripping<br>Length *7<br>mm | Terminal Screw |       | Tightening Torque<br>N·m (in·lb)  |
|-------|------------------|-----------------------------|--------------------------------|--------------------------------------|----------------|-------|---|
|       |                  |                             |                                |                                      | Size           | Shape |   |
| 4018  | R/L1, S/L2, T/L3 | 10                          | 12 - 8                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 10                          | 12 - 8                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 10                          | 14 - 8                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | B1, B2           | 14                          | 14 - 12                        | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 10 *2                       | 14 - 6 *2                      | -                                    | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)  |
| 4023  | R/L1, S/L2, T/L3 | 8                           | 14 - 6                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 10                          | 14 - 8                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 8                           | 12 - 6                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | B1, B2           | 12                          | 14 - 10                        | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 10 *2                       | 10 - 6 *2                      | -                                    | M5             | ⊕     | 2.0 - 2.5<br>(17.7 - 22.1)  |
| 4031  | R/L1, S/L2, T/L3 | 8                           | 12 - 6                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 8                           | 12 - 6                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 6                           | 12 - 4                         | 18                                   | M5             | ⊖     | • ≤ AWG 10<br>2.3 - 2.5<br>(19.8 - 22)<br>• AWG 8 ≤<br>4.1 - 4.5<br>(36 - 40) |
|       | B1, B2           | 10                          | 12 - 8                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 8                           | 10 - 6                         | -                                    | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)  |
| 4038  | R/L1, S/L2, T/L3 | 6                           | 12 - 6                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | U/T1, V/T2, W/T3 | 8                           | 12 - 6                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | -, +1, +2        | 4                           | 10 - 2                         | 18                                   | M5             | ⊖     | • ≤ AWG 10<br>2.3 - 2.5<br>(19.8 - 22)<br>• AWG 8 ≤<br>4.1 - 4.5<br>(36 - 40) |
|       | B1, B2           | 10                          | 14 - 6                         | 10                                   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 6                           | 10 - 6                         | -                                    | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)  |

## 5.3 UL Standards

| Model | Terminal         | Recomm. Gauge<br>AWG, kcmil | Applicable Gauge<br>AWG, kcmil | Wire Stripping<br>Length <sup>*1</sup><br>mm | Terminal Screw |       | Tightening Torque<br>N-m (in-lb)  |
|-------|------------------|-----------------------------|--------------------------------|--|----------------|-------|---|
|       |                  |                             |                                |  | Size           | Shape |   |
| 4044  | R/L1, S/L2, T/L3 | 4                           | 10 - 2                         | 18   | M5             | ⊖     | <ul style="list-style-type: none"> <li>• ≤ AWG 10<br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>• AWG 8 ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | U/T1, V/T2, W/T3 | 6                           | 12 - 4                         | 18   | M5             | ⊖     | <ul style="list-style-type: none"> <li>• ≤ AWG 10<br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>• AWG 8 ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | -, +1, +2        | 2                           | 8 - 2                          | 18   | M5             | ⊖     | 4.1 - 4.5<br>(36 - 40)  |
|       | B1, B2           | 8                           | 12 - 6                         | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 6                           | 10 - 6                         | -  | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)  |
| 4060  | R/L1, S/L2, T/L3 | 2                           | 8 - 2                          | 18   | M5             | ⊖     | 4.1 - 4.5<br>(36 - 40)  |
|       | U/T1, V/T2, W/T3 | 4                           | 10 - 2                         | 18   | M5             | ⊖     | <ul style="list-style-type: none"> <li>• ≤ AWG 10<br/>2.3 - 2.5<br/>(19.8 - 22)</li> <li>• AWG 8 ≤<br/>4.1 - 4.5<br/>(36 - 40)</li> </ul> |
|       | -, +1, +2        | 2                           | 6 - 2                          | 18   | M5             | ⊖     | 4.1 - 4.5<br>(36 - 40)  |
|       | B1, B2           | 8                           | 12 - 6                         | 10   | M4             | ⊖     | 1.5 - 1.7<br>(13.5 - 15)  |
|       | ⊕                | 6                           | 10 - 6                         | -  | M6             | ⊕     | 5.4 - 6.0<br>(47.8 - 53.1)  |

\*1 Remove insulation from the ends of wires to expose the length of wire shown.

\*2 If you turn on the internal EMC filter, the leakage current of the drive will be more than 3.5 mA. Use the closed-loop crimp terminals to connect a protective ground wire that has a minimum cross-sectional area of 10 mm<sup>2</sup> (copper wire).

### ■ Factory-Recommended Branch Circuit Protection for UL Listing

Use branch circuit protection to protect against short circuits and to maintain compliance with UL61800-5-1. Yaskawa recommends connecting semiconductor protection fuses on the input side for branch circuit protection. Refer to [Three-Phase 400 V Class on page 187](#), [Three-Phase 200 V Class on page 187](#), and [Single-Phase 200 V Class on page 187](#) for more information.

**WARNING! Electrical Shock Hazard.** After the drive blows a fuse or trips an RCM/RCD, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

- 200 V class

Use the fuses specified in this document to prepare the drive for use on a circuit that supplies not more than 31,000 RMS and not more than 240 Vac when there is a short circuit in the power supply.

- 400 V class

Use the fuses specified in this document to prepare the drive for use on a circuit that supplies not more than 31,000 RMS and not more than 480 Vac when there is a short circuit in the power supply.

The built-in short circuit protection of the drive does not provide branch circuit protection. The user must provide branch circuit protection as specified by the National Electric Code (NEC), the Canadian Electric Code, Part I (CEC), and local codes.

## Single-Phase 200 V Class

Table 5.18 Factory-Recommended Branch Circuit Protection: Single-Phase 200 V Class

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |            | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|------------|---|---|-------------------------|
|             | ND   | HD         | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| B001        | 0.18 (1/6)                                 | 0.1 (1/6)  | 2   | FWH-25A14F  | 25                      |
| B002        | 0.37 (1/4)                                 | 0.25 (1/4) | 3.5   | FWH-25A14F  | 25                      |
| B004        | 0.75 (3/4)                                 | 0.55 (1/2) | 9   | FWH-60B   | 60                      |
| B006        | 1.1 (1.5)                                  | 1.1 (1)    | 15  | FWH-80B   | 80                      |
| B010        | 2.2 (3)                                    | 1.5 (2)    | 20  | FWH-100B  | 100                     |
| B012        | 3.0 (3)                                    | 2.2 (3)    | 30  | FWH-125B  | 125                     |
| B018        | -  | 4.0 (5)    | 40  | FWH-150B  | 150                     |

## Three-Phase 200 V Class

Table 5.19 Factory-Recommended Branch Circuit Protection: Three-Phase 200 V Class

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |            | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|------------|---|---|-------------------------|
|             | ND   | HD         | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| 2001        | 0.18 (1/6)                                 | 0.1 (1/6)  | 3   | FWH-25A14F  | 25                      |
| 2002        | 0.37 (1/4)                                 | 0.25 (1/4) | 3.5   | FWH-25A14F  | 25                      |
| 2004        | 0.75 (3/4)                                 | 0.55 (1/2) | 6   | FWH-25A14F  | 25                      |
| 2006        | 1.1 (1.5)                                  | 0.75 (1)   | 10  | FWH-25A14F  | 25                      |
| 2008        | 1.5 (2)                                    | 1.1 (1.5)  | 12  | FWH-70B   | 70                      |
| 2010        | 2.2 (3)                                    | 1.5 (2)    | 15  | FWH-70B   | 70                      |
| 2012        | 3.0 (4)                                    | 2.2 (3)    | 20  | FWH-70B   | 70                      |
| 2018        | 4.0 (5)                                    | 3.0 (4)    | 30  | FWH-90B   | 90                      |
| 2021        | 5.5 (5)                                    | 4.0 (5)    | 35  | FWH-90B   | 90                      |
| 2030        | 7.5 (10)                                   | 5.5 (7.5)  | 50  | FWH-100B  | 100                     |
| 2042        | 11 (15)                                    | 7.5 (10)   | 70  | FWH-150B  | 150                     |
| 2056        | 15 (20)                                    | 11 (15)    | 90  | FWH-200B  | 200                     |
| 2070        | 18.5 (25)                                  | 15 (20)    | 110   | FWH-200B  | 200                     |
| 2082        | 22 (30)                                    | 18.5 (25)  | 125   | FWH-225A  | 225                     |

## Three-Phase 400 V Class

Table 5.20 Factory-Recommended Branch Circuit Protection: Three-Phase 400 V Class

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |            | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|------------|---|---|-------------------------|
|             | ND   | HD         | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| 4001        | 0.37 (1/2)                                 | 0.37 (1/2) | 3   | FWH-40B   | 40                      |
| 4002        | 0.75 (1)                                   | 0.55 (3/4) | 3.5   | FWH-40B   | 40                      |
| 4004        | 1.5 (2)                                    | 1.1 (2)    | 7   | FWH-50B   | 50                      |
| 4005        | 2.2 (3)                                    | 1.5 (3)    | 9   | FWH-70B   | 70                      |
| 4007        | 3.0 (4)                                    | 2.2 (3)    | 12  | FWH-70B   | 70                      |
| 4009        | 4.0 (5)                                    | 3.0 (4)    | 15  | FWH-90B   | 90                      |
| 4012        | 5.5 (7.5)                                  | 4.0 (5)    | 20  | FWH-90B   | 90                      |
| 4018        | 7.5 (10)                                   | 5.5 (10)   | 30  | FWH-80B   | 80                      |

| Drive Model | Maximum Applicable Motor Output<br>kW (HP) |           | Time Delay Fuse                               | Semiconductor Protection Fuse Rated Current<br>Manufacturer: EATON/Bussmann |                         |
|-------------|--|-----------|---|---|-------------------------|
|             | ND   | HD        | Class J, CC, and T Fuse<br>Rated Current<br>A | Model   | Fuse Rated Current<br>A |
| 4023        | 11.0 (15)                                  | 7.5 (10)  | 40  | FWH-100B  | 100                     |
| 4031        | 15.0 (20)                                  | 11.0 (15) | 50  | FWH-125B  | 125                     |
| 4038        | 18.5 (25)                                  | 15.0 (20) | 60  | FWH-175B  | 175                     |
| 4044        | 22.0 (30)                                  | 18.5 (25) | 70  | FWH-200B  | 200                     |
| 4060        | 30.0 (40)                                  | 22.0 (30) | 100   | FWH-200B  | 200                     |

### ◆ Low Voltage Wiring for Control Circuit Terminals

You must provide low voltage wiring as specified by the National Electric Code (NEC), the Canadian Electric Code, Part I (CEC), and local codes. Yaskawa recommends the NEC class 1 circuit conductor. Use the UL approved class 2 power supply for external power supply.

**Table 5.21 Control Circuit Terminal Power Supplies**

| Input/Output                      | Terminals            | Power Supply Specifications   |
|-----------------------------------|----------------------|---|
| Digital input                     | S1 to S7, SN, SC, SP | Uses the LVLC power supply in the drive.<br>Use the UL Listed class 2 power supply for external power supply. |
| Analog input                      | A1, A2, AC, +V       | Uses the LVLC power supply in the drive.<br>Use the UL Listed class 2 power supply for external power supply. |
| Analog output                     | AM, AC               | Uses the LVLC power supply in the drive.  |
| Pulse train output                | MP, AC               | Uses the LVLC power supply in the drive.<br>Use the UL Listed class 2 power supply for external power supply. |
| Pulse train input                 | RP, AC               | Uses the LVLC power supply in the drive.<br>Use the UL Listed class 2 power supply for external power supply. |
| Safe disable input                | H1, H2, HC           | Uses the LVLC power supply in the drive.<br>Use the UL Listed class 2 power supply for external power supply. |
| Serial communication input/output | D+, D-, AC           | Uses the LVLC power supply in the drive.<br>Use the UL Listed class 2 power supply for external power supply. |
| 24 V external power supply        | PS, AC               | Use the UL Listed class 2 power supply.   |

### ◆ Drive Motor Overload and Overheat Protection

The drive motor overload and overheat protection function complies with the National Electric Code (NEC) and the Canadian Electric Code, Part I (CEC).

Set the Motor Rated Current and *L1-01 through L1-04 [Motor Overload Protection Select]* correctly to enable motor overload and overheat protection.

Refer to the control method and set the motor rated current with *E2-01 [Motor Rated Current (FLA)]*, *E5-03 [PM Motor Rated Current (FLA)]*, or *E9-06 [Motor Rated Current (FLA)]*.

#### ■ E2-01: Motor Rated Current (FLA)

| No. (Hex.)   | Name                      | Description                               | Default (Range)  |
|--------------|---------------------------|---|--|
| E2-01 (030E) | Motor Rated Current (FLA) | <br>Sets the motor rated current in amps. | Determined by o2-04, C6-01<br>(10% to 200% of the drive rated current) |

**Note:**

- If *E2-01 < E2-03 [Motor No-Load Current]*, the drive will detect *oPE02 [Parameter Range Setting Error]*.
- When the drive model changes, the display units for this parameter also change.
  - 0.01 A: B001 to B018, 2001 to 2042, 4001 to 4023
  - 0.1 A: 2056 to 2082, 4031 to 4060

The value set for *E2-01* becomes the reference value for motor protection and the torque limit. Enter the motor rated current written on the motor nameplate. Auto-Tuning the drive will automatically set *E2-01* to the value input for *T1-04* [*Motor Rated Current*].

### ■ E5-03: Motor Rated Current (FLA)

| No. (Hex.)      | Name                      | Description   | Default (Range)  |
|-----------------|---------------------------|---|--|
| E5-03<br>(032B) | Motor Rated Current (FLA) | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the PM motor rated current (FLA). | Determined by o2-04, C6-01<br>(10% to 200% of the drive rated current) |

**Note:**

When the drive model changes, the display units for this parameter also change.

- 0.01 A: B001 - B018, 2001 - 2042, 4001 - 4023
- 0.1 A: 2056 - 2082, 4031 - 4060

The drive automatically sets *E5-03* to the value input for *T2-06* [*PM Motor Rated Current*] after you do these types of Auto-Tuning:

- PM Motor Parameter Settings
- PM Stationary Auto-Tuning
- PM Stationary Tuning for Stator Resistance
- PM Rotational Auto-Tuning

### ■ E9-06: Motor Rated Current (FLA)

| No. (Hex.)      | Name                      | Description  | Default (Range)   |
|-----------------|---------------------------|--|---|
| E9-06<br>(11E9) | Motor Rated Current (FLA) | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the motor rated current in amps. | Determined by E9-01 and o2-04<br>(10% to 200% of the drive rated current) |

**Note:**

When the drive model changes, the display units for this parameter also change.

- 0.01 A: B001 to B018, 2001 to 2042, 4001 to 4023
- 0.1 A: 2056 to 2082, 4031 to 4060

The setting value of *E9-06* is the reference value for motor protection. Enter the motor rated current written on the motor nameplate. Auto-Tuning the drive will automatically set *E9-06* to the value input for *T4-07* [*Motor Rated Current*].

### ■ L1-01: Motor Overload (oL1) Protection

| No. (Hex.)      | Name                            | Description   | Default (Range)                |
|-----------------|---------------------------------|---|--------------------------------|
| L1-01<br>(0480) | Motor Overload (oL1) Protection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the motor overload protection with electronic thermal protectors. | Determined by A1-02<br>(0 - 6) |

This parameter enables and disables the motor overload protection with electronic thermal protectors.

The cooling capability of the motor changes when the speed control range of the motor changes. Use an electronic thermal protector that aligns with the permitted load characteristics of the motor to select motor protection.

The electronic thermal protector of the drive uses these items to calculate motor overload tolerance and supply overload protection for the motor:

- Output Current
- Output Frequency
- Motor thermal characteristics
- Time characteristics


If the drive detects motor overload, the drive will trigger an *oL1* [*Motor Overload*] and stop the drive output.

Set *H2-01* = *1F* [*Term MA/MB-MC Function Selection = Motor Overload Alarm (oL1)*] to set a motor overload alarm. If the motor overload level is more than 90% of the *oL1* detection level, the output terminal activates and triggers an overload alarm.

#### 0 : Disabled

Disable motor protection when motor overload protection is not necessary or when the drive is operating more than one motor.

Refer to [Figure 5.18](#) for an example of the circuit configuration to connect more than one motor to one drive.

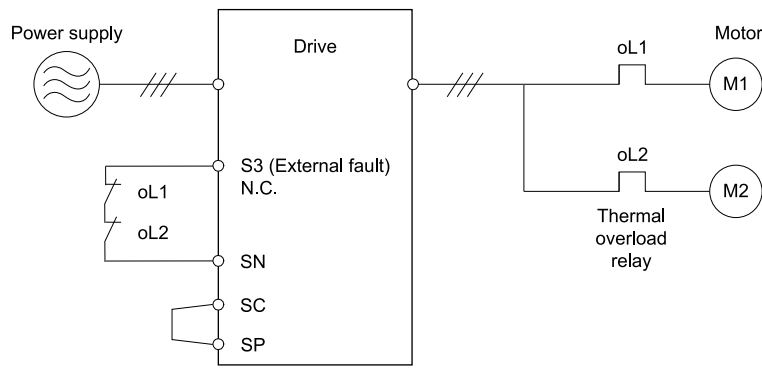

**Figure 5.18 Protection Circuit Configuration to Connect More than One Motor to One Drive**

**NOTICE:** When you connect more than one motor to one drive or when the motor amp rating is higher than the drive amp rating, set L1-01 = 0 [Motor Overload (oL1) Protection = Disabled] and install thermal overload relays for each motor. The electronic thermal protection of the drive will not function and it can cause damage to the motor.

**1 : Variable Torque**

Use this setting for general-purpose motors with a 60 Hz base frequency.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protector. This provides motor overheat protection from low speed to high speed across the full speed range.

| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)   |
|----------------|---|---|
|                | <p>This motor is designed to operate with commercial line power. Operate at a 60 Hz base frequency to maximize the motor cooling ability.</p> | <p>If the motor operates at frequencies less than 60 Hz, the drive will detect oLL. The drive triggers a fault relay output and the motor coasts to stop.</p> |

**2 : Constant Torque 10:1 Speed Range**

Use this setting for drive-dedicated motors with a speed range for constant torque of 1:10.

The speed control for this motor is 10% to 100% when at 100% load. Operating slower than 10% speed at 100% load will cause motor overload.

| Load Tolerance | Cooling Capability   | Overload Characteristics (at 100% motor load)   |
|----------------|--|---|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation in the low speed range (10% base frequency).</p> | <p>The motor operates continuously at 10% to 100% base frequency. Operating slower than 10% speed at 100% load will cause motor overload.</p> |

### 3 : Constant Torque 100:1 SpeedRange

Use this setting for vector motors with a speed range for constant torque of 1:100.

The speed control for this motor is 1% to 100% when at 100% load. Operating slower than 1% speed at 100% load will cause motor overload.

| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)   |
|----------------|---|---|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation in the low speed range (1% base frequency).</p> | <p>The motor operates continuously at 1% to 100% base frequency. Operating slower than 1% speed at 100% load will cause motor overload.</p> |

### 4 : PM Variable Torque

Use this setting for PM motors with derated torque characteristics.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protector. This provides motor overheat protection from low speed to high speed across the full speed range.

| Load Tolerance | Cooling Capability   | Overload Characteristics (at 100% motor load)   |
|----------------|--|---|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation at rated speed and rated torque.</p> | <p>If the motor operates continuously at lower speed than rated rotation speed at more than 100% torque, the drive will detect oLL. The drive triggers a fault relay output and the motor coasts to stop.</p> |

### 5 : PM Constant Torque

Use this setting with a PM motor for constant torque that has a speed range for constant torque of 1:500.

The speed control for this motor is 0.2% to 100% when at 100% load. Operating slower than 0.2% speed at 100% load will cause motor overload.

| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)  |
|----------------|---|--|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation in the low speed range (0.2% base frequency).</p> | <p>The motor operates continuously at 0.2% to 100% rated speed. Operating slower than 0.2% speed at 100% load will cause motor overload.</p> |

### 6 : Variable Torque (50Hz)

Use this setting for general-purpose motors with a 50 Hz base frequency.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protector. This provides motor overheat protection from low speed to high speed across the full speed range.

| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)  |
|----------------|---|--|
|                | <p>This motor is designed to operate with commercial line power. Operate at a 50 Hz base frequency to maximize the motor cooling ability.</p> | <p>If the motor operates at frequencies less than commercial line power, the drive will detect <i>oL1</i>. The drive triggers a fault relay output and the motor coasts to stop.</p> |

■ **L1-02: Motor Overload Protection Time**

| No. (Hex.)   | Name                           | Description   | Default (Range)         |
|--------------|--------------------------------|---|-------------------------|
| L1-02 (0481) | Motor Overload Protection Time | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the operation time for the electronic thermal protector of the drive to prevent damage to the motor. Usually it is not necessary to change this setting. | 1.0 min (0.1 - 5.0 min) |

Set the overload tolerance time to the length of time that the motor can operate at 150% load from continuous operation at 100% load.

When the motor operates at 150% load continuously for 1 minute after continuous operation at 100% load (hot start), the default setting triggers the electronic thermal protector.

Figure 5.19 shows an example of the electronic thermal protector operation time. Motor overload protection operates in the range between a cold start and a hot start.

This example shows a general-purpose motor operating at the base frequency with *L1-02* set to 1.0 min.

- Cold start  
Shows the motor protection operation time characteristics when the overload occurs immediately after starting operation from a complete stop.
- Hot start  
Shows the motor protection operation time characteristics when overload occurs from continuous operation below the motor rated current.

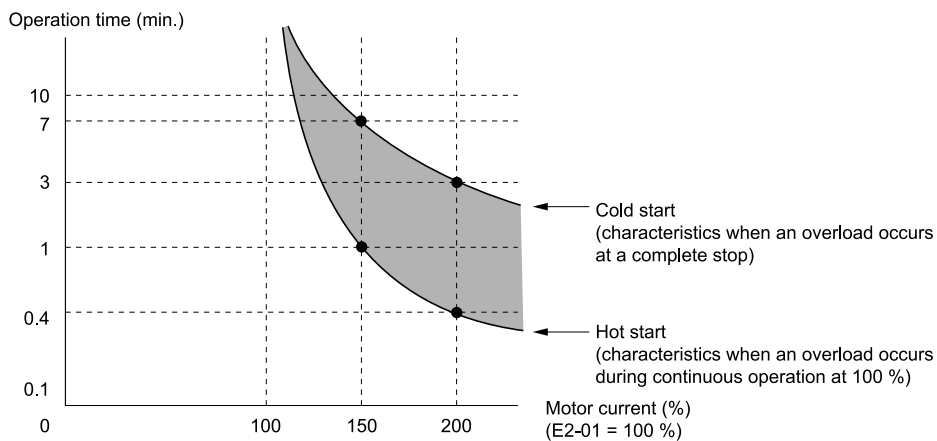


Figure 5.19 Protection Operation Time for a General-purpose Motor at Rated Output Frequency

■ **L1-03: Motor Thermistor oH Alarm Select**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| L1-03 (0482) | Motor Thermistor oH Alarm Select | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets drive operation when the PTC input signal entered into the drive is at the <i>oH3</i> [Motor Overheat Alarm] detection level. | 3 (0 - 3)       |

0 : Ramp to Stop



The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

### 2 : Fast Stop

The drive stops the motor in the deceleration time set in *C1-09 [Fast Stop Time]*. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

### 3 : Alarm Only

The keypad shows *oH3* and the drive continues operation. The output terminal set for *Alarm [H2-01 to H2-03 = 10]* activates.

## ■ L1-04: Motor Thermistor oH Fault Select

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range) |
|-----------------|----------------------------------|--|--------------------|
| L1-04<br>(0483) | Motor Thermistor oH Fault Select | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the drive operation when the PTC input signal to the drive is at the <i>oH4 [Motor Overheat Fault (PTC Input)]</i> detection level. | 1<br>(0 - 2)       |

### 0 : Ramp to Stop

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

### 2 : Fast Stop

The drive stops the motor in the deceleration time set in *C1-09 [Fast Stop Time]*. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

## 5.4 China RoHS Compliance



**Figure 5.20 China RoHS Mark**

The China RoHS mark is displayed on products containing six specified hazardous substances that are in excess of regulatory limits, based on the “Administrative Measures for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products” and “Marking for the Restricted Use of Hazardous Substances in Electronic and Electrical Products” (SJ/T 11364-2014), which were promulgated on January 26, 2016. The number displayed in the center of the mark indicates the environment-friendly use period (number of years) in which electrical and electronic products that are being produced, sold, or imported to China can be used. The date of manufacture of the electrical and electronic product is the starting date of the environment-friendly use period for the product. The six specified hazardous substances contained in the product will not leak outside of the product during normal use within this period and will have no serious impact on the environment, the human body, or property.

The environment-friendly use period for this product is 15 years. This period is not the product warranty period.

### ◆ Information on Hazardous Substances in This Product

Table 5.22 shows the details on hazardous substances contained in this product.

**Table 5.22 Contents of Hazardous Substances in This Product**

| Parts Name           | Hazardous Substances |              |              |                              |                                |                                       |
|----------------------|----------------------|--------------|--------------|------------------------------|--------------------------------|---------------------------------------|
|                      | Lead (Pb)            | Mercury (Hg) | Cadmium (Cd) | Hexavalent Chromium (Cr(VI)) | Polybrominated Biphenyls (PBB) | Polybrominated Diphenyl Ethers (PBDE) |
| Circuit Board        | ×                    | ○            | ○            | ○                            | ○                              | ○                                     |
| Electronic Parts     | ×                    | ○            | ○            | ○                            | ○                              | ○                                     |
| Brass Screw          | ×                    | ○            | ○            | ○                            | ○                              | ○                                     |
| Aluminum Die Casting | ×                    | ○            | ○            | ○                            | ○                              | ○                                     |

This table has been prepared in accordance with the provisions outlined in SJ/T 11364.

○: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below or equal to the limit requirement of GB/T 26572.

×: Indicates that said hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.

**Note:**

This product complies with EU RoHS directives. In this table, "×" indicates that hazardous substances that are exempt from EU RoHS directives are contained.

## 5.5 对应中国RoHS指令



图 5.21 中国RoHS标志

中国RoHS标志依据2016年1月26日公布的《电器电子产品有害物质限制使用管理办法》，以及《电子电气产品有害物质限制使用标识要求》（SJ/T 11364-2014）作成。电子电气产品中特定6种有害物质的含量超过规定值时，应标识此标志。中间的数字为在中国生产销售以及进口的电子电气产品的环保使用期限（年限）。电子电气产品的环保使用期限从生产日期算起。在期限内，正常使用产品的过程中，不会有特定的6种有害物质外泄进而对环境、人和财产造成深刻影响。

本产品的环保使用期限为15年。但需要注意的是环保使用期限并非产品的质量保证期限。

### ◆ 本产品中含有有害物质的信息

本产品中所含有害物质的详细信息如表 5.23 所示。

表 5.23 本产品中有害物质的名称及含量

| 部件名称 | 有害物质      |           |           |                 |               |                 |
|------|-----------|-----------|-----------|-----------------|---------------|-----------------|
|      | 铅<br>(Pb) | 汞<br>(Hg) | 镉<br>(Cd) | 六价铬<br>(Cr(VI)) | 多溴联苯<br>(PBB) | 多溴二苯醚<br>(PBDE) |
| 实装基板 | ×         | ○         | ○         | ○               | ○             | ○               |
| 电子元件 | ×         | ○         | ○         | ○               | ○             | ○               |
| 黄铜螺钉 | ×         | ○         | ○         | ○               | ○             | ○               |
| 铝压铸  | ×         | ○         | ○         | ○               | ○             | ○               |

本表格依据SJ/T 11364的规定编制。  
 ○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
 ×：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。  
 （注） 本产品符合欧盟RoHS指令。上表中的“×”表示含有欧盟RoHS指令豁免的有害物质。

## 5.6 Safe Disable Input



Figure 5.22 TÜV Mark

The TÜV mark identifies that the product complies with the safety standards.

This section gives precautions to support the Safe Disable input. Contact Yaskawa for more information.

The safety function complies with the standards shown in [Table 5.24](#).

Table 5.24 Applied Safety Standards and Unified Standards

| Safety Standards  | Unified Standards                     |
|-------------------|---------------------------------------|
| Functional Safety | IEC/EN 61508:2010 (SIL3)              |
|                   | IEC 62061:2005/AMD2:2015 (SILCL3)     |
|                   | EN 62061:2005/A2:2015 (SILCL3)        |
|                   | IEC 61800-5-2:2016 (SIL3)             |
|                   | EN 61800-5-2:2017 (SIL3)              |
| Machine Safety    | ISO/EN ISO 13849-1:2015 (Cat.3, PL e) |
| EMC               | IEC 61000-6-7:2014                    |
|                   | EN 61000-6-7:2015                     |
|                   | IEC/EN 61326-3-1:2017                 |
| LVD               | IEC 61800-5-1:2007/AMD1:2016          |
|                   | EN 61800-5-1:2007/A1:2017             |

**Note:**

SIL = Safety Integrity Level.

### ◆ Safe Disable Specifications

The Safe Disable input provides the stop function that complies with “Safe Torque Off” as specified by IEC/EN61800-5-2. The Safe Disable input meets the requirements of ISO/EN ISO 13849-1 and IEC/EN 61508. It also has a safety status monitor to detect safety circuit errors.

When you install the drive as a component in a system, you must make sure that the system complies with the applicable safety standards.

Refer to [Table 5.25](#) for safety function specifications.

Table 5.25 Safe Disable Specifications

| Item   | Description   |
|--|---|
| Input/Output   | <ul style="list-style-type: none"> <li>Input: 2<br/>Safe Disable input (H1, H2)<br/>Signal ON level: 18 Vdc to 28 Vdc<br/>Signal OFF level: -4 Vdc to +4 Vdc</li> <li>Output: 1<br/>MFDO safety monitor output for external device monitor (EDM)</li> </ul> |
| Response time from when the input opens to when the drive output stops                     | 3 ms or less  |
| Response time from when the H1 and H2 terminal inputs open to when the EDM signal operates | 30 ms or less   |
| Failure probability  | Less frequent operation request mode  |
|  | Frequent operation request mode or continuous mode  |
| Performance level  | The Safe Disable input complies with the performance level requirements of EN ISO 13849-1.  |
| HFT (hardware fault tolerance)   | N = 1   |
| Type of subsystem  | Type B  |
| MTTF <sub>D</sub>  | High  |
| DCavg  | Medium  |
| Mission time   | 10 years  |

**Note:**

EDM = External Device Monitoring

PFD = Probability of Failure on Demand

PFH = Probability of Dangerous Failure per Hour

**◆ Notes**

**DANGER!** *Sudden Movement Hazard.* When you use the Safe Disable function in the safety system of a machine, do a full risk assessment for the system to make sure that all parts of the system comply with applicable safety standards. Incorrect application of the Safe Disable function can cause serious injury or death.

**DANGER!** *Sudden Movement Hazard.* If the output circuit of the drive is damaged and the Safe Disable function turns OFF the drive output to a permanent magnet (PM) motor, the motor can rotate 180 electrical degrees. Prevent damage to equipment and injury to personnel during this condition. Sudden motor movement can cause serious injury or death. It is possible for current to flow through the motor winding in these conditions.

**DANGER!** *Electrical Shock Hazard.* You cannot depend on the Safe Disable function to prevent electrical shock. Disconnect all power to the drive and wait for the time specified on the warning label before you remove covers. Check the drive for dangerous voltages before servicing or repair work. If you do work on the drive when it is energized and there is no cover over the electronic circuits, it can cause serious injury or death.

**WARNING!** *Sudden Movement Hazard.* Although the Safe Disable function is in operation, gravity or other external forces in the vertical axis can move the motor. Incorrect application of the Safe Disable function can cause serious injury or death.

**WARNING!** *Sudden Movement Hazard.* Do not use the drive output signals to control external holding brakes or dynamic brakes for functional safety. Use a system that conforms to the functional safety requirements. Incorrect application of the Safe Disable function can cause serious injury or death. Systems that use drive output signals (including EDM) for safety are not safe because drive output signals are not safety components.

**WARNING!** *Sudden Movement Hazard.* Connect the Safe Disable inputs to the devices as specified by the safety requirements. If you connect the Safe Disable inputs incorrectly, it can cause serious injury or death.

**WARNING!** *Sudden Movement Hazard.* To use the Safe Disable inputs, remove the jumpers between terminals H1-HC and H2-HC. If the Safe Disable circuit does not work correctly, it can cause serious injury or death.

**WARNING!** *Sudden Movement Hazard.* When you clear the Safe Disable input, make sure that the Safe Disable Monitor output operates correctly as the specification for Safe Disable function. If the Safe Disable circuit does not operate correctly, it can cause serious injury or death.

**WARNING!** *Sudden Movement Hazard.* Regularly examine the Safe Disable input and all other safety features. A system that does not operate correctly can cause serious injury or death.

**WARNING!** *Sudden Movement Hazard.* Only let approved personnel who know about the drive, instruction manual, and safety standards wire, examine, and maintain the Safe Disable input. If personnel are not approved, it can cause serious injury or death.

**WARNING!** *Sudden Movement Hazard.* Only use the Safe Disable Monitor (multi-function output terminal set to the EDM function) to monitor the Safe Disable status or to find a malfunction in the Safe Disable inputs. The monitor output is not a safety output. If you use the Safe Disable Monitor incorrectly, it can cause death or serious injury.

**Note:**

- When you use a drive with a built in safety function, you must replace it 10 years after first use.
- A maximum of 3 ms will elapse from when terminals H1 or H2 shut off until the drive switches to the “Safe Torque Off” status. Set the OFF status for terminals H1 and H2 to hold for at least 3 ms. The drive may not be able to switch to the “Safe Torque Off” status if terminals H1 and H2 are only open for less than 3 ms.

**◆ Using the Safe Disable Function****■ Safe Disable Circuit**

The Safe Disable circuit has two isolated channels (terminals H1 and H2) that stop the output transistors. The input can use the internal power supply of the drive.

Set the EDM function to one of the MFDO terminals [ $H2-xx = 21$  or  $121$ ] to monitor the status of the Safe Disable function. This is the “Safe Disable monitor output function”.

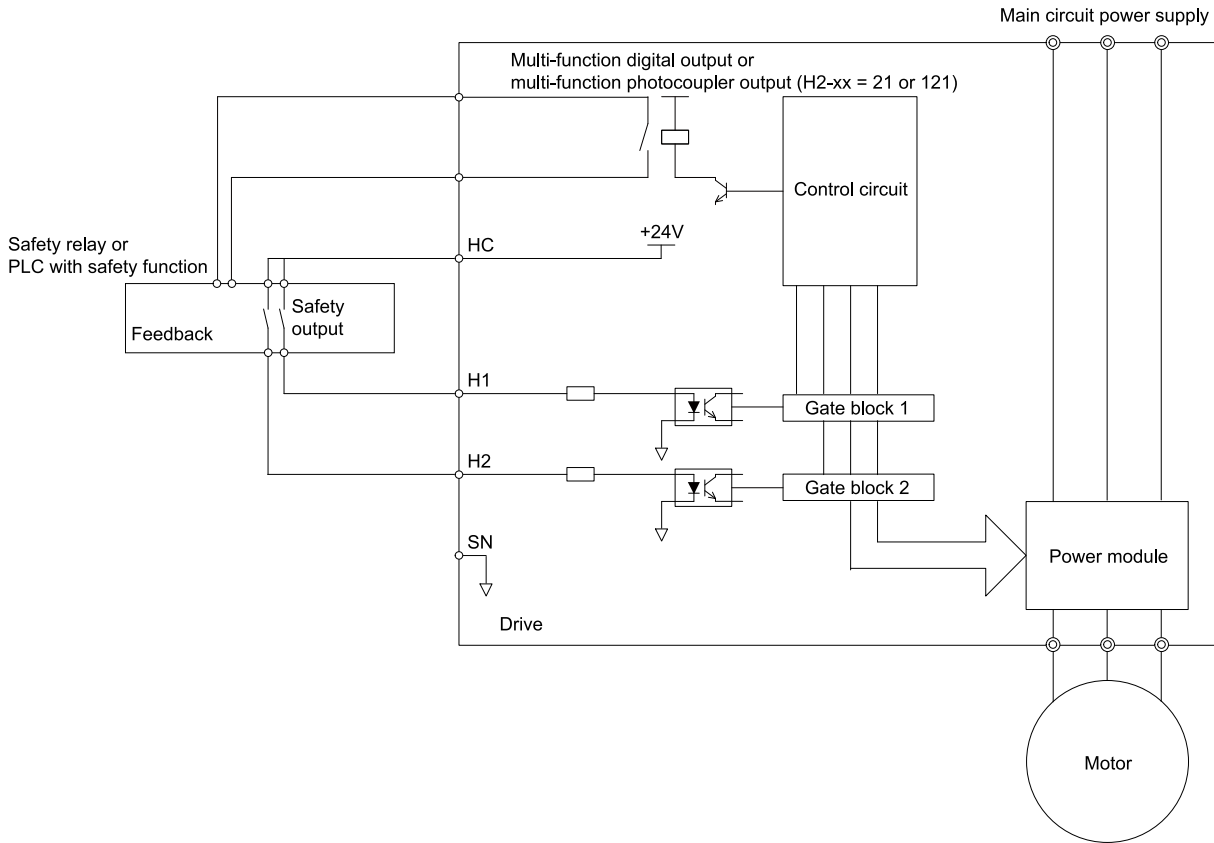


Figure 5.23 Safe Disable Function Wiring Example

■ Connect Safe Disable Input Contacts to Multiple Drives

To Use the Drive Internal Power Supply

Figure 5.24 shows an example of how to connect Safe Disable contacts.

From the terminals HC-SN of drive 1, supply the power for the Safe Disable function for the applicable drives. These conditions limit the number of units to connect:

- Internal power supply capacity
- Number of MFDIs used
- Supply current to the external sensors

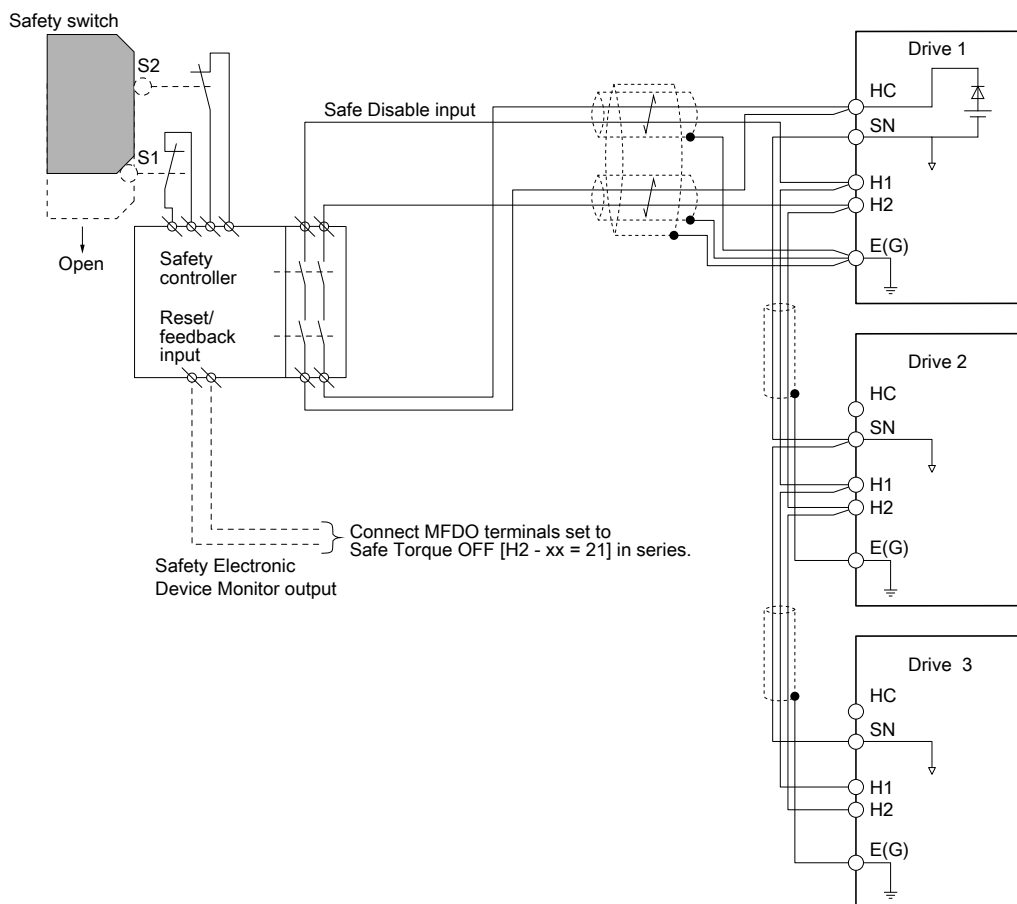


Figure 5.24 Connection Example to Use the Internal Power Supply

#### To Use 24 V External Power Supply

Figure 5.25 shows an example of how to connect Safe Disable contacts. These conditions limit the number of units to connect:

- External power supply capacity
- Number of MFDIs used
- Supply current to the external sensors

## 5.6 Safe Disable Input

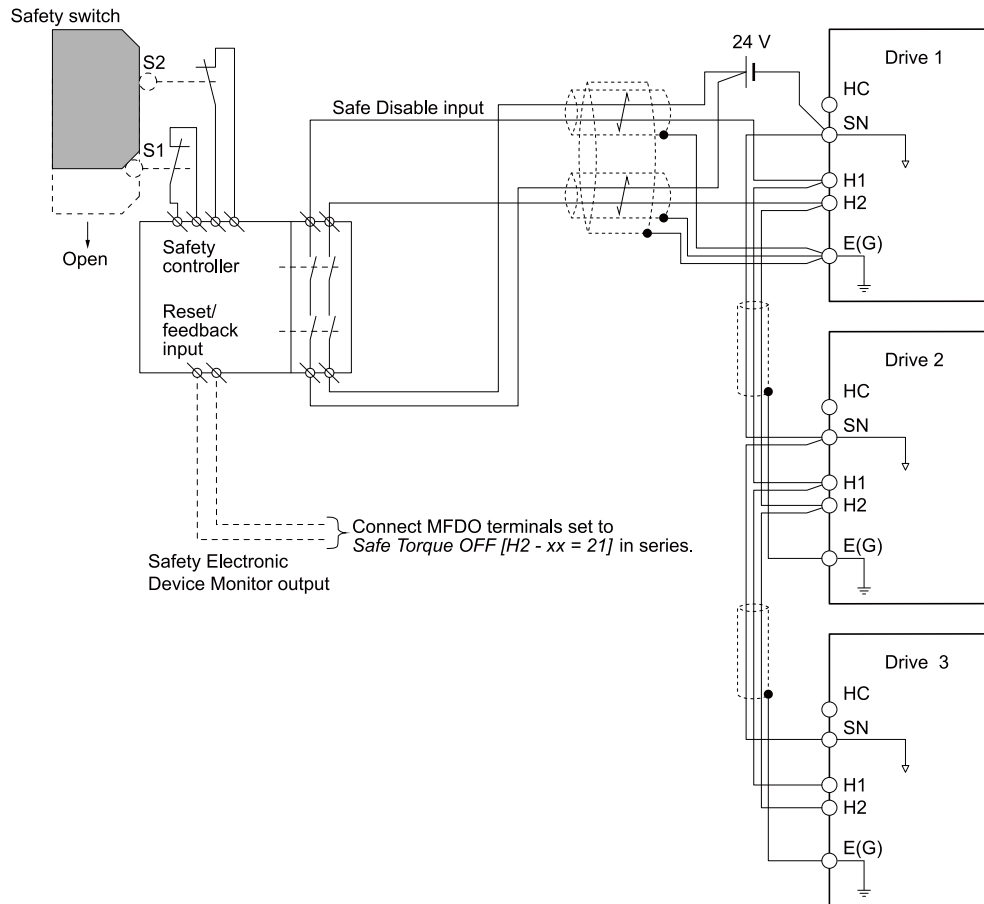


Figure 5.25 Connection Example to Use 24 V External Power Supply

### Number of Possible Drives to Connect

| Power Supply                       | Digital Inputs           | 24 V Output | Number of Drives  |
|------------------------------------|--------------------------|-------------|---|
| Internal power supply<br>(Drive 1) | Yes<br>(7-channel input) | Yes *1      | 1   |
|                                    |                          | No          | 13  |
|                                    | No                       | Yes *1      | 4   |
|                                    |                          | No          | 17  |
| External power supply              | -                        | -           | Different for different external power supply capacities *2 |

\*1 This is when you use a maximum of 150 mA.

\*2 24 V, 12 mA is necessary for each drive.

Use this formula to calculate the number of units to connect:

$$n = (I_{O_{max}} - I_{MFDI} \times n_{MFDI} - I_{sensor}) / I_{safety}$$

- n: Number of units to connect
- $I_{O_{max}}$ : Maximum current that the power supply can supply (234 mA for the internal power supply)
- $I_{MFDI}$ : Current consumed per MFDI (6 mA)
- $n_{MFDI}$ : Maximum number of MFDIs that can be activated at the same time (maximum of 7-channel)
- $I_{sensor}$ : Current externally supplied for sensor power supply (maximum of 150 mA)
- $I_{safety}$ : Current consumed by Safe Disable terminals H1 and H2 (12 mA)

#### Note:

Round the values to the first decimal place.

### ■ Enabling and Disabling the Drive Output (“Safe Torque Off”)

Refer to [Figure 5.26](#) for an example of drive operation when the drive changes from “Safe Torque Off” status to usual operation.



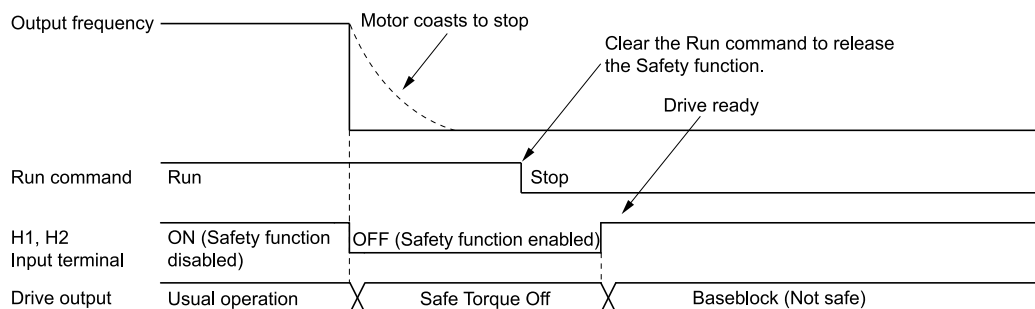


Figure 5.26 Safe Disable Operation

### Switching from Usual Operation to “Safe Torque Off”

Turn OFF (open) safety input terminal H1 or H2 to enable the Safe Disable function. When the Safe Disable function is enabled while the motor is operating, the drive output and motor torque turn off and the motor always coasts to stop. The *b1-03 [Stopping Method Selection]* setting does not have an effect on the stopping method.

The “Safe Torque Off” status is only possible with the Safe Disable function. Clear the Run command to stop the drive. Turning off drive output (a baseblock condition) ≠ “Safe Torque Off”.

**Note:**

- When it is necessary to ramp to stop the motor, do not turn off terminals H1 and H2 until the motor fully stops. This will prevent the motor from coasting to stop during usual operation.
- A maximum of 3 ms will elapse from when terminals H1 or H2 shut off until the drive switches to the “Safe Torque Off” status. Set the OFF status for terminals H1 and H2 to hold for at least 3 ms. The drive may not be able to switch to the “Safe Torque Off” status if terminals H1 and H2 are only open for less than 3 ms.

### Going from “Safe Torque Off” to Usual Operation

The safety input will only release when there is no Run command.

- **During Stop**  
When the Safe Disable function is triggered during stop, close the circuit between terminals H1-HC and H2-HC to disable “Safe Torque Off”. Enter the Run command after the drive stops correctly.
- **During Run**  
If you trigger the Safe Disable function during run, clear the Run command, then close the circuit between terminals H1-HC and H2-HC to disable “Safe Torque Off”. Enter the Stop command, then enter the Run command when terminals H1 and H2 are activated.

## ■ Safe Disable Monitor Output Function and Keypad Display

Refer to [Table 5.26](#) for information about the relation between the input channel status, Safety monitor output status, and drive output status.

Table 5.26 Safe Disable Input and External Device Monitor (EDM) Terminal Status

| Input Channel Status      |                           | Safety Monitor Output Status |                             | Drive Output Status        | Keypad Display     | READY LED             | MEMOBUS Register 0020H |       |
|---------------------------|---------------------------|------------------------------|-----------------------------|----------------------------|--------------------|-----------------------|------------------------|-------|
| Input 1 (H1-HC)           | Input 2 (H2-HC)           | MFDO Terminal (H2-xx = 21)   | MFDO Terminal (H2-xx = 121) |                            |                    |                       | bit C                  | bit D |
| ON<br>(Close the circuit) | ON<br>(Close the circuit) | OFF                          | ON                          | Baseblock<br>(Drive ready) | Normally displayed | READY:<br>Illuminated | 0                      | 0     |
| OFF<br>(Open)             | ON<br>(Close the circuit) | OFF                          | ON                          | Safety status<br>(STo)     | SToF<br>(Flashing) | ALM/ERR:<br>Flashing  | 1                      | 0     |
| ON<br>(Close the circuit) | OFF<br>(Open)             | OFF                          | ON                          | Safety status<br>(STo)     | SToF<br>(Flashing) | ALM/ERR:<br>Flashing  | 1                      | 0     |
| OFF<br>(Open)             | OFF<br>(Open)             | ON                           | OFF                         | Safety status<br>(STo)     | STo<br>(Flashing)  | READY: Flashing       | 0                      | 1     |

### Safety Function Status Monitor

The drive Safety monitor output sends a feedback signal about the status of the Safety function. The Safety monitor output is one of the possible settings available for the MFDO terminals. If there is damage to the Safe Disable circuit, a controller (PLC or safety relay) must read this signal as an input signal to hold the “Safe Torque Off” status. This will help verify the condition of the safety circuit. Refer to the manual for the safety device for more information about the Safety function.

It is possible to switch polarity of the Safety monitor output signal with the MFDO function settings. Refer to [Table 5.26](#) for setting instructions.

### Keypad Display

If the two input channels are OFF (Open), the keypad will flash *STo* [*Safe Torque OFF*].

If there is damage to the Safe disable circuit or the drive, the keypad will flash *SToF* [*Safe Torque OFF Hardware*] when one input channel is OFF (Open), and the other is ON (Short circuit). When you use the Safe disable circuit correctly, the keypad will not show *SToF*.

If there is damage to the drive, the keypad will show *SCF* [*Safety Circuit Fault*] when the drive detects a fault in the Safe disable circuit. Refer to the chapter on Troubleshooting for more information.

### ■ Validating the Safe Disable Function

After you replace parts or do maintenance on the drive, complete all necessary wiring to start the drive, then follow these steps to test the Safe Disable input. Keep a record of the test results.

1. When the two input channels are OFF (Open), make sure that the keypad flashes *STo* [*Safe Torque OFF*], and make sure that the motor is not running.
2. Monitor the ON/OFF status of the input channels and make sure that MFDO set to the EDM function operates as shown in [Table 5.26](#).

If one or more of these items are true, the ON/OFF status of the MFDO may not display correctly on the keypad.

- Incorrect parameter settings.
- A problem with an external device.
- The external wiring has a short circuit or is disconnected.
- There is damage to the device.

Find the cause and repair the problem to correctly display the status.

3. Make sure that the EDM signal operates during usual operation as shown in [Table 5.26](#).

## Network Communications

---

|            |  |            |
|------------|--|------------|
| <b>6.1</b> | <b>Section Safety .....</b>                | <b>204</b> |
| <b>6.2</b> | <b>Field Bus Network Support.....</b>      | <b>205</b> |
| <b>6.3</b> | <b>MEMOBUS/Modbus Communications .....</b> | <b>206</b> |

## 6.1 Section Safety

 **DANGER**

**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

## 6.2 Field Bus Network Support

You can use the PLC to control and monitor the drive through the network. The drive has a standard RS-485 interface (MEMOBUS/Modbus communications). Install a separately sold communication option on the drive to support other network communications.

### ◆ Available Communication Options

Refer to [Table 6.1](#) for the fieldbus networks that are compatible with the drive. Contact Yaskawa or your nearest sales representative to order a communication option.

**Table 6.1 Available Fieldbus Network**

| Type of Communications | Option model | Type of Communications | Option model |
|------------------------|--------------|------------------------|--------------|
| CC-Link                | SI-C3        | DeviceNet              | SI-N3        |
| MECHATROLINK-II        | SI-T3        | Modbus TCP/IP          | SI-EM3       |
| MECHATROLINK-III       | SI-ET3       | PROFINET               | SI-EP3       |
| PROFIBUS-DP            | SI-P3        | EtherNet/IP            | SI-EN3       |
| CANopen                | SI-S3        | Powerlink              | SI-EL3       |
| EtherCAT               | SI-ES3       |                        |              |

## 6.3 MEMOBUS/Modbus Communications

This section gives detailed information about the parameters, error codes and communication procedures for MEMOBUS/Modbus communications.

### ◆ Configure Master/Slave

You can use the MEMOBUS/Modbus protocol for serial communication with programmable controllers (PLC). The MEMOBUS/Modbus communication uses one master (PLC) and a maximum of 31 slave drives. Serial communications usually starts with a signal from the master to the slave drives.

A slave drive that receives a command from the master does the specified function and then sends a response back to the master. You must set the address number for each slave drive before you start signal communications to make sure that the master uses the correct address numbers.

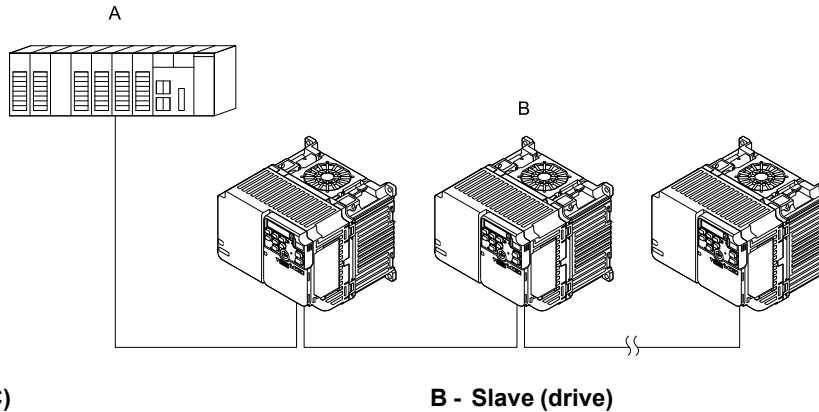


Figure 6.1 PLC and Drive Connection Example

### ◆ Communication Specifications

Table 6.2 lists the specifications for the MEMOBUS/Modbus communications.

Table 6.2 MEMOBUS/Modbus Specifications

| Item                                | Specification  |
|-------------------------------------|--|
| Interface                           | RS-485   |
| Synchronization method              | Asynchronous (start-stop synchronization)                                    |
| Communication parameter             | Communications speed: 1.2, 2.4, 4.8, 9.6, 19.2, 38.4, 57.6, 76.8, 115.2 kbps |
|                                     | Data length: 8 bit (fixed)   |
|                                     | Parity: even, odd, none  |
|                                     | Stop bit 1 bit (fixed)   |
| Communication protocol              | MEMOBUS/Modbus standard (RTU mode only)                                      |
| Number of possible units to connect | Maximum: 31 units  |

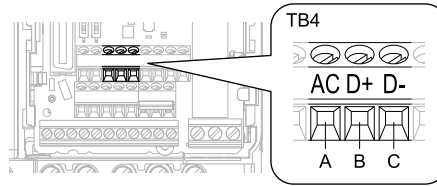
### ◆ Communication with the PLC

This section gives information about the settings for the termination resistor and how to connect to MEMOBUS/Modbus communications. MEMOBUS/Modbus communications uses an RS-485 interface (2-wire sequence).

#### ■ Connect Communications Cable

Use this procedure to start communication between the PLC and drive.

1. De-energize the drive then connect the communications cable to the PLC and the drive. The drive uses terminal TB4 for MEMOBUS/Modbus communications.



**A - Terminal AC: Common ground**

**B - Terminal D+: Communication input/output (+)**

**C - Terminal D-: Communication input/output (-)**

**Figure 6.2 Communications Cable Connection Terminal (TB4)**

**Note:**


Isolate the communications wiring from the main circuit wiring and other high-power wiring. Use shielded wires for the communications wiring and connect cable sheaths to the ground terminal of the drive. Incorrect wiring procedures could cause drive malfunction because of electrical interference.

2. Install the termination resistor on the network termination slave drive. Set DIP switch S2 to the ON position to enable the termination resistor on the drive.
3. Energize the drive.
4. Use the drive keypad to set the necessary communications parameters *H5-01 to H5-12*.
  - *H5-01 [Drive Node Address]*
  - *H5-02 [Communication Speed Selection]*
  - *H5-03 [Communication Parity Selection]*
  - *H5-04 [Communication Error Stop Method]*
  - *H5-05 [Comm Fault Detection Selection]*
  - *H5-06 [Drive Transmit Wait Time]*
  - *H5-09 [CE Detection Time]*
  - *H5-10 [Modbus Register 0025H Unit Sel]*
  - *H5-11 [Comm ENTER Command Mode]*
  - *H5-12 [Run Command Method Selection]*
5. De-energize the drive and wait for the keypad display to turn off.
6. Energize the drive.

The drive is prepared to start communication with the PLC.

### ■ Set the Termination Resistor

You must enable the termination resistor on the slave terminal of the drive to use MEMOBUS/Modbus communications. Use DIP switch S2 on the terminal block to enable and disable the built-in termination resistor. Refer to [Figure 6.3](#) for an example of how to set DIP switch S2. Use the tip of a tweezers or a jig with a tip width of 0.8 mm (0.03 in) to set the DIP switch. When you install the drive at the end of the communication line, set DIP switch S2 to ON. Set DIP switch S2 to OFF on all other drives.

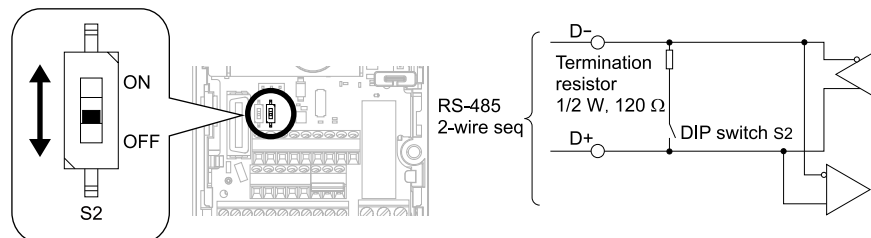

**Figure 6.3 MEMOBUS/Modbus Communication Terminal and DIP Switch S2**

### ■ Wiring Diagram for More than One Drive

[Figure 6.4](#) shows the correct wiring when you use more than one drive with MEMOBUS/Modbus communications.

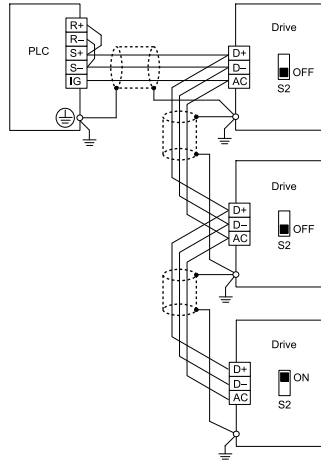


Figure 6.4 Wiring Diagram for More than One Drive

**Note:**

1. Set DIP switch S2 to the ON position on the last drive of the MEMOBUS/Modbus communication network to enable the termination resistor.
2. For long cable runs or multi-floor installations, connect the shield to ground at only one device on the network (at the PLC, if possible) to prevent ground loops. When you remove the shield from the ground terminal, it can increase the communication quality in some drive installation locations.

◆ **MEMOBUS/Modbus Drive Operations**

Drive parameters will apply to the settings when the drive is running during MEMOBUS/Modbus communications. This section gives information about the available functions and their related parameters.

■ **Executable Functions**

A PLC can do these operations with MEMOBUS/Modbus communications. Parameter settings (except *H5-xx*) do not have an effect on the availability of these operations.

- Monitor the drive status and operate the drive
- Set and view parameters
- Fault Reset Procedure
- Multi-function input settings

The input command from MEMOBUS/Modbus communications and MFDI terminals (S1 to S7) are linked by a logical OR operation.

■ **Drive Control**

Select the external command that sets the frequency references and motor run/stop with MEMOBUS/Modbus communications. Use the information in Table 6.3 to set the parameters as specified by the application.

Table 6.3 Necessary Parameter Settings for Drive Control from MEMOBUS/Modbus

| LOCAL Control Selected | No.   | Name                            | Setting Value                     |
|------------------------|-------|---------------------------------|-----------------------------------|
| External reference 1   | b1-01 | Frequency Reference Selection 1 | 2 [Memobus/Modbus Communications] |
|                        | b1-02 | Run Command Selection 1         | 2 [Memobus/Modbus Communications] |
| External reference 2   | b1-15 | Frequency Reference Selection 2 | 2 [Memobus/Modbus Communications] |
|                        | b1-16 | Run Command Selection 2         | 2 [Memobus/Modbus Communications] |

For more information about operation mode selection, refer to [Frequency Reference Selection 1] and b1-02 [Run Command Selection 1]. Refer to H1-xx = 2 [MFDI Function Select = External Reference 1/2 Selection] for more information about external command.

◆ **Communications Timing**

To prevent overrun of the slave side, the master cannot send a message to the same drive for a selected length of time.

To prevent overrun of the master side, the slave cannot send a response message to the master for a selected length of time.



This section gives information about message timing.


## ■ Command Message from Master to Slave

To prevent data loss and overrun, after the master receives a message from the slave, the master cannot send the same type of command message to the same slave for a selected length of time. The minimum wait time is different for each type of message. Refer to [Table 6.4](#) to find the minimum wait times.

**Table 6.4 Minimum Wait Time to Send a Message**

| Command Type | Example  | Minimum Wait Time       |
|--------------|--|-------------------------|
| 1            | <ul style="list-style-type: none"> <li>Operation commands (Run command, stop command)</li> <li>I/O settings</li> <li>Reading the motor and parameter setting values</li> </ul> | 5 ms <sup>*/1</sup>     |
| 2            | Writing a parameter  | 50 ms <sup>*/1</sup>    |
| 3            | Writing of modified data with the Enter command  | 3 to 5 s <sup>*/1</sup> |

\*1 When the drive receives a message in the minimum wait time, it does command type 1 and sends a response message. If the drive receives command type 2 or command type 3 messages in the minimum wait time, it will trigger a communications error or the drive will ignore the command.

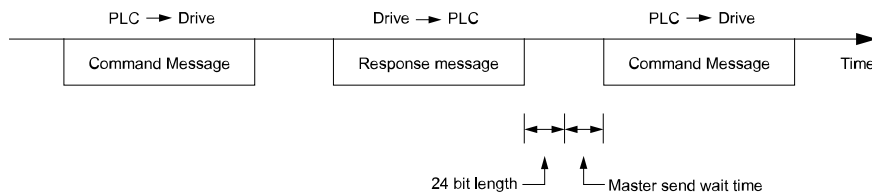


**Figure 6.5 Minimum Wait Time to Send a Message**

You must set the timer in the master to measure the length of time for the slave to respond to the master. If you set the timer, but the slave does not send a response message in a specified length of time, the master will send the message again.

## ■ Response Message from Slave

The slave receives the command message from the master then processes the data it received. The slave then waits for the time set in *H5-06 [Drive Transmit Wait Time]* then sends a response message to the master. If overrun occurs on the master, increase the wait time set in *H5-06*.

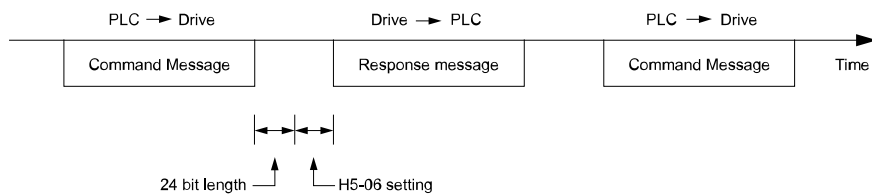


**Figure 6.6 Response Wait Time**

## ◆ Message Format

### ■ Communication Message Description

In MEMOBUS/Modbus communications, the master sends commands to the slave, then the slave responds. The master and slave send their messages in the configuration in [Figure 6.7](#). The length of the data changes when the description of the command (function) changes.

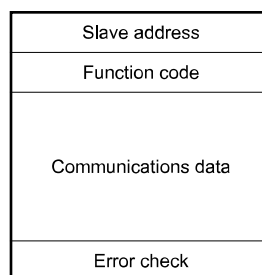

**Figure 6.7 Message Format**

## ■ Slave Address

Set the slave address of the drive to 00 to FF (Hex.). When the slave address is 00 (Hex), the master sends the command and all slaves receive the command.

The slave will not send a response message to the master.

## ■ Function Code

There are five function codes that set commands. [Table 6.5](#) shows the different codes.

**Table 6.5 Function Codes**

| Function Code (Hex.) | Subfunction Code (Hex.) | Function   | Command Message            |                            | Response Message           |                            |
|----------------------|-------------------------|--|----------------------------|----------------------------|----------------------------|----------------------------|
|                      |                         |  | Minimum Data Length (byte) | Maximum Data Length (byte) | Minimum Data Length (byte) | Maximum Data Length (byte) |
| 03                   | -                       | Read Multiple Holding Registers  | 8                          | 8                          | 7                          | 37                         |
| 08                   | -                       | Loopback Test  | 8                          | 8                          | 8                          | 8                          |
| 10                   | -                       | Writing to Multiple Holding Registers                                  | 11                         | 41                         | 8                          | 8                          |
| 5A                   | -                       | Writing to Multiple Holding Registers / Reading the Register Indicated | 11                         | 41                         | 17                         | 17                         |
| 67                   | 010D                    | Reading the Contents of Non-Consecutive Holding Registers              | 10                         | 248                        | 10                         | 248                        |
|                      | 010E                    | Writing to Non-Consecutive Holding Registers                           | 14                         | 250                        | 8                          | 8                          |

## ■ Communications Data

Communications data is a series of data that uses the combination of the communications register number and the data for these registers. The data length changes when the description of the command changes. For a loopback test, it switches to test code.

The communications register for the drive has a 2-byte length. Data that is written to the register for the drive is usually 2 bytes. Register data that is read from the drive is also 2 bytes.

## ■ Error Check

Error check uses the CRC-16 method to detect transmission errors. Use the procedure in this section to calculate CRC-16.

### Command Data

When the drive receives data, it will make sure that there are no errors in the data. The drive uses the procedure below to calculate CRC-16, then the drive compares that data with the CRC-16 value in the message. If the CRC-16 values do not agree, the drive will not execute a command message.

When you calculate CRC-16 in MEMOBUS/Modbus communications, make sure that you set the start value as FFFF (Hex.). All 16 bits must be 1.

Use this procedure to calculate CRC-16:

1. Make sure that the start value is FFFF (Hex.).
2. Calculate the FFFF (Hex.) start value and the XOR of the slave address (exclusive OR).
3. Move the step 2 results one column to the right. Do this shift until the carry bit is 1.
4. When the carry bit is 1, calculate XOR via the result from the above step 3 and A001 (Hex.).
5. Do steps 3 and 4 until the 8th shift to the right.
6. Use the result of step 5 to calculate the XOR and the data of the following messages (function code, register address, data). Do steps 3 to 5 until the last data, then calculate.
7. The result of the last right shift or the value of the last XOR calculation is the result for CRC-16.

[Table 6.6](#) lists examples of the CRC-16 calculation of slave address 02 (Hex.) and function code 03 (Hex.). The calculated results of CRC-16 for this section is D140 (Hex.).

### Note:

The calculation example only gives information about some error checks with CRC-16. The drive will do the same error checks for the next data.

Table 6.6 CRC-16 Calculation Example

| Description                                       | Calculation         | Overflow | Description                        | Calculation                | Overflow |
|---|---------------------|----------|------------------------------------|----------------------------|----------|
| Initial value (FFFF (Hex.))                       | 1111 1111 1111 1111 | -        | Function code 03 (Hex.)            | 0000 0011                  | -        |
| Address 02 (Hex.)                                 | 0000 0010           | -        | XOR w result                       | 1000 0001 0011 1101        | -        |
| XOR w initial value                               | 1111 1111 1111 1101 |          | Shift 1                            | 0100 0000 1001 1110        | 1        |
| Shift 1   | 0111 1111 1111 1110 | 1        | XOR w A001 (Hex.)                  | 1010 0000 0000 0001        | -        |
| XOR w A001 (Hex.)                                 | 1010 0000 0000 0001 | -        | XOR result                         | 1110 0000 1001 1111        | -        |
| XOR result  | 1101 1111 1111 1111 | -        | Shift 2                            | 0111 0000 0100 1111        | 1        |
| Shift 2   | 0110 1111 1111 1111 | 1        | XOR w A001 (Hex.)                  | 1010 0000 0000 0001        | -        |
| XOR w A001 (Hex.)                                 | 1010 0000 0000 0001 | -        | XOR result                         | 1101 0000 0100 1110        | -        |
| XOR result  | 1100 1111 1111 1110 | -        | Shift 3                            | 0110 1000 0010 0111        | 0        |
| Shift 3   | 0110 0111 1111 1111 | 0        | Shift 4                            | 0011 0100 0001 0011        | 1        |
| Shift 4   | 0011 0011 1111 1111 | 1        | XOR w A001 (Hex.)                  | 1010 0000 0000 0001        | -        |
| XOR w A001 (Hex.)                                 | 1010 0000 0000 0001 | -        | XOR result                         | 1001 0100 0001 0010        | -        |
| XOR result  | 1001 0011 1111 1110 | -        | Shift 5                            | 0100 1010 0000 1001        | 0        |
| Shift 5   | 0100 1001 1111 1111 | 0        | Shift 6                            | 0010 0101 0000 0100        | 1        |
| Shift 6   | 0010 0100 1111 1111 | 1        | XOR w A001 (Hex.)                  | 1010 0000 0000 0001        | -        |
| XOR w A001 (Hex.)                                 | 1010 0000 0000 0001 | -        | XOR result                         | 1000 0101 0000 0101        | -        |
| XOR result  | 1000 0100 1111 1110 | -        | Shift 7                            | 0100 0010 1000 0010        | 1        |
| Shift 7   | 0100 0010 0111 1111 | 0        | XOR w A001 (Hex.)                  | 1010 0000 0000 0001        | -        |
| Shift 8   | 0010 0001 0011 1111 | 1        | XOR result                         | 1110 0010 1000 0011        | -        |
| XOR w A001 (Hex.)                                 | 1010 0000 0000 0001 | -        | Shift 8                            | 0111 0001 0100 0001        | 1        |
| XOR result  | 1000 0001 0011 1110 | -        | XOR w A001 (Hex.)                  | 1010 0000 0000 0001        | -        |
| Perform operations with next data (function code) |                     |          | XOR result                         | 1101 0001 0100 0000        | -        |
|   |                     |          |                                    | 1101 0001 0100 0000        | -        |
|   |                     |          | CRC-16                             | D 1 4 0<br>(Lower) (Upper) | -        |
|   |                     |          | Continue from here with next data. |                            |          |

### Response Data

The drive does the CRC-16 calculation for the response message and makes sure that the data does not have errors. Make sure that the calculated value is the same value as the CRC-16 in the response message.

## ◆ Examples of Messages for Commands/Responses

The items in this section are examples of messages for commands/responses.

### ■ Read Multiple Holding Registers

Uses function code 03 (Hex.) to read the contents of a maximum of 16 holding registers.

Table 6.7 shows example messages when the drive reads status signal from the drive of slave 2, the error contents, fault contents, and frequency references.

Table 6.7 Message Example When Reading the Contents of Holding Register

| Byte | Command Message | Setting Data (Hex.) | Response Message (Normal) | Setting Data (Hex.) | Response Message (Fault) | Setting Data (Hex.) |
|------|-----------------|---------------------|---------------------------|---------------------|--------------------------|---------------------|
| 0    | Slave address   | 02                  | Slave address             | 02                  | Slave address            | 02                  |
| 1    | Function code   | 03                  | Function code             | 03                  | Function code            | 83                  |

| Byte | Command Message |       | Setting Data (Hex.) | Response Message (Normal) |                       | Setting Data (Hex.) | Response Message (Fault) |       | Setting Data (Hex.) |
|------|-----------------|-------|---------------------|---------------------------|-----------------------|---------------------|--------------------------|-------|---------------------|
| 2    | Starting No.    | Upper | 00                  | Data Qty                  |                       | 08                  | Error code               |       | 03                  |
| 3    |                 | Lower | 20                  | First storage register    | Upper                 | 00                  | CRC-16                   | Upper | F1                  |
| 4    | Data Qty        | Upper | 00                  |                           | Next storage register | Lower               |                          | 65    | Lower               |
| 5    |                 | Lower | 04                  | Next storage register     |                       | Upper               | 00                       | -     |                     |
| 6    | CRC-16          | Upper | 45                  |                           | Next storage register | Lower               | 00                       | -     |                     |
| 7    |                 | Lower | F0                  | Next storage register     |                       | Upper               | 00                       | -     |                     |
| 8    | -               |       |                     |                           | Next storage register | Lower               | 00                       | -     |                     |
| 9    | -               |       |                     | Next storage register     |                       | Upper               | 01                       | -     |                     |
| 10   | -               |       |                     |                           | CRC-16                | Lower               | F4                       | -     |                     |
| 11   | -               |       |                     | CRC-16                    |                       | Upper               | AF                       | -     |                     |
| 12   | -               |       |                     |                           | Lower                 | 82                  | -                        |       |                     |

■ **Loopback Test**

The loopback test uses function code 08 (Hex.) and returns the command message as a response message. This test checks communication between the master and slave. The test code and data can use desired values.

Table 6.8 shows examples of messages given out when the loopback test is done with the drive of slave 1.

**Table 6.8 Message Examples from the Loopback Test**

| Byte | Command Message |       | Setting Data (Hex.) | Response Message (Normal) |       | Setting Data (Hex.) |
|------|-----------------|-------|---------------------|---------------------------|-------|---------------------|
| 0    | Slave address   |       | 01                  | Slave address             |       | 01                  |
| 1    | Function code   |       | 08                  | Function code             |       | 08                  |
| 2    | Test code       | Upper | 00                  | Test code                 | Upper | 00                  |
| 3    |                 | Lower | 00                  |                           | Lower | 00                  |
| 4    | Data            | Upper | A5                  | Data                      | Upper | A5                  |
| 5    |                 | Lower | 37                  |                           | Lower | 37                  |
| 6    | CRC-16          | Upper | DA                  | CRC-16                    | Upper | DA                  |
| 7    |                 | Lower | 8D                  |                           | Lower | 8D                  |

■ **Writing to Multiple Holding Registers**

You can write the data that you set to the number of holding registers set in function code 10 (hex). You must configure the number of the holding registers and each 8 higher bits and 8 lower bits in order in the command message for the write data. You can write to a maximum of 16 holding registers.

Table 6.9 shows example messages when you use the PLC to set Forward run in the drive of slave 1 with a 60.00 Hz frequency reference.

When you rewrite the parameter value with the write command through the *H5-11 [Comm ENTER Command Mode]* setting, you must use the Enter command to save and enable the contents of the changes. Refer to *H5-11: Comm ENTER Command Mode on page 660* and *Enter Command on page 215* for more information.

**Table 6.9 Message Example When Writing to Multiple Holding Registers**

| Byte | Command Message |                     | Response Message (When Normal) |                     | Response Message (When There is a Fault) |                     |
|------|-----------------|---------------------|--------------------------------|---------------------|--|---------------------|
|      |                 | Setting Data (Hex.) |                                | Setting Data (Hex.) |  | Setting Data (Hex.) |
| 0    | Slave address   |                     | Slave address                  | 01                  | Slave address                            |                     |
| 1    | Function code   |                     | Function code                  | 10                  | Function code                            |                     |
| 2    | Starting No.    | Upper               | 00                             | Starting No.        | Upper                                    | 00                  |
| 3    |                 | Lower               | 01                             |                     | Lower                                    | 01                  |
| 4    | Data Quantity   | Upper               | 00                             | Data Quantity       | Upper                                    | 00                  |
| 5    |                 | Lower               | 02                             |                     | Lower                                    | 02                  |
|      |                 |                     |                                |                     | -  |                     |

| Byte | Command Message |                     | Response Message (When Normal) |                     | Response Message (When There is a Fault) |                     |   |
|------|-----------------|---------------------|--------------------------------|---------------------|--|---------------------|---|
|      |                 | Setting Data (Hex.) |                                | Setting Data (Hex.) |  | Setting Data (Hex.) |   |
| 6    | Byte No.        |                     | 04                             | CRC-16              | Upper                                    | 10                  | - |
| 7    | First data      | Upper               | 00                             |                     | Lower                                    | 08                  | - |
| 8    |                 | Lower               | 01                             | -                   | -  | -                   |   |
| 9    | Next data       | Upper               | 17                             | -                   | -  | -                   |   |
| 10   |                 | Lower               | 70                             | -                   | -  | -                   |   |
| 11   | CRC-16          | Upper               | 6D                             | -                   | -  | -                   |   |
| 12   |                 | Lower               | B7                             | -                   | -  | -                   |   |

**Note:**

The number of bytes set in the command message set the data quantity  $\times 2$  during the command message. The response message uses the same formula.

### ■ Writing to More than One Holding Register/Reading the Indicated Register

The drive uses function code 5A (Hex.) to write to more than one register, then it reads the contents of four holding registers at the same time.

The function for writing to more than one register is the same as the function for function code 10 (Hex.). You can write to a maximum of 16 holding registers.

The four holding registers to be read from are specified in *H5-25 to H5-28 [Function 5A Register x Selection]*.

Table 6.10 shows example messages when you write to more than one holding register or when you read more than one command register. Table 6.10 uses this register data for the examples:

- The drive for slave 1 is set for Forward run with a frequency reference of 60.00 Hz.
- The setting in *H5-25 to H5-28* and the data in the specified holding registers are as follows.
  - *H5-25* = 0044H: *U1-05 [Motor Speed]* = 60.00 Hz (6000 = 1770H)
  - *H5-26* = 0045H: *U1-06 [Output Voltage Ref]* = 200.0 V (2000 = 07D0H)
  - *H5-27* = 0042H: *U1-03 [Output Current]* = 50% of drive rated current (100% = 8192, 50% = 4096 = 1000H)
  - *H5-28* = 0049H: *U1-10 [Input Terminal Status]* = 00H

When you rewrite the parameter value with the write command through the *H5-11 [Comm ENTER Command Mode]* setting, you must use the Enter command to save and enable the contents of the changes. Refer to *H5-11: Comm ENTER Command Mode on page 660* and *Enter Command on page 215* for more information.

**Table 6.10 Message Example When Writing to More than One Holding Register/Reading the Indicated Register**

| Byte | Command Message |                     | Response Message (When Normal) |   | Response Message (When There is a Fault) |                     |   |       |
|------|-----------------|---------------------|--------------------------------|---|--|---------------------|---|-------|
|      |                 | Setting Data (Hex.) |                                | Setting Data (Hex.)                                   |  | Setting Data (Hex.) |   |       |
| 0    | Slave address   |                     | Slave address                  | 01  | Slave address                            |                     |   |       |
| 1    | Function code   |                     | Function code                  | 5A  | Function code                            |                     |   |       |
| 2    | Starting No.    | Upper               | 00                             | Register status                                       |  | 0F                  |   |       |
| 3    |                 | Lower               | 01                             | Data in holding register 1 selected with <i>H5-25</i> | Upper                                    | 17                  | Data in holding register 1 selected with <i>H5-25</i> |       |
| 4    | Data Quantity   | Upper               | 00                             | Lower   | 70                                       | Lower               | 70  |       |
| 5    |                 | Lower               | 02                             | Data in holding register 2 selected with <i>H5-26</i> | Upper                                    | 07                  | Data in holding register 2 selected with <i>H5-26</i> |       |
| 6    | Byte No.        |                     | 04                             | Lower   | D0                                       | Lower               | D0  |       |
| 7    | First data      | Upper               | 00                             | Data in holding register 3 selected with <i>H5-27</i> | Upper                                    | 10                  | Data in holding register 3 selected with <i>H5-27</i> |       |
| 8    |                 | Lower               | 01                             | Lower   | 00                                       | Lower               | 00  |       |
| 9    | Next data       | Upper               | 17                             | Data in holding register 4 selected with <i>H5-28</i> | Upper                                    | 00                  | Data in holding register 4 selected with <i>H5-28</i> |       |
| 10   |                 | Lower               | 70                             | Lower   | 00                                       | Lower               | 00  |       |
| 11   | CRC-16          | Upper               | 4F                             | Starting No.  | Upper                                    | 00                  | Error code  |       |
| 12   |                 | Lower               | 43                             |   | Lower                                    | 01                  | CRC-16  | Upper |
| 13   | -               |                     | Data Quantity                  | Upper   | 00                                       | Lower               |   | 6C    |
| 14   | -               |                     |                                | Lower   | 02                                       | -                   |   |       |

## 6.3 MEMOBUS/Modbus Communications

| Byte | Command Message |                     | Response Message (When Normal) |                     |    | Response Message (When There is a Fault) |  |
|------|-----------------|---------------------|--------------------------------|---------------------|----|--|--|
|      |                 | Setting Data (Hex.) |                                | Setting Data (Hex.) |    | Setting Data (Hex.)                      |  |
| 15   | -               |                     | CRC-16                         | Upper               | AC | -  |  |
| 16   | -               |                     |                                | Lower               | D0 | -  |  |

**Note:**

The number of bytes set in the command message set the data quantity  $\times 2$  during the command message.

| Register status |   |
|-----------------|---|
| bit 0           | Data in register 1 selected with H5-25<br>1: Successfully read the register<br>0: Register read error |
| bit 1           | Data in register 2 selected with H5-26<br>1: Successfully read the register<br>0: Register read error |
| bit 2           | Data in register 3 selected with H5-27<br>1: Successfully read the register<br>0: Register read error |
| bit 3           | Data in register 4 selected with H5-28<br>1: Successfully read the register<br>0: Register read error |
| bit 4           | Not used  |
| bit 5           | Not used  |
| bit 6           | Not used  |
| bit 7           | Not used  |

### ■ Reading the Contents of Non-Consecutive Holding Registers

The drive uses function code 67 (Hex.) and subfunction code 010D (Hex.) to read data with a maximum of 120 holding registers.

You must give the holding register number from which to read separately.

Table 6.11 shows example messages when you read the frequency reference and torque limit from the drive for slave 1. Table 6.11 uses this register data for the examples.

- 0024H: U1-01 [Frequency Reference] = 60.00 Hz (6000 = 1770H)
- 0028H: U1-09 [Torque Reference] = 100.0% (1000 = 03E8H)

**Table 6.11 Message Example When Reading the Contents of Non-Consecutive Holding Registers**

| Byte | Command Message        |       |                     | Response Message (When Normal) |                     |    | Response Message (When There is a Fault) |       |                     |
|------|------------------------|-------|---------------------|--------------------------------|---------------------|----|--|-------|---------------------|
|      |                        |       | Setting Data (Hex.) |                                | Setting Data (Hex.) |    | Setting Data (Hex.)                      |       | Setting Data (Hex.) |
| 0    | Slave address          |       | 01                  | Slave address                  |                     | 01 | Slave address                            |       | 01                  |
| 1    | Function code          |       | 67                  | Function code                  |                     | 67 | Function code                            |       | E7                  |
| 2    | Subfunction Code       | Upper | 01                  | Subfunction Code               | Upper               | 01 | Error code                               |       | 02                  |
| 3    |                        | Lower | 0D                  |                                | Lower               | 0D | CRC-16                                   | Upper | EA                  |
| 4    | Data Quantity          | Upper | 00                  | Byte No.                       | Upper               | 00 |  | Lower | 31                  |
| 5    |                        | Lower | 02                  |                                | Lower               | 04 | -  |       |                     |
| 6    | Holding register 1 No. | Upper | 00                  | Holding register 1 data        | Upper               | 17 | -  |       |                     |
| 7    |                        | Lower | 24                  |                                | Lower               | 70 | -  |       |                     |
| 8    | Holding register 2 No. | Upper | 00                  | Holding register 2 data        | Upper               | 03 | -  |       |                     |
| 9    |                        | Lower | 28                  |                                | Lower               | E8 | -  |       |                     |
| 10   | CRC-16                 | Upper | 8B                  | CRC-16                         | Upper               | 47 | -  |       |                     |
| 11   |                        | Lower | 29                  |                                | Lower               | ED | -  |       |                     |

**Note:**

The number of bytes set in the command message set the data quantity  $\times 2$  during the command message.

## ■ Writing to Non-Consecutive Holding Registers

The drive uses function code 67 (Hex.) and subfunction code 010E (Hex.) to write data with a maximum of 60 holding registers.

You must give the holding register number from which to write separately.

Table 6.12 shows example messages when you write the frequency reference and torque limit from the drive for slave 1. Table 6.12 uses these specified holding registers data for the examples.

- 0002H: Frequency Reference = 60.00 Hz (6000 = 1770H)
- 0004H: Torque Limit = 150.0% (1500 = 05DCH)

When you rewrite the parameter value with the write command through the *H5-11 [Comm ENTER Command Mode]* setting, you must use the Enter command to save and enable the contents of the changes. Refer to *H5-11: Comm ENTER Command Mode on page 660* and *Enter Command on page 215* for more information.

**Table 6.12 Message Example When Writing to Non-Consecutive Holding Registers**

| Byte | Command Message         |       |                     | Response Message (When Normal) |       |                     | Response Message (When There is a Fault) |       |                     |
|------|-------------------------|-------|---------------------|--------------------------------|-------|---------------------|--|-------|---------------------|
|      |                         |       | Setting Data (Hex.) |                                |       | Setting Data (Hex.) |  |       | Setting Data (Hex.) |
| 0    | Slave address           |       | 01                  | Slave address                  |       | 01                  | Slave address                            |       | 01                  |
| 1    | Function code           |       | 67                  | Function code                  |       | 67                  | Function code                            |       | E7                  |
| 2    | Subfunction Code        | Upper | 01                  | Subfunction Code               | Upper | 01                  | Error code                               |       | 02                  |
| 3    |                         | Lower | 0E                  |                                | Lower | 0E                  | CRC-16                                   | Upper | EA                  |
| 4    | Data Quantity           | Upper | 00                  | Data Quantity                  | Upper | 00                  |  | Lower | 31                  |
| 5    |                         | Lower | 02                  |                                | Lower | 02                  | -  |       |                     |
| 6    | Byte No.                | Upper | 00                  | CRC-16                         | Upper | D5                  | -  |       |                     |
| 7    |                         | Lower | 04                  |                                | Lower | FC                  | -  |       |                     |
| 8    | Holding register 1 No.  | Upper | 00                  | -                              |       |                     | -  |       |                     |
| 9    |                         | Lower | 02                  | -                              |       |                     | -  |       |                     |
| 10   | Holding register 1 data | Upper | 17                  | -                              |       |                     | -  |       |                     |
| 11   |                         | Lower | 70                  | -                              |       |                     | -  |       |                     |
| 12   | Holding register 2 No.  | Upper | 00                  | -                              |       |                     | -  |       |                     |
| 13   |                         | Lower | 04                  | -                              |       |                     | -  |       |                     |
| 14   | Holding register 2 data | Upper | 05                  | -                              |       |                     | -  |       |                     |
| 15   |                         | Lower | DC                  | -                              |       |                     | -  |       |                     |
| 16   | CRC-16                  | Upper | 55                  | -                              |       |                     | -  |       |                     |
| 17   |                         | Lower | 59                  | -                              |       |                     | -  |       |                     |

**Note:**

The number of bytes set in the command message set the data quantity  $\times 2$  during the command message.

## ◆ Enter Command

When you use MEMOBUS/Modbus communications to write parameters from the PLC to the drive, *H5-11 [Comm ENTER Command Mode]* lets you use the Enter command to enable these parameters. This section gives information about the Enter command.

### ■ Types of Enter Commands

The drive supports the two Enter commands shown in Table 6.13.

Write 0 to register number 0900 or 0910 (Hex.) to enable the Enter command. You can only write to these registers. If you read to these registers, it will cause an error.

**Table 6.13 Types of Enter Commands**

| Register No. (Hex.) | Description  |
|---------------------|--|
| 0900                | When you write parameter data to the EEPROM, you will enable the data on the RAM at the same time. This process saves the parameter changes even if you de-energize the drive. |
| 0910                | This updates the data on the RAM, but does not write data to the EEPROM. If you de-energize the drive, you will lose the parameter changes.                                    |

**Note:**

- You can write the EEPROM to the drive a maximum of 100,000 times. Do not frequently execute the Enter command (0900 (Hex.)) that is written to EEPROM.
- The Enter command register is write-only. If this register is read, it will cause a Register Number Error (02 (Hex.)).
- When the command data or broadcast message is transmitted to the drive, the Enter command is not necessary.

**■ Functions of the Enter Command when Replacing a Previous Generation Drive**

When you replace a previous generation Yaskawa drive with this product, you must set the Enter command function for this product the same as the previous product. The Enter command function is different for Yaskawa G7, F7-series, and V7-series drives.

Use *H5-11* to set the Enter command function:

- When replacing G7 and F7 series drives, set *H5-11 = 0* [*ENTER Command Required*].
- When replacing V7 series drives, set *H5-11 = 1* [*ENTER Command Not Required*].
- When replacing 1000-series drives, set *H5-11* to the same value as the drive you replaced.

**Table 6.14 Enter Command Function Differences**

| H5-11 Settings                                       | H5-11 = 0  | H5-11 = 1   |
|--|--|---|
| The drive you replaced                               | G7, F7   | V7  |
| Time when the parameter settings are enabled         | When the drive receives the Enter command from the master  | When you change the parameter settings  |
| Upper and lower limit check                          | Checks the upper and lower limits and considers the related parameter settings.  | Checks the upper and lower limit of the changed parameter only.   |
| Default setting of related parameters                | Will not change related parameter settings. You must change the parameters manually.   | Automatically changes the default settings for the related parameters.  |
| Fault detection when you set more than one parameter | Accepts and responds as usual to correct setting data if the data contains parameter setting errors. The drive discards the disabled setting data, but will not return an error message. | If there is a setting error in a parameter, the drive responds with a fault. The drive discards the data that was sent. |

**◆ Self-Diagnostics**

The drive can use Self-Diagnostics to find the operation of the serial communications interface circuit. Self-Diagnostics connects the transmission terminal to the reception terminal on the control circuit. It then transmits the data sent by the drive and makes sure that the drive can communicate correctly.

Use this procedure to do Self-Diagnostics:

1. Energize the drive.
2. Set *H1-06 = 67* [*Terminal S6 Function Select = Communications test mode*].
3. De-energize the drive.



4. Connect a jumper between control circuit terminals S6 and SN.

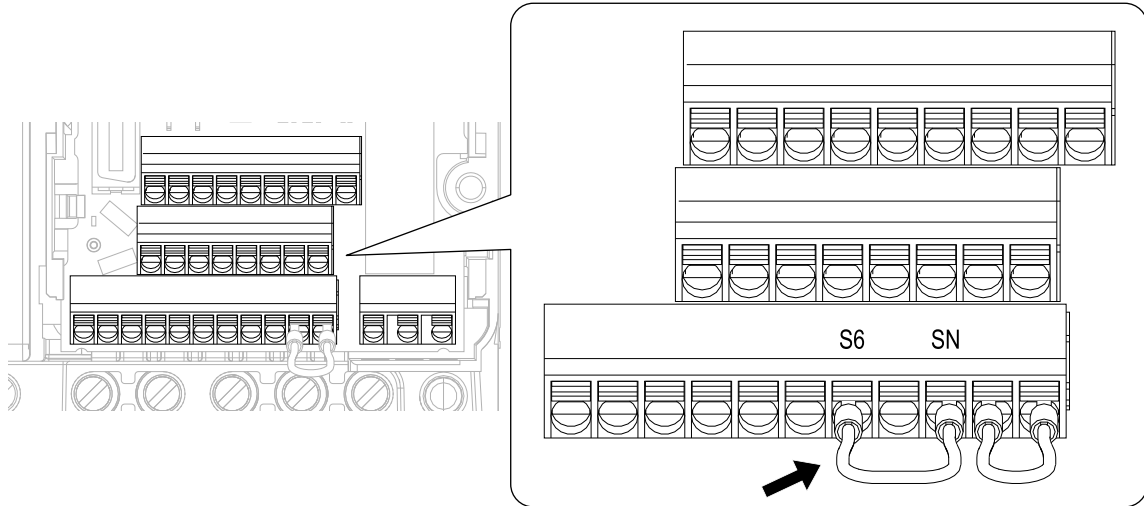


Figure 6.8 Self-Diagnostics Jumper Terminals

5. Energize the drive.
6. When normal, the keypad will show *PASS [MEMOBUS/Modbus Communications Test Mode Normal]*.  
When there is an error, the keypad will show *CE [MEMOBUS/Modbus Communications Error]*.
7. De-energize the drive.
8. Disconnect the wire jumper between terminals S6 and SN. Set terminal S6 to its initial function.

Self-Diagnostics is complete and the drive returns to its usual function.

### ◆ Communications Data Table

The communication data types are command data, monitor data, and broadcast message. [Command Data on page 217](#), [Monitor Data on page 219](#), and [Broadcast Messages on page 230](#) show the communications data.

Refer to the Parameter List for parameter communications registers.

### ■ Command Data

You can read and write command data.

**Note:**

Set the reserved bit to 0. Do not write the data in the reserved register or the monitor register.

Table 6.15 MEMOBUS/Modbus Communications Command Data

| Register No. (Hex.) | Description   |  |
|---------------------|---|--|
| 0000                | Reserved  |  |
| 0001                | Run command, multi-function input command   |  |
|                     | bit 0   | When $H5-12 = 0$ , Forward run/stop<br>1: Forward run, 0: Stop<br>When $H5-12 = 1$ , run/stop<br>1: Run, 0: Stop   |
|                     | bit 1   | When $H5-12 = 0$ , Reverse run/stop<br>1: Reverse run, 0: Stop<br>When $H5-12 = 1$ , Forward/Reverse run<br>1: Reverse, 0: Forward run   |
|                     | bit 2   | External fault<br>1: EF0 [Option Card External Fault]  |
|                     | bit 3   | Fault Reset<br>1: Reset command  |
|                     | bit 4   | Multi-function input 1<br>When the multi-function input command is $H1-01 = 40$ [Forward Run Command (2-Wire Seq)], bit 4 is "ComRef."<br><b>Note:</b><br>When you switch the bit ON as ComRef, the frequency reference source changes to MEMOBUS/Modbus communications. When you connect a communication option to the drive, the frequency reference source gives priority to the communications option. |
|                     | bit 5   | Multi-function input 2<br>When the multi-function input command is $H1-02 = 41$ [Reverse Run Command (2-Wire Seq)], bit 5 is "ComCtrl."<br><b>Note:</b><br>When you switch the bit ON as ComCtrl, the Run Command source changes to MEMOBUS/Modbus communications. When you connect a communication option to the drive, the Run Command source gives priority to the communications option.               |
|                     | bit 6   | Multi-function input 3   |
|                     | bit 7   | Multi-function input 4   |
|                     | bit 8   | Multi-function input 5   |
|                     | bit 9   | Multi-function input 6   |
|                     | bit A   | Multi-function input 7   |
|                     | bit B - F   | Reserved   |
| 0002                | Frequency Reference   | $o1-03$ [Frequency Display Unit Selection] (unsigned) sets the units.  |
| 0003                | Output voltage gain   | Units: 0.1%<br>Setting range: 20 (2.0%) to 2000 (200.0%), the default value at energize: 1000 (100.0%)   |
| 0004                | Torque limit (0.1% signed)  |  |
| 0005                | Torque compensation (0.1% signed)   |  |
| 0006                | PID setpoint (0.01% signed)   |  |
| 0007                | Setting for the multi-function analog monitor output terminal AM (10 V/4000 (Hex.)) |  |
| 0008                | Reserved  |  |
| 0009                | MFDO setting  |  |
|                     | bit 0   | MFDO (terminal MA/MB-MC)<br>1: ON, 0: OFF  |
|                     | bit 1   | Multi-function photocoupler output 1 (terminal P1-C1)<br>1: ON, 0: OFF   |
|                     | bit 2   | Multi-function photocoupler output 2 (terminal P2-C2)<br>1: ON, 0: OFF   |
|                     | bit 3 - F   | Reserved   |
| 000A                | Pulse train output (Units: 1/1 Hz, setting range: 0 to 32000)                       |  |
| 000B - 000E         | Reserved  |  |

| Register No.<br>(Hex.) | Description   |   |
|------------------------|---|---|
| 000F                   | Command selection setting   |   |
|                        | bit 0   | Reserved  |
|                        | bit 1   | Input for the PID setpoint<br>1: Enables target values from MEMOBUS/Modbus                        |
|                        | bit 2   | Torque Limit Input<br>1: Enables setting values from MEMOBUS/Modbus                               |
|                        | bit 3   | Torque Compensation Input<br>1: Enables setting values from MEMOBUS/Modbus                        |
|                        | bit 4   | Reserved  |
|                        | bit 5   | PID feedback from the MEMOBUS/Modbus<br>1: Enables PID feedback (15FF (Hex.)) from MEMOBUS/Modbus |
|                        | bit 6 - B   | Reserved  |
|                        | bit C   | Terminal S5 input of broadcast message<br>1: Enabled, 0: Disabled                                 |
|                        | bit D   | Terminal S6 input of broadcast message<br>1: Enabled, 0: Disabled                                 |
|                        | bit E   | Terminal S7 input of broadcast message<br>1: Enabled, 0: Disabled                                 |
|                        | bit F   | Reserved  |
| 0010 - 001F            | Reserved  |   |
| 15C0                   | bit 0   | Extended multi-function input command 1   |
|                        | bit 1   | Extended multi-function input command 2   |
|                        | bit 2   | Extended multi-function input command 3   |
|                        | bit 3 - F   | Reserved  |
| 3004                   | Time Setting<br>Setting range: 0000 to 2359 (decimal), the default value at energize: 0000<br>Set the hour and the minute in HHMM format. <ul style="list-style-type: none"> <li>• HH: 00 to 23 (decimal)</li> <li>• MM: 00 to 59 (decimal)</li> </ul>  |   |
| 3005                   | Year and Day Setting<br>Setting range: 1600 to 9906 (decimal), the default value at energize: 1600<br>Set the year and the day of the week in YYDW format. <ul style="list-style-type: none"> <li>• YY: the last two digits of the year from 16 to 99 (decimal)</li> <li>• DW: the day of the week               <ul style="list-style-type: none"> <li>– Sunday: 00</li> <li>– Monday: 01</li> <li>– Tuesday: 02</li> <li>– Wednesday: 03</li> <li>– Thursday: 04</li> <li>– Friday: 05</li> <li>– Saturday: 06</li> </ul> </li> </ul> |   |
| 3006                   | Date Setting<br>Setting range: 101 to 1231 (decimal), the default value at energize: 101<br>Set the month and the date in MMDD format. <ul style="list-style-type: none"> <li>• MM: 01 to 12 (decimal)</li> <li>• DD: 01 to 31 (decimal)</li> </ul>   |   |
| 3007                   | Set the Date Information<br>Setting range: 0 to 8 (decimal), the default value at energize: 8<br>Set the values specified in 3004H to 3006H as the date and time. <ul style="list-style-type: none"> <li>• Command Data: 1</li> <li>• Response Data: 0 (normal), 8 (fault)</li> </ul>   |   |

## ■ Monitor Data

You can only read monitor data.

Table 6.16 Monitor Data for MEMOBUS/Modbus Communication

| Register No.<br>(Hex.) | Description         |   |
|------------------------|---------------------|---|
| 0020                   | Drive Status 1      |   |
|                        | bit 0               | During Run<br>1: During run, 0: During stop   |
|                        | bit 1               | During reverse<br>1: During reverse, 0: Forward run   |
|                        | bit 2               | Drive ready<br>1: Ready, 0: Not ready   |
|                        | bit 3               | Fault<br>1: Fault   |
|                        | bit 4               | Data Setting Error<br>1: oPExx error  |
|                        | bit 5               | MFDO (terminal MA/MB-MC)<br>1: ON, 0: OFF   |
|                        | bit 6               | Multi-function photocoupler output 1 (terminal P1-C1)<br>1: ON, 0: OFF                          |
|                        | bit 7               | Multi-function photocoupler output 2 (terminal P2-C2)<br>1: ON, 0: OFF                          |
|                        | bit 8 - D           | Reserved  |
|                        | bit E               | ComRef status<br>1: Enabled   |
|                        | bit F               | ComCtrl status<br>1: Enabled  |
| 0021                   | Fault Description 1 |   |
|                        | bit 0               | oC [Overcurrent], GF [Ground Fault]   |
|                        | bit 1               | ov [Overvoltage]  |
|                        | bit 2               | oL2 [Drive Overload]  |
|                        | bit 3               | oH1 [Heatsink Overheat], oH2 [External Overheat (H1-XX=B)]                                      |
|                        | bit 4               | rH [Braking Resistor Overheat], rr [Dynamic Braking Transistor Fault]                           |
|                        | bit 5               | Reserved  |
|                        | bit 6               | FbL [PID Feedback Loss], FbH [Excessive PID Feedback]   |
|                        | bit 7               | EF0 [Option Card External Fault], EF1 to EF7 [External Fault]                                   |
|                        | bit 8               | CPFxx [Hardware Fault]<br><b>Note:</b><br>Includes oFx.   |
|                        | bit 9               | oL1 [Motor Overload], oL3, oL4 [Overtorque Detection 1/2], UL3, UL4 [Undertorque Detection 1/2] |
|                        | bit A               | PGo [Encoder (PG) Feedback Loss], oS [Overspeed], dEv [Speed Deviation]                         |
|                        | bit B               | During Uv [Undervoltage] detection  |
|                        | bit C               | Uv1 [DC Bus Undervoltage], Uv2 [Control Power Undervoltage], Uv3 [Soft Charge Answerback Fault] |
|                        | bit D               | LF [Output Phase Loss], PF [Input Phase Loss]   |
|                        | bit E               | CE [Modbus Communication Error], bUS [Option Communication Error]                               |
| bit F                  | Reserved            |   |

| Register No.<br>(Hex.) | Description   |   |
|------------------------|---|---|
| 0022                   | Fault Contents  |   |
|                        | bit 0   | 1: During data writing, during motor switching  |
|                        | bit 1   | Reserved  |
|                        | bit 2   |   |
|                        | bit 3   | 1: Upper/Lower Limit Fault  |
|                        | bit 4   | 1: Data Integrity Fault   |
|                        | bit 5   | 1: During EEPROM writing  |
|                        | bit 6   | 0: EEPROM writing<br>1: Change data only on the RAM<br><b>Note:</b><br>Enabled when H5-17 = 1 [ENTER Command Response @CPU BUSY = Write to RAM Only]. |
| bit 7 - F              | Reserved  |   |
| 0023                   | U1-01 [Frequency Reference]<br><b>Note:</b><br>o1-03 [Frequency Display Unit Selection] sets the units.                             |   |
| 0024                   | U1-02 [Output Frequency]<br><b>Note:</b><br>o1-03 [Frequency Display Unit Selection] sets the units.                                |   |
| 0025                   | U1-06 [Output Voltage Ref] (units: 0.1 V)<br><b>Note:</b><br>Use H5-10 [Modbus Register 0025H Unit Sel] to change the setting unit. |   |
| 0026                   | U1-03 [Output Current] (units: 0.1 A)   |   |
| 0027                   | U1-08 [Output Power]  |   |
| 0028                   | U1-09 [Torque Reference]  |   |
| 0029                   | Fault Description 2   |   |
|                        | bit 0   | Reserved  |
|                        | bit 1   | GF [Ground Fault]   |
|                        | bit 2   | PF [Input Phase Loss]   |
|                        | bit 3   | LF [Output Phase Loss]  |
|                        | bit 4   | rH [Braking Resistor Overheat]  |
|                        | bit 5   | Reserved  |
|                        | bit 6   | oH4 [Motor Overheat Fault (PTC Input)]  |
| bit 7 - F              | Reserved  |   |
| 002A                   | Minor Fault Description 1   |   |
|                        | bit 0 - 1   | Reserved  |
|                        | bit 2   | EF [FWD/REV Run Command Input Error]  |
|                        | bit 3   | bb [Baseblock]  |
|                        | bit 4   | oL3 [Overtorque 1]  |
|                        | bit 5   | oH [Heatsink Overheat]  |
|                        | bit 6   | ov [Overvoltage]  |
|                        | bit 7   | Uv [Undervoltage]   |
|                        | bit 8   | Reserved  |
|                        | bit 9   | CE [Modbus Communication Error]   |
|                        | bit A   | bUS [Option Communication Error]  |
|                        | bit B   | UL3/UL4 [Undertorque Detection 1/2]   |
|                        | bit C   | oH3 [Motor Overheat (PTC Input)]  |
|                        | bit D   | FbL [PID Feedback Loss], FbH [Excessive PID Feedback]   |
|                        | bit E   | Reserved  |
|                        | bit F   | CALL [Serial Comm Transmission Error]   |

## 6.3 MEMOBUS/Modbus Communications

| Register No.<br>(Hex.) | Description   |   |
|------------------------|---|---|
| 002B                   | U1-10 [Input Terminal Status]                                 |   |
|                        | bit 0   | 1: Control circuit terminal S1 ON   |
|                        | bit 1   | 1: Control circuit terminal S2 ON   |
|                        | bit 2   | 1: Control circuit terminal S3 ON   |
|                        | bit 3   | 1: Control circuit terminal S4 ON   |
|                        | bit 4   | 1: Control circuit terminal S5 ON   |
|                        | bit 5   | 1: Control circuit terminal S6 ON   |
|                        | bit 6   | 1: Control circuit terminal S7 ON   |
|                        | bit 7 - F   | Reserved  |
| 002C                   | Drive Status 2  |   |
|                        | bit 0   | During Run<br>1: During Run   |
|                        | bit 1   | During zero speed<br>1: During zero speed                                       |
|                        | bit 2   | Speed agreement<br>1: During agreement  |
|                        | bit 3   | User-defined speed agreement<br>1: During agreement                             |
|                        | bit 4   | Frequency Detection 1<br>1: Output frequency $\leq$ L4-01                       |
|                        | bit 5   | Frequency Detection 2<br>1: Output frequency $\geq$ L4-01                       |
|                        | bit 6   | Drive ready<br>1: Run ready   |
|                        | bit 7   | During low voltage detection<br>1: During detection                             |
|                        | bit 8   | During baseblock<br>1: Drive output during baseblock                            |
|                        | bit 9   | Frequency reference mode<br>1: No communication option, 0: Communication option |
|                        | bit A   | Run command mode<br>1: No communication option, 0: Communication option         |
|                        | bit B   | During overtorque/undertorque 1, 2 detection                                    |
|                        | bit C   | Frequency reference loss<br>1: Loss   |
|                        | bit D   | Executing Auto-Restart<br>1: Restart Enabled                                    |
|                        | bit E   | Fault<br>1: Fault generated   |
| bit F                  | MEMOBUS/Modbus communications timeout<br>1: At Timeout        |   |
| 002D                   | U1-11 [Output Terminal Status]                                |   |
|                        | bit 0   | MFDO (terminal MA/MB-MC)<br>1: ON, 0: OFF                                       |
|                        | bit 1   | Multi-function photocoupler output 1 (terminal P1-C1)<br>1: ON, 0: OFF          |
|                        | bit 2   | Multi-function photocoupler output 2 (terminal P2-C2)<br>1: ON, 0: OFF          |
|                        | bit 3 - F   | Reserved  |
| 002E                   | Reserved  |   |
| 002F                   | Frequency reference bias (Up 2/Down 2 function) (Units: 0.1%) |   |
| 0030                   | Reserved  |   |
| 0031                   | U1-07 [DC Bus Voltage] (unit: 1 V)                            |   |

| Register No. (Hex.) | Description  |  |
|---------------------|--|--|
| 0032                | U1-09 [Torque Reference] (unit: 1%)  |  |
| 0033                | Reserved   |  |
| 0034                | Product Code 1 (2-character ASCII code), GA500 = "0A"  |  |
| 0035                | Product Code 2 (2-character ASCII code), GA500 = "50"  |  |
| 0036 - 0037         | Reserved   |  |
| 0038                | PID Feedback: Unsigned, input is equivalent to 100%/maximum output frequency (Units:0.1%)  |  |
| 0039                | PID Input: Signed, $\pm 100\%$ / $\pm$ maximum output frequency (Units:0.1%)   |  |
| 003A                | PID Output: Signed, $\pm 100\%$ / $\pm$ maximum output frequency (Units:0.1%)  |  |
| 003B - 003C         | Reserved   |  |
| 003D                | Communications error description<br><b>Note:</b><br>The drive saves the description of the communications error until you reset the fault.                                     |  |
|                     | bit 0  | CRC Error  |
|                     | bit 1  | Data Length Error  |
|                     | bit 2  | Reserved   |
|                     | bit 3  | Parity Error   |
|                     | bit 4  | Overrun Error  |
|                     | bit 5  | Framing Error  |
|                     | bit 6  | Timeout  |
| bit 7 - F           | Reserved   |  |
| 003E                | Output frequency   | Units: $\text{min}^{-1}$ or $\text{r/min}$<br><b>Note:</b><br>Set E2-04, E4-04, E5-04, E9-08 [Motor Pole Count]. |
| 003F                |  | 0.01% units  |
| 0040 - 004A         | Used with U1-xx [Operation Status Monitors]. Refer to U Monitor for more information.  |  |
| 004B                | U1-12 [Drive Status]   |  |
|                     | bit 0  | 1: During Run  |
|                     | bit 1  | 1: During zero speed   |
|                     | bit 2  | 1: During reverse  |
|                     | bit 3  | 1: During reset signal input   |
|                     | bit 4  | 1: During speed agreement  |
|                     | bit 5  | 1: Drive operation ready   |
|                     | bit 6  | 1: Minor Fault   |
|                     | bit 7  | 1: Fault   |
|                     | bit 8  | 1: oPExx [Operation Error] generation  |
|                     | bit 9  | 1: Recovery from momentary power loss, 0: Power recovery   |
|                     | bit A  | 1: Motor 2 Selection   |
|                     | bit B  | Reserved   |
| bit E               | ComRef status/ NetRef status   |  |
| bit F               | ComCtrl status/ NetCtrl status   |  |
| 004C - 007E         | Use with U1-xx, U4-xx, U5-xx, U6-xx [Monitors]. Refer to U Monitor for more information.   |  |
| 007F                | Minor fault code (Refer to "Minor fault description" for more information about the minor fault codes.)  |  |
| 0080 - 0097         | Use with U2-xx, U3-xx [Monitors]. Refer to "U Monitor" for more information, and refer to "Fault Trace/Fault History Descriptions" for more information about register values. |  |
| 0098 - 0099         | U4-01 [Cumulative Ope Time]<br>Example: When U4-01 [Cumulative Ope Time = 12345], 0098 (Hex.) = 1234 and 0099 (Hex.) = 5.  |  |
| 009A - 009B         | U4-03 [Cooling Fan Ope Time]<br>Example: When U4-03 [Cooling Fan Ope Time = 12345], 009A (Hex.) = 1234 and 009B (Hex.) = 5.  |  |
| 009C - 00AA         | Reserved   |  |

## 6.3 MEMOBUS/Modbus Communications

| Register No.<br>(Hex.) | Description   |   |
|------------------------|---|---|
| 00AB                   | Drive rated current<br><b>Note:</b><br>The unit of display is different for different models.<br>B001 - B018, 2001 - 2042, and 4001 - 4023: 0.01 A<br>2056 - 2082, 4031 - 4060: 0.1 A |   |
| 00AC                   | U1-05 [Motor Speed]   | Units: min <sup>-1</sup> or r/min<br><b>Note:</b><br>Set E2-04, E4-04, E5-04, E9-08 [Motor Pole Count].   |
| 00AD                   |   | Units: 0.01%  |
| 00AE, 00AF             | Reserved  |   |
| 00B0                   | Option codes connected to CNS   | The drive stores option codes in the register.<br>SI-C3 = 5343 (Hex.)<br>SI-EM3 = 1005 (Hex.)<br>SI-EN3 = 1006 (Hex.)<br>SI-EP3 = 1007 (Hex.)<br>SI-ES3 = 1001 (Hex.)<br>SI-ET3 = 1004 (Hex.)<br>SI-N3 = 534E (Hex.)<br>SI-P3 = 5350 (Hex.)<br>SI-S3 = 5353 (Hex.)<br>SI-T3 = 5354 (Hex.) |
| 00B1 - 00B4            | Reserved  |   |
| 00B5                   | U1-16 [SFS Output Frequency]  | Units: min <sup>-1</sup> or r/min<br><b>Note:</b><br>Set E2-04, E4-04, E5-04, E9-08 [Motor Pole Count].   |
| 00B6                   |   | Units: 0.01%  |
| 00B7                   | Frequency reference monitor   | Units: min <sup>-1</sup> or r/min<br><b>Note:</b><br>Set E2-04, E4-04, E5-04, E9-08 [Motor Pole Count].   |
| 00B8                   |   | Units: 0.01%  |
| 00B9 - 00BE            | Reserved  |   |
| 00BF                   | Operation error number<br>xx of oPExx is displayed.   |   |
| 00C0                   | Fault Description 3   |   |
|                        | bit 0   | Reserved  |
|                        | bit 1   | Uv1 [DC Bus Undervoltage]   |
|                        | bit 2   | Uv2 [Control Power Undervoltage]  |
|                        | bit 3   | Uv3 [Soft Charge Answerback Fault]  |
|                        | bit 4   | SC [Short Circuit/IGBT Failure]   |
|                        | bit 5   | GF [Ground Fault]   |
|                        | bit 6   | oC [Overcurrent]  |
|                        | bit 7   | ov [Overvoltage]  |
|                        | bit 8   | oH [Heatsink Overheat]  |
|                        | bit 9   | oH1 [Heatsink Overheat]   |
|                        | bit A   | oL1 [Motor Overload]  |
|                        | bit B   | oL2 [Drive Overload]  |
|                        | bit C   | oL3 [Overtorque Detection 1]  |
|                        | bit D   | oL4 [Overtorque Detection 2]  |
|                        | bit E   | rr [Dynamic Braking Transistor Fault]   |
| bit F                  | rH [Braking Resistor Overheat]  |   |



| Register No.<br>(Hex.) | Description         |  |
|------------------------|---------------------|--|
| 00C1                   | Fault Description 4 |  |
|                        | bit 0               | EF3 [External Fault (Terminal S3)]         |
|                        | bit 1               | EF4 [External Fault (Terminal S4)]         |
|                        | bit 2               | EF5 [External Fault (Terminal S5)]         |
|                        | bit 3               | EF6 [External Fault (Terminal S6)]         |
|                        | bit 4               | EF7 [External Fault (Terminal S7)]         |
|                        | bit 5 - 6           | Reserved                                   |
|                        | bit 7               | oS [Overspeed]                             |
|                        | bit 8               | dEv [Speed Deviation]                      |
|                        | bit 9               | PGo [Encoder (PG) Feedback Loss]           |
|                        | bit A               | PF [Input Phase Loss]                      |
|                        | bit B               | LF [Output Phase Loss]                     |
|                        | bit C               | oH3 [Motor Overheat (PTC Input)]           |
|                        | bit D               | Reserved                                   |
|                        | bit E               | Err [EEPROM Write Error]                   |
|                        | bit F               | oH4 [Motor Overheat Fault (PTC Input)]     |
| 00C2                   | Fault Description 5 |  |
|                        | bit 0               | CE [Modbus Communication Error]            |
|                        | bit 1               | bUS [Option Communication Error]           |
|                        | bit 2 - 3           | Reserved                                   |
|                        | bit 4               | CF [Control Fault]                         |
|                        | bit 5               | Reserved                                   |
|                        | bit 6               | EF0 [Option Card External Fault]           |
|                        | bit 7               | FbL [PID Feedback Loss]                    |
|                        | bit 8               | UL3 [Undertorque Detection 1]              |
|                        | bit 9               | UL4 [Undertorque Detection 2]              |
|                        | bit A               | oL7 [High Slip Braking Overload]           |
|                        | bit B - E           | Reserved                                   |
|                        | bit F               | Hardware Fault (includes <i>oFx</i> fault) |
| 00C3                   | Fault Description 6 |  |
|                        | bit 0 - 4           | Reserved                                   |
|                        | bit 5               | LF2 [Output Current Imbalance]             |
|                        | bit 6               | STPo [Motor Step-Out Detected]             |
|                        | bit 7               | Reserved                                   |
|                        | bit 8               | E5 [MECHATROLINK Watchdog Timer Err]       |
|                        | bit 9               | Reserved                                   |
|                        | bit A               | SER [Speed Search Retries Exceeded]        |
| bit B - F              | Reserved            |  |

## 6.3 MEMOBUS/Modbus Communications

| Register No.<br>(Hex.) | Description               |   |
|------------------------|---------------------------|---|
| 00C4                   | Fault Description 7       |   |
|                        | bit 0                     | FbH [Excessive PID Feedback]            |
|                        | bit 1                     | EF1 [External Fault (Terminal S1)]      |
|                        | bit 2                     | EF2 [External Fault (Terminal S2)]      |
|                        | bit 3                     | oL5 [Mechanical Weakening Detection 1]  |
|                        | bit 4                     | UL5 [Mechanical Weakening Detection 2]  |
|                        | bit 5                     | CoF [Current Offset Fault]              |
|                        | bit 6 - 7                 | Reserved                                |
|                        | bit 8                     | dWFL [DriveWorksEZ Fault]               |
|                        | bit 9                     | dWF1 [EEPROM Memory DWEZ Data Error]    |
|                        | bit A                     | dWF2 [DriveWorksEZ Fault 2]             |
|                        | bit B                     | dWF3 [DriveWorksEZ Fault 3]             |
|                        | bit C                     | Reserved                                |
|                        | bit D                     | rF [Braking Resistor Fault]             |
|                        | bit E                     | boL [Braking Transistor Overload Fault] |
| bit F                  | Reserved                  |   |
| 00C5                   | Fault Description 8       |   |
|                        | bit 0                     | LSo [Low Speed Motor Step-Out]          |
|                        | bit 1                     | nSE [Node Setup Error]                  |
|                        | bit 2 - 9                 | Reserved                                |
|                        | bit A                     | dv7 [Polarity Judge Timeout]            |
| bit B - F              | Reserved                  |   |
| 00C6 - 00C7            | Reserved                  |   |
| 00C8                   | Minor Fault Description 2 |   |
|                        | bit 0                     | Uv [Undervoltage]                       |
|                        | bit 1                     | ov [Overvoltage]                        |
|                        | bit 2                     | oH [Heatsink Overheat]                  |
|                        | bit 3                     | Overheat Alarm (oH2)                    |
|                        | bit 4                     | oL3 [Overtorque 1]                      |
|                        | bit 5                     | oL4 [Overtorque 2]                      |
|                        | bit 6                     | EF [FWD/REV Run Command Input Error]    |
|                        | bit 7                     | bb [Baseblock]                          |
|                        | bit 8                     | EF3 [External Fault (Terminal S3)]      |
|                        | bit 9                     | EF4 [External Fault (Terminal S4)]      |
|                        | bit A                     | EF5 [External Fault (Terminal S5)]      |
|                        | bit B                     | EF6 [External Fault (Terminal S6)]      |
|                        | bit C                     | EF7 [External Fault (Terminal S7)]      |
|                        | bit D - E                 | Reserved                                |
| bit F                  | oS [Overspeed]            |   |

| Register No.<br>(Hex.) | Description                 |  |
|------------------------|-----------------------------|--|
| 00C9                   | Minor Fault Description 3   |  |
|                        | bit 0                       | dEv [Speed Deviation]                  |
|                        | bit 1                       | PGo [Encoder (PG) Feedback Loss]       |
|                        | bit 2                       | Reserved                               |
|                        | bit 3                       | CE [Modbus Communication Error]        |
|                        | bit 4                       | bUS [Option Communication Error]       |
|                        | bit 5                       | CALL [Serial Comm Transmission Error]  |
|                        | bit 6                       | oL1 [Motor Overload]                   |
|                        | bit 7                       | oL2 [Drive Overload]                   |
|                        | bit 8                       | Reserved                               |
|                        | bit 9                       | EF0 [Option Card External Fault]       |
|                        | bit A                       | rUn [Motor Switch during Run]          |
|                        | bit B                       | Reserved                               |
|                        | bit C                       | CALL [Serial Comm Transmission Error]  |
|                        | bit D                       | UL3 [Undertorque Detection 1]          |
|                        | bit E                       | UL4 [Undertorque Detection 2]          |
| bit F                  | SE [Modbus Test Mode Error] |  |
| 00CA                   | Minor Fault Description 4   |  |
|                        | bit 0                       | Reserved                               |
|                        | bit 1                       | oH3 [Motor Overheat (PTC Input)]       |
|                        | bit 2 - 5                   | Reserved                               |
|                        | bit 6                       | FbL [PID Feedback Loss]                |
|                        | bit 7                       | FbH [Excessive PID Feedback]           |
|                        | bit 8                       | Reserved                               |
|                        | bit 9                       | dnE [Drive Disabled]                   |
|                        | bit A - F                   | Reserved                               |
| 00CB                   | Minor Fault Description 5   |  |
|                        | bit 0                       | Reserved                               |
|                        | bit 1                       | AEr [Station Address Setting Error]    |
|                        | bit 2                       | CyC [MECHATROLINK CommCycleSettingErr] |
|                        | bit 3                       | HCA [High Current Alarm]               |
|                        | bit 4                       | LT-1 [Cooling Fan Maintenance Time]    |
|                        | bit 5                       | LT-2 [Capacitor Maintenance Time]      |
|                        | bit 6 - 7                   | Reserved                               |
|                        | bit 8                       | EF1 [External Fault (Terminal S1)]     |
|                        | bit 9                       | EF2 [External Fault (Terminal S2)]     |
|                        | bit A                       | SToF [Safe Torque OFF Hardware]        |
|                        | bit B                       | Reserved                               |
|                        | bit C                       | oL5 [Mechanical Weakening Detection 1] |
|                        | bit D                       | UL5 [Mechanical Weakening Detection 2] |
|                        | bit E - F                   | Reserved                               |

## 6.3 MEMOBUS/Modbus Communications

| Register No.<br>(Hex.) | Description               |   |
|------------------------|---------------------------|---|
| 00CC                   | Minor Fault Description 6 |   |
|                        | bit 0                     | Reserved                                |
|                        | bit 1                     | TrPC [IGBT Maintenance Time (90%)]      |
|                        | bit 2                     | LT-3 [SoftChargeBypassRelay MainteTime] |
|                        | bit 3                     | LT-4 [IGBT Maintenance Time (50%)]      |
|                        | bit 4                     | boL [Braking Transistor Overload]       |
|                        | bit 5 - 7                 | Reserved                                |
|                        | bit 8                     | dWAL [DriveWorksEZ Alarm]               |
|                        | bit 9                     | dWA2 [DriveWorksEZ Alarm 2]             |
|                        | bit A                     | dWA3 [DriveWorksEZ Alarm 3]             |
|                        | bit B - F                 | Reserved                                |
| 00CD - 00CF            | Reserved                  |   |
| 00D0                   | CPF Contents 1            |   |
|                        | bit 0 - 1                 | Reserved                                |
|                        | bit 2                     | CPF02 [Control Circuit Fault]           |
|                        | bit 3                     | CPF03 [Control Circuit Fault]           |
|                        | bit 4 - 5                 | Reserved                                |
|                        | bit 6                     | CPF06 [Control Circuit Fault]           |
|                        | bit 7                     | Reserved                                |
|                        | bit 8                     | CPF08 [Control Circuit Fault]           |
|                        | bit 9 - A                 | Reserved                                |
|                        | bit B                     | CPF11 [Control Circuit Fault]           |
|                        | bit C                     | CPF12 [Control Circuit Fault]           |
|                        | bit D                     | CPF13 [Control Circuit Fault]           |
|                        | bit E                     | CPF14 [Control Circuit Fault]           |
|                        | bit F                     | Reserved                                |
| 00D1                   | CPF Contents 2            |   |
|                        | bit 0                     | CPF16 [Control Circuit Fault]           |
|                        | bit 1                     | CPF17 [Control Circuit Fault]           |
|                        | bit 2                     | CPF18 [Control Circuit Fault]           |
|                        | bit 3                     | CPF19 [Control Circuit Fault]           |
|                        | bit 4                     | CPF20 [Control Circuit Fault]           |
|                        | bit 5                     | CPF21 [Control Circuit Fault]           |
|                        | bit 6                     | CPF22 [Control Circuit Fault]           |
|                        | bit 7                     | CPF23 [Control Circuit Fault]           |
|                        | bit 8                     | CPF24 [Control Circuit Fault]           |
| bit 9 - F              | Reserved                  |   |
| 00D2                   | CPF Contents 3            |   |
|                        | bit 0- 5                  | Reserved                                |
|                        | bit 6                     | CPF38 [EEPROM Data Error]               |
|                        | bit 7 - F                 | Reserved                                |
| 00D3 - 00D7            | Reserved                  |   |

| Register No.<br>(Hex.) | Description               |   |
|------------------------|---------------------------|---|
| 00D8                   | oFA0x Description (CN5-A) |   |
|                        | bit 0                     | oFA00 [Option Not Compatible with Port] |
|                        | bit 1                     | oFA01 [Option Fault/Connection Error]   |
|                        | bit 2 - 4                 | Reserved                                |
|                        | bit 5                     | oFA05 [Option A/D Error]                |
|                        | bit 6                     | oFA06 [Option Communication Error]      |
|                        | bit 7 - F                 | Reserved                                |
| 00D9                   | oFA1x Description (CN5-A) |   |
|                        | bit 0                     | oFA10 [Option RAM Error]                |
|                        | bit 1                     | oFA11 [Option Ope Mode Error]           |
|                        | bit 2                     | oFA12 [Drive Receive CRC Error]         |
|                        | bit 3                     | oFA13 [Drive Receive Frame Error]       |
|                        | bit 4                     | oFA14 [Drive Receive Abort Error]       |
|                        | bit 5                     | oFA15 [Option Receive CRC Error]        |
|                        | bit 6                     | oFA16 [Option Receive Frame Error]      |
|                        | bit 7                     | oFA17 [Option Receive Abort Error]      |
| bit 8 - F              | Reserved                  |   |
| 00DA                   | Reserved                  |   |
| 00DB                   | oFA3x Description (CN5-A) |   |
|                        | bit 0                     | oFA30 [COM ID Error]                    |
|                        | bit 1                     | oFA31 [Type Code Error]                 |
|                        | bit 2                     | oFA32 [SUM Check Error]                 |
|                        | bit 3                     | oFA33 [Option Receive Time Over]        |
|                        | bit 4                     | oFA34 [Memobus Time Over]               |
|                        | bit 5                     | oFA35 [Drive Receive Time Over 1]       |
|                        | bit 6                     | oFA36 [CI Check Error]                  |
|                        | bit 7                     | oFA37 [Drive Receive Time Over 2]       |
|                        | bit 8                     | oFA38 [Control Reference Error]         |
|                        | bit 9                     | oFA39 [Drive Receive Time Over 3]       |
|                        | bit A                     | oFA40 [CtrlResSel 1Err]                 |
|                        | bit B                     | oFA41 [Drive Receive Time Over 4]       |
|                        | bit C                     | oFA42 [CtrlResSel 2Err]                 |
|                        | bit D                     | oFA43 [Drive Receive Time Over 5]       |
| bit E - F              | Reserved                  |   |
| 00DC - 00E4            | Reserved                  |   |
| 00E5                   | Minor Fault Description 9 |   |
|                        | bit 0                     | EP24v [External Power 24V Supply]       |
|                        | bit 1 - 3                 | Reserved                                |
|                        | bit 4                     | bAT [Keypad Battery Low Voltage]        |
|                        | bit 5                     | Reserved                                |
|                        | bit 6                     | CP1 [Comparator 1 Limit Fault]          |
|                        | bit 7                     | CP2 [Comparator 2 Limit Fault]          |
|                        | bit 8                     | TiM [Keypad Time Not Set]               |
|                        | bit 9                     | bCE [Bluetooth Communication Error]     |
| bit A - F              | Reserved                  |   |
| 00E6 - 00E9            | Reserved                  |   |

## 6.3 MEMOBUS/Modbus Communications

| Register No. (Hex.) | Description  |                                     |
|---------------------|--|-------------------------------------|
| 00EA                | Fault Description 11   |                                     |
|                     | bit 0  | TiM [Keypad Time Not Set]           |
|                     | bit 1  | bAT [Keypad Battery Low Voltage]    |
|                     | bit 2- D   | Reserved                            |
|                     | bit E  | SCF [Safety Circuit Fault]          |
|                     | bit F  | Reserved                            |
| 00EB - 00ED         | Reserved   |                                     |
| 00EE                | Fault Description 12   |                                     |
|                     | bit 0 - 2  | Reserved                            |
|                     | bit 3  | CP1 [Comparator 1 Limit Fault]      |
|                     | bit 4  | CP2 [Comparator 2 Limit Fault]      |
|                     | bit 5  | bCE [Bluetooth Communication Fault] |
|                     | bit 6 - F  | Reserved                            |
| 00EF - 00FA         | Reserved   |                                     |
| 00FB                | Output Current<br><b>Note:</b><br>The unit of display is different for different models.<br>B001 - B018, 2001 - 2042, and 4001 - 4023: 0.01 A<br>2056 - 2082, 4031 - 4060: 0.1 A |                                     |

### ■ Broadcast Messages

Broadcast messages are available as read-only.

The undefined bit signal in the broadcast operation signal uses the local data signal.

**Table 6.17 Broadcast Messages for MEMOBUS/Modbus Communication**

| Register No. (Hex.) | Description         |   |
|---------------------|---------------------|---|
| 0001                | Operation signal    |   |
|                     | bit 0               | Run command<br>1: Run, 0: Stop                        |
|                     | bit 1               | Reverse run command<br>1: Reverse, 0: Forward run     |
|                     | bit 2 - 3           | Reserved  |
|                     | bit 4               | External fault<br>1: EF0 [Option Card External Fault] |
|                     | bit 5               | Fault Reset<br>1: Reset command                       |
|                     | bit 6 - B           | Reserved  |
|                     | bit C               | MFDI terminal S5 input                                |
|                     | bit D               | MFDI terminal S6 input                                |
|                     | bit E               | MFDI terminal S7 input                                |
|                     | bit F               | Reserved  |
| 0002                | Frequency reference | 30000/100%  |

### ■ Fault Trace/Fault History Contents

Table 6.18 shows the fault codes that the commands from monitors [*U2-xx*, *U3-xx*] read.

**Table 6.18 Fault Trace/Fault History Contents**

| Fault Code (Hex.) | Name                             | Fault Code (Hex.) | Name                               |
|-------------------|----------------------------------|-------------------|------------------------------------|
| 0002              | Uv1 [DC Bus Undervoltage]        | 0004              | Uv3 [Soft Charge Answerback Fault] |
| 0003              | Uv2 [Control Power Undervoltage] | 0005              | SC [Short Circuit/IGBT Failure]    |

| Fault Code (Hex.) | Name                                   |
|-------------------|--|
| 0006              | GF [Ground Fault]                      |
| 0007              | oC [Overcurrent]                       |
| 0008              | ov [Overvoltage]                       |
| 0009              | oH [Heatsink Overheat]                 |
| 000A              | oH1 [Heatsink Overheat]                |
| 000B              | oL1 [Motor Overload]                   |
| 000C              | oL2 [Drive Overload]                   |
| 000D              | oL3 [Overtorque Detection 1]           |
| 000E              | oL4 [Overtorque Detection 2]           |
| 000F              | rr [Dynamic Braking Transistor Fault]  |
| 0010              | rH [Braking Resistor Overheat]         |
| 0011              | EF3 [External Fault (Terminal S3)]     |
| 0012              | EF4 [External Fault (Terminal S4)]     |
| 0013              | EF5 [External Fault (Terminal S5)]     |
| 0014              | EF6 [External Fault (Terminal S6)]     |
| 0015              | EF7 [External Fault (Terminal S7)]     |
| 0018              | oS [Overspeed]                         |
| 0019              | dEv [Speed Deviation]                  |
| 001A              | PGo [Encoder (PG) Feedback Loss]       |
| 001B              | PF [Input Phase Loss]                  |
| 001C              | LF [Output Phase Loss]                 |
| 001D              | oH3 [Motor Overheat (PTC Input)]       |
| 001F              | Err [EEPROM Write Error]               |
| 0020              | oH4 [Motor Overheat Fault (PTC Input)] |
| 0021              | CE [Modbus Communication Error]        |
| 0022              | bUS [Option Communication Error]       |
| 0025              | CF [Control Fault]                     |
| 0027              | EF0 [Option Card External Fault]       |
| 0028              | FbL [PID Feedback Loss]                |
| 0029              | UL3 [Undertorque Detection 1]          |
| 002A              | UL4 [Undertorque Detection 2]          |
| 002B              | oL7 [High Slip Braking Overload]       |
| 0030              | Includes oFx Fault [Hardware Fault]    |
| 0036              | LF2 [Output Current Imbalance]         |
| 0037              | STPo [Motor Step-Out Detected]         |
| 003B              | SEr [Speed Search Retries Exceeded]    |
| 0041              | FbH [Excessive PID Feedback]           |
| 0042              | EF1 [External Fault (Terminal S1)]     |
| 0043              | EF2 [External Fault (Terminal S2)]     |
| 0044              | oL5 [Mechanical Weakening Detection 1] |
| 0045              | UL5 [Mechanical Weakening Detection 2] |
| 0046              | CoF [Current Offset Fault]             |
| 0049              | dWFL [DriveWorksEZ Fault]              |
| 004A              | dWF1 [EEPROM Memory DWEZ Data Error]   |
| 004B              | dWF2 [DriveWorksEZ Fault 2]            |
| 004C              | dWF3 [DriveWorksEZ Fault 3]            |

| Fault Code (Hex.) | Name                                    |
|-------------------|---|
| 004E              | rF [Braking Resistor Fault]             |
| 004F              | boL [Braking Transistor Overload Fault] |
| 0051              | LSo [Low Speed Motor Step-Out]          |
| 0052              | nSE [Node Setup Error]                  |
| 005B              | dv7 [Polarity Judge Timeout]            |
| 0083              | CPF02 [A/D Conversion Error]            |
| 0084              | CPF03 [Control Board Connection Error]  |
| 0087              | CPF06 [EEPROM Memory Data Error]        |
| 0089              | CPF08 [Terminal Board Connection Error] |
| 008C              | CPF11 [RAM Fault]                       |
| 008D              | CPF12 [FLASH Memory Fault]              |
| 008E              | CPF13 [Watchdog Circuit Exception]      |
| 008F              | CPF14 [Control Circuit Fault]           |
| 0091              | CPF16 [Clock Fault]                     |
| 0092              | CPF17 [Timing Fault]                    |
| 0093              | CPF18 [Control Circuit Fault]           |
| 0094              | CPF19 [Control Circuit Fault]           |
| 0095              | CPF20 [Control Circuit Error]           |
| 0096              | CPF21 [Control Circuit Error]           |
| 0097              | CPF22 [Hybrid IC Error]                 |
| 0098              | CPF23 [Control Board Connection Error]  |
| 0099              | CPF24 [Drive Unit Signal Fault]         |
| 00A7              | CPF38 [EEPROM Data Error]               |
| 0101              | oFA00 [Option Not Compatible with Port] |
| 0102              | oFA01 [Option Fault/Connection Error]   |
| 0106              | oFA05 [Option A/D Error]                |
| 0107              | oFA06 [Option Communication Error]      |
| 0111              | oFA10 [Option RAM Error]                |
| 0112              | oFA11 [Option Ope Mode Error]           |
| 0113              | oFA12 [Drive Receive CRC Error]         |
| 0114              | oFA13 [Drive Receive Frame Error]       |
| 0115              | oFA14 [Drive Receive Abort Error]       |
| 0116              | oFA15 [Option Receive CRC Error]        |
| 0117              | oFA16 [Option Receive Frame Error]      |
| 0118              | oFA17 [Option Receive Abort Error]      |
| 0131              | oFA30 [COM ID Error]                    |
| 0132              | oFA31 [Type Code Error]                 |
| 0133              | oFA32 [SUM Check Error]                 |
| 0134              | oFA33 [Option Receive Time Over]        |
| 0135              | oFA34 [Memobus Time Over]               |
| 0136              | oFA35 [Drive Receive Time Over 1]       |
| 0137              | oFA36 [CI Check Error]                  |
| 0138              | oFA37 [Drive Receive Time Over 2]       |
| 0139              | oFA38 [Control Reference Error]         |
| 013A              | oFA39 [Drive Receive Time Over 3]       |
| 013B              | oFA40 [CtrlResSel 1Err]                 |

## 6.3 MEMOBUS/Modbus Communications

| Fault Code (Hex.) | Name                              |
|-------------------|-----------------------------------|
| 013C              | oFA41 [Drive Receive Time Over 4] |
| 013D              | oFA42 [CtrlResSel 2Err]           |
| 013E              | oFA43 [Drive Receive Time Over 5] |
| 0401              | TiM [Keypad Time Not Set]         |
| 0402              | bAT [Keypad Battery Low Voltage]  |
| 040F              | SCF [Safety Circuit Fault]        |

| Fault Code (Hex.) | Name                                |
|-------------------|-------------------------------------|
| 0414              | CP1 [Comparator 1 Limit Fault]      |
| 0415              | CP2 [Comparator 2 Limit Fault]      |
| 0416              | bCE [Bluetooth Communication Fault] |
| 041A              | dCE1 [Communication Error1]         |
| 041B              | dCE2 [Communication Error2]         |

### ■ Minor Fault/Alarm Contents

Table 6.19 shows the minor fault/alarm codes that communications register (007F (Hex.)) reads.

Table 6.19 Minor Fault/Alarm Contents (007 (Hex.))

| Minor Fault/Alarm Code (Hex.) | Name                                    | Minor Fault/Alarm Code (Hex.) | Name                                    |
|-------------------------------|---|-------------------------------|---|
| 0001                          | Uv [Undervoltage]                       | 0022                          | oH3 [Motor Overheat (PTC Input)]        |
| 0002                          | ov [Overvoltage]                        | 0027                          | FbL [PID Feedback Loss]                 |
| 0003                          | oH [Heatsink Overheat]                  | 0028                          | FbH [Excessive PID Feedback]            |
| 0004                          | Overheat Alarm (oH2)                    | 002A                          | dnE [Drive Disabled]                    |
| 0005                          | oL3 [Overtorque 1]                      | 0032                          | AEr [Station Address Setting Error]     |
| 0006                          | oL4 [Overtorque 2]                      | 0033                          | CyC [MECHATROLINK CommCycleSettingErr]  |
| 0007                          | EF [FWD/REV Run Command Input Error]    | 0034                          | HCA [High Current Alarm]                |
| 0008                          | bb [Baseblock]                          | 0035                          | LT-1 [Cooling Fan Maintenance Time]     |
| 0009                          | EF3 [External Fault (Terminal S3)]      | 0036                          | LT-2 [Capacitor Maintenance Time]       |
| 000A                          | EF4 [External Fault (Terminal S4)]      | 0039                          | EF1 [External Fault (Terminal S1)]      |
| 000B                          | EF5 [External Fault (Terminal S5)]      | 003A                          | EF2 [External Fault (Terminal S2)]      |
| 000C                          | EF6 [External Fault (Terminal S6)]      | 003B                          | SToF [Safe Torque OFF Hardware]         |
| 000D                          | EF7 [External Fault (Terminal S7)]      | 003D                          | oL5 [Mechanical Weakening Detection 1]  |
| 0010                          | oS [Overspeed]                          | 003E                          | UL5 [Mechanical Weakening Detection 2]  |
| 0011                          | dEv [Speed Deviation]                   | 0042                          | TrPC [IGBT Maintenance Time (90%)]      |
| 0012                          | PGo [Encoder (PG) Feedback Loss]        | 0043                          | LT-3 [SoftChargeBypassRelay MainteTime] |
| 0014                          | CE [Modbus Communication Error]         | 0044                          | LT-4 [IGBT Maintenance Time (50%)]      |
| 0015                          | bUS [Option Communication Error]        | 0045                          | boL [Braking Transistor Overload]       |
| 0016                          | CALL [Serial Comm Transmission Error]   | 0049                          | dWAL [DriveWorksEZ Alarm]               |
| 0017                          | oL1 [Motor Overloaded]                  | 004A                          | dWA2 [DriveWorksEZ Alarm 2]             |
| 0018                          | oL2 [Drive Overloaded]                  | 004B                          | dWA3 [DriveWorksEZ Alarm 3]             |
| 001A                          | EF0 [Option Card External Fault]        | 0081                          | EP24v [External Power 24V Supply]       |
| 001B                          | rUn [Motor Switch during Run]           | 0085                          | bAT [Keypad Battery Low Voltage]        |
| 001D                          | CALL [Serial Comm Transmission Error]   | 0087                          | CP1 [Comparator 1 Limit Error]          |
| 001E                          | UL3 [Undertorque Detection 1]           | 0088                          | CP2 [Comparator 2 Limit Error]          |
| 001F                          | UL4 [Undertorque Detection 2]           | 0089                          | TiM [Keypad Time Not Set]               |
| 0020                          | SE [Modbus Test Mode Error]             | 008A                          | bCE [Bluetooth Communication Error]     |
| 0021                          | L24v [Loss of External Power 24 Supply] |                               |   |

## ◆ Error Codes

### ■ MEMOBUS/Modbus Communications Error Code List

Table 6.20 lists the MEMOBUS/Modbus communications error codes.

When an error occurs, remove the cause of the error and restart communications.



Table 6.20 MEMOBUS/Modbus Communications Error Codes

| Error Code (Hex.) | Name   | Cause   |
|-------------------|--|---|
| 01                | Function Code Error                            | The PLC set a function code that was not 03, 08, or 10 (Hex.)   |
| 02                | Register Number Error                          | <ul style="list-style-type: none"> <li>The register number that is trying to access is not registered.</li> <li>A starting number that was not 0001 or 0002 (Hex.) was set when broadcasting.</li> </ul>  |
| 03                | Bit Count Error                                | <ul style="list-style-type: none"> <li>Read and write data quantities are more than the 1 to 16 range. (Command message data quantity is disabled.)</li> <li>The data that was read from non-consecutive holding registers contained more than 120 bytes.</li> <li>The data to be written to non-consecutive holding registers contained more than 60 bytes.</li> <li>In the write mode, the number of bytes in the message is not the number of data <math>\times</math> 2.</li> </ul>   |
| 21                | Data Setting Error                             | <ul style="list-style-type: none"> <li>Writing control data or parameters made the settings go out of the permitted setting range.</li> <li>A parameter setting error occurred when writing a parameter.</li> </ul>   |
| 22                | Write Mode Error                               | <ul style="list-style-type: none"> <li>Tried to write a disabled parameter during run.</li> <li>When there was a <i>CPF06 [Control Circuit Error]</i>, the master tried to write a parameter other than one of these: <ul style="list-style-type: none"> <li><i>A1-00 [Language Selection]</i></li> <li><i>A1-01 [Access Level Selection]</i></li> <li><i>A1-02 [Control Method Selection]</i></li> <li><i>A1-03 [Initialize Parameters]</i></li> <li><i>A1-04 [Password]</i></li> <li><i>A1-05 [Password Setting]</i></li> <li><i>E1-03 [V/f Pattern Selection]</i></li> <li><i>o2-04 [Drive Model (KVA) Selection]</i></li> </ul> </li> <li>Writes the read-only data.</li> </ul> |
| 23                | DC Bus Undervoltage Write Error                | During <i>Uv [DC Bus Undervoltage]</i> , a <i>Uv</i> write disabled parameter was written.  |
| 24                | Error Writing Data During Parameter Processing | Tried to write a parameter from the master during parameter processing on the drive side.   |
| 25                | Writing into EEPROM Disabled                   | Writing into EEPROM write is disabled, but EEPROM write was executed from MEMOBUS/Modbus communications. When this error occurs, the keypad shows a message and the drive continues operation.  |

### ■ No Response from Slave

The slave ignores the command message from the master and will not send a response message in these conditions:

- When a communications error (overrun, framing, parity, CRC-16) is detected in the command message.
- When the slave address in the command message and the slave address for the drive side do not agree (Use *H5-01 [Drive Node Address]* to set the slave address of the drive)
- When the time interval between the data of which the message is composed is longer than 24 bits
- When the data length for the command message is not accurate

#### Note:

- If the keypad shows *CALL [Serial Comm Transmission Error]*, refer to “Troubleshooting” to remove the cause of the error, and try to do communications again. If the keypad does not show *CALL*, check *U1-19 [MEMOBUS/Modbus Error Code]* for the error and error type.
- If you execute the write function code when the slave address in the command message is 00 (Hex.), all of the slaves will execute the write command, but they will not send response messages to the master.



# Troubleshooting

---

|             |   |            |
|-------------|---|------------|
| <b>7.1</b>  | <b>Section Safety .....</b>                                     | <b>236</b> |
| <b>7.2</b>  | <b>Types of Faults, Minor Faults, Alarms, and Errors .....</b>  | <b>238</b> |
| <b>7.3</b>  | <b>List of Fault, Minor Fault, Alarm, and Error Codes .....</b> | <b>239</b> |
| <b>7.4</b>  | <b>Fault .....</b>  | <b>244</b> |
| <b>7.5</b>  | <b>Minor Faults/Alarms .....</b>                                | <b>260</b> |
| <b>7.6</b>  | <b>Parameter Setting Errors.....</b>                            | <b>270</b> |
| <b>7.7</b>  | <b>Auto-Tuning Errors .....</b>                                 | <b>275</b> |
| <b>7.8</b>  | <b>Backup Function Operating Mode Display and Errors.....</b>   | <b>279</b> |
| <b>7.9</b>  | <b>Diagnosing and Resetting Faults.....</b>                     | <b>281</b> |
| <b>7.10</b> | <b>Troubleshooting Without Fault Display.....</b>               | <b>282</b> |

## 7.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### WARNING

#### Electrical Shock Hazard

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Always ground the motor-side grounding terminal.**

If you do not ground the equipment correctly, it can cause serious injury or death if you touch the motor case.

**After the drive blows a fuse or trips an RCM/RCD, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices.**

If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

**Do not remove covers or touch circuit boards while the drive is energized.**

If you touch the internal components of an energized drive, it can cause serious injury or death.

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

#### Fire Hazard

**Tighten all terminal screws to the correct tightening torque.**

Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

**Tighten screws at an angle in the specified range shown in this manual.**

If you tighten the screws at an angle not in the specified range, you can have loose connections that can cause damage to the terminal block or start a fire and cause serious injury or death.

#### Damage to Equipment

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

**⚠ WARNING****Fire Hazard**

**Do not put flammable or combustible materials on top of the drive and do not install the drive near flammable or combustible materials. Attach the drive to metal or other noncombustible material.**

Flammable and combustible materials can start a fire and cause serious injury or death.

**Crush Hazard**

**Wear eye protection when you do work on the drive.**

If you do not use correct safety equipment, it can cause serious injury or death.

**Use a crane or hoist to move large drives when necessary.**

If you try to move a large drive without a crane or hoist, it can cause serious injury or death.

**NOTICE****Damage to Equipment**

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Do not break the electrical connection between the drive and the motor when the drive is outputting voltage.**

Incorrect equipment sequencing can cause damage to the drive.

**Make sure that all connections are correct after you install the drive and connect peripheral devices.**

Incorrect connections can cause damage to the drive.

**Note:**

Do not use unshielded wire for control wiring. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Unshielded wire can cause electrical interference and unsatisfactory system performance.

## 7.2 Types of Faults, Minor Faults, Alarms, and Errors

If the drive or motor do not operate correctly, check the drive keypad for a code or message.

If problems occur that are not identified in this manual, contact the nearest Yaskawa representative with this information:

- Drive model
- Drive software version
- Date of purchase
- Description of the problem (for example failure conditions and modified parameters)

Table 7.1 contains descriptions of the different types of faults, minor faults, alarms, and errors that can occur during drive operation.

Contact Yaskawa if there is damage to the drive. Contact information is on the back cover of the manual.

**Table 7.1 Types of Faults, Minor Faults, Alarms, and Errors**

| Type                | Drive Response  |
|---------------------|---|
| Fault               | <p>When the drive detects a fault, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the fault code, and ALM/ERR stays illuminated.</li> <li>• The drive shuts off output, and the motor coasts to a stop. Some faults let the user select a motor stopping method.</li> <li>• The terminal set to <math>H2-01</math> to <math>H2-03 = E</math> [MFDO Function Selection = Fault] will activate.</li> </ul> <p>The drive will not operate until you clear the fault with a Fault Reset and the drive goes back to usual status.</p>   |
| Minor Faults/Alarms | <p>When the drive detects a minor fault or an alarm, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the alarm code, and ALM/ERR flashes.</li> <li>• The drive will continue to operate the motor. Some alarms let you select a motor stopping method.</li> <li>• If the drive detects a minor fault, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [Alarm] will activate. If you do not set parameters <math>H2-01</math> to <math>H2-03</math>, the drive will not trigger MFDO terminals if it detects a minor fault.</li> <li>• The drive will not output a minor fault signal if it detects an alarm.</li> </ul> <p>It is not necessary to do Fault Reset.</p> |
| Operation Errors    | <p>An error occurs when parameter settings do not agree or a parameter combination is incorrect. The drive will not operate until you set the parameters correctly.</p> <p>When the drive detects an operation error, these conditions will result:</p> <ul style="list-style-type: none"> <li>• The keypad shows the error code.</li> <li>• Multi-function outputs do not output an alarm signal.</li> </ul> <p>Find the parameters that caused the error and correct the settings.</p>  |
| Auto-Tuning Error   | <p>An error occurs during Auto-Tuning.</p> <p>When the drive detects an operation error, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the error code.</li> <li>• Multi-function outputs do not output an alarm signal.</li> <li>• The motor coasts to stop.</li> </ul> <p>Remove the cause of the error and do Auto-Tuning again.</p>  |
| Copy Function Error | <p>An error occurs when you use the keypad for a backup, restore, or verify operation.</p> <p>When the drive detects a copy function error, it will cause these conditions:</p> <ul style="list-style-type: none"> <li>• The keypad shows the error code.</li> <li>• Multi-function outputs do not output an alarm signal.</li> </ul> <p>Push a key on the keypad to clear the error. Remove the cause of the error and try the backup, restore, or verify operation again.</p>   |

## 7.3 List of Fault, Minor Fault, Alarm, and Error Codes

Table 7.2 shows the possible fault, minor fault, alarm, and error codes.

The display codes are in alphabetical order. Search the table for the code shown on the keypad, and identify its causes and possible solutions.

**Note:**

The number in parentheses adjacent to the code in the table identifies the fault code or minor fault code (hex. number) that was read during MEMOBUS/Modbus communications.

Example: AEr (0032)

**Table 7.2 List of Fault, Minor Fault, Alarm, and Error Codes**

| Display (Hex.)  | Name                              | ALM LED     | Type                          | Ref. |
|---|-----------------------------------|-------------|-------------------------------|------|
| AEr (0032)  | Station Address Setting Error     | Flashing    | Alarm                         | 260  |
| bAT (0085)  | Keypad Battery Low Voltage        | Flashing    | Alarm                         | 260  |
| bAT (0402)  | Keypad Battery Low Voltage        | Illuminated | Fault                         | 244  |
| bb (0008)   | Baseblock                         | Flashing    | Alarm                         | 260  |
| bCE (008A)  | Bluetooth Communication Error     | Flashing    | Alarm                         | 260  |
| bCE (0416)  | Bluetooth Communication Fault     | Illuminated | Fault                         | 244  |
| boL (0045)  | Braking Transistor Overload       | Flashing    | Alarm                         | 260  |
| boL (004F)  | Braking Transistor Overload Fault | Illuminated | Fault                         | 244  |
| bUS (0015)  | Option Communication Error        | Flashing    | Alarm                         | 260  |
| bUS (0022)  | Option Communication Error        | Illuminated | Fault                         | 244  |
| bUSy  | Busy                              | -           | Not an alarm.                 | 261  |
| CALL (001D)   | Serial Comm Transmission Error    | Flashing    | Alarm                         | 261  |
| CE (0014)   | Modbus Communication Error        | Flashing    | Alarm                         | 261  |
| CE (0021)   | Modbus Communication Error        | Illuminated | Fault                         | 244  |
| CF (0025)   | Control Fault                     | Illuminated | Fault                         | 245  |
| CoF (0046)  | Current Offset Fault              | Illuminated | Fault                         | 245  |
| CP1 (0087)  | Comparator 1 Limit Error          | Flashing    | Alarm                         | 261  |
| CP1 (0414)  | Comparator 1 Limit Error          | Illuminated | Fault                         | 245  |
| CP2 (0088)  | Comparator 2 Limit Error          | Flashing    | Alarm                         | 262  |
| CP2 (0415)  | Comparator 2 Limit Error          | Illuminated | Fault                         | 245  |
| CPEr  | Control Mode Mismatch             | -           | Backup Function Runtime Error | 279  |
| CPF00, CPF01<br>CPF02, CPF03 (0083, 0084)<br>CPF08 (0089)<br>CPF11 - CPF14 (008C - 008F)<br>CPF16 - CPF24 (0091 - 0099)<br>CPF38 (00A7) | Control Circuit Error             | Illuminated | Fault                         | 246  |
| CPF06 (0087)  | EEPROM Memory Data Error          | Illuminated | Fault                         | 246  |
| CPyE  | Error Writing Data                | -           | Backup Function Runtime Error | 279  |
| CrST  | Remove RUN Command to Reset       | Flashing    | Not an alarm.                 | 262  |
| CSEr  | Control Mode Mismatch             | -           | Backup Function Runtime Error | 279  |
| CyC (0033)  | MECHATROLINK CommCycleSettingErr  | Flashing    | Alarm                         | 262  |
| CyPo (0029)   | Cycle Power to Accept Changes     | Flashing    | Alarm                         | 262  |
| dCE1 (041A)   | Communication Error1              | Illuminated | Fault                         | 246  |
| dCE2 (041B)   | Communication Error2              | Illuminated | Fault                         | 246  |
| dEv (0011)  | Speed Deviation                   | Flashing    | Alarm                         | 262  |
| dEv (0019)  | Speed Deviation                   | Illuminated | Fault                         | 246  |
| dFPS  | Drive Model Mismatch              | -           | Backup Function Runtime Error | 279  |
| dnE (002A)  | Drive Disabled                    | Flashing    | Alarm                         | 262  |

## 7.3 List of Fault, Minor Fault, Alarm, and Error Codes

| Display (Hex.) | Name                             | ALM LED     | Type              | Ref. |
|----------------|----------------------------------|-------------|-------------------|------|
| dv7 (005B)     | Polarity Judge Timeout           | Illuminated | Fault             | 246  |
| dWA2 (004A)    | DriveWorksEZ Alarm 2             | Flashing    | Alarm             | 262  |
| dWA3 (004B)    | DriveWorksEZ Alarm 3             | Flashing    | Alarm             | 262  |
| dWAL (0049)    | DriveWorksEZ Alarm               | Flashing    | Alarm             | 262  |
| dWF1 (004A)    | EEPROM Memory DWEZ Data Error    | Illuminated | Fault             | 247  |
| dWF2 (004B)    | DriveWorksEZ Fault 2             | Illuminated | Fault             | 247  |
| dWF3 (004C)    | DriveWorksEZ Fault 3             | Illuminated | Fault             | 247  |
| dWFL (0049)    | DriveWorksEZ Fault               | Illuminated | Fault             | 247  |
| E5 (0031)      | MECHATROLINK Watchdog Timer Err  | Flashing    | Alarm             | 262  |
| E5 (0039)      | MECHATROLINK Watchdog Timer Err  | Illuminated | Fault             | 247  |
| EF (0007)      | FWD/REV Run Command Input Error  | Flashing    | Alarm             | 263  |
| EF0 (001A)     | Option Card External Fault       | Flashing    | Alarm             | 263  |
| EF0 (0027)     | Option Card External Fault       | Illuminated | Fault             | 247  |
| EF1 (0042)     | External Fault (Terminal S1)     | Illuminated | Fault             | 247  |
| EF1 (0039)     | External Fault (Terminal S1)     | Flashing    | Alarm             | 263  |
| EF2 (003A)     | External Fault (Terminal S2)     | Flashing    | Alarm             | 263  |
| EF2 (0043)     | External Fault (Terminal S2)     | Illuminated | Fault             | 247  |
| EF3 (0009)     | External Fault (Terminal S3)     | Flashing    | Alarm             | 263  |
| EF3 (0011)     | External Fault (Terminal S3)     | Illuminated | Fault             | 248  |
| EF4 (000A)     | External Fault (Terminal S4)     | Flashing    | Alarm             | 263  |
| EF4 (0012)     | External Fault (Terminal S4)     | Illuminated | Fault             | 248  |
| EF5 (000B)     | External Fault (Terminal S5)     | Flashing    | Alarm             | 263  |
| EF5 (0013)     | External Fault (Terminal S5)     | Illuminated | Fault             | 248  |
| EF6 (000C)     | External Fault (Terminal S6)     | Flashing    | Alarm             | 264  |
| EF6 (0014)     | External Fault (Terminal S6)     | Illuminated | Fault             | 248  |
| EF7 (000D)     | External Fault (Terminal S7)     | Flashing    | Alarm             | 264  |
| EF7 (0015)     | External Fault (Terminal S7)     | Illuminated | Fault             | 248  |
| End1           | Excessive Rated Voltage Setting  | Flashing    | Auto-Tuning Error | 275  |
| End2           | Iron Core Saturation Coefficient | Flashing    | Auto-Tuning Error | 275  |
| End3           | Rated Current Setting Alarm      | Flashing    | Auto-Tuning Error | 275  |
| End4           | Adjusted Slip Calculation Error  | Flashing    | Auto-Tuning Error | 275  |
| End5           | Resistance Tuning Error          | Flashing    | Auto-Tuning Error | 275  |
| End6           | Leakage Inductance Alarm         | Flashing    | Auto-Tuning Error | 275  |
| End7           | No-Load Current Alarm            | Flashing    | Auto-Tuning Error | 275  |
| End8           | HFI Alarm                        | Flashing    | Auto-Tuning Error | 276  |
| End9           | Initial Pole Detection Alarm     | Flashing    | Auto-Tuning Error | 276  |
| EP24v (0081)   | External Power 24V Supply        | Flashing    | Alarm             | 264  |
| Er-01          | Motor Data Error                 | Flashing    | Auto-Tuning Error | 276  |
| Er-02          | Drive in an Alarm State          | Flashing    | Auto-Tuning Error | 276  |
| Er-03          | STOP Button was Pressed          | Flashing    | Auto-Tuning Error | 276  |
| Er-04          | Resistance Tuning Error          | Flashing    | Auto-Tuning Error | 277  |
| Er-05          | No-Load Current Alarm            | Flashing    | Auto-Tuning Error | 277  |
| Er-08          | Rated Slip Error                 | Flashing    | Auto-Tuning Error | 277  |
| Er-09          | Acceleration Error               | Flashing    | Auto-Tuning Error | 277  |
| Er-10          | Motor Direction Error            | Flashing    | Auto-Tuning Error | 277  |
| Er-11          | Motor Speed Error                | Flashing    | Auto-Tuning Error | 277  |



## 7.3 List of Fault, Minor Fault, Alarm, and Error Codes

| Display (Hex.)              | Name   | ALM LED     | Type                          | Ref. |
|-----------------------------|--|-------------|-------------------------------|------|
| Er-12                       | Current Detection Error                          | Flashing    | Auto-Tuning Error             | 278  |
| Er-13                       | Leakage Inductance Alarm                         | Flashing    | Auto-Tuning Error             | 278  |
| Er-14                       | Motor Speed Error 2                              | Flashing    | Auto-Tuning Error             | 278  |
| Er-15                       | Torque Saturation Error                          | Flashing    | Auto-Tuning Error             | 278  |
| Er-16                       | Inertia ID Error                                 | Flashing    | Auto-Tuning Error             | 278  |
| Er-17                       | Reverse Prohibited Error                         | Flashing    | Auto-Tuning Error             | 278  |
| Er-18                       | Back EMF Error                                   | Flashing    | Auto-Tuning Error             | 278  |
| Er-19                       | PM Inductance Error                              | Flashing    | Auto-Tuning Error             | 278  |
| Er-20                       | Stator Resistance Error                          | Flashing    | Auto-Tuning Error             | 278  |
| Er-25                       | HighFreq Inject Param Tuning Err                 | Flashing    | Auto-Tuning Error             | 278  |
| Err (001F)                  | EEPROM Write Error                               | Illuminated | Fault                         | 248  |
| FbH (0028)                  | Excessive PID Feedback                           | Flashing    | Alarm                         | 264  |
| FbH (0041)                  | Excessive PID Feedback                           | Illuminated | Fault                         | 248  |
| FbL (0027)                  | PID Feedback Loss                                | Flashing    | Alarm                         | 264  |
| FbL (0028)                  | PID Feedback Loss                                | Illuminated | Fault                         | 249  |
| GF (0006)                   | Ground Fault                                     | Illuminated | Fault                         | 249  |
| HCA (0034)                  | High Current Alarm                               | Flashing    | Alarm                         | 264  |
| iFEr                        | Communication Err                                | -           | Backup Function Runtime Error | 279  |
| L24v (0021)                 | Loss of External Power 24 Supply                 | Flashing    | Alarm                         | 265  |
| LF (001C)                   | Output Phase Loss                                | Illuminated | Fault                         | 249  |
| LF2 (0036)                  | Output Current Imbalance                         | Illuminated | Fault                         | 249  |
| LoG                         | Log Com Error                                    | Flashing    | Alarm                         | 265  |
| LSo (0051)                  | Low Speed Motor Step-Out                         | Illuminated | Fault                         | 250  |
| LT-1 (0035)                 | Cooling Fan Maintenance Time                     | Flashing    | Alarm                         | 265  |
| LT-2 (0036)                 | Capacitor Maintenance Time                       | Flashing    | Alarm                         | 265  |
| LT-3 (0043)                 | SoftChargeBypassRelay MainteTime                 | Flashing    | Alarm                         | 265  |
| LT-4 (0044)                 | IGBT Maintenance Time (50%)                      | Flashing    | Alarm                         | 265  |
| ndAT                        | Model,VolClass,Capacity Mismatch                 | -           | Backup Function Runtime Error | 279  |
| nSE (0052)                  | Node Setup Error                                 | Illuminated | Fault                         | 250  |
| oC (0007)                   | Overcurrent                                      | Illuminated | Fault                         | 250  |
| oFA00 (0101)                | Option Not Compatible with Port                  | Illuminated | Fault                         | 251  |
| oFA03 - oFA06 (0104 - 0107) | Option Card Error Occurred at Option Port (CN5)  | Illuminated | Fault                         | 251  |
| oFA10, oFA11 (0111, 0112)   | Option Card Error Occurred at Option Port (CN5)  | Illuminated | Fault                         | 252  |
| oFA12 - oFA17 (0113 - 0118) | Option Card Connection Error (CN5)               | Illuminated | Fault                         | 252  |
| oFA30 - oFA43 (0131 - 013E) | Communication Option Card Connection Error (CN5) | Illuminated | Fault                         | 252  |
| oH (0003)                   | Heatsink Overheat                                | Flashing    | Alarm                         | 265  |
| oH (0009)                   | Heatsink Overheat                                | Illuminated | Fault                         | 252  |
| oH1 (000A)                  | Heatsink Overheat                                | Illuminated | Fault                         | 252  |
| oH2 (0004)                  | External Overheat (H1-XX=B)                      | Flashing    | Alarm                         | 266  |
| oH3 (001D)                  | Motor Overheat (PTC Input)                       | Illuminated | Fault                         | 252  |
| oH3 (0022)                  | Motor Overheat (PTC Input)                       | Flashing    | Alarm                         | 266  |
| oH4 (0020)                  | Motor Overheat Fault (PTC Input)                 | Illuminated | Fault                         | 253  |
| oL1 (000B)                  | Motor Overload                                   | Illuminated | Fault                         | 253  |
| oL2 (000C)                  | Drive Overload                                   | Illuminated | Fault                         | 254  |
| oL3 (0005)                  | Overtorque 1                                     | Flashing    | Alarm                         | 266  |
| oL3 (000D)                  | Overtorque Detection 1                           | Illuminated | Fault                         | 254  |

## 7.3 List of Fault, Minor Fault, Alarm, and Error Codes

| Display (Hex.)           | Name                             | ALM LED     | Type                          | Ref. |
|--------------------------|----------------------------------|-------------|-------------------------------|------|
| oL4 (0006)               | Overtorque 2                     | Flashing    | Alarm                         | 266  |
| oL4 (000E)               | Overtorque Detection 2           | Illuminated | Fault                         | 255  |
| oL5 (003D)               | Mechanical Weakening Detection 1 | Flashing    | Alarm                         | 266  |
| oL5 (0044)               | Mechanical Weakening Detection 1 | Illuminated | Fault                         | 255  |
| oL7 (002B)               | High Slip Braking Overload       | Illuminated | Fault                         | 255  |
| oPE01                    | Drive Capacity Setting Fault     | Flashing    | Parameter Setting Error       | 270  |
| oPE02                    | Parameter Range Setting Error    | Flashing    | Parameter Setting Error       | 270  |
| oPE03                    | Multi-Function Input Setting Err | Flashing    | Parameter Setting Error       | 270  |
| oPE05                    | Run Cmd/Freq Ref Source Sel Err  | Flashing    | Parameter Setting Error       | 271  |
| oPE07                    | Analog Input Selection Error     | Flashing    | Parameter Setting Error       | 272  |
| oPE08                    | Parameter Selection Error        | Flashing    | Parameter Setting Error       | 272  |
| oPE09                    | PID Control Selection Fault      | Flashing    | Parameter Setting Error       | 273  |
| oPE10                    | V/f Data Setting Error           | Flashing    | Parameter Setting Error       | 273  |
| oPE11                    | Carrier Frequency Setting Error  | Flashing    | Parameter Setting Error       | 273  |
| oPE13                    | Pulse Monitor Selection Error    | Flashing    | Parameter Setting Error       | 273  |
| oPE16                    | Energy Saving Constants Error    | Flashing    | Parameter Setting Error       | 273  |
| oPE33                    | Digital Output Selection Error   | Flashing    | Parameter Setting Error       | 274  |
| oPr (001E)               | Keypad Connection Fault          | Illuminated | Fault                         | 255  |
| oS (0010)                | Overspeed                        | Flashing    | Alarm                         | 267  |
| oS (0018)                | Overspeed                        | Illuminated | Fault                         | 267  |
| ov (0002)                | Overvoltage                      | Flashing    | Alarm                         | 267  |
| ov (0008)                | Overvoltage                      | Illuminated | Fault                         | 255  |
| ovEr                     | Too Many Parameters Changed      | -           | Not an alarm.                 | 267  |
| PASS                     | Modbus Communication Test        | Flashing    | Not an alarm.                 | 267  |
| PE1 (0047)<br>PE2 (0048) | PLC Faults                       | Illuminated | Fault                         | 256  |
| PF (0047)                | Input Phase Loss                 | Flashing    | Alarm                         | 267  |
| PF (001B)                | Input Phase Loss                 | Illuminated | Fault                         | 256  |
| PWEr                     | DWEZ Password Mismatch           | -           | Backup Function Runtime Error | 279  |
| rdEr                     | Error Reading Data               | -           | Backup Function Runtime Error | 279  |
| rF (004E)                | Braking Resistor Fault           | Illuminated | Fault                         | 257  |
| rH (0010)                | Braking Resistor Overheat        | Illuminated | Fault                         | 257  |
| rr (000F)                | Dynamic Braking Transistor Fault | Illuminated | Fault                         | 257  |
| rUn (001B)               | Motor Switch during Run          | Flashing    | Alarm                         | 268  |
| SC (0005)                | Short Circuit/IGBT Failure       | Illuminated | Fault                         | 257  |
| SCF (040F)               | Safety Circuit Fault             | Illuminated | Fault                         | 258  |
| SE (0020)                | Modbus Test Mode Error           | Flashing    | Alarm                         | 268  |
| SEr (003B)               | Speed Search Retries Exceeded    | Illuminated | Fault                         | 258  |
| SToF (003B)              | Safe Torque OFF                  | Flashing    | Alarm                         | 268  |
| STPo (0037)              | Motor Step-Out Detected          | Illuminated | Fault                         | 258  |
| TiM (0089)               | Keypad Time Not Set              | Flashing    | Alarm                         | 268  |
| TiM (0401)               | Keypad Time Not Set              | Illuminated | Fault                         | 258  |
| TrPC (0042)              | IGBT Maintenance Time (90%)      | Flashing    | Alarm                         | 268  |
| UL3 (001E)               | Undertorque Detection 1          | Flashing    | Alarm                         | 268  |
| UL3 (0029)               | Undertorque Detection 1          | Illuminated | Fault                         | 258  |
| UL4 (001F)               | Undertorque Detection 2          | Flashing    | Alarm                         | 268  |
| UL4 (002A)               | Undertorque Detection 2          | Illuminated | Fault                         | 258  |

### 7.3 List of Fault, Minor Fault, Alarm, and Error Codes

| Display (Hex.) | Name                             | ALM LED     | Type                          | Ref.                |
|----------------|----------------------------------|-------------|-------------------------------|---------------------|
| UL5 (003E)     | Mechanical Weakening Detection 2 | Flashing    | Alarm                         | <a href="#">268</a> |
| UL5 (0045)     | Mechanical Weakening Detection 2 | Illuminated | Fault                         | <a href="#">259</a> |
| Uv (0001)      | DC Bus Undervoltage              | Flashing    | Alarm                         | <a href="#">269</a> |
| Uv1 (0002)     | DC Bus Undervoltage              | Illuminated | Fault                         | <a href="#">259</a> |
| Uv2 (0003)     | Control Power Undervoltage       | Illuminated | Fault                         | <a href="#">259</a> |
| Uv3 (0004)     | Soft Charge Answerback Fault     | Illuminated | Fault                         | <a href="#">259</a> |
| vAEr           | Voltage Class, Capacity Mismatch | -           | Backup Function Runtime Error | <a href="#">280</a> |
| vFyE           | Parameters do not Match          | -           | Backup Function Runtime Error | <a href="#">280</a> |

## 7.4 Fault

This section gives information about some of the causes and possible solutions of faults. You must use the Fault Reset operation to remove the fault before you can operate the drive. Use the information in this table to remove the cause of the fault.

| Code   | Name                             | Causes  | Possible Solutions   |
|--|----------------------------------|---|--|
| bAT  | Keypad Battery Low Voltage       | The keypad battery voltage is low.  | Replace the keypad battery.  |
| <b>Note:</b><br>Use o4-24 [bAT Detection Selection] to enable/disable bAT detection.   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| bCE  | Bluetooth Communication Fault    | The smartphone or tablet with DriveWizard Mobile installed is too far from the keypad.  | Use the smartphone or tablet 10 m (32.8 ft) or nearer to the keypad.<br><b>Note:</b><br>bCE can occur when the smartphone or tablet is 10 m (32.8 ft) or nearer to the keypad depending on the specifications of the smartphone or tablet.   |
|  |                                  | Radio waves from a different device are causing interference with communications between the smartphone or tablet and keypad. | Make sure that no device around the keypad uses the same radio bandwidth (2400 MHz to 2480 MHz), and prevent radio interference.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error when you use the Bluetooth LCD keypad and operate the drive with a smartphone or tablet.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Set the stopping method for this fault in o2-27 [bCE Detection Selection].</li> </ul>   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| boL  | BrakingTransistor Overload Fault | The duty cycle of the braking transistor is high (the regeneration power or repetition frequency is high).                    | <ul style="list-style-type: none"> <li>Install a regenerative converter.</li> <li>Increase the deceleration time.</li> </ul>   |
|  |                                  | You enabled the protective function for the braking transistor when you have a regenerative converter.                        | Set L8-55 = 0 [Internal DB TransistorProtection Selection = Disable].  |
|  |                                  | The braking transistor in the drive is broken.  | Replace the drive.   |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| bUS  | Option Communication Error       | The drive did not receive a signal from the controller.   | Correct wiring errors.   |
|  |                                  | The communications cable wiring is incorrect.   |  |
|  |                                  | There is a short-circuit in the communications cable or the communications cable is not connected.                            | <ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>   |
|  |                                  | Electrical interference caused a communication data error.  | <ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul> |
|  |                                  | The option is incorrectly installed to the drive.   | Correctly install the option to the drive.   |
|  | The option is damaged.           | If the fault continues and the wiring is correct, replace the option.   |  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the Run command or frequency reference is assigned to the option card.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, the drive will operate the motor as specified by the stopping method set in F6-01 [Communication Error Selection].</li> </ul> |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| CE   | Modbus Communication Error       | The communications cable wiring is incorrect.   | Correct wiring errors.   |
|  |                                  | There is a short circuit in the communications cable or the communications cable is not connected.                            | <ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>   |

| Code  | Name                     | Causes  | Possible Solutions   |
|---|--------------------------|---|--|
|   |                          | Electrical interference caused a communication data error.  | <ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it does not correctly receive control data for the <i>CE</i> detection time set to <i>H5-09 [CE Detection Time]</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, the drive will operate the motor as specified by the stopping method set in <i>H5-04 [Communication Error Stop Method]</i>.</li> </ul> |                          |   |  |
| Code  | Name                     | Causes  | Possible Solutions   |
| CF  | Control Fault            | Motor parameters are set incorrectly  | Correctly set the motor parameters and do Auto-Tuning again.   |
|   |                          | The torque limit setting is too low.  | Adjust <i>L7-01 to L7-04 [Torque Limit]</i> .  |
|   |                          | The load inertia is too large.  | <ul style="list-style-type: none"> <li>Adjust <i>C1-02, C1-04, C1-06, and C1-08 [Deceleration Times]</i>.</li> <li>Set the frequency reference to the minimum output frequency, and stop the Run command when the drive stops deceleration.</li> </ul>   |
|   |                          | The drive is trying to ramp to stop a machine that cannot do ramp to stop or on a machine for which deceleration is not necessary.  | Correctly set <i>b1-03 [Stopping Method Selection]</i> .   |
|   |                          | The motor and drive are connected incorrectly.  | Correct wiring errors.   |
|   |                          | Line-to-line Resistance Tuning is not done.   | Do Stationary Auto-Tuning for Line-to-Line Resistance.   |
|   |                          | The drive received a Run command while the motor was coasting.  | <ul style="list-style-type: none"> <li>Examine the sequence and input the Run command after the motor fully stops.</li> <li>Set <i>b3-01 = 1 [Speed Search at Start Selection = Enabled]</i>.</li> </ul>   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the torque reference is more than the torque limit for 3 seconds or longer while the drive ramps to stop.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>  |                          |   |  |
| Code  | Name                     | Causes  | Possible Solutions   |
| CoF   | Current Offset Fault     | The drive starts operation while the induced voltage stays in the motor (during coasting to a stop or after fast deceleration).   | <ul style="list-style-type: none"> <li>Make a sequence that does not restart operation when induced voltage stays in the motor.</li> <li>Set <i>b3-01 = 1 [Speed Search at Start Selection = Enabled]</i>.</li> <li>Use <i>Speed Search from Fmax or Fref [H1-xx = 61, 62]</i> to do a speed search through one of the external terminals.</li> </ul> <b>Note:</b><br>When controlling the PM motor, External Speed Search commands 1 and 2 operate the same.  |
|   |                          | A drive hardware problem occurred.  | Replace the drive.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the current offset value is more than the permitted setting range while the drive automatically adjusts the current offset.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>  |                          |   |  |
| Code  | Name                     | Causes  | Possible Solutions   |
| CP1   | Comparator 1 Limit Error | The monitor value set in <i>H2-20 [Comparator 1 Monitor Selection]</i> was in the range of <i>H2-21 [Comparator 1 Lower Limit]</i> and <i>H2-22 [Comparator 1 Upper Limit]</i> .      | Examine the monitor value and remove the cause of the fault.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error when <i>H2-01 to H2-03 = 66 [MFDO Function Selection = Comparator1]</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Set the stopping method for this fault in <i>H2-33 [Comparator1 Protection Selection]</i>.</li> </ul>  |                          |   |  |
| Code  | Name                     | Causes  | Possible Solutions   |
| CP2   | Comparator 2 Limit Error | The monitor value set in <i>H2-26 [Comparator 2 Monitor Selection]</i> was outside the range of <i>H2-27 [Comparator 2 Lower Limit]</i> and <i>H2-28 [Comparator 2 Upper Limit]</i> . | Examine the monitor value and remove the cause of the fault.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error when <i>H2-01 to H2-03 = 67 [MFDO Function Selection = Comparator2]</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Set the stopping method for this fault in <i>H2-35 [Comparator2 Protection Selection]</i>.</li> </ul>  |                          |   |  |

## 7.4 Fault

| Code   | Name                         | Causes   | Possible Solutions   |
|--|------------------------------|--|--|
| CPF00, CPF01, CPF02, CPF03, CPF08, CPF11 - CPF14, CPF16 - CPF24, CPF38   | Control Circuit Error        | A drive hardware problem occurred.   | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>  |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| CPF06  | EEPROM Memory Data Error     | The drive power supply was de-energized while a communication option card entered a parameter Write command. | Set <i>A1-03 = 2220, 3330</i> [Initialize Parameters = 2-Wire Initialization, 3-Wire Initialization] and initialize the drive.   |
|  |                              | An EEPROM peripheral circuit error occurred.   | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if there is an error in the data written to the EEPROM of the drive.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for this fault.</li> </ul>   |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| CPF25  | Terminal Board not Connected | The terminal board is not correctly connected to the drive.  | <ol style="list-style-type: none"> <li>De-energize the drive.</li> <li>Correctly connect the terminal board to the drive.</li> <li>Re-energize the drive.</li> </ol>   |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| dCE1   | Communication Error1         | A drive hardware problem occurred temporarily due to noise.  | <ul style="list-style-type: none"> <li>Remove the cause of the noise.</li> <li>If the fault stays, replace the control board or the drive.</li> </ul>  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>  |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| dCE2   | Communication Error2         | A drive hardware problem occurred temporarily due to noise.  | <ul style="list-style-type: none"> <li>Remove the cause of the noise.</li> <li>If the fault stays, replace the control board or the drive.</li> </ul>  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>  |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| dEv  | Speed Deviation              | The load is too heavy.   | Decrease the load.   |
|  |                              | Acceleration and deceleration times are set too short.   | Increase the values set in <i>CI-01 to CI-08</i> [Acceleration/Deceleration Time].   |
|  |                              | The <i>dEv</i> detection level settings are incorrect.   | Adjust <i>F1-10</i> [Speed Deviation Detection Level] and <i>F1-11</i> [Speed Deviation Detect DelayTime].   |
|  |                              | The load is locked up.   | Examine the machine.   |
|  |                              | The holding brake is stopping the motor.   | Release the holding brake.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the difference between the detected speed and the speed reference is more than the setting of <i>F1-10</i> for longer than <i>F1-11</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, the drive will operate the motor as specified by the stopping method set in <i>F1-04</i> [Speed Deviation Detection Select].</li> </ul> |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| dv7  | Polarity Judge Timeout       | There is a disconnection in the motor coil winding.  | Measure the motor line-to-line resistance and replace the motor if a coil is disconnected.   |
|  |                              | The screws on the drive output terminals are loose.  | Tighten the terminal screws to the correct tightening torque.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it cannot detect polarity in a pre-set length of time.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>  |                              |  |  |

| Code   | Name                            | Causes  | Possible Solutions  |
|--|---------------------------------|---|---|
| dWF1   | EEPROM Memory DWEZ Data Error   | There is an error in the EEPROM peripheral circuit.   | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>  |
|  |                                 | There is a problem with the EEPROM data.  | Set A1-03 = 2220, 3330 [Initialize Parameters = 2-Wire Initialization, 3-Wire Initialization] to initialize the drive, then upload the DriveWorksEZ project to the drive again.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if there is an error in the DriveWorksEZ program that was saved to EEPROM.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>   |                                 |   |   |
| Code   | Name                            | Causes  | Possible Solutions  |
| dWF2   | DriveWorksEZ Fault 2            | There was a fault in the DriveWorksEZ program.  | Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                 |   |   |
| Code   | Name                            | Causes  | Possible Solutions  |
| dWF3   | DriveWorksEZ Fault 3            | There was a fault in the DriveWorksEZ program.  | Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                 |   |   |
| Code   | Name                            | Causes  | Possible Solutions  |
| dWFL   | DriveWorksEZ Fault              | There was a fault in the DriveWorksEZ program.  | Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                 |   |   |
| Code   | Name                            | Causes  | Possible Solutions  |
| E5   | MECHATROLINK Watchdog Timer Err | The drive detected a watchdog circuit exception while it received data from the controller.   | Examine the MECHATROLINK cable connection. If this error occurs frequently, examine the wiring and decrease the effects of electrical interference as specified by these manuals: <ul style="list-style-type: none"> <li>MECHATROLINK-II Installation Guide (MECHATROLINK Members Association, manual number MMATDEP011)</li> <li>MECHATROLINK-III Installation Manual (MECHATROLINK Members Association, publication number MMATDEP018)</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the stop method set in F6-25 [MECHATROLINK Watchdog Error Sel].</li> </ul>  |                                 |   |   |
| Code   | Name                            | Causes  | Possible Solutions  |
| EF0  | Option Card External Fault      | The communication option received an external fault from the controller.                      | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input from the controller.</li> </ol>   |
|  |                                 | A programming error occurred on the controller side.  | Examine the operation of the controller program.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the alarm function on the external device side is operating.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the stop method set in F6-03 [Comm External Fault (EF0) Select].</li> </ul> |                                 |   |   |
| Code   | Name                            | Causes  | Possible Solutions  |
| EF1  | External Fault (Terminal S1)    | MFDI terminal S1 caused an external fault through an external device.                         | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>   |
|  |                                 | The wiring is incorrect.  | Correctly connect the signal line to MFDI terminal S1.  |
|  |                                 | External Fault [H1-01 = 20 to 2B] is set to MFDI terminal S1, but the terminal is not in use. | Correctly set the MFDI.   |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                 |   |   |
| Code   | Name                            | Causes  | Possible Solutions  |
| EF2  | External Fault (Terminal S2)    | MFDI terminal S2 caused an external fault through an external device.                         | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>   |
|  |                                 | The wiring is incorrect.  | Correctly connect the signal line to MFDI terminal S2.  |
|  |                                 | External Fault [H1-02 = 20 to 2B] is set to MFDI terminal S2, but the terminal is not in use. | Correctly set the MFDI.   |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                 |   |   |

## 7.4 Fault

| Code   | Name                         | Causes   | Possible Solutions   |
|--|------------------------------|--|--|
| EF3  | External Fault (Terminal S3) | MFDI terminal S3 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>  |
|  |                              | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S3.   |
|  |                              | <i>External Fault [HI-03 = 20 to 2B]</i> is set to MFDI terminal S3, but the terminal is not in use. | Correctly set the MFDI.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault. |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| EF4  | External Fault (Terminal S4) | MFDI terminal S4 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>  |
|  |                              | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S4.   |
|  |                              | <i>External Fault [HI-04 = 20 to 2B]</i> is set to MFDI terminal S4, but the terminal is not in use. | Correctly set the MFDI.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault. |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| EF5  | External Fault (Terminal S5) | MFDI terminal S5 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>  |
|  |                              | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S5.   |
|  |                              | <i>External Fault [HI-05 = 20 to 2B]</i> is set to MFDI terminal S5, but the terminal is not in use. | Correctly set the MFDI.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault. |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| EF6  | External Fault (Terminal S6) | MFDI terminal S6 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>  |
|  |                              | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S6.   |
|  |                              | <i>External Fault [HI-06 = 20 to 2B]</i> is set to MFDI terminal S6, but the terminal is not in use. | Correctly set the MFDI.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault. |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| EF7  | External Fault (Terminal S7) | MFDI terminal S7 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>  |
|  |                              | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S7.   |
|  |                              | <i>External Fault [HI-07 = 20 to 2B]</i> is set to MFDI terminal S7, but the terminal is not in use. | Correctly set the MFDI.  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault. |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| Err  | EEPROM Write Error           | There was a problem with the EEPROM hardware.  | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. Contact Yaskawa or your nearest sales representative to replace the board.</li> </ul> |
|  |                              | Electrical interference corrupted the data while it was writing to the EEPROM of the drive.          | <ul style="list-style-type: none"> <li>Push ENTER Key.</li> <li>Set the parameters again.</li> </ul>   |
| <b>Note:</b><br>Do a Fault Reset to clear the fault. |                              |  |  |
| Code   | Name                         | Causes   | Possible Solutions   |
| FbH  | Excessive PID Feedback       | The <i>FbH</i> detection level is set incorrectly.   | Adjust <i>b5-36 [PID High Feedback Detection Lvl]</i> and <i>b5-37 [PID High Feedback Detection Time]</i> .  |
|  |                              | There is a problem with the PID feedback wiring.   | Correct errors with the PID control wiring.  |
|  |                              | The feedback sensor is not operating correctly.  | Examine the sensors on the control device side.  |



| Code  | Name                     | Causes   | Possible Solutions  |
|---|--------------------------|--|---|
|   |                          | A fault occurred in the feedback input circuit of the drive.   | Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the PID feedback input is more than the level set in <i>b5-36</i> for longer than <i>b5-37</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the stop method set in <i>b5-12</i> [<i>Feedback Loss Detection Select</i>].</li> </ul> |                          |  |   |
| Code  | Name                     | Causes   | Possible Solutions  |
| FbL   | PID Feedback Loss        | The <i>FbL</i> detection level is set incorrectly.   | Adjust <i>b5-13</i> [ <i>PID Feedback Loss Detection Lvl</i> ] and <i>b5-14</i> [ <i>PID Feedback Loss Detection Time</i> ].  |
|   |                          | There is a problem with the PID feedback wiring.   | Correct errors with the PID control wiring.   |
|   |                          | The feedback sensor is not operating correctly.  | Examine the sensors on the control device side.   |
|   |                          | A fault occurred in the feedback input circuit of the drive.   | Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the PID feedback input is more than the level set in <i>b5-13</i> for longer than <i>b5-14</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the stop method set in <i>b5-12</i> [<i>Feedback Loss Detection Select</i>].</li> </ul> |                          |  |   |
| Code  | Name                     | Causes   | Possible Solutions  |
| GF  | Ground Fault             | Overheating caused damage to the motor or the motor insulation is not satisfactory.                                  | Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.   |
|   |                          | The motor main circuit cable is contacting ground to make a short circuit.   | <ul style="list-style-type: none"> <li>Examine the motor main circuit cable for damage, and repair short circuits.</li> <li>Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.</li> </ul> |
|   |                          | An increase in the stray capacitance of the cable and the ground terminal caused an increase in the leakage current. | <ul style="list-style-type: none"> <li>If the wiring length of the cable is more than 100 m, decrease the carrier frequency.</li> <li>Decrease the stray capacitance.</li> </ul>  |
|   |                          | There was a problem with the drive hardware.   | Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if a current short to ground was more than 50% of rated current on the output side of the drive.</li> <li>Do a Fault Reset to clear the fault.</li> <li><i>L5-08</i> [<i>Fault Reset Enable Select Grp2</i>] disables the Auto Restart function.</li> </ul>  |                          |  |   |
| Code  | Name                     | Causes   | Possible Solutions  |
| LF  | Output Phase Loss        | The motor main circuit cable is disconnected.  | Connect motor main circuit cable wiring. Correct wiring errors in the main circuit drive input power.   |
|   |                          | There is a disconnection in the motor coil winding.  | If a coil is disconnected, measure the motor Line-to-Line Resistance and replace the motor.   |
|   |                          | The screws on the drive output terminals are loose.  | Tighten the terminal screws to the correct tightening torque.   |
|   |                          | The rated output current of the motor is less than 5% of the drive rated current.                                    | Examine the drive capacity or the motor output to be applied.   |
|   |                          | You are trying to use a single-phase motor.  | The drive cannot operate a single-phase motor.  |
|   |                          | The output transistor in the drive is damaged.   | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>                            |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if phase loss occurs on the output side of the drive.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Set <i>L8-07</i> [<i>Output Phase Loss Protection Sel</i>] to enable and disable <i>LF</i> detection.</li> </ul>  |                          |  |   |
| Code  | Name                     | Causes   | Possible Solutions  |
| LF2   | Output Current Imbalance | Phase loss occurred in the wiring on the output side of the drive.   | Examine for wiring errors or disconnected wires on the output side of the drive, and repair problems.   |
|   |                          | The output terminal screws of the drive are loose.   | Tighten the terminal screws to the correct tightening torque.   |
|   |                          | There is not balance between the three phases of the PM motor impedance.   | <ul style="list-style-type: none"> <li>Measure the Line-to-Line Resistance for each motor phase and make sure that resistance is equal in the three phases, and that all wires are connected correctly.</li> <li>Replace the motor.</li> </ul>                                    |

## 7.4 Fault

| Code  | Name                     | Causes  | Possible Solutions   |
|---|--------------------------|---|--|
|   |                          | The drive output circuit is broken.   | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if there is not balance between the three phases of the output current from the PM motor.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>   |                          |   |  |
| Code  | Name                     | Causes  | Possible Solutions   |
| LSo   | Low Speed Motor Step-Out | The motor code set incorrectly.   | <ul style="list-style-type: none"> <li>Set <i>E5-01 [PM Motor Code Selection]</i> correctly as specified by the motor.</li> <li>For specialized motors, refer to the motor test report and set <i>E5-xx</i> correctly.</li> </ul>  |
|   |                          | The load is too large.  | <ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Replace the drive and motor with larger capacity models.</li> </ul>   |
|   |                          | An external force on the load side caused the motor to move at start.   | Find and repair problems on the load side that cause the motor to rotate from the load side.   |
|   |                          | The drive incorrectly detected the motor magnetic pole position.  | <ul style="list-style-type: none"> <li>Set <i>b3-01 = 1 [Speed Search at Start Selection = Enabled]</i>.</li> <li>If the value for <i>U6-57 [PolePolarityDeterVal]</i> is lower than 819, increase the value set in <i>n8-84 [Polarity Detection Current]</i>. Consult the motor manufacturer for information about maximum setting values.</li> </ul>   |
|   |                          | The setting of <i>n8-84 [Polarity Detection Current]</i> is too low.  | Increase the n8-84 setting from the default. Consult the motor manufacturer for information about maximum setting values.  |
|   |                          | Incorrect values set in <i>L8-93 [Low Speed Pull-out DetectionTime]</i> , <i>L8-94 [Low Speed Pull-out Detect Level]</i> , and <i>L8-95 [Low Speed Pull-out Amount]</i> . | Increase the values set in <i>L8-93 to L8-95</i> .   |
|   |                          | The drive incorrectly detected the motor magnetic pole position.  | If you are using an IPM motor, do High Frequency Injection Auto-Tuning.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if it detects step-out while running at low speed.</li> <li>Do a Fault Reset to clear the fault.</li> <li><i>LSo</i> is a protective function that stops the motor and stops the reverse run if a motor without a motor code incorrectly detects the initial polarity. To quickly detect motor reversal, decrease the values set in <i>L8-93 to L8-95</i> to a range in which the drive does not malfunction.</li> </ul> |                          |   |  |
| Code  | Name                     | Causes  | Possible Solutions   |
| nSE   | Node Setup Error         | The <i>H1-xx = 47 [Node Setup (CANopen)]</i> terminal was activated during run.   | Stop the drive when the Node Setup function is in use.   |
|   |                          | The drive received a Run command while the Node Setup function was active.  |  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> </ul>   |                          |   |  |
| Code  | Name                     | Causes  | Possible Solutions   |
| oC  | Overcurrent              | The load is too heavy.  | <ul style="list-style-type: none"> <li>Measure the current flowing into the motor.</li> <li>Replace the drive with a larger capacity model if the current value is more than the drive rated current.</li> <li>Decrease the load or replace with a larger drive to prevent sudden changes in the current level.</li> </ul>   |
|   |                          | Overheating caused damage to the motor or the motor insulation is not satisfactory.   | Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.  |
|   |                          | The motor main circuit cable is contacting ground to make a short circuit.  | <ul style="list-style-type: none"> <li>Examine the motor main circuit cable for damage, and repair short circuits.</li> <li>Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.</li> </ul>  |
|   |                          | A short circuit or ground fault on the drive output side caused damage to the output transistor of the drive.   | <ul style="list-style-type: none"> <li>Make sure that there is not a short circuit in terminal B1 and terminals U/T1, V/T2, and W/T3. Make sure that there is not a short circuit in terminals - and terminals U/T1, V/T2, and W/T3.</li> <li>If there is a short circuit, contact Yaskawa or your nearest sales representative.</li> </ul>  |
|   |                          | The acceleration time is too short.   | <ul style="list-style-type: none"> <li>Calculate the torque necessary during acceleration related to the load inertia and the specified acceleration time.</li> <li>Increase the values set in <i>C1-01, C1-03, C1-05, or C1-07 [Acceleration Times]</i> to get the necessary torque.</li> <li>Increase the values set in <i>C2-01 to C2-04 [S-Curve Characteristics]</i> to get the necessary torque.</li> <li>Replace the drive with a larger capacity model.</li> </ul> |
|   |                          | The drive is trying to operate a specialized motor or a motor that is larger than the maximum applicable motor output of the drive.                                       | <ul style="list-style-type: none"> <li>Examine the motor nameplate, the motor, and the drive to make sure that the drive rated current is larger than the motor rated current.</li> <li>Replace the drive with a larger capacity model.</li> </ul>   |
|   |                          | A magnetic contactor was switched at the output.  | Set the operation sequence to not turn ON or OFF the magnetic contactor while the drive is outputting voltage.   |

| Code  | Name  | Causes   | Possible Solutions  |
|---|---|--|---|
|   |   | The V/f pattern settings are incorrect.  | <ul style="list-style-type: none"> <li>Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency.</li> <li>Adjust <i>E1-04</i> to <i>E1-10</i> [<i>V/f Pattern Parameters</i>]. For motor 2, adjust <i>E3-04</i> to <i>E3-10</i>.</li> </ul>                       |
|   |   | The torque compensation gain is too large.   | Decrease the value set in <i>C4-01</i> [ <i>Torque Compensation Gain</i> ] to make sure that the motor does not stall.  |
|   |   | Electrical interference caused a problem.  | Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.  |
|   |   | The gain during overexcitation operation is too large.   | <ul style="list-style-type: none"> <li>Find the time when the fault occurs.</li> <li>If the fault occurs at the same time as an overexcitation operation, decrease <i>n3-13</i> [<i>OverexcitationBraking (OEB) Gain</i>] and consider the motor flux saturation.</li> </ul>  |
|   |   | The drive received a Run command while the motor was coasting.   | <ul style="list-style-type: none"> <li>Examine the sequence and input the Run command after the motor fully stops.</li> <li>Set <i>b3-01</i> = 1 [<i>Speed Search at Start Selection = Enabled</i>] or set <i>H1-xx</i> = 61, 62 [<i>Speed Search from Fmax or Fref</i>] to input speed search commands from the MFDI terminals.</li> </ul> |
|   |   | In PM Control Methods, the setting of the motor code is incorrect.   | <ul style="list-style-type: none"> <li>Enter the correct motor code to <i>E5-01</i> [<i>PM Motor Code Selection</i>] as specified by the PM motor.</li> <li>For specialized motors, refer to the motor test report and set <i>E5-xx</i> [<i>PM Motor Settings</i>] correctly.</li> </ul>  |
|   |   | If the drive detects the fault at start or in the low speed range (10% or less) and <i>n8-57</i> = 1 [ <i>HFI Overlap Selection = Enabled</i> ] for PM Control methods, the high frequency injection gain is too high. | <ul style="list-style-type: none"> <li>Set <i>E5-xx</i> [<i>PM Motor Parameters</i>] correctly or do Rotational Auto-Tuning.</li> <li>Decrease the value of <i>n8-41</i> [<i>HFI P Gain</i>] in 0.5-unit increments.</li> </ul> <p><b>Note:</b><br/>Set <i>n8-41</i> &gt; 0.0 for an ordinary IPM motor.</p>                                |
|   |   | The control method is set incorrectly for the motor.   | Set <i>A1-02</i> [ <i>Control Method Selection</i> ] correctly.   |
|   |   | The motor main circuit cable is too long.  | <ul style="list-style-type: none"> <li>Replace the drive with a larger capacity model.</li> <li>Decrease <i>C6-02</i> [<i>Carrier Frequency</i>]. Or set <i>C6-02</i> = B.</li> </ul>   |
|   |   | Speed search does not complete at start when you set <i>A1-02</i> = 8 [ <i>EZ Vector Control</i> ] and use an induction motor.   | When <i>E9-01</i> = 0 [ <i>Motor Type Selection = Induction (IM)</i> ], set <i>b3-24</i> = 2 [ <i>Speed Search Method Selection = Current Detection Speed Search</i> ].   |
|   |   | An overcurrent occurred during overexcitation deceleration.  | <ul style="list-style-type: none"> <li>Decrease <i>n3-13</i> [<i>OverexcitationBraking (OEB) Gain</i>].</li> <li>Decrease <i>n3-21</i> [<i>HSB Current Suppression Level</i>].</li> </ul>   |
| <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This fault occurs if the drive sensors detect a drive output current more than the specified overcurrent detection level.</li> <li>Do a Fault Reset to clear the fault.</li> </ul> |   |  |   |
| Code  | Name  | Causes   | Possible Solutions  |
| oC2   | Overcurrent2                                    | When <i>A1-02</i> = 5, 6, 8 [ <i>Control Method Selection = OLV/PM, AOLV/PM, or EZOLV</i> ], the output current is more than the value set in <i>L8-27</i> [ <i>Overcurrent Detection Gain</i> ].                      | Correct the value set in <i>L8-27</i> .   |
| <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>This fault occurs if the drive sensors detect a drive output current more than the specified overcurrent detection level.</li> <li>Do a Fault Reset to clear the fault.</li> </ul> |   |  |   |
| Code  | Name  | Causes   | Possible Solutions  |
| oFA00   | Option Not Compatible with Port                 | The option connected to connector CN5 is not compatible.   | Connect a correct option.   |
| <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>  |   |  |   |
| Code  | Name  | Causes   | Possible Solutions  |
| oFA01   | Option Fault/Connection Error                   | You changed the option card connected to connector CN5 during operation.   | <ol style="list-style-type: none"> <li>De-energize the drive.</li> <li>Refer to the option card manual and correctly connect the option card to the connector on the drive.</li> </ol>  |
| <p><b>Note:</b></p> <p>Do a Fault Reset to clear the fault.</p>   |   |  |   |
| Code  | Name  | Causes   | Possible Solutions  |
| oFA03 to oFA06  | Option Card Error Occurred at Option Port (CN5) | A fault occurred in the option card.   | <ol style="list-style-type: none"> <li>De-energize the drive.</li> <li>Make sure that the option card is correctly connected to the connector.</li> <li>If the problem continues, replace the option card.</li> </ol>   |
| <p><b>Note:</b></p> <p>Do a Fault Reset to clear the fault.</p>   |   |  |   |

## 7.4 Fault

| Code   | Name   | Causes  | Possible Solutions   |
|--|--|---|--|
| oFA10, oFA11   | Option Card Error Occurred at Option Port (CN5)  | A fault occurred in the option card.  | <ol style="list-style-type: none"> <li>De-energize the drive.</li> <li>Make sure that the option card is correctly connected to the connector.</li> <li>If the problem continues, replace the option card.</li> </ol>  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |  |   |  |
| Code   | Name   | Causes  | Possible Solutions   |
| oFA12 to oFA17   | Option Card Connection Error (CN5)               | A fault occurred in the option card.  | <ol style="list-style-type: none"> <li>De-energize the drive.</li> <li>Make sure that the option card is correctly connected to the connector.</li> <li>If the problem continues, replace the option card.</li> </ol>  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |  |   |  |
| Code   | Name   | Causes  | Possible Solutions   |
| oFA30 to oFA43   | Communication Option Card Connection Error (CN5) | A fault occurred in the option card.  | <ol style="list-style-type: none"> <li>De-energize the drive.</li> <li>Make sure that the option card is correctly connected to the connector.</li> <li>If the problem continues, replace the option card.</li> </ol>  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |  |   |  |
| Code   | Name   | Causes  | Possible Solutions   |
| oH   | Heatsink Overheat                                | The ambient temperature is high and the heatsink temperature of the drive is more than the value set in <i>L8-02 [Overheat Alarm Level]</i> . | <ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Increase the airflow in the control panel.</li> <li>Install a cooling device (cooling fan or air conditioner) to lower the ambient temperature.</li> <li>Remove objects near the drive that are producing too much heat.</li> </ul> |
|  |  | The load is too heavy.  | <ul style="list-style-type: none"> <li>Measure the output current.</li> <li>Decrease the load.</li> <li>Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.</li> </ul>   |
|  |  | The internal cooling fan of the drive stopped.  | <ol style="list-style-type: none"> <li>Use the procedures in this manual to replace the cooling fan.</li> <li>Set <i>o4-03 = 0 [Fan Operation Time Setting = 0 h]</i>.</li> </ol>  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the heatsink temperature of the drive is more than the value set in <i>L8-02</i>.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in <i>L8-03 [Overheat Pre-Alarm Selection]</i>.</li> </ul>                       |  |   |  |
| Code   | Name   | Causes  | Possible Solutions   |
| oH1  | Heatsink Overheat                                | The ambient temperature is high and the heatsink temperature of the drive is more than the <i>oH1</i> detection level.                        | <ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Increase the airflow in the control panel.</li> <li>Install a cooling device (cooling fan or air conditioner) to lower the ambient temperature.</li> <li>Remove objects near the drive that are producing too much heat.</li> </ul> |
|  |  | The load is too heavy.  | <ul style="list-style-type: none"> <li>Measure the output current.</li> <li>Decrease the load.</li> <li>Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.</li> </ul>   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the heatsink temperature of the drive is more than the <i>oH1</i> detection level. <i>o2-04 [Drive Model (KVA) Selection]</i> determines the <i>oH1</i> detection level.</li> <li>Do a Fault Reset to clear the fault.</li> <li><i>L5-08 [Fault Reset Enable Select Grp2]</i> disables the Auto Restart function.</li> </ul> |  |   |  |
| Code   | Name   | Causes  | Possible Solutions   |
| oH3  | Motor Overheat (PTC Input)                       | The thermistor wiring that detects motor temperature is defective.  | Correct wiring errors.   |
|  |  | A fault occurred on the machine.<br>Example: The machine is locked.   | Examine the machine and remove the cause of the fault  |

| Code   | Name   | Causes   | Possible Solutions   |
|--|--|--|--|
|  |  | The motor has overheated.  | <ul style="list-style-type: none"> <li>Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time).</li> <li>Decrease the load.</li> <li>Increase the values set in C1-01 to C1-08 [Acceleration/Deceleration Times].</li> <li>Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate.</li> <li>Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged.</li> <li>Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage].</li> </ul> <p><b>Note:</b><br/>If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.</p> |
| <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When H3-02 or H3-10 = E [MFAI Function Select = Motor Temperature (PTC Input)], the drive detects this fault if the motor overheat signal input from analog input terminal A1 or A2 is more than the alarm detection level.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in L1-03 [Motor Thermistor oH Alarm Select].</li> </ul> |  |  |  |
| Code   | Name   | Causes   | Possible Solutions   |
| oH4  | Motor Overheat Fault (PTC Input)   | The motor has overheated.  | <ul style="list-style-type: none"> <li>Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time).</li> <li>Decrease the load.</li> <li>Increase the values set in C1-01 to C1-08 [Acceleration/Deceleration Times].</li> <li>Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate.</li> <li>Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged.</li> <li>Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage].</li> </ul> <p><b>Note:</b><br/>If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.</p> |
| <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this fault if the motor overheat signal in analog input terminals A1, or A2 is more than the Fault detection level. (If H3-02, H3-10 = E [Terminal A1/A2 Function Select = Motor Temperature (PTC Input)].)</li> <li>Do a Fault Reset to clear the fault.</li> </ul>  |  |  |  |
| Code   | Name   | Causes   | Possible Solutions   |
| oL1  | Motor Overload   | The load is too large.   | Decrease the load.<br><p><b>Note:</b><br/>Reset oL1 when U4-16 [Motor oL1 Level] &lt; 100.</p>   |
|  |  | The acceleration/deceleration times or cycle times are too short.                          | <ul style="list-style-type: none"> <li>Examine the acceleration/deceleration times and the motor start/stop frequencies (cycle times).</li> <li>Increase the values set in C1-01 to C1-08 [Acceleration/Deceleration Times].</li> </ul>  |
|  |  | Overload occurred while running at low speed.  | <ul style="list-style-type: none"> <li>Decrease the load when running at low speed.</li> <li>Increase the motor speed.</li> <li>If the motor is run frequently at low speeds, replace the motor with a larger motor or use a drive-dedicated motor.</li> </ul> <p><b>Note:</b><br/>For general-purpose motors, overload can occur while running at low speed when operating at below the rated current.</p>  |
|  |  | L1-01 [Motor Overload (oL1) Protection] is set incorrectly.                                | Set L1-01 in as specified by the motor qualities for a drive-dedicated motor.  |
|  |  | The V/f pattern does not fit the motor qualities.  | <ul style="list-style-type: none"> <li>Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency.</li> <li>Adjust E1-04 to E1-10 [V/f Pattern Parameters]. For motor 2, adjust E3-04 to E3-10. Decrease the values set in E1-08 [Mid Point A Voltage] and E1-10 [Minimum Output Voltage].</li> </ul> <p><b>Note:</b><br/>If the values set in E1-08 and E1-10 are too low, the overload tolerance will decrease at low speeds.</p>  |
|  |  | E1-06 [Base Frequency] is set incorrectly.   | Set E1-06 to the rated frequency shown on the motor nameplate.   |
|  |  | One drive is operating more than one motor.  | Set L1-01 = 0 [Motor Overload (oL1) Protection = Disabled], connect thermal overload relay to each motor to prevent damage to the motor.   |
|  |  | The electronic thermal protector qualities and the motor overload properties do not match. | <ul style="list-style-type: none"> <li>Examine the motor qualities and set L1-01 [Motor Overload (oL1) Protection] correctly.</li> <li>Connect a thermal overload relay to the motor.</li> </ul>   |
| The electronic thermal protector is operating at an incorrect level.   | Set E2-01 [Motor Rated Current (FLA)] correctly to the value specified by the motor nameplate. |  |  |

## 7.4 Fault

| Code | Name | Causes  | Possible Solutions  |
|------|------|---|---|
|      |      | There is increased motor loss from overexcitation operation.                  | <ul style="list-style-type: none"> <li>Lower the value set in <i>n3-13 [OverexcitationBraking (OEB) Gain]</i>.</li> <li>Set <i>L3-04 ≠ 4 [Stall Prevention during Decel ≠ Overexcitation/ High Flux]</i>.</li> <li>Set <i>n3-23 = 0 [Overexcitation Braking Operation = Disabled]</i>.</li> </ul> |
|      |      | The speed search-related parameters are set incorrectly.                      | <ul style="list-style-type: none"> <li>Examine the settings for all speed search related parameters.</li> <li>Adjust <i>b3-03 [Speed Search Deceleration Time]</i>.</li> <li>Set <i>b3-24 = 1 [Speed Search Method Selection = Speed Estimation]</i> after Auto-Tuning.</li> </ul>                |
|      |      | Phase loss in the input power supply is causing the output current to change. | Make sure that there is no phase loss, and repair problems.   |
|      |      | The motor main circuit cable is too long.                                     | <ul style="list-style-type: none"> <li>Replace the drive with a larger capacity model.</li> <li>Decrease <i>C6-02 [Carrier Frequency]</i>. Or set <i>C6-02 = B</i>.</li> </ul>  |

**Note:**

- The drive detects this fault if the electronic thermal protector of the drive started the motor overload protection.
- Do a Fault Reset to clear the fault.
- L5-07 [Fault Reset Enable Select Grp1]* disables the Auto Restart function.

| Code | Name           | Causes  | Possible Solutions  |
|------|----------------|---|---|
| oL2  | Drive Overload | The load is too large.  | Decrease the load.  |
|      |                | The acceleration/deceleration times or cycle times are too short.             | <ul style="list-style-type: none"> <li>Examine the acceleration/deceleration times and the motor start/stop frequencies (cycle times).</li> <li>Increase the values set in <i>C1-01 to C1-08 [Acceleration/ Deceleration Times]</i>.</li> </ul>   |
|      |                | The V/f pattern does not fit the motor qualities.                             | <ul style="list-style-type: none"> <li>Examine the ratios between the V/f pattern frequency and voltage. Decrease the voltage if it is too high compared to the frequency.</li> <li>Adjust <i>E1-04 to E1-10 [V/f Pattern Parameters]</i>. Decrease the values set in <i>E1-08 [Mid Point A Voltage]</i> and <i>E1-10 [Minimum Output Voltage]</i>. For motor 2, adjust <i>E3-04 to E3-10</i>.</li> </ul> <p><b>Note:</b><br/>If the values set in <i>E1-08</i> and <i>E1-10</i> are too low, the overload tolerance will decrease at low speeds.</p> |
|      |                | The drive capacity is too small.  | Replace the drive with a larger capacity model.   |
|      |                | Overload occurred while running at low speed.                                 | <ul style="list-style-type: none"> <li>Decrease the load when running at low speed.</li> <li>Replace the drive with a larger capacity model.</li> <li>Decrease the value set in <i>C6-02 [Carrier Frequency Selection]</i>.</li> </ul>  |
|      |                | The torque compensation gain is too large.                                    | Decrease the value set in <i>C4-01 [Torque Compensation Gain]</i> to make sure that the motor does not stall.   |
|      |                | The speed search-related parameters are set incorrectly.                      | <ul style="list-style-type: none"> <li>Examine the settings for all speed search-related parameters.</li> <li>Adjust <i>b3-03 [Speed Search Deceleration Time]</i>.</li> <li>Set <i>b3-24 = 1 [Speed Search Method Selection = Speed Estimation]</i> after Auto-Tuning.</li> </ul>  |
|      |                | Phase loss in the input power supply is causing the output current to change. | <ul style="list-style-type: none"> <li>Correct errors with the wiring for main circuit drive input power.</li> <li>Make sure that there is no phase loss, and repair problems.</li> </ul>   |
|      |                | Overload occurred during overexcitation deceleration.                         | <ul style="list-style-type: none"> <li>Decrease the value set in <i>n3-13 [OverexcitationBraking (OEB) Gain]</i>.</li> <li>Decrease the value set in <i>n3-21 [HSB Current Suppression Level]</i>.</li> </ul>   |

**Note:**

- The drive detects this fault if the electronic thermal protector of the drive started the drive overload protection.
- Do a Fault Reset to clear the fault.
- L5-07 [Fault Reset Enable Select Grp1]* disables the Auto Restart function.

| Code | Name                   | Causes  | Possible Solutions  |
|------|------------------------|---|---|
| oL3  | Overtorque Detection 1 | A fault occurred on the machine.<br>Example: The machine is locked. | Examine the machine and remove the cause of the fault.  |
|      |                        | The parameters are incorrect for the load.                          | Adjust <i>L6-02 [Torque Detection Level 1]</i> and <i>L6-03 [Torque Detection Time 1]</i> settings. |

**Note:**

- The drive detects this fault if the drive output current is more than the level set in *L6-02* for longer than *L6-03*.
- Do a Fault Reset to clear the fault.
- If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in *L6-01 [Torque Detection Selection 1]*.
- L5-07 [Fault Reset Enable Select Grp1]* disables the Auto Restart function.

| Code  | Name                             | Causes   | Possible Solutions  |
|---|----------------------------------|--|---|
| oL4   | Overtorque Detection 2           | A fault occurred on the machine.<br>Example: The machine is locked.  | Examine the machine and remove the cause of the fault.  |
|   |                                  | The parameters are incorrect for the load.   | Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the drive output current is more than the level set in L6-05 for longer than L6-06.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in L6-04 [Torque Detection Selection 2].</li> <li>L5-07 [Fault Reset Enable Select Grp1] disables the Auto Restart function.</li> </ul> |                                  |  |   |
| Code  | Name                             | Causes   | Possible Solutions  |
| oL5   | Mechanical Weakening Detection 1 | The drive detected overtorque as specified by the conditions for mechanical weakening detection set in L6-08 [Mechanical Fatigue Detect Select].   | Do a deterioration diagnostic test on the machine side.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in L6-08.</li> </ul>   |                                  |  |   |
| Code  | Name                             | Causes   | Possible Solutions  |
| oL7   | High Slip Braking Overload       | The load inertia is too large.   | <ul style="list-style-type: none"> <li>Decrease deceleration times in C1-02, C1-04, C1-06, and C1-08 [Deceleration Times] for applications that do not use High Slip Braking.</li> <li>Use a braking resistor to decrease the deceleration time.</li> </ul>   |
|   |                                  | An external force on the load side rotated the motor.  |   |
|   |                                  | Something is preventing deceleration on the load side.   | <ul style="list-style-type: none"> <li>Increase the value set in n3-04.</li> <li>Connect a thermal overload relay to the motor, and set n3-04 = 1200 s (maximum value).</li> </ul>  |
|   |                                  | The value set in n3-04 [HSB Overload Time] is too small.   |   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the output frequency is constant for longer than n3-04.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>  |                                  |  |   |
| Code  | Name                             | Causes   | Possible Solutions  |
| oPr   | Keypad Connection Fault          | The keypad is not securely connected to the connector on the drive.  | Examine the connection between the keypad and the drive.  |
|   |                                  | The connection cable between the drive and the keypad is disconnected.   | <ul style="list-style-type: none"> <li>Remove the keypad and then reconnect it.</li> <li>Replace the cable if damaged.</li> </ul>   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if these conditions are correct: <ul style="list-style-type: none"> <li>-o2-06 = 1 [Keypad Disconnect Detection = Enabled].</li> <li>-b1-02 = 0 [Run Command Selection 1 = Keypad], or the drive is operating in LOCAL Mode with the keypad.</li> </ul> </li> <li>Do a Fault Reset to clear the fault.</li> </ul>  |                                  |  |   |
| Code  | Name                             | Causes   | Possible Solutions  |
| oS  | Overspeed                        | There is overshoot.  | <ul style="list-style-type: none"> <li>Decrease C5-01 [ASR Proportional Gain 1] and increase C5-02 [ASR Integral Time 1].</li> <li>Use H6-02 to H6-05 [Pulse Train Input Setting Parameters] to adjust the pulse train gain.</li> </ul>   |
|   |                                  | There is an incorrect number of PG pulses set in the drive.  | Set H6-02 [Terminal RP Frequency Scaling] to the pulse train frequency during 100% reference (maximum motor rotation speed).  |
|   |                                  | The oS detection level is set incorrectly.   | Adjust F1-08 [Overspeed Detection Level] and F1-09 [Overspeed Detection Delay Time].  |
|   |                                  | If the drive detects the fault at start or in the low speed range (10% or less) and n8-57 = 1 [HFI Overlap Selection = Enabled] for PM Control methods, the high frequency injection gain is too high. | <ul style="list-style-type: none"> <li>Set E5-xx [PM Motor Parameters] correctly or do Rotational Auto-Tuning.</li> <li>Decrease the value of n8-41 [HFIP Gain] in 0.5 unit increments.</li> </ul> <b>Note:</b><br>Set n8-41 > 0.0 for IPM motors.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this fault if the motor speed is more than the value set in F1-08 for longer than F1-09.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this fault, it will operate the motor as specified by the Stopping Method set in F1-03 [Overspeed Detection Selection].</li> </ul>   |                                  |  |   |
| Code  | Name                             | Causes   | Possible Solutions  |
| ov  | Overvoltage                      | The deceleration time is too short and too much regenerative energy is flowing back into the drive.  | <ul style="list-style-type: none"> <li>Increase the values set in C1-02, C1-04, C1-06, or C1-08 [Deceleration Times].</li> <li>Connect a dynamic braking option to the drive.</li> <li>Perform Deceleration Rate Tuning.</li> </ul>   |
|   |                                  | The acceleration time is too short.  | <ul style="list-style-type: none"> <li>Make sure that sudden drive acceleration does not cause the fault.</li> <li>Increase the values set in C1-01, C1-03, C1-05, or C1-07 [Acceleration Times].</li> <li>Increase the value set in C2-02 [S-Curve Time @ End of Accel].</li> <li>Set L3-11 = 1 [Overvoltage Suppression Select = Enabled].</li> </ul> |

## 7.4 Fault

| Code  | Name             | Causes   | Possible Solutions   |
|---|------------------|--|--|
|   |                  | The braking load is too large.   | Connect a dynamic braking option to the drive.   |
|   |                  | There are surge voltages in the input power supply   | Connect a DC reactor to the drive.<br><b>Note:</b><br>If you turn the phase advancing capacitors ON and OFF and use thyristor converters in the same power supply system, there can be surge voltages that irregularly increase the input voltage.   |
|   |                  | The drive output cable or motor is shorted to ground (the current short to ground is charging the main circuit capacitor of the drive through the power supply).   | 1. Examine the motor main circuit cable, terminals, and motor terminal box, and then remove ground faults.<br>2. Re-energize the drive.  |
|   |                  | If the drive detects <i>ov</i> in these conditions, the speed search-related parameters are incorrect.<br>• During speed search<br>• During momentary power loss recovery<br>• When the drive starts again automatically | • Examine the settings for all speed search related parameters.<br>• Set <i>b3-19</i> ≠ 0 [ <i>Speed Search Restart Attempts</i> ≠ 0 times].<br>• Adjust <i>b3-03</i> [ <i>Speed Search Deceleration Time</i> ].<br>• Do Stationary Auto-Tuning for Line-to-Line Resistance and then set <i>b3-24</i> = 1 [ <i>Speed Search Method Selection</i> = <i>Speed Estimation</i> ].  |
|   |                  | The power supply voltage is too high.  | Decrease the power supply voltage to match the drive rated voltage.  |
|   |                  | The braking resistor or braking resistor unit wiring is incorrect.   | Correct wiring errors in the connection to the braking resistor or braking resistor unit.  |
|   |                  | Electrical interference caused a drive malfunction.  | • Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.<br>• Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.   |
|   |                  | The load inertia is set incorrectly.   | • Examine the load inertia settings with KEB, overvoltage suppression, or stall prevention during deceleration.<br>• Adjust <i>L3-25</i> [ <i>Load Inertia Ratio</i> ] to match the qualities of the machine.  |
|   |                  | The Short Circuit Braking function used in OLV/ PM control method.   | Connect a braking resistor to the drive.   |
|   |                  | There is motor hunting.  | • Set <i>n1-01</i> = 1 [ <i>Hunting Prevention Selection</i> = <i>Enabled</i> ] and adjust <i>n1-02</i> [ <i>Hunting Prevention Gain Setting</i> ].<br>• Adjust <i>n2-02</i> [ <i>Automatic Freq Regulator Time 1</i> ] and <i>n2-03</i> [ <i>Automatic Freq Regulator Time 2</i> ].<br>• Adjust <i>n8-45</i> [ <i>Speed Feedback Detection Gain</i> ] and <i>n8-47</i> [ <i>Pull-in Current Comp Filter Time</i> ]. |
|   |                  | Speed search does not complete at start when you set <i>A1-02</i> = 8 [ <i>EZ Vector Control</i> ] and use an induction motor.   | When <i>E9-01</i> = 0 [ <i>Motor Type Selection</i> = <i>Induction (IM)</i> ], set <i>b3-24</i> = 2 [ <i>Speed Search Method Selection</i> = <i>Current Detection Speed Search</i> ].  |
| <b>Note:</b><br>• The drive detects this error if the DC bus voltage is more than the <i>ov</i> detection level while the drive is running.<br>• The <i>ov</i> detection level is approximately 410 V with 200 V class drives. The detection level is approximately 820 V for 400 V class drives.<br>• Do a Fault Reset to clear the fault.<br>• <i>L5-08</i> [ <i>Fault Reset Enable Select Grp2</i> ] disables the Auto Restart function. |                  |  |  |
| Code  | Name             | Causes   | Possible Solutions   |
| PE1, PE2  | PLC Faults       | The communication option detected a fault.   | Refer to the manual for the communication option card.   |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.  |                  |  |  |
| Code  | Name             | Causes   | Possible Solutions   |
| PF  | Input Phase Loss | There is a phase loss in the drive input power.  | Correct errors with the wiring for main circuit drive input power.   |
|   |                  | There is loose wiring in the drive input power terminals.  | Tighten the terminal screws to the correct tightening torque.  |
|   |                  | The drive input power voltage is changing too much.  | • Examine the input power for problems.<br>• Make the drive input power stable.<br>• If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.  |
|   |                  | There is unsatisfactory balance between voltage phases.  | • Examine the input power for problems.<br>• Make the drive input power stable.<br>• Set <i>L8-05</i> = 0 [ <i>Input Phase Loss Protection Sel</i> = <i>Disabled</i> ].  |



| Code   | Name                             | Causes  | Possible Solutions  |
|--|----------------------------------|---|---|
|  |                                  | The main circuit capacitors have become unserviceable.  | <ul style="list-style-type: none"> <li>Examine the capacitor maintenance time in monitor <i>U4-05 [Capacitor Maintenance]</i>. If <i>U4-05</i> is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> <li>If drive input power is correct and the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage changes irregularly without regeneration.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Use <i>L8-05</i> to enable and disable <i>PF</i> detection.</li> </ul>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| PGo  | Encoder (PG) Feedback Loss       | The holding brake is stopping the motor.  | Release the holding brake.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in <i>F1-02 [PG Open Circuit Detection Select]</i>.</li> </ul>  |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| rF   | Braking Resistor Fault           | The resistance of the dynamic braking option connected to the drive is too low.                               | Use a dynamic braking option that fits the model and duty rating of the drive.  |
|  |                                  | A regenerative converter or regenerative unit is connected to the drive.                                      | Set <i>L8-55 = 0 [Internal DB Transistor Protection = Disable]</i> .  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| rH   | Braking Resistor Overheat        | The deceleration time is too short and excessive regenerative energy is flowing back into the drive.          | <ul style="list-style-type: none"> <li>Check the load level, deceleration time, and speed.</li> <li>Decrease the load.</li> <li>Increase the values set in <i>C1-02, C1-04, C1-06, or C1-08 [Deceleration Times]</i>.</li> <li>Use a dynamic braking option that lets you use more power.</li> </ul>  |
|  |                                  | The duty cycle is too high.   | Examine the duty cycle.<br><b>Note:</b><br>When <i>L8-01 = 1 [3% ERF DB Resistor Protection = Enabled]</i> , the maximum braking duty cycle is 3%.  |
|  |                                  | The braking load is too heavy.  | <ul style="list-style-type: none"> <li>Calculate the braking load and braking power again, and decrease the braking load.</li> <li>Use a braking resistor that improves braking power.</li> </ul>   |
|  |                                  | The braking resistor is not sufficient.   | Use the braking resistor specifications to select a sufficient braking resistor.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the braking resistor overheat protective function is active.</li> <li>The magnitude of the braking load causes the braking resistor overheat alarm, NOT the surface temperature. If the duty cycle is higher than the braking resistor rating, the drive will show the alarm.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter <i>L8-01</i> enables and disables <i>rH</i> detection.</li> </ul> |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| rr   | Dynamic Braking Transistor Fault | The drive control circuit is damaged.   | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> </ul>  |
|  |                                  | There is a malfunction in the internal braking transistor of the drive.                                       | <ul style="list-style-type: none"> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>  |
| <b>Note:</b><br>Do a Fault Reset to clear the fault.   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| SC   | Short Circuit/IGBT Failure       | Overheating caused damage to the motor or the motor insulation is not satisfactory.                           | Measure the motor insulation resistance, and replace the motor if there is electrical conduction or unserviceable insulation.   |
|  |                                  | The motor main circuit cable is contacting ground to make a short circuit.                                    | <ul style="list-style-type: none"> <li>Examine the motor main circuit cable for damage, and repair short circuits.</li> <li>Measure the resistance between the motor main circuit cable and the ground terminal. If there is electrical conduction, replace the cable.</li> </ul>   |
|  |                                  | A short circuit or ground fault on the drive output side caused damage to the output transistor of the drive. | <ul style="list-style-type: none"> <li>Make sure that there is not a short circuit in terminal B1 and terminals U/T1, V/T2, and W/T3. Make sure that there is not a short circuit in terminals - and terminals U/T1, V/T2, and W/T3.</li> <li>If there is a short circuit, contact Yaskawa or your nearest sales representative.</li> </ul>   |

## 7.4 Fault

| Code  | Name                          | Causes   | Possible Solutions  |
|---|-------------------------------|--|---|
|   |                               | When $A1-02 = 5, 6$ [Control Method Selection = OLV/PM or AOLV/PM], the output current is more than the value set in L8-27 [Overcurrent Detection Gain]. | Set L8-27 correctly.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if there is a short circuit or ground fault on the drive output side, or an IGBT failure.</li> <li>Do a Fault Reset to clear the fault.</li> </ul>   |                               |  |   |
| Code  | Name                          | Causes   | Possible Solutions  |
| SCF   | Safety Circuit Fault          | The safety circuit is broken.  | Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> </ul>   |                               |  |   |
| Code  | Name                          | Causes   | Possible Solutions  |
| SEr   | Speed Search Retries Exceeded | The speed search-related parameters are set incorrectly.   | <ul style="list-style-type: none"> <li>Decrease b3-10 [Speed Estimation Detection Gain].</li> <li>Increase b3-17 [Speed Est Retry Current Level].</li> <li>Increase b3-18 [Speed Est Retry Detection Time].</li> <li>Do Auto-Tuning again.</li> </ul>   |
|   |                               | The motor is coasting in the opposite direction of the Run command.  | Set b3-14 = 1 [Bi-directional Speed Search = Enabled].  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the number of speed search restarts is more than b3-19 [Speed Search Restart Attempts].</li> <li>Do a Fault Reset to clear the fault.</li> </ul>  |                               |  |   |
| Code  | Name                          | Causes   | Possible Solutions  |
| STPo  | Motor Step-Out Detected       | The motor code is set incorrectly for PM Control Methods.  | <ul style="list-style-type: none"> <li>Set E5-01 [PM Motor Code Selection] correctly as specified by the motor.</li> <li>For specialized motors, refer to the motor test report and set E5-xx correctly.</li> </ul>   |
|   |                               | The load is too large.   | <ul style="list-style-type: none"> <li>Increase the value set in n8-55 [Motor to Load Inertia Ratio].</li> <li>Increase the value set in n8-51 [Pull-in Current @ Acceleration]. If the drive detects STPo during deceleration when increasing the value set in n8-51, set the value of n8-79 [Pull-in Current @ Deceleration] lower than n8-51.</li> <li>Decrease the load.</li> <li>Replace the drive and motor with larger capacity models.</li> </ul> |
|   |                               | The load inertia is too large.   | Increase the value set in n8-55.  |
|   |                               | The acceleration/deceleration times are too short.   | <ul style="list-style-type: none"> <li>Increase the values set in C1-01 to C1-08 [Acceleration/Deceleration Times].</li> <li>Increase the value set in C2-01 [S-Curve Time @ Start of Accel].</li> </ul>  |
|   |                               | Speed response is too slow.  | Increase the value set in n8-55.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> </ul>   |                               |  |   |
| Code  | Name                          | Causes   | Possible Solutions  |
| TiM   | Keypad Time Not Set           | There is a battery in the keypad, but the date and time are not set.   | Use the keypad to set the date and time.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Parameter o4-24 [bAT Detection Selection] enables and disables TiM detection.</li> </ul>  |                               |  |   |
| Code  | Name                          | Causes   | Possible Solutions  |
| UL3   | Undertorque Detection 1       | A fault occurred on the machine.<br>Example: There is a broken pulley belt.  | Examine the machine and remove the cause of the fault.  |
|   |                               | The parameters are incorrect for the load.   | Adjust L6-02 [Torque Detection Level 1] and L6-03 [Torque Detection Time 1] settings.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in L6-02 for longer than L6-03.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in L6-01 [Torque Detection Selection 1].</li> </ul> |                               |  |   |
| Code  | Name                          | Causes   | Possible Solutions  |
| UL4   | Undertorque Detection 2       | A fault occurred on the machine.<br>Example: There is a broken pulley belt.  | Examine the machine and remove the cause of the fault.  |
|   |                               | The parameters are incorrect for the load.   | Adjust L6-05 [Torque Detection Level 2] and L6-06 [Torque Detection Time 2] settings.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in L6-05 for longer than L6-06.</li> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in L6-04 [Torque Detection Selection 2].</li> </ul> |                               |  |   |

| Code   | Name                             | Causes  | Possible Solutions  |
|--|----------------------------------|---|---|
| UL5  | Mechanical Weakening Detection 2 | The drive detected undertorque as specified by the conditions for mechanical weakening detection set in L6-08 [Mechanical Fatigue Detect Select]. | Examine the machine for deterioration.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in L6-08.</li> </ul>  |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| Uv1  | DC Bus Undervoltage              | There is a phase loss in the drive input power.   | Correct errors with the wiring for main circuit drive input power.  |
|  |                                  | There is loose wiring in the drive input power terminals.   | Tighten the terminal screws to the correct tightening torque.   |
|  |                                  | The drive input power voltage is changing too much.   | <ul style="list-style-type: none"> <li>Examine the input power for problems.</li> <li>Make the drive input power stable.</li> <li>If the input power supply is good, examine the magnetic contactor on the main circuit side for problems.</li> </ul>   |
|  |                                  | There was a loss of power.  | Use a better power supply.  |
|  |                                  | The main circuit capacitors have become unserviceable.  | Examine the capacitor maintenance time in monitor U4-05 [CapacitorMaintenance]. If U4-05 is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.   |
|  |                                  | The relay or contactor on the soft-charge bypass relay is damaged.  | U4-06 [PreChargeRelayMainte] shows the performance life of the soft-charge bypass relay. If U4-06 is more than 90%, replace the board or the drive. For information about replacing the board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage decreases below the level set in L2-05 [Undervoltage Detection Lvl (Uv1)] while the drive is running.</li> <li>The Uv1 detection level is approximately 190 V for a 200 V class drives. The detection level is approximately 380 V for 400 V class drives. The detection level is approximately 350 V when E1-01 [Input AC Supply Voltage] &lt; 400.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for this fault.</li> <li>L5-08 [Fault Reset Enable Select Grp2] disables the Auto Restart function.</li> </ul> |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| Uv2  | Control Power Undervoltage       | The value set in L2-02 [Power Loss Ride Through Time] increased and the momentary power loss recovery unit is not connected to the drive.         | Connect the momentary power loss recovery unit to the drive.  |
|  |                                  | There was a problem with the drive hardware.  | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the control power supply voltage decreases.</li> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for this fault.</li> </ul>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| Uv3  | Soft Charge Answerback Fault     | The relay or contactor on the soft-charge bypass relay is damaged.  | <ul style="list-style-type: none"> <li>Re-energize the drive.</li> <li>If the fault stays, replace the control board or the drive.</li> <li>Check monitor U4-06 [PreChargeRelayMainte] shows the performance life of the soft-charge bypass relay. If U4-06 is more than 90%, replace the board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Do a Fault Reset to clear the fault.</li> <li>Fault trace is not available for these faults.</li> </ul>  |                                  |   |   |

## 7.5 Minor Faults/Alarms

This section gives information about the causes and possible solutions when a minor fault or alarm occurs. Use the information in this table to remove the cause of the minor fault or alarm.

| Code   | Name                          | Causes  | Possible Solutions   |
|--|-------------------------------|---|--|
| AEr  | Station Address Setting Error | The node address for the communication option is not in the permitted setting range.  | <ul style="list-style-type: none"> <li>For CC-Link communication, set F6-10 [CC-Link Node Address] correctly.</li> <li>For MECHATROLINK communication, set F6-20 [MECHATROLINK Station Address] correctly.</li> <li>For CANopen communication, set F6-35 [CANopen Node ID Selection] correctly.</li> </ul>   |
| <b>Note:</b><br>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.  |                               |   |  |
| Code   | Name                          | Causes  | Possible Solutions   |
| bAT  | Keypad Battery Low Voltage    | The keypad battery voltage is low.  | Replace the keypad battery.  |
| <b>Note:</b><br>• If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.<br>• Parameter o4-24 [bAT Detection Selection] enables and disables bAT detection.   |                               |   |  |
| Code   | Name                          | Causes  | Possible Solutions   |
| bb   | Baseblock                     | An external baseblock command was entered through MFDI terminal S1 to S7, and the drive output stopped as shown by an external baseblock command. | Examine the external sequence and timing of the baseblock command input.   |
| <b>Note:</b><br>The drive will not output a minor fault signal for this alarm.   |                               |   |  |
| Code   | Name                          | Causes  | Possible Solutions   |
| bCE  | Bluetooth Communication Error | The smartphone or tablet with DriveWizard Mobile installed is too far from the keypad.  | Use the smartphone or tablet 10 m (32.8 ft) or nearer to the keypad.<br><b>Note:</b><br>bCE can occur when the smartphone or tablet is 10 m or nearer to the keypad depending on the specifications of the smartphone or tablet.   |
|  |                               | Radio waves from a different device are causing interference with the communication between the smartphone or tablet and keypad.                  | Make sure that no device around the keypad uses the same radio bandwidth (2400 MHz to 2480 MHz), and prevent radio interference.   |
| <b>Note:</b><br>• The drive detects this error when you operate the drive with a smartphone or tablet with a Bluetooth LCD Keypad.<br>• If the drive detects this error, the terminal assigned to H2-01 to H2-03 = 10 [MFDO Function Select = Alarm] will activate.<br>• Parameter o2-27 [bCE Detection selection] enables and disables bCE detection. |                               |   |  |
| Code   | Name                          | Causes  | Possible Solutions   |
| boL  | Braking Transistor Overload   | The duty cycle of the braking transistor is high (the regeneration power or repetition frequency is high).  | <ul style="list-style-type: none"> <li>Install a regenerative converter.</li> <li>Increase the deceleration time.</li> </ul>   |
|  |                               | You enabled the protective function for the braking transistor when you have a regenerative converter.  | Set L8-55 = 0 [Internal DB TransistorProtection Selection = Disable].  |
|  |                               | The braking transistor in the drive is broken.  | Replace the drive.   |
| <b>Note:</b><br>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.  |                               |   |  |
| Code   | Name                          | Causes  | Possible Solutions   |
| bUS  | Option Communication Error    | The communications cable wiring is incorrect.   | Correct wiring errors.   |
|  |                               | There is a short-circuit in the communications cable or the communications cable is not connected.  | <ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>   |
|  |                               | Electrical interference caused a communication data error.  | <ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul> |
|  |                               | The option card is incorrectly installed to the drive.  | Correctly install the option card to the drive.  |

| Code   | Name                           | Causes   | Possible Solutions   |
|--|--------------------------------|--|--|
|  |                                | The option card is damaged.  | If the alarm continues and the wiring is correct, replace the option card.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the Run command or frequency reference is assigned to the option card.</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in F6-01 [Communication Error Selection].</li> </ul>               |                                |  |  |
| Code   | Name                           | Causes   | Possible Solutions   |
| bUSy   | Busy                           | You set the drive to use MEMOBUS/Modbus communications to change parameters, but you used the keypad to change parameters.                                 | Use MEMOBUS/Modbus communications to enter the enter command, then use the keypad to change the parameter.   |
|  |                                | You tried to change a parameter while the drive was changing setting.  | Wait until the process is complete.  |
| Code   | Name                           | Causes   | Possible Solutions   |
| CALL   | Serial Comm Transmission Error | The communications cable wiring is incorrect.  | Correct wiring errors.   |
|  |                                | There is a short-circuit in the communications cable or the communications cable is not connected.   | <ul style="list-style-type: none"> <li>Repair the short-circuited or disconnected portion of the cable.</li> <li>Replace the defective communications cable.</li> </ul>  |
|  |                                | A programming error occurred on the controller side.   | Examine communications at start-up and correct programming errors.   |
|  |                                | The communications circuitry is damaged.   | <ul style="list-style-type: none"> <li>Do a self-diagnostics check.</li> <li>If the problem continues, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>   |
|  |                                | The termination resistor setting for MEMOBUS/Modbus communications is incorrect.   | On the last drive in a MEMOBUS/Modbus network, set DIP switch S2 to the ON position to enable the termination resistor.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it does not correctly receive control data from the controller when energizing the drive.</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> </ul>  |                                |  |  |
| Code   | Name                           | Causes   | Possible Solutions   |
| CE   | Modbus Communication Error     | The communications cable wiring is incorrect.  | Correct wiring errors.   |
|  |                                | There is a short-circuit in the communications cable or the communications cable is not connected.   | <ul style="list-style-type: none"> <li>Repair short circuits and connect cables.</li> <li>Replace the defective communications cable.</li> </ul>   |
|  |                                | Electrical interference caused a communication data error.   | <ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Use only the recommended cables or other shielded line. Ground the shield on the controller side or the drive input power side.</li> <li>Separate the communication wiring from drive power lines, and install a noise filter to the input side of the power supply for communication.</li> <li>Decrease the effects of electrical interference from the controller.</li> </ul> |
|  |                                | The communication protocol is not compatible.  | <ul style="list-style-type: none"> <li>Examine the values set in H5-xx.</li> <li>Examine the settings on the controller side and correct the difference in communication conditions.</li> </ul>  |
|  |                                | The value set in H5-09 [CE Detection Time] is too small for the communications cycle.  | <ul style="list-style-type: none"> <li>Change the controller software settings.</li> <li>Increase the value set in H5-09.</li> </ul>   |
|  |                                | The controller software or hardware is causing a communication problem.  | Examine the controller and remove the cause of the problem.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it does not correctly receive control data for the CE detection time set to H5-09.</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in H5-04 [Communication Error Stop Method].</li> </ul> |                                |  |  |
| Code   | Name                           | Causes   | Possible Solutions   |
| CP1  | Comparator 1 Limit Error       | The monitor value set in H2-20 [Comparator 1 Monitor Selection] was in the range of H2-21 [Comparator 1 Lower Limit] and H2-22 [Comparator 1 Upper Limit]. | Examine the monitor value and remove the cause of the fault.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error when the terminal is assigned to H2-01 to H2-03 = 66 [MFDO Function Select = Comparator1].</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>Parameter H2-33 [Comparator1 Protection Selection] enables and disables CPI detection.</li> </ul>  |                                |  |  |

## 7.5 Minor Faults/Alarms

| Code  | Name                             | Causes  | Possible Solutions  |
|---|----------------------------------|---|---|
| CP2   | Comparator 2 Limit Error         | The monitor value set in H2-26 [Comparator 2 Monitor Selection] was outside the range of H2-27 [Comparator 2 Lower Limit] and H2-28 [Comparator 2 Upper Limit]. | Examine the monitor value and remove the cause of the fault.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error when the terminal is assigned to H2-01 to H2-03 = 67 [MFDO Function Select = Comparator2].</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>Parameter H2-35 [Comparator2 Protection Selection] enables and disables CP2 detection.</li> </ul>   |                                  |   |   |
| Code  | Name                             | Causes  | Possible Solutions  |
| CrST  | Cannot Reset                     | The drive received a fault reset command when a Run command was active.   | Turn off the Run command then de-energize and re-energize the drive.  |
| Code  | Name                             | Causes  | Possible Solutions  |
| CyC   | MECHATROLINK CommCycleSettingErr | The communications cycle setting of the controller is not in the permitted range of the MECHATROLINK interface option.  | Set the communications cycle of the controller in the permitted range of the MECHATROLINK interface option.   |
| <b>Note:</b><br>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.   |                                  |   |   |
| Code  | Name                             | Causes  | Possible Solutions  |
| CyPo  | Cycle Power to Accept Changes    | Although F6-15 = 1 [Comm. Option Parameters Reload = Reload Now], the drive does not update the communication option parameters.                                | Re-energize the drive to update the communication option parameters.  |
| Code  | Name                             | Causes  | Possible Solutions  |
| dEv   | Speed Deviation                  | The load is too large.  | Decrease the load.  |
|   |                                  | The acceleration/deceleration times are too short.  | Increase the values set in C1-01 to C1-08 [Acceleration/Deceleration Times].  |
|   |                                  | The dEv detection level settings are incorrect.   | Adjust F1-10 [Speed Deviation Detection Level] and F1-11 [Speed Deviation Detect DelayTime].  |
|   |                                  | The load is locked up.  | Examine the machine.  |
|   |                                  | The holding brake is stopping the motor.  | Release the holding brake.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the difference between the detected speed and the speed reference is more than the setting of F1-10 for longer than F1-11.</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in F1-04 [Speed Deviation Detection Select].</li> </ul> |                                  |   |   |
| Code  | Name                             | Causes  | Possible Solutions  |
| dnE   | Drive Disabled                   | A terminal set for H1-xx = 6A [Drive Enable] turned OFF.  | Examine the operation sequence.   |
| <b>Note:</b><br>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.   |                                  |   |   |
| Code  | Name                             | Causes  | Possible Solutions  |
| dWA2  | DriveWorksEZ Alarm 2             | There was an error in the DriveWorksEZ program.   | Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.  |
| <b>Note:</b><br>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.   |                                  |   |   |
| Code  | Name                             | Causes  | Possible Solutions  |
| dWA3  | DriveWorksEZ Alarm 3             | There was an error in the DriveWorksEZ program.   | Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.  |
| <b>Note:</b><br>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.   |                                  |   |   |
| Code  | Name                             | Causes  | Possible Solutions  |
| dWAL  | DriveWorksEZ Alarm               | There was an error in the DriveWorksEZ program.   | Examine the DriveWorksEZ program and remove the cause of the fault. This is not a drive fault.  |
| <b>Note:</b><br>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.   |                                  |   |   |
| Code  | Name                             | Causes  | Possible Solutions  |
| E5  | MECHATROLINK Watchdog Timer Err  | The drive detected a watchdog circuit exception while it received data from the controller.   | Examine the MECHATROLINK cable connection. If this error occurs frequently, examine the wiring and decrease the effects of electrical interference as specified by these manuals: <ul style="list-style-type: none"> <li>MECHATROLINK-II Installation Guide (MECHATROLINK Members Association, manual number MMATDEP011)</li> <li>MECHATROLINK-III Installation Manual (MECHATROLINK Members Association, publication number MMATDEP018)</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in F6-25 [MECHATROLINK Watchdog Error Sel].</li> </ul>  |                                  |   |   |

| Code  | Name                            | Causes   | Possible Solutions  |
|---|---------------------------------|--|---|
| EF  | FWD/REV Run Command Input Error | A forward command and a reverse command were input at the same time for longer than 0.5 s.           | Examine the forward and reverse command sequence and correct the problem.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects <i>EF</i>, the motor will ramp to stop.</li> <li>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will be ON.</li> </ul>  |                                 |  |   |
| Code  | Name                            | Causes   | Possible Solutions  |
| EF0   | Option Card External Fault      | The communication option card received an external fault from the controller.                        | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input from the controller.</li> </ol> |
|   |                                 | A programming error occurred on the controller side.   | Examine the operation of the controller program.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the alarm function on the external device side is operating.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in <i>F6-03 [Comm External Fault (EF0) Select]</i>.</li> </ul> |                                 |  |   |
| Code  | Name                            | Causes   | Possible Solutions  |
| EF1   | External Fault (Terminal S1)    | MFDI terminal S1 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>         |
|   |                                 | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S1.  |
|   |                                 | <i>External Fault [H1-01 = 2C to 2F]</i> is set to MFDI terminal S1, but the terminal is not in use. | Correctly set the MFDI.   |
| <b>Note:</b> <p>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.</p>  |                                 |  |   |
| Code  | Name                            | Causes   | Possible Solutions  |
| EF2   | External Fault (Terminal S2)    | MFDI terminal S2 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>         |
|   |                                 | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S2.  |
|   |                                 | <i>External Fault [H1-02 = 2C to 2F]</i> is set to MFDI terminal S2, but the terminal is not in use. | Correctly set the MFDI.   |
| <b>Note:</b> <p>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.</p>  |                                 |  |   |
| Code  | Name                            | Causes   | Possible Solutions  |
| EF3   | External Fault (Terminal S3)    | MFDI terminal S3 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>         |
|   |                                 | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S3.  |
|   |                                 | <i>External Fault [H1-03 = 2C to 2F]</i> is set to MFDI terminal S3, but the terminal is not in use. | Correctly set the MFDI.   |
| <b>Note:</b> <p>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.</p>  |                                 |  |   |
| Code  | Name                            | Causes   | Possible Solutions  |
| EF4   | External Fault (Terminal S4)    | MFDI terminal S4 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>         |
|   |                                 | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S4.  |
|   |                                 | <i>External Fault [H1-04 = 2C to 2F]</i> is set to MFDI terminal S4, but the terminal is not in use. | Correctly set the MFDI.   |
| <b>Note:</b> <p>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.</p>  |                                 |  |   |
| Code  | Name                            | Causes   | Possible Solutions  |
| EF5   | External Fault (Terminal S5)    | MFDI terminal S5 caused an external fault through an external device.                                | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>         |
|   |                                 | The wiring is incorrect.   | Correctly connect the signal line to MFDI terminal S5.  |
|   |                                 | <i>External Fault [H1-05 = 2C to 2F]</i> is set to MFDI terminal S5, but the terminal is not in use. | Correctly set the MFDI.   |
| <b>Note:</b> <p>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.</p>  |                                 |  |   |

## 7.5 Minor Faults/Alarms

| Code  | Name                         | Causes  | Possible Solutions   |
|---|------------------------------|---|--|
| EF6   | External Fault (Terminal S6) | MFDI terminal S6 caused an external fault through an external device.   | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>  |
|   |                              | The wiring is incorrect.  | Correctly connect the signal line to MFDI terminal S6.   |
|   |                              | <i>External Fault [H1-06 = 2C to 2F]</i> is set to MFDI terminal S6, but the terminal is not in use.                                | Correctly set the MFDI.  |
| <b>Note:</b><br>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.  |                              |   |  |
| Code  | Name                         | Causes  | Possible Solutions   |
| EF7   | External Fault (Terminal S7) | MFDI terminal S7 caused an external fault through an external device.   | <ol style="list-style-type: none"> <li>Find the device that caused the external fault and remove the cause.</li> <li>Clear the external fault input in the MFDI.</li> </ol>  |
|   |                              | The wiring is incorrect.  | Correctly connect the signal line to MFDI terminal S7.   |
|   |                              | <i>External Fault [H1-07 = 2C to 2F]</i> is set to MFDI terminal S7, but the terminal is not in use.                                | Correctly set the MFDI.  |
| <b>Note:</b><br>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.  |                              |   |  |
| Code  | Name                         | Causes  | Possible Solutions   |
| EP24v   | External Power 24V Supply    | The voltage of the main circuit power supply decreased, and the 24 V power supply is supplying power to the drive.                  | <ul style="list-style-type: none"> <li>Examine the main circuit power supply.</li> <li>Turn ON the main circuit power supply to run the drive.</li> </ul>  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Set <i>o2-26 [Ext. Power 24V Supply Display]</i> to enable or disable <i>EP24v</i> detection.</li> <li>The drive will not output an alarm signal for this alarm.</li> </ul>   |                              |   |  |
| Code  | Name                         | Causes  | Possible Solutions   |
| FbH   | Excessive PID Feedback       | The <i>FbH</i> detection level is set incorrectly.  | Adjust <i>b5-36 [PID High Feedback Detection Lvl]</i> and <i>b5-37 [PID High Feedback Detection Time]</i> .  |
|   |                              | There is a problem with the PID feedback wiring.  | Correct errors with the PID control wiring.  |
|   |                              | The feedback sensor is not operating correctly.   | Examine the sensors on the control device side.  |
|   |                              | A fault occurred in the feedback input circuit of the drive.  | Replace the board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the PID feedback input is more than the level set in <i>b5-36</i> for longer than <i>b5-37</i>.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in <i>b5-12 [Feedback Loss Detection Select]</i>.</li> </ul>  |                              |   |  |
| Code  | Name                         | Causes  | Possible Solutions   |
| FbL   | PID Feedback Loss            | The <i>FbL</i> detection level is set incorrectly.  | Adjust <i>b5-13 [PID Feedback Loss Detection Lvl]</i> and <i>b5-14 [PID Feedback Loss Detection Time]</i> .  |
|   |                              | There is a problem with the PID feedback wiring.  | Correct errors with the PID control wiring.  |
|   |                              | The feedback sensor is not operating correctly.   | Examine the sensors on the control device side.  |
|   |                              | A fault occurred in the feedback input circuit of the drive.  | Replace the board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the PID feedback input is lower than the level set in <i>b5-13</i> for longer than <i>b5-14</i>.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in <i>b5-12 [Feedback Loss Detection Select]</i>.</li> </ul> |                              |   |  |
| Code  | Name                         | Causes  | Possible Solutions   |
| HCA   | High Current Alarm           | The load is too heavy.  | <ul style="list-style-type: none"> <li>Decrease the load for applications with repetitive starts and stops.</li> <li>Replace the drive with a larger capacity model.</li> </ul>  |
|   |                              | The acceleration time is too short.   | <ul style="list-style-type: none"> <li>Calculate the torque necessary during acceleration related to the load inertia and the specified acceleration time.</li> <li>Increase the values set in <i>C1-01, C1-03, C1-05, or C1-07 [Acceleration Times]</i> until you get the necessary torque.</li> <li>Increase the values set in <i>C2-01 to C2-04 [S-Curve Characteristics]</i> until you get the necessary torque.</li> <li>Replace the drive with a larger capacity model.</li> </ul> |
|   |                              | The drive is trying to operate a specialized motor or a motor that is larger than the maximum applicable motor output of the drive. | <ul style="list-style-type: none"> <li>Examine the motor nameplate, the motor, and the drive to make sure that the drive rated current is larger than the motor rated current.</li> <li>Replace the drive with a larger capacity model.</li> </ul>   |



| Code   | Name                             | Causes  | Possible Solutions  |
|--|----------------------------------|---|---|
|  |                                  | The current level temporarily increased because of speed search after a momentary power loss or while trying to Auto Restart.   | If speed search or Auto Restart cause an increase in current, the drive can temporarily show this alarm. The time that the drive shows the alarm is short. No more steps are necessary to clear the alarm.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is more than the overcurrent alarm level (150% of the rated current).</li> <li>If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [MFDO Function Selection = Alarm] will activate.</li> </ul> |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| L24v   | Loss of External Power 24 Supply | The voltage of the backup 24 V power supply has decreased. The main circuit power supply is operating correctly.  | <ul style="list-style-type: none"> <li>Examine the external 24 V power supply for disconnected wires and wiring errors and repair the problems.</li> <li>Examine the external 24 V power supply for problems.</li> </ul>  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Set <math>o2-23</math> [External 24V Powerloss Detection] to enable or disable L24v detection.</li> <li>The drive will not output an alarm signal for this alarm.</li> </ul>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| LoG  | Log Com Error                    | There is not a micro SD in the keypad.  | Put a micro SD card in the keypad.  |
|  |                                  | <ul style="list-style-type: none"> <li>The drive is connected to USB.</li> <li>The number of log communication files is more than 1000.</li> <li>The micro SD card does not have available memory space.</li> <li>The line number data in a log communication file was changed.</li> <li>A communication error between the keypad and drive occurred during a log communication.</li> </ul> | Set $o5-01 = 0$ [Log Start/Stop Selection = OFF].   |
| <b>Note:</b> <p>If the drive detects this error, the terminal assigned to <math>H2-01</math> to <math>H2-03 = 6A</math> [MFDO Function Select = Data Logger Error] will be ON.</p>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| LT-1   | Cooling Fan Maintenance Time     | The cooling fan is at 90% of its expected performance life.   | <ol style="list-style-type: none"> <li>Use the procedures in this manual to replace the cooling fan.</li> <li>Set <math>o4-03 = 0</math> [Fan Operation Time Setting = 0 h] to reset the cooling fan operation time.</li> </ol>   |
| <b>Note:</b> <p>When the estimated performance life is expired, the terminal assigned to <math>H2-01</math> to <math>H2-03 = 2F</math> [MFDO Function Select = Maintenance Notification] will be ON.</p>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| LT-2   | Capacitor Maintenance Time       | The capacitors for the main circuit and control circuit are at 90% of expected performance life.  | Replace the board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b> <p>When the estimated performance life is expired, the terminal assigned to <math>H2-01</math> to <math>H2-03 = 2F</math> [MFDO Function Select = Maintenance Notification] will be ON.</p>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| LT-3   | SoftChargeBypassRelay MainteTime | The soft charge bypass relay is at 90% of its expected performance life.  | Replace the board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b> <p>When the estimated performance life is expired, the terminal assigned to <math>H2-01</math> to <math>H2-03 = 2F</math> [MFDO Function Select = Maintenance Notification] will be ON.</p>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| LT-4   | IGBT Maintenance Time (50%)      | The IGBT is at 50% of its expected performance life.  | Check the load, carrier frequency, and output frequency.  |
| <b>Note:</b> <p>When the estimated performance life is expired, the terminal assigned to <math>H2-01</math> to <math>H2-03 = 2F</math> [MFDO Function Select = Maintenance Notification] will be ON.</p>   |                                  |   |   |
| Code   | Name                             | Causes  | Possible Solutions  |
| oH   | Heatsink Overheat                | The ambient temperature is high and the heatsink temperature is more than the $L8-02$ [Overheat Alarm Level].   | <ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Increase the airflow around the drive.</li> <li>Install a cooling device (cooling fan or air conditioner) to lower the ambient temperature.</li> <li>Remove objects near the drive that are producing too much heat.</li> </ul>  |
|  |                                  | There is not sufficient airflow around the drive.   | <ul style="list-style-type: none"> <li>Give the drive the correct installation space as shown in the manual.</li> <li>Make sure that there is sufficient circulation around the control panel.</li> <li>Examine the drive for dust or other unwanted materials that could clog the cooling fan.</li> <li>Remove unwanted materials that prevent air circulation.</li> </ul> |

## 7.5 Minor Faults/Alarms

| Code  | Name                             | Causes  | Possible Solutions   |
|---|----------------------------------|---|--|
|   |                                  | The internal cooling fan or fans have stopped.  | <ol style="list-style-type: none"> <li>1. Use the procedures in this manual to replace the cooling fan.</li> <li>2. Set <math>o4-03 = 0</math> [<i>Fan Operation Time Setting = 0 h</i>].</li> </ol>   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>• The drive detects this error if the heatsink temperature of the drive is more than <math>L8-02</math>.</li> <li>• If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>• If the drive detects this error, it will operate the motor as specified by the stopping method set in <math>L8-03</math> [<i>Overheat Pre-Alarm Selection</i>].</li> </ul>  |                                  |   |  |
| Code  | Name                             | Causes  | Possible Solutions   |
| oH2   | External Overheat (H1-XX=B)      | An external device sent an oH2.   | <ol style="list-style-type: none"> <li>1. Find the external device that output the overheat alarm.</li> <li>2. Remove the cause of the problem.</li> <li>3. Clear the <i>Overheat Alarm (oH2) [H1-xx = B]</i> set to MFDI terminals S1 to S7.</li> </ol>   |
| <b>Note:</b><br>If the drive detects this error, the terminal set to $H2-01$ to $H2-03 = 10$ [ <i>MFDO Function Selection = Alarm</i> ] will activate.  |                                  |   |  |
| Code  | Name                             | Causes  | Possible Solutions   |
| oH3   | Motor Overheat (PTC Input)       | The thermistor wiring that detects motor temperature is defective.  | Correct wiring errors.   |
|   |                                  | A fault occurred on the machine.<br>Example: The machine is locked.   | Examine the machine and remove the cause of the fault  |
|   |                                  | The motor has overheated.   | <ul style="list-style-type: none"> <li>• Check the load level, acceleration/deceleration time, and motor start/stop frequency (cycle time).</li> <li>• Decrease the load.</li> <li>• Increase the values set in <math>C1-01</math> to <math>C1-08</math> [<i>Acceleration/Deceleration Times</i>].</li> <li>• Set <math>E2-01</math> [<i>Motor Rated Current (FLA)</i>] correctly to the value specified by the motor nameplate.</li> <li>• Make sure that the motor cooling system is operating correctly, and repair or replace it if it is damaged.</li> <li>• Adjust <math>E1-04</math> to <math>E1-10</math> [<i>V/f Pattern Parameters</i>]. For motor 2, adjust <math>E3-04</math> to <math>E3-10</math>. Decrease the values set in <math>E1-08</math> [<i>Mid Point A Voltage</i>] and <math>E1-10</math> [<i>Minimum Output Voltage</i>].</li> </ul> <b>Note:</b><br>If the values set in $E1-08$ and $E1-10$ are too low, the overload tolerance will decrease at low speeds. |
| <b>Note:</b> <ul style="list-style-type: none"> <li>• The drive detects this fault if the motor overheat signal input from analog input terminal A1 or A2 is more than the fault detection level.</li> <li>• If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>• If the drive detects this error, it will operate the motor as specified by the stopping method set in <math>L1-03</math> [<i>Motor Thermistor oH Alarm Select</i>].</li> </ul> |                                  |   |  |
| Code  | Name                             | Causes  | Possible Solutions   |
| oL3   | Overtorque 1                     | A fault occurred on the machine.<br>Example: The machine is locked.   | Examine the machine and remove the cause of the fault  |
|   |                                  | The parameters are incorrect for the load.  | Adjust $L6-02$ [ <i>Torque Detection Level 1</i> ] and $L6-03$ [ <i>Torque Detection Time 1</i> ].   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>• The drive detects this fault if the drive output current is more than the level set in <math>L6-02</math> for longer than <math>L6-03</math>.</li> <li>• If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>• Set the conditions that trigger the minor fault using <math>L6-01</math> [<i>Torque Detection Selection 1</i>].</li> </ul>   |                                  |   |  |
| Code  | Name                             | Causes  | Possible Solutions   |
| oL4   | Overtorque 2                     | A fault occurred on the machine.<br>Example: The machine is locked.   | Examine the machine and remove the cause of the fault  |
|   |                                  | The parameters are incorrect for the load.  | Adjust $L6-05$ [ <i>Torque Detection Level 2</i> ] and $L6-06$ [ <i>Torque Detection Time 2</i> ].   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>• The drive detects this error if the drive output current is more than the level set in <math>L6-05</math> for longer than <math>L6-06</math>.</li> <li>• If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>• Set the conditions that trigger the minor fault using <math>L6-04</math> [<i>Torque Detection Selection 2</i>].</li> </ul>   |                                  |   |  |
| Code  | Name                             | Causes  | Possible Solutions   |
| oL5   | Mechanical Weakening Detection 1 | The drive detected overtorque as specified by the conditions for mechanical weakening detection set in $L6-08$ [ <i>Mechanical Fatigue Detect Select</i> ]. | Do a deterioration diagnostic test on the machine side.  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>• If the drive detects this error, the terminal set to <math>H2-01</math> to <math>H2-03 = 10</math> [<i>MFDO Function Selection = Alarm</i>] will activate.</li> <li>• If the drive detects this error, it will operate the motor as specified by the Stopping Method set in <math>L6-08</math>.</li> </ul>  |                                  |   |  |

| Code  | Name                        | Causes   | Possible Solutions   |
|---|-----------------------------|--|--|
| oS  | Overspeed                   | There is overshoot.  | <ul style="list-style-type: none"> <li>Decrease C5-01 [ASR Proportional Gain 1] and increase C5-02 [ASR Integral Time 1].</li> <li>Adjust the pulse train gain with H6-02 to H6-05 [Pulse Train Input Setting Parameters].</li> </ul>  |
|   |                             | There is an incorrect number of PG pulses set in the drive.  | Set H6-02 [Terminal RP Frequency Scaling] to the pulse train frequency during 100% reference (maximum motor rotation speed).   |
|   |                             | The oS detection level is set incorrectly.   | Adjust F1-08 [Overspeed Detection Level] and F1-09 [Overspeed Detection Delay Time].   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the motor speed is more than the value set in F1-08 for longer than F1-09.</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in F1-03 [Overspeed Detection Selection].</li> </ul>  |                             |  |  |
| Code  | Name                        | Causes   | Possible Solutions   |
| ov  | Overvoltage                 | There are surge voltages in the input power supply.  | Connect a DC reactor to the drive.<br><b>Note:</b> If you turn the phase advancing capacitors ON and OFF and use thyristor converters in the same power supply system, there can be surge voltages that irregularly increase the input voltage.  |
|   |                             | The drive output cable or motor is shorted to ground (the current short to ground is charging the main circuit capacitor of the drive through the power supply). | <ol style="list-style-type: none"> <li>Examine the motor main circuit cable, terminals, and motor terminal box, and then remove ground faults.</li> <li>Re-energize the drive.</li> </ol>  |
|   |                             | The power supply voltage is too high.  | Decrease the power supply voltage to match the drive rated voltage.  |
|   |                             | Electrical interference caused a drive malfunction.  | <ul style="list-style-type: none"> <li>Examine the control circuit lines, main circuit lines, and ground wiring, and decrease the effects of electrical interference.</li> <li>Make sure that a magnetic contactor is not the source of the electrical interference, then use a Surge Protective Device if necessary.</li> <li>Set L5-01 ≠ 0 [Number of Auto-Restart Attempts ≠ 0 times].</li> </ul> |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage is more than the ov detection level when the Run command has not been input (while the drive is stopped).</li> <li>The ov detection level is approximately 410 V with 200 V class drives. The detection level is approximately 820 V for 400 V class drives.</li> <li>If the drive detects this error, the terminal set to H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm] will activate.</li> </ul> |                             |  |  |
| Code  | Name                        | Causes   | Possible Solutions   |
| ovEr  | Too Many Parameters Changed | You tried to change more than 150 parameters.  | Make sure that parameters that do not have an effect on drive operation are at their default settings.<br><b>Note:</b> <ul style="list-style-type: none"> <li>You can change 150 parameters maximum.</li> <li>If you change parameters that have dependencies, the drive can detect ovEr when the number of changed parameters is fewer than 150.</li> </ul>   |
| Code  | Name                        | Causes   | Possible Solutions   |
| PASS  | Modbus Communication Test   | The MEMOBUS/Modbus communications test is complete.  | The PASS display will turn off after communications test mode is cleared.  |
| Code  | Name                        | Causes   | Possible Solutions   |
| PF  | Input Phase Loss            | There is a phase loss in the drive input power.  | Correct all wiring errors with the main circuit power supply.  |
|   |                             | Loose wiring in the input power terminals.   | Tighten the screws to the correct tightening torque.   |
|   |                             | The drive input power voltage is changing too much.  | <ul style="list-style-type: none"> <li>Examine the supply voltage for problems.</li> <li>Make the drive input power stable.</li> </ul>   |
|   |                             | Unsatisfactory balance between voltage phases.   | <ul style="list-style-type: none"> <li>Examine the supply voltage for problems.</li> <li>Make the drive input power stable.</li> <li>If the supply voltage is good, examine the magnetic contactor on the main circuit side for problems.</li> </ul>   |
|   |                             | The main circuit capacitors have become unserviceable.   | <ul style="list-style-type: none"> <li>Examine the capacitor maintenance time in monitor U4-05 [Capacitor Maintenance].</li> <li>If U4-05 is more than 90%, replace the capacitor. Contact Yaskawa or your nearest sales representative for more information.</li> </ul>   |
| <ul style="list-style-type: none"> <li>Examine the supply voltage for problems.</li> <li>Re-energize the drive.</li> <li>If the alarm stays, replace the circuit board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>  |                             |  |  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the DC bus voltage changes irregularly without regeneration.</li> <li>If the drive detects this error, the terminal assigned to H2-01 to H2-03 = 10 [MFDO Function Select = Alarm] will be ON.</li> <li>Use L8-05 [Input Phase Loss Protection Sel] to enable and disable PF detection.</li> </ul>  |                             |  |  |


## 7.5 Minor Faults/Alarms

| Code   | Name                             | Causes  | Possible Solutions   |
|--|----------------------------------|---|--|
| PGo  | Encoder (PG) Feedback Loss       | The encoder cable is disconnected or wired incorrectly.   | Examine for wiring errors or disconnected wires in the encoder cable, and repair problems.   |
|  |                                  | The encoder is not receiving power.   | Examine the encoder power supply.  |
|  |                                  | The holding brake is stopping the motor.  | Release the holding brake.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if it does not receive the speed detection pulse signal from the encoder in the detection time set in <i>F1-14 [Encoder Open-Circuit Detect Time]</i>.</li> <li>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the stopping method set in <i>F1-02 [PG Open Circuit Detection Select]</i>.</li> </ul> |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| rUn  | Motor Switch during Run          | The drive received a <i>Motor 2 Selection [H1-xx = 16]</i> during run.  | Make sure that the drive receives the Motor 2 Selection while the drive is stopped.  |
| <b>Note:</b><br>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| SE   | Modbus Test Mode Error           | MEMOBUS/Modbus communications self-diagnostics [ <i>H1-xx = 67</i> ] was done while the drive was running.  | Stop the drive and do MEMOBUS/Modbus communications self-diagnostics.  |
| <b>Note:</b><br>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| SToF   | Safe Torque OFF Failure          | One of the two terminals H1-HC and H2-HC received the Safe Disable input signal.  | <ul style="list-style-type: none"> <li>Make sure that the Safe Disable signal is input from an external source to terminals H1-HC or H2-HC.</li> <li>When the Safe Disable function is not in use, connect terminals H1-HC and H2-HC.</li> </ul> |
|  |                                  | The Safe Disable input signal is wired incorrectly.   |  |
|  |                                  | There is internal damage to one Safe Disable channel.   | Replace the board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.   |
| <b>Note:</b><br>If the drive detects this error, the terminal assigned to <i>H2-01 to H2-03 = 10 [MFDO Function Select = Alarm]</i> will be ON.  |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| TiM  | Keypad Time Not Set              | There is a battery in the keypad, but the date and time are not set.  | Set the date and time with the keypad.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>Parameter <i>o4-24 [bAT Detection Selection]</i> enables and disables <i>TiM</i> detection.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> </ul>   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| TrPC   | IGBT Maintenance Time (90%)      | The IGBT is at 90% of its expected performance life.  | Replace the IGBT or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| <b>Note:</b><br>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| UL3  | Undertorque Detection 1          | A fault occurred on the machine.<br>Example: There is a broken pulley belt.   | Examine the machine and remove the cause of the fault  |
|  |                                  | The parameters are incorrect for the load.  | Adjust <i>L6-02 [Torque Detection Level 1]</i> and <i>L6-03 [Torque Detection Time 1]</i> .  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in <i>L6-02</i> for longer than <i>L6-03</i>.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>Set the conditions that trigger the minor fault using <i>L6-01 [Torque Detection Selection 1]</i>.</li> </ul>   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| UL4  | Undertorque Detection 2          | A fault occurred on the machine.<br>Example: There is a broken pulley belt.   | Examine the machine and remove the cause of the fault  |
|  |                                  | The parameters are incorrect for the load.  | Adjust <i>L6-05 [Torque Detection Level 2]</i> and <i>L6-06 [Torque Detection Time 2]</i> .  |
| <b>Note:</b> <ul style="list-style-type: none"> <li>The drive detects this error if the drive output current is less than the level set in <i>L6-05</i> for longer than <i>L6-06</i>.</li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>Set the conditions that trigger the minor fault using <i>L6-04 [Torque Detection Selection 2]</i>.</li> </ul>   |                                  |   |  |
| Code   | Name                             | Causes  | Possible Solutions   |
| UL5  | Mechanical Weakening Detection 2 | The drive detected undertorque as specified by the conditions for mechanical weakening detection set in <i>L6-08 [Mechanical Fatigue Detect Select]</i> . | Examine the machine for deterioration.   |
| <b>Note:</b> <ul style="list-style-type: none"> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> <li>If the drive detects this error, it will operate the motor as specified by the Stopping Method set in <i>L6-08</i>.</li> </ul>   |                                  |   |  |

| Code   | Name                | Causes  | Possible Solutions   |
|--|---------------------|---|--|
| Uv   | DC Bus Undervoltage | The drive input power voltage is changing too much.   | <ul style="list-style-type: none"> <li>Use a better power supply voltage to align with the drive rated voltage.</li> <li>Make the drive input power stable.</li> <li>If there is not a fault with the input power supply, examine the magnetic contactor on the main circuit side for faults.</li> </ul> |
|  |                     | A phase loss occurred in the drive input power.   | Correct errors with the wiring for main circuit drive input power.   |
|  |                     | There is loose wiring in the drive input power terminals.                                       | Examine for loose screws and tighten them as specified by the tightening torque values in the manual.  |
|  |                     | There was a loss of power.  | Use a better power supply.   |
|  |                     | The main circuit capacitors have deteriorated.  | Examine the capacitor maintenance time in monitor <i>U4-05 [CapacitorMaintenance]</i> . If <i>U4-05</i> is more than 90%, replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.                               |
|  |                     | The drive input power transformer is too small and voltage drops when the power is switched on. | <ul style="list-style-type: none"> <li>Check for an alarm when a molded-case circuit breaker, Leakage Breaker (ELCB, GFCI, or RCM/RCD) (with overcurrent protective function), or magnetic contactor is ON.</li> <li>Check the capacity of the drive power supply transformer.</li> </ul>                |
|  |                     | Air inside the drive is too hot.  | Measure the ambient temperature of the drive.  |
|  |                     | The Charge LED is broken.   | Replace the board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.   |
| <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>The drive detects this error if one of these conditions is correct when the Run command has not been input (while the drive is stopped). <ul style="list-style-type: none"> <li>The DC bus voltage <math>&lt; L2-05</math> [<i>Undervoltage Detection Lvl (Uv1)</i>].</li> <li>The Contactor that prevents inrush current in the drive was opened.</li> <li>There is low voltage in the control drive input power.</li> </ul> </li> <li>If the drive detects this error, the terminal set to <i>H2-01 to H2-03 = 10 [MFDO Function Selection = Alarm]</i> will activate.</li> </ul> |                     |   |  |

## 7.6 Parameter Setting Errors

Parameter setting errors occur when multiple parameter settings do not agree, or when parameter setting values are not correct. Refer to the table in this section, examine the parameter setting that caused the error, and remove the cause of the error. You must first correct the parameter setting errors before you can operate the drive. The drive will not send notification signals for the faults and alarms when these parameter setting errors occur.

| Code  | Name                             | Causes  | Possible Solutions  |
|-------|----------------------------------|---|---|
| oPE01 | Drive Capacity Setting Error     | The value set in <i>o2-04 [Drive Model (KVA Selection)]</i> does not agree with the drive model.  | Set <i>o2-04</i> to the correct value.  |
| Code  | Name                             | Causes  | Possible Solutions  |
| oPE02 | Parameter Range Setting Error    | Parameter settings are not in the applicable setting range.   | <ol style="list-style-type: none"> <li>Push  to show <i>U1-18 [oPE Fault Parameter]</i>, and find parameters that are not in the applicable setting range.</li> <li>Correct the parameter settings.</li> </ol> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>If more than one error occurs at the same time, other <i>oPExx</i> errors have priority over <i>oPE02</i>.</li> <li>If you copy the parameter settings from a drive with software versions PRG: 1021 or earlier, and restore the parameter settings to a drive with PRG: 1022 or later, the drive can detect <i>oPE02</i>. If <i>U1-18 [oPE Fault Parameter]</i> shows <i>n8-36 [HFI Frequency Level for L Tuning]</i>, set <i>n8-36</i> to the default setting and do High Frequency Injection Tuning. The "PRG" column on the nameplate on the right side of the drive identifies the software version. You can also use <i>U1-25 [Software Number]</i> to identify the software version.</li> </ul> |
|       |                                  | Set <i>E2-01 ≤ E2-03 [Motor Rated Current (FLA) ≤ Motor No-Load Current]</i> .  | <p>Make sure that <i>E2-01 &gt; E2-03</i>.</p> <p><b>Note:</b></p> <p>If it is necessary to set <i>E2-01 &lt; E2-03</i>, first lower the value set in <i>E2-03</i>, and then set <i>E2-01</i>.</p>  |
| Code  | Name                             | Causes  | Possible Solutions  |
| oPE03 | Multi-Function Input Setting Err | The settings for these parameters do not agree: <ul style="list-style-type: none"> <li><i>H1-01 to H1-07 [Terminals S1 to S8 Function Selection]</i></li> <li><i>H7-01 to H7-04 [Virtual Multi-Function Inputs 1 to 4]</i></li> </ul>   | Correct the parameter settings.   |
|       |                                  | The settings for MFDIs overlap. <p><b>Note:</b></p> <p>This does not include <i>H1-xx = 20 to 2F [MFDI Function Select = External Fault]</i> and <i>[Reserved]</i>.</p>   | Set the parameters correctly to prevent MFDI function overlap.  |
|       |                                  | You did not set these pairs of MFDI functions to Digital Inputs ( <i>H1-xx</i> and <i>H7-01 to H7-04</i> ) at the same time: <ul style="list-style-type: none"> <li>Setting values <i>10 [Up Command]</i> and <i>11 [Down Command]</i></li> <li>Setting values <i>75 [Up 2 Command]</i> and <i>76 [Down 2 Command]</i></li> <li>Setting values <i>42 [Run Command (2-Wire Sequence 2)]</i> and <i>43 [FWD/REV (2-Wire Sequence 2)]</i></li> </ul>   | Set the MFDI pairs.   |
|       |                                  | You set a minimum of two of these MFDI combinations to Digital Inputs ( <i>H1-xx</i> and <i>H7-01 to H7-04</i> ) at the same time: <ul style="list-style-type: none"> <li>Setting values <i>10 [Up Command]</i> and <i>11 [Down Command]</i></li> <li>Setting values <i>75 [Up 2 Command]</i> and <i>76 [Down 2 Command]</i></li> <li>Setting value <i>A [Accel/Decel Ramp Hold]</i></li> <li>Setting value <i>1E [Reference Sample Hold]</i></li> <li>Setting values <i>44 to 46 [Add Offset Frequency 1 to 3 (d7-01 to d7-03)]</i></li> </ul> | Remove the function settings that are not in use.   |

| Code  | Name                            | Causes  | Possible Solutions                                |
|-------|---------------------------------|---|---|
|       |                                 | <p>You set these commands in Digital Inputs (<i>H1-xx</i> and <i>H7-01</i> to <i>H7-04</i>) at the same time:</p> <ul style="list-style-type: none"> <li>Setting values 61 [<i>Speed Search from Fmax</i>] and 62 [<i>Speed Search from Fref</i>]</li> <li>Setting values 65, 66, 7A, 7B [<i>KEB Ride-Thru 1 or 2 Activate</i>] and 68 [<i>High Slip Braking (HSB) Activate</i>]</li> <li>Setting values 16 [<i>Motor 2 Selection</i>] and 1A [<i>Accel/Decel Time Selection 2</i>]</li> <li>Setting values 65, 66 [<i>KEB Ride-Thru 1 Activate</i>] and 7A, 7B [<i>KEB Ride-Thru 2 Activate</i>]</li> <li>Setting values 40, 41 [<i>Forward RUN (2-Wire), Reverse RUN (2-Wire)</i>] and 42, 43 [<i>Run Command (2-Wire Sequence 2), FWD/REV (2-Wire Sequence 2)</i>]</li> <li>Setting values 60 [<i>DC Injection Braking Command</i>] and 6A [<i>Drive Enable</i>]</li> <li>Setting values 16 [<i>Motor 2 Selection</i>] and 75, 76 [<i>Up 2 Command, Down 2 Command</i>]</li> </ul> | Remove the function settings that are not in use. |
|       |                                 | <p>Settings for N.C. and N.O. input [<i>H1-xx</i>] for these functions were selected at the same time:</p> <ul style="list-style-type: none"> <li>Setting value 15 [<i>Fast Stop (N.O.)</i>]</li> <li>Setting value 17 [<i>Fast Stop (N.C.)</i>]</li> </ul>   | Remove one of the function settings.              |
|       |                                 | <p>You entered these settings while <i>H1-xx</i> = 2 [<i>External Reference 1/2 Selection</i>]:</p> <ul style="list-style-type: none"> <li><i>b1-15</i> = 4 [<i>Frequency Reference Selection 2 = Pulse Train Input</i>]</li> <li><i>H6-01</i> ≠ 0 [<i>Terminal RP Pulse Train Function ≠ Frequency Reference</i>]</li> </ul>   | Set <i>H6-01</i> = 0.                             |
|       |                                 | <p>You entered these settings while <i>H1-xx</i> = 2 [<i>External Reference 1/2 Selection</i>]:</p> <ul style="list-style-type: none"> <li><i>b1-15</i> = 3 [<i>Option PCB</i>] or <i>b1-16</i> = 3 [<i>Run Command Selection 2 = Option PCB</i>]</li> <li>You did not connect an option to the drive.</li> </ul>   | Connect an input option to the drive.             |
|       |                                 | <p>You entered these settings while <i>H1-xx</i> = 2 [<i>External Reference 1/2 Selection</i>]:</p> <ul style="list-style-type: none"> <li><i>b1-15</i> = 1 [<i>Analog Input</i>]</li> <li><i>H3-02</i> ≠ 0 [<i>Terminal A1 Function Selection ≠ Frequency Reference</i>] or <i>H3-10</i> ≠ 0 [<i>Terminal A2 Function Selection ≠ Frequency Reference</i>]</li> </ul>  | Set <i>H3-02</i> = 0 or <i>H3-10</i> = 0.         |
|       |                                 | <p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li><i>H1-xx</i> ≠ 6A [<i>Drive Enable</i>]</li> <li><i>H2-xx</i> = 38 [<i>Drive Enabled</i>]</li> </ul>   | Correct the parameter settings.                   |
|       |                                 | <p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li><i>H6-01</i> ≠ 3 [<i>PG Speed Feedback (V/F Control)</i>]</li> <li><i>H1-xx</i> = 7E [<i>Reverse Rotation Identifier</i>]</li> </ul>   | Correct the parameter settings.                   |
|       |                                 | <p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li><i>H1-xx</i> = 75/76 [<i>Up 2/Down 2 Command</i>]</li> <li><i>H3-01, H3-09</i> = 1 [<i>Terminal A1, A2 Signal Level Select = 0 to +10V(Without Limit)</i>]</li> </ul>  | Remove one of the function settings.              |
| Code  | Name                            | Causes  | Possible Solutions                                |
| oPE05 | Run Cmd/Freq Ref Source Sel Err | The setting to assign the Run command or frequency reference to an option card or the pulse train input is incorrect.   | Correct the parameter settings.                   |
|       |                                 | <i>b1-01</i> = 3 [ <i>Frequency Reference Selection 1 = Option PCB</i> ] is set, but there is no option card connected to the drive.  | Connect an option card to the drive.              |
|       |                                 | <i>b1-02</i> = 3 [ <i>Run Command Selection 1 = Option PCB</i> ] is set, but there is no option card connected to the drive.  |   |
|       |                                 | <p>These parameters are set at the same time:</p> <ul style="list-style-type: none"> <li><i>b1-01</i> = 4 [<i>Pulse Train Input</i>]</li> <li><i>H6-01</i> ≠ 0 [<i>Terminal RP Pulse Train Function ≠ Frequency Reference</i>]</li> </ul>   | Set <i>H6-01</i> = 0.                             |

## 7.6 Parameter Setting Errors

| Code  | Name                         | Causes   | Possible Solutions   |
|-------|------------------------------|--|--|
| oPE07 | Analog Input Selection Error | The settings for H3-02 and H3-10 [MEAI Function Select] and H7-30 [Virtual Analog Input Selection] overlap.  | Set H3-02, H3-10, and H7-30 correctly to prevent overlap.<br><b>Note:</b><br>It is possible to set these functions to multiple analog input terminals at the same time:<br>• Setting value 0 [Frequency Reference]<br>• Setting values F and 1F [Not Used]                     |
|       |                              | These parameters are set at the same time:<br>• H3-02, H3-10, H7-30 = B [PID Feedback]<br>• H6-01 = 1 [Terminal RP Pulse Train Function = PID Feedback Value]  | Remove the function settings that are not in use.  |
|       |                              | These parameters are set at the same time:<br>• H3-02, H3-10, H7-30 = C [PID Setpoint]<br>• H6-01 = 2 [PID Setpoint Value]   |  |
|       |                              | These parameters are set at the same time:<br>• H3-02, H3-10, H7-30 = C<br>• b5-18 = 1 [PID Setpoint Selection = Enabled]  |  |
|       |                              | These parameters are set at the same time:<br>• H6-01 = 2<br>• b5-18 = 1   |  |
| Code  | Name                         | Causes   | Possible Solutions   |
| oPE08 | Parameter Selection Error    | A function was set that is not compatible with the control method selected in A1-02 [Control Method Selection].  | 1. Push ENTER Key to show U1-18 [oPE Fault Parameter], and find parameters that are not in the applicable setting range.<br>2. Correct the parameter settings.<br><b>Note:</b><br>If more than one error occurs at the same time, other oPExx errors have priority over oPE02. |
|       |                              | When A1-02 = 2 [OLV], you used these parameter settings:<br>• n2-02 > n2-03 [Automatic Freq Regulator Time 1 > Automatic Freq Regulator Time 2]<br>• C4-02 > C4-06 [Torque Compensation Delay Time > Motor 2 Torque Comp Delay Time] | • Set n2-02 < n2-03.<br>• Set C4-02 < C4-06.   |
|       |                              | When A1-02 = 0 [V/F], you used these parameter settings:<br>• H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)]<br>• H1-xx = 16 [MFDI Function Select = Motor 2 Selection]                                 | Correct the parameter settings.<br><b>Note:</b><br>You cannot use Speed Feedback (V/F Control) with the Motor Switch function.   |
|       |                              | When A1-02 = 5 [OLV/PM], you set E5-02 to E5-07 [PM Motor Parameters] = 0.   | • Set E5-01 [PM Motor Code Selection] correctly as specified by the motor.<br>• For specialized motors, refer to the motor test report and set E5-xx correctly.  |
|       |                              | When A1-02 = 5, 6 [OLV/PM, AOLV/PM], you used these parameter settings:<br>• E5-09 = 0.0 [PM Back-EMF Vpeak (mV/(rad/s)) = 0.0 mV/(rad/s)]<br>• E5-24 = 0.0 [PM Back-EMF L-L Vrms (mV/rpm) = 0.0 mV/min <sup>-1</sup> ]              | Set E5-09 or E5-24 to the correct value.   |
|       |                              | When A1-02 = 5, 6, you set E5-09 ≠ 0 and E5-24 ≠ 0.  | Set E5-09 = 0 or E5-24 = 0.  |
|       |                              | When A1-02 = 6, you set these parameters:<br>• n8-57 = 0 [HFI Overlap Selection = Disabled]<br>• You set E1-09 [Minimum Output Frequency] < the 5% value of E1-06.   | Correct the parameter settings.  |
|       |                              | When A1-02 = 6, you set these parameters:<br>• n8-35 = 0 [Initial Pole Detection Method = Pull-in]<br>• n8-57 = 1 [Enabled]  | Correct the parameter settings.  |
|       |                              | When A1-02 = 8 [EZOLV], you used these parameter settings:<br>• E9-01 = 1, 2 [Motor Type Selection = Permanent Magnet (PM), Synchronous Reluctance (SynRM)]<br>• b3-24 = 2 [Speed Search Method Selection = Current Detection 2]     | When E9-01 = 1 or 2, set b3-24 = 1 [Speed Estimation].   |



| Code  | Name                            | Causes  | Possible Solutions   |
|---|---------------------------------|---|--|
| oPE09   | PID Control Selection Fault     | These parameters are set at the same time: <ul style="list-style-type: none"> <li><math>b5-15 \neq 0.0</math> [PID Sleep Function Start Level <math>\neq 0.0</math> Hz]</li> <li><math>b1-03 = 2, 3</math> [Stopping Method Selection = DC Injection Braking to Stop, Coast to Stop with Timer]</li> </ul>  | <ul style="list-style-type: none"> <li>Set <math>b5-15 \neq 0.0</math>.</li> <li>Set <math>b1-03 = 0, 1</math> [Ramp to Stop, Coast to Stop].</li> </ul> |
|   |                                 | These parameters are set at the same time: <ul style="list-style-type: none"> <li><math>b5-01 = 1, 2</math> [Enabled (Standard), Enabled (D = Feedforward)]</li> <li><math>d2-02 \neq 0.0</math> [Frequency Reference Lower Limit <math>\neq 0.0\%</math>]</li> </ul>   | Correct the parameter settings.  |
|   |                                 | These parameters are set at the same time: <ul style="list-style-type: none"> <li><math>b5-01 = 1, 2</math> [Enabled (Standard), Enabled (D = Feedforward)]</li> <li><math>b5-11 = 1</math> [PID Output Reverse Selection = Negative Output Accepted]</li> </ul>  | Correct the parameter settings.  |
|   |                                 | These parameters are set at the same time: <ul style="list-style-type: none"> <li><math>b5-01 = 3, 4</math> [Trim (Fref+PID Out, D = Fdbk), Trim (Fref+PID Out, D = FeedFwd)]</li> <li><math>d2-02 \neq 0.0</math> has been set.</li> </ul>   | Correct the parameter settings.  |
| <p><b>Note:</b><br/>The drive detects this error if the PID control function selection is incorrect.<br/>(When <math>b5-01 = 1</math> to <math>4</math> [PID Mode Setting = PID Control Enabled])</p> |                                 |   |  |
| Code  | Name                            | Causes  | Possible Solutions   |
| oPE10   | V/f Data Setting Error          | The parameters that set the V/f pattern do not satisfy these conditions: <ul style="list-style-type: none"> <li>For motor 1: <math>E1-09 \leq E1-07 &lt; E1-06 \leq E1-11 \leq E1-04</math> [Minimum Output Frequency <math>\leq</math> Mid Point A Frequency <math>&lt;</math> Base Frequency <math>\leq</math> Mid Point B Frequency <math>\leq</math> Maximum Output Frequency]</li> <li>For motor 2: <math>E3-09 \leq E3-07 &lt; E3-06 \leq E3-11 \leq E3-04</math> [Minimum Output Frequency <math>\leq</math> Mid Point A Frequency <math>&lt;</math> Base Frequency <math>\leq</math> Mid Point B Frequency <math>\leq</math> Maximum Output Frequency]</li> </ul> | Set the parameters correctly to satisfy the conditions.  |
| Code  | Name                            | Causes  | Possible Solutions   |
| oPE11   | Carrier Frequency Setting Error | These parameters are set at the same time: <ul style="list-style-type: none"> <li><math>C6-05 &gt; 6</math> [Carrier Freq Proportional Gain <math>&gt; 6</math>]</li> <li><math>C6-04 &gt; C6-03</math> [Carrier Frequency Lower Limit <math>&gt;</math> Carrier Frequency Upper Limit]</li> </ul> <p><b>Note:</b><br/>When <math>C6-05 &lt; 7</math>, <math>C6-04</math> becomes disabled. The drive sets the carrier frequency to the value set to <math>C6-03</math>.</p>  | Set $C6-02$ to $C6-05$ correctly.  |
|   |                                 | $C6-02$ to $C6-05$ settings are not in the applicable setting range.  |  |
| Code  | Name                            | Causes  | Possible Solutions   |
| oPE13   | Pulse Monitor Selection Error   | $H6-06 = 101, 102, 105, \text{ or } 116$ [Terminal MP Monitor Selection = Frequency Reference, Output Frequency, Motor Speed, Output Frequency after Soft Starter] has not been set when $H6-07 = 0$ [Terminal MP Frequency Scaling = 0 Hz].  | Set $H6-06$ correctly.   |
| Code  | Name                            | Causes  | Possible Solutions   |
| oPE16   | Energy Saving Constants Error   | The Energy Saving parameters are not set in the applicable setting range.   | Make sure that $E5-xx$ is set correctly as specified by the motor nameplate data.  |

## 7.6 Parameter Setting Errors

| Code  | Name                           | Causes   | Possible Solutions   |
|-------|--------------------------------|--|--|
| oPE33 | Digital Output Selection Error | These two parameters are set at the same time:<br><ul style="list-style-type: none"> <li>• <math>H2-60 \neq F</math> [Term MA,MB,MC Secondary Function <math>\neq</math> Not Used]</li> <li>• <math>H2-01 = 1xx</math> [Term MA,MB,MC Function Selection = Inverse output of xx]</li> </ul>  | Clear the $H2-01$ to $H2-03 = 1xx$ [Inverse output of xx] settings.<br><b>Note:</b><br>If you use the function to output logical calculation results ( $H2-60, H2-63, H2-66 \neq F$ ), you cannot set $H2-01$ to $H2-03 = 1xx$ . |
|       |                                | These two parameters are set at the same time:<br><ul style="list-style-type: none"> <li>• <math>H2-63 \neq F</math> [Terminal P1 Secondary Function <math>\neq</math> Not Used]</li> <li>• <math>H2-02 = 1xx</math> [Term P1 Function Selection = Inverse output of xx]</li> </ul>  |  |
|       |                                | These two parameters are set at the same time:<br><ul style="list-style-type: none"> <li>• <math>H2-66 \neq F</math> [Terminal P2 Secondary Function <math>\neq</math> Not Used]</li> <li>• <math>H2-03 = 1xx</math> [Term P2 Function Selection = Inverse output of xx]</li> </ul>  |  |
|       |                                | These parameter pairs are set incorrectly:<br><ul style="list-style-type: none"> <li>• <math>H2-21</math> [Comparator 1 Lower Limit] <math>&gt;</math> <math>H2-22</math> [Comparator 1 Upper Limit]</li> <li>• <math>H2-27</math> [Comparator 2 Lower Limit] <math>&gt;</math> <math>H2-28</math> [Comparator 2 Upper Limit]</li> </ul> | <ul style="list-style-type: none"> <li>• Set parameters <math>H2-21 \leq H2-22</math>.</li> <li>• Set parameters <math>H2-27 \leq H2-28</math>.</li> </ul>   |

## 7.7 Auto-Tuning Errors


This table gives information about errors detected during Auto-Tuning. If the drive detects an Auto-Tuning error, the keypad will show the error and the motor will coast to stop. The drive will not send notification signals for faults and alarms when Auto-Tuning errors occur.

Two types of Auto-Tuning errors are: *Endx* and *Erx*. *Endx* identifies that Auto-Tuning has successfully completed with calculation errors. Find and repair the cause of the error and do Auto-Tuning again, or set the motor parameters manually. You can use the drive in the application if you cannot find the cause of the *Endx* error.

*Erx* identifies that Auto-Tuning was not successful. Find and repair the cause of the error and do Auto-Tuning again.

| Code | Name                             | Causes  | Possible Solutions  |
|------|----------------------------------|---|---|
| End1 | Excessive Rated Voltage Setting  | The torque reference was more than 20% during Auto-Tuning or the no-load current that was measured after Auto-Tuning is more than 80%.                                    | <ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> <li>If you can uncouple the motor and load, remove the motor from the machine and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, use the results from Auto-Tuning.</li> </ul> |
| Code | Name                             | Causes  | Possible Solutions  |
| End2 | Iron Core Saturation Coefficient | The motor nameplate data entered during Auto-Tuning is incorrect.   | <ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>   |
|      |                                  | Auto-Tuning results were not in the applicable parameter setting range, and <i>E2-07</i> or <i>E2-08</i> [ <i>Motor Saturation Coefficient 2</i> ] have temporary values. | <ul style="list-style-type: none"> <li>Examine and repair damaged motor wiring.</li> <li>If you can uncouple the motor and load, remove the motor from the machine and do Rotational Auto-Tuning again.</li> </ul>  |
| Code | Name                             | Causes  | Possible Solutions  |
| End3 | Rated Current Setting Alarm      | The rated current value is incorrect.   | Do Auto-Tuning again and set the correct rated current shown on the motor nameplate.  |
| Code | Name                             | Causes  | Possible Solutions  |
| End4 | Adjusted Slip Calculation Error  | The Auto-Tuning results were not in the applicable parameter setting range.   | <ul style="list-style-type: none"> <li>Make sure the input motor nameplate data is correct.</li> <li>Do Rotational Auto-Tuning again and correctly set the motor nameplate data.</li> <li>If you cannot uncouple the motor and load, do Stationary Auto-Tuning 2.</li> </ul>  |
|      |                                  | The motor rated slip that was measured after Stationary Auto-Tuning was 0.2 Hz or lower.  |   |
|      |                                  | The motor rated slip that was measured after compensation with <i>E2-08</i> [ <i>Motor Saturation Coefficient 2</i> ] is not in the applicable range.                     |   |
|      |                                  | The secondary resistor measurement results were not in the applicable range.  |   |
| Code | Name                             | Causes  | Possible Solutions  |
| End5 | Resistance Tuning Error          | The Auto-Tuning results of the Line-to-Line Resistance were not in the applicable range.  | <ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Examine and repair damaged motor wiring.</li> </ul>   |
| Code | Name                             | Causes  | Possible Solutions  |
| End6 | Leakage Inductance Alarm         | The Auto-Tuning results were not in the applicable parameter setting range.   | Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.   |
|      |                                  | <i>A1-02</i> [ <i>Control Method Selection</i> ] setting is not applicable.   | <ul style="list-style-type: none"> <li>Examine the value set in <i>A1-02</i>.</li> <li>Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.</li> </ul>   |
| Code | Name                             | Causes  | Possible Solutions  |
| End7 | No-Load Current Alarm            | The Auto-Tuning results of the motor no-load current value were not in the applicable range.  | Examine and repair damaged motor wiring.  |
|      |                                  | Auto-Tuning results were less than 5% of the motor rated current.   | Make sure that the input motor nameplate data is correct, and do Auto-Tuning again.   |

## 7.7 Auto-Tuning Errors

| Code  | Name                         | Causes   | Possible Solutions   |
|-------|------------------------------|--|--|
| End8  | HFI Alarm                    | <ul style="list-style-type: none"> <li>Inductance saliency ratio (<i>E5-07/E5-06</i>) is too small.</li> <li>The drive cannot find the <i>n8-36</i> [<i>HFI Frequency Level for L Tuning</i>] value.</li> </ul>  | <ul style="list-style-type: none"> <li>Set the correct value on the motor nameplate <i>E5-xx</i> [<i>PM motor parameters</i>] or do Stationary/Rotational Auto-Tuning, and then do High Frequency Injection Tuning again.</li> <li>When it is necessary to set <i>n8-35 = 1</i> [<i>Initial Pole Detection Method = High Frequency Injection</i>] or <i>n8-57 = 1</i> [<i>HFI Overlap Selection = Enabled</i>], make sure that there is no unusual noise in the low speed range (10% or less) and that the motor does not rotate in reverse at start.</li> </ul> <p>If there is unusual noise in the low speed range (10% or less), increase <i>n8-41</i> in increments of 0.5. Set <i>n8-41 &gt; 0.0</i> for IPM motors.</p> <p><b>Note:</b><br/>If the drive detects <i>End8</i>, it will automatically set <i>n8-35 = 0</i> [<i>Pull-in</i>] and <i>n8-57 = 0</i> [<i>Disabled</i>]. Do not change the settings unless necessary.</p> |
| End9  | Initial Pole Detection Alarm | The drive cannot calculate the correct value for <i>n8-84</i> [ <i>Polarity Detection Current</i> ] during High Frequency Injection Tuning.  | <ul style="list-style-type: none"> <li>Set the correct value on the motor nameplate <i>E5-xx</i> [<i>PM motor parameters</i>] or do Stationary/Rotational Auto-Tuning, and then do High Frequency Injection Tuning again.</li> <li>When <i>n8-35 = 1</i> [<i>Initial Pole Detection Method = High Frequency Injection</i>] or <i>n8-57 = 1</i> [<i>HFI Overlap Selection = Enabled</i>], make sure that the motor does not rotate in reverse at start.</li> </ul> <p>If there is unusual noise in the low speed range (10% or less), increase <i>n8-41</i> in increments of 0.5. Set <i>n8-41 &gt; 0.0</i> for IPM motors.</p> <p><b>Note:</b><br/>If the drive detects <i>End9</i>, it will automatically set <i>n8-35 = 0</i> [<i>Pull-in</i>] and <i>n8-57 = 0</i> [<i>Disabled</i>]. Do not change the settings unless necessary.</p>  |
| Er-01 | Motor Data Error             | <p>The motor nameplate data entered during Auto-Tuning is incorrect.</p> <p>The combination of the motor rated power and motor rated current do not match.</p> <p>The combination of the motor rated current that was entered during Auto-Tuning and <i>E2-03</i> [<i>Motor No-Load Current</i>] do not match.</p> <p>The combination of the setting values of Motor Base Frequency and Motor Base Speed do not match.</p> | <ul style="list-style-type: none"> <li>Make sure that the motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> <li>Examine the combination of drive capacity and motor output.</li> <li>Do Auto-Tuning again, and correctly set the motor rated power and motor rated current.</li> <li>Examine the motor rated current and the no-load current.</li> <li>Set <i>E2-03</i> correctly.</li> <li>Do Auto-Tuning again, and correctly set the motor rated current.</li> </ul> <p>Do Auto-Tuning again, and correctly set the Motor Base Frequency and Motor Base Speed.</p>  |
| Er-02 | Drive in an Alarm State      | <p>The motor nameplate data entered during Auto-Tuning is incorrect.</p> <p>You did Auto-Tuning while the drive had a minor fault or alarm.</p> <p>There is a defective motor cable or cable connection.</p> <p>The load is too large.</p> <p>The drive detected a minor fault during Auto-Tuning.</p>   | <ul style="list-style-type: none"> <li>Make sure that the motor nameplate data entered in Auto-Tuning is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul> <p>Clear the minor fault or alarm and do Auto-Tuning again.</p> <p>Examine and repair motor wiring.</p> <ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Examine the machine area to see if, for example, the motor shaft is locked.</li> </ul> <ol style="list-style-type: none"> <li>Stop Auto-Tuning.</li> <li>Examine the minor fault code and remove the cause of the problem.</li> <li>Do Auto-Tuning again.</li> </ol>   |
| Er-03 | STOP Button was Pressed      | During Auto-Tuning,  was pushed.  | Auto-Tuning did not complete correctly. Do Auto-Tuning again.  |

| Code  | Name                          | Causes   | Possible Solutions   |
|-------|-------------------------------|--|--|
| Er-04 | Line-to-Line Resistance Error | The Auto-Tuning results were not in the applicable parameter setting range.                                      | <ul style="list-style-type: none"> <li>Examine and repair motor wiring.</li> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> </ul>   |
|       |                               | Auto-Tuning did not complete in a pre-set length of time.  |  |
|       |                               | There is a defective motor cable or cable connection.  | <ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>  |
|       |                               | The motor nameplate data entered during Auto-Tuning is incorrect.  |  |
| Code  | Name                          | Causes   | Possible Solutions   |
| Er-05 | No-Load Current Error         | The Auto-Tuning results were not in the applicable parameter setting range.                                      | <ul style="list-style-type: none"> <li>Examine and repair motor wiring.</li> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> </ul>   |
|       |                               | Auto-Tuning did not complete in a pre-set length of time.  |  |
|       |                               | The motor nameplate data entered during Auto-Tuning is incorrect.  | <ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>  |
|       |                               | Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.         | <ul style="list-style-type: none"> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.</li> </ul> |
| Code  | Name                          | Causes   | Possible Solutions   |
| Er-08 | Rated Slip Error              | The motor nameplate data entered during Auto-Tuning is incorrect.  | <ul style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ul>  |
|       |                               | Auto-Tuning did not complete in a pre-set length of time.  | <ul style="list-style-type: none"> <li>Examine and repair the motor wiring.</li> <li>If the motor and machine are connected during Rotational Auto-Tuning, decouple the motor from the machinery.</li> </ul>   |
|       |                               | The Auto-Tuning results were not in the applicable parameter setting range.                                      |  |
|       |                               | Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.         | <ul style="list-style-type: none"> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.</li> </ul> |
| Code  | Name                          | Causes   | Possible Solutions   |
| Er-09 | Acceleration Error            | The motor did not accelerate for the specified acceleration time.  | <ol style="list-style-type: none"> <li>Increase the value set in <i>C1-01 [Acceleration Time 1]</i>.</li> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> </ol>  |
|       |                               | The value of <i>L7-01</i> or <i>L7-02 [Forward/Reverse Torque Limit]</i> is small.                               | Increase the value set in <i>L7-01</i> or <i>L7-02</i> .   |
|       |                               | Rotational Auto-Tuning was done with a load that was more than 30% of the rating connected to the motor.         | <ul style="list-style-type: none"> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> <li>If you cannot uncouple the motor and load, make sure that the load is less than 30% of the motor rating. If a mechanical brake is installed in the motor, release the brake during Rotational Auto-Tuning.</li> </ul> |
| Code  | Name                          | Causes   | Possible Solutions   |
| Er-10 | Motor Direction Error         | There is defective drive and motor wiring.   | Examine and repair motor wiring.   |
|       |                               | There is defective drive and encoder wiring.   | Examine and repair the wiring to the encoder.  |
|       |                               | The machine pulled the motor to rotate in the opposite direction.  | Disconnect the machine from the motor and do Rotational Auto-Tuning again.   |
|       |                               | When the torque reference is 100% or higher, the sign of the speed reference was opposite of the detected speed. |  |
| Code  | Name                          | Causes   | Possible Solutions   |
| Er-11 | Motor Speed Error             | The torque reference during acceleration is too high (100%).   | <ul style="list-style-type: none"> <li>Increase the value set in <i>C1-01 [Acceleration Time 1]</i>.</li> <li>Disconnect the machine from the motor and do Rotational Auto-Tuning again.</li> </ul>  |

## 7.7 Auto-Tuning Errors

| Code  | Name                             | Causes   | Possible Solutions  |
|-------|----------------------------------|--|---|
| Er-12 | Current Detection Error          | There is a phase loss in the drive input power. (U/T1, V/T2, W/T3)   | Examine and repair motor wiring.  |
|       |                                  | The current exceeded the current rating of the drive.  | <ul style="list-style-type: none"> <li>Check the motor wiring for any short circuits between the wires.</li> <li>Check and turn ON any magnetic contactors used between motors.</li> <li>Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.</li> </ul>  |
|       |                                  | The output current is too low.   |   |
|       |                                  | You tried Auto-Tuning without a motor connected to the drive.  | Connect the motor and do Auto-Tuning.   |
|       |                                  | There was a current detection signal error.  | Replace the control board or the drive. For information about replacing the control board, contact Yaskawa or your nearest sales representative.  |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-13 | Leakage Inductance Alarm         | The motor rated current value is incorrect.  | Correctly set the rated current indicated on the motor nameplate and perform Auto-Tuning again.   |
|       |                                  | The drive could not complete tuning for leakage inductance in fewer than 300 seconds.  | Examine and repair motor wiring.  |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-14 | Motor Speed Error 2              | The motor speed was more than two times the amplitude of speed reference during Inertia Tuning.  | Decrease the value set in <i>C5-01 [ASR Proportional Gain 1]</i> .  |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-15 | Torque Saturation Error          | During Inertia Tuning, the output torque was more than the value set in <i>L7-01 to L7-04 [Torque Limit]</i> .   | <ul style="list-style-type: none"> <li>Increase the value set in <i>L7-01 to L7-04 [Torque Limit]</i> as much as possible.</li> <li>Decrease the values set for the frequency and amplitude of the test signals used when doing inertia tuning. First, decrease the test signal amplitude, and then do Inertia Tuning. If the error continues, decrease the test signal frequency and do Inertia Tuning again.</li> </ul>     |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-16 | Inertia ID Error                 | The inertia found by the drive was too small or too large during Inertia Tuning (10% or less, or 50000% or more).  | <ul style="list-style-type: none"> <li>Decrease the values set for the frequency and amplitude of the test signals used when doing inertia tuning. First, decrease the test signal amplitude, and then do Inertia Tuning. If the error continues, decrease the test signal frequency and do Inertia Tuning again.</li> <li>Correctly set the motor inertia as specified by the motor, and do Inertia Tuning again.</li> </ul> |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-17 | Reverse Prohibited Error         | <i>b1-04 = 1 [Reverse Operation Selection = Reverse Disabled]</i><br><b>Note:</b><br>You cannot do Inertia Tuning if the drive cannot rotate the motor in reverse. | <ol style="list-style-type: none"> <li>Enable reverse in the target machine.</li> <li>Set <i>b1-04 = 0 [Reverse Enabled]</i>.</li> <li>Do Inertia Tuning again.</li> </ol>  |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-18 | Back EMF Error                   | The result of the induced voltage tuning was not in the applicable range.  | <ol style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ol>   |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-19 | PM Inductance Error              | The Auto-Tuning results of the PM motor inductance were not in the applicable range.   | <ol style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ol>   |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-20 | Stator Resistance Error          | The Auto-Tuning results of the PM Motor Stator Resistance were not in the applicable range.  | <ol style="list-style-type: none"> <li>Make sure that the input motor nameplate data is correct.</li> <li>Do Auto-Tuning again and correctly set the motor nameplate data.</li> </ol>   |
| Code  | Name                             | Causes   | Possible Solutions  |
| Er-25 | HighFreq Inject Param Tuning Err | The motor data is incorrect.   | <p>Do Stationary Auto-Tuning again.</p> <p><b>Note:</b><br/>If the drive detects <i>Er-25</i> after doing Stationary Auto-Tuning, the motor may not be able to use high frequency injection control. Contact Yaskawa or your nearest sales representative for more information.</p>   |

## 7.8 Backup Function Operating Mode Display and Errors

### ◆ Operating Mode Display

When you use the LCD keypad to do the backup function, the keypad shows the running operation on the LCD display. These indicators do not show that an error has occurred.

| Keypad Display   | Name  | Display            | Status  |
|--|---|--------------------|---|
| Drive and Keypad mismatch.<br>Should the parameters be restored? | Detection of inconsistency between the drive and keypad | Normally displayed | The drive detected the connection of a keypad from a different drive. Select [Yes] to copy parameters backed up in the keypad to the connected drive. |
| Restore Restore from keypad                                      | Restoring parameters                                    | Flashing           | The parameters stored in the keypad have been restored to the drive.  |
| End  | Backup/restore/verify operation ended normally          | Normally displayed | The parameter backup, restore, or verify operation ended normally.  |
| Backup Backup from Drive   | Backing up parameters                                   | Flashing           | The parameters stored in the drive are being backed up to the keypad.   |
| Verify Keypad & Drive  | Verifying parameters                                    | Flashing           | The parameter settings stored in the keypad and the parameter settings in the drive match or are being compared.                                      |

### ◆ Backup Function Runtime Errors

When an error occurs, the keypad shows a code to identify the error.

The table in this section show the error codes. If there are errors, refer to these tables:

**Note:**

Push any key on the keypad to clear an error.

| Code   | Name                       | Causes   | Possible Solutions   |
|--|----------------------------|--|--|
| CPeR   | Control Mode Mismatch      | The keypad setting and drive setting for <i>A1-02 [Control Method Selection]</i> do not agree.   | <ol style="list-style-type: none"> <li>Set <i>A1-02</i> on the drive to the same value that is on the keypad.</li> <li>Restore the parameters.</li> </ol>                            |
| Code   | Name                       | Causes   | Possible Solutions   |
| CPyE   | Error Writing Data         | Parameter restore did not end correctly.   | Restore the parameters.  |
| Code   | Name                       | Causes   | Possible Solutions   |
| CSER   | Control Mode Mismatch      | The keypad is broken.  | Replace the keypad.  |
| Code   | Name                       | Causes   | Possible Solutions   |
| dFPS   | Drive Model Mismatch       | You tried to restore parameters to a different drive model than the one that you backed up.  | <ol style="list-style-type: none"> <li>Examine the drive model that you used to back up the parameters.</li> <li>Restore the parameters.</li> </ol>                                  |
| Code   | Name                       | Causes   | Possible Solutions   |
| iFEr   | Keypad Communication Error | There was a communications error between the keypad and the drive.   | Examine the connector or cable connection.   |
| Code   | Name                       | Causes   | Possible Solutions   |
| ndAT   | Error Received Data        | The parameter settings for model and specifications (power supply voltage and capacity) are different between the keypad and the drive.        | <ol style="list-style-type: none"> <li>Make sure that drive model and the value set in <i>o2-04 [Drive Model (KVA) Selection]</i> agree.</li> <li>Restore the parameters.</li> </ol> |
|  |                            | The parameters are not stored in the keypad.   | <ol style="list-style-type: none"> <li>Connect a keypad that has the correct parameters.</li> <li>Restore the parameters.</li> </ol>   |
| Code   | Name                       | Causes   | Possible Solutions   |
| PWEr   | DWEZ Password Mismatch     | The password set in the backup operation with <i>qx-xx [DriveWorksEZ Parameters]</i> and <i>rx-xx [DriveWorksEZ Connections]</i> is incorrect. | Set the DWEZ PC software password supplied by Yaskawa for the DWEZ program user ID downloaded to the drive.  |
| <b>Note:</b><br><i>U8-11 and U8-12 [DWEZ Versions 1 and 2]</i> show the user ID of the DWEZ program. |                            |  |  |
| Code   | Name                       | Causes   | Possible Solutions   |
| rdEr   | Error Reading Data         | You tried to back up the data when <i>o3-02 = 0 [Copy Allowed Selection = Disabled]</i> .  | Set <i>o3-02 = 1 [Enabled]</i> and back up again.  |

## 7.8 Backup Function Operating Mode Display and Errors

---

| Code | Name                             | Causes   | Possible Solutions  |
|------|----------------------------------|--|---|
| vAEr | Voltage Class, Capacity Mismatch | The power supply specifications or drive capacity parameter settings are different between the keypad and the drive. | <ol style="list-style-type: none"><li>1. Make sure that drive model and the value set in <i>o2-04 [Drive Model (KVA) Selection]</i> agree.</li><li>2. Restore the parameters.</li></ol> |
| Code | Name                             | Causes   | Possible Solutions  |
| vFyE | Parameters do not Match          | The parameters that are backed up in the keypad and the parameters in the drive are not the same.                    | <ol style="list-style-type: none"><li>1. Restore or backup the parameter again.</li><li>2. Verify the parameters.</li></ol>   |



## 7.9 Diagnosing and Resetting Faults

When a fault occurs and the drive stops, do the procedures in this section to remove the cause of the fault, then re-energize the drive.

### ◆ Fault Occurs Without Power Loss

**WARNING! Crush Hazard.** Wear eye protection when you do work on the drive. If you do not use correct safety equipment, it can cause serious injury or death.

**WARNING! Electrical Shock Hazard.** After the drive blows a fuse or trips an RCM/RCD, do not immediately energize the drive or operate peripheral devices. Wait for the time specified on the warning label at a minimum and make sure that all indicators are OFF. Then check the wiring and peripheral device ratings to find the cause of the problem. If you do not know the cause of the problem, contact Yaskawa before you energize the drive or peripheral devices. If you do not fix the problem before you operate the drive or peripheral devices, it can cause serious injury or death.

1. Supply power to the control circuit from the external 24 V input.
2. Use monitor parameters U2-xx [Fault Trace] to show the fault code and data about the operating status of the drive immediately before the fault occurred.
3. Use the information in the Troubleshooting tables to remove the fault.

**Note:**

1. To find the faults that were triggered, check the fault history in U2-02 [Previous Fault]. To find information about drive status (such as frequency, current, and voltage) when the faults were triggered, check U2-03 to U2-20.
2. If the fault display stays after you re-energize the drive, remove the cause of the fault and reset.


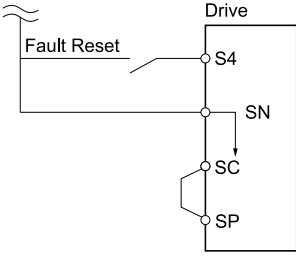
 
### ◆ Fault Occurs Without Power Loss

1. Examine the fault code shown on the keypad.
2. Use the information in the Troubleshooting tables to remove the fault.
3. Do a fault reset.

### ◆ Fault Reset Procedure

If a fault occurs, you must remove the cause of the fault and re-energize the drive. Table 7.3 lists the different methods to reset the drive after a fault.

**Table 7.3 Fault Reset Methods**

| Methods  | Description  |
|----------|--|
| Method 1 | While the keypad is showing the fault or alarm code, push  on the keypad.   |
| Method 2 | Switch ON the MFDI terminal set to H1-xx = 14 [MFDI Function Select = Fault Reset].<br><b>Note:</b><br>The default setting for H1-04 [Terminal S4 Function Selection] is 14 [Fault Reset].<br> |
| Method 3 | <ol style="list-style-type: none"> <li>1. De-energize the drive main circuit power supply.</li> <li>2. Energize the drive again after the keypad display goes out.</li> </ol>                  |

**Note:**

If the drive receives a Run command from a communication option or control circuit terminal, the drive will not reset the fault. Turn the Run command OFF to reset the fault. If you do a fault reset when the drive has a Run command, the keypad will show minor fault CrST [Remove RUN Command to Reset].

## 7.10 Troubleshooting Without Fault Display

If the drive or motor operate incorrectly, but the keypad does not show a fault or error code, refer to the items this section.

- Motor hunting and oscillation
- Unsatisfactory motor torque
- Unsatisfactory speed precision
- Unsatisfactory motor torque and speed response
- Motor noise

### ◆ Typical Problems

| Symptom  | Reference |
|--|-----------|
| The Parameter Settings Will Not Change   | 282       |
| The Motor Does Not Rotate after You Enter a Run Command                                    | 283       |
| The Motor Rotates in the Opposite Direction from the Run Command                           | 283       |
| The Motor Rotates in Only One Direction  | 284       |
| The Motor Is Too Hot   | 284       |
| The Correct Auto-Tuning Mode Is Not Available  | 284       |
| The Motor Stalls during Acceleration or Accel/Decel Time Is Too Long                       | 284       |
| The Drive Frequency Reference Is Different than the Controller Frequency Reference Command | 285       |
| PM Motor Speed Is Not Stable   | 285       |
| There Is Too Much Motor Oscillation and the Rotation Is Irregular                          | 286       |
| Deceleration Takes Longer than Expected when You Enable Dynamic Braking                    | 286       |
| The Load Falls When a Brake Is Applied   | 286       |
| There Is Audible Noise from the Drive or Motor Cables when You Energize the Drive          | 286       |
| Residual Current Monitoring/Detection (RCM/RCD) Trips During Run                           | 287       |
| Motor Rotation Causes Unexpected Audible Noise from Connected Machinery                    | 287       |
| Motor Rotation Causes Oscillation or Hunting   | 287       |
| PID Output Fault   | 287       |
| The Starting Torque Is Not Sufficient  | 287       |
| The Motor Rotates after You Shut Off Drive Output  | 288       |
| The Output Frequency Is Lower Than the Frequency Reference                                 | 288       |
| The Motor Will Not Restart after Power Loss  | 288       |

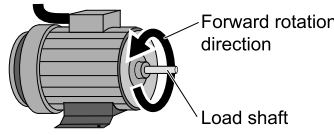
### ◆ The Parameter Settings Will Not Change

| Causes   | Possible Solutions  |
|--|---|
| The drive is operating the motor (the drive is in Drive Mode).       | Stop the drive and change to Programming Mode.  |
| Parameter $A1-01 = 0$ [Access Level Selection = Operation Only].     | Set $A1-01 = 2$ [Access Level Selection = Advanced Level] or $A1-01 = 3$ [Expert Level].  |
| Parameter $H1-xx = 1B$ [MFDI Function Select = Programming Lockout]. | Activate the terminals to which $H1-xx = 1B$ is set, and then change the parameters.  |
| You entered an incorrect password in $A1-04$ [Password].             | <ul style="list-style-type: none"> <li>• Enter the correct password to <math>A1-04</math> again.</li> <li>• If you forgot the password, set the password again with <math>A1-04</math> and <math>A1-05</math> [Password Setting].</li> </ul> <p><b>Note:</b><br/>If you set the password, you cannot change these parameters until the password aligns:</p> <ul style="list-style-type: none"> <li>• <math>A1-01</math> [Access Level Selection]</li> <li>• <math>A1-02</math> [Control Method Selection]</li> <li>• <math>A1-03</math> [Initialize Parameters]</li> <li>• <math>A1-06</math> [Application Preset]</li> <li>• <math>A1-07</math> [DriveWorksEZ Function Selection]</li> <li>• <math>A2-01</math> to <math>A2-32</math> [User Parameter 1 to User Parameter 32]</li> </ul> |
| The drive detected $Uv$ [Undervoltage].                              | <ul style="list-style-type: none"> <li>• View <math>U1-07</math> [DC Bus Voltage] to see the power supply voltage.</li> <li>• Examine the main circuit wiring.</li> </ul>   |

## ◆ The Motor Does Not Rotate after You Enter a Run Command

| Causes  | Possible Solutions  |
|---|---|
| The drive is not in Drive Mode.   | <ol style="list-style-type: none"> <li>1. Make sure that the READY LED on the keypad is ON.</li> <li>2. If the READY LED is OFF, push and hold the ESC Key to go back to the frequency reference screen (the initial screen).</li> </ol>  |
| The drive stopped and you pushed <b>LO/RE</b> to transfer the Run command source to the keypad.   | <p>Do one of these two:</p> <ul style="list-style-type: none"> <li>• Push <b>LO/RE</b>.</li> <li>• Re-energize the drive.</li> </ul> <p><b>Note:</b><br/>When <b>LO/RE</b> must not change the Run command source, set <math>o2-01 = 0</math> [<i>LO/RE Key Function Selection = Disabled</i>].</p>   |
| Auto-Tuning completed.  | <p>Push and hold the ESC Key to go back to the frequency reference screen (the initial screen).</p> <p><b>Note:</b><br/>When Auto-Tuning completes, the drive changes to Programming Mode. The drive will not accept a Run command unless the drive is in Drive Mode.</p>   |
| The drive received a Fast Stop command.   | Turn off the fast stop input signal.  |
| The settings for the source that supplies the Run command are incorrect.                          | Set $b1-02$ [ <i>Run Command Selection 1</i> ] correctly.   |
| The frequency reference source is not set correctly.  | Set $b1-01$ [ <i>Frequency Reference Selection 1</i> ] correctly.   |
| There is defective wiring in the control circuit terminals.                                       | <ul style="list-style-type: none"> <li>• Correctly wire the drive control circuit terminals.</li> <li>• View <math>U1-10</math> [<i>Input Terminal Status</i>] for input terminal status.</li> </ul>  |
| The settings for voltage input and current input of the master frequency reference are incorrect. | <p>Examine these analog input terminal signal level settings:</p> <ul style="list-style-type: none"> <li>• Terminal A1: <math>H3-01</math> [<i>Terminal A1 Signal Level Select</i>]</li> <li>• Terminal A2: DIP switch S1 and <math>H3-09</math> [<i>Terminal A2 Signal Level Select</i>]</li> </ul>  |
| The selection for the sinking/sourcing mode and the internal/external power supply is incorrect.  | <ul style="list-style-type: none"> <li>• For sinking mode, close the circuit between terminals SC-SP with a wire jumper.</li> <li>• For sourcing mode, close the circuit between terminals SC-SN with a wire jumper.</li> <li>• For external power supply, remove the wire jumper.</li> </ul>   |
| The frequency reference is too low.   | <ul style="list-style-type: none"> <li>• View <math>U1-01</math> [<i>Freq Reference</i>].</li> <li>• Increase the frequency reference to a value higher than <math>E1-09</math> [<i>Minimum Output Frequency</i>].</li> </ul>   |
| The MFAI setting is incorrect.  | <ul style="list-style-type: none"> <li>• Make sure that the functions set to the MFAI are correct. The frequency reference is 0 when <math>H3-02, H3-10 = 1</math> [<i>MFAI Function Select = Frequency Gain</i>] and voltage (current) is not input.</li> <li>• Use <math>U1-13, U1-14</math> [<i>Terminal A1, A2 Input Voltage</i>] to make sure that the analog input values set to terminals A1 and A2 are applicable.</li> </ul> |
| You pushed <b>STOP</b> .  | <p>Turn the Run command OFF then ON from an external input.</p> <p><b>Note:</b><br/>When you push <b>STOP</b> during operation, the drive will ramp to stop. Set <math>o2-02 = 0</math> [<i>STOP Key Function Selection = Disabled</i>] to disable the <b>STOP</b> function.</p>  |
| The 2-wire sequence and 3-wire sequence are not set correctly.                                    | <ul style="list-style-type: none"> <li>• Set one of the parameters <math>H1-03</math> to <math>H1-07</math> [<i>Terminals S3 to S7 Function Select</i>] to 0 [<i>3-Wire Sequence</i>] to enable the 3-wire sequence.</li> <li>• If a 2-wire sequence is necessary, make sure that <math>H1-03</math> to <math>H1-07 \neq 0</math>.</li> </ul>   |

## ◆ The Motor Rotates in the Opposite Direction from the Run Command

| Causes   | Possible Solutions  |
|--|---|
| The phase wiring between the drive and motor is incorrect. | <ul style="list-style-type: none"> <li>• Examine the wiring between the drive and motor.</li> <li>• Connect drive output terminals U/T1, V/T2, and W/T3 in the correct sequence to agree with motor terminals U, V, and W.</li> <li>• Switch two motor cables U, V, and W to reverse motor direction.</li> </ul>  |
| The forward direction for the motor is set incorrectly.    | <ul style="list-style-type: none"> <li>• Connect drive output terminals U/T1, V/T2, and W/T3 in the correct sequence to agree with motor terminals U, V, and W.</li> <li>• Switch two motor cables U, V, and W to reverse motor direction.</li> </ul> <div style="text-align: center;">  <p>The diagram shows a motor with a circular arrow indicating 'Forward rotation direction' and a label 'Load shaft' pointing to the motor's shaft.</p> </div> <p><b>Figure 7.1 Forward Rotating Motor</b></p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• For Yaskawa motors, the forward direction is counterclockwise when looking from the motor shaft side.</li> <li>• Refer to the motor specifications, and make sure that the forward rotation direction is correct for the application. The forward rotation direction of motors can be different for different motor manufacturers and types.</li> </ul> |

## 7.10 Troubleshooting Without Fault Display

| Causes  | Possible Solutions  |
|---|---|
| The signal connections for forward run and reverse run on the drive control circuit terminals and control panel side are incorrect. | Correctly wire the control circuit.   |
| The motor is running at almost 0 Hz and the Speed Search estimated the speed to be in the opposite direction.                       | Set $b3-14 = 0$ [ <i>Bi-directional Speed Search = Disabled</i> ], then the drive will only do speed search in the specified direction. |

### ◆ The Motor Rotates in Only One Direction

| Causes  | Possible Solutions  |
|---|---|
| The drive will not let the motor rotate in reverse.                             | Set $b1-04 = 0$ [ <i>Reverse Operation Selection = Reverse Enabled</i> ].   |
| The drive did not receive a Reverse run signal and 3-Wire sequence is selected. | Activate the terminals to which $H1-xx = 0$ [ <i>3-Wire Sequence</i> ] is set, and then enable reverse operation. |

### ◆ The Motor Is Too Hot

| Causes  | Possible Solutions   |
|---|--|
| The load is too heavy.  | <ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Increase the acceleration and deceleration times.</li> <li>Examine the values set in <math>L1-01</math> [<i>Motor Overload (oL1) Protection</i>], <math>L1-02</math> [<i>Motor Overload Protection Time</i>], and <math>E2-01</math> [<i>Motor Rated Current (FLA)</i>].</li> <li>Use a larger motor.</li> </ul> <p><b>Note:</b><br/>The motor also has a short-term overload rating. Examine this rating carefully before setting drive parameters.</p>  |
| The motor is running continuously at a very low speed.                              | <ul style="list-style-type: none"> <li>Change the run speed.</li> <li>Use a drive-dedicated motor.</li> </ul>  |
| The drive is operating in a vector control mode, but Auto-Tuning has not been done. | <ul style="list-style-type: none"> <li>Do Auto-Tuning.</li> <li>Calculate motor parameter and set motor parameters.</li> <li>Set <math>A1-02 = 0</math> [<i>Control Method Selection = V/f Control</i>].</li> </ul>  |
| The voltage insulation between motor phases is not sufficient.                      | <ul style="list-style-type: none"> <li>Use a motor with a voltage tolerance that is higher than the maximum voltage surge.</li> <li>Use a drive-dedicated motor that is rated for use with AC drives for applications that use a motor on drives rated higher than 400 V class.</li> <li>Install an AC reactor on the output side of the drive and set <math>C6-02 = 1</math> [<i>Carrier Frequency Selection = 2.0 kHz</i>].</li> </ul> <p><b>Note:</b><br/>When the motor is connected to the drive output terminals U/T1, V/T2, and W/T3, surges occur between the drive switching and the motor coils. These surges can be three times the drive input power supply voltage (600 V for a 200 V class drive, 1200 V for a 400 V class drive).</p> |
| The air around the motor is too hot.  | <ul style="list-style-type: none"> <li>Measure the ambient temperature.</li> <li>Decrease the temperature in the area until it is in the specified temperature range.</li> </ul>   |
| The motor fan stopped or is clogged.  | <ul style="list-style-type: none"> <li>Clean the motor fan.</li> <li>Make the drive environment better.</li> </ul>   |

### ◆ The Correct Auto-Tuning Mode Is Not Available

| Causes   | Possible Solutions  |
|--|---|
| The desired Auto-Tuning mode is not available for the selected control mode. | Change the motor control method with parameter $A1-02$ [ <i>Control Method Selection</i> ]. |

### ◆ The Motor Stalls during Acceleration or Accel/Decel Time Is Too Long

| Causes   | Possible Solutions   |
|--|--|
| The drive and motor system are at the torque limit or current suppression will not let the drive accelerate. | <ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Use a larger motor.</li> </ul> <p><b>Note:</b><br/>Although the drive has a Stall Prevention function and a Torque Compensation Limit function, if you try to accelerate too fast or try to drive a load that is too large, it can be too much for the limits of the motor.</p> |
| Torque limit is set incorrectly.   | Set the torque limit correctly.  |
| The acceleration time setting is too short.  | Examine the values set in $C1-01$ , $C1-03$ , $C1-05$ , or $C1-07$ [ <i>Acceleration Time</i> ] and set them to applicable values.   |

| Causes   | Possible Solutions  |
|--|---|
| The load is too large.   | <ul style="list-style-type: none"> <li>Increase the acceleration time.</li> <li>Examine the mechanical brake and make sure that it is fully releasing.</li> <li>Decrease the load to make sure that the output current stays less than the motor rated current.</li> <li>Use a larger motor.</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>In extruder and mixer applications, the load can increase as the temperature decreases.</li> <li>Although the drive has a Stall Prevention function and a Torque Compensation Limit function, if you try to accelerate too fast or try to drive a load that is too large, it can be too much for the limits of the motor.</li> </ul> |
| The frequency reference is low.  | <ul style="list-style-type: none"> <li>Examine <i>E1-04 [Maximum Output Frequency]</i> and increase the setting if it is set too low.</li> <li>Examine <i>U1-01 [Frequency Reference]</i> for the correct frequency reference.</li> <li>Examine the multi-function input terminals to see if a frequency reference signal switch is set.</li> <li>When you use an MFAI, examine the low gain level set in <i>H3-03, H3-11 [Terminal A1, A2 Gain Setting]</i>.</li> </ul>  |
| The frequency reference is set incorrectly.  | <p>When <i>H3-10 = 1 Terminal A2 Function Selection = Frequency Gain</i>, see if the drive is set for voltage (current).</p> <ul style="list-style-type: none"> <li>Examine the value set in <i>H3-10</i>.</li> <li>Use <i>U1-14 [Terminal A2 Input Voltage]</i> to make sure that the analog input value set to terminal A2 is applicable.</li> </ul>  |
| The motor characteristics and drive parameter settings are not compatible.           | <ul style="list-style-type: none"> <li>Set the correct V/f pattern to agree with the characteristics of the motor.</li> <li>Examine the V/f pattern set in <i>E1-03 [V/f Pattern Selection]</i>.</li> <li>Do Rotational Auto-Tuning.</li> </ul>   |
| The drive is operating in vector control mode, but you did not complete Auto-Tuning. | <ul style="list-style-type: none"> <li>Do Auto-Tuning.</li> <li>Calculate motor data and reset motor parameters.</li> <li>Set <i>A1-02 = 0 [Control Method Selection = V/f Control]</i>.</li> </ul>   |
| The Stall Prevention level during acceleration setting is too low.                   | <p>Increase the value set in <i>L3-02 [Stall Prevent Level during Accel]</i>.</p> <p><b>Note:</b></p> <p>If the <i>L3-02</i> value is too low, the acceleration time can be unsatisfactorily long.</p>  |
| The Stall Prevention level during run setting is too low.                            | <p>Increase the value set in <i>L3-06 [Stall Prevent Level during Run]</i>.</p> <p><b>Note:</b></p> <p>If the <i>L3-06</i> value is too low, speed will decrease before the drive outputs torque.</p>   |
| The drive is at the limit of the V/f motor control method.                           | <ul style="list-style-type: none"> <li>When the motor cable is longer than 50 m (164 ft), do Auto-Tuning for line-to-line resistance.</li> <li>Set the V/f pattern to "High Starting Torque".</li> <li>Use a Vector Control method.</li> </ul> <p><b>Note:</b></p> <p>V/f control method does not supply high torque at low speeds.</p>   |

### ◆ The Drive Frequency Reference Is Different than the Controller Frequency Reference Command

| Causes  | Possible Solutions  |
|---|---|
| The analog input gain and bias for the frequency reference input are set incorrectly.   | <p>Examine the gain and bias settings for the analog inputs that set the frequency reference.</p> <ul style="list-style-type: none"> <li>Terminal A1: <i>H3-03 [Terminal A1 Gain Setting], H3-04 [Terminal A1 Bias Setting]</i></li> <li>Terminal A2: <i>H3-11 [Terminal A2 Gain Setting], H3-12 [Terminal A2 Bias Setting]</i></li> </ul>                              |
| The drive is receiving frequency bias signals from analog input terminals A1 and A2 and the sum of all signals makes the frequency reference. | <ul style="list-style-type: none"> <li>Examine parameters <i>H3-02, H3-10 [MFAI Function Select]</i>. If both of these parameters = 0, change the settings.</li> <li>Use <i>U1-13, U1-14 [Terminal A1, A2 Input Voltage]</i> to make sure that the analog input values set to terminals A1 and A2 are applicable.</li> </ul>  |
| PID control is enabled.   | <p>If PID control is not necessary, set <i>b5-01 = 0 [PID Mode Setting = Disabled]</i>.</p> <p><b>Note:</b></p> <p>When PID control is enabled, the drive adjusts the output frequency as specified by the target value. The drive will only accelerate to the maximum output frequency set in <i>E1-04 [Maximum Output Frequency]</i> while PID control is active.</p> |

### ◆ The Motor Speed Is Not Stable When Using a PM Motor

| Causes   | Possible Solutions   |
|--|--|
| <i>E5-01 [PM Motor Code Selection]</i> is set incorrectly.                       | Refer to "Motor Performance Fine-Tuning" in the technical manual.  |
| The drive is operating the motor at more than the specified speed control range. | Examine the speed control range and adjust the speed.  |
| The motor is hunting.  | <p>Adjust these parameters to have the largest effect:</p> <ul style="list-style-type: none"> <li><i>n8-55 [Motor to Load Inertia Ratio]</i></li> <li><i>n8-45 [Speed Feedback Detection Gain]</i></li> <li><i>C4-02 [Torque Compensation Delay Time]</i></li> </ul> |
| Hunting occurs at start.   | Increase the value set in <i>C2-01 [S-Curve Time @ Start of Accel]</i> .   |

## 7.10 Troubleshooting Without Fault Display

| Causes  | Possible Solutions  |
|---|---|
| Too much current is flowing through the drive.                                    | Set <i>E5-01 [PM Motor Code Selection]</i> correctly as specified by the motor. For special-purpose motors, enter the correct value to <i>E5-xx</i> as specified by the motor test report.  |
| Operation is not stable when <i>n8-57 = 1 [HFI Overlap Selection = Enabled]</i> . | <ul style="list-style-type: none"> <li>Do High Frequency Injection Auto-Tuning.</li> <li>Decrease the value set in <i>n8-41 [HFI P Gain]</i> in increments of 0.5.</li> </ul> <p><b>Note:</b><br/>Set <i>n8-41 &gt; 0.0</i> for IPM motors.</p> |

### ◆ There Is Too Much Motor Oscillation and the Rotation Is Irregular

| Causes                                  | Possible Solutions  |
|---|---|
| Unsatisfactory balance of motor phases. | <ul style="list-style-type: none"> <li>Make sure that the drive input power voltage supplies stable power.</li> <li>Set <i>L8-05 = 0 [Input Phase Loss Protect Select = Disabled]</i>.</li> </ul>   |
| The motor is hunting.                   | <ul style="list-style-type: none"> <li>Set <i>n1-01 = 1 [Hunting Prevention Selection = Enabled]</i>.</li> <li>Increase the value of <i>n2-01 [SpdFeedbackDetectCtr (AFR) Gain]</i> or <i>n2-02 [SpdFeedbackDetCtr(AFR)TimeConst]</i>.</li> </ul> |

### ◆ Deceleration Takes Longer Than Expected When Dynamic Braking Is Enabled

| Causes   | Possible Solutions  |
|--|---|
| The stall prevention during deceleration setting is incorrect.                           | <ul style="list-style-type: none"> <li>Examine the setting for <i>L3-04 [Decel Stall Prevention Selection]</i>.</li> <li>When the drive has a dynamic braking option installed, set <i>L3-04 = 0 [Disabled]</i>.</li> <li>If the drive detects <i>ov [Overvoltage]</i>, set <i>L3-04 = 3 [General Purpose w/ DB resistor]</i>.</li> </ul>   |
| The deceleration time setting is too long.   | Set <i>C1-02, C1-04, C1-06, or C1-08 [Deceleration Times]</i> to applicable values.   |
| The motor torque is not sufficient.  | <p>Use a larger motor.</p> <p><b>Note:</b><br/>If these items are correct, the demand on the motor is more than the motor capacity:</p> <ul style="list-style-type: none"> <li>Parameter settings are correct.</li> <li>The drive does not detect <i>ov [Overvoltage]</i>.</li> </ul>   |
| The drive and motor system reached the torque limit.                                     | <ul style="list-style-type: none"> <li>Examine the values set in <i>L7-01 to L7-04 [Torque Limit]</i> and increase them if necessary.</li> </ul> <p><b>Note:</b><br/>If the torque limit is enabled, deceleration time can increase because the drive cannot output more torque than the limit.</p> <ul style="list-style-type: none"> <li>If <i>H3-02, H3-10 = 10, 11, 12, 15 [MFAl Function Select = Torque Limit]</i>, examine the settings for the MFAls. <ul style="list-style-type: none"> <li>Examine the values set in <i>H3-02 and H3-10</i>.</li> </ul> </li> <li>Use <i>U1-13, U1-14 [Terminal A1, A2 Input Voltage]</i> to make sure that the analog input values set to terminals A1 and A2 are applicable.</li> </ul> |
| The load is more than the internal torque limit as specified by the drive rated current. | Replace the drive with a larger capacity model.   |

### ◆ The Load Falls When a Brake Is Applied

| Causes   | Possible Solutions   |
|--|--|
| The open/close timing of the brake is incorrect. | Refer to "Notes on Controlling the Brake when Using the Hoist Application Preset" in the technical manual and take appropriate measures. |
| The DC injection braking is not sufficient.      | Increase the value set in <i>b2-02 [DC Injection Braking Current]</i> .  |

### ◆ There Is Audible Noise from the Drive or Motor Cables When the Drive Is Energized

| Causes   | Possible Solutions   |
|--|--|
| The relay switching in the drive is making too much noise. | <ul style="list-style-type: none"> <li>Use <i>C6-02 [Carrier Frequency Selection]</i> to decrease the carrier frequency.</li> <li>Connect a noise filter to the input side of the drive power supply.</li> <li>Connect a noise filter to the output side of the drive.</li> <li>Isolate the control circuit wiring from the main circuit wiring.</li> <li>Use a metal cable gland to wire the drive.</li> <li>Shield the periphery of the drive with metal.</li> <li>Make sure that the drive and motor are grounded correctly.</li> <li>Make sure that ground faults have not occurred in the wiring or motor.</li> </ul> |

### ◆ Residual Current Monitoring/Detection (RCM/RCD) Trips During Run

| Causes  | Possible Solutions   |
|---|--|
| There is too much leakage current from the drive. | <ul style="list-style-type: none"> <li>• Increase the RCM/RCD sensitivity or use RCM/RCD with a higher threshold.</li> <li>• Use <i>C6-02 [Carrier Frequency Selection]</i> to decrease the carrier frequency.</li> <li>• Decrease the length of the cable used between the drive and the motor.</li> <li>• Install a noise filter or AC reactor on the output side of the drive. Set <i>C6-02 = 1 [2.0 kHz]</i> when connecting an AC reactor.</li> <li>• Disable the internal EMC filter.</li> </ul> |

### ◆ Motor Rotation Causes Unexpected Audible Noise from Connected Machinery

| Causes   | Possible Solutions   |
|--|--|
| The carrier frequency and the resonant frequency of the connected machinery are the same.      | <ul style="list-style-type: none"> <li>• Adjust <i>C6-02 to C6-05 [Carrier Frequency]</i>.</li> <li>• Set <i>C6-02 = 1 to 6 [Carrier Frequency Selection = Frequency other than Swing PWM]</i>.</li> </ul> <p><b>Note:</b><br/>If <i>C6-02 = 7 to A [Carrier Frequency Selection = Swing PWM]</i>, the drive will not know if the noise comes from the drive or the machine.</p> |
| The drive output frequency and the resonant frequency of the connected machinery are the same. | <ul style="list-style-type: none"> <li>• Adjust <i>d3-01 to d3-04 [Jump Frequency]</i>.</li> <li>• Put the motor on a rubber pad to decrease vibration.</li> </ul>   |

### ◆ Motor Rotation Causes Oscillation or Hunting

| Causes   | Possible Solutions   |
|--|--|
| The frequency reference is assigned to an external source, and there is electrical interference in the signal. | <p>Make sure that electrical interference does not have an effect on the signal lines.</p> <ul style="list-style-type: none"> <li>• Isolate control circuit wiring from main circuit wiring.</li> <li>• Use twisted-pair cables or shielded wiring for the control circuit.</li> <li>• Increase the value of <i>H3-13 [Analog Input FilterTime Constant]</i>.</li> </ul> |
| The cable between the drive and motor is too long.   | <ul style="list-style-type: none"> <li>• Do Auto-Tuning.</li> <li>• Make the wiring as short as possible.</li> </ul>   |
| The PID parameters are not sufficiently adjusted.  | Adjust <i>b5-xx [PID control]</i> .  |

### ◆ PID Output Fault

| Causes  | Possible Solutions  |
|---|---|
| There is no PID feedback input.   | <ul style="list-style-type: none"> <li>• Examine the MFAI terminal settings.</li> <li>• Make sure that <i>H3-02, H3-10 = B [MFAI Function Select = PID Feedback]</i>.</li> <li>• Make sure that the MFAI terminal settings agree with the signal inputs.</li> <li>• Examine the connection of the feedback signal.</li> <li>• Make sure that you set <i>b5-xx [PID Control]</i> correctly.</li> </ul> <p><b>Note:</b><br/>If there is no PID feedback input to the terminal, the detected value is 0, which causes a PID fault and also causes the drive to operate at maximum frequency.</p> |
| The detection level and the target value do not align.  | <p>Use <i>H3-03, H3-11 [Terminal A1 and A2 Gain Setting]</i> to adjust PID target and feedback signal scaling.</p> <p><b>Note:</b><br/>PID control keeps the difference between the target value and detection value at 0. Set the input level for the values relative to each other.</p>   |
| Reverse drive output frequency and speed detection. When output frequency increases, the sensor detects a speed decrease. | Set <i>b5-09 = 1 [PID Output Level Selection = Reverse output (reverse acting)]</i> .   |

### ◆ The Starting Torque Is Not Sufficient

| Causes   | Possible Solutions         |
|--|----------------------------|
| Auto-Tuning has not been done in vector control method.      | Do Auto-Tuning.            |
| The control method was changed after doing Auto-Tuning.      | Do Auto-Tuning again.      |
| Stationary Auto-Tuning for Line-to-Line Resistance was done. | Do Rotational Auto-Tuning. |

### ◆ The Motor Rotates after the Drive Output Is Shut Off

| Causes   | Possible Solutions   |
|--|--|
| DC Injection Braking is too low and the drive cannot decelerate correctly. | <ul style="list-style-type: none"> <li>Increase the value set in <i>b2-02 [DC Injection Braking Current]</i>.</li> <li>Increase the value set in <i>b2-04 [DC Inject Braking Time at Stop]</i>.</li> </ul> |
| The stopping method makes the drive coast to stop.                         | Set <i>b1-03 = 0 or 2 [Stopping Method Selection = Ramp to Stop, DC Injection Braking to Stop]</i> .   |

### ◆ The Output Frequency Is Lower Than the Frequency Reference

| Causes  | Possible Solutions  |
|---|---|
| The frequency reference is in the Jump frequency range.   | Adjust <i>d3-01 to d3-03 [Jump Frequency 1 to 3]</i> and <i>d3-04 [Jump Frequency Width]</i> .<br><b>Note:</b><br>Enabling the Jump frequency prevents the drive from outputting the frequencies specified in the Jump range.   |
| The upper limit for the frequency reference has been exceeded.  | Set <i>E1-04 [Maximum Output Frequency]</i> and <i>d2-01 [Frequency Reference Upper Limit]</i> to the best values for the application.<br><b>Note:</b><br>This calculation supplies the upper value for the output frequency:<br>$E1-04 \times d2-01 / 100$   |
| A large load triggered Stall Prevention function during acceleration.   | <ul style="list-style-type: none"> <li>Decrease the load.</li> <li>Adjust <i>L3-02 [Stall Prevent Level during Accel]</i>.</li> </ul>   |
| <i>L3-01 = 3 [Stall Prevent Select during Accel = ILim Mode]</i> has been set.  | <ol style="list-style-type: none"> <li>Check whether the V/f pattern and motor parameter settings are appropriate, and set them correctly.</li> <li>If this does not solve the problem, and it is not necessary to limit the current level of stall during acceleration, adjust <i>L3-02</i>.</li> <li>If this does not solve the problem, set <i>L3-01 = 1 [Enabled]</i>.</li> </ol> |
| The motor is rotating at this speed:<br>$b2-01 [DC Injection/Zero SpeedThreshold] \leq \text{Motor Speed} < E1-09 [Minimum Output Frequency]$ | Set $E1-09 < b2-01$ .   |

### ◆ The Motor Will Not Restart after a Loss of Power

| Causes   | Possible Solutions   |
|--|--|
| The drive did not receive a Run command after applying power.  | <ul style="list-style-type: none"> <li>Examine the sequence and wiring that enters the Run command.</li> <li>Set up a relay to make sure that the Run command stays enabled during a loss of power.</li> </ul> |
| For applications that use 3-wire sequence, the momentary power loss continued for a long time, and the relay that keeps the Run command has been switched off. | Examine the wiring and circuitry for the relay that keeps the Run command enabled during the momentary power loss ride-thru time.  |



# Periodic Inspection and Maintenance

---

This chapter gives information about how to examine and maintain drives in use, how to replace cooling fans and other parts, and how to store drives.

|            |                                   |            |
|------------|-----------------------------------|------------|
| <b>8.1</b> | <b>Section Safety .....</b>       | <b>290</b> |
| <b>8.2</b> | <b>Inspection.....</b>            | <b>292</b> |
| <b>8.3</b> | <b>Maintenance .....</b>          | <b>294</b> |
| <b>8.4</b> | <b>Replace Cooling Fans .....</b> | <b>296</b> |
| <b>8.5</b> | <b>Replace the Drive .....</b>    | <b>301</b> |
| <b>8.6</b> | <b>Storage Guidelines .....</b>   | <b>305</b> |

## 8.1 Section Safety

### DANGER

#### Electrical Shock Hazard

**Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe.**

If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**Disconnect all power to the drive and wait for the time specified on the warning label before you remove covers. Check the drive for dangerous voltages before servicing or repair work.**

If you do work on the drive when it is energized and there is no cover over the electronic circuits, it will cause serious injury or death from electrical shock. The drive has internal capacitors that stay charged after you de-energize the drive.

### WARNING

#### Electrical Shock Hazard

**The motor will run after you de-energize the drive. PM motors can generate induced voltage to the terminal of the motor after you de-energize the drive.**

If you touch a motor that is moving or energized, it can cause serious injury or death.

**Do not operate the drive when covers are missing. Replace covers and shields before you operate the drive. Use the drive only as specified by the instructions.**

Some figures in this section include drives without covers or safety shields to more clearly show the inside of the drive. If covers or safety shields are missing from the drive, it can cause serious injury or death.

**Always ground the motor-side grounding terminal.**

If you do not ground the equipment correctly, it can cause serious injury or death if you touch the motor case.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

#### Fire Hazard

**Tighten all terminal screws to the correct tightening torque.**

Connections that are too loose or too tight can cause incorrect operation and damage to the drive. Incorrect connections can also cause death or serious injury from fire.

#### Damage to Equipment

**Do not apply incorrect voltage to the main circuit of the drive. Operate the drive in the specified range of the input voltage on the drive nameplate.**

Voltages that are higher than the permitted nameplate tolerance can cause damage to the drive.

#### Fire Hazard

**Do not put flammable or combustible materials on top of the drive and do not install the drive near flammable or combustible materials. Attach the drive to metal or other noncombustible material.**

Flammable and combustible materials can start a fire and cause serious injury or death.

**⚠ WARNING****Electrical Shock Hazard**

**Do not modify the drive body or drive circuitry.**

Modifications to drive body and circuitry can cause serious injury or death, will cause damage to the drive, and will void the warranty. Yaskawa is not responsible for modifications of the product made by the user.

**Sudden Movement Hazard**

**Make sure that you align the phase order for the drive and motor when you connect the motor to drive output terminals U/T1, V/T2, and W/T3.**

If the phase order is incorrect, it can cause the motor to run in reverse. If the motor accidentally runs in reverse, it can cause serious injury or death.

**⚠ CAUTION****Burn Hazard**

**Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans.**

If you touch a hot drive heatsink, it can burn you.

**NOTICE****Damage to Equipment**

**When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures.**

If you do not follow procedures, it can cause ESD damage to the drive circuitry.

**Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life.**

If you install the fans incorrectly, it can cause damage to the drive.

**Make sure that all connections are correct after you install the drive and connect peripheral devices.**

Incorrect connections can cause damage to the drive.

**Do not energize and de-energize the drive more frequently than one time each 30 minutes.**

If you frequently energize and de-energize the drive, it can cause drive failure.

**Do not operate a drive or connected equipment that has damaged or missing parts.**

You can cause damage to the drive and connected equipment.

**Note:**

Do not use unshielded cable for control wiring. Use shielded, twisted-pair wires and ground the shield to the ground terminal of the drive. Unshielded wire can cause electrical interference and unsatisfactory system performance.

## 8.2 Inspection

Power electronics have limited life and can show changes in performance and deterioration of performance after years of use in usual conditions. To help prevent these problems, it is important to do preventive maintenance and regular inspection, and replace parts on the drive.

Drives contain different types of power electronics, for example power transistors, semiconductors, capacitors, resistors, fans, and relays. The electronics in the drive are necessary for correct motor control.

Follow the inspection lists in this chapter as a part of a regular maintenance program.

**Note:**

Examine the drive one time each year at a minimum.

The operating conditions, environmental conditions, and use conditions will have an effect on the examination frequency for connected equipment.

Examine the drive more frequently if you use the drive in bad conditions or in these conditions:

- High ambient temperatures
- Frequent starting and stopping
- Changes in the AC power supply or load
- Too much vibration or shock loading
- Dust, metal dust, salt, sulfuric acid, or chlorine atmospheres
- Unsatisfactory storage conditions.

### ◆ Recommended Daily Inspection

Table 8.1 gives information about the recommended daily inspection for Yaskawa drives. Examine the items in Table 8.1 each day to make sure that the components do not wear out or fail. Make a copy of this checklist and put a check mark in the “Checked” column after each inspection.

**Table 8.1 Daily Inspection Checklist**

| Inspection Area         | Inspection Points  | Corrective Action  | Checked |
|-------------------------|--|--|---------|
| Motor                   | Examine for unusual oscillation or noise coming from the motor.  | <ul style="list-style-type: none"> <li>• Check the load coupling.</li> <li>• Measure motor vibration.</li> <li>• Tighten all loose components.</li> </ul>  |         |
| Cooling System          | Examine for unusual heat from the drive or motor and visible discoloration.  | <ul style="list-style-type: none"> <li>• Check for a load that is too heavy.</li> <li>• Tighten loose screws.</li> <li>• Check for a dirty heatsink or motor.</li> <li>• Measure the ambient temperature.</li> </ul> |         |
|                         | Examine the cooling fans.  | <ul style="list-style-type: none"> <li>• Check for a clogged or dirty fan.</li> <li>• Use the performance life monitor to check for correct fan operation.</li> </ul>  |         |
| Surrounding Environment | Make sure that the installation environment is applicable.   | Remove the source of contamination or correct unsatisfactory environment.  |         |
| Load                    | Make sure that the drive output current is not more than the motor or drive rating for an extended period of time. | <ul style="list-style-type: none"> <li>• Check for a load that is too heavy.</li> <li>• Check the correct motor parameter settings.</li> </ul>   |         |
| Power Supply Voltage    | Examine main power supply and control voltages.  | <ul style="list-style-type: none"> <li>• Correct the voltage or power supply to agree with nameplate specifications.</li> <li>• Verify all main circuit phases.</li> </ul>   |         |

### ◆ Recommended Periodic Inspection

Table 8.2 to Table 8.6 give information about the recommended periodic inspections for Yaskawa drives. Examine the drive one time each year at a minimum. The operating conditions, environmental conditions, and use conditions will have an effect on the examination frequency for connected equipment. You must use your experience with the application to select the correct inspection frequency for each drive installation. Periodic inspections will help to prevent performance deterioration and product failure. Make a copy of this checklist and put a check mark in the “Checked” column after each inspection.

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

Table 8.2 Main Circuit Periodic Inspection Checklist

| Inspection Area                       | Inspection Points   | Corrective Action  | Checked |
|---------------------------------------|---|--|---------|
| General                               | <ul style="list-style-type: none"> <li>Examine equipment for discoloration from too much heat or deterioration.</li> <li>Examine for damaged parts.</li> </ul>  | <ul style="list-style-type: none"> <li>Replace damaged components as necessary.</li> <li>The drive does not have many serviceable parts and it could be necessary to replace the drive.</li> </ul>   |         |
|                                       | Examine for dirt, unwanted particles, or dust on components.  | <ul style="list-style-type: none"> <li>Examine enclosure door seal.</li> <li>Use a vacuum cleaner to remove unwanted particles and dust without touching the components.</li> <li>If you cannot remove unwanted particles and dust with a vacuum cleaner, replace the components.</li> </ul> |         |
| Conductors and Wiring                 | <ul style="list-style-type: none"> <li>Examine wiring and connections for discoloration or damage. Examine wiring and connections for discoloration from too much heat.</li> <li>Examine wire insulation and shielding for discoloration and wear.</li> </ul> | Repair or replace damaged wiring.  |         |
| Terminal Block                        | Examine terminals for stripped, damaged, or loose connections.  | <ul style="list-style-type: none"> <li>Tighten loose screws.</li> <li>Replace damaged screws.</li> </ul>   |         |
| Electromagnetic Contactors and Relays | <ul style="list-style-type: none"> <li>Examine contactors and relays for too much noise during operation.</li> <li>Examine coils for signs of too much heat, such as melted or broken insulation.</li> </ul>  | <ul style="list-style-type: none"> <li>Check coil voltage for overvoltage or undervoltage conditions.</li> <li>Replace broken relays, contactors, or circuit boards that you can remove.</li> </ul>  |         |
| Dynamic Braking Option                | Examine the insulation for discoloration from too much heat.  | If there is discoloration in the option, check to make sure that there is not damage to the wiring. A small quantity of discoloration is not a problem.  |         |
| Electrolytic Capacitor                | <ul style="list-style-type: none"> <li>Examine for leaks, discoloration, or cracks.</li> <li>Examine if the cap has come off, if there is swelling, or if there are leaks from broken sides.</li> </ul>   | The drive does not have many serviceable parts and it could be necessary to replace the drive.   |         |
| Diodes, IGBT (Power Transistor)       | Examine for dust or other unwanted material collected on the surface.   | Use a vacuum cleaner to remove unwanted particles and dust without touching the components.  |         |

Table 8.3 Motor Periodic Inspection Checklist

| Inspection Area | Inspection Points                               | Corrective Action   | Checked |
|-----------------|---|---|---------|
| Operation Check | Check for increased vibration or unusual noise. | Stop the motor and contact approved maintenance personnel as necessary. |         |

Table 8.4 Control Circuit Periodic Inspection Checklist

| Inspection Area | Inspection Points  | Corrective Action   | Checked |
|-----------------|--|---|---------|
| General         | <ul style="list-style-type: none"> <li>Examine terminals for stripped, damaged, or loose connections.</li> <li>Make sure that all terminals have been correctly tightened.</li> </ul>  | <ul style="list-style-type: none"> <li>Tighten loose screws.</li> <li>Replace damaged screws or terminals.</li> <li>If terminals are integral to a circuit board, it could be necessary to replace the control board or the drive.</li> </ul>   |         |
| Circuit Boards  | <ul style="list-style-type: none"> <li>Check for odor, discoloration, or rust.</li> <li>Make sure that all connections are correctly fastened.</li> <li>Make sure that the surface of the circuit board does not have dust or oil mist.</li> </ul> | <ul style="list-style-type: none"> <li>Tighten loose connections.</li> <li>Use a vacuum cleaner to remove unwanted particles and dust without touching the components.</li> <li>If you cannot remove unwanted particles and dust with a vacuum cleaner, replace the components.</li> <li>Do not use solvents to clean the board.</li> <li>The drive does not have many serviceable parts and it could be necessary to replace the drive.</li> </ul> |         |

Table 8.5 Cooling System Periodic Inspection Checklist

| Inspection Area | Inspection Points   | Corrective Action   | Checked |
|-----------------|---|---|---------|
| Cooling Fan     | <ul style="list-style-type: none"> <li>Check for unusual oscillation or unusual noise.</li> <li>Check for damaged or missing fan blades.</li> </ul> | Clean or replace the fans as necessary.   |         |
| Heatsink        | <ul style="list-style-type: none"> <li>Examine for dust or other unwanted material collected on the surface.</li> <li>Examine for dirt.</li> </ul>  | Use a vacuum cleaner to remove unwanted particles and dust without touching the components. |         |
| Air Duct        | Examine air intake, exhaust openings and make sure that there are no unwanted materials on the surface.   | Clear blockages and clean air duct as necessary.  |         |

Table 8.6 Keypad Periodic Inspection Checklist

| Inspection Area | Inspection Points  | Corrective Action   | Checked |
|-----------------|--|---|---------|
| General         | <ul style="list-style-type: none"> <li>Make sure that the keypad shows the data correctly.</li> <li>Examine for dust or other unwanted material that collected on components in the area.</li> </ul> | <ul style="list-style-type: none"> <li>If you have problems with the display or the keys, contact Yaskawa or your nearest sales representative.</li> <li>Clean the keypad.</li> </ul> |         |

## 8.3 Maintenance

The drive Maintenance Monitors keep track of component wear and tell the user when the end of the estimated performance life is approaching. The Maintenance Monitors prevent the need to shut down the full system for unexpected problems. Users can set alarm notifications for the maintenance periods for these drive components:

- Cooling fan
- Electrolytic capacitor
- Soft charge bypass relay
- IGBT

Contact Yaskawa or your nearest sales representative for more information about part replacement.

### ◆ Replaceable Parts

You can replace these parts of the drive:

- Cooling fan

If there is a failure in the main circuit, replace the drive.

If the drive is in the warranty period, contact Yaskawa or your nearest sales representative before you replace parts. Yaskawa reserves the right to replace or repair the drive as specified by the Yaskawa warranty policy.

**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

### ◆ Part Replacement Guidelines

Table 8.7 shows the standard replacement period for replacement parts. When you replace these parts, make sure that you use Yaskawa replacement parts for the applicable model and design revision number of your drive.

**Table 8.7 Standard Replacement Period**

| Parts                                | Standard Replacement Period |
|--------------------------------------|-----------------------------|
| Cooling fan                          | 10 years                    |
| Electrolytic capacitor <sup>*1</sup> | 10 years                    |

\*1 If there is damage to parts that you cannot repair or replace, replace the drive.

**Note:**

Performance life estimate is based on these use conditions. These conditions are provided for the purpose of replacing parts to maintain performance. Some parts may require more frequent replacement due to poor environments or rigorous use. Operating conditions for performance life estimate: Ambient temperature: Yearly average of 40 °C (IP20/UL Open Type), Load factor: 80%, Operating rate: 24 hours a day

### ◆ Monitors that Display the Lifespan of Drive Components

The drive keypad shows percentage values for the replacement parts to help you know when you must replace those components. Use the monitors in Table 8.8 to check replacement periods. When the monitor value is 100%, the component is at the end of its useful life and there is an increased risk of drive malfunction. Yaskawa recommends that you check the maintenance period regularly to make sure that you get the maximum performance life.

**Table 8.8 Performance Life Monitors**

| Monitor No. | Parts                    | Description  |
|-------------|--------------------------|--|
| U4-03       | Cooling fan              | Shows the total operation time of fans as 0 to 99999 hours. After this value is 99999, the drive automatically resets it to 0. |
| U4-04       |                          | Shows the total fan operation time as a percentage of the specified maintenance period.  |
| U4-05       | Electrolytic Capacitor   | Shows the total capacitor usage time as a percentage of the specified maintenance period.                                      |
| U4-06       | Soft charge bypass relay | Shows the number of times the drive is energized as a percentage of the performance life of the inrush circuit.                |
| U4-07       | IGBT                     | Shows the percentage of the maintenance period for the IGBTs.  |

## ◆ Alarm Outputs for Maintenance Monitors

You can use  $H2-xx$  [MFDO Function Selection] to send a message that tells you when a specified component is near the end of its performance life estimate. Set the applicable value to  $H2-xx$  as shown in Table 8.9 for your component.

When the specified component is near the end of its performance life estimate, the MFDO terminals set for  $H2-xx = 2F$  [Maintenance Notification] will activate, and the keypad will show an alarm that identifies the component to replace.

Table 8.9 Maintenance Period Alarms

| Display | Alarm Name                             | Cause  | Possible Solutions  | Digital Outputs (Setting Value in H2-xx) |
|---------|--|--|---|--|
| LT-1    | Cooling Fan Maintenance Time           | The cooling fan is at 90% of its expected performance life.                                      | Replace the cooling fan, then set $o4-03 = 0$ [Fan Operation Time Setting = 0 h] to reset the cooling fan operation time. | 2F                                       |
| LT-2    | Capacitor Maintenance Time             | The capacitors for the main circuit and control circuit are at 90% of expected performance life. | Replace the board or the drive.<br>Contact Yaskawa or your nearest sales representative to replace the board.             |  |
| LT-3    | SoftChargeBypassRelay Maintenance Time | The soft charge bypass relay is at 90% of its performance life estimate.                         | Replace the board or the drive.<br>Contact Yaskawa or your nearest sales representative to replace the board.             |  |
| LT-4    | IGBT Maintenance Time (50%)            | The IGBT is at 50% of its expected performance life.   | Check the load, carrier frequency, and output frequency.  |  |
| TrPC    | IGBT Maintenance Time (90%)            | The IGBT is at 90% of its expected performance life.   | Replace the IGBT or the drive.  | 10                                       |

## ◆ Related Parameters

Replace the component, then set  $o4-03$ ,  $o4-05$ ,  $o4-07$ , and  $o4-09$  [Maintenance Setting] = 0 to reset the Maintenance Monitor. If these parameters are not reset after the corresponding parts have been replaced, the Maintenance Monitor function will continue to count down the performance life from the value that was reached with the old part. If the Maintenance Monitor is not reset, the drive will not have the correct value of the performance life for the new component.

**Note:**

The maintenance period changes for different operating environments.

Table 8.10 Maintenance Setting Parameters

| No.   | Name                             | Function  |
|-------|----------------------------------|---|
| o4-03 | Fan Operation Time Setting       | Sets the value from which to start the cumulative drive cooling fan operation time in 10-hour units.<br><b>Note:</b><br>When $o4-03 = 30$ has been set, the drive will count the operation time for the cooling fan from 300 hours and $U4-03$ [Cooling Fan Open Time] will show 300 h. |
| o4-05 | Capacitor Maintenance Setting    | Sets the value from which to start the count for the main circuit capacitor maintenance period as a percentage.   |
| o4-07 | Softcharge Relay Maintenance Set | Sets as a percentage the value from which to start the count for the soft charge bypass relay maintenance time.   |
| o4-09 | IGBT Maintenance Setting         | Sets the value from which to start the count for the IGBT maintenance period as a percentage.   |

## 8.4 Replace Cooling Fans

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

To replace a cooling fan, contact Yaskawa or your nearest sales representative.

### ◆ Number of Cooling Fans

Table 8.11 Single-Phase 200 V Class

| Model       | Cooling Fans | Replacement Procedure | Ref. |
|-------------|--------------|-----------------------|------|
| B001 - B006 | -            | -                     | -    |
| B010, B012  | 1            | A                     | 296  |
| B018        | 2            | B                     |      |

Table 8.12 Three-Phase 200 V Class

| Model       | Cooling Fans | Replacement Procedure | Ref. |
|-------------|--------------|-----------------------|------|
| 2001-2004   | -            | -                     | -    |
| 2006 - 2021 | 1            | A                     | 296  |
| 2030        | 1            | B                     | 299  |
| 2042 - 2082 | 2            | A                     | 296  |

Table 8.13 Three-Phase 400 V Class

| Model       | Cooling Fans | Replacement Procedure | Ref. |
|-------------|--------------|-----------------------|------|
| 4001 - 4004 | -            | -                     | -    |
| 4005 - 4012 | 1            | A                     | 296  |
| 4018, 4023  | 1            | B                     | 299  |
| 4031 - 4060 | 2            | A                     | 296  |

### ◆ Replace the Cooling Fan (Procedure A)

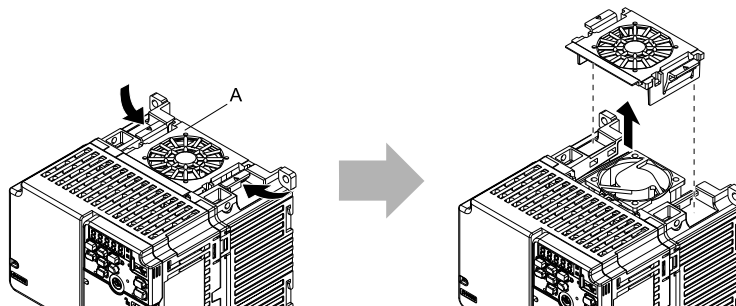
**DANGER!** Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**CAUTION!** Burn Hazard. Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

#### ■ Remove a Fan

1. To remove the fan finger guard from the drive, push the hooks on the left and right sides of it and pull up.




A - Fan finger guard

Figure 8.1 Remove the Fan Finger Guard



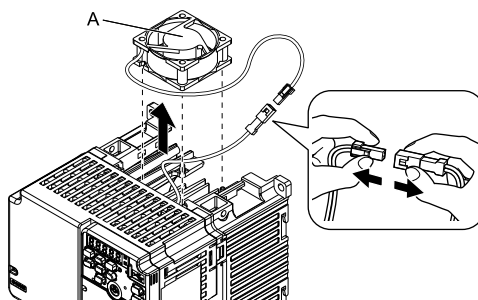2. Pull the cooling fan straight up from the drive. Disconnect the power supply connector and remove the fan from the drive.



A - Cooling fan

Figure 8.2 Remove the Cooling Fan

■ Install a Fan

Reverse the removal procedure to install a cooling fan.

1. Connect the power supply connector between the drive and cooling fan.


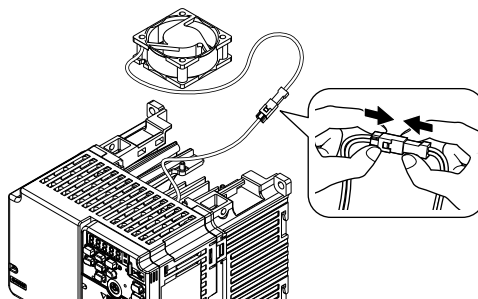


Figure 8.3 Connect the Power Supply Connector

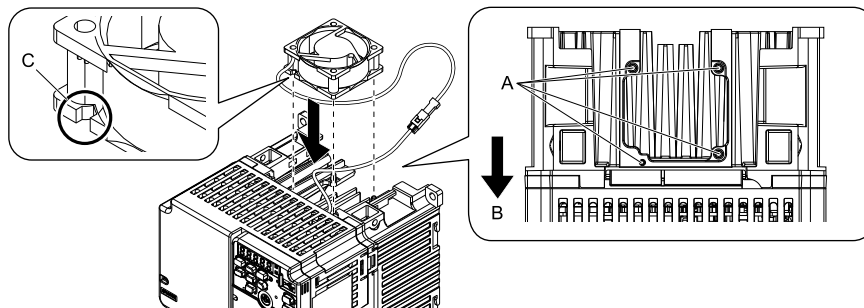2. Align the notches on the fan with the pins on the drive and install the cooling fans in the drive.




A - Alignment pins on drive  
B - Front of drive

C - Notch on fan


Figure 8.4 Install the Cooling Fan

**Note:**

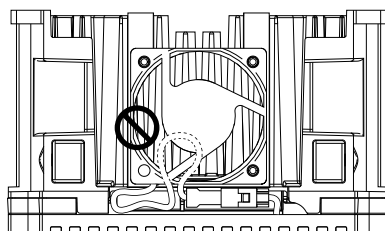When you install the cooling fan, make sure that you do not pinch cables between the cooling fan and the drive.



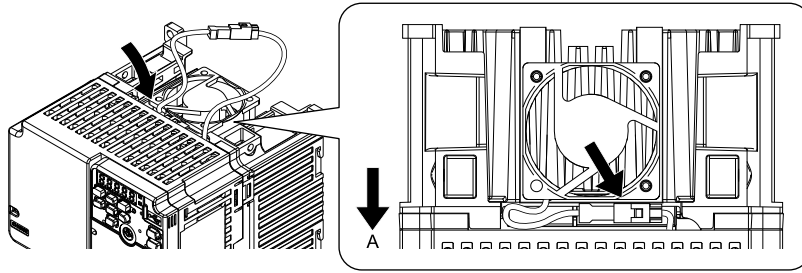- Put the cable and connector in the recess of the drive.




A - Front of drive


**Figure 8.5 Put the Cable and Connector in the Drive Recess**

**Note:**


The connector installation position is different for different models.

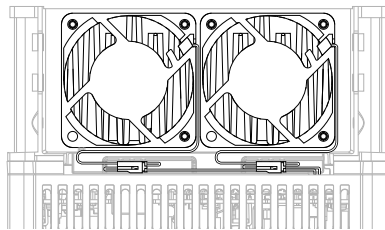

**Figure 8.6 Put the Connector in the Recess**

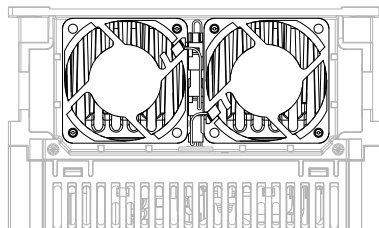


**Figure 8.7 Put the Connector in Between the Fans**

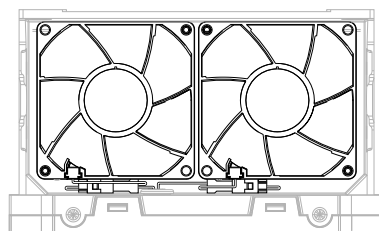

**Figure 8.8 Put the Connector in Between the Drive and Fan**

- Insert the fan cover straight until the hook clicks into place.

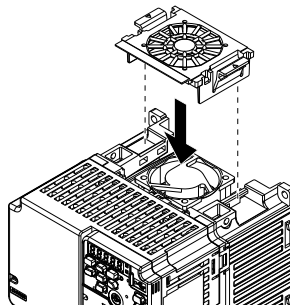

**Figure 8.9 Reattach the Fan Finger Guard**

- Energize the drive and set  $o4-03 = 0$  [*Fan Operation Time Setting = 0 h*] to reset the cooling fan operation time.

## ◆ Replace the Cooling Fan (Procedure B)

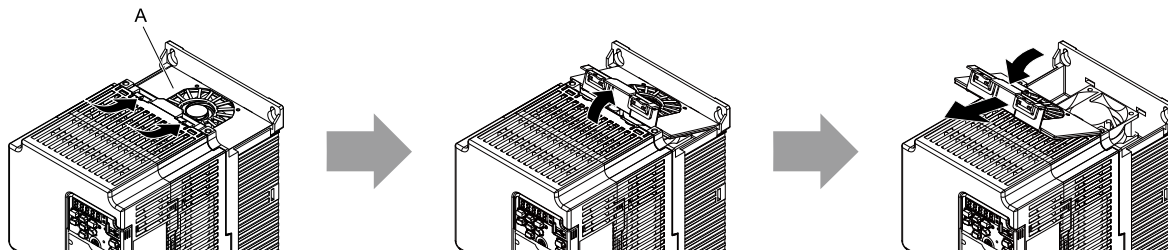
**DANGER! Electrical Shock Hazard.** Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.

**CAUTION! Burn Hazard.** Do not touch a hot drive heatsink. De-energize the drive, wait for a minimum of 15 minutes, then make sure that the heatsink is cool before you replace the cooling fans. If you touch a hot drive heatsink, it can burn you.

**NOTICE:** Use the instructions in this manual to replace the cooling fans. When you do maintenance on the fans, replace all the fans to increase product life. If you install the fans incorrectly, it can cause damage to the drive.

### ■ Remove a Fan


1. Push the tabs toward the back of the drive and pull up to remove the fan finger guard from the drive.



A - Fan finger guard

Figure 8.10 Remove the Fan Finger Guard

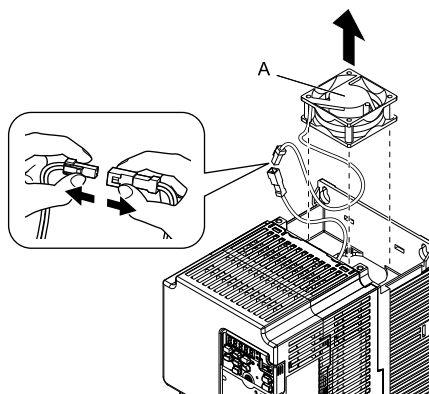2. Pull the cooling fan straight up from the drive. Disconnect the power supply connector and remove the fan from the drive.



A - Cooling fan

Figure 8.11 Remove the Cooling Fan

### ■ Install the Cooling Fans

Reverse the removal procedure to install a cooling fan.

1. Connect the power supply connector between the drive and cooling fan.


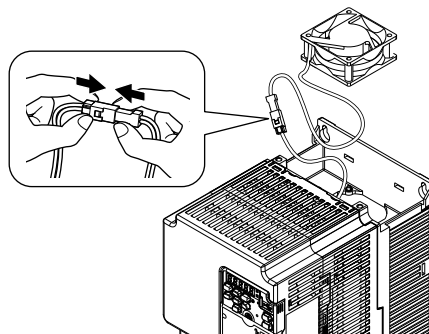


Figure 8.12 Connecting the power supply connector

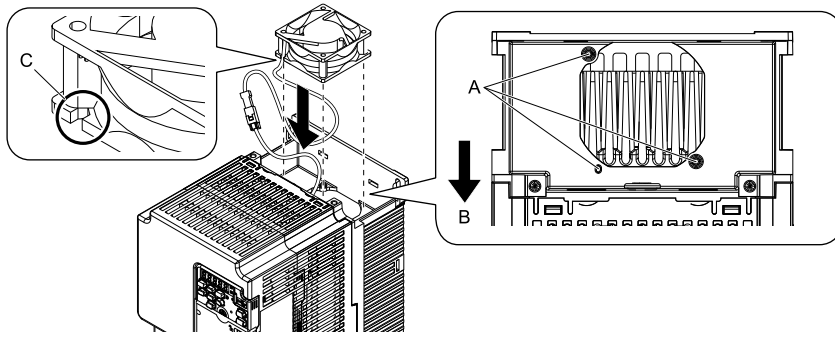2. Install the cooling fans so that they align with the pins on the drive.




A - Alignment pins on drive  
B - Front of drive

C - Notches


Figure 8.13 Installing the cooling fans

**Note:**

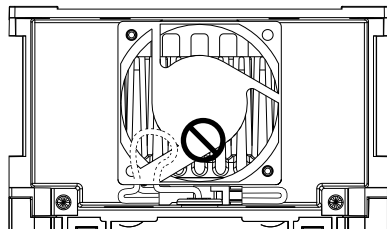When you install the cooling fan, make sure that you do not pinch cables between the cooling fan and the drive.



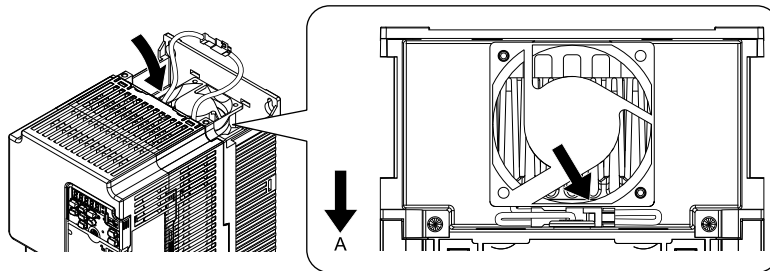3. Put the cable and connector in the recess of the drive.



A - Front of drive

Figure 8.14 Putting the cable and connector in the recess

4. Insert the tabs of the fan cover into the holes in the drive and press in the fan cover until the hook clicks into place.

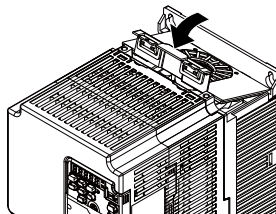



Figure 8.15 Reattach the Fan Finger Guard

5. Energize the drive and set  $o4-03 = 0$  [Fan Operation Time Setting = 0 h] to reset the cooling fan operation time.

## 8.5 Replace the Drive
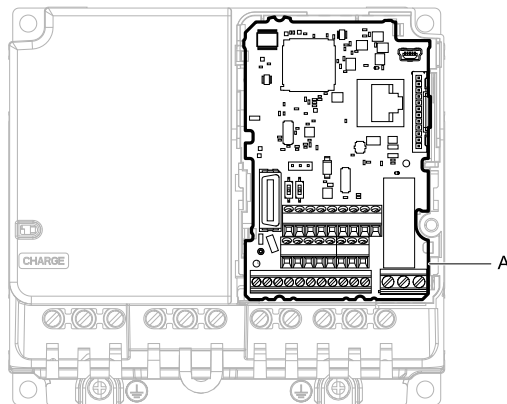
### ◆ About the Control Circuit Board

You can remove the control circuit board of the drive and install a new board. If there is a failure in the drive, you can use this feature to easily replace the control circuit board.



A - Control circuit board

Figure 8.16 Control Circuit Terminal Block

### ◆ Replace the Drive

**DANGER!** *Electrical Shock Hazard. Disconnect all power to the drive and wait for the time specified on the warning label before you remove covers. Check the drive for dangerous voltages before servicing or repair work. If you do work on the drive when it is energized and there is no cover over the electronic circuits, it will cause serious injury or death from electrical shock. The drive has internal capacitors that stay charged after you de-energize the drive.*

**DANGER!** *Electrical Shock Hazard. Do not examine, connect, or disconnect wiring on an energized drive. Before servicing, disconnect all power to the equipment and wait for the time specified on the warning label at a minimum. The internal capacitor stays charged after the drive is de-energized. The charge indicator LED extinguishes when the DC bus voltage decreases below 50 Vdc. When all indicators are OFF, measure for dangerous voltages to make sure that the drive is safe. If you do work on the drive when it is energized, it will cause serious injury or death from electrical shock.*

**WARNING!** *Electrical Shock Hazard. Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive. If personnel are not approved, it can cause serious injury or death.*

**NOTICE:** *Damage to Equipment. When you touch the drive and circuit boards, make sure that you observe correct electrostatic discharge (ESD) procedures. If you do not follow procedures, it can cause ESD damage to the drive circuitry.*

### ■ Notes on Wiring the Main Circuit Terminal Block


Read these notes before you wire the main circuit terminal block.

- Use UL-Listed, vinyl-coated insulated copper wires for operation with a continuous maximum permitted temperature of 75 °C at 600 V.
- Remove all unwanted objects that are near the terminal block connections.
- Remove the insulation from the connection wires to the wire stripping lengths shown in the manual.
- Do not use bent or crushed wires. Remove the damaged end of the wire before you use it. Incorrect connections can cause death or serious injury from fire.
- Do not solder stranded wire. Soldered wire connections can become loose over time and cause unsatisfactory drive performance.
- If you use stranded wire, make sure that all of the wire strands are in the connection. Also, do not twist the stranded wire too much. Incorrect connections can cause death or serious injury from fire.
- Put the wire all the way into the terminal block. Remove the insulation from the wire to the recommended wire stripping length to fit the wire with insulation in the plastic housing.
- Use a torque driver, torque ratchet, or torque wrench for the screws. A slotted driver or a hex tool will be necessary to wire the screw clamp terminal. Use applicable tools as specified by the recommended conditions in the product manual.
- If you use power tools to tighten the terminal screws, use a low speed setting (300 to 400 r/min). Failure to obey can cause damage to the terminal screws.
- Wire gauges on existing drive models to be replaced may not match wire gauge ranges on new drives. Refer to the drive manuals for correct wire sizes.

## 8.5 Replace the Drive


- Do not tighten the terminal screws at an angle of 5 degrees or more. Failure to obey can cause damage to the terminal screws.

If you damage a terminal screw, contact Yaskawa or your nearest sales representative.

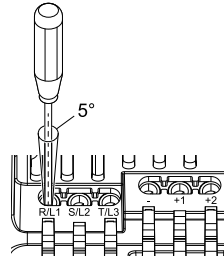


**Figure 8.17 Permitted Angle**

- Put the bit all the way into the hex socket to tighten the hex socket cap screw.
- When you tighten slotted screws, hold the straight-edge screwdriver perpendicularly to the screw. Make sure that you align the end of the straight-edge screwdriver with the screw groove.

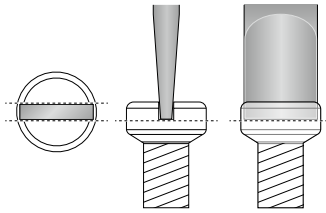

**Figure 8.18 Tightening Slotted Screws**

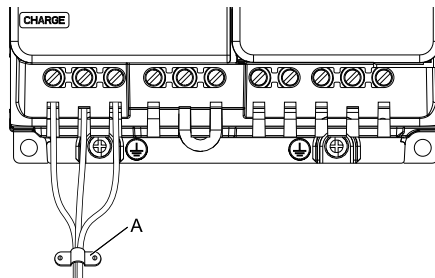- After you connect the wires to the terminal block, lightly pull on the wires to make sure that they do not come out of the terminals.
- Do not let strain on the wiring cause damage. Use a strain relief near the wiring to release the tension. Refer to [Figure 8.19](#) for an example.



**A - Cable clamp**

**Figure 8.19 Strain Relief Example**

**Table 8.14 Recommended Wiring Tools**

| Screw Size | Screw Shape     | Wire Gauge                       | Adapter | Bit                  |                 | Torque Driver Model<br>(Tightening Torque)           | Torque Wrench<br>(Tightening Torque)   |
|------------|-----------------|----------------------------------|---------|----------------------|-----------------|--|--|
|            |                 |                                  |         | Model                | Manufacturer    |  |  |
| M3         |                 | -                                | Bit     | SF-BIT-SL 0,5X3,0-70 | PHOENIX CONTACT | TSD-M 1,2NM<br>(0.3 - 1.2 N·m<br>(2.7 - 10.6 in·lb)) | -                                      |
| M4         |                 | -                                | Bit     | SF-BIT-SL 1,0X4,0-70 | PHOENIX CONTACT | TSD-M 3NM<br>(1.2 - 3.0 N·m<br>(10.6 - 26.6 in·lb))  | -                                      |
| M5 *1      |                 | ≤ 25 mm <sup>2</sup><br>(AWG 10) | Bit     | SF-BIT-SL 1,2X6,5-70 | PHOENIX CONTACT | TSD-M 3NM<br>(1.2 - 3.0 N·m<br>(10.6 - 26.6 in·lb))  | -                                      |
|            |                 | ≥ 30 mm <sup>2</sup><br>(AWG 8)  |         |                      |                 | -  |  |
| M6         | <br>(WAF: 5 mm) | -                                | Bit     | SF-BIT-HEX 5-50      | PHOENIX CONTACT | -  | 5 - 9 N·m<br>(44.3 - 79.7 in·lb) *2 *3 |

\*1 When you wire drive models 2042, 2056, 4031, 4038, 4044, and 4060, select the correct tools for the wire gauge.

\*2 Use 6.35 mm (0.25 in) bit socket holder.

\*3 Use a torque wrench that can apply this torque measurement range.

## ■ Remove the Control Circuit Board

Remove the front cover and keypad from the drive.

1. Push the tabs to the left that hold the control board to the drive.

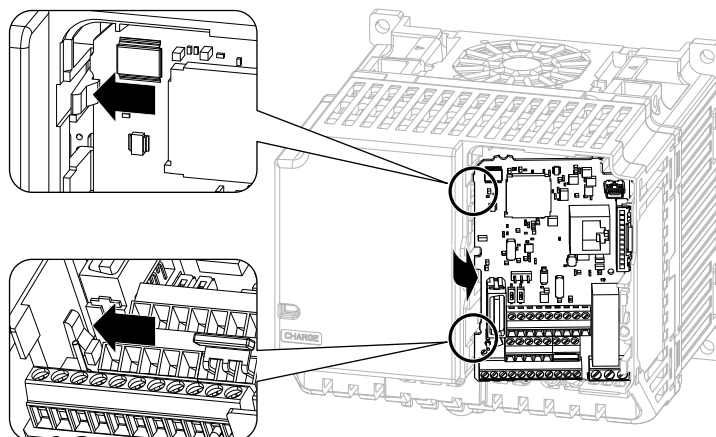


Figure 8.20 Unhook the Tabs

2. Pull the left side of the control circuit board out first.

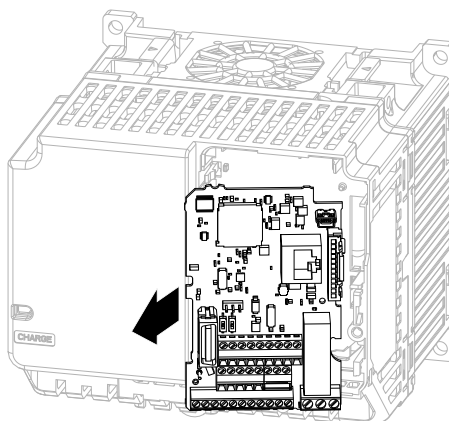


Figure 8.21 Remove the Control Circuit Board

## ■ Put the Control Circuit Board in a New Drive

Remove the keypad, front cover, and control circuit board of the new drive.

Wire the main circuit terminals of the new drive, then attach the wired control circuit board.

1. Wire the main circuit terminals.

**Note:**

To wire terminals +1 and +2, remove the jumper between terminals +1 and +2.


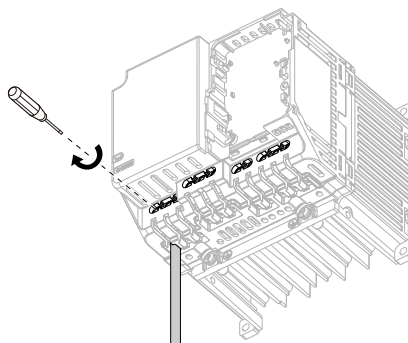


Figure 8.22 Wire the Main Circuit Terminals

2. Attach the wired control circuit board to the drive.  
Push the control circuit board until the hooks click into place on the drive.

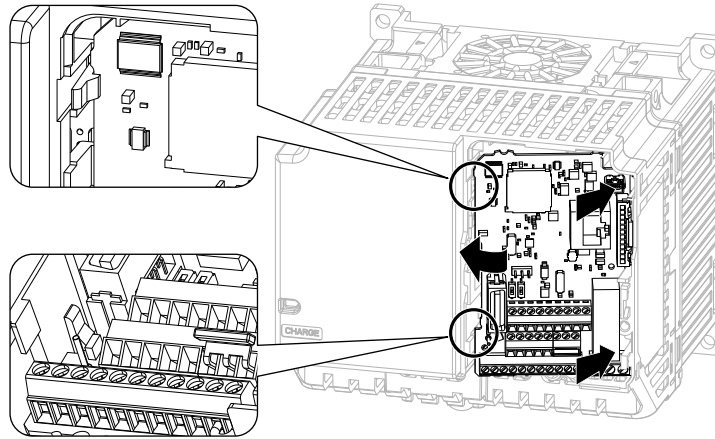

**Figure 8.23 Attach the Control Circuit Board**

3. Attach the keypad and front cover to the new drive.
4. Energize the drive and set these parameters:
  - *o2-04 [Drive Model (KVA) Selection]*: Set this parameter to the model number of the new drive.
  - *o4-01 to o4-13 [Maintenance Period]*: Reset the performance life monitors for the components.



## 8.6 Storage Guidelines

The chemicals in the electrolytic capacitors and other electronic parts of the drive change over time. When you store the drive for long periods of time, use the information in this section to help keep the performance life estimates.

### ◆ Storage Location

- Temperature and Humidity

When you store the drive for approximately one month, for example during shipping, you can put the drive in a location where the temperature is  $-20\text{ }^{\circ}\text{C}$  to  $+70\text{ }^{\circ}\text{C}$  ( $-4\text{ }^{\circ}\text{F}$  to  $+158\text{ }^{\circ}\text{F}$ ). Correctly package and store the drive during shipping to prevent vibration and impact damage.

Do not put the drive in direct sunlight or where there will be condensation or ice. Put the drive in a location where the relative humidity is 95% or less.

- Dust and Oil Mist

Do not keep the drive locations with dust or oil mist. For example, cement factories and cotton mills.

- Corrosive Gas

Do not keep the drive in locations with corrosive gas. For example, chemical plants, refineries, and sewage plants.

- Salt Damage

Do not keep the drive in salty locations. For example, locations near the ocean, and salt damage-designated locations.

Do not keep the drive in unsatisfactory locations. Keep all drives in storage rooms that are safe from unsatisfactory elements.

### ◆ Regular Application of Power

To prevent deterioration of the capacitors, Yaskawa recommends that you apply power to the drive a minimum of one time each year for a minimum of 30 minutes.

If you store the drive for longer than two years and do not apply power, Yaskawa recommends that you use a variable power source and gradually increase the power from 0 V to the rated drive voltage over a period of 2 to 3 minutes. Apply power for a minimum of 1 hour with no load to reform the main circuit electrolytic capacitor. When you operate the drive after you apply power, wire the drive correctly and check for drive faults, overcurrents, motor vibration, motor speed differences, and other defects during operation.

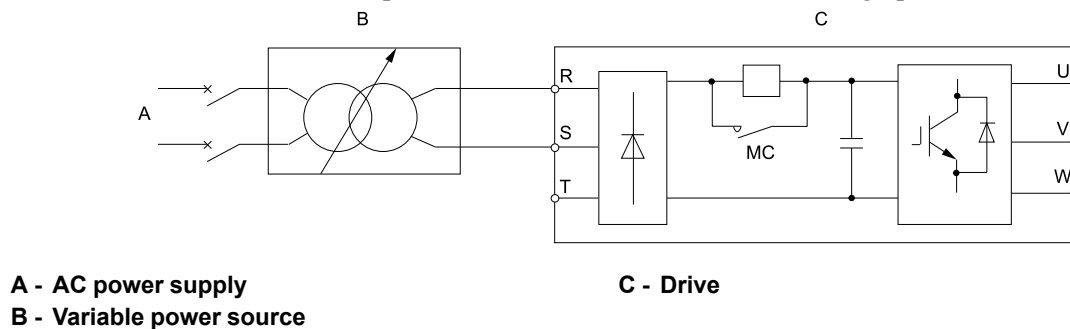


Figure 8.24 Power Distribution Method



## Disposal

---

|            |                                    |            |
|------------|------------------------------------|------------|
| <b>9.1</b> | <b>Section Safety .....</b>        | <b>308</b> |
| <b>9.2</b> | <b>Disposal Instructions .....</b> | <b>309</b> |
| <b>9.3</b> | <b>WEEE Directive .....</b>        | <b>310</b> |

## 9.1 Section Safety

### WARNING

#### Electrical Shock Hazard

**De-energize the drive and wait 5 minutes minimum until the Charge LED turns off. Remove the front cover and terminal cover to do work on wiring, circuit boards, and other parts. Use terminals for their correct function only.**

Incorrect wiring, incorrect ground connections, and incorrect repair of protective covers can cause death or serious injury.

**Only let approved personnel install, wire, maintain, examine, replace parts, and repair the drive.**

If personnel are not approved, it can cause serious injury or death.

**Do not wear loose clothing or jewelry when you do work on the drive. Tighten loose clothing and remove all metal objects, for example watches or rings.**

Loose clothing can catch on the drive and jewelry can conduct electricity and cause serious injury or death.

#### Crush Hazard

**Wear eye protection when you do work on the drive.**

If you do not use correct safety equipment, it can cause serious injury or death.

### CAUTION

#### Crush Hazard

**Tighten terminal cover screws and hold the case safely when you move the drive.**

If the drive or covers fall, it can cause moderate injury.

## 9.2 Disposal Instructions

Correctly dispose of the product and packing material as specified by applicable regional, local, and municipal laws and regulations.

## 9.3 WEEE Directive



The wheeled bin symbol on this product, its manual, or its packaging identifies that you must recycle it at the end of its product life.

You must discard the product at an applicable collection point for electrical and electronic equipment (EEE). Do not discard the product with usual waste.

## Specifications

---

|             |  |            |
|-------------|--|------------|
| <b>10.1</b> | <b>Section Safety .....</b>                                  | <b>312</b> |
| <b>10.2</b> | <b>Drive Duty Modes .....</b>                                | <b>313</b> |
| <b>10.3</b> | <b>Model Specifications (Single-Phase 200 V Class) .....</b> | <b>314</b> |
| <b>10.4</b> | <b>Model Specifications (Three-Phase 200 V Class) .....</b>  | <b>315</b> |
| <b>10.5</b> | <b>Model Specifications (Three-Phase 400 V Class) .....</b>  | <b>319</b> |
| <b>10.6</b> | <b>Drive Specifications.....</b>                             | <b>321</b> |
| <b>10.7</b> | <b>Drive Derating .....</b>                                  | <b>324</b> |
| <b>10.8</b> | <b>Drive Exterior and Mounting Dimensions .....</b>          | <b>328</b> |
| <b>10.9</b> | <b>Peripheral Devices and Options.....</b>                   | <b>333</b> |

## 10.1 Section Safety

 **DANGER**

**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.



## 10.2 Drive Duty Modes

The drive has two duty modes from which to select for the application: Heavy Duty (HD) and Normal Duty (ND). Refer to [Table 10.1](#) for information about the differences between HD and ND ratings.

**Table 10.1 Drive Duty Modes**

| Duty Rating             | C6-01 Setting | Application  | Default Carrier Frequency  | Overload Tolerance (oL2 [Drive Overload])  |
|-------------------------|---------------|--|----------------------------|--|
| Heavy Duty Rating (HD)  | 0             | <ul style="list-style-type: none"> <li>• Extruder</li> <li>• Conveyor</li> <li>• Cranes and hoists</li> <li>• Constant torque or high overload capacity</li> </ul> | Determined by o2-04, A1-02 | 150% of the rated output current for 60 seconds The permitted frequency of overload is one time each 10 minutes. |
| Normal Duty Rating (ND) | 1             | <ul style="list-style-type: none"> <li>• Fan</li> <li>• Pump</li> <li>• Blower</li> <li>• Variable speed control</li> </ul>  | Determined by o2-04, A1-02 | 110% of the rated output current for 60 seconds The permitted frequency of overload is one time each 10 minutes. |

## 10.3 Model Specifications (Single-Phase 200 V Class)

Table 10.2 Ratings (Single-Phase 200 V Class)

| Model                                |  | B001  | B002 | B004 | B006 | B010   | B012 | B018             |      |
|--------------------------------------|--|---|------|------|------|--|------|------------------|------|
| Maximum Applicable Motor Output (kW) | HD *1  | 0.1   | 0.25 | 0.55 | 1.1  | 1.5  | 2.2  | 4.0              |      |
|                                      | ND *2  | 0.2<br>0.18   | 0.37 | 0.75 | 1.1  | 2.2  | 3.0  | -                |      |
| Maximum Applicable Motor Output (HP) | HD *1  | 1/6   | 1/4  | 1/2  | 1    | 2  | 3    | 5                |      |
|                                      | ND *2  | 1/6   | 1/4  | 3/4  | 1.5  | 3  | 3    | -                |      |
| Input                                | Rated Input Current (A)  | HD  | 1.4  | 2.8  | 5.5  | 11   | 14.1 | 20.6             | 35.0 |
|                                      |  | ND  | 2.0  | 5.0  | 7.3  | 13.8   | 20.2 | 24.0             | -    |
| Output                               | Rated Output Capacity (kVA)<br>*3  | HD  | 0.3  | 0.6  | 1.1  | 1.9  | 3    | 4.2              | 6.7  |
|                                      |  | ND  | 0.5  | 0.7  | 1.3  | 2.3  | 3.7  | 4.6              | -    |
|                                      | Rated Output Current (A)   | HD  | 0.8  | 1.6  | 3    | 5  | 8    | 11               | 17.6 |
|                                      |  | ND  | 1.2  | 1.9  | 3.5  | 6  | 9.6  | 12.2             | -    |
|                                      | Overload Tolerance   | <ul style="list-style-type: none"> <li>HD: 150% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> <li>ND: 110% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> </ul> <b>Note:</b><br>Derating can be necessary for applications that start and stop frequently. |      |      |      |  |      |                  |      |
|                                      | Carrier Frequency  | HD: 10 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum.   |      |      |      | HD: 8 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum. |      |                  |      |
| Maximum Output Voltage               | Single-phase 200 V to 240 V<br><b>Note:</b><br>The maximum output voltage is proportional to the input voltage.            |   |      |      |      |  |      |                  |      |
| Maximum Output Frequency             | <ul style="list-style-type: none"> <li>V/f, OLV, OLV/PM: 590 Hz</li> <li>AOLV/PM: 270 Hz</li> <li>EZOLV: 120 Hz</li> </ul> |   |      |      |      |  |      |                  |      |
| Measures for Harmonics               | AC reactor   | External options  |      |      |      |  |      |                  |      |
| Braking Device                       | Braking Transistor   | Standard internal characteristics   |      |      |      |  |      | External options |      |
| EMC Filter                           | EMC Filter<br>IEC61800-3   | Factory option<br>Models BxxxE: Category C1 (Conducted emission)  |      |      |      |  |      | External options |      |
| Power Supply                         | Rated Voltage/Rated Frequency  | <ul style="list-style-type: none"> <li>Single-phase AC power supply 200 V to 240 V at 50/60 Hz</li> <li>DC power supply 270 V to 340 V</li> </ul>   |      |      |      |  |      |                  |      |
|                                      | Permitted Voltage Fluctuation  | -15% to +10%  |      |      |      |  |      |                  |      |
|                                      | Permitted Frequency Fluctuation  | ±5%   |      |      |      |  |      |                  |      |
|                                      | Input Power (kVA)  | HD  | 0.4  | 0.7  | 1.5  | 2.9  | 3.7  | 5.4              | 9.2  |
| ND                                   |  | 0.5   | 1.3  | 1.9  | 3.6  | 5.3  | 6.3  | -                |      |

\*1 The maximum applicable motor output complies with 208 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*2 The maximum applicable motor output is based on 4-pole, general-purpose 220 V motor ratings. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*3 The rated output capacity is calculated with a rated output voltage of 220 V.

## 10.4 Model Specifications (Three-Phase 200 V Class)

Table 10.3 Ratings (Three-Phase 200 V Class)

| Model                                |  | 2001  | 2002 | 2004 | 2006 |     |
|--------------------------------------|--|---|------|------|------|-----|
| Maximum Applicable Motor Output (kW) | HD *1  | 0.1   | 0.25 | 0.55 | 1.1  |     |
|                                      | ND *2  | 0.18  | 0.37 | 0.75 | 1.1  |     |
| Maximum Applicable Motor Output (HP) | HD *1  | 1/6   | 1/4  | 1/2  | 1    |     |
|                                      | ND *2  | 1/6   | 1/4  | 3/4  | 1.5  |     |
| Input                                | Rated Input Current (A)  | HD  | 0.7  | 1.5  | 2.9  | 5.8 |
|                                      |  | ND  | 1.1  | 1.9  | 3.9  | 7.3 |
| Output                               | Rated Output Capacity (kVA) *3   | HD  | 0.3  | 0.6  | 1.1  | 1.9 |
|                                      |  | ND  | 0.5  | 0.7  | 1.3  | 2.3 |
|                                      | Rated Output Current (A)   | HD  | 0.8  | 1.6  | 3.0  | 5.0 |
|                                      |  | ND  | 1.2  | 1.9  | 3.5  | 6   |
|                                      | Overload Tolerance   | <ul style="list-style-type: none"> <li>HD: 150% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> <li>ND: 110% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> </ul> <p><b>Note:</b><br/>Derating can be necessary for applications that start and stop frequently.</p> |      |      |      |     |
|                                      | Carrier Frequency  | HD: 10 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum.   |      |      |      |     |
| Maximum Output Voltage               | Three-phase 200 V to 240 V<br><b>Note:</b><br>The maximum output voltage is proportional to the input voltage.             |   |      |      |      |     |
| Maximum Output Frequency             | <ul style="list-style-type: none"> <li>EZOLV: 120 Hz</li> <li>AOLV/PM: 270 Hz</li> <li>V/f, OLV, OLV/PM: 590 Hz</li> </ul> |   |      |      |      |     |
| Measures for Harmonics               | DC reactor   | External options  |      |      |      |     |
| Braking Device                       | Braking Transistor   | Standard internal characteristics   |      |      |      |     |
| EMC Filter                           | EMC Filter IEC61800-3  | Factory option<br>Models 2xxxE: Category C3 (Conducted emission)  |      |      |      |     |
| Power Supply                         | Rated Voltage/Rated Frequency  | <ul style="list-style-type: none"> <li>Three-phase AC power supply 200 V to 240 V at 50/60 Hz</li> <li>DC power supply 270 V to 340 V</li> </ul>  |      |      |      |     |
|                                      | Permitted Voltage Fluctuation  | -15% to +10%  |      |      |      |     |
|                                      | Permitted Frequency Fluctuation  | ±5%   |      |      |      |     |
|                                      | Input Power (kVA)  | HD  | 0.3  | 0.7  | 1.3  | 2.7 |
| ND                                   |  | 0.5   | 1.2  | 1.8  | 3.3  |     |

\*1 The maximum applicable motor output complies with 208 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*2 The maximum applicable motor output is based on 4-pole, general-purpose 220 V motor ratings. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*3 The rated output capacity is calculated with a rated output voltage of 220 V.

Table 10.4 Ratings (Three-Phase 200 V Class)

| Model                                |                         | 2008 | 2010 | 2012 | 2018 |      |
|--------------------------------------|-------------------------|------|------|------|------|------|
| Maximum Applicable Motor Output (kW) | HD *1                   | 1.1  | 1.5  | 2.2  | 3    |      |
|                                      | ND *2                   | 1.5  | 2.2  | 3    | 4    |      |
| Maximum Applicable Motor Output (HP) | HD *1                   | 1.5  | 2    | 3    | 4    |      |
|                                      | ND *2                   | 2    | 3    | 4    | 5    |      |
| Input                                | Rated Input Current (A) | HD   | 7.0  | 7.5  | 11   | 15.6 |
|                                      |                         | ND   | 8.8  | 10.8 | 13.9 | 18.5 |

## 10.4 Model Specifications (Three-Phase 200 V Class)

| Model                    |  | 2008  | 2010   | 2012 | 2018 |      |
|--------------------------|--|---|--|------|------|------|
| Output                   | Rated Output Capacity (kVA) *3   | HD  | 2.6  | 3    | 4.2  | 5.3  |
|                          |  | ND  | 3  | 3.7  | 4.6  | 6.7  |
|                          | Rated Output Current (A)   | HD  | 6.9  | 8.0  | 11.0 | 14.0 |
|                          |  | ND  | 8.0  | 9.6  | 12.2 | 17.5 |
|                          | Overload Tolerance   | <ul style="list-style-type: none"> <li>HD: 150% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> <li>ND: 110% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> </ul> <p><b>Note:</b><br/>Derating can be necessary for applications that start and stop frequently.</p> |  |      |      |      |
|                          | Carrier Frequency  | HD: 8 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum.  |  |      |      |      |
|                          | Maximum Output Voltage   | Three-phase 200 V to 240 V<br><b>Note:</b><br>The maximum output voltage is proportional to the input voltage.  |  |      |      |      |
| Maximum Output Frequency | <ul style="list-style-type: none"> <li>V/f, OLV, OLV/PM: 590 Hz</li> <li>AOLV/PM: 270 Hz</li> <li>EZOLV: 120 Hz</li> </ul> |   |  |      |      |      |
| Measures for Harmonics   | DC reactor   | External options  |  |      |      |      |
| Braking Device           | Braking Transistor   | Standard internal characteristics   |  |      |      |      |
| EMC Filter               | EMC Filter<br>IEC61800-3   | Factory option<br>Models 2xxxE: Category C3 (Conducted emission)  |  |      |      |      |
| Power Supply             | Rated Voltage/Rated Frequency  |   | <ul style="list-style-type: none"> <li>Three-phase AC power supply 200 V to 240 V at 50/60 Hz</li> <li>DC power supply 270 V to 340 V</li> </ul> |      |      |      |
|                          | Permitted Voltage Fluctuation  |   | -15% to +10%   |      |      |      |
|                          | Permitted Frequency Fluctuation  |   | ±5%  |      |      |      |
|                          | Input Power (kVA)  | HD  | 3.2  | 3.4  | 5.0  | 7.1  |
| ND                       |  | 4.0   | 4.9  | 6.4  | 8.5  |      |

\*1 The maximum applicable motor output complies with 208 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*2 The maximum applicable motor output is based on 4-pole, general-purpose 220 V motor ratings. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*3 The rated output capacity is calculated with a rated output voltage of 220 V.

**Table 10.5 Ratings (Three-Phase 200 V Class)**

| Model                                |                         | 2021 | 2030 | 2042 | 2056 |    |
|--------------------------------------|-------------------------|------|------|------|------|----|
| Maximum Applicable Motor Output (kW) | HD *1                   | 4.0  | 5.5  | 7.5  | 11   |    |
|                                      | ND *2                   | 5.5  | 7.5  | 11   | 15   |    |
| Maximum Applicable Motor Output (HP) | HD *1                   | 5    | 7.5  | 10   | 15   |    |
|                                      | ND *2                   | 7.5  | 10   | 15   | 20   |    |
| Input                                | Rated Input Current (A) | HD   | 18.9 | 24   | 37   | 52 |
|                                      |                         | ND   | 24   | 37   | 52   | 68 |

| Model                    |  | 2021  | 2030 | 2042 | 2056 |      |
|--------------------------|--|---|------|------|------|------|
| Output                   | Rated Output Capacity (kVA) *3   | HD  | 6.7  | 9.5  | 12.6 | 17.9 |
|                          |  | ND  | 8    | 11.4 | 16   | 21.3 |
|                          | Rated Output Current (A)   | HD  | 17.6 | 25.0 | 33.0 | 47.0 |
|                          |  | ND  | 21   | 30   | 42   | 56   |
|                          | Overload Tolerance   | <ul style="list-style-type: none"> <li>HD: 150% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> <li>ND: 110% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> </ul> <p><b>Note:</b><br/>Derating can be necessary for applications that start and stop frequently.</p> |      |      |      |      |
|                          | Carrier Frequency  | HD: 8 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum.  |      |      |      |      |
|                          | Maximum Output Voltage   | Three-phase 200 V to 240 V<br><b>Note:</b><br>The maximum output voltage is proportional to the input voltage.  |      |      |      |      |
| Maximum Output Frequency | <ul style="list-style-type: none"> <li>V/f, OLV, OLV/PM: 590 Hz</li> <li>AOLV/PM: 270 Hz</li> <li>EZOLV: 120 Hz</li> </ul> |   |      |      |      |      |
| Measures for Harmonics   | DC reactor   | External options  |      |      |      |      |
| Braking Device           | Braking Transistor   | Standard internal characteristics   |      |      |      |      |
| EMC Filter               | EMC Filter IEC61800-3  | Factory option<br>Models 2xxxE: Category C3 (Conducted emission)  |      |      |      |      |
| Power Supply             | Rated Voltage/Rated Frequency  | <ul style="list-style-type: none"> <li>Three-phase AC power supply 200 V to 240 V at 50/60 Hz</li> <li>DC power supply 270 V to 340 V</li> </ul>  |      |      |      |      |
|                          | Permitted Voltage Fluctuation  | -15% to +10%  |      |      |      |      |
|                          | Permitted Frequency Fluctuation  | ±5%   |      |      |      |      |
|                          | Input Power (kVA)  | HD  | 8.7  | 11.0 | 17.0 | 24.0 |
| ND                       |  | 11  | 17.0 | 24.0 | 31.0 |      |

- \*1 The maximum applicable motor output complies with 208 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.
- \*2 The maximum applicable motor output is based on 4-pole, general-purpose 220 V motor ratings. The rated output current of the drive output amps must be equal to or more than the motor rated current.
- \*3 The rated output capacity is calculated with a rated output voltage of 220 V.

**Table 10.6 Ratings (Three-Phase 200 V Class)**

| Model                                |                         | 2070 | 2082 |     |
|--------------------------------------|-------------------------|------|------|-----|
| Maximum Applicable Motor Output (kW) | HD *1                   | 15   | 18.5 |     |
|                                      | ND *2                   | 18.5 | 22   |     |
| Maximum Applicable Motor Output (HP) | HD *1                   | 20   | 25   |     |
|                                      | ND *2                   | 25   | 30   |     |
| Input                                | Rated Input Current (A) | HD   | 68   | 96  |
|                                      |                         | ND   | 80   | 114 |

## 10.4 Model Specifications (Three-Phase 200 V Class)

| Model                    |  | 2070  | 2082   |      |
|--------------------------|--|---|--|------|
| Output                   | Rated Output Capacity (kVA) *3   | HD  | 22.9   | 28.6 |
|                          |  | ND  | 26.7   | 31.2 |
|                          | Rated Output Current (A)   | HD  | 60.0   | 75.0 |
|                          |  | ND  | 70   | 82   |
|                          | Overload Tolerance   | <ul style="list-style-type: none"> <li>HD: 150% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> <li>ND: 110% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> </ul> <p><b>Note:</b><br/>Derating can be necessary for applications that start and stop frequently.</p> |  |      |
|                          | Carrier Frequency  | HD: 8 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum.  |  |      |
|                          | Maximum Output Voltage   | Three-phase 200 V to 240 V<br><b>Note:</b><br>The maximum output voltage is proportional to the input voltage.  |  |      |
| Maximum Output Frequency | <ul style="list-style-type: none"> <li>V/f, OLV, OLV/PM: 590 Hz</li> <li>AOLV/PM: 270 Hz</li> <li>EZOLV: 120 Hz</li> </ul> |   |  |      |
| Measures for Harmonics   | DC reactor   | External options  |  |      |
| Braking Device           | Braking Transistor   | Standard internal characteristics   |  |      |
| EMC Filter               | EMC Filter<br>IEC61800-3   | Factory option<br>Models 2xxxE: Category C3 (Conducted emission)  |  |      |
| Power Supply             | Rated Voltage/Rated Frequency  |   | <ul style="list-style-type: none"> <li>Three-phase AC power supply 200 V to 240 V at 50/60 Hz</li> <li>DC power supply 270 V to 340 V</li> </ul> |      |
|                          | Permitted Voltage Fluctuation  |   | -15% to +10%   |      |
|                          | Permitted Frequency Fluctuation  |   | ±5%  |      |
|                          | Input Power (kVA)  | HD  | 31.0   | 44.0 |
| ND                       |  | 37.0  | 52.0   |      |

\*1 The maximum applicable motor output complies with 208 V motor ratings as specified in NEC Table 430.250. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*2 The maximum applicable motor output is based on 4-pole, general-purpose 220 V motor ratings. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*3 The rated output capacity is calculated with a rated output voltage of 220 V.

## 10.5 Model Specifications (Three-Phase 400 V Class)

Table 10.7 Ratings (Three-Phase 400 V Class)

| Model                                   |                         | Duty Rating  | 4001  | 4002             | 4004 | 4005 | 4007 | 4009 | 4012 |
|---|-------------------------|--|---|------------------|------|------|------|------|------|
| Maximum Applicable Motor Output *1 (kW) |                         | HD   | 0.37  | 0.55             | 1.1  | 1.5  | 2.2  | 3.0  | 4.0  |
|   |                         | ND   | 0.37  | 0.75             | 1.5  | 2.2  | 3.0  | 4.0  | 5.5  |
| Maximum Applicable Motor Output *1 (HP) |                         | HD   | 1/2   | 3/4              | 2    | 3    | 3    | 4    | 5    |
|   |                         | ND   | 1/2   | 1                | 2    | 3    | 4    | 5    | 7.5  |
| Input                                   | Rated Input Current (A) | HD   | 1.2   | 1.8              | 3.2  | 4.4  | 6.0  | 8.2  | 10.4 |
|   |                         | ND   | 1.2   | 2.1              | 4.3  | 5.9  | 8.1  | 9.4  | 14   |
| Rated Output Capacity *2 (kVA)          |                         | HD   | 0.9   | 1.4              | 2.6  | 3.7  | 4.3  | 5.6  | 7    |
|   |                         | ND   | 0.9   | 1.6              | 3.1  | 4.1  | 5.4  | 6.8  | 9.1  |
| Rated Output Current (A)                |                         | HD   | 1.2   | 1.8              | 3.4  | 4.8  | 5.6  | 7.3  | 9.2  |
|   |                         | ND   | 1.2   | 2.1              | 4.1  | 5.4  | 7.1  | 8.9  | 11.9 |
| Output                                  |                         | Overload Tolerance   | <ul style="list-style-type: none"> <li>• HD: 150% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> <li>• ND: 110% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> </ul> <b>Note:</b><br>Derating can be necessary for applications that start and stop frequently. |                  |      |      |      |      |      |
|   |                         | Carrier Frequency  | HD: 8 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum.  |                  |      |      |      |      |      |
|   |                         | Maximum Output Voltage   | Three-phase 380 V to 480 V<br><b>Note:</b><br>The maximum output voltage is proportional to the input voltage.  |                  |      |      |      |      |      |
|   |                         | Maximum Output Frequency   | <ul style="list-style-type: none"> <li>• V/f, OLV, OLV/PM: 590 Hz</li> <li>• AOLV/PM: 270 Hz</li> <li>• EZOLV: 120 Hz</li> </ul>  |                  |      |      |      |      |      |
|   |                         | Measures for Harmonics   | DC reactor  | External options |      |      |      |      |      |
| Braking Device                          | Braking Transistor      | Standard internal characteristics                                |   |                  |      |      |      |      |      |
| EMC Filter                              | EMC Filter IEC61800-3   | Factory option<br>Models 4xxxE: Category C2 (Conducted emission) |   |                  |      |      |      |      |      |
| Power supply                            |                         | Rated Voltage/Rated Frequency                                    | Three-phase AC power supply 380 V to 480 V at 50/60 Hz  |                  |      |      |      |      |      |
|   |                         | Permitted Voltage Fluctuation                                    | -15% to +10%  |                  |      |      |      |      |      |
|   |                         | Permitted Frequency Fluctuation                                  | ±5%   |                  |      |      |      |      |      |
|   |                         | Input Power (kVA)  | HD  | 1.1              | 1.6  | 2.9  | 4    | 5.5  | 7.5  |
| ND                                      | 1.1                     |  | 1.9   | 3.9              | 5.4  | 7.4  | 8.6  | 13   |      |

\*1 The maximum applicable motor output complies with 380 V motor ratings as specified in Annex G of IEC 60947-4-1. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*2 The rated output capacity is calculated with a rated output voltage of 440 V.

Table 10.8 Ratings (Three-Phase 400 V Class)

| Model                                   |                         | Duty Rating | 4018 | 4023 | 4031 | 4038 | 4044 | 4060 |
|---|-------------------------|-------------|------|------|------|------|------|------|
| Maximum Applicable Motor Output *1 (kW) |                         | HD          | 5.5  | 7.5  | 11.0 | 15.0 | 18.5 | 22.0 |
|   |                         | ND          | 7.5  | 11.0 | 15.0 | 18.5 | 22.0 | 30.0 |
| Maximum Applicable Motor Output *1 (HP) |                         | HD          | 10   | 10   | 15   | 20   | 25   | 30   |
|   |                         | ND          | 10   | 15   | 20   | 25   | 30   | 40   |
| Input                                   | Rated Input Current (A) | HD          | 15   | 20   | 29   | 39   | 50.5 | 59.7 |
|   |                         | ND          | 20   | 24   | 38   | 44   | 59.7 | 80.7 |

## 10.5 Model Specifications (Three-Phase 400 V Class)

| Model                    |  | Duty Rating   | 4018   | 4023 | 4031 | 4038 | 4044 | 4060 |
|--------------------------|--|---|--|------|------|------|------|------|
| Output                   | Rated Output Capacity (kVA) <sup>*2</sup>  | HD  | 11.3   | 13.7 | 18.3 | 23.6 | 29.7 | 34.3 |
|                          |  | ND  | 13.3   | 17.8 | 23.6 | 29   | 33.5 | 45.7 |
|                          | Rated Output Current (A)   | HD  | 14.8   | 18.0 | 24.0 | 31.0 | 39.0 | 45.0 |
|                          |  | ND  | 17.5   | 23.4 | 31.0 | 38.0 | 44.0 | 60   |
|                          | Overload Tolerance   | <ul style="list-style-type: none"> <li>HD: 150% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> <li>ND: 110% of the rated output current for 60 seconds. The permitted frequency of overload is one time each 10 minutes.</li> </ul> <p><b>Note:</b><br/>Derating can be necessary for applications that start and stop frequently.</p> |  |      |      |      |      |      |
|                          | Carrier Frequency  | HD: 8 kHz without derating the drive capacity.<br>ND: 2 kHz without derating the drive capacity.<br>Derate the drive capacity to use values to 15 kHz maximum.  |  |      |      |      |      |      |
|                          | Maximum Output Voltage   | Three-phase 380 V to 480 V<br><b>Note:</b><br>The maximum output voltage is proportional to the input voltage.  |  |      |      |      |      |      |
| Maximum Output Frequency | <ul style="list-style-type: none"> <li>V/f, OLV, OLV/PM: 590 Hz</li> <li>AOLV/PM: 270 Hz</li> <li>EZOLV: 120 Hz</li> </ul> |   |  |      |      |      |      |      |
| Measures for Harmonics   | DC reactor   | External options  |  |      |      |      |      |      |
| Braking Device           | Braking Transistor   | Standard internal characteristics   |  |      |      |      |      |      |
| EMC Filter               | EMC Filter IEC61800-3  | Factory option<br>Models 4xxxE: Category C2 (Conducted emission)  |  |      |      |      |      |      |
| Power supply             | Rated Voltage/Rated Frequency  |   | Three-phase AC power supply 380 V to 480 V at 50/60 Hz |      |      |      |      |      |
|                          | Permitted Voltage Fluctuation  |   | -15% to +10%   |      |      |      |      |      |
|                          | Permitted Frequency Fluctuation  |   | ±5%  |      |      |      |      |      |
|                          | Input Power (kVA)  | HD  | 14   | 18   | 27   | 36   | 47   | 55   |
| ND                       |  | 18  | 22   | 35   | 40   | 55   | 74   |      |

\*1 The maximum applicable motor output complies with 380 V motor ratings as specified in Annex G of IEC 60947-4-1. The rated output current of the drive output amps must be equal to or more than the motor rated current.

\*2 The rated output capacity is calculated with a rated output voltage of 440 V.



## 10.6 Drive Specifications

**Note:**

- To get the OLV specifications, do Rotational Auto-Tuning.
- To get the longest product life, install the drive in an environment that meets the necessary specifications.

**Table 10.9 Control Characteristics**

| Item   | Specification  |
|--|--|
| Control Methods                              | <ul style="list-style-type: none"> <li>• V/f Control</li> <li>• Open Loop Vector</li> <li>• PM Open Loop Vector</li> <li>• PM Advanced Open Loop Vector</li> <li>• EZ Vector Control</li> </ul>  |
| Frequency Control Range                      | <ul style="list-style-type: none"> <li>• V/f, OLV, and OLV/PM: 0.01 Hz to 590 Hz</li> <li>• AOLV/PM: 0.01 Hz to 270 Hz</li> <li>• EZOLV: 0.01 Hz to 120 Hz</li> </ul>  |
| Frequency Accuracy (Temperature Fluctuation) | Digital inputs: $\pm 0.01\%$ of the maximum output frequency ( $-10\text{ }^{\circ}\text{C}$ to $+40\text{ }^{\circ}\text{C}$ ( $14\text{ }^{\circ}\text{F}$ to $104\text{ }^{\circ}\text{F}$ ))<br>Analog inputs: In $\pm 0.1\%$ of the maximum output frequency ( $25\text{ }^{\circ}\text{C}$ $\pm 10\text{ }^{\circ}\text{C}$ ( $77\text{ }^{\circ}\text{F}$ $\pm 18\text{ }^{\circ}\text{F}$ ))   |
| Frequency Setting Resolution                 | Digital inputs: 0.01 Hz<br>Analog inputs: 1/2048 of the maximum output frequency (11-bit)  |
| Output Frequency Resolution                  | 0.001 Hz   |
| Frequency Setting Signal                     | Main speed frequency reference: 0 Vdc to 10 Vdc (20 k $\Omega$ ), 4 mA to 20 mA (250 $\Omega$ ), 0 mA to 20 mA (250 $\Omega$ )<br>Main speed reference: Pulse train input (maximum 32 kHz)   |
| Starting Torque                              | <ul style="list-style-type: none"> <li>• V/f: 150%/3 Hz</li> <li>• OLV: 150%/1 Hz</li> <li>• OLV/PM: 100%/5% speed</li> <li>• AOLV/PM: 100%/0 min<sup>-1</sup> (when high frequency injection is enabled)</li> <li>• EZOLV: 100%/10% speed</li> </ul> <p><b>Note:</b><br/>Correctly select the drive and motor capacity for this starting torque in these control methods:</p> <ul style="list-style-type: none"> <li>• OLV</li> <li>• AOLV/PM</li> </ul>  |
| Speed Control Range                          | <ul style="list-style-type: none"> <li>• V/f: 1:40</li> <li>• OLV: 1:100</li> <li>• OLV/PM: 1:10</li> <li>• AOLV/PM: 1:100 (when high frequency injection is enabled)</li> <li>• EZOLV: 1:10</li> </ul>  |
| Zero Speed Control                           | Possible in AOLV/PM control methods.   |
| Torque Limits                                | You can use parameter settings for different limits in four quadrants in these control methods: <ul style="list-style-type: none"> <li>• OLV</li> <li>• AOLV/PM</li> <li>• EZOLV</li> </ul>  |
| Acceleration and Deceleration Times          | 0.0 s to 6000.0 s<br>The drive can set four pairs of different acceleration and deceleration times.  |
| Braking Torque                               | <p>Approximately 20% without a resistor<br/>Approximately 125% with a dynamic braking option</p> <ul style="list-style-type: none"> <li>• Short-time average deceleration torque<br/>Motor output 0.1/0.2 kW: over 150%<br/>Motor output 0.4/0.75 kW: over 100%<br/>Motor output 1.5 kW: over 50%<br/>Motor output 2.2 kW and larger: over 20%, Overexcitation Braking/High Slip Braking allow for approximately 40%</li> </ul> <p><b>WARNING!</b><br/>Set L3-04 = 0 [Stall Prevention during Decel = Disabled] when you operate the drive with:</p> <ul style="list-style-type: none"> <li>• a regenerative converter</li> <li>• regenerative unit</li> <li>• braking resistor</li> <li>• braking resistor unit.</li> </ul> <p><i>If you set the parameter incorrectly, the drive can decelerate for too long and cause serious injury or death.</i></p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• Short-time average deceleration torque refers to the torque needed to decelerate the motor (uncoupled from the load) from the rated speed to zero. Motor characteristics can change the actual specifications.</li> <li>• Motor characteristics change the continuous regenerative torque and short-time average deceleration torque for motors 2.2 kW and larger.</li> </ul> |

## 10.6 Drive Specifications

| Item                   | Specification  |
|------------------------|--|
| V/f Characteristics    | Select from 15 pre-defined V/f patterns, or a user-set V/f pattern.  |
| Main Control Functions | Feed Forward Control, Restart After Momentary Power Loss, Speed Search, Overtorque Detection, Torque Limit, 17 Step Speed (max.), Accel/Decel Switch, S-curve Acceleration/Deceleration, 3-wire Sequence, Auto-Tuning (Rotational and Stationary), Dwell Function, Cooling Fan ON/OFF Switch, Slip Compensation, Torque Compensation, Frequency Jump, Upper/Lower Limits for Frequency Reference, DC Injection Braking at Start and Stop, Overexcitation Braking, High Slip Braking, PID Control (with Sleep Function), Energy Saving Control, MEMOBUS/Modbus Communications (RS-485 max, 115.2 kbps), Auto Restart, Application Presets, DriveWorksEZ (customized functions), Parameter Backup Function, Online Tuning, KEB, Overexcitation Deceleration, Overvoltage Suppression, High Frequency Injection, etc. |

**Table 10.10 Protection Functions**

| Item                                 | Specification  |
|--------------------------------------|--|
| Motor Protection                     | Electronic thermal overload protection   |
| Momentary Overcurrent Protection     | Drive stops when the output current is more than 200% of the HD output current.  |
| Overload Protection                  | Drive stops when the output current is more than these overload tolerances: <ul style="list-style-type: none"> <li>• HD: 150% of the rated output current for 60 seconds.</li> <li>• ND: 110% of the rated output current for 60 seconds.</li> </ul> <b>Note:</b><br>If output frequency < 6 Hz, the drive can trigger the overload protection function when the output current is in the overload tolerance range.  |
| Overvoltage Protection               | 200 V class: Stops when the DC bus voltage is more than approximately 410 V<br>400 V class: Stops when the DC bus voltage is more than approximately 820 V   |
| Undervoltage Protection              | Single-phase 200 V class: Stops when the DC bus voltage decreases to less than approximately 160 V<br>Three-phase 200 V class: Stops when the DC bus voltage decreases to less than approximately 190 V<br>Three-phase 400 V class: Stops when the DC bus voltage decreases to less than approximately 380 V   |
| Momentary Power Loss Ride-thru       | Stops when power loss is longer than 15 ms and continues operation if power loss is shorter than 2 s (depending on parameter settings). <b>Note:</b> <ul style="list-style-type: none"> <li>• Load size and motor speed can cause the stop time to be shorter.</li> <li>• Drive capacity will change the continuous operation time. A Momentary Power Loss Recovery Unit is necessary to continue operation through a 2 s power loss on models 2001 to 2042 and 4001 to 4023.</li> </ul> |
| Heatsink Overheat Protection         | Thermistor   |
| Braking Resistor Overheat Protection | Overheat detection for braking resistor (optional ERF-type, 3% ED)   |
| Stall Prevention                     | Stall prevention is available during acceleration, deceleration, and during run.   |
| Ground Fault Protection              | Electronic circuit protection <b>Note:</b> <p>This protection detects ground faults during run. The drive will not provide protection when:</p> <ul style="list-style-type: none"> <li>• There is a low-resistance ground fault for the motor cable or terminal block</li> <li>• Energizing the drive when there is a ground fault.</li> </ul>   |
| DC Bus Charge LED                    | Charge LED illuminates when DC bus voltage is more than 50 V.  |

**Table 10.11 Environment**

| Item                        | Specification  |
|-----------------------------|--|
| Area of Use                 | Indoors  |
| Power Supply                | Overvoltage Category III   |
| Ambient Temperature Setting | IP20/UL Open Type: -10°C to +50 °C (14 °F to 122 °F)<br>IP20/UL Type I: -10 °C to +40 °C (14 °F to 104 °F) <ul style="list-style-type: none"> <li>• When you install the drive in an enclosure, use a cooling fan or air conditioner to keep the internal air temperature in the permitted range.</li> <li>• Do not let the drive freeze.</li> </ul>                                       |
| Humidity                    | 95% RH or less<br>Do not let condensation form on the drive.   |
| Storage Temperature         | -20 °C to +70 °C (-4 °F to +158 °F) (short-term temperature during transportation)   |
| Surrounding Area            | Pollution degree 2 or less<br>Install the drive in an area without: <ul style="list-style-type: none"> <li>• Oil mist, corrosive or flammable gas, or dust</li> <li>• Metal powder, oil, water, or other unwanted materials</li> <li>• Radioactive materials or flammable materials, including wood</li> <li>• Harmful gas or fluids</li> <li>• Salt</li> <li>• Direct sunlight</li> </ul> |

| Item                     | Specification  |
|--------------------------|--|
| Altitude                 | 1000 m (3281 ft) Maximum<br><b>Note:</b><br>Derate the output current by 1% for each 100 m (328 ft) to install the drive in altitudes between 1000 m to 4000 m (3281 ft to 13123 ft).<br>It is not necessary to derate the rated voltage in these conditions:<br>• Installing the drive at 2000 m (6562 ft) or lower<br>• Installing the drive between 2000 m to 4000 m (6562 ft to 13123 ft) and grounding the neutral point on the power supply.<br>Contact Yaskawa or your nearest sales representative when not grounding the neutral point. |
| Vibration                | <ul style="list-style-type: none"> <li>• 10 Hz to 20 Hz: 1 G (9.8 m/s<sup>2</sup>, 32.15 ft/s<sup>2</sup>)</li> <li>• 20 Hz to 55 Hz: 0.6 G (5.9 m/s<sup>2</sup>, 19.36 ft/s<sup>2</sup>)</li> </ul>   |
| Installation Orientation | Install the drive vertically for sufficient airflow to cool the drive.   |

Table 10.12 Standard

| Item                        | Specification   |
|-----------------------------|---|
| Harmonized Standard         | <ul style="list-style-type: none"> <li>• UL 61800-5-1</li> <li>• EN 61800-3</li> <li>• EN 61800-5-1</li> <li>• Two Safe Disable inputs and one EDM output according to EN ISO 13849-1 (Cat.3, PL e), EN 61800-5-2 SIL3</li> </ul> |
| Enclosure protection design | IP20/UL Open Type<br>IP20/UL Type 1<br><b>Note:</b><br>Install a UL Type 1 kit (optional) on an IP20/UL Open Type drive to change the drive to an IP20/UL Type 1 enclosure.   |

## 10.7 Drive Derating

You must derate the drive capacity to operate the drive above the rated temperature, altitude, and default carrier frequency.

### ◆ Carrier Frequency Settings and Rated Current Values

The tables in this section show how the drive rated output current changes when the *C6-02 [Carrier Frequency Selection]* value changes. The output current value changes linearly as the carrier frequency changes. You can use the values from the tables to calculate a frequency that is not shown.

#### ■ Single-Phase 200 V Class

**Table 10.13 Carrier Frequency and Rated Current Derating (Single-Phase 200 V)**

| Model | Rated Current (A)                     |       |       |        |          |        |  |       |       |        |          |        |
|-------|---------------------------------------|-------|-------|--------|----------|--------|--|-------|-------|--------|----------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |        |          |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |        |          |        |
|       | 2 kHz                                 | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz | 2 kHz                                  | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz |
| B001  | 0.8                                   | 0.8   | 0.8   | 0.8    | 0.7      | 0.6    | 1.2                                    | 1.1   | 1.0   | 0.9    | 0.8      | 0.6    |
| B002  | 1.6                                   | 1.6   | 1.6   | 1.6    | 1.4      | 1.3    | 1.9                                    | 1.9   | 1.7   | 1.6    | 1.4      | 1.3    |
| B004  | 3.0                                   | 3.0   | 3.0   | 3.0    | 2.7      | 2.4    | 3.5                                    | 3.5   | 3.2   | 3.0    | 2.7      | 2.4    |
| B006  | 5.0                                   | 5.0   | 5.0   | 5.0    | 4.5      | 4.0    | 6.0                                    | 6.0   | 5.4   | 5.0    | 4.5      | 4.0    |
| B010  | 8.0                                   | 8.0   | 8.0   | 7.5    | 7.0      | 6.4    | 9.6                                    | 9.1   | 8.3   | 7.7    | 7.1      | 6.4    |
| B012  | 11.0                                  | 11.0  | 11.0  | 10.4   | 9.6      | 8.8    | 12.2                                   | 11.9  | 11.0  | 10.4   | 9.6      | 8.8    |
| B018  | 17.6                                  | 17.6  | 17.6  | 16.6   | 15.3     | 14.1   | 21.0                                   | 19.8  | 18.1  | 17.0   | 15.5     | 14.1   |

**Table 10.14 AOLV/PM Carrier Frequency and Rated Current Derating (Single-Phase 200 V)**

| Model | Rated Current (A)                     |       |       |       |        |        |  |       |       |       |        |        |
|-------|---------------------------------------|-------|-------|-------|--------|--------|--|-------|-------|-------|--------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |       |        |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |       |        |        |
|       | 2 kHz                                 | 4 kHz | 6 kHz | 8 kHz | 10 kHz | 12 kHz | 2 kHz                                  | 4 kHz | 6 kHz | 8 kHz | 10 kHz | 12 kHz |
| B001  | 0.8                                   | 0.8   | 0.8   | 0.7   | 0.6    | 0.5    | 1.2                                    | 1.1   | 0.9   | 0.8   | 0.6    | 0.5    |
| B002  | 1.6                                   | 1.6   | 1.6   | 1.5   | 1.3    | 1.1    | 1.9                                    | 1.9   | 1.7   | 1.5   | 1.3    | 1.1    |
| B004  | 3.0                                   | 3.0   | 3.0   | 2.8   | 2.4    | 2.0    | 3.5                                    | 3.5   | 3.1   | 2.8   | 2.4    | 2.0    |
| B006  | 5.0                                   | 5.0   | 5.0   | 4.6   | 4.0    | 3.4    | 6.0                                    | 5.8   | 5.2   | 4.6   | 4.0    | 3.4    |
| B010  | 8.0                                   | 8.0   | 7.8   | 7.1   | 6.4    | 5.7    | 9.6                                    | 8.8   | 8.0   | 7.2   | 6.4    | 5.6    |
| B012  | 11.0                                  | 11.0  | 10.7  | 9.7   | 8.8    | 7.9    | 12.2                                   | 11.6  | 10.7  | 9.7   | 8.8    | 7.9    |
| B018  | 17.6                                  | 17.6  | 17.1  | 15.6  | 14.1   | 12.6   | 21.0                                   | 19.3  | 17.5  | 15.8  | 14.1   | 12.3   |

#### ■ Three-Phase 200 V Class

**Table 10.15 Carrier Frequency and Rated Current Derating (Three-Phase 200 V)**

| Model | Rated Current (A)                     |       |       |        |          |        |  |       |       |        |          |        |
|-------|---------------------------------------|-------|-------|--------|----------|--------|--|-------|-------|--------|----------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |        |          |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |        |          |        |
|       | 2 kHz                                 | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz | 2 kHz                                  | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz |
| 2001  | 0.8                                   | 0.8   | 0.8   | 0.8    | 0.7      | 0.6    | 1.2                                    | 1.1   | 1.0   | 0.9    | 0.8      | 0.6    |
| 2002  | 1.6                                   | 1.6   | 1.6   | 1.6    | 1.4      | 1.3    | 1.9                                    | 1.9   | 1.7   | 1.6    | 1.4      | 1.3    |
| 2004  | 3.0                                   | 3.0   | 3.0   | 3.0    | 2.7      | 2.4    | 3.5                                    | 3.5   | 3.2   | 3.0    | 2.7      | 2.4    |
| 2006  | 5.0                                   | 5.0   | 5.0   | 5.0    | 4.5      | 4      | 6.0                                    | 6.0   | 5.4   | 5.0    | 4.5      | 4      |
| 2008  | 6.9                                   | 6.9   | 6.9   | 6.5    | 6.0      | 5.5    | 8.0                                    | 7.6   | 7.0   | 6.6    | 6.0      | 5.5    |
| 2010  | 8.0                                   | 8.0   | 8.0   | 7.5    | 7.0      | 6.4    | 9.6                                    | 9.1   | 8.3   | 7.7    | 7.1      | 6.4    |
| 2012  | 11.0                                  | 11.0  | 11.0  | 10.4   | 9.6      | 8.8    | 12.2                                   | 11.9  | 11.0  | 10.4   | 9.6      | 8.8    |
| 2018  | 14.0                                  | 14.0  | 14.0  | 13.2   | 12.2     | 11.2   | 17.5                                   | 16.5  | 14.9  | 13.8   | 12.5     | 11.2   |

| Model | Rated Current (A)                     |       |       |        |          |        |  |       |       |        |          |        |
|-------|---------------------------------------|-------|-------|--------|----------|--------|--|-------|-------|--------|----------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |        |          |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |        |          |        |
|       | 2 kHz                                 | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz | 2 kHz                                  | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz |
| 2021  | 17.6                                  | 17.6  | 17.6  | 16.6   | 15.3     | 14.1   | 21.0                                   | 19.8  | 18.1  | 17.0   | 15.5     | 14.1   |
| 2030  | 25.0                                  | 25.0  | 25.0  | 23.6   | 21.8     | 20     | 30.0                                   | 28.3  | 25.8  | 24.2   | 22.1     | 20     |
| 2042  | 33.0                                  | 33.0  | 33.0  | 31.1   | 28.8     | 26     | 42.0                                   | 39.4  | 35.5  | 32.9   | 29.7     | 26     |
| 2056  | 47.0                                  | 47.0  | 47.0  | 44.3   | 41.0     | 38     | 56.0                                   | 52.9  | 48.3  | 45.3   | 41.4     | 38     |
| 2070  | 60.0                                  | 60.0  | 60.0  | 56.6   | 52.3     | 48     | 70.0                                   | 66.3  | 60.8  | 57.2   | 52.6     | 48     |
| 2082  | 75.0                                  | 75.0  | 75.0  | 70.7   | 65.4     | 60     | 82.0                                   | 81.4  | 75.0  | 70.7   | 65.4     | 60     |

Table 10.16 AOLV/PM Carrier Frequency and Rated Current Derating (Three-Phase 200 V)

| Model | Rated Current (A)                     |       |       |       |        |        |  |       |       |       |        |        |
|-------|---------------------------------------|-------|-------|-------|--------|--------|--|-------|-------|-------|--------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |       |        |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |       |        |        |
|       | 2 kHz                                 | 4 kHz | 6 kHz | 8 kHz | 10 kHz | 12 kHz | 2 kHz                                  | 4 kHz | 6 kHz | 8 kHz | 10 kHz | 12 kHz |
| 2001  | 0.8                                   | 0.8   | 0.8   | 0.7   | 0.6    | 0.5    | 1.2                                    | 1.1   | 0.9   | 0.8   | 0.6    | 0.5    |
| 2002  | 1.6                                   | 1.6   | 1.6   | 1.5   | 1.3    | 1.1    | 1.9                                    | 1.9   | 1.7   | 1.5   | 1.3    | 1.1    |
| 2004  | 3.0                                   | 3.0   | 3.0   | 2.8   | 2.4    | 2.0    | 3.5                                    | 3.5   | 3.1   | 2.8   | 2.4    | 2.0    |
| 2006  | 5.0                                   | 5.0   | 5.0   | 4.6   | 4.0    | 3.4    | 6.0                                    | 5.8   | 5.2   | 4.6   | 4.0    | 3.4    |
| 2008  | 6.9                                   | 6.9   | 6.7   | 6.1   | 5.5    | 4.9    | 8.0                                    | 7.4   | 6.8   | 6.1   | 5.5    | 4.9    |
| 2010  | 8.0                                   | 8.0   | 7.8   | 7.1   | 6.4    | 5.7    | 9.6                                    | 8.8   | 8.0   | 7.2   | 6.4    | 5.6    |
| 2012  | 11.0                                  | 11.0  | 10.7  | 9.7   | 8.8    | 7.9    | 12.2                                   | 11.6  | 10.7  | 9.7   | 8.8    | 7.9    |
| 2018  | 14.0                                  | 14.0  | 13.6  | 12.4  | 11.2   | 10.0   | 17.5                                   | 15.9  | 14.4  | 12.8  | 11.2   | 9.6    |
| 2021  | 17.6                                  | 17.6  | 17.1  | 15.6  | 14.1   | 12.6   | 21.0                                   | 19.3  | 17.5  | 15.8  | 14.1   | 12.4   |
| 2030  | 25.0                                  | 25.0  | 24.3  | 22.1  | 20.0   | 17.9   | 30.0                                   | 27.5  | 25.0  | 22.5  | 20.0   | 17.5   |
| 2042  | 33.0                                  | 33.0  | 32.1  | 29.2  | 26.4   | 23.6   | 42.0                                   | 38.1  | 34.2  | 30.3  | 26.4   | 22.5   |
| 2056  | 47.0                                  | 47.0  | 45.7  | 41.6  | 37.6   | 33.6   | 56.0                                   | 51.4  | 46.8  | 42.2  | 37.6   | 33.0   |
| 2070  | 60.0                                  | 60.0  | 58.3  | 53.1  | 48.0   | 42.9   | 70.0                                   | 64.5  | 59.0  | 53.5  | 48.0   | 42.5   |
| 2082  | 75.0                                  | 75.0  | 72.9  | 66.4  | 60.0   | 53.6   | 82.0                                   | 79.3  | 72.9  | 66.4  | 60.0   | 53.6   |

### ■ Three-Phase 400 V Class

Table 10.17 Carrier Frequency and Rated Current Derating (Three-Phase 400 V)

| Model | Rated Current (A)                     |       |       |        |          |        |  |       |       |        |          |        |
|-------|---------------------------------------|-------|-------|--------|----------|--------|--|-------|-------|--------|----------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |        |          |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |        |          |        |
|       | 2 kHz                                 | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz | 2 kHz                                  | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz |
| 4001  | 1.2                                   | 1.2   | 1.2   | 1.1    | 0.9      | 0.7    | 1.2                                    | 1.2   | 1.2   | 1.1    | 0.9      | 0.7    |
| 4002  | 1.8                                   | 1.8   | 1.8   | 1.6    | 1.3      | 1.1    | 2.1                                    | 2.1   | 1.8   | 1.6    | 1.3      | 1.1    |
| 4004  | 3.4                                   | 3.4   | 3.4   | 3.0    | 2.5      | 2.0    | 4.1                                    | 4.0   | 3.4   | 3.0    | 2.5      | 2.0    |
| 4005  | 4.8                                   | 4.8   | 4.8   | 4.3    | 3.6      | 2.9    | 5.4                                    | 5.4   | 4.8   | 4.2    | 3.6      | 2.9    |
| 4007  | 5.5                                   | 5.5   | 5.5   | 4.9    | 4.1      | 3.3    | 7.1                                    | 6.5   | 5.5   | 4.9    | 4.1      | 3.3    |
| 4009  | 7.3                                   | 7.3   | 7.3   | 6.5    | 5.4      | 4.4    | 8.9                                    | 8.6   | 7.3   | 6.5    | 5.4      | 4.4    |
| 4012  | 9.2                                   | 9.2   | 9.2   | 8.1    | 6.8      | 5.5    | 11.9                                   | 10.8  | 9.2   | 8.2    | 6.8      | 5.5    |
| 4018  | 14.8                                  | 14.8  | 14.8  | 13.1   | 11.0     | 8.9    | 17.5                                   | 17.0  | 14.5  | 12.8   | 10.8     | 8.7    |
| 4023  | 18.0                                  | 18.0  | 18.0  | 13.1   | 11.0     | 11     | 23.4                                   | 21.3  | 18.2  | 16.1   | 13.4     | 11     |
| 4031  | 24.0                                  | 24.0  | 24.0  | 21.3   | 17.8     | 14     | 31.0                                   | 28.2  | 24.1  | 21.3   | 17.9     | 14     |
| 4038  | 31.0                                  | 31.0  | 31.0  | 27.5   | 23.0     | 19     | 38.0                                   | 36.3  | 31.0  | 27.5   | 23.0     | 19     |

## 10.7 Drive Derating

| Model | Rated Current (A)                     |       |       |        |          |        |  |       |       |        |          |        |
|-------|---------------------------------------|-------|-------|--------|----------|--------|--|-------|-------|--------|----------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |        |          |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |        |          |        |
|       | 2 kHz                                 | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz | 2 kHz                                  | 5 kHz | 8 kHz | 10 kHz | 12.5 kHz | 15 kHz |
| 4044  | 39.0                                  | 39.0  | 39.0  | 34.5   | 29.0     | 23     | 44.0                                   | 44.0  | 39.0  | 34.5   | 29.0     | 23     |
| 4060  | 45.0                                  | 45.0  | 45.0  | 39.9   | 33.4     | 27     | 60.0                                   | 54.5  | 46.3  | 40.8   | 33.9     | 27     |

**Table 10.18 AOLV/PM Carrier Frequency and Rated Current Derating (Three-Phase 400 V)**

| Model | Rated Current (A)                     |       |       |       |        |        |  |       |       |       |        |        |
|-------|---------------------------------------|-------|-------|-------|--------|--------|--|-------|-------|-------|--------|--------|
|       | Heavy Duty Rating (HD)<br>[C6-01 = 0] |       |       |       |        |        | Normal Duty Rating (ND)<br>[C6-01 = 1] |       |       |       |        |        |
|       | 2 kHz                                 | 4 kHz | 6 kHz | 8 kHz | 10 kHz | 12 kHz | 2 kHz                                  | 4 kHz | 6 kHz | 8 kHz | 10 kHz | 12 kHz |
| 4001  | 1.2                                   | 1.2   | 1.1   | 0.9   | 0.7    | 0.5    | 1.2                                    | 1.2   | 1.1   | 0.9   | 0.7    | 0.5    |
| 4002  | 1.8                                   | 1.8   | 1.7   | 1.4   | 1.1    | 0.8    | 2.1                                    | 2.0   | 1.7   | 1.4   | 1.1    | 0.8    |
| 4004  | 3.4                                   | 3.4   | 3.2   | 2.6   | 2.0    | 1.5    | 4.1                                    | 3.8   | 3.2   | 2.6   | 2.0    | 1.5    |
| 4005  | 4.8                                   | 4.8   | 4.5   | 3.7   | 2.9    | 2.1    | 5.4                                    | 5.3   | 4.5   | 3.7   | 2.9    | 2.1    |
| 4007  | 5.5                                   | 5.5   | 5.2   | 4.2   | 3.3    | 2.4    | 7.1                                    | 6.2   | 5.2   | 4.3   | 3.3    | 2.4    |
| 4009  | 7.3                                   | 7.3   | 6.9   | 5.6   | 4.4    | 3.1    | 8.9                                    | 8.1   | 6.9   | 5.6   | 4.4    | 3.1    |
| 4012  | 9.2                                   | 9.2   | 8.7   | 7.1   | 5.5    | 3.9    | 11.9                                   | 10.3  | 8.7   | 7.1   | 5.5    | 3.9    |
| 4018  | 14.8                                  | 14.8  | 14.0  | 11.4  | 8.9    | 6.3    | 17.5                                   | 16.2  | 13.7  | 11.2  | 8.7    | 6.2    |
| 4023  | 18.0                                  | 18.0  | 17.0  | 13.9  | 10.8   | 7.7    | 23.4                                   | 20.3  | 17.1  | 14.0  | 10.8   | 7.7    |
| 4031  | 24.0                                  | 24.0  | 22.6  | 18.5  | 14.4   | 10.3   | 31.0                                   | 26.9  | 22.7  | 18.6  | 14.4   | 10.3   |
| 4038  | 31.0                                  | 31.0  | 29.2  | 23.9  | 18.6   | 13.3   | 38.0                                   | 34.5  | 29.2  | 23.9  | 18.6   | 13.3   |
| 4044  | 39.0                                  | 39.0  | 36.8  | 30.1  | 23.4   | 16.7   | 44.0                                   | 43.5  | 36.8  | 30.1  | 23.4   | 16.7   |
| 4060  | 45.0                                  | 45.0  | 42.4  | 34.7  | 27.0   | 19.3   | 60.0                                   | 51.8  | 43.5  | 35.3  | 27.0   | 18.8   |

### ◆ Derating Depending on Ambient Temperature

When you install drives in a place where ambient temperatures are higher than the rated conditions or install drives side-by-side in the enclosure panel, set L8-12 [Ambient Temperature Setting] and L8-35 [Installation Method Selection]. Derate the output current as specified in Figure 10.1.

| No. (Hex.)   | Name                        | Description   | Default (Range)            |
|--------------|-----------------------------|---|----------------------------|
| L8-12 (04B8) | Ambient Temperature Setting | <input type="radio"/> V/f <input type="radio"/> OLV <input checked="" type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the ambient temperature of the drive installation area. | 40 °C<br>(-10 °C - +60 °C) |

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| L8-35 (04EC) | Installation Method Selection | <input type="radio"/> V/f <input type="radio"/> OLV <input checked="" type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the type of drive installation. | 0<br>(0 - 3)    |

#### 0 : IP20/UL Open Type

Use this setting to install IP20/UL Open Type drives.

Make sure that there is 30 mm (1.18 in) minimum of space between drives or between the drive and side of the enclosure panel.

#### 1 : Side-by-Side Mounting

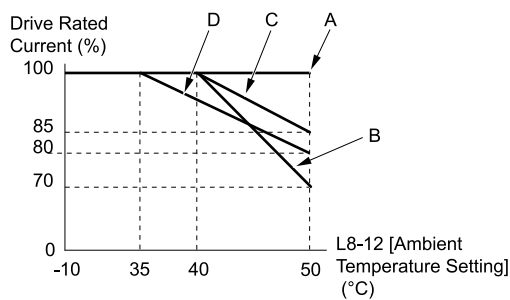
Use this setting to install more than one drive side-by-side.

#### 2 : IP20/UL Type 1/IP55

Use this setting to install IP20/UL Type 1 drives or IP55 drives.

#### 3 : External Heatsink

Use this setting when the heatsink (cooling fin) is outside the control panel.



A - L8-35 = 0 [IP20/UL Open Type]

B - L8-35 = 1 [Side-by-Side Mounting]

C - L8-35 = 2 [IP20/UL Type 1]

D - L8-35 = 3 [External Heatsink]

Figure 10.1 Derating Depending on Drive Installation Method

## ◆ Altitude Derating

Install the drive in a location that has an altitude of 1000 m (3281 ft) or lower.

Derate the output current by 1% for each 100 m (328 ft) to install the drive in altitudes between 1000 to 4000 m (3281 to 13123 ft).

It is not necessary to derate the rated voltage in these conditions:

- Installing the drive at 2000 m (6562 ft) or lower
- Installing the drive between 2000 to 4000 m (6562 to 13123 ft) and grounding the neutral point on the power supply.

If you do not ground the drive with a neutral network, contact Yaskawa or your nearest sales representative.

# 10.8 Drive Exterior and Mounting Dimensions

## ◆ Drive Models and Exterior and Mounting Dimensions

Table 10.19 Single-Phase 200 V Class

| Model       | IP20/UL Open Type |
|-------------|-------------------|
| B001 - B004 | 328               |
| B006 - B018 | 329               |

Table 10.20 Three-Phase 200 V Class

| Model       | IP20/UL Open Type |
|-------------|-------------------|
| 2001 - 2006 | 328               |
| 2008 - 2021 | 329               |
| 2030 - 2082 | 331               |

Table 10.21 Three-Phase 400 V Class

| Model       | IP20/UL Open Type |
|-------------|-------------------|
| 4001 - 4012 | 329               |
| 4018 - 4060 | 331               |

## ◆ IP20/UL Open Type

### ■ B001 to B004, 2001 to 2006

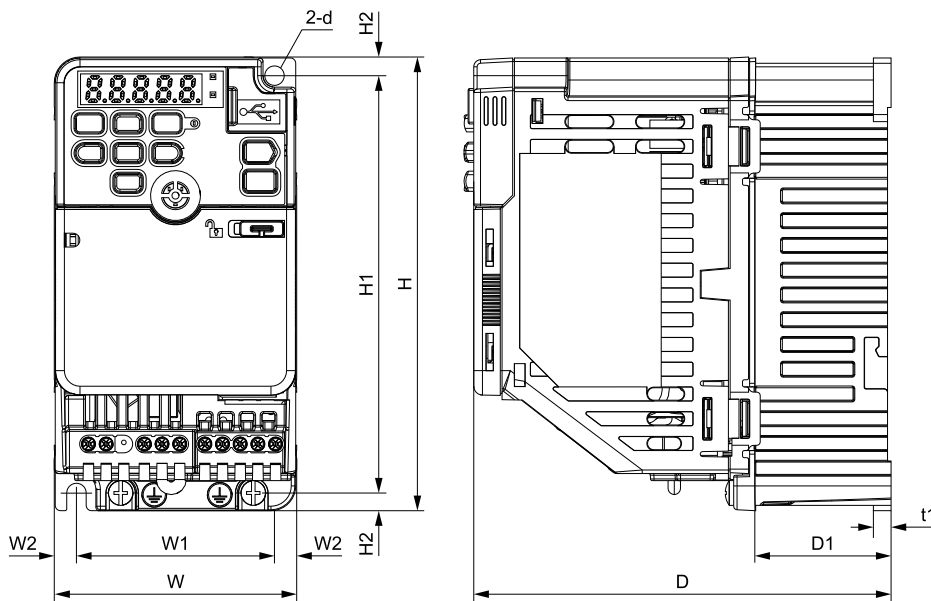


Figure 10.2 Exterior and Mounting Dimensions

Table 10.22 Single-Phase 200 V Class (IP20/UL Open Type, without Built-in EMC Filter)

| Model | Dimensions mm (in) |               |               |              |             |               |             |                |             |    | Est. Weight kg (lb) |
|-------|--------------------|---------------|---------------|--------------|-------------|---------------|-------------|----------------|-------------|----|---------------------|
|       | W                  | H             | D             | W1           | W2          | H1            | H2          | D1             | t1          | d  |                     |
| B001A | 68<br>(2.68)       | 128<br>(5.04) | 76<br>(2.99)  | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.5<br>(1.1)        |
| B002A | 68<br>(2.68)       | 128<br>(5.04) | 76<br>(2.99)  | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.5<br>(1.1)        |
| B004A | 68<br>(2.68)       | 128<br>(5.04) | 118<br>(4.65) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 38.5<br>(1.52) | 5<br>(0.20) | M5 | 0.8<br>(1.8)        |



**Table 10.23 Single-Phase 200 V Class (IP20/UL Open Type, with Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |               |              |             |               |             |                |             |    | Est. Weight kg (lb) |
|-------|--------------------|---------------|---------------|--------------|-------------|---------------|-------------|----------------|-------------|----|---------------------|
|       | W                  | H             | D             | W1           | W2          | H1            | H2          | D1             | t1          | d  |                     |
| B001E | 68<br>(2.68)       | 128<br>(5.04) | 116<br>(4.57) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.7<br>(1.6)        |
| B002E | 68<br>(2.68)       | 128<br>(5.04) | 116<br>(4.57) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.7<br>(1.6)        |
| B004E | 68<br>(2.68)       | 128<br>(5.04) | 158<br>(6.22) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 38.5<br>(1.52) | 5<br>(0.20) | M5 | 1.0<br>(2.2)        |

**Table 10.24 Three-Phase 200 V Class (IP20/UL Open Type, without Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |               |              |             |               |             |                |             |    | Est. Weight kg (lb) |
|-------|--------------------|---------------|---------------|--------------|-------------|---------------|-------------|----------------|-------------|----|---------------------|
|       | W                  | H             | D             | W1           | W2          | H1            | H2          | D1             | t1          | d  |                     |
| 2001A | 68<br>(2.68)       | 128<br>(5.04) | 76<br>(2.99)  | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.5<br>(1.1)        |
| 2002A | 68<br>(2.68)       | 128<br>(5.04) | 76<br>(2.99)  | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.5<br>(1.1)        |
| 2004A | 68<br>(2.68)       | 128<br>(5.04) | 108<br>(4.25) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 38.5<br>(1.52) | 5<br>(0.20) | M5 | 0.8<br>(1.8)        |
| 2006A | 68<br>(2.68)       | 128<br>(5.04) | 128<br>(5.04) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 58.5<br>(2.30) | 5<br>(0.20) | M5 | 0.9<br>(2.0)        |

**Table 10.25 Three-Phase 200 V Class (IP20/UL Open Type, with Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |               |              |             |               |             |                |             |    | Est. Weight kg (lb) |
|-------|--------------------|---------------|---------------|--------------|-------------|---------------|-------------|----------------|-------------|----|---------------------|
|       | W                  | H             | D             | W1           | W2          | H1            | H2          | D1             | t1          | d  |                     |
| 2001E | 68<br>(2.68)       | 128<br>(5.04) | 116<br>(4.57) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.6<br>(1.3)        |
| 2002E | 68<br>(2.68)       | 128<br>(5.04) | 116<br>(4.57) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 6.5<br>(0.26)  | 3<br>(0.12) | M5 | 0.6<br>(1.3)        |
| 2004E | 68<br>(2.68)       | 128<br>(5.04) | 148<br>(5.83) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 38.5<br>(1.52) | 5<br>(0.20) | M5 | 0.9<br>(2.0)        |
| 2006E | 68<br>(2.68)       | 128<br>(5.04) | 168<br>(6.61) | 56<br>(2.20) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 58.5<br>(2.30) | 5<br>(0.20) | M5 | 1.1<br>(2.4)        |

■ B006 - B018, 2008 - 2021, 4001 - 4012

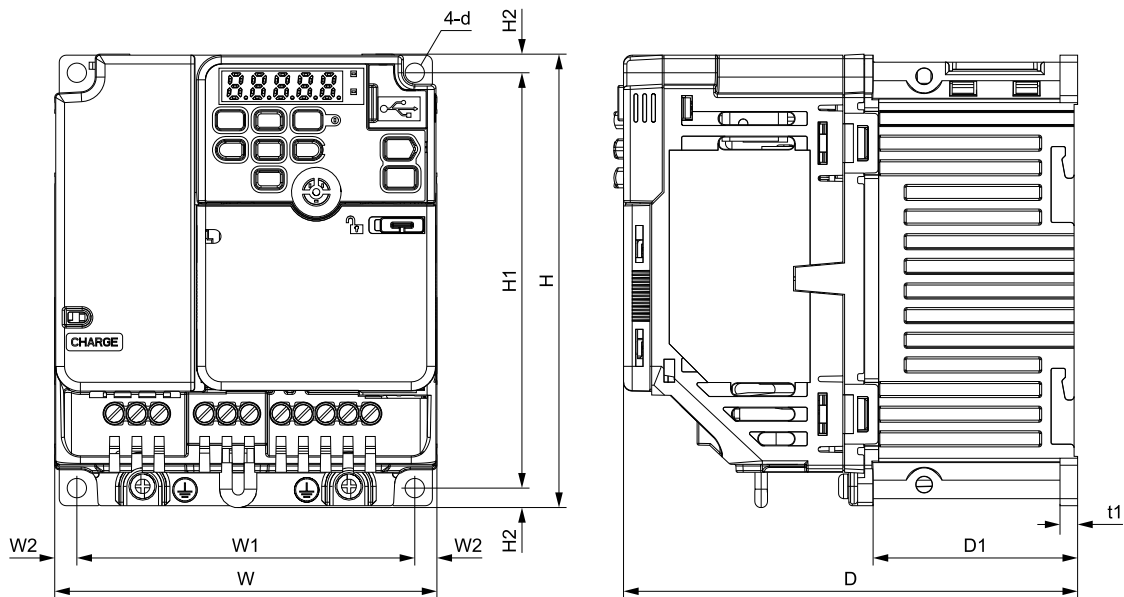


Figure 10.3 Dimension Diagram 1

## 10.8 Drive Exterior and Mounting Dimensions

**Table 10.26 Single-Phase 200 V Class (IP20/UL Open Type, without Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |                 |               |             |               |             |                |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|---------------|-----------------|---------------|-------------|---------------|-------------|----------------|-------------|----|------------------------|
|       | W                  | H             | D               | W1            | W2          | H1            | H2          | D1             | t1          | d  |                        |
| B006A | 108<br>(4.25)      | 128<br>(5.04) | 137.5<br>(5.41) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| B010A | 108<br>(4.25)      | 128<br>(5.04) | 154<br>(6.06)   | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| B012A | 140<br>(5.51)      | 128<br>(5.04) | 163<br>(6.42)   | 128<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.1<br>(4.6)           |
| B018A | 170<br>(6.69)      | 128<br>(5.04) | 180<br>(7.09)   | 158<br>(6.22) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.9<br>(6.4)           |

**Table 10.27 Single-Phase 200 V Class (IP20/UL Open Type, with Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |                 |               |             |               |             |                |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|---------------|-----------------|---------------|-------------|---------------|-------------|----------------|-------------|----|------------------------|
|       | W                  | H             | D               | W1            | W2          | H1            | H2          | D1             | t1          | d  |                        |
| B006E | 108<br>(4.25)      | 128<br>(5.04) | 182.5<br>(7.19) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.8<br>(4.0)           |
| B010E | 108<br>(4.25)      | 128<br>(5.04) | 199.0<br>(7.83) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.8<br>(4.0)           |
| B012E | 140<br>(5.51)      | 128<br>(5.04) | 203.0<br>(7.99) | 128<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.7<br>(6.0)           |

**Table 10.28 Three-Phase 200 V Class (IP20/UL Open Type, without Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |                 |               |             |               |             |                |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|---------------|-----------------|---------------|-------------|---------------|-------------|----------------|-------------|----|------------------------|
|       | W                  | H             | D               | W1            | W2          | H1            | H2          | D1             | t1          | d  |                        |
| 2008A | 108<br>(4.25)      | 128<br>(5.04) | 129<br>(5.08)   | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| 2010A | 108<br>(4.25)      | 128<br>(5.04) | 129<br>(5.08)   | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| 2012A | 108<br>(4.25)      | 128<br>(5.04) | 137.5<br>(5.41) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| 2018A | 140<br>(5.51)      | 128<br>(5.04) | 143<br>(5.63)   | 128<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.0<br>(4.4)           |
| 2021A | 140<br>(5.51)      | 128<br>(5.04) | 143<br>(5.63)   | 128<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.0<br>(4.4)           |

**Table 10.29 Three-Phase 200 V Class (IP20/UL Open Type, with Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |                 |               |             |               |             |                |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|---------------|-----------------|---------------|-------------|---------------|-------------|----------------|-------------|----|------------------------|
|       | W                  | H             | D               | W1            | W2          | H1            | H2          | D1             | t1          | d  |                        |
| 2008E | 108<br>(4.25)      | 128<br>(5.04) | 174<br>(6.85)   | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.6<br>(3.5)           |
| 2010E | 108<br>(4.25)      | 128<br>(5.04) | 174<br>(6.85)   | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.6<br>(3.5)           |
| 2012E | 108<br>(4.25)      | 128<br>(5.04) | 182.5<br>(7.19) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.6<br>(3.5)           |
| 2018E | 140<br>(5.51)      | 128<br>(5.04) | 193<br>(7.60)   | 128<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.4<br>(5.3)           |
| 2021E | 140<br>(5.51)      | 128<br>(5.04) | 193<br>(7.60)   | 128<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.4<br>(5.3)           |

**Table 10.30 Three-Phase 400 V Class (IP20/UL Open Type, without Built-in EMC Filter)**

| Model | Dimensions mm (in) |               |                 |              |             |               |             |                |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|---------------|-----------------|--------------|-------------|---------------|-------------|----------------|-------------|----|------------------------|
|       | W                  | H             | D               | W1           | W2          | H1            | H2          | D1             | t1          | d  |                        |
| 4001A | 108<br>(4.25)      | 128<br>(5.04) | 81<br>(3.19)    | 96<br>(3.78) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 8.5<br>(0.33)  | 5<br>(0.20) | M5 | 0.8<br>(1.8)           |
| 4002A | 108<br>(4.25)      | 128<br>(5.04) | 99<br>(3.90)    | 96<br>(3.78) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 26.5<br>(1.04) | 5<br>(0.20) | M5 | 0.9<br>(2.0)           |
| 4004A | 108<br>(4.25)      | 128<br>(5.04) | 137.5<br>(5.41) | 96<br>(3.78) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |

| Model | Dimensions mm (in) |               |               |               |             |               |             |                |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|---------------|---------------|---------------|-------------|---------------|-------------|----------------|-------------|----|------------------------|
|       | W                  | H             | D             | W1            | W2          | H1            | H2          | D1             | t1          | d  |                        |
| 4005A | 108<br>(4.25)      | 128<br>(5.04) | 154<br>(6.06) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| 4007A | 108<br>(4.25)      | 128<br>(5.04) | 154<br>(6.06) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| 4009A | 108<br>(4.25)      | 128<br>(5.04) | 154<br>(6.06) | 96<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| 4012A | 140<br>(5.51)      | 128<br>(5.04) | 143<br>(5.63) | 128<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.0<br>(4.4)           |

Table 10.31 Three-Phase 400 V Class (IP20/UL Open Type, with Built-in EMC Filter)

| Model | Dimensions mm (in) |               |                 |                 |             |               |             |                |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|---------------|-----------------|-----------------|-------------|---------------|-------------|----------------|-------------|----|------------------------|
|       | W                  | H             | D               | W1              | W2          | H1            | H2          | D1             | t1          | d  |                        |
| 4001E | 108<br>(4.25)      | 128<br>(5.04) | 126<br>(4.96)   | 96.0<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 8.5<br>(0.33)  | 5<br>(0.20) | M5 | 1.4<br>(3.1)           |
| 4002E | 108<br>(4.25)      | 128<br>(5.04) | 144<br>(5.67)   | 96.0<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 26.5<br>(1.04) | 5<br>(0.20) | M5 | 1.5<br>(3.3)           |
| 4004E | 108<br>(4.25)      | 128<br>(5.04) | 182.5<br>(7.19) | 96.0<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.9<br>(4.2)           |
| 4005E | 108<br>(4.25)      | 128<br>(5.04) | 199<br>(7.83)   | 96.0<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.9<br>(4.2)           |
| 4007E | 108<br>(4.25)      | 128<br>(5.04) | 199<br>(7.83)   | 96.0<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.9<br>(4.2)           |
| 4009E | 108<br>(4.25)      | 128<br>(5.04) | 199<br>(7.83)   | 96.0<br>(3.78)  | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 56.5<br>(2.22) | 5<br>(0.20) | M5 | 1.9<br>(4.2)           |
| 4012E | 140<br>(5.51)      | 128<br>(5.04) | 193<br>(7.60)   | 128.0<br>(5.04) | 6<br>(0.24) | 118<br>(4.65) | 5<br>(0.20) | 65<br>(2.56)   | 5<br>(0.20) | M5 | 2.6<br>(5.7)           |

■ 2030 to 2082, 4018 to 4060

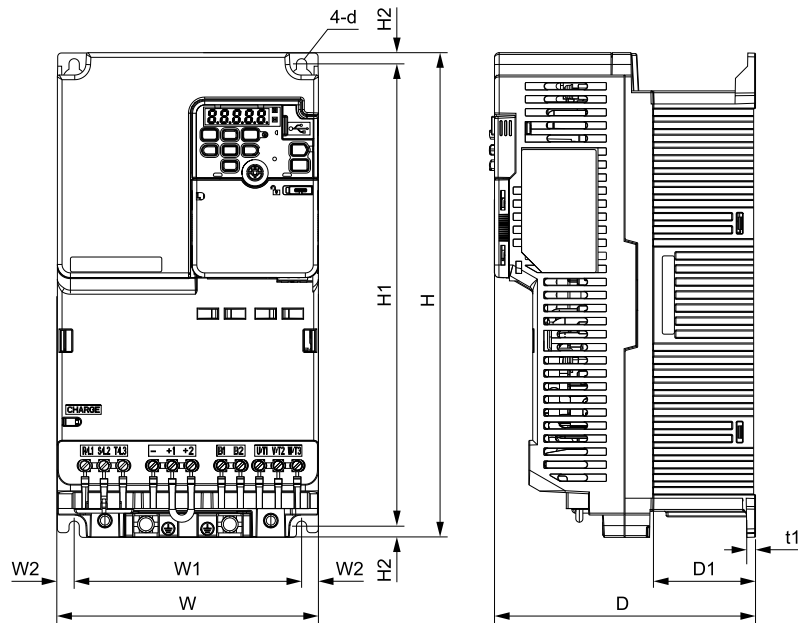


Figure 10.4 Exterior and Mounting Dimensions

Table 10.32 Three-Phase 200 V Class (IP20/UL Open Type, without Built-in EMC Filter)

| Model | Dimensions mm (in) |                |               |               |             |               |             |              |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|----------------|---------------|---------------|-------------|---------------|-------------|--------------|-------------|----|------------------------|
|       | W                  | H              | D             | W1            | W2          | H1            | H2          | D1           | t1          | d  |                        |
| 2030A | 140<br>(5.51)      | 260<br>(10.24) | 140<br>(5.51) | 122<br>(4.80) | 9<br>(0.35) | 248<br>(9.76) | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 3.4<br>(7.5)           |
| 2042A | 140<br>(5.51)      | 260<br>(10.24) | 140<br>(5.51) | 122<br>(4.80) | 9<br>(0.35) | 248<br>(9.76) | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 3.6<br>(7.9)           |

## 10.8 Drive Exterior and Mounting Dimensions

| Model | Dimensions mm (in) |                |               |               |              |                |             |              |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|----------------|---------------|---------------|--------------|----------------|-------------|--------------|-------------|----|------------------------|
|       | W                  | H              | D             | W1            | W2           | H1             | H2          | D1           | t1          | d  |                        |
| 2056A | 180<br>(7.09)      | 300<br>(11.81) | 143<br>(5.63) | 160<br>(6.30) | 10<br>(0.39) | 284<br>(11.18) | 8<br>(0.31) | 55<br>(2.17) | 5<br>(0.20) | M5 | 5.5<br>(12.1)          |
| 2070A | 220<br>(8.66)      | 350<br>(13.78) | 187<br>(7.36) | 192<br>(7.56) | 14<br>(0.55) | 336<br>(13.23) | 7<br>(0.28) | 78<br>(3.07) | 5<br>(0.20) | M6 | 7.5<br>(16.5)          |
| 2082A | 220<br>(8.66)      | 350<br>(13.78) | 187<br>(7.36) | 192<br>(7.56) | 14<br>(0.55) | 336<br>(13.23) | 7<br>(0.28) | 78<br>(3.07) | 5<br>(0.20) | M6 | 8.0<br>(17.6)          |

**Table 10.33 Three-Phase 200 V Class (IP20/UL Open Type, with Built-in EMC Filter)**

| Model | Dimensions mm (in) |                |               |               |              |                |             |              |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|----------------|---------------|---------------|--------------|----------------|-------------|--------------|-------------|----|------------------------|
|       | W                  | H              | D             | W1            | W2           | H1             | H2          | D1           | t1          | d  |                        |
| 2030E | 140<br>(5.51)      | 260<br>(10.24) | 196<br>(7.72) | 122<br>(4.80) | 9<br>(0.35)  | 248<br>(9.76)  | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 3.9<br>(8.6)           |
| 2042E | 140<br>(5.51)      | 260<br>(10.24) | 196<br>(7.72) | 122<br>(4.80) | 9<br>(0.35)  | 248<br>(9.76)  | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 4.1<br>(9.0)           |
| 2056E | 180<br>(7.09)      | 300<br>(11.81) | 196<br>(7.72) | 160<br>(6.30) | 10<br>(0.39) | 284<br>(11.18) | 8<br>(0.31) | 55<br>(2.17) | 5<br>(0.20) | M5 | 6.0<br>(13.2)          |
| 2070E | 220<br>(8.66)      | 350<br>(13.78) | 216<br>(8.50) | 192<br>(7.56) | 14<br>(0.55) | 336<br>(13.23) | 7<br>(0.28) | 78<br>(3.07) | 5<br>(0.20) | M6 | 8.5<br>(18.7)          |
| 2082E | 220<br>(8.66)      | 350<br>(13.78) | 216<br>(8.50) | 192<br>(7.56) | 14<br>(0.55) | 336<br>(13.23) | 7<br>(0.28) | 78<br>(3.07) | 5<br>(0.20) | M6 | 9.0<br>(19.9)          |

**Table 10.34 Three-Phase 400 V Class (IP20/UL Open Type, without Built-in EMC Filter)**

| Model | Dimensions mm (in) |                |               |               |              |                |             |              |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|----------------|---------------|---------------|--------------|----------------|-------------|--------------|-------------|----|------------------------|
|       | W                  | H              | D             | W1            | W2           | H1             | H2          | D1           | t1          | d  |                        |
| 4018A | 140<br>(5.51)      | 260<br>(10.24) | 140<br>(5.51) | 122<br>(4.80) | 9<br>(0.35)  | 248<br>(9.76)  | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 3.0<br>(6.6)           |
| 4023A | 140<br>(5.51)      | 260<br>(10.24) | 140<br>(5.51) | 122<br>(4.80) | 9<br>(0.35)  | 248<br>(9.76)  | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 3.2<br>(7.1)           |
| 4031A | 180<br>(7.09)      | 300<br>(11.81) | 143<br>(5.63) | 160<br>(6.30) | 10<br>(0.39) | 284<br>(11.18) | 8<br>(0.31) | 55<br>(2.17) | 5<br>(0.20) | M5 | 4.6<br>(10.2)          |
| 4038A | 180<br>(7.09)      | 300<br>(11.81) | 143<br>(5.63) | 160<br>(6.30) | 10<br>(0.39) | 284<br>(11.18) | 8<br>(0.31) | 55<br>(2.17) | 5<br>(0.20) | M5 | 4.8<br>(10.6)          |
| 4044A | 190<br>(7.48)      | 350<br>(13.78) | 204<br>(8.03) | 160<br>(6.30) | 15<br>(0.59) | 336<br>(13.23) | 7<br>(0.28) | 94<br>(3.70) | 5<br>(0.20) | M6 | 6.5<br>(14.3)          |
| 4060A | 190<br>(7.48)      | 350<br>(13.78) | 204<br>(8.03) | 160<br>(6.30) | 15<br>(0.59) | 336<br>(13.23) | 7<br>(0.28) | 94<br>(3.70) | 5<br>(0.20) | M6 | 6.5<br>(14.3)          |

**Table 10.35 Three-Phase 400 V Class (IP20/UL Open Type, with Built-in EMC Filter)**

| Model | Dimensions mm (in) |                |               |               |              |                |             |              |             |    | Est. Weight<br>kg (lb) |
|-------|--------------------|----------------|---------------|---------------|--------------|----------------|-------------|--------------|-------------|----|------------------------|
|       | W                  | H              | D             | W1            | W2           | H1             | H2          | D1           | t1          | d  |                        |
| 4018E | 140<br>(5.51)      | 260<br>(10.24) | 196<br>(7.72) | 122<br>(4.80) | 9<br>(0.35)  | 248<br>(9.76)  | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 3.9<br>(8.6)           |
| 4023E | 140<br>(5.51)      | 260<br>(10.24) | 196<br>(7.72) | 122<br>(4.80) | 9<br>(0.35)  | 248<br>(9.76)  | 6<br>(0.24) | 55<br>(2.17) | 5<br>(0.20) | M5 | 3.9<br>(8.6)           |
| 4031E | 180<br>(7.09)      | 300<br>(11.81) | 196<br>(7.72) | 160<br>(6.30) | 10<br>(0.39) | 284<br>(11.18) | 8<br>(0.31) | 55<br>(2.17) | 5<br>(0.20) | M5 | 5.5<br>(12.1)          |
| 4038E | 180<br>(7.09)      | 300<br>(11.81) | 196<br>(7.72) | 160<br>(6.30) | 10<br>(0.39) | 284<br>(11.18) | 8<br>(0.31) | 55<br>(2.17) | 5<br>(0.20) | M5 | 5.5<br>(12.1)          |
| 4044E | 190<br>(7.48)      | 350<br>(13.78) | 251<br>(9.88) | 160<br>(6.30) | 15<br>(0.59) | 336<br>(13.23) | 7<br>(0.28) | 94<br>(3.70) | 5<br>(0.20) | M6 | 8.0<br>(17.6)          |
| 4060E | 190<br>(7.48)      | 350<br>(13.78) | 251<br>(9.88) | 160<br>(6.30) | 15<br>(0.59) | 336<br>(13.23) | 7<br>(0.28) | 94<br>(3.70) | 5<br>(0.20) | M6 | 8.5<br>(18.7)          |

## 10.9 Peripheral Devices and Options

to Table 10.39 show the available peripheral devices and options for the drive. Contact Yaskawa or your nearest sales representative to make an order.

- Selection: Refer to the drive catalog for information about available products.
- Installation and wiring: Refer to the instruction manual for each option.

**Table 10.36 Main Circuit Options**

| Name   | Model                      | Intended Use   |
|--|----------------------------|--|
| AC reactor                                       | LR3 series and ALR3 series | To improve the drive input power factor. <ul style="list-style-type: none"> <li>• To prevent damage to the drive when the power supply capacity is large. You must only use this option when the power supply capacity is more than 600 kVA.</li> <li>• To decrease harmonic current.</li> <li>• To improve the power supply total power factor.</li> </ul>  |
| Braking Resistor                                 | ERF-150WJ Series           | To decrease the regenerative energy of the motor and decrease the deceleration time (duty cycle of 3% ED). You must also use the installation attachment.  |
| Residual Current Monitoring/ Detection (RCM/RCD) | NV and NS series           | To prevent short circuit damage to the power supply system, provide overload protection for wiring, prevent electrical shock, and provide ground fault protection against earth leakage fires. <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• You can use a molded-case circuit breaker as a replacement for an RCM/RCD that is upstream in the power supply system.</li> <li>• When you use a high frequency RCM/RCD at the power input side of the drive, make sure that each drive has a minimum cumulative sensitivity amperage of 30 mA.</li> </ul> |
| Molded-Case Circuit Breaker (MCCB)               | NF series                  | To prevent short circuit damage to the power supply system and provide overload protection for wiring.   |
| Input Side Magnetic Contactor (MC)               | SC series                  | To prevent burn damage when connecting a braking resistor. This option fully opens the circuit between the power supply and drive.   |

**Table 10.37 Attachments**

| Name                           | Model         | Intended Use  |
|--------------------------------|---------------|---|
| Heatsink External Mounting Kit | ZPSA-GA50Vx-x | Use this option to install the heatsink outside of the control panel. |
| UL Type 1 Kit                  | ZBAA-GA50Vx-x | To change an IP20/UL Open Type drive to an IP20/UL Type 1 drive.      |
| DIN Rail Attachment            | ZPZ-GA50Vx    | To use a DIN rail to install the drive.                               |
| Communication Option Case      | JOHB-GA50     | To install a communication option on a drive.                         |

**Table 10.38 Engineering Tools**

| Name         | Model | Intended Use   |
|--------------|-------|--|
| DriveWizard  | -     | To use a PC to program drives and manage parameters. |
| DriveWorksEZ | -     | To use a PC to do advanced drive programming.        |

**Table 10.39 Communication option**

| Name        | Model  | Intended Use  | Document No.                   |
|-------------|--------|---|--------------------------------|
| CANopen     | SI-S3  | This option uses the host controller over CANopen communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul>     | TOBPC73060085<br>SIJPC73060085 |
| PROFIBUS-DP | SI-P3  | This option uses the host controller over PROFIBUS-DP communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul> | TOBPC73060082<br>SIJPC73060082 |
| CC-Link     | SI-C3  | This option uses the host controller over CC-Link communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul>     | TOBPC73060083<br>SIJPC73060083 |
| EtherNet/IP | SI-EN3 | This option uses the host controller over EtherNet/IP communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul> | TOBPC73060092<br>SIJPC73060092 |
| PROFINET    | SI-EP3 | This option uses the host controller over PROFINET communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul>    | TOBPC73060089<br>SIJPC73060089 |

## 10.9 Peripheral Devices and Options

| Name             | Model  | Intended Use   | Document No.                   |
|------------------|--------|--|--------------------------------|
| DeviceNet        | SI-N3  | This option uses the host controller over DeviceNet communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul> <b>Note:</b><br>The drive is compatible with option software versions 1114 and later.        | TOBPC73060084<br>SIJPC73060084 |
| Modbus TCP/IP    | SI-EM3 | This option uses the host controller over Modbus TCP/IP communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul>  | TOBPC73060091<br>SIJPC73060091 |
| MECHATROLINK-II  | SI-T3  | This option uses the host controller over MECHATROLINK-II communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul> <b>Note:</b><br>The drive is compatible with option software versions 6108 and later.  | TOBPC73060086<br>SIJPC73060086 |
| MECHATROLINK-III | SI-ET3 | This option uses the host controller over MECHATROLINK-III communication to: <ul style="list-style-type: none"> <li>• Operate and stop the drive</li> <li>• Set and view parameters</li> <li>• Monitor output frequency, output current, and other statuses</li> </ul> <b>Note:</b><br>The drive is compatible with option software versions 6202 and later. | TOBPC73060088<br>SIJPC73060088 |

## Parameter List

---

|       |  |     |
|-------|--|-----|
| 11.1  | Section Safety .....   | 336 |
| 11.2  | How to Read the Parameter List .....   | 337 |
| 11.3  | Parameter Groups .....   | 338 |
| 11.4  | A: Initialization Parameters .....   | 339 |
| 11.5  | b: Application .....   | 341 |
| 11.6  | C: Tuning .....  | 350 |
| 11.7  | d: Reference Settings .....  | 354 |
| 11.8  | E: Motor Parameters .....  | 358 |
| 11.9  | F: Options .....   | 363 |
| 11.10 | H: Terminal Functions .....  | 372 |
| 11.11 | L: Protection Functions .....  | 389 |
| 11.12 | n: Special Adjustment .....  | 399 |
| 11.13 | o: Keypad-Related Settings .....   | 405 |
| 11.14 | q: DriveWorksEZ Parameters .....   | 411 |
| 11.15 | r: DWEZ Connection 1-20 .....  | 412 |
| 11.16 | T: Motor Tuning .....  | 413 |
| 11.17 | U: Monitors .....  | 416 |
| 11.18 | Parameters that Change from the Default Settings with A1-02 [Control Method Selection] .....       | 430 |
| 11.19 | Parameters that Change from the Default Settings with E3-01 [Motor 2 Control Mode Selection] ..... | 434 |
| 11.20 | Parameters Changed by E1-03 [V/f Pattern Selection] .....  | 435 |
| 11.21 | Defaults by Drive Model and Duty Rating ND/HD .....  | 436 |
| 11.22 | Parameters Changed by E5-01 [PM Motor Code Selection] .....  | 450 |

## 11.1 Section Safety

 **DANGER**






**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.



## 11.2 How to Read the Parameter List

### ◆ Icons and Terms that Identify Parameters and Control Modes

| Icon  | Description   |
|---|---|
|  | The parameter is available when operating the drive with V/f Control.                                 |
|  | The parameter is available when operating the drive with Open Loop Vector Control.                    |
|  | The parameter is available when operating the drive with Open Loop Vector Control for PM.             |
|  | The parameter is available when operating the drive with Advanced Open Loop Vector Control for PM.    |
|  | The parameter is available when operating the drive with EZ Open Loop Vector Control.                 |
| Hex.  | Hexadecimal numbers that represent MEMOBUS addresses to change parameters over network communication. |
| RUN   | The parameter can be changed settings during run.   |
| Expert  | The parameter that is available in Expert Mode only. <sup>*1</sup>                                    |

\*1 Set  $A1-01 = 3$  [*Access Level Selection = Expert Level*] to display and set Expert Mode parameters on the keypad.

**Note:**

Gray icons identify parameters that are not available in the specified control method.

## 11.3 Parameter Groups

Represents the type of product parameters.

| Parameter | Name   |
|-----------|--|
| A1        | Initialization   |
| A2        | User Parameters  |
| b1        | Operation Mode Selection                                   |
| b2        | DC Injection Braking and Short Circuit Braking             |
| b3        | Speed Search   |
| b4        | Timer Function   |
| b5        | PID control  |
| b6        | Dwell Function   |
| b8        | Energy Saving  |
| C1        | Accel & Decel Time   |
| C2        | S-Curve Characteristics                                    |
| C3        | Slip Compensation  |
| C4        | Torque Compensation  |
| C5        | Automatic Speed Regulator (ASR: Automatic Speed Regulator) |
| C6        | Carrier Frequency  |
| d1        | Frequency Reference  |
| d2        | Reference Limits   |
| d3        | Jump Frequency   |
| d4        | Frequency Ref Up/Down & Hold                               |
| d6        | Field Weakening /Forcing                                   |
| d7        | Offset Frequency   |
| E1        | V/f Pattern for Motor 1                                    |
| E2        | Motor Parameters   |
| E3        | V/f Pattern for Motor 2                                    |
| E4        | Motor 2 Parameters   |
| E5        | PM Motor Settings  |
| E9        | Motor Setting  |
| F1        | Fault Detection during PG Speed Control                    |
| F6        | Communication Options                                      |
| F7        | Communication Options                                      |
| H1        | Digital Inputs   |
| H2        | Digital Outputs  |
| H3        | Analog Inputs  |
| H4        | Analog Outputs   |
| H5        | Modbus Communication                                       |
| H6        | Pulse Train Input/Output                                   |

| Parameter | Name                         |
|-----------|------------------------------|
| H7        | Virtual MFIO selection       |
| L1        | Motor Protection             |
| L2        | Power Loss Ride Through      |
| L3        | Stall Prevention             |
| L4        | Speed Detection              |
| L5        | Fault Restart                |
| L6        | Torque Detection             |
| L7        | Torque Limit                 |
| L8        | Drive Protection             |
| n1        | Hunting Prevention           |
| n2        | Auto Freq Regulator (AFR)    |
| n3        | High Slip/Overexcite Braking |
| n5        | Feed Forward Control         |
| n6        | Online Tuning                |
| n7        | EZ Drive                     |
| n8        | PM Motor Control Tuning      |
| nA        | PM Motor Control Tuning      |
| o1        | Keypad Display               |
| o2        | Keypad Operation             |
| o3        | Copy Keypad Function         |
| o4        | Maintenance Monitors         |
| o5        | Log Function                 |
| q         | DriveWorksEZ Parameters      |
| r         | DWEZ Connection 1-20         |
| T0        | Tuning Mode Selection        |
| T1        | Induction Motor Auto-Tuning  |
| T2        | PM Motor Auto-Tuning         |
| T3        | ASR and Inertia Tuning       |
| T4        | EZ Tuning                    |
| U1        | Operation Status Monitors    |
| U2        | Fault Trace                  |
| U3        | Fault History                |
| U4        | Maintenance Monitors         |
| U5        | PID Monitors                 |
| U6        | Operation Status Monitors    |
| U8        | DriveWorksEZ Monitors        |

## 11.4 A: Initialization Parameters

### ◆ A1: Initialization

| No. (Hex.)             | Name                            | Description  | Default (Range)       | Ref. |
|------------------------|---------------------------------|--|-----------------------|------|
| A1-00<br>(0100)<br>RUN | Language Selection              | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the language for the LCD keypad.</p> <p><b>Note:</b><br/>When you use <i>A1-03 [Initialize Parameters]</i> to initialize the drive, the drive will not reset this parameter.</p> <p>0 : English<br/>1 : Japanese<br/>2 : German<br/>3 : French<br/>4 : Italian<br/>5 : Spanish<br/>6 : Portuguese<br/>7 : Chinese<br/>8 : Czech<br/>9 : Russian<br/>10 : Turkish<br/>11 : Polish<br/>12 : Greek</p> | 0<br>(0 - 12)         | 461  |
| A1-01<br>(0101)<br>RUN | Access Level Selection          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets user access to parameters. The access level controls which parameters the keypad will display, and which parameters the user can set.</p> <p>0 : Operation Only<br/>1 : User Parameters<br/>2 : Advanced Level<br/>3 : Expert Level</p>   | 2<br>(0 - 3)          | 461  |
| A1-02<br>(0102)        | Control Method Selection        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the control method for the drive application and the motor.</p> <p>0 : V/f Control<br/>2 : Open Loop Vector<br/>5 : PM Open Loop Vector<br/>6 : PM Advanced Open Loop Vector<br/>8 : EZ Vector Control</p>  | 0<br>(0, 2, 5, 6, 8)  | 462  |
| A1-03<br>(0103)        | Initialize Parameters           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets parameters to default values.</p> <p>0 : No Initialization<br/>1110 : User Initialization<br/>2220 : 2-Wire Initialization<br/>3330 : 3-Wire Initialization</p>   | 0<br>(0 - 3330)       | 463  |
| A1-04<br>(0104)        | Password                        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Entry point for the password set in <i>A1-05 [Password Setting]</i>. The user can view the settings of parameters that are locked without entering the password. Enter the correct password in this parameter to change parameter settings.</p>  | 0000<br>(0000 - 9999) | 464  |
| A1-05<br>(0105)        | Password Setting                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Set the password to lock parameters and prevent changes to parameter settings. Enter the correct password in <i>A1-04 [Password]</i> to unlock parameters and accept changes.</p>  | 0000<br>(0000 - 9999) | 464  |
| A1-06<br>(0127)        | Application Preset              | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive to operate in selected application conditions.</p> <p>0 : General-purpose<br/>1 : Water Supply Pump 2<br/>2 : Conveyor<br/>3 : Exhaust Fan<br/>4 : HVAC Fan<br/>5 : Air Compressor<br/>6 : Crane (Hoist)<br/>7 : Crane (Traveling)<br/>8 : Conveyor 2</p>   | 0<br>(0 - 8)          | 465  |
| A1-07<br>(0128)        | DriveWorksEZ Function Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive to operate with DriveWorksEZ.</p> <p>0 : DWEZ Disabled<br/>1 : DWEZ Enabled<br/>2 : Enabled/Disabled wDigital Input</p>   | 0<br>(0 - 2)          | 477  |

## 11.4 A: Initialization Parameters

| No. (Hex.)                | Name                 | Description   | Default (Range)    | Ref. |
|---------------------------|----------------------|---|--------------------|------|
| A1-11<br>(111D)<br>Expert | Firmware Update Lock | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Protects the drive firmware. When you enable the protection, you cannot update the drive firmware.<br/>0 : Disabled<br/>1 : Enabled</p> | 0<br>(0, 1)        | 478  |
| A1-12<br>(1564)           | Bluetooth ID         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the password necessary to use Bluetooth to control the drive with a smartphone or tablet.</p>                                      | -<br>(0000 - 9999) | 478  |

## ◆ A2: User Parameters

| No. (Hex.)                      | Name                          | Description   | Default (Range)   | Ref. |
|---------------------------------|-------------------------------|---|---|------|
| A2-01 to A2-32<br>(0106 - 0125) | User Parameters 1 to 32       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>You can select a maximum of 32 parameters for the drive and save the values to parameters <i>A2-01 to A2-32</i>. Use Setup Mode to show the saved parameters. You can immediately access these saved parameters.</p> <p><b>Note:</b><br/>When the <i>A1-06 [Application Preset]</i> value changes, the settings for <i>A2-01 to A2-32</i> change.</p> | Parameters in General-Purpose Setup Mode<br>(Determined by A1-06) | 478  |
| A2-33<br>(0126)                 | User Parameter Auto Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the automatic save feature for changes to parameters <i>A2-17 to A2-32 [User Parameters 17 to 32]</i>.<br/>0 : Disabled: Manual Entry Required<br/>1 : Enabled: Auto Save Recent Parms</p>   | Determined by A1-06<br>(0, 1)                                     | 478  |

## 11.5 b: Application

### ◆ b1: Operation Mode Selection

| No. (Hex.)   | Name                            | Description   | Default (Setting Range) | Ref. |
|--------------|---------------------------------|---|-------------------------|------|
| b1-01 (0180) | Frequency Reference Selection 1 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for the frequency reference.</p> <p>0 : Keypad<br/>1 : Analog Input<br/>2 : Memobus/Modbus Communications<br/>3 : Option PCB<br/>4 : Pulse Train Input</p>  | 1<br>(0 - 4)            | 480  |
| b1-02 (0181) | Run Command Selection 1         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for the Run command.</p> <p>0 : Keypad<br/>1 : Digital Input<br/>2 : Memobus/Modbus Communications<br/>3 : Option PCB</p>   | 1<br>(0 - 3)            | 482  |
| b1-03 (0182) | Stopping Method Selection       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to stop the motor after removing a Run command or entering a Stop command.</p> <p><b>Note:</b><br/>When <math>A1-02 = 5, 6, 8</math> [Control Method Selection = OLV/PM, AOLV/PM, EZOLV], the setting range is 0, 1, 3.</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : DC Injection Braking to Stop<br/>3 : Coast to Stop with Timer<br/>9 : Stop with Constant Distance</p> | 0<br>(0 - 3, 9)         | 482  |
| b1-04 (0183) | Reverse Operation Selection     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the reverse operation function. Disable reverse operation in fan or pump applications where reverse rotation is dangerous.</p> <p>0 : Reverse Enabled<br/>1 : Reverse Disabled</p>   | 0<br>(0, 1)             | 485  |
| b1-06 (0185) | Digital Input Reading           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the number of times that the drive reads the sequence input command to prevent malfunction because of electrical interference.</p> <p>0 : Single Scan<br/>1 : Double Scan</p>  | 1<br>(0, 1)             | 486  |
| b1-07 (0186) | LOCAL/REMOTE Run Selection      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets drive response to an existing Run command when the drive receives a second Run command from a different location.</p> <p>0 : Disregard Existing RUN Command<br/>1 : Accept Existing RUN Command</p>  | 0<br>(0, 1)             | 486  |
| b1-08 (0187) | Run Command Select in PRG Mode  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the conditions for the drive to accept a Run command entered from an external source when using the keypad to set parameters.</p> <p>0 : Disregard RUN while Programming<br/>1 : Accept RUN while Programming<br/>2 : Allow Programming Only at Stop</p>   | 0<br>(0 - 2)            | 486  |
| b1-14 (01C3) | Phase Order Selection           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the phase order for output terminals U/T1, V/T2, and W/T3. This parameter can align the Forward Run command from the drive and the forward direction of the motor without changing wiring.</p> <p>0 : Standard<br/>1 : Switch Phase Order</p>  | 0<br>(0, 1)             | 487  |
| b1-15 (01C4) | Frequency Reference Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for frequency reference 2.</p> <p>0 : Keypad<br/>1 : Analog Input<br/>2 : Memobus/Modbus Communications<br/>3 : Option PCB<br/>4 : Pulse Train Input</p>  | 0<br>(0 - 4)            | 487  |

## 11.5 b: Application

| No. (Hex.)          | Name                        | Description   | Default (Setting Range)     | Ref. |
|---------------------|-----------------------------|---|-----------------------------|------|
| b1-16 (01C5)        | Run Command Selection 2     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for Run Command 2 when the user switches the control circuit terminals ON/OFF to change the Run command source.</p> <p>0 : Keypad<br/>1 : Digital Input<br/>2 : Memobus/Modbus Communications<br/>3 : Option PCB</p>                              | 0<br>(0 - 3)                | 489  |
| b1-17 (01C6)        | Run Command at Power Up     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets drive response when energizing a drive that has an external Run command. Set this parameter in applications where energizing or de-energizing the drive enables the Run command.</p> <p>0 : Disregard Existing RUN Command<br/>1 : Accept Existing RUN Command</p> | 0<br>(0, 1)                 | 490  |
| b1-35 (1117) Expert | Digital Input Deadband Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the deadband time for MFDIs.</p>   | 0.0 ms<br>(0.0 to 100.0 ms) | 490  |

### ◆ b2: DC Injection Braking and Short Circuit Braking

| No. (Hex.)   | Name                             | Description  | Default (Range)  | Ref. |
|--------------|----------------------------------|--|--|------|
| b2-01 (0189) | DC Injection/Zero SpeedThreshold | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency to start DC Injection Braking or Short Circuit Braking.</p> <p><b>Note:</b><br/>This parameter is available when <i>b1-03 = 0</i> [Stopping Method Selection = Ramp to Stop].</p>   | Determined by A1-02<br>(0.0 - 10.0 Hz)                                   | 490  |
| b2-02 (018A) | DC Injection Braking Current     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the DC Injection Braking current as a percentage of the drive rated current.</p>  | 50%<br>(0 - 75%)   | 491  |
| b2-03 (018B) | DC Inject Braking Time at Start  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the DC Injection Braking Time at stop.</p>  | 0.00 s<br>(0.00 - 10.00 s)   | 491  |
| b2-04 (018C) | DC Inject Braking Time at Stop   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the DC Injection Braking Time at stop.</p>  | Determined by A1-02<br>(0.00 - 10.00 s)                                  | 491  |
| b2-08 (0190) | Magnetic Flux Compensation Value | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets how much current the drive injects when DC Injection Braking at Start starts (Initial Excitation) as a percentage of <i>E2-03</i> [Motor No-Load Current].</p>  | 0%<br>(0 - 1000%)  | 492  |
| b2-12 (01BA) | Short Circuit Brake Time @ Start | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the Short Circuit Braking time at start.</p>  | 0.00 s<br>(0.00 - 25.50 s)   | 492  |
| b2-13 (01BB) | Short Circuit Brake Time @ Stop  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the Short Circuit Braking time at stop.</p>   | A1-02 = 8: 0.00 s<br>Other than A1-02 = 8:<br>0.50 s<br>(0.00 - 25.50 s) | 492  |
| b2-18 (0177) | Short Circuit Braking Current    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the Short Circuit Braking Current as a percentage of the motor rated current.</p> <p><b>Note:</b><br/>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the motor rated current.<br/>• <i>A1-02 = 5, 6</i> [OLV/PM, AOLV/PM]: <i>E5-03</i> [PM Motor Rated Current (FLA)]<br/>• <i>A1-02 = 8</i> [EZOLV]: <i>E9-06</i> [Motor Rated Current (FLA)]</p> | 100.0%<br>(0.0 - 200.0%)   | 493  |

### ◆ b3: Speed Search

| No. (Hex.)   | Name                             | Description   | Default (Range)                   | Ref. |
|--------------|----------------------------------|---|-----------------------------------|------|
| b3-01 (0191) | Speed Search at Start Selection  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the Speed Search at Start function where the drive will perform Speed Search with each Run command.</p> <p>0 : Disable<br/>1 : Enabled</p>           | Determined by A1-02<br>(0, 1)     | 496  |
| b3-02 (0192) | SpeedSearch Deactivation Current | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the current level that stops Speed Search as a percentage of the drive rated output current. Usually it is not necessary to change this setting.</p> | Determined by A1-02<br>(0 - 200%) | 496  |

| No. (Hex.)                | Name                             | Description  | Default (Range)                                | Ref. |
|---------------------------|----------------------------------|--|--|------|
| b3-03<br>(0193)           | Speed Search Deceleration Time   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the deceleration time during Speed Search operation. Set the length of time to decelerate from the maximum output frequency to the minimum output frequency.<br><b>Note:</b><br>When $A1-02 = 8$ [Control Method Selection = EZOLV], this parameter takes effect only in Expert Mode.  | 2.0 s<br>(0.1 - 10.0 s)                        | 496  |
| b3-04<br>(0194)           | V/f Gain during Speed Search     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the ratio used to reduce the V/f during searches to reduce the output current during speed searches.   | Determined by o2-04<br>(10 - 100)              | 497  |
| b3-05<br>(0195)           | Speed Search Delay Time          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Speed Search delay time to activate a magnetic contactor installed between the drive and motor.  | 0.2 s<br>(0.0 - 100.0 s)                       | 497  |
| b3-06<br>(0196)<br>Expert | Speed Estimation Current Level 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level of current that flows to the motor during Speed Estimation Speed Search as a coefficient of the motor rated current. Usually it is not necessary to change this setting.   | Determined by o2-04<br>(0.0 - 2.0)             | 497  |
| b3-07<br>(0197)<br>Expert | Speed Estimation Current Level 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level of current that flows to the motor during Speed Estimation Speed Search as a coefficient of $E2-03$ [Motor No-Load Current] or $E4-03$ [Motor 2 Rated No-Load Current]. Usually it is not necessary to change this setting.  | 1.0<br>(0.0 - 3.0)                             | 497  |
| b3-08<br>(0198)<br>Expert | Speed Estimation ACR P Gain      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the proportional gain for the automatic current regulator during Speed Estimation Speed Search. Also adjusts speed search responsiveness. Usually it is not necessary to change this setting.  | Determined by A1-02 and o2-04<br>(0.00 - 6.00) | 497  |
| b3-09<br>(0199)<br>Expert | Speed Estimation ACR I Time      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the integral time for the automatic current regulator during Speed Estimation Speed Search. Also adjusts speed search responsiveness. Usually it is not necessary to change this setting.  | Determined by A1-02<br>(0.0 - 1000.0 ms)       | 497  |
| b3-10<br>(019A)<br>Expert | Speed Estimation Detection Gain  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain to correct estimated frequencies from Speed Estimation Speed Search.  | 1.05<br>(1.00 - 1.20)                          | 498  |
| b3-14<br>(019E)           | Bi-directional Speed Search      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the direction of Speed Search to the direction of the frequency reference or in the motor rotation direction as detected by the drive.<br>0 : Disabled<br>1 : Enabled<br><b>Note:</b><br>• When $E9-01 = 0$ [Motor Type Selection = Induction (IM)] and $A1-02 = 0, 2$ , or $8$ [Control Method Selection = V/f, OLV, or EZOLV], the default settings change when the setting of $b3-24$ [Speed Search Method Selection] changes.<br>– $b3-24 = 1$ [Speed Estimation]: Refer to 430.<br>– $b3-24 = 2$ [Current Detection 2]: 0<br>• When $E9-01 = 1$ or $2$ [Permanent Magnet (PM), Synchronous Reluctance (SynRM)] and $A1-02 = 0$ or $8$ [V/f, EZOLV], refer to 430.<br>When you set $A1-02$ , $b3-24$ , and $E9-01$ , set $b3-14$ . | Determined by A1-02 and $b3-24$<br>(0, 1)      | 498  |
| b3-17<br>(01F0)<br>Expert | Speed Est Retry Current Level    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the current level for the search retry function in Speed Estimation Speed Search as a percentage where drive rated current is a setting value of 100%.   | 150%<br>(0 - 200%)                             | 498  |
| b3-18<br>(01F1)<br>Expert | Speed Est Retry Detection Time   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that the drive will wait to retry Speed Estimation Speed Search when too much current flow stopped the Speed Search.  | 0.10 s<br>(0.00 - 1.00 s)                      | 498  |
| b3-19<br>(01F2)           | Speed Search Restart Attempts    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the number of times to restart Speed Search if Speed Search does not complete.   | 3 times<br>(0 - 10 times)                      | 498  |
| b3-24<br>(01C0)           | Speed Search Method Selection    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Speed Search method when you start the motor or when you restore power after a momentary power loss.<br><b>Note:</b><br>• When $A1-02 = 8$ [Control Method Selection = EZOLV], the default setting changes when the setting for $E9-01$ [Motor Type Selection] changes.<br>– $E9-01 = 0$ [Induction (IM)]: 2<br>– $E9-01 = 1, 2$ [Permanent Magnet (PM), Synchronous Reluctance (SynRM)]: 1<br>• When you set $b3-24$ , it will trigger the drive to initialize $b3-14$ [Bi-directional Speed Search]. After you set $b3-24$ , set $b3-14$ .<br>1 : Speed Estimation<br>2 : Current Detection 2  | 2<br>(1, 2)                                    | 499  |
| b3-25<br>(01C8)<br>Expert | Speed Search Wait Time           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time the drive will wait to start the Speed Search Retry function.   | 0.5 s<br>(0.0 - 30.0 s)                        | 499  |
| b3-26<br>(01C7)<br>Expert | Direction Determination Level    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level to find the motor rotation direction. Increase the value if the drive cannot find the direction.   | 1000<br>(40 to 60000)                          | 499  |

## 11.5 b: Application

| No. (Hex.)          | Name                                 | Description  | Default (Range)                      | Ref. |
|---------------------|--------------------------------------|--|--------------------------------------|------|
| b3-29 (077C) Expert | Speed Search Back-EMF Threshold      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the induced voltage for motors that use Speed Search. The drive will start Speed Search when the motor induced voltage level is the same as the setting value. Usually it is not necessary to change this setting.  | 10%<br>(0 - 10%)                     | 499  |
| b3-31 (0BC0) Expert | Spd Search Current Reference Lvl     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the current level that decreases the output current during Current Detection Speed Search.  | 1.50<br>(1.50 - 3.50)                | 499  |
| b3-32 (0BC1) Expert | Spd Search Current Complete Lvl      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the current level that completes Speed Search.  | 1.20<br>(0.00 - 1.49)                | 500  |
| b3-33 (0B3F) Expert | Speed Search during Uv Selection     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function that starts Speed Search at start-up if the drive detects a Uv [Undervoltage] when it receives a Run command.<br>0 : Disabled<br>1 : Enabled   | 1<br>(0, 1)                          | 500  |
| b3-54 (3123)        | Search Time                          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time that the drive will run Speed Search.  | 400 ms<br>(10 - 2000 ms)             | 500  |
| b3-55 (3124) Expert | Current Increment Time               | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time that the drive will increase the current from zero current to the setting value of b3-06 [Speed Estimation Current Level 1].   | 10 ms<br>(10 - 2000 ms)              | 500  |
| b3-56 (3126)        | InverseRotationSearch WaitTime       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the wait time until the drive starts inverse rotation search after it completes forward search when you do inverse rotation search during Current Detection Speed Search.   | Determined by o2-04<br>(0.1 - 5.0 s) | 501  |
| b3-61 (1B96) Expert | Initial Pole Detection Response Gain | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the responsiveness for initial motor magnetic pole calculation when A1-02 = 6 [Control Method Selection = AOLV/PM]. Set b3-61 > 0.0 for an ordinary IPM motor. It is automatically set if High Frequency Injection Tuning is used.<br><b>Note:</b><br>• Set n8-35 = 1 [Initial Pole Calculation Method = High Frequency Injection] to enable this parameter.<br>• Set n8-41 [HFIP Gain] to adjust the responsiveness for initial motor magnetic pole calculation when A1-02 = 5 [OLV/PM]. | 5.0<br>(-20.0 - +20.0)               | 501  |

## ◆ b4: Timer Function

| No. (Hex.)          | Name                          | Description  | Default (Range)           | Ref. |
|---------------------|-------------------------------|--|---------------------------|------|
| b4-01 (01A3)        | Timer Function ON-Delay Time  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the ON-delay time for the timer input.  | 0.0 s<br>(0.0 - 3000.0 s) | 502  |
| b4-02 (01A4)        | Timer Function OFF-Delay Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the OFF-delay time for the timer input.   | 0.0 s<br>(0.0 - 3000.0 s) | 502  |
| b4-03 (0B30) Expert | Terminal M1-M2 ON-Delay Time  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the delay time to activate the contact after the function set in H2-01 activates.         | 0 ms<br>(0 - 65000 ms)    | 502  |
| b4-04 (0B31) Expert | Terminal M1-M2 OFF-Delay Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the delay time to deactivate the contact after the function set in H2-01 deactivates.     | 0 ms<br>(0 - 65000 ms)    | 502  |
| b4-05 (0B32) Expert | Terminal M3-M4 ON-Delay Time  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the delay time to activate the contact after the function set in H2-02 activates.         | 0 ms<br>(0 - 65000 ms)    | 502  |
| b4-06 (0B33) Expert | Terminal M3-M4 OFF-Delay Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the delay time to deactivate the contact after the function set in H2-02 deactivates.     | 0 ms<br>(0 - 65000 ms)    | 502  |
| b4-07 (0B34) Expert | Terminal P2 ON-Delay Time     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the delay time until the contact is turned ON after the function set with H2-03 turns ON. | 0 ms<br>(0 - 65000 ms)    | 502  |
| b4-08 (0B35) Expert | Terminal P2 OFF-Delay Time    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the delay time to deactivate the contact after the function set in H2-03 deactivates.     | 0 ms<br>(0 - 65000 ms)    | 502  |



## ◆ b5: PID control

| No. (Hex.)                       | Name                            | Description   | Default (Range)            | Ref. |
|----------------------------------|---------------------------------|---|----------------------------|------|
| b5-01<br>(01A5)                  | PID Mode Setting                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the type of PID control.</p> <p>0 : Disabled<br/>           1 : Standard<br/>           2 : Standard (D on feedback)<br/>           3 : Fref + PID Trim<br/>           4 : Fref + PID Trim (D on feedback)<br/>           5 : Same as 7series &amp; prior, b5-01=1<br/>           6 : Same as 7series &amp; prior, b5-01=2<br/>           7 : Same as 7series &amp; prior, b5-01=3<br/>           8 : Same as 7series &amp; prior, b5-01=4</p> <p><b>Note:</b><br/>           Use settings 5 to 8 when the drive is a replacement for a previous generation drive.</p> | 0<br>(0 - 8)               | 508  |
| b5-02<br>(01A6)<br>RUN           | Proportional Gain (P)           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the proportional gain (P) that is applied to PID input.</p>  | 1.00<br>(0.00 - 25.00)     | 509  |
| b5-03<br>(01A7)<br>RUN           | Integral Time (I)               | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the integral time (I) that is applied to PID input.</p>  | 1.0 s<br>(0.0 - 360.0 s)   | 509  |
| b5-04<br>(01A8)<br>RUN           | Integral Limit                  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the upper limit for integral control (I) as a percentage of the Maximum Output Frequency.</p> <p><b>Note:</b><br/>           Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.<br/>           • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i><br/>           • <i>A1-02 = 8: E9-02 [Maximum Speed]</i></p>   | 100.0%<br>(0.0 - 100.0%)   | 509  |
| b5-05<br>(01A9)<br>RUN           | Derivative Time (D)             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the derivative time (D) for PID control. This parameter adjusts system responsiveness.</p>   | 0.00 s<br>(0.00 - 10.00 s) | 509  |
| b5-06<br>(01AA)<br>RUN           | PID Output Limit                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum possible output from the PID controller as a percentage of the Maximum Output Frequency.</p> <p><b>Note:</b><br/>           Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.<br/>           • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i><br/>           • <i>A1-02 = 8: E9-02 [Maximum Speed]</i></p>  | 100.0%<br>(0.0 - 100.0%)   | 509  |
| b5-07<br>(01AB)<br>RUN           | PID Offset Adjustment           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the offset for the PID control output as a percentage of the Maximum Output Frequency.</p> <p><b>Note:</b><br/>           Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.<br/>           • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i><br/>           • <i>A1-02 = 8: E9-02 [Maximum Speed]</i></p>  | 0.0%<br>(-100.0 - +100.0%) | 510  |
| b5-08<br>(01AC)<br>RUN<br>Expert | PID Primary Delay Time Constant | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the primary delay time constant for the PID control output. Usually it is not necessary to change this setting.</p>  | 0.00 s<br>(0.00 - 10.00 s) | 510  |
| b5-09<br>(01AD)                  | PID Output Level Selection      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the polarity of the PID output.</p> <p>0 : Normal Output (Direct Acting)<br/>           1 : Reverse Output (Reverse Acting)</p>  | 0<br>(0, 1)                | 510  |
| b5-10<br>(01AE)<br>RUN           | PID Output Gain Setting         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the amount of gain to apply to the PID output.</p>   | 1.00<br>(0.00 - 25.00)     | 510  |
| b5-11<br>(01AF)                  | PID Output Reverse Selection    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that enables and disables reverse motor rotation for negative PID control output.</p> <p>0 : Lower Limit is Zero<br/>           1 : Negative Output Accepted</p>  | 0<br>(0, 1)                | 510  |

## 11.5 b: Application

| No. (Hex.)       | Name                             | Description  | Default (Range)                      | Ref. |
|------------------|----------------------------------|--|--------------------------------------|------|
| b5-12 (01B0)     | Feedback Loss Detection Select   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive response to PID feedback loss/excess. Sets drive operation after the drive detects PID feedback loss/excess.</p> <p>0 : Digital Out Only, Always Detect<br/>           1 : Alarm + Digital Out, Always Det<br/>           2 : Fault + Digital Out, Always Det<br/>           3 : Digital Out Only, @ PID Enable<br/>           4 : Alarm + Digital Out, @PID Enable<br/>           5 : Fault + Digital Out, @PID Enable</p> | 0<br>(0 - 5)                         | 511  |
| b5-13 (01B1)     | PID Feedback Loss Detection Lvl  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the level that triggers <i>PID Feedback Loss [FbL]</i> detection as a percentage of the Maximum Output Frequency.</p> <p><b>Note:</b><br/>           Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.<br/>           • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i><br/>           • <i>A1-02 = 8: E9-02 [Maximum Speed]</i></p>                              | 0%<br>(0 - 100%)                     | 511  |
| b5-14 (01B2)     | PID Feedback Loss Detection Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that PID Feedback must be less than <i>b5-13 [PID Feedback Loss Detection Lvl]</i> to detect <i>PID Feedback Loss [FbL]</i>.</p>   | 1.0 s<br>(0.0 - 25.5 s)              | 512  |
| b5-15 (01B3)     | PID Sleep Function Start Level   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the output level that triggers the PID Sleep function.</p>  | Determined by A1-02<br>(0.0 - 590.0) | 512  |
| b5-16 (01B4)     | PID Sleep Delay Time             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets a delay time to start or stop the PID Sleep function.</p>   | 0.0 s<br>(0.0 - 25.5 s)              | 512  |
| b5-17 (01B5) RUN | PID Accel/Decel Time             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Raises or lowers the PID setpoint using the acceleration and deceleration times set to the drive. This is a soft-starter for the PID setpoint.</p>   | 0.0 s<br>(0.0 - 6000.0 s)            | 512  |
| b5-18 (01DC)     | b5-19 PID Setpoint Selection     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that enables and disables <i>b5-19 [PID Setpoint Value]</i>.</p> <p>0 : Disabled<br/>           1 : Enabled</p>  | 0<br>(0, 1)                          | 512  |
| b5-19 (01DD) RUN | PID Setpoint Value               | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID setpoint when <i>b5-18 = 1 [b5-19 PID Setpoint Selection = Enabled]</i>.</p>  | 0.00%<br>(0.00 - 100.00%)            | 512  |
| b5-20 (01E2)     | PID Unit Selection               | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the number of digits to set and show the PID setpoint.</p> <p>0 : 0.01Hz units<br/>           1 : 0.01% units<br/>           2 : min<sup>-1</sup><br/>           3 : User Units</p>   | 1<br>(0 - 3)                         | 513  |
| b5-34 (019F) RUN | PID Output Lower Limit Level     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the output lower limit for the PID control as a percentage of the Maximum Output Frequency.</p> <p><b>Note:</b><br/>           Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.<br/>           • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i><br/>           • <i>A1-02 = 8: E9-02 [Maximum Speed]</i></p>  | 0.0%<br>(-100.0 - +100.0%)           | 513  |
| b5-35 (01A0) RUN | PID Input Limit Level            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the output upper limit for the PID control as a percentage of the Maximum Output Frequency.</p> <p><b>Note:</b><br/>           Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.<br/>           • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i><br/>           • <i>A1-02 = 8: E9-02 [Maximum Speed]</i></p>  | 1000.0%<br>(0.0 - 1000.0%)           | 513  |
| b5-36 (01A1)     | PID High Feedback Detection Lvl  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the level that triggers <i>Excessive PID Feedback [FbH]</i> as a percentage of the Maximum Output Frequency.</p> <p><b>Note:</b><br/>           Parameter <i>A1-02 [Control Method Selection]</i> selects which parameter is the maximum output frequency.<br/>           • <i>A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]</i><br/>           • <i>A1-02 = 8: E9-02 [Maximum Speed]</i></p>                                   | 100%<br>(0 - 100%)                   | 513  |
| b5-37 (01A2)     | PID High Feedback Detection Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the PID feedback signal must be more than the level set in <i>b5-36 [PID Feedback High Detection Lvl]</i> to cause <i>Excessive PID Feedback [FbH]</i>.</p>   | 1.0 s<br>(0.0 - 25.5 s)              | 514  |

| No. (Hex.)                        | Name                             | Description  | Default (Range)                 | Ref. |
|-----------------------------------|----------------------------------|--|---------------------------------|------|
| b5-38 (01FE)                      | PID User Unit Display Scaling    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the value that the drive sets or shows as the PID setpoint when at the maximum output frequency.   | Determined by b5-20 (1 - 60000) | 514  |
| b5-39 (01FF)                      | PID User Unit Display Digits     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the number of digits to set and show the PID setpoint.<br>0 : No Decimal Places (XXXXX)<br>1 : One Decimal Places (XXXX.X)<br>2 : Two Decimal Places (XXX.XX)<br>3 : Three Decimal Places (XX.XXX)   | Determined by b5-20 (0 - 3)     | 514  |
| b5-40 (017F)                      | Frequency Reference Monitor @PID | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the contents for monitor U1-01 [Frequency Reference] in PID control.<br>0 : U1-01 Includes PID Output<br>1 : U1-01 Excludes PID Output   | 0 (0, 1)                        | 514  |
| b5-47 (017D)                      | PID Trim Mode Output Reverse Sel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets reverse motor rotation when the PID control output is negative.<br>0 : Lower Limit is Zero<br>1 : Negative Output Accepted   | 1 (0, 1)                        | 515  |
| b5-53 (0B8F) RUN                  | PID Integrator Ramp Limit        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the responsiveness of PID control when the PID feedback changes quickly.   | 0.0 Hz (0.0 - 10.0 Hz)          | 515  |
| b5-55 (0BE1)                      | PID Feedback Monitor Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the monitor (Ux-xx) used as the PID Feedback. Set the x-xx part of the Ux-xx [Monitor].  | 000 (000 - 999)                 | 515  |
| b5-56 (0BE2)                      | PID Feedback Monitor Gain        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain for the monitor set in b5-55 [PID Feedback Monitor Selection].  | 1.00 (0.00 - 10.00)             | 516  |
| b5-57 (11DD)                      | PID Feedback Monitor Bias        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias for the monitor specified in b5-55 [PID Feedback Monitor Selection].  | 0.00 (-10.00 - +10.00)          | 516  |
| b5-58 to b5-60: (1182 - 1184) RUN | PID Setpoints 2 to 4             | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the PID setpoint when HI-xx = 3E or 3F [MFDI Function Selection = PID Setpoint Selection 1/2]. This value is a percentage of the maximum output frequency.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.<br>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]<br>• A1-02 = 8: E9-02 [Maximum Speed] | 0.00% (0.00 - 100.00%)          | 516  |
| b5-61 (119A)                      | PID Trim Mode Lower Limit Sel    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that adjusts the PID output in relation to the frequency reference.<br>0 : Disabled<br>1 : Enabled  | 0 (0, 1)                        | 516  |
| b5-62 (119B)                      | PID Trim Mode Lower Limit Value  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the PID Trim Mode Lower Limit Value as a percentage of the maximum output frequency.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.<br>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]<br>• A1-02 = 8: E9-02 [Maximum Speed]   | 0.00% (0.00 - 100.00%)          | 516  |
| b5-63 (119C)                      | PID Differential FB Monitor Sel  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Selects the monitor (Ux-xx) used as the PID Differential Feedback. Set the x-xx part of the Ux-xx [Monitor].  | 000 (000 - 999)                 | 517  |
| b5-64 (119D)                      | PID Differential FB Monitor Gain | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain for the monitor specified in b5-63 [PID Differential FB Monitor Sel].   | 1.00 (0.00 - 10.00)             | 517  |
| b5-65 (119F)                      | PID Differential FB Monitor Bias | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias for the monitor specified in b5-63 [PID Differential FB Monitor Sel].   | 0.00 (-10.00 - +10.00)          | 517  |
| b5-66 (11DE)                      | PID Feedback Monitor Level       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the signal level for the monitor specified in b5-55 [PID Feedback Monitor Selection].<br>0 : Absolute<br>1 : Bi-directional (+/-)  | 0 (0, 1)                        | 517  |
| b5-67 (11DF)                      | PID Differential FB Monitor Lvl  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the signal level for the monitor specified in b5-63 [PID Differential FB Monitor Sel].<br>0 : Absolute<br>1 : Bi-directional (+/-)   | 0 (0, 1)                        | 517  |

## 11.5 b: Application

| No. (Hex.)             | Name                   | Description  | Default (Range)  | Ref. |
|------------------------|------------------------|--|--|------|
| b5-89<br>(0B89)<br>RUN | Sleep Method Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets sleep and wake up operation when using PID.<br>0 : Standard<br>1 : EZ Sleep/Wake-up  | 0<br>(0, 1)  | 517  |
| b5-90<br>(0B90)        | EZ Sleep Unit          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the measurement units for b5-91 [EZ Sleep Minimum Speed] and b5-92 [EZ Sleep Level].<br>0 : 0.1Hz units<br>1 : rev/min   | 0<br>(0, 1)  | 517  |
| b5-91<br>(0B91)<br>RUN | EZ Sleep Minimum Speed | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum speed for the EZ Sleep/Wakeup function. This parameter uses the largest value from b5-91, b5-34 [PID Output Lower Limit Level], and d2-02 [Frequency Reference Lower Limit]. | 0.0 Hz or 0 min <sup>-1</sup> (r/min)<br>(0.0 to 590.0 Hz or 0 to 35400 min <sup>-1</sup> (r/min)) | 518  |
| b5-92<br>(0B92)<br>RUN | EZ Sleep Level         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the value that the output frequency or motor speed must be less than for longer than b5-93 [EZ Sleep Time] to enter Sleep Mode.  | 0.0 Hz or 0 min <sup>-1</sup> (r/min)<br>(0.0 to 590.0 Hz or 0 to 35400 min <sup>-1</sup> (r/min)) | 518  |
| b5-93<br>(0B93)<br>RUN | EZ Sleep Time          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that the output frequency or motor speed must be less than b5-92 [EZ Sleep Level] to enter Sleep Mode.  | 5.0 s<br>(0.0 - 1000.0 s)  | 518  |
| b5-94<br>(0B94)<br>RUN | EZ Sleep Wake-up Level | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level at which the drive resumes operation when exiting Sleep Mode.  | 0.00%<br>(0.00 - 600.00%)  | 518  |
| b5-95<br>(0B95)        | EZ Sleep Wake-up Mode  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the wake-up mode to use when exiting Sleep Mode.<br>0 : Absolute<br>1 : Setpoint Delta   | 0<br>(0, 1)  | 518  |
| b5-96<br>(0B96)<br>RUN | EZ Sleep Wake-up Time  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the EZ Wake-up time.   | 1.0 s<br>(0.0 - 1000.0 s)  | 519  |

## ◆ b6: Dwell Function

| No. (Hex.)      | Name                     | Description   | Default (Range)              | Ref. |
|-----------------|--------------------------|---|------------------------------|------|
| b6-01<br>(01B6) | Dwell Reference at Start | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the output frequency that the drive will hold momentarily when the motor starts.              | 0.0<br>(Determined by A1-02) | 519  |
| b6-02<br>(01B7) | Dwell Time at Start      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that the drive will hold the output frequency when the motor starts.       | 0.0 s<br>(0.0 - 10.0 s)      | 519  |
| b6-03<br>(01B8) | Dwell Reference at Stop  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the output frequency that the drive will hold momentarily when ramping to stop the motor.     | 0.0<br>(Determined by A1-02) | 519  |
| b6-04<br>(01B9) | Dwell Time at Stop       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time for the drive to hold the output frequency when ramping to stop the motor. | 0.0 s<br>(0.0 - 10.0 s)      | 520  |

## ◆ b8: Energy Saving

| No. (Hex.)                       | Name                            | Description  | Default (Range)                     | Ref. |
|----------------------------------|---------------------------------|--|-------------------------------------|------|
| b8-01<br>(01CC)                  | Energy Saving Control Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Energy-saving control function.<br>0 : Disabled<br>1 : Enabled<br>2 : Automatic Optimization<br><b>Note:</b><br>When A1-02 = 6 [Control Method Selection = AOLV/PM], you can only select setting 2 in Expert Mode. | 0<br>(0 - 2)                        | 520  |
| b8-02<br>(01CD)<br>RUN<br>Expert | Energy Saving Gain              | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain for Energy-saving control.  | Determined by A1-02<br>(0.0 - 10.0) | 520  |

| No. (Hex.)                       | Name                             | Description   | Default (Range)  | Ref. |
|----------------------------------|----------------------------------|---|--|------|
| b8-03<br>(01CE)<br>RUN<br>Expert | Energy Saving Filter Time        | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the responsiveness for Energy-saving control.  | Determined by A1-02 ,<br>C6-01 and 02-04<br>(0.00 - 10.00 s) | 520  |
| b8-04<br>(01CF)<br>Expert        | Energy Saving Coefficient Value  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the Energy-saving control coefficient to maintain maximum motor efficiency. The default setting is for Yaskawa motors.  | Determined by C6-01,<br>E2-11, and 02-04<br>(0.00 - 655.00)  | 520  |
| b8-05<br>(01D0)<br>Expert        | Power Detection Filter Time      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the time constant to measure output power.  | 20 ms<br>(0 - 2000 ms)                                       | 521  |
| b8-06<br>(01D1)<br>Expert        | Search Operation Voltage Limit   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the voltage limit for Search Operation as a percentage of the motor rated voltage.  | 0%<br>(0 - 100%)   | 521  |
| b8-16<br>(01F8)<br>Expert        | PM E-Save Coefficient Ki         | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets torque linearity. This parameter uses the Ki value from the motor nameplate. Usually it is not necessary to change this setting.   | 1.00<br>(0.00 - 3.00)  | 521  |
| b8-17<br>(01F9)<br>Expert        | PM E-Save Coefficient Kt         | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets torque linearity. This parameter uses the Kt value from the motor nameplate. Usually it is not necessary to change this setting.   | 1.00<br>(0.00 - 3.00)  | 521  |
| b8-18<br>(01FA)<br>Expert        | E-Save d-axis Current FilterTime | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the d-axis current reference filter time constant.   | 0.100 s<br>(0.000 - 5.000 s)                                 | 522  |
| b8-19<br>(0B40)<br>Expert        | E-Save Search Frequency          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the frequency of Energy-saving control search operations. Usually it is not necessary to change this setting.  | Determined by A1-02<br>(10 - 300 Hz)                         | 522  |
| b8-20<br>(0B41)<br>Expert        | E-Save Search Width              | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the amplitude of Energy-saving control search operations.  | 1.0 degrees<br>(0.1 - 5.0 degrees)                           | 522  |
| b8-21<br>(0B42)<br>Expert        | PM E-Save Search Gain            | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain of Energy-saving control search operations.   | 0.3Hz<br>(0.1 - 20.0 Hz)                                     | 522  |
| b8-22<br>(0B43)<br>Expert        | PM E-Save Search LPF Cutoff Freq | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the frequency of the filter used to extract the high-efficiency phase from search operations. Usually it is not necessary to change this setting.  | 10.0 Hz<br>(1.0 - 30.0 Hz)                                   | 522  |
| b8-23<br>(0B44)<br>Expert        | PM E-Save Search Limit           | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the search operations output limit. Usually it is not necessary to change this setting.  | 15.0 degrees<br>(0.0 - 30.0 degrees)                         | 522  |
| b8-24<br>(0B45)<br>Expert        | PM E-Save High Freq ACR Gain     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain for high-frequency current control.   | 200.0 Hz<br>(100.0 - 1000.0 Hz)                              | 523  |
| b8-25<br>(0B46)<br>Expert        | PM E-Save Search Start Level     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the start level for search operations.   | 10.0%<br>(0.0 - 100.0%)                                      | 523  |
| b8-26<br>(0B47)<br>Expert        | PM E-Save Power Setpoint         | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets a value to increase torque accuracy.   | 0.0%<br>(-10.0 - +10.0%)                                     | 523  |
| b8-28<br>(0B8B)<br>Expert        | Over Excitation Action Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function for excitation operation.<br>0 : Disabled<br>1 : Enabled  | 0<br>(0, 1)  | 523  |
| b8-29<br>(0B8C)                  | Energy Saving Priority Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the priority of drive response between changes to the load or Energy-saving control. Enable this to prioritize energy-saving control. Disable this to prioritize tracking related to fast load changes, and prevent motor stall.<br>0 : Priority: Drive Response<br>1 : Priority: Energy Savings | 0<br>(0, 1)  | 523  |

## 11.6 C: Tuning

### ◆ C1: Accel & Decel Time

| No. (Hex.)             | Name                                 | Description   | Default (Range)                         | Ref. |
|------------------------|--------------------------------------|---|---|------|
| C1-01<br>(0200)<br>RUN | Acceleration Time 1                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency.   | 10.0 s<br>(0.0 - 6000.0 s)              | 525  |
| C1-02<br>(0201)<br>RUN | Deceleration Time 1                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero.   | 10.0 s<br>(0.0 - 6000.0 s)              | 526  |
| C1-03<br>(0202)<br>RUN | Acceleration Time 2                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency.   | 10.0 s<br>(0.0 - 6000.0 s)              | 526  |
| C1-04<br>(0203)<br>RUN | Deceleration Time 2                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero.   | 10.0 s<br>(0.0 - 6000.0 s)              | 526  |
| C1-05<br>(0204)<br>RUN | Acceleration Time 3                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency.   | 10.0 s<br>(0.0 - 6000.0 s)              | 526  |
| C1-06<br>(0205)<br>RUN | Deceleration Time 3                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero.   | 10.0 s<br>(0.0 - 6000.0 s)              | 526  |
| C1-07<br>(0206)<br>RUN | Acceleration Time 4                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency.   | 10.0 s<br>(0.0 - 6000.0 s)              | 526  |
| C1-08<br>(0207)<br>RUN | Deceleration Time 4                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero.   | 10.0 s<br>(0.0 - 6000.0 s)              | 527  |
| C1-09<br>(0208)<br>RUN | Fast Stop Time                       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that the drive will decelerate to zero for a Fast Stop.<br><b>Note:</b><br>• Decelerating too quickly can cause an <i>ov</i> [Overvoltage] fault that shuts off the drive while the motor to coasts to a stop. Set a Fast Stop time in C1-09 that prevents motor coasting and makes sure that the motor stops quickly and safely.<br>• When L2-29 = 0 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru I] and you do KEB Auto-Tuning, the drive will automatically set C1-09. If you must not change the Fast Stop time, do not do KEB Tuning. | 10.0 s<br>(0.0 - 6000.0 s)              | 527  |
| C1-10<br>(0209)        | Accel/Decel Time Setting Units       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the setting units for C1-01 to C1-08 [Accel/Decel Times 1 to 4], C1-09 [Fast Stop Time], L2-06 [Kinetic Energy Backup Decel Time], and L2-07 [Kinetic Energy Backup Accel Time].<br>0 : 0.01 s (0.00 to 600.00 s)<br>1 : 0.1 s (0.0 to 6000.0 s)  | 1<br>(0, 1)                             | 527  |
| C1-11<br>(020A)        | Accel/Decel Time Switching Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency at which the drive will automatically change acceleration and deceleration times.   | Determined by A1-02<br>(0.0 - 590.0 Hz) | 527  |
| C1-14<br>(0264)<br>RUN | Accel/Decel Rate Frequency           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the base frequency used to calculate acceleration and deceleration rates.   | 0.0 Hz<br>(0.0 - 590.0 Hz)              | 528  |

### ◆ C2: S-Curve Characteristics

| No. (Hex.)      | Name                          | Description  | Default (Range)                         | Ref. |
|-----------------|-------------------------------|--|---|------|
| C2-01<br>(020B) | S-Curve Time @ Start of Accel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the S-curve acceleration time at start.      | Determined by A1-02<br>(0.00 - 10.00 s) | 530  |
| C2-02<br>(020C) | S-Curve Time @ End of Accel   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the S-curve acceleration time at completion. | 0.20 s<br>(0.00 - 10.00 s)              | 530  |
| C2-03<br>(020D) | S-Curve Time @ Start of Decel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the S-curve deceleration time at start.      | 0.20 s<br>(0.00 - 10.00 s)              | 530  |
| C2-04<br>(020E) | S-Curve Time @ End of Decel   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the S-curve deceleration time at completion. | 0.00 s<br>(0.00 - 10.00 s)              | 530  |

## ◆ C3: Slip Compensation

| No. (Hex.)                | Name                             | Description   | Default (Range)                       | Ref. |
|---------------------------|----------------------------------|---|---------------------------------------|------|
| C3-01<br>(020F)<br>RUN    | Slip Compensation Gain           | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain for the slip compensation function. Usually it is not necessary to change this setting.</p> <p><b>Note:</b><br/>Correctly set these parameters before changing the slip compensation gain:</p> <ul style="list-style-type: none"> <li>• E2-01 [Motor Rated Current (FLA)]</li> <li>• E2-02 [Motor Rated Slip]</li> <li>• E2-03 [Motor No-Load Current]</li> </ul>               | Determined by A1-02<br>(0.0 - 2.5)    | 530  |
| C3-02<br>(0210)<br>RUN    | Slip Compensation Delay Time     | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the slip compensation delay time when speed is unstable or when the slip compensation response is too slow. Usually it is not necessary to change this setting.</p>  | Determined by A1-02<br>(0 - 10000 ms) | 530  |
| C3-03<br>(0211)           | Slip Compensation Limit          | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the upper limit for the slip compensation function as a percentage of the motor rated slip.</p>  | 200%<br>(0 - 250%)                    | 531  |
| C3-04<br>(0212)           | Slip Compensation at Regen       | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the slip compensation function during regenerative operation.</p> <p>0 : Disabled<br/>1 : Enabled Above 6Hz<br/>2 : Enabled Above C3-15</p>  | 0<br>(0 - 2)                          | 531  |
| C3-05<br>(0213)           | Output Voltage Limit Selection   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the automatic reduction of motor magnetic flux when the output voltage is saturated.</p> <p>0 : Disabled<br/>1 : Enabled</p>   | 0<br>(0, 1)                           | 531  |
| C3-16<br>(0261)<br>Expert | Vout Modulation Limit Start Lvl  | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the modulation factor that starts the output voltage limit operation when C3-05 = 1 [Output Voltage Limit Selection = Enabled].</p>  | 90.0%<br>(70.0 - 90.0%)               | 532  |
| C3-17<br>(0262)<br>Expert | Vout Modulation Limit Max Level  | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the modulation factor used with C3-18 [Output Voltage Limit Level] for the output voltage limit operation when C3-05 = 1 [Output Voltage Limit Selection = Enabled].</p>   | 100.0%<br>(85.0 - 100.0%)             | 532  |
| C3-18<br>(0263)<br>Expert | Output Voltage Limit Level       | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the maximum drop width of the voltage reference when C3-05 = 1 [Output Voltage Limit Selection = Enabled].</p>   | 90.0%<br>(50.0 - 100.0%)              | 532  |
| C3-21<br>(033E)<br>RUN    | Motor 2 Slip Compensation Gain   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain for the motor 2 slip compensation function. Usually it is not necessary to change this setting.</p> <p><b>Note:</b><br/>Correctly set these parameters before changing the slip compensation gain:</p> <ul style="list-style-type: none"> <li>• E4-01 [Motor 2 Rated Current]</li> <li>• E4-02 [Motor 2 Rated Slip]</li> <li>• E4-03 [Motor 2 Rated No-Load Current]</li> </ul> | Determined by E3-01<br>(0.0 - 2.5)    | 532  |
| C3-22<br>(0241)<br>RUN    | Motor 2 Slip Comp Delay Time     | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the slip compensation delay time for motor 2 when speed is unstable or when the slip compensation response is too slow. Usually it is not necessary to change this setting.</p>  | Determined by E3-01<br>(0 - 10000 ms) | 532  |
| C3-23<br>(0242)           | Motor 2 Slip Compensation Limit  | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the upper limit for the slip compensation function as a percentage of the motor 2 rated slip.</p>  | 200%<br>(0 - 250%)                    | 533  |
| C3-24<br>(0243)           | Motor 2 Slip Comp during Regen   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the slip compensation during regenerative operation function for motor 2.</p> <p>0 : Disabled<br/>1 : Enabled Above 6Hz<br/>2 : Enabled Above C3-15</p>  | 0<br>(0 - 2)                          | 533  |
| C3-29<br>(1B5D)<br>Expert | Slip Compensation Gain @ Low Spd | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain for the slip compensation function in the low speed range. Usually it is not necessary to change this setting.</p>  | 0.0<br>(0.0 - 2.5)                    | 533  |

## ◆ C4: Torque Compensation

| No. (Hex.)                       | Name                             | Description   | Default (Range)                       | Ref. |
|----------------------------------|----------------------------------|---|---------------------------------------|------|
| C4-01<br>(0215)<br>RUN           | Torque Compensation Gain         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the gain for the torque compensation function. Use this parameter value for motor 1 when operating multiple motors.</p> <p><b>Note:</b><br/>When <math>A1-02 = 8</math> [Control Method Selection = EZOLV], you cannot change this parameter during drive run.</p> | Determined by A1-02<br>(0.00 - 2.50)  | 534  |
| C4-02<br>(0216)<br>RUN           | Torque Compensation Delay Time   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the torque compensation delay time. Usually it is not necessary to change this setting.</p> <p><b>Note:</b><br/>If <math>A1-02 = 8</math> [Control Method Selection = EZOLV], you cannot change the setting while the drive is running.</p>                        | Determined by A1-02<br>(0 - 60000 ms) | 534  |
| C4-03<br>(0217)                  | Torque Compensation @ FWD Start  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Set the amount of torque reference for forward start as a percentage of the motor rated torque.</p>   | 0.0%<br>(0.0 - 200.0%)                | 534  |
| C4-04<br>(0218)                  | Torque Compensation @ REV Start  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the amount of torque reference for reverse start as a percentage of the motor rated torque.</p>  | 0.0%<br>(-200.0 - 0.0%)               | 535  |
| C4-05<br>(0219)                  | Torque Compensation Time         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the starting torque constant to use with C4-03 and C4-04 [Torque Compensation @ FWD/REV Start].</p>  | 10 ms<br>(0 - 200 ms)                 | 535  |
| C4-06<br>(021A)                  | Motor 2 Torque Comp Delay Time   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the value if <i>ov</i> [Overvoltage] occurs with sudden changes in the load, at the end of acceleration, or at the start of deceleration.</p>  | 150 ms<br>(0 - 10000 ms)              | 535  |
| C4-07<br>(0341)<br>RUN           | Motor 2 Torque Compensation Gain | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the gain for motor 2 torque compensation function when using the Motor Switch function.</p>  | 1.00<br>(0.00 - 2.50)                 | 535  |
| C4-23<br>(1583)<br>RUN<br>Expert | Current Control Gain             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Current control gain. Usually it is not necessary to change this parameter.</p>   | 1.00<br>(0.50 - 2.50)                 | 535  |

## ◆ C5: Automatic Speed Regulator (ASR: Automatic Speed Regulator)

| No. (Hex.)             | Name                    | Description   | Default (Range)                           | Ref. |
|------------------------|-------------------------|---|---|------|
| C5-01<br>(021B)<br>RUN | ASR Proportional Gain 1 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the gain to adjust ASR response.</p> <p><b>Note:</b><br/>When <math>A1-02 = 0</math> [Control Method Selection = V/f], set <math>H6-01 = 3</math> [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>  | Determined by A1-02<br>(0.00 - 300.00)    | 538  |
| C5-02<br>(021C)<br>RUN | ASR Integral Time 1     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the ASR integral time.</p> <p><b>Note:</b><br/>When <math>A1-02 = 0</math> [Control Method Selection = V/f], set <math>H6-01 = 3</math> [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>  | Determined by A1-02<br>(0.000 - 60.000 s) | 538  |
| C5-03<br>(021D)<br>RUN | ASR Proportional Gain 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the gain to adjust ASR response.</p> <p><b>Note:</b><br/>When <math>A1-02 = 0</math> [Control Method Selection = V/f], set <math>H6-01 = 3</math> [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>  | Determined by A1-02<br>(0.00 - 300.00)    | 538  |
| C5-04<br>(021E)<br>RUN | ASR Integral Time 2     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the ASR integral time.</p> <p><b>Note:</b><br/>When <math>A1-02 = 0</math> [Control Method Selection = V/f], set <math>H6-01 = 3</math> [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>  | Determined by A1-02<br>(0.000 - 60.000 s) | 538  |
| C5-05<br>(021F)        | ASR Limit               | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the ASR output limit where <math>E1-04</math> [Maximum Output Frequency] is 100%.</p> <p><b>Note:</b><br/>When <math>A1-02 = 0</math> [Control Method Selection = V/f], set <math>H6-01 = 3</math> [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p> | 5.0%<br>(0.0 - 20.0%)                     | 538  |
| C5-06<br>(0220)        | ASR Delay Time          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the filter time constant of the torque reference output from the speed loop. Usually it is not necessary to change this setting.</p>   | Determined by A1-02<br>(0.000 - 0.500 s)  | 539  |



| No. (Hex.)          | Name                             | Description   | Default (Range)                              | Ref. |
|---------------------|----------------------------------|---|--|------|
| C5-07 (0221)        | ASR Gain Switchover Frequency    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency where the drive will switch between these parameters:<br>C5-01 and C5-03 [ASR Proportional Gain 1/2]<br>C5-02 and C5-04 [ASR Integral Time 1/2]   | Determined by A1-02<br>(Determined by A1-02) | 539  |
| C5-08 (0222)        | ASR Integral Limit               | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Set the upper limit of the ASR integral amount as a percentage of the rated load.  | 400%<br>(0 - 400%)                           | 539  |
| C5-12 (0386)        | Integral Operation @ Accel/Decel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets ASR integral operation during acceleration and deceleration.<br>0 : No<br>1 : Yes<br><b>Note:</b><br>When A1-02 = 0 [Control Method Selection = V/f], set H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter. | 0<br>(0, 1)                                  | 539  |
| C5-29 (0B18) Expert | Speed Control Response           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level of speed control responsiveness. Usually it is not necessary to change this setting.<br>0 : Standard<br>1 : High Performance 1  | 1<br>(0, 1)                                  | 540  |
| C5-39 (030D)        | ASR Primary Delay Time Const 2   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the filter time constant used when the torque reference is output from ASR. Usually it is not necessary to change this parameter.   | 0.000 s<br>(0.000 - 0.500 s)                 | 540  |

## ◆ C6: Duty & Carrier Frequency

| No. (Hex.)   | Name                            | Description  | Default (Range)  | Ref. |
|--------------|---------------------------------|--|--|------|
| C6-01 (0223) | Normal / Heavy Duty Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive duty rating.<br>0 : Heavy Duty Rating<br>1 : Normal Duty Rating  | 0<br>(0, 1)  | 540  |
| C6-02 (0224) | Carrier Frequency Selection     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the carrier frequency for the transistors in the drive.<br>1 : 2.0 kHz<br>2 : 5.0 kHz (4.0 kHz for AOLV/PM)<br>3 : 8.0 kHz<br>4 : 10.0 kHz<br>5 : 12.5 kHz<br>6 : 15.0 kHz<br>7 : Swing PWM1 (Audible Sound 1)<br>8 : Swing PWM2 (Audible Sound 2)<br>9 : Swing PWM3 (Audible Sound 3)<br>A : Swing PWM4 (Audible Sound 4)<br>B : Leakage Current Rejection PWM<br>F : User Defined (C6-03 to C6-05)<br><b>Note:</b><br>• The setting range changes when the A1-02 [Control Method Selection] value changes:<br>–5, 8 [OLV/PM, EZOLV]: Settings 7 to A are not available.<br>–When 6 [AOLV/PM]: 2 [5.0 kHz (AOLV/PM: 4.0 kHz)] is available.<br>• The carrier frequency for Swing PWM 1 is equivalent to 2.0 kHz. Swing PWM applies a special PWM pattern to decrease the audible noise. | Determined by A1-02, C6-01, and a2-04<br>(Determined by A1-02) | 541  |
| C6-03 (0225) | Carrier Frequency Upper Limit   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the upper limit of the carrier frequency. Set C6-02 = F [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter.   | Determined by C6-02<br>(1.0 - 15.0 kHz)                        | 542  |
| C6-04 (0226) | Carrier Frequency Lower Limit   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower limit of the carrier frequency. Set C6-02 = F [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter.   | Determined by C6-02<br>(1.0 - 15.0 kHz)                        | 542  |
| C6-05 (0227) | Carrier Freq Proportional Gain  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the proportional gain for the carrier frequency. Set C6-02 = F [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter.  | Determined by C6-02<br>(0 - 99)                                | 543  |
| C6-09 (022B) | Carrier Freq at Rotational Tune | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Auto-Tuning carrier frequency. Usually it is not necessary to change this setting.<br>0 : 5 kHz<br>1 : Use C6-03   | 0<br>(0, 1)  | 543  |

## 11.7 d: Reference Settings

### ◆ d1: Frequency Reference

| No. (Hex.)             | Name         | Description  | Default (Range)               | Ref. |
|------------------------|--------------|--|-------------------------------|------|
| d1-01<br>(0280)<br>RUN | Reference 1  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 546  |
| d1-02<br>(0281)<br>RUN | Reference 2  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 546  |
| d1-03<br>(0282)<br>RUN | Reference 3  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 547  |
| d1-04<br>(0283)<br>RUN | Reference 4  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 547  |
| d1-05<br>(0284)<br>RUN | Reference 5  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 547  |
| d1-06<br>(0285)<br>RUN | Reference 6  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 547  |
| d1-07<br>(0286)<br>RUN | Reference 7  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 547  |
| d1-08<br>(0287)<br>RUN | Reference 8  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 548  |
| d1-09<br>(0288)<br>RUN | Reference 9  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 548  |
| d1-10<br>(028B)<br>RUN | Reference 10 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 548  |
| d1-11<br>(028C)<br>RUN | Reference 11 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].</p> <p><b>Note:</b><br/>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].</p> | 0.00 Hz<br>(0.00 - 590.00 Hz) | 548  |

| No. (Hex.)       | Name          | Description   | Default (Range)               | Ref. |
|------------------|---------------|---|-------------------------------|------|
| d1-12 (028D) RUN | Reference 12  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].<br><b>Note:</b><br>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].  | 0.00 Hz<br>(0.00 - 590.00 Hz) | 548  |
| d1-13 (028E) RUN | Reference 13  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].<br><b>Note:</b><br>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].  | 0.00 Hz<br>(0.00 - 590.00 Hz) | 549  |
| d1-14 (028F) RUN | Reference 14  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].<br><b>Note:</b><br>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].  | 0.00 Hz<br>(0.00 - 590.00 Hz) | 549  |
| d1-15 (0290) RUN | Reference 15  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].<br><b>Note:</b><br>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].  | 0.00 Hz<br>(0.00 - 590.00 Hz) | 549  |
| d1-16 (0291) RUN | Reference 16  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection].<br><b>Note:</b><br>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)].  | 0.00 Hz<br>(0.00 - 590.00 Hz) | 549  |
| d1-17 (0292) RUN | Jog Reference | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Jog frequency reference in the units from o1-03 [Frequency Display Unit Selection]. Set H1-xx = 6 [MFDI Function Select = Jog Reference Selection] to use the Jog frequency reference.<br><b>Note:</b><br>When A1-02 = 6 [Control Method Selection = AOLV/PM], the default setting is o1-03 = 1 [0.01% (100% = E1-04)]. | 6.00 Hz<br>(0.00 - 590.00 Hz) | 549  |

## ◆ d2: Reference Limits

| No. (Hex.)   | Name                             | Description   | Default (Range)          | Ref. |
|--------------|----------------------------------|---|--------------------------|------|
| d2-01 (0289) | Frequency Reference Upper Limit  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets maximum limit for all frequency references. The maximum output frequency is 100%.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.<br>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]<br>• A1-02 = 8: E9-02 [Motor Max Revolutions]   | 100.0%<br>(0.0 - 110.0%) | 550  |
| d2-02 (028A) | Frequency Reference Lower Limit  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets minimum limit for all frequency references. The maximum output frequency is 100%.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.<br>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]<br>• A1-02 = 8: E9-02 [Motor Max Revolutions]   | 0.0%<br>(0.0 - 110.0%)   | 550  |
| d2-03 (0293) | Analog Frequency Ref Lower Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower limit for the master frequency reference (the first frequency of the multi-step speed reference) as a percentage. The maximum output frequency is 100%.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.<br>• A1-02 ≠ 8: E1-04 [Maximum Output Frequency]<br>• A1-02 = 8: E9-02 [Maximum Speed] | 0.0%<br>(0.0 - 110.0%)   | 550  |

### ◆ d3: Jump Frequency

| No. (Hex.)      | Name                 | Description   | Default (Range)                 | Ref. |
|-----------------|----------------------|---|---------------------------------|------|
| d3-01<br>(0294) | Jump Frequency 1     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the median value of the frequency band that the drive will avoid. | 0.0 Hz<br>(Determined by A1-02) | 551  |
| d3-02<br>(0295) | Jump Frequency 2     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the median value of the frequency band that the drive will avoid. | 0.0 Hz<br>(Determined by A1-02) | 551  |
| d3-03<br>(0296) | Jump Frequency 3     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the median value of the frequency band that the drive will avoid. | 0.0 Hz<br>(Determined by A1-02) | 551  |
| d3-04<br>(0297) | Jump Frequency Width | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the width of the frequency band that the drive will avoid.        | 1.0 Hz<br>(Determined by A1-02) | 551  |

### ◆ d4: Frequency Ref Up/Down & Hold

| No. (Hex.)             | Name                            | Description  | Default (Range)              | Ref. |
|------------------------|---------------------------------|--|------------------------------|------|
| d4-01<br>(0298)        | Freq Reference Hold Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that saves the frequency reference or the frequency bias (Up/Down 2) after a Stop command or when de-energizing the drive.<br>Set <i>H1-xx</i> [ <i>MFDI Function Selection</i> ] to one of these values to enable this parameter:<br>• <i>A</i> [ <i>Accel/Decel Ramp Hold</i> ]<br>• <i>10/11</i> [ <i>Up/Down Command</i> ]<br>• <i>75/76</i> [ <i>Up/Down 2 Command</i> ]<br>0 : Disabled<br>1 : Enabled  | 0<br>(0, 1)                  | 552  |
| d4-03<br>(02AA)<br>RUN | Up/Down 2 Bias Step Frequency   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias that the Up/Down 2 function adds to or subtracts from the frequency reference.  | 0.00 Hz<br>(0.00 - 99.99 Hz) | 554  |
| d4-04<br>(02AB)<br>RUN | Up/Down 2 Ramp Selection        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the acceleration and deceleration times for the Up/Down 2 function to apply the bias to the frequency reference.<br>0 : Use Selected Accel/Decel Time<br>1 : Use Accel/Decel Time 4  | 0<br>(0, 1)                  | 554  |
| d4-05<br>(02AC)<br>RUN | Up/Down 2 Bias Mode Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that saves the bias value to the drive when you open or close the two <i>Up/Down 2 Commands</i> [ <i>H1-xx = 75, 76</i> ]. Set <i>d4-03</i> [ <i>Up/Down 2 Bias Step Frequency</i> ] = 0.00 before you set this parameter.<br>0 : Hold when Neither Up/Down Closed<br>1 : Reset when Neither / Both Closed  | 0<br>(0, 1)                  | 555  |
| d4-06<br>(02AD)        | Frequency Ref Bias (Up/Down 2)  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Saves the bias value from the Up/Down 2 Command where the Maximum Output Frequency is 100%.<br><b>Note:</b><br>Parameter <i>A1-02</i> [ <i>Control Method Selection</i> ] selects which parameter is the maximum output frequency.<br>• <i>A1-02 ≠ 8</i> [ <i>EZOLV</i> ]: <i>E1-04</i> [ <i>Maximum Output Frequency</i> ]<br>• <i>A1-02 = 8</i> : <i>E9-02</i> [ <i>Maximum Speed</i> ]   | 0.0%<br>(-99.9 - +100.0%)    | 555  |
| d4-07<br>(02AE)<br>RUN | Analog Freq Ref Fluctuate Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>If the frequency reference changes for more than the level set to this parameter, then the bias value will be held. The value is set as a percentage of the Maximum Output Frequency.<br><b>Note:</b><br>Parameter <i>A1-02</i> [ <i>Control Method Selection</i> ] selects which parameter is the maximum output frequency.<br>• <i>A1-02 ≠ 8</i> [ <i>EZOLV</i> ]: <i>E1-04</i> [ <i>Maximum Output Frequency</i> ]<br>• <i>A1-02 = 8</i> : <i>E9-02</i> [ <i>Maximum Speed</i> ] | 1.0%<br>(0.1 - 100.0%)       | 555  |
| d4-08<br>(02AF)<br>RUN | Up/Down 2 Bias Upper Limit      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the upper limit of the Up/Down 2 bias as a percentage of the Maximum Output Frequency.<br><b>Note:</b><br>Parameter <i>A1-02</i> [ <i>Control Method Selection</i> ] selects which parameter is the maximum output frequency.<br>• <i>A1-02 ≠ 8</i> [ <i>EZOLV</i> ]: <i>E1-04</i> [ <i>Maximum Output Frequency</i> ]<br>• <i>A1-02 = 8</i> : <i>E9-02</i> [ <i>Maximum Speed</i> ]   | 100.0%<br>(0.0 - 100.0%)     | 556  |

| No. (Hex.)             | Name                            | Description   | Default (Range)        | Ref. |
|------------------------|---------------------------------|---|------------------------|------|
| d4-09<br>(02B0)<br>RUN | Up/Down 2 Bias Lower Limit      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower limit of the Up/Down 2 bias as a percentage of the Maximum Output Frequency.<br><b>Note:</b><br>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed] | 0.0%<br>(-99.9 - 0.0%) | 556  |
| d4-10<br>(02B6)        | Up/Down Freq Lower Limit Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower frequency limit for the Up/Down function.<br>0 : Greater of d2-02 or Analog<br>1 : d2-02  | 0<br>(0, 1)            | 556  |
| d4-11<br>(02B7)        | Bi-directional Output Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that changes the frequency reference to a Bi-Directional internal frequency reference.<br>0 : Disable<br>1 : Enabled   | 0<br>(0, 1)            | 556  |
| d4-12<br>(02B8)        | Stop Position Gain              | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain to adjust the stopping accuracy. Set this parameter when <i>b1-03</i> = 9 [Stopping Method Selection = Stop with Constant Distance].   | 1.00<br>(0.50 - 2.55)  | 557  |

### ◆ d6: Field Weakening /Forcing

| No. (Hex.)      | Name                            | Description   | Default (Range)            | Ref. |
|-----------------|---------------------------------|---|----------------------------|------|
| d6-01<br>(02A0) | Field Weakening Level           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive output voltage as a percentage of <i>E1-05</i> [Maximum Output Voltage] when <i>H1-xx</i> = 63 [Field Weakening] is activated.  | 80%<br>(0 - 100%)          | 558  |
| d6-02<br>(02A1) | Field Weakening Frequency Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum output frequency to start field weakening.  | 0.0 Hz<br>(0.0 - 590.0 Hz) | 558  |
| d6-03<br>(02A2) | Field Forcing Selection         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the field forcing function.<br>0 : Disabled<br>1 : Enabled  | 0<br>(0, 1)                | 558  |
| d6-06<br>(02A5) | Field Forcing Limit             | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the limit value for field forcing to increase the motor excitation current reference as a percentage of <i>E2-03</i> [Motor No-Load Current]. Usually it is not necessary to change this setting. | 400%<br>(100 - 400%)       | 558  |

### ◆ d7: Offset Frequency

| No. (Hex.)             | Name               | Description  | Default (Range)            | Ref. |
|------------------------|--------------------|--|----------------------------|------|
| d7-01<br>(02B2)<br>RUN | Offset Frequency 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses <i>H1-xx</i> = 44 [MFDI Function Select = Add Offset Frequency 1 (d7-01)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference.<br><b>Note:</b><br>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed] | 0.0%<br>(-100.0 - +100.0%) | 559  |
| d7-02<br>(02B3)<br>RUN | Offset Frequency 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses <i>H1-xx</i> = 45 [MFDI Function Select = Add Offset Frequency 2 (d7-02)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference.<br><b>Note:</b><br>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed] | 0.0%<br>(-100.0 - +100.0%) | 559  |
| d7-03<br>(02B4)<br>RUN | Offset Frequency 3 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses <i>H1-xx</i> = 46 [MFDI Function Select = Add Offset Frequency 3 (d7-03)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference.<br><b>Note:</b><br>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed] | 0.0%<br>(-100.0 - +100.0%) | 559  |

## 11.8 E: Motor Parameters

### ◆ E1: V/f Pattern for Motor 1

| No. (Hex.)                | Name                     | Description  | Default (Range)  | Ref. |
|---------------------------|--------------------------|--|--|------|
| E1-01<br>(0300)           | Input AC Supply Voltage  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive input voltage.</p> <p><b>NOTICE:</b> Set parameter E1-01 to align with the drive input voltage (not motor voltage). If this parameter is incorrect, the protective functions of the drive will not operate correctly and it can cause damage to the drive.</p>  | 200 V Class: 230 V, 400 V: 400 V<br>(200 V Class: 155 to 255 V, 400 V Class: 310 to 510 V)       | 561  |
| E1-03<br>(0302)           | V/f Pattern Selection    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the V/f pattern for the drive and motor. You can use one of the preset patterns or you can make a custom pattern.</p> <p>0 : Const Trq, 50Hz base, 50Hz max<br/>1 : Const Trq, 60Hz base, 60Hz max<br/>2 : Const Trq, 50Hz base, 60Hz max<br/>3 : Const Trq, 60 Hz base, 72 Hz max<br/>4 : VT, 50Hz, 65% Vmid reduction<br/>5 : VT, 50Hz, 50% Vmid reduction<br/>6 : VT, 60 Hz, 65% Vmid reduction<br/>7 : VT, 60 Hz, 50% Vmid reduction<br/>8 : High Trq, 50Hz, 25% Vmin Boost<br/>9 : High Trq, 50Hz, 65% Vmin Boost<br/>A : High Trq, 60 Hz, 25% Vmin Boost<br/>B : High Trq, 60 Hz, 65% Vmin Boost<br/>C : Const Trq, 60 Hz base, 90 Hz max<br/>D : Const Trq, 60 Hz base, 120 Hz max<br/>E : Const Trq, 60 Hz base, 180 Hz max<br/>F : V/f Pattern Selection</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>When A1-02 = 2 [Control Method Selection = OLV], settings 0 to E are not available.</li> <li>Set the correct V/f pattern for the application and operation area. An incorrect V/f pattern can decrease motor torque and increase current from overexcitation.</li> </ul> | F<br>(Determined by A1-02)   | 561  |
| E1-04<br>(0303)           | Maximum Output Frequency | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum output frequency for the V/f pattern.</p>   | Determined by A1-02 and E5-01<br>(Determined by A1-02 and E5-01)                                 | 566  |
| E1-05<br>(0304)           | Maximum Output Voltage   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum output voltage for the V/f pattern.</p>   | 200.0<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V)                                | 566  |
| E1-06<br>(0305)           | Base Frequency           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the base frequency for the V/f pattern.</p>   | Determined by A1-02 and E5-01<br>(0.0 - E1-04)   | 566  |
| E1-07<br>(0306)           | Mid Point A Frequency    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets a middle output frequency for the V/f pattern.</p>  | Determined by A1-02<br>(0.0 - E1-04)   | 566  |
| E1-08<br>(0307)           | Mid Point A Voltage      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets a middle output voltage for the V/f pattern.</p>  | Determined by A1-02, C6-01 and o2-04<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) | 567  |
| E1-09<br>(0308)           | Minimum Output Frequency | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum output frequency for the V/f pattern.</p>   | Determined by A1-02 and E5-01<br>(Determined by A1-02, E1-04, and E5-01)                         | 567  |
| E1-10<br>(0309)           | Minimum Output Voltage   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum output voltage for the V/f pattern.</p>   | Determined by A1-02<br>(200 V Class: 0.0 to 255.0 V, 400 V Class: 0.0 to 510.0 V)                | 567  |
| E1-11<br>(030A)<br>Expert | Mid Point B Frequency    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets a middle output frequency for the V/f pattern.</p>  | 0.0 Hz<br>(0.0 - E1-04)  | 567  |

| No. (Hex.)          | Name                | Description   | Default (Range)   | Ref. |
|---------------------|---------------------|---|---|------|
| E1-12 (030B) Expert | Mid Point B Voltage | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets a middle point voltage for the V/f pattern. | 0.0 V<br>(200 V Class: 0.0 to 255.0 V, 400 V Class: 0.0 to 510.0 V) | 567  |
| E1-13 (030C) Expert | Base Voltage        | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the base voltage for the V/f pattern.       | 0.0 V<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V)   | 567  |

## ◆ E2: Motor Parameters

| No. (Hex.)          | Name                           | Description  | Default (Range)  | Ref. |
|---------------------|--------------------------------|--|--|------|
| E2-01 (030E)        | Motor Rated Current (FLA)      | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the motor rated current in amps.   | Determined by o2-04, C6-01<br>(10% to 200% of the drive rated current) | 188  |
| E2-02 (030F)        | Motor Rated Slip               | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets motor rated slip.  | Determined by o2-04, C6-01<br>(0.000 - 20.000 Hz)                      | 568  |
| E2-03 (0310)        | Motor No-Load Current          | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the no-load current for the motor in amps when operating at the rated frequency and the no-load voltage.   | Determined by o2-04, C6-01<br>(0 to E2-01)                             | 568  |
| E2-04 (0311)        | Motor Pole Count               | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the number of motor poles.<br><b>Note:</b><br>• When A1-02 = 0 [Control Method Selection = V/f], the maximum value is 120.<br>• When A1-02 = 2 [OLV], the maximum value is 48. | 4<br>(2 - 120)   | 569  |
| E2-05 (0312)        | Motor Line-to-Line Resistance  | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the line-to-line resistance for the motor stator windings.   | Determined by o2-04, C6-01<br>(0.000 - 65.000 Ω)                       | 569  |
| E2-06 (0313)        | Motor Leakage Inductance       | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the voltage drop from motor leakage inductance when the motor is operating at the rated frequency and rated current. This value is a percentage of Motor Rated Voltage.        | Determined by o2-04, C6-01<br>(0.0 - 60.0%)                            | 569  |
| E2-07 (0314)        | Motor Saturation Coefficient 1 | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the motor iron-core saturation coefficient at 50% of the magnetic flux.  | 0.50<br>(0.00 - 0.50)  | 569  |
| E2-08 (0315)        | Motor Saturation Coefficient 2 | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the motor iron-core saturation coefficient at 75% of the magnetic flux.  | 0.75<br>(E2-07 - 0.75)   | 569  |
| E2-09 (0316) Expert | Motor Mechanical Loss          | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the mechanical loss of the motor. It is set as a percentage of E2-11 [Motor Rated Power]. Usually it is not necessary to change this setting.                                  | 0.0%<br>(0.0 - 10.0%)  | 570  |
| E2-10 (0317)        | Motor Iron Loss                | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the motor iron loss.   | Determined by o2-04, C6-01<br>(0 - 65535 W)                            | 570  |
| E2-11 (0318)        | Motor Rated Power              | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the motor rated output in the units from o1-58 [Motor Power Unit Selection].   | Determined by o2-04, C6-01<br>(0.00 - 650.00 kW)                       | 570  |

## ◆ E3: V/f Pattern for Motor 2

| No. (Hex.)   | Name                             | Description   | Default (Range)  | Ref. |
|--------------|----------------------------------|---|--|------|
| E3-01 (0319) | Motor 2 Control Mode Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the control method for motor 2.<br><b>Note:</b><br>When you change this setting, the drive will set all parameters that are dependent on this parameter to their default settings.<br>0 : V/f Control<br>2 : Open Loop Vector | 0<br>(0, 2)  | 571  |
| E3-04 (031A) | Motor 2 Maximum Output Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Set the maximum output frequency for the motor 2 V/f pattern.  | Determined by E3-01<br>(40.0 - 590.0 Hz)   | 571  |
| E3-05 (031B) | Motor 2 Maximum Output Voltage   | <b>V/f</b> <b>OLV</b> <b>OLV/IPM</b> <b>AOLV/IPM</b> <b>EZOLV</b><br>Sets the maximum output voltage for the motor 2 V/f pattern.   | Determined by E3-01<br>(200 V Class: 0.0 - 255.0 V,<br>400 V Class: 0.0 - 510.0 V) | 571  |

## 11.8 E: Motor Parameters

| No. (Hex.)          | Name                             | Description  | Default (Range)  | Ref. |
|---------------------|----------------------------------|--|--|------|
| E3-06 (031C)        | Motor 2 Base Frequency           | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the base frequency for the motor 2 V/f pattern.  | Determined by E3-01 (0.0 - E3-04)  | 571  |
| E3-07 (031D)        | Motor 2 Mid Point A Frequency    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets a middle output frequency for the motor 2 V/f pattern.   | Determined by E3-01 (0.0 - E3-04)  | 571  |
| E3-08 (031E)        | Motor 2 Mid Point A Voltage      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets a middle output voltage for the motor 2 V/f pattern.   | Determined by E3-01 (200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) | 571  |
| E3-09 (031F)        | Motor 2 Minimum Output Frequency | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the minimum output frequency for the motor 2 V/f pattern.  | Determined by E3-01 (0.0 - E3-04)  | 571  |
| E3-10 (0320)        | Motor 2 Minimum Output Voltage   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the minimum output voltage for the motor 2 V/f pattern.  | Determined by E3-01 (200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) | 572  |
| E3-11 (0345) Expert | Motor 2 Mid Point B Frequency    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets a middle output frequency for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter. | 0.0 Hz (0.0 - E3-04)   | 572  |
| E3-12 (0346) Expert | Motor 2 Mid Point B Voltage      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets a middle output voltage for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter.   | 0.0 V (200 V Class: 0.0 to 255.0 V, 400 V Class: 0.0 to 510.0 V)             | 572  |
| E3-13 (0347) Expert | Motor 2 Base Voltage             | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the base voltage for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter.          | 0.0 V (200 V Class: 0.0 to 255.0 V, 400 V Class: 0.0 to 510.0 V)             | 572  |

## ◆ E4: Motor 2 Parameters

| No. (Hex.)          | Name                             | Description   | Default (Range)   | Ref. |
|---------------------|----------------------------------|---|---|------|
| E4-01 (0321)        | Motor 2 Rated Current            | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor rated current for motor 2 in amps.  | Determined by o2-04, C6-01 (10% to 200% of the drive rated current) | 572  |
| E4-02 (0322)        | Motor 2 Rated Slip               | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor rated slip for motor 2.   | Determined by o2-04, C6-01 (0.000 - 20.000 Hz)                      | 573  |
| E4-03 (0323)        | Motor 2 Rated No-Load Current    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the no-load current for motor 2 in amps when operating at the rated frequency and the no-load voltage.  | Determined by o2-04, C6-01 (0 to E4-01)                             | 573  |
| E4-04 (0324)        | Motor 2 Motor Poles              | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the number of poles for motor 2.  | 4 (2 - 120)   | 573  |
| E4-05 (0325)        | Motor 2 Line-to-Line Resistance  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the line-to-line resistance for the motor 2 stator windings.  | Determined by o2-04, C6-01 (0.000 - 65.000 Ω)                       | 573  |
| E4-06 (0326)        | Motor 2 Leakage Inductance       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the voltage drop from motor 2 leakage inductance as a percentage of Motor Rated Voltage when motor 2 operates at the rated frequency and rated current. | Determined by o2-04, C6-01 (0.0 - 60.0%)                            | 574  |
| E4-07 (0343)        | Motor 2 Saturation Coefficient 1 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor 2 iron-core saturation coefficient at 50% of the magnetic flux.   | 0.50 (0.00 - 0.50)  | 574  |
| E4-08 (0344)        | Motor 2 Saturation Coefficient 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor 2 iron-core saturation coefficient at 75% of the magnetic flux.   | 0.75 (E4-07 - 0.75)   | 574  |
| E4-09 (033F) Expert | Motor 2 Mechanical Loss          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the mechanical loss of motor 2. It is set as a percentage of E4-11 [Motor 2 Rated Power]. Usually it is not necessary to change this setting.           | 0.0% (0.0 - 10.0%)  | 574  |
| E4-10 (0340)        | Motor 2 Iron Loss                | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor iron loss for motor 2.  | Determined by o2-04, C6-01 (0 - 65535 W)                            | 574  |
| E4-11 (0327)        | Motor 2 Rated Power              | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor rated power in the units from o1-58 [Motor Power Unit Selection].   | Determined by o2-04, C6-01 (0.00 - 650.00 kW)                       | 574  |



## ◆ E5: PM Motor Settings

| No. (Hex.)          | Name                             | Description  | Default (Range)  | Ref. |
|---------------------|----------------------------------|--|--|------|
| E5-01 (0329)        | PM Motor Code Selection          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the motor code for Yaskawa PM motors. The drive uses the motor code to automatically set some parameters to their correct settings.                     | FFFF<br>(0000 - FFFF)  | 575  |
| E5-02 (032A)        | PM Motor Rated Power             | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the PM motor rated output in the units from o1-58 [Motor Power Unit Selection].   | Determined by o2-04, C6-01<br>(0.10 - 30.00 kW)  | 575  |
| E5-03 (032B)        | Motor Rated Current (FLA)        | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the PM motor rated current (FLA).   | Determined by o2-04, C6-01<br>(10% to 200% of the drive rated current)   | 189  |
| E5-04 (032C)        | PM Motor Pole Count              | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the number of PM motor poles.   | 4<br>(2 - 120)   | 576  |
| E5-05 (032D)        | PM Motor Resistance (ohms/phase) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the resistance per phase of a PM motor. Set 50% of the line-to-line resistance.   | 0.100 Ω<br>(0.000 - 65.000 Ω)  | 576  |
| E5-06 (032E)        | PM d-axis Inductance (mH/phase)  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the PM motor d-axis inductance.   | 1.00 mH<br>(0.00 - 300.00 mH)  | 576  |
| E5-07 (032F)        | PM q-axis Inductance (mH/phase)  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the PM motor q-axis inductance.   | 1.00 mH<br>(0.00 - 600.00 mH)  | 576  |
| E5-09 (0331)        | PM Back-EMF Vpeak (mV/(rad/s))   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the peak value of PM motor induced voltage.   | 0.0 mV/(rad/sec)<br>(0.0 - 2000.0 mV/(rad/s))  | 576  |
| E5-24 (0353)        | PM Back-EMF L-L Vrms (mV/rpm)    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the RMS value for PM motor line voltage.  | 200 V class: 100.0 mV/<br>min <sup>-1</sup><br>400 V class: 200.0 mV/<br>min <sup>-1</sup><br>(0.0 - 6500.0 mV/min <sup>-1</sup> ) | 577  |
| E5-25 (035E) Expert | Polarity Estimation Timeout      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the function that switches polarity for initial polarity estimation. Usually it is not necessary to change this setting.<br>0 : Disabled<br>1 : Enabled | 0<br>(0, 1)  | 577  |

## ◆ E9: Motor Setting

| No. (Hex.)   | Name                      | Description  | Default (Range)  | Ref. |
|--------------|---------------------------|--|--|------|
| E9-01 (11E4) | Motor Type Selection      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the type of motor.<br>0 : Induction (IM)<br>1 : Permanent Magnet (PM)<br>2 : Synchronous Reluctance (SynRM) | 0<br>(0 to 2)  | 577  |
| E9-02 (11E5) | Maximum Speed             | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the maximum speed of the motor.   | Determined by E9-01<br>(40.0 - 120.0 Hz)   | 577  |
| E9-03 (11E6) | Rated Speed               | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the rated rotation speed of the motor.  | Determined by E9-01<br>(100 - 7200 min <sup>-1</sup> )   | 578  |
| E9-04 (11E7) | Base Frequency            | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the rated frequency of the motor.   | Determined by E9-01<br>(40.0 - 120.0 Hz)   | 578  |
| E9-05 (11E8) | Motor Rated Voltage       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the rated voltage of the motor.   | 200 V Class: 200.0 V,<br>400 V: 400.0 V<br>(200 V Class: 0.0 - 255.0 V,<br>400 V Class: 0.0 - 510.0 V) | 578  |
| E9-06 (11E9) | Motor Rated Current (FLA) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the motor rated current in amps.  | Determined by E9-01 and o2-04<br>(10% to 200% of the drive rated current)                              | 189  |
| E9-07 (11EA) | Motor Rated Power         | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the motor rated output in the units from o1-58 [Motor Power Unit Selection].                                | Determined by E9-02 and o2-04<br>(0.00 - 650.00 kW)  | 578  |
| E9-08 (11EB) | Motor Pole Count          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the number of motor poles.  | 4<br>(2 to 120)  | 578  |

## 11.8 E: Motor Parameters

| No. (Hex.)      | Name                          | Description  | Default (Range)                           | Ref.                |
|-----------------|-------------------------------|--|---|---------------------|
| E9-09<br>(11EC) | Motor Rated Slip              | <div style="display: flex; justify-content: space-between; font-size: 0.8em;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span><b>EZOLV</b></span> </div> Sets the motor rated slip.                                      | 0.000 Hz<br>(0.000 - 20.000 Hz)           | <a href="#">579</a> |
| E9-10<br>(11ED) | Motor Line-to-Line Resistance | <div style="display: flex; justify-content: space-between; font-size: 0.8em;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span><b>EZOLV</b></span> </div> Sets the line-to-line resistance for the motor stator windings. | Determined by o2-04<br>(0.000 - 65.000 Ω) | <a href="#">579</a> |

## 11.9 F: Options

### ◆ F1: Fault Detection in PG Speed Control

| No. (Hex.)   | Name                             | Description  | Default (Range)                      | Ref. |
|--------------|----------------------------------|--|--------------------------------------|------|
| F1-02 (0381) | Encoder Signal Loss Detect Sel   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to stop the motor or let the motor continue operating when the drive detects <i>PGo</i> [Encoder (PG) Feedback Loss].</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only<br/>4 : No Alarm Display</p> <p><b>Note:</b><br/>When <i>A1-02</i> = 0 [Control Method Selection = V/f], set <i>H6-01</i> = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>   | 1<br>(0 - 4)                         | 580  |
| F1-03 (0382) | Overspeed Detection Selection    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to stop the motor or let the motor continue to operate when the drive detects <i>oS</i> [Overspeed].</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only</p> <p><b>Note:</b><br/>When <i>A1-02</i> = 0 [Control Method Selection = V/f], set <i>H6-01</i> = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>   | 1<br>(0 - 3)                         | 580  |
| F1-04 (0383) | Speed Deviation Detection Select | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to stop the motor or let the motor continue to operate when the drive detects <i>dEv</i> [Speed Deviation].</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only</p> <p><b>Note:</b><br/>When <i>A1-02</i> = 0 [Control Method Selection = V/f], set <i>H6-01</i> = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>  | 3<br>(0 - 3)                         | 581  |
| F1-08 (0387) | Overspeed Detection Level        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the detection level of <i>oS</i> [Overspeed] as a percentage when the maximum output frequency is 100%.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency. <ul style="list-style-type: none"> <li>–<i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]</li> <li>–<i>A1-02</i> = 8: <i>E9-02</i> [Motor Max Revolutions]</li> </ul> </li> <li>When <i>A1-02</i> = 0 [Control Method Selection = V/f], set <i>H6-01</i> = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</li> </ul> | 115%<br>(0 - 120%)                   | 581  |
| F1-09 (0388) | Overspeed Detection Delay Time   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the speed feedback must be more than the <i>F1-08</i> level to cause <i>oS</i> [Overspeed].</p> <p><b>Note:</b><br/>When <i>A1-02</i> = 0 [Control Method Selection = V/f], set <i>H6-01</i> = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>  | Determined by A1-02<br>(0.0 - 2.0 s) | 582  |
| F1-10 (0389) | Speed Deviation Detection Level  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the detection level of <i>dEv</i> [Speed Deviation] as a percentage when the maximum output frequency is 100%.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency. <ul style="list-style-type: none"> <li>–<i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]</li> <li>–<i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed]</li> </ul> </li> <li>When <i>A1-02</i> = 0 [Control Method Selection = V/f], set <i>H6-01</i> = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</li> </ul>  | 10%<br>(0 - 50%)                     | 582  |

| No. (Hex.)   | Name                             | Description   | Default (Range)         | Ref. |
|--------------|----------------------------------|---|-------------------------|------|
| F1-11 (038A) | Speed Deviation Detect DelayTime | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the difference between the frequency reference and speed feedback must be more than the level in F1-10 to cause <i>dEv</i> [Speed Deviation].</p> <p><b>Note:</b><br/>When A1-02 = 0 [Control Method Selection = V/f], set H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p>   | 0.5 s<br>(0.0 - 10.0 s) | 582  |
| F1-14 (038D) | Encoder Open-Circuit Detect Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the length of time that the drive must not receive a pulse signal to cause <i>PGo</i> [Encoder (PG) Feedback Loss].</p> <p><b>Note:</b><br/>Motor speed and load conditions can cause <i>ov</i> [Overvoltage] and <i>oC</i> [Overcurrent] faults.<br/>When A1-02 = 0 [Control Method Selection = V/f], set H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.</p> | 2.0 s<br>(0.0 - 10.0 s) | 582  |

## ◆ F6: Communication Options

| No. (Hex.)   | Name                             | Description   | Default (Range)         | Ref. |
|--------------|----------------------------------|---|-------------------------|------|
| F6-01 (03A2) | Communication Error Selection    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to stop the motor or let the motor continue operating when the drive detects <i>bUS</i> [Option Communication Error].</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only<br/>4 : Alarm (Run at d1-04)<br/>5 : Alarm - Ramp Stop</p>   | 1<br>(0 - 5)            | 588  |
| F6-02 (03A3) | Comm External Fault (EF0) Detect | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the conditions at which <i>EF0</i> [Option Card External Fault] is detected.</p> <p>0 : Always Detected<br/>1 : Detected during RUN Only</p>   | 0<br>(0, 1)             | 588  |
| F6-03 (03A4) | Comm External Fault (EF0) Select | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to stop the motor or let the motor continue operating when the drive detects <i>EF0</i> [Option Card External Fault].</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only</p>  | 1<br>(0 - 3)            | 589  |
| F6-04 (03A5) | bUS Error Detection Time         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the delay time for the drive to detect <i>bUS</i> [Option Communication Error].</p> <p><b>Note:</b><br/>When you install a CC-Link option (SI-C3) to the drive, the setting value changes to 0.0 s.</p>  | 2.0 s<br>(0.0 - 12.0 s) | 589  |
| F6-06 (03A7) | Torque Reference/Limit by Comm   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that enables and disables the torque reference and torque limit received from the communication option.</p> <p>0 : Disabled<br/>1 : Enabled</p>   | 0<br>(0, 1)             | 589  |
| F6-07 (03A8) | Multi-Step Ref @ NetRef/ComRef   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that enables and disables the multi-step speed reference when the frequency reference source is NetRef or ComRef (communication option card or MEMOBUS/Modbus communications).</p> <p>0 : Disable Multi-Step References<br/>1 : Enable Multi-Step References</p>  | 1<br>(0, 1)             | 589  |
| F6-08 (036A) | Comm Parameter Reset @Initialize | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to initialize F6-xx and F7-xx parameters when the drive is initialized with A1-03 [Initialize Parameters].</p> <p>0 : No Reset - Parameters Retained<br/>1 : Reset Back to Factory Default</p>  | 0<br>(0, 1)             | 590  |
| F6-10 (03B6) | CC-Link Node Address             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the node address for CC-Link communication. Restart the drive after you change the parameter setting.</p> <p><b>Note:</b><br/>Be sure to set a node address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause <i>AEr</i> [Station Address Setting Error] errors and the L.ERR LED on the option will come on.</p> | 0<br>(0 - 64)           | 590  |

| No. (Hex.)   | Name                             | Description   | Default (Range)  | Ref. |
|--------------|----------------------------------|---|--|------|
| F6-11 (03B7) | CC-Link Communication Speed      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the communication speed for CC-Link communication. Restart the drive after you change the parameter setting.<br>0 : 156 kbps<br>1 : 625 kbps<br>2 : 2.5 Mbps<br>3 : 5 Mbps<br>4 : 10 Mbps   | 0<br>(0 - 4)   | 590  |
| F6-14 (03BB) | BUS Error Auto Reset             | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the automatic reset function for <i>bUS</i> [Option Communication Errors].<br>0 : Disabled<br>1 : Enabled   | 0<br>(0, 1)  | 590  |
| F6-15 (0B5B) | Comm. Option Parameters Reload   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the update method when you change <i>F6-xx</i> , <i>F7-xx</i> [Communication Options].<br>0 : Reload at Next Power Cycle<br>1 : Reload Now<br>2 : Cancel Reload Request   | 0<br>(0 - 2)   | 590  |
| F6-16 (0B8A) | Gateway Mode                     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gateway mode operation and the number of connected slave drives.<br>0 : Disabled<br>1 : Enabled: 1 Slave Drives<br>2 : Enabled: 2 Slave Drives<br>3 : Enabled: 3 Slave Drives<br>4 : Enabled: 4 Slave Drives  | 0<br>(0 to 4)  | 591  |
| F6-20 (036B) | MECHATROLINK Station Address     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the station address for MECHATROLINK communication. Change the parameter then cycle power on the drive.<br><b>Note:</b><br>• The setting range changes if using MECHATROLINK-II or MECHATROLINK-III:<br>–MECHATROLINK-II (SI-T3) range: 20 - 3F<br>–MECHATROLINK-III (SI-ET3) range: 03 - EF<br>• Be sure to set a node address that is different than all other node addresses. Incorrect parameter settings will cause <i>Aer</i> [Station Address Setting Error] errors and the L.ERR LED on the option will come on.<br>• The drive detects <i>Aer</i> errors when the station address is 20 or 3F. | 0021h<br>(MECHATROLINK-II: 0020h - 003Fh, MECHATROLINK-III: 0003h - 00EFh) | 591  |
| F6-21 (036C) | MECHATROLINK Frame Size          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frame size for MECHATROLINK communication. Restart the drive after you change the parameter setting.<br>0 : 32byte (M-2) / 64byte (M-3)<br>1 : 17byte (M-2) / 32byte (M-3)  | 0<br>(0, 1)  | 591  |
| F6-22 (036D) | MECHATROLINK Link Speed          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the communications speed for MECHATROLINK-II. Restart the drive after you change the parameter setting.<br><b>Note:</b><br>This parameter is only available with the MECHATROLINK-II option.<br>0 : 10 Mbps<br>1 : 4 Mbps   | 0<br>(0, 1)  | 591  |
| F6-23 (036E) | MECHATROLINK Monitor Select (E)  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MEMOBUS register used for the monitor functions of INV_CTL (drive operation control command) and INV_I/O (drive I/O control command). Restart the drive after you change the parameter setting.   | 0000h<br>(0000h - FFFFh)   | 592  |
| F6-24 (036F) | MECHATROLINK Monitor Select (F)  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MEMOBUS register used for the monitor functions of INV_CTL (drive operation control command) and INV_I/O (drive I/O control command). Restart the drive after you change the parameter setting.   | 0000h<br>(0000h - FFFFh)   | 592  |
| F6-25 (03C9) | MECHATROLINK Watchdog Error Sel  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the method to stop the motor or let the motor continue operating when the drive detects <i>E5</i> [MECHATROLINK Watchdog Timer Err].<br>0 : Ramp to Stop<br>1 : Coast to Stop<br>2 : Fast Stop (Use C1-09)<br>3 : Alarm Only  | 1<br>(0 - 3)   | 592  |
| F6-26 (03CA) | MECHATROLINK Allowable No of Err | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the number of times that the option must detect a <i>bUS</i> alarm to cause a <i>bUS</i> [Option Communication Error].  | 2<br>(2 - 10 times)  | 592  |

## 11.9 F: Options

| No. (Hex.)   | Name                             | Description   | Default (Range) | Ref. |
|--------------|----------------------------------|---|-----------------|------|
| F6-30 (03CB) | PROFIBUS-DP Node Address         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the node address for PROFIBUS-DP communication. Restart the drive after you change the parameter setting.</p> <p><b>Note:</b><br/>Be sure to set an address that is different than all other node addresses. Do not set this parameter to 0.</p>   | 0<br>(0 - 125)  | 592  |
| F6-31 (03CC) | PROFIBUS-DP Clear Mode Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets what the drive will do after it receives the Clear Mode command.</p> <p>0 : Reset<br/>1 : Hold Previous State</p>  | 0<br>(0, 1)     | 593  |
| F6-32 (03CD) | PROFIBUS-DP Data Format Select   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the data format of PROFIBUS-DP communication. Restart the drive after you change the parameter setting.</p> <p>0 : PPO Type<br/>1 : Conventional<br/>2 : PPO (bit0)<br/>3 : PPO (Enter)<br/>4 : Conventional (Enter)<br/>5 : PPO (bit0, Enter)</p>   | 0<br>(0 - 5)    | 593  |
| F6-35 (03D0) | CANopen Node ID Selection        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the node address for CANopen communication. Restart the drive after you change the parameter setting.</p> <p><b>Note:</b><br/>Be sure to set an address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause <i>AEr</i> [Station Address Setting Error] errors and the L.ERR LED on the option will come on.</p> | 0<br>(0 - 126)  | 593  |
| F6-36 (03D1) | CANopen Communication Speed      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the CANopen communications speed. Restart the drive after you change the parameter setting.</p> <p>0 : Detect Automatically<br/>1 : 10 kbps<br/>2 : 20 kbps<br/>3 : 50 kbps<br/>4 : 125 kbps<br/>5 : 250 kbps<br/>6 : 500 kbps<br/>7 : 800 kbps<br/>8 : 1 Mbps</p>   | 0<br>(0 - 8)    | 593  |
| F6-50 (03C1) | DeviceNet MAC Address            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the MAC address for DeviceNet communication. Restart the drive after you change the parameter setting.</p> <p><b>Note:</b><br/>Be sure to set a MAC address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause <i>AEr</i> [Station Address Setting Error] errors and the MS LED on the option will flash.</p>  | 0<br>(0 - 64)   | 594  |
| F6-51 (03C2) | DeviceNet Baud Rate              | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the DeviceNet communications speed. Restart the drive after you change the parameter setting.</p> <p>0 : 125 kbps<br/>1 : 250 kbps<br/>2 : 500 kbps<br/>3 : Adjustable from Network<br/>4 : Detect Automatically</p>   | 0<br>(0 - 4)    | 594  |
| F6-52 (03C3) | DeviceNet PCA Setting            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the format of data that the DeviceNet communication master sends to the drive.</p>   | 21<br>(0 - 255) | 594  |
| F6-53 (03C4) | DeviceNet PPA Setting            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the format of data that the drive sends to the DeviceNet communication master.</p>   | 71<br>(0 - 255) | 594  |
| F6-54 (03C5) | DeviceNet Idle Fault Detection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to detect <i>EF0</i> [Option Card External Fault] when the drive does not receive data from the DeviceNet master.</p> <p>0 : Enabled<br/>1 : Disabled, No Fault Detection<br/>2 : Vendor Specific<br/>3 : RUN Forward<br/>4 : Reverse run</p>   | 0<br>(0 - 4)    | 594  |

| No. (Hex.)                                  | Name                                  | Description   | Default (Range)          | Ref. |
|---|---------------------------------------|---|--------------------------|------|
| F6-55 (03C6)                                | DeviceNet Baud Rate Monitor           | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the function to see the actual DeviceNet communications speed using the keypad. This parameter functions as a monitor only.<br>0 : 125 kbps<br>1 : 250 kbps<br>2 : 500 kbps | 0<br>(0 - 2)             | 595  |
| F6-56 (03D7)                                | DeviceNet Speed Scaling               | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the speed scale for DeviceNet communication.  | 0<br>(-15 - +15)         | 595  |
| F6-57 (03D8)                                | DeviceNet Current Scaling             | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the current scale of the DeviceNet communication master.  | 0<br>(-15 - +15)         | 595  |
| F6-58 (03D9)                                | DeviceNet Torque Scaling              | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the torque scale of the DeviceNet communication master.   | 0<br>(-15 - +15)         | 595  |
| F6-59 (03DA)                                | DeviceNet Power Scaling               | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the power scale of the DeviceNet communication master.  | 0<br>(-15 - +15)         | 595  |
| F6-60 (03DB)                                | DeviceNet Voltage Scaling             | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the voltage scale of the DeviceNet communication master.  | 0<br>(-15 - +15)         | 595  |
| F6-61 (03DC)                                | DeviceNet Time Scaling                | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the time scale of the DeviceNet communication master.   | 0<br>(-15 - +15)         | 595  |
| F6-62 (03DD)                                | DeviceNet Heartbeat Interval          | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the heartbeat for DeviceNet communication. Set this parameter to 0 to disable the heartbeat function.   | 0<br>(0 - 10)            | 595  |
| F6-63 (03DE)                                | DeviceNet Network MAC ID              | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the function to see the actual DeviceNet MAC address using the keypad. This parameter functions as a monitor only.  | 0<br>(0 - 63)            | 596  |
| F6-64 to F6-67 (03DF - 03E2)                | Dynamic Out Assembly 109 Param 1 to 4 | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets Configurable Outputs 1 to 4 written to the MEMOBUS register.  | 0000h<br>(0000h - FFFFh) | 596  |
| F6-68 to F6-71 (03E3, 03E4, 03C7, and 03C8) | Dynamic In Assembly 159 Param 1 to 4  | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets Configurable Inputs 1 to 4 read from the MEMOBUS register.  | 0000h<br>(0000h - FFFFh) | 596  |
| F6-72 (081B)                                | PowerLink Node Address                | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the node ID for PowerLink communication.<br><b>Note:</b><br>Be sure to set an address that is different than all other node addresses. Do not set this parameter to 0.      | 0<br>(0 - 255)           | 596  |

## ◆ F7: Communication Options

| No. (Hex.)   | Name         | Description  | Default (Range)  | Ref. |
|--------------|--------------|--|------------------|------|
| F7-01 (03E5) | IP Address 1 | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the first octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter.<br><b>Note:</b><br>When F7-13 = 0 [Address Mode at Startup = Static]:<br>• Use parameters F7-01 to F7-04 [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.<br>• Also set parameters F7-01 to F7-12.  | 192<br>(0 - 255) | 596  |
| F7-02 (03E6) | IP Address 2 | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the second octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter.<br><b>Note:</b><br>When F7-13 = 0 [Address Mode at Startup = Static]:<br>• Use parameters F7-01 to F7-04 [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.<br>• Also set parameters F7-01 to F7-12. | 168<br>(0 - 255) | 596  |
| F7-03 (03E7) | IP Address 3 | <b>V/f OLV OLV/PM AOLV/PM EZOLV</b><br>Sets the third octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter.<br><b>Note:</b><br>When F7-13 = 0 [Address Mode at Startup = Static]:<br>• Use parameters F7-01 to F7-04 [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.<br>• Also set parameters F7-01 to F7-12.  | 1<br>(0 - 255)   | 596  |

## 11.9 F: Options

| No. (Hex.)   | Name                    | Description  | Default (Range)  | Ref. |
|--------------|-------------------------|--|------------------|------|
| F7-04 (03E8) | IP Address 4            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the fourth octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter.</p> <p><b>Note:</b><br/>When <i>F7-13 = 0</i> [Address Mode at Startup = Static]:<br/> <ul style="list-style-type: none"> <li>Use parameters <i>F7-01</i> to <i>F7-04</i> [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.</li> <li>Also set parameters <i>F7-01</i> to <i>F7-12</i>.</li> </ul> </p>                                       | 20<br>(0 - 255)  | 597  |
| F7-05 (03E9) | Subnet Mask 1           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the first octet of the subnet mask of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>   | 255<br>(0 - 255) | 597  |
| F7-06 (03EA) | Subnet Mask 2           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second octet of the subnet mask of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>  | 255<br>(0 - 255) | 597  |
| F7-07 (03EB) | Subnet Mask 3           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the third octet of the subnet mask of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>   | 255<br>(0 - 255) | 597  |
| F7-08 (03EC) | Subnet Mask 4           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the fourth octet of the subnet mask of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>  | 0<br>(0 - 255)   | 597  |
| F7-09 (03ED) | Gateway Address 1       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the first octet of the gateway address of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>   | 192<br>(0 - 255) | 597  |
| F7-10 (03EE) | Gateway Address 2       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second octet of the gateway address of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>  | 168<br>(0 - 255) | 597  |
| F7-11 (03EF) | Gateway Address 3       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the third octet of the gateway address of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>   | 1<br>(0 - 255)   | 598  |
| F7-12 (03F0) | Gateway Address 4       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the fourth octet of the gateway address of the connected network.</p> <p><b>Note:</b><br/>Set this parameter when <i>F7-13 = 0</i> [Address Mode at Startup = Static].</p>  | 1<br>(0 - 255)   | 598  |
| F7-13 (03F1) | Address Mode at Startup | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method to set option card IP addresses.</p> <p>0 : Static<br/>1 : BOOTP<br/>2 : DHCP</p> <p><b>Note:</b><br/> <ul style="list-style-type: none"> <li>The following setting values are available when using the PROFINET communication option card (SI-EP3).<br/>           -0: Static<br/>           -2: DHCP</li> <li>When <i>F7-13 = 0</i>, set parameters <i>F7-01</i> to <i>F7-12</i> [IP Address 1 to Gateway Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.</li> </ul> </p> | 2<br>(0 - 2)     | 598  |
| F7-14 (03F2) | Duplex Mode Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the duplex mode setting method.</p> <p>0 : Half/Half<br/>1 : Auto/Auto<br/>2 : Full/Full<br/>3 : Half/Auto<br/>4 : Half/Full<br/>5 : Auto/Half<br/>6 : Auto/Full<br/>7 : Full/Half<br/>8 : Full/Auto</p>  | 1<br>(0 - 8)     | 598  |



| No. (Hex.)   | Name                             | Description  | Default (Range)         | Ref. |
|--------------|----------------------------------|--|-------------------------|------|
| F7-15 (03F3) | Communication Speed Selection    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the communications speed.<br>10 : 10/10 Mbps<br>100 : 100/100 Mbps<br>101 : 10/100 Mbps<br>102 : 100/10 Mbps   | 10<br>(10, 100 - 102)   | 599  |
| F7-16 (03F4) | Timeout Value                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the detection time for a communications timeout.<br><b>Note:</b><br>Set this parameter to 0.0 to disable the connection timeout function.  | 0.0 s<br>(0.0 - 30.0 s) | 599  |
| F7-17 (03F5) | EtherNet/IP Speed Scaling Factor | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the scaling factor for the speed monitor in the EtherNet/IP Class ID 2AH Object.   | 0<br>(-15 - +15)        | 599  |
| F7-18 (03F6) | EtherNet/IP Current Scale Factor | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the scaling factor for the output current monitor in the EtherNet/IP Class ID 2AH Object.  | 0<br>(-15 - +15)        | 599  |
| F7-19 (03F7) | EtherNet/IP Torque Scale Factor  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the scaling factor for the torque monitor in the EtherNet/IP Class ID 2AH Object.  | 0<br>(-15 - +15)        | 599  |
| F7-20 (03F8) | EtherNet/IP Power Scaling Factor | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the scaling factor for the power monitor in the EtherNet/IP Class ID 2AH Object.   | 0<br>(-15 - +15)        | 599  |
| F7-21 (03F9) | EtherNet/IP Voltage Scale Factor | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the scaling factor for the voltage monitor in the EtherNet/IP Class ID 2AH Object.   | 0<br>(-15 - +15)        | 599  |
| F7-22 (03FA) | EtherNet/IP Time Scaling         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the scaling factor for the time monitor in the EtherNet/IP Class ID 2AH Object.  | 0<br>(-15 - +15)        | 599  |
| F7-23 (03FB) | Dynamic Out Param 1 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a ProfiNet option, set this parameter to set to configurable output 1. | 0                       | 600  |
| F7-24 (03FC) | Dynamic Out Param 2 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a ProfiNet option, set this parameter to set to configurable output 2. | 0                       | 600  |
| F7-25 (03FD) | Dynamic Out Param 3 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a ProfiNet option, set this parameter to set to configurable output 3. | 0                       | 600  |
| F7-26 (03FE) | Dynamic Out Param 4 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a ProfiNet option, set this parameter to set to configurable output 4. | 0                       | 600  |
| F7-27 (03FF) | Dynamic Out Param 5 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a ProfiNet option, set this parameter to set to configurable output 5. | 0                       | 600  |
| F7-28 (0370) | Dynamic Out Param 6 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.   | 0                       | 600  |
| F7-29 (0371) | Dynamic Out Param 7 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.   | 0                       | 600  |
| F7-30 (0372) | Dynamic Out Param 8 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.   | 0                       | 600  |
| F7-31 (0373) | Dynamic Out Param 9 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.   | 0                       | 600  |

## 11.9 F: Options

| No. (Hex.)   | Name                              | Description  | Default (Range) | Ref. |
|--------------|-----------------------------------|--|-----------------|------|
| F7-32 (0374) | Dynamic Out Param 10 for CommCard | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Output Assembly 116 when you use an Ethernet/IP option. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0.   | 0               | 600  |
| F7-33 (0375) | Dynamic In Param 1 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 1. | 0               | 600  |
| F7-34 (0376) | Dynamic In Param 2 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 2. | 0               | 600  |
| F7-35 (0377) | Dynamic In Param 3 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 3. | 0               | 600  |
| F7-36 (0378) | Dynamic In Param 4 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 4. | 0               | 600  |
| F7-37 (0379) | Dynamic In Param 5 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set this parameter to set to configurable input 5. | 0               | 600  |
| F7-38 (037A) | Dynamic In Param 6 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.  | 0               | 600  |
| F7-39 (037B) | Dynamic In Param 7 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.  | 0               | 600  |
| F7-40 (037C) | Dynamic In Param 8 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.  | 0               | 600  |
| F7-41 (037D) | Dynamic In Param 9 for CommCard   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.  | 0               | 600  |
| F7-42 (037E) | Dynamic In Param 10 for CommCard  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets Input Assembly 166 when you use an Ethernet/IP option. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined.  | 0               | 600  |
| F7-60 (0780) | PZD1 Write (Control Word)         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, set the MEMOBUS/Modbus address for PZD1 (PPO output). PZD1 (PPO output) functions as the STW when $F7-60 = 0$ to 2.   | 0               | 600  |
| F7-61 (0781) | PZD2 Write (Frequency Reference)  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, set the MEMOBUS/Modbus address for PZD2 (PPO output). PZD2 (PPO output) functions as the HSW when $F7-61 = 0$ to 2.   | 0               | 600  |
| F7-62 (0782) | PZD3 Write                        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, set the MEMOBUS/Modbus address for PZD3 (PPO output). A value of 0, 1, or 2 will disable the PZD3 (PPO output) write operation to the MEMOBUS/Modbus register.  | 0               | 600  |

| No. (Hex.)   | Name                         | Description  | Default (Range) | Ref. |
|--------------|------------------------------|--|-----------------|------|
| F7-63 (0783) | PZD4 Write                   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD4 (PPO output). A value of 0, 1, or 2 will disable the PZD4 (PPO output) write operation to the MEMOBUS/Modbus register.   | 0               | 600  |
| F7-64 (0784) | PZD5 Write                   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD5 (PPO output). A value of 0, 1, or 2 will disable the PZD5 (PPO output) write operation to the MEMOBUS/Modbus register.   | 0               | 600  |
| F7-65 (0785) | PZD6 Write                   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD6 (PPO output). A value of 0, 1, or 2 will disable the PZD6 (PPO output) write operation to the MEMOBUS/Modbus register.   | 0               | 600  |
| F7-66 (0786) | PZD7 Write                   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD7 (PPO output). A value of 0, 1, or 2 will disable the PZD7 (PPO output) write operation to the MEMOBUS/Modbus register.   | 0               | 601  |
| F7-67 (0787) | PZD8 Write                   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD8 (PPO output). A value of 0, 1, or 2 will disable the PZD8 (PPO output) write operation to the MEMOBUS/Modbus register.   | 0               | 601  |
| F7-68 (0788) | PZD9 Write                   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD9 (PPO output). A value of 0, 1, or 2 will disable the PZD9 (PPO output) write operation to the MEMOBUS/Modbus register.   | 0               | 601  |
| F7-69 (0789) | PZD10 Write                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD10 (PPO output). A value of 0, 1, or 2 will disable the PZD10 (PPO output) write operation to the MEMOBUS/Modbus register. | 0               | 601  |
| F7-70 (078A) | PZD1 Read (Status Word)      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD1 (PPO input). PZD1 (PPO input) functions as the ZSW when <i>F7-70 = 0</i> .   | 0               | 601  |
| F7-71 (078B) | PZD2 Read (Output Frequency) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD2 (PPO input). PZD2 (PPO input) functions as the HIW when <i>F7-71 = 0</i> .   | 0               | 601  |
| F7-72 (078C) | PZD3 Read                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD3 (PPO input). A value of 0 will disable the PZD3 (PPO input) load operation from the MEMOBUS/Modbus register.             | 0               | 601  |
| F7-73 (078D) | PZD4 Read                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD4 (PPO input). A value of 0 will disable the PZD4 (PPO input) load operation from the MEMOBUS/Modbus register.             | 0               | 601  |
| F7-74 (078E) | PZD5 Read                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD5 (PPO input). A value of 0 will disable the PZD5 (PPO input) load operation from the MEMOBUS/Modbus register.             | 0               | 602  |
| F7-75 (078F) | PZD6 Read                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD6 (PPO input). A value of 0 will disable the PZD6 (PPO input) load operation from the MEMOBUS/Modbus register.             | 0               | 602  |
| F7-76 (0790) | PZD7 Read                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD7 (PPO input). A value of 0 will disable the PZD7 (PPO input) load operation from the MEMOBUS/Modbus register.             | 0               | 602  |
| F7-77 (0791) | PZD8 Read                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD8 (PPO input). A value of 0 will disable the PZD8 (PPO input) load operation from the MEMOBUS/Modbus register.             | 0               | 602  |
| F7-78 (0792) | PZD9 Read                    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD9 (PPO input). A value of 0 will disable the PZD9 (PPO input) load operation from the MEMOBUS/Modbus register.             | 0               | 602  |
| F7-79 (0793) | PZD10 Read                   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD10 (PPO input). A value of 0 will disable the PZD10 (PPO input) load operation from the MEMOBUS/Modbus register.           | 0               | 602  |

## 11.10 H: Terminal Functions

### ◆ H1: Digital Inputs

| No. (Hex.)   | Name                             | Description  | Default (Range) | Ref. |
|--------------|----------------------------------|--|-----------------|------|
| H1-01 (0438) | Terminal S1 Function Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal S1.</p> <p><b>Note:</b><br/>The default setting is <i>F</i> when you initialize the drive for <i>3-Wire Initialization [A1-03 = 3330]</i>.</p> | 40<br>(1 - 1FF) | 604  |
| H1-02 (0439) | Terminal S2 Function Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal S2.</p> <p><b>Note:</b><br/>The default setting is <i>F</i> when you initialize the drive for <i>3-Wire Initialization [A1-03 = 3330]</i>.</p> | 41<br>(1 - 1FF) | 604  |
| H1-03 (0400) | Terminal S3 Function Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal S3.</p>  | 24<br>(0 - 1FF) | 604  |
| H1-04 (0401) | Terminal S4 Function Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal S4.</p>  | 14<br>(0 - 1FF) | 604  |
| H1-05 (0402) | Terminal S5 Function Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal S5.</p> <p><b>Note:</b><br/>The default setting is <i>0</i> when the drive is initialized for <i>3-Wire Initialization [A1-03 = 3330]</i>.</p> | 3<br>(0 - 1FF)  | 604  |
| H1-06 (0403) | Terminal S6 Function Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal S6.</p> <p><b>Note:</b><br/>The default setting is <i>3</i> when the drive is initialized for <i>3-Wire Initialization [A1-03 = 3330]</i>.</p> | 4<br>(0 - 1FF)  | 604  |
| H1-07 (0404) | Terminal S7 Function Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal S7.</p> <p><b>Note:</b><br/>The default setting is <i>4</i> when the drive is initialized for <i>3-Wire Initialization [A1-03 = 3330]</i>.</p> | 6<br>(0 - 1FF)  | 605  |
| H1-21 (0B70) | Terminal S1 Function Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second function for MFDI terminal S1.</p>   | F<br>(1 - 19F)  | 605  |
| H1-22 (0B71) | Terminal S2 Function Select 2    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second function for MFDI terminal S2.</p>   | F<br>(1 - 19F)  | 605  |
| H1-23 (0B72) | Terminal S3 Function Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second function for MFDI terminal S3.</p>   | F<br>(1 - 19F)  | 605  |
| H1-24 (0B73) | Terminal S4 Function Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second function for MFDI terminal S4.</p>   | F<br>(1 - 19F)  | 605  |
| H1-25 (0B74) | Terminal S5 Function Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second function for MFDI terminal S5.</p>   | F<br>(1 - 19F)  | 605  |
| H1-26 (0B75) | Terminal S6 Function Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second function for MFDI terminal S6.</p>   | F<br>(1 - 19F)  | 606  |
| H1-27 (0B76) | Terminal S7 Function Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the second function for MFDI terminal S7.</p>   | F<br>(1 - 19F)  | 606  |
| H1-40 (0B54) | Mbus Reg 15C0h bit0 Input Func   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets MFDI function to set to <i>bit 0</i> of the MEMOBUS register <i>15C0 (Hex.)</i>.</p>  | F<br>(1 - 19F)  | 606  |
| H1-41 (0B55) | Mbus Reg 15C0h bit1 Input Func   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets MFDI function to set to <i>bit 1</i> of the MEMOBUS register <i>15C0 (Hex.)</i>.</p>  | F<br>(1 - 19F)  | 606  |
| H1-42 (0B56) | Mbus Reg 15C0h bit2 Input Func   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets MFDI function to set to <i>bit 2</i> of the MEMOBUS register <i>15C0 (Hex.)</i>.</p>  | F<br>(1 - 19F)  | 606  |

## ■ H1-xx: MFDI Setting Values

| Setting Value | Function                         | Description   | Ref. |
|---------------|----------------------------------|---|------|
| 0             | 3-Wire Sequence                  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the direction of motor rotation for 3-wire sequence.  | 606  |
| 1             | LOCAL/REMOTE Selection           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets drive control for the keypad (LOCAL) or an external source (REMOTE).<br>ON : LOCAL<br>OFF : REMOTE  | 607  |
| 2             | External Reference 1/2 Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive to use Run command source 1/2 or Reference command source 1/2 when in REMOTE Mode.<br>ON : b1-15 = [Frequency Reference Selection 2], b1-16 [Run Command Selection 2]<br>OFF : b1-01 = [Frequency Reference Selection 1], b1-02 [Run Command Selection 1] | 608  |
| 3             | Multi-Step Speed Reference 1     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses speed references d1-01 to d1-16 to set a multi-step speed reference.  | 608  |
| 4             | Multi-Step Speed Reference 2     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses speed references d1-01 to d1-16 to set a multi-step speed reference.  | 608  |
| 5             | Multi-Step Speed Reference 3     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses speed references d1-01 to d1-16 to set a multi-step speed reference.  | 608  |
| 6             | Jog Reference Selection          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive to use the JOG Frequency Reference (JOG command) set in d1-17. The JOG Frequency Reference (JOG command) overrides Frequency References 1 to 16 (d1-01 to d1-16).   | 608  |
| 7             | Accel/Decel Time Selection 1     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive to use Acceleration/Deceleration Time 1 [C1-01, C1-02] or Acceleration/Deceleration Time 2 [C1-03, C1-04].  | 608  |
| 8             | Baseblock Command (N. O.)        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command that stops drive output and coasts the motor to stop when the input is ON.<br>ON : Baseblock (drive output stop)<br>OFF : Normal operation  | 608  |
| 9             | Baseblock Command (N. C.)        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command that stops drive output and coasts the motor to stop when the input terminal is OFF.<br>ON : Normal operation<br>OFF : Baseblock (drive output stop)  | 609  |
| A             | Accel/Decel Ramp Hold            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Momentarily pauses motor acceleration and deceleration when the terminal is turned ON, retains the output frequency that was stored in the drive at the time of the pause, and restarts motor operation.   | 609  |
| B             | Overheat Alarm (oH2)             | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive to display an oH2 [Drive Overheat Warning] alarm when the input terminal is ON. The alarm does not have an effect on drive operation.   | 609  |
| C             | Analog Terminal Enable Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command that enables or disables the terminals selected in H3-14 [Analog Input Terminal Enable Sel].<br>ON : Input to the terminal selected with H3-14 is enabled<br>OFF : Input to the terminal selected with H3-14 is disabled                                | 609  |
| E             | ASR Integral Reset               | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to reset the integral value and use PI control or P control for the speed control loop.<br>ON : P control<br>OFF : PI control   | 610  |
| F             | Not Used                         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Use this setting for unused terminals or to use terminals in through mode.   | 610  |
| 10            | Up Command                       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to use a push button switch to increase the drive frequency reference. You must also set Setting 11 [Down Command].<br>ON : Increases the frequency reference.<br>OFF : Holds the current frequency reference.  | 610  |
| 11            | Down Command                     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to use a push button switch to decrease the drive frequency reference. You must also set Setting 10 [Up Command].<br>ON : Decreases the frequency reference.<br>OFF : Holds the current frequency reference.  | 611  |
| 12            | Forward Jog                      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to operate the motor in the forward direction at the Jog Frequency set in d1-17 [Jog Reference].  | 612  |
| 13            | Reverse Jog                      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to operate the motor in reverse at the Jog Frequency set in d1-17 [Jog Reference].  | 612  |

## 11.10 H: Terminal Functions

| Setting Value | Function                     | Description   | Ref. |
|---------------|------------------------------|---|------|
| 14            | Fault Reset                  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to reset the current fault when the Run command is inactive.</p> <p><b>Note:</b><br/>The drive ignores the fault reset command when the Run command is active. Remove the Run command before trying to reset a fault.</p>  | 612  |
| 15            | Fast Stop (N.O.)             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to ramp to stop in the deceleration time set in <i>C1-09 [Fast Stop Time]</i> when the input terminal is activated while the drive is operating.</p>   | 613  |
| 16            | Motor 2 Selection            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command for the drive to operate motor 1 or motor 2. Stop the motors before switching.</p> <p>ON : Operate motor 2<br/>OFF : Operate motor 1</p>   | 613  |
| 17            | Fast Stop (N.C.)             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to ramp to stop in the deceleration time set in <i>C1-09 [Fast Stop Time]</i> when the input terminal is activated while the drive is operating.</p>   | 614  |
| 18            | Timer Function               | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to start the timer function. Use this setting with <i>Timer Output [H2-xx = 12]</i>.</p>   | 614  |
| 19            | PID Disable                  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to disable PID control when <i>b5-01 = 1 to 8 [PID Mode Setting = Enabled]</i>.</p> <p>ON : PID control disabled<br/>OFF : PID control enabled</p>   | 614  |
| 1A            | Accel/Decel Time Selection 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Set this function and <i>H1-xx = 7 [Accel/Decel Time Selection 1]</i> together. Sets the drive to use <i>Acceleration/Deceleration Time 3 [C1-05, C1-06]</i> or <i>Acceleration/Deceleration Time 4 [C1-07, C1-08]</i>.</p>   | 614  |
| 1B            | Programming Lockout          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to prevent parameter changes when the terminal is OFF.</p> <p>ON : Programming Lockout<br/>OFF : Parameter Write Prohibit</p>  | 614  |
| 1E            | Reference Sample Hold        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to sample the frequency reference at terminal A1 or A2, and hold the frequency reference at that frequency.</p>  | 615  |
| 20 to 2F      | External fault               | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets a command to stop the drive when a failure or fault occurs on an external device.</p> <p>20 : External Fault (NO-Always-Ramp)<br/>21 : External Fault (NC-Always-Ramp)<br/>22 : External Fault (NO-@Run-Ramp)<br/>23 : External Fault (NC-@Run-Ramp)<br/>24 : External Fault (NO-Always-Coast)<br/>25 : External Fault (NC-Always-Coast)<br/>26 : External Fault (NO-@Run-Coast)<br/>27 : External Fault (NC-@Run-Coast)<br/>28 : External Fault (NO-Always-FStop)<br/>29 : External Fault (NC-Always-FStop)<br/>2A : External Fault (NO-@Run-FStop)<br/>2B : External Fault (NC-@Run-FStop)<br/>2C : External Fault (NO-Always-Alarm)<br/>2D : External Fault (NC-Always-Alarm)<br/>2E : External Fault (NO-@Run-Alarm)<br/>2F : External Fault (NC-@Run-Alarm)</p> | 615  |
| 30            | PID Integrator Reset         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to reset and hold the PID control integral to 0 when the terminal is ON.</p>   | 616  |
| 31            | PID Integrator Hold          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to hold the integral value of the PID control while the terminal is activated.</p>   | 616  |
| 32            | Multi-Step Speed Reference 4 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Uses speed references <i>d1-01 to d1-16</i> to set a multi-step speed reference.</p>  | 616  |
| 34            | PID Soft Starter Disable     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the PID soft starter function.</p> <p>ON : No<br/>OFF : Yes</p>  | 616  |
| 35            | PID Input (Error) Invert     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to turn the terminal ON and OFF to switch the PID input level (polarity).</p>  | 617  |
| 3E            | PID Setpoint Selection 1     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Set this function and <i>H1-xx = 3F [PID Setpoint Selection 2]</i> together. Sets the function to switch the PID setpoint to <i>b5-58 to b5-60 [PID Setpoint 2 to 4]</i>.</p>   | 617  |

| Setting Value | Function                        | Description   | Ref. |
|---------------|---------------------------------|---|------|
| 3F            | PID Setpoint Selection 2        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Set this function and $H1-xx = 3E$ [PID Setpoint Selection 1] at the same time. Sets the function to switch the PID setpoint to $b5-58$ to $b5-60$ [PID Setpoint 2 to 4].  | 617  |
| 40            | Forward RUN (2-Wire)            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Forward Run command for 2-wire sequence 1. Set this function and $H1-xx = 41$ [Reverse Run Command (2-Wire Seq)] at the same time.<br>ON : Forward Run<br>OFF : Run Stop<br><b>Note:</b><br>• If you activate the Forward Run command terminal and the Reverse Run command terminal, the drive will detect minor fault/alarm $EF$ [FWD/REV Run Command Input Error] and the motor will ramp to stop.<br>• Initialize the drive with a 2-wire sequence to set the Forward Run command to terminal S1.<br>• This function will not operate at the same time as $H1-xx = 42, 43$ [Run Command/FWD/REV Command (2-Wire Seq 2)]. | 617  |
| 41            | Reverse RUN (2-Wire)            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Forward Run command for 2-wire sequence 1. Set this function and $H1-xx = 40$ [Forward Run Command (2-Wire Seq)] at the same time.<br>ON : Reverse Run<br>OFF : Run Stop<br><b>Note:</b><br>• If you activate the Forward Run command terminal and the Reverse Run command terminal, the drive will detect minor fault/alarm $EF$ [FWD/REV Run Command Input Error] and the motor will ramp to stop.<br>• Initialize the drive with a 2-wire sequence to set the Reverse Run command to terminal S2.<br>• This function will not operate at the same time as $H1-xx = 42, 43$ [Run Command/FWD/REV Command (2-Wire Seq 2)]. | 617  |
| 42            | Run Command (2-Wire Sequence 2) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Run command for 2-wire sequence 2. Set this function and $H1-xx = 43$ [FWD/REV Command (2-Wire Seq 2)] at the same time.<br>ON : Run<br>OFF : Stop<br><b>Note:</b><br>This function will not operate at the same time as $H1-xx = 40, 41$ [Forward/Reverse Run Command (2-Wire Seq)].   | 618  |
| 43            | FWD/REV (2-Wire Sequence 2)     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the direction of motor rotation for 2-wire sequence 2. Set this function and $H1-xx = 42$ [Run Command (2-Wire Sequence 2)] together.<br>ON : Reverse run<br>OFF : Forward run<br><b>Note:</b><br>This function will not operate at the same time as $H1-xx = 40, 41$ [Forward/Reverse Run Command (2-Wire Seq)].   | 618  |
| 44            | Add Offset Frequency 1 (d7-01)  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to add the offset frequency set in $d7-01$ [Offset Frequency 1] to the frequency reference when the terminal activates.  | 618  |
| 45            | Add Offset Frequency 2 (d7-02)  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to add the offset frequency set in $d7-02$ [Offset Frequency 2] to the frequency reference when the terminal activates.  | 618  |
| 46            | Add Offset Frequency 3 (d7-03)  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to add the offset frequency set in $d7-03$ [Offset Frequency 3] to the frequency reference when the terminal activates.  | 618  |
| 47            | Node Setup (CANopen)            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function in CANopen communications to start the Node Setup function to set the drive node address from the host controller.   | 618  |
| 60            | DC Injection Braking Command    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to use DC Injection Braking to stop the motor.<br><b>Note:</b><br>When $A1-02 = 8$ [Control Method Selection = EZOLV], this function is available with a PM motor.  | 619  |
| 61            | Speed Search from Fmax          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to start speed search using an external reference although $b3-01 = 0$ [Speed Search Selection at Start = Disabled].<br><b>Note:</b><br>The drive will detect $oPE03$ [Multi-Function Input Setting Err] when $H1-xx = 61$ and $62$ are set at the same time.  | 619  |
| 62            | Speed Search from Fref          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to use an external reference to start speed search although $b3-01 = 0$ [Speed Search Selection at Start = Disabled].<br><b>Note:</b><br>The drive will detect $oPE03$ [Multi-Function Input Setting Err] when $H1-xx = 61$ and $62$ are set at the same time.   | 619  |
| 63            | Field Weakening                 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to send the Field Weakening Level and Field Weakening Frequency Limit commands set in $d6-01$ [Field Weakening Level] and $d6-02$ [Field Weakening Frequency Limit] when the input terminal is activated.  | 619  |

## 11.10 H: Terminal Functions

| Setting Value | Function                         | Description  | Ref. |
|---------------|----------------------------------|--|------|
| 65            | KEB Ride-Thru 1 Activate (N.C.)  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of the KEB1 function through the KEB Ride-Thru 1 (N.C.).<br/>           ON : Normal operation<br/>           OFF : Deceleration during momentary power loss</p>   | 619  |
| 66            | KEB Ride-Thru 1 Activate (N.O.)  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of the KEB1 function through the KEB Ride-Thru 1 (N.O.).<br/>           ON : Deceleration during momentary power loss<br/>           OFF : Normal operation</p>   | 620  |
| 67            | Communications Test Mode         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Set the function for the drive to self-test RS-485 serial communications operation.</p>  | 620  |
| 68            | High Slip Braking (HSB) Activate | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the command to use high-slip braking to stop the motor.</p>   | 620  |
| 6A            | Drive Enable                     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to show <i>dnE [Drive Enabled]</i> on the keypad and ignore Run commands when the terminal is OFF.</p>   | 620  |
| 75            | Up 2 Command                     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to increase the frequency reference bias value to accelerate the motor when the terminal is activated. Set this function and <i>H1-xx = 76 [Down 2 Command]</i> together.</p> <p><b>Note:</b><br/>           When you use this function, use <i>d4-08</i> and <i>d4-09 [Up/Down 2 Bias Upper Limit/Lower Limit]</i> to set the optimal bias limit value.</p>       | 620  |
| 76            | Down 2 Command                   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to decrease the frequency reference bias value to decelerate the motor when the terminal is activated. Set this function and <i>H1-xx = 75 [Up 2 Command]</i> at the same time.</p> <p><b>Note:</b><br/>           When you use this function, use <i>d4-08</i> and <i>d4-09 [Up/Down 2 Bias Upper Limit/Lower Limit]</i> to set the optimal bias limit value.</p> | 622  |
| 77            | ASR Gain (C5-03) Select          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to switch the ASR proportional gain set in <i>C5-01 [ASR Proportional Gain 1]</i> and <i>C5-03 [ASR Proportional Gain 1/2]</i>.<br/>           ON : C5-03<br/>           OFF : C5-01</p>   | 622  |
| 7A            | KEB Ride-Thru 2 Activate (N.C.)  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of the KEB2 function through the KEB Ride-Thru 2 (N.C.).<br/>           ON : Normal operation<br/>           OFF : Deceleration during momentary power loss</p>   | 622  |
| 7B            | KEB Ride-Thru 2 Activate (N.O.)  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of the KEB2 function through the KEB Ride-Thru 2 (N.O.).<br/>           ON : Deceleration during momentary power loss<br/>           OFF : Normal operation</p>   | 622  |
| 7C            | Short Circuit Braking (N.O.)     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of Short Circuit Braking (N.O.).<br/>           ON : Short Circuit Braking is enabled.<br/>           OFF : Normal operation</p> <p><b>Note:</b><br/>           When <i>A1-02 = 8 [Control Method Selection = EZOLV]</i>, this function is available only when you use a PM motor.</p>  | 622  |
| 7D            | Short Circuit Braking (N.C.)     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of Short Circuit Braking (N.C.).<br/>           ON : Normal operation<br/>           OFF : Short Circuit Braking is enabled.</p> <p><b>Note:</b><br/>           When <i>A1-02 = 8 [Control Method Selection = EZOLV]</i>, this function is available only when you use a PM motor.</p>  | 623  |
| 7E            | Reverse Rotation Identifier      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Set the motor rotation direction when you use Simple Closed Loop V/f Control method.<br/>           ON : Reverse run<br/>           OFF : Forward run</p>  | 623  |
| 7F            | PID Bi-Directional Enable        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of the PID Bi-Directional function.<br/>           ON : Enabled<br/>           OFF : Disabled</p>   | 623  |
| 90 - 96       | DWEZ Digital Inputs 1 to 7       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets digital inputs used with DriveWorksEZ. Refer to the DriveWorksEZ online manual for more information.</p>  | 623  |



| Setting Value | Function                 | Description   | Ref. |
|---------------|--------------------------|---|------|
| 9F            | DWEZ Disable             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation of the DriveWorksEZ program saved in the drive.<br/>ON : No<br/>OFF : Yes<br/><b>Note:</b><br/>Set <math>A1-07 = 2</math> [DriveWorksEZ Function Selection = Digital input] to enable this function.</p> | 623  |
| 101 to 19F    | Inverse Input of 1 to 9F | <p>Sets the function of the selected MFDI to operate inversely. To select the function, enter "Ixx", where the "xx" is the function setting value.<br/><b>Note:</b><br/>You cannot use inverse input for all functions. Refer to Table 12.55 for more information.</p>                            | 624  |

## ◆ H2: Digital Outputs

| No. (Hex.)   | Name                             | Description  | Default (Range)          | Ref. |
|--------------|----------------------------------|--|--------------------------|------|
| H2-01 (040B) | Term MA/MB-MC Function Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function set for MFDI terminal MA-MC or MB-MC.<br/><b>Note:</b><br/>Set this parameter to <i>F</i> when the terminal is not being used or to use the terminal in through mode.</p>  | E<br>(0 - 1FF)           | 626  |
| H2-02 (040C) | Term P1-C1 Function Selection    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal P1-C1.<br/><b>Note:</b><br/>Set this parameter to <i>F</i> when the terminal is not being used or to use the terminal in through mode.</p>   | 0<br>(0 - 1FF)           | 626  |
| H2-03 (040D) | Term P2-C2 Function Selection    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function for MFDI terminal P2-C2.<br/><b>Note:</b><br/>Set this parameter to <i>F</i> when the terminal is not being used or to use the terminal in through mode.</p>   | 2<br>(0 - 1FF)           | 626  |
| H2-06 (0437) | Watt Hour Output Unit Selection  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the unit for the output signal when <math>H2-01</math> to <math>H2-03 = 39</math> [MFDI Function Selection = Watt Hour Pulse Output].<br/>0 : 0.1 kWh units<br/>1 : 1 kWh units<br/>2 : 10 kWh units<br/>3 : 100 kWh units<br/>4 : 1000 kWh units</p> | 0<br>(0 - 4)             | 626  |
| H2-07 (0B3A) | Modbus Register 1 Address Select | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the address of the MEMOBUS/Modbus register output to the MFDI terminal.</p>   | 0001<br>(0001 - 1FFF)    | 627  |
| H2-08 (0B3B) | Modbus Register 1 Bit Select     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit of the MEMOBUS/Modbus register output to the MFDI terminal.</p>   | 0000<br>(0000 - FFFF)    | 627  |
| H2-09 (0B3C) | Modbus Register 2 Address Select | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the address of the MEMOBUS/Modbus register output to the MFDI terminal.</p>   | 0001<br>(0001 - 1FFF)    | 627  |
| H2-10 (0B3D) | Modbus Register 2 Bit Select     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the bit of the MEMOBUS/Modbus register output to the MFDI terminal.</p>   | 0000<br>(0000 - FFFF)    | 627  |
| H2-20 (1540) | Comparator 1 Monitor Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the monitor number for comparator 1. Set the <i>x-xx</i> part of the <i>Ux-xx</i> [Monitor]. For example, set <math>H2-20 = 102</math> to monitor <math>U1-02</math> [Output Frequency].</p>  | 102<br>(000 - 999)       | 628  |
| H2-21 (1541) | Comparator 1 Lower Limit         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the lower limit detection level for comparator 1 when the full scale analog output for the monitor selected in <math>H2-20</math> [Comparator 1 Monitor Selection] is the 100% value.</p>   | 0.0%<br>(0.0 - 300.0%)   | 628  |
| H2-22 (1542) | Comparator 1 Upper Limit         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the upper limit detection level for comparator 1 when the full scale analog output for the monitor selected in <math>H2-20</math> [Comparator 1 Monitor Selection] is the 100% value.</p>   | 0.0%<br>(0.0 - 300.0%)   | 628  |
| H2-23 (1543) | Comparator 1 Hysteresis          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the hysteresis level for comparator 1 as a percentage of the full scale analog output for the monitor selected in <math>H2-20</math> [Comparator 1 Monitor Selection].</p>  | 0.0%<br>(0.0 - 10.0%)    | 628  |
| H2-24 (1544) | Comparator 1 On-Delay Time       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the on-delay time for comparator 1.</p>   | 0.0 s<br>(0.0 - 600.0 s) | 628  |
| H2-25 (1545) | Comparator 1 Off-Delay Time      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the off-delay time for comparator 1.</p>  | 0.0 s<br>(0.0 - 600.0 s) | 628  |
| H2-26 (1546) | Comparator 2 Monitor Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the monitor number for comparator 2. Set the <i>x-xx</i> part of the <i>Ux-xx</i> [Monitor]. For example, set <math>H2-26 = 103</math> to monitor <math>U1-03</math> [Output Current].</p>  | 103<br>(000 - 999)       | 629  |

## 11.10 H: Terminal Functions

| No. (Hex.)          | Name                             | Description   | Default (Range)           | Ref. |
|---------------------|----------------------------------|---|---------------------------|------|
| H2-27 (1547)        | Comparator 2 Lower Limit         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower limit detection level for comparator 2 as a percentage of the full scale analog output for the monitor selected in H2-26 [Comparator 2 Monitor Selection].              | 0.0%<br>(0.0 - 300.0%)    | 629  |
| H2-28 (1548)        | Comparator 2 Upper Limit         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the upper limit detection level for comparator 2 as a percentage of the full scale analog output for the monitor selected in H2-26 [Comparator 2 Monitor Selection].              | 0.0%<br>(0.0 - 300.0%)    | 629  |
| H2-29 (1549)        | Comparator 2 Hysteresis          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the hysteresis level for comparator 2 as a percentage of the full scale analog output for the monitor selected in H2-26 [Comparator 2 Monitor Selection].                         | 0.0%<br>(0.0 - 10.0%)     | 629  |
| H2-30 (154A)        | Comparator 2 On-Delay Time       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the on-delay time for comparator 2.   | 0.0 s<br>(0.0 - 600.0 s)  | 629  |
| H2-31 (154B)        | Comparator 2 Off-Delay Time      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the off-delay time for comparator 2.  | 0.0 s<br>(0.0 - 600.0 s)  | 629  |
| H2-32 (159A)        | Comparator 1 Filter Time         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant that is applied to the primary delay filter used for the analog output of the monitor selected with H2-20 [Comparator 1 Monitor Selection].                     | 0.0s<br>(0.0 - 10.0 s)    | 630  |
| H2-33 (159B)        | Comparator1 Protection Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets drive operation when it detects CP1 [Comparator1 Limit Fault].<br>0 : Ramp to Stop<br>1 : Coast to Stop<br>2 : Fast Stop (Use C1-09)<br>3 : Alarm Only<br>4 : Digital Output Only | 4<br>(0 - 4)              | 630  |
| H2-34 (159C)        | Comparator 2 Filter Time         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant that is applied to the primary delay filter used for the analog output of the monitor selected with H2-26 [Comparator 2 Monitor Selection].                     | 0.0s<br>(0.0 - 10.0 s)    | 630  |
| H2-35 (159D)        | Comparator2 Protection Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets drive operation when it detects CP2 [Comparator2 Limit Fault].<br>0 : Ramp to Stop<br>1 : Coast to Stop<br>2 : Fast Stop (Use C1-09)<br>3 : Alarm Only<br>4 : Digital Output Only | 4<br>(0 - 4)              | 630  |
| H2-36 (159E)        | Comparator 1 Ineffective Time    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that CP1 [Comparator1 Limit Fault] is disabled.  | 0.0 s<br>(0.0 - 1000.0 s) | 631  |
| H2-37 (159F)        | Comparator 2 Ineffective Time    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that CP2 [Comparator2 Limit Fault] is disabled.  | 0.0 s<br>(0.0 - 1000.0 s) | 631  |
| H2-40 (0B58)        | Mbus Reg 15E0h bit0 Output Func  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MFDO for bit 0 of MEMOBUS register 15E0 (Hex.).   | F<br>(0 - 1FF)            | 631  |
| H2-41 (0B59)        | Mbus Reg 15E0h bit1 Output Func  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MFDO for bit 1 of MEMOBUS register 15E0 (Hex.).   | F<br>(0 - 1FF)            | 631  |
| H2-42 (0B5A)        | Mbus Reg 15E0h bit2 Output Func  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MFDO for bit 2 of MEMOBUS register 15E0 (Hex.).   | F<br>(0 - 1FF)            | 631  |
| H2-60 (1B46) Expert | Term MA,MB,MC Secondary Function | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the second function for terminal MA/MB-MC. Outputs the logical calculation results of the terminals set to functions by H2-01 [Term MA,MB,MC Function Selection].                 | F<br>(0 - FF)             | 631  |
| H2-61 (1B47) Expert | Term MA,MB,MC Logical Operation  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the logical operation for the functions set in H2-01 [Term MA,MB,MC Function Selection] and H2-60 [Term MA,MB,MC Secondary Function].   | 0<br>(0 - 8)              | 631  |
| H2-62 (1B48) Expert | Term MA,MB,MC Minimum ON Time    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time that the drive uses to output the logical calculation results from terminal MA/MB-MC.   | 0.1 s<br>(0.0 - 25.0 s)   | 632  |
| H2-63 (1B49) Expert | Terminal P1 Secondary Function   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the second function for terminal P1-C1. Outputs the logical calculation results of the terminals set to functions by H2-02 [Term P1 Function Selection].                          | F<br>(0 - FF)             | 632  |
| H2-64 (1B4A) Expert | Terminal P1 Logical Operation    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the logical operation for the functions set in H2-02 [Term P1 Function Selection] and H2-63 [Terminal P1 Secondary Function].   | 0<br>(0 - 8)              | 632  |
| H2-65 (1B4B) Expert | Terminal P1 Minimum ON Time      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time used to output the logical calculation results from terminal P1-C1.   | 0.1 s<br>(0.0 - 25.0 s)   | 632  |

| No. (Hex.)          | Name                           | Description   | Default (Range)         | Ref. |
|---------------------|--------------------------------|---|-------------------------|------|
| H2-66 (1B4C) Expert | Terminal P2 Secondary Function | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the second function for terminal P2-C2. Outputs the logical calculation results of the terminals assigned to functions by H2-03 [Term P2 Function Selection]. | F<br>(0 - FF)           | 632  |
| H2-67 (1B4D) Expert | Terminal P2 Logical Operation  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the logical operation for the functions set in H2-03 [Term P2 Function Selection] and H2-66 [Terminal P2 Secondary Function].                                 | 0<br>(0 - 8)            | 632  |
| H2-68 (1B4E) Expert | Terminal P2 Minimum ON Time    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time used to output the logical calculation results from terminal P2-C2.   | 0.1 s<br>(0.0 - 25.0 s) | 632  |

## ■ H2-xx: MFDO Setting Values

| Setting Value | Function                 | Description   | Ref.          |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
|---------------|--------------------------|---|---------------|--------------------------|---------------------------------|---|-----|-------|---|-----|-------|---|--------|-------|---|---------|-------|---|-------|-------|-----|
| 0             | During Run               | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal activates when you input a Run command and when the drive is outputting voltage.<br>ON : Drive is running<br>OFF : Drive is stopping  | 633           |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 1             | Zero Speed               | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal turns on when the output frequency drops below the value of E1-09 [Minimum Output Frequency] or b2-01 [DC Injection/Zero SpeedThreshold].<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the reference.<br><table border="1"> <thead> <tr> <th>A1-02 Setting</th> <th>Control Method Selection</th> <th>Parameter Used as the Reference</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>V/f</td> <td>E1-09</td> </tr> <tr> <td>2</td> <td>OLV</td> <td>b2-01</td> </tr> <tr> <td>5</td> <td>OLV/PM</td> <td>E1-09</td> </tr> <tr> <td>6</td> <td>AOLV/PM</td> <td>E1-09</td> </tr> <tr> <td>8</td> <td>EZOLV</td> <td>E1-09</td> </tr> </tbody> </table><br>ON : Output frequency < value of E1-09 or b2-01.<br>OFF : Output frequency ≥ value of E1-09 or b2-01. | A1-02 Setting | Control Method Selection | Parameter Used as the Reference | 0 | V/f | E1-09 | 2 | OLV | b2-01 | 5 | OLV/PM | E1-09 | 6 | AOLV/PM | E1-09 | 8 | EZOLV | E1-09 | 633 |
| A1-02 Setting | Control Method Selection | Parameter Used as the Reference   |               |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 0             | V/f                      | E1-09   |               |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 2             | OLV                      | b2-01   |               |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 5             | OLV/PM                   | E1-09   |               |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 6             | AOLV/PM                  | E1-09   |               |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 8             | EZOLV                    | E1-09   |               |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 2             | Speed Agree 1            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal activates when the output frequency is in the range of the frequency reference ± L4-02 [Speed Agree Detection Width].<br>ON : The output frequency is in the range of "frequency reference ± L4-02".<br>OFF : The output frequency does not align with the frequency reference although the drive is running.   | 633           |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 3             | User-Set Speed Agree 1   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal activates when the output frequency is in the range of L4-01 [Speed Agree Detection Level] ± L4-02 [Speed Agree Detection Width] and in the range of the frequency reference ± L4-02.<br><b>Note:</b><br>The detection function operates in the two motor rotation directions. The drive uses the L4-01 value as the forward/reverse detection level.<br>ON : The output frequency is within the range as defined by the result of "L4-01 ± L4-02" and the range of frequency reference ± L4-02.<br>OFF : The output frequency is not in the range of "L4-01 ± L4-02" nor the range of frequency reference ± L4-02.   | 634           |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 4             | Frequency Detection 1    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal deactivates when the output frequency is higher than the value of L4-01 [Speed Agree Detection Level] + L4-02 [Speed Agree Detection Width]. After the terminal turns off, the terminal continues to remain off until the output frequency reaches the level set with L4-01.<br><b>Note:</b><br>The detection function operates in the two motor rotation directions. The drive uses the L4-01 value as the forward/reverse detection level.<br>ON : The output frequency is less than the value of L4-01 or does not exceed the value of L4-01 + L4-02.<br>OFF : The output frequency is higher than the value of L4-01 + L4-02.   | 634           |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 5             | Frequency Detection 2    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal activates when the output frequency is higher than the value of L4-01 [Speed Agree Detection Level]. After the terminal activates, the terminal stays activated until the output frequency is at the value of L4-01 - L4-02.<br><b>Note:</b><br>The detection function operates in the two motor rotation directions. The drive uses the L4-01 value as the forward/reverse detection level.<br>ON : The output frequency is higher than the value of L4-01.<br>OFF : The output frequency is less than the value of "L4-01 - L4-02," or it does not exceed the value of L4-01.   | 635           |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |
| 6             | Drive Ready              | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal activates when the drive is ready and running.  | 635           |                          |                                 |   |     |       |   |     |       |   |        |       |   |         |       |   |       |       |     |

## 11.10 H: Terminal Functions

| Setting Value | Function                        | Description   | Ref. |
|---------------|---------------------------------|---|------|
| 7             | DC Bus Undervoltage             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the DC bus voltage or control circuit power supply is at the voltage set in L2-05 [Undervoltage Detection Lvl (Uv1)] or less. The terminal also activates when there is a fault with the DC bus voltage.<br/>           ON : The DC bus voltage <math>\leq</math> L2-05<br/>           OFF : The DC bus voltage <math>&gt;</math> L2-05</p>   | 635  |
| 8             | During Baseblock (N.O.)         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage.<br/>           ON : During baseblock<br/>           OFF : The drive is not in baseblock.</p>   | 636  |
| 9             | Frequency Reference from Keypad | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the selected frequency reference source.<br/>           ON : The keypad is the frequency reference source.<br/>           OFF : Parameter b1-01 or b1-15 [Frequency Reference Selection 1 or 2] is the frequency reference source.</p>  | 636  |
| A             | Run Command Source              | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the selected Run command source.<br/>           ON : The keypad is the Run command source.<br/>           OFF : Parameter b1-02 or b1-16 [Run Command Selection 1 or 2] is the Run command source.</p>  | 636  |
| B             | Torque Detection 1 (N.O.)       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects overtorque or undertorque.<br/>           ON : The output current/torque <math>&gt;</math> L6-02 [Torque Detection Level 1], or the output current/torque <math>&lt;</math> L6-02 for longer than the time set in L6-03 [Torque Detection Time 1].</p>  | 636  |
| C             | Frequency Reference Loss        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects a loss of frequency reference.</p>  | 636  |
| D             | Braking Resistor Fault          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the mounting-type braking resistor is overheating or when there is a braking transistor fault.</p>  | 636  |
| E             | Fault                           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects a fault.<br/> <b>Note:</b><br/>           The terminal will not activate for CPF00 and CPF01 [Control Circuit Error] faults.</p>  | 636  |
| F             | Not Used                        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Use this setting for unused terminals or to use terminals in through mode. Also use this setting as the PLC contact output via MEMOBUS/Modbus or the communication option. This signal does not function if signals from the PLC are not configured.</p>  | 637  |
| 10            | Alarm                           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects a minor fault.</p>  | 637  |
| 11            | Fault Reset Command Active      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive receives the Reset command from the control circuit terminal, serial communications, or the communication option.</p>   | 637  |
| 12            | Timer Output                    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Use this setting when the drive uses the timer function as an output terminal.</p>  | 637  |
| 13            | Speed Agree 2                   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency is in the range of the frequency reference <math>\pm</math> L4-04 [Speed Agree Detection Width(+/-)].<br/> <b>Note:</b><br/>           The detection function operates in the two motor rotation directions.<br/>           ON : The output frequency is in the range of "frequency reference <math>\pm</math> L4-04".<br/>           OFF : The output frequency is not in the range of "frequency reference <math>\pm</math> L4-04".</p>  | 637  |
| 14            | User-Set Speed Agree 2          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency is in the range of L4-03 [Speed Agree Detection Level(+/-)] <math>\pm</math> L4-04 [Speed Agree Detection Width(+/-)] and in the range of the frequency reference <math>\pm</math> L4-04.<br/> <b>Note:</b><br/>           The detection level set with L4-03 is a signed value. The drive will only detect in one direction.<br/>           ON : The output frequency is in the range of "L4-03 <math>\pm</math> L4-04" and the range of frequency reference <math>\pm</math> L4-04.<br/>           OFF : The output frequency is not in the range of "L4-03 <math>\pm</math> L4-04" nor the range of frequency reference <math>\pm</math> L4-04.</p> | 637  |
| 15            | Frequency Detection 3           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the output frequency is higher than the value of "L4-03 [Speed Agree Detection Level(+/-)] + L4-04 [Speed Agree Detection Width(+/-)]". After the terminal deactivates, the terminal stays deactivated until the output frequency is at the value of L4-03.<br/> <b>Note:</b><br/>           The detection level set with L4-03 is a signed value. The drive will only detect in one direction.<br/>           ON : The output frequency is less than the value of L4-03 or does not exceed the value of L4-03 + L4-04.<br/>           OFF : The output frequency is higher than the value of L4-03 + L4-04.</p>  | 638  |

| Setting Value | Function                       | Description  | Ref. |
|---------------|--------------------------------|--|------|
| 16            | Frequency Detection 4          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency is higher than the value of <i>L4-03</i> [<i>Speed Agree Detection Level (+/-)</i>]. After the terminal activates, the terminal stays activated until the output frequency is at the value of <i>L4-03</i> - <i>L4-04</i>.</p> <p><b>Note:</b><br/>The detection level set with <i>L4-03</i> is a signed value. The drive will only detect in one direction.<br/>ON : The output frequency is higher than the value of <i>L4-03</i>.<br/>OFF : The output frequency is less than the value of "<i>L4-03</i> - <i>L4-04</i>," or it does not exceed the value of <i>L4-03</i>.</p> | 638  |
| 17            | Torque Detection 1 (N.C.)      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects overtorque or undertorque.<br/>OFF : The output current/torque &gt; <i>L6-02</i> [<i>Torque Detection Level 1</i>], or the output current/torque &lt; <i>L6-02</i> for longer than the time set in <i>L6-03</i> [<i>Torque Detection Time 1</i>].</p>  | 639  |
| 18            | Torque Detection 2 (N.O.)      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects overtorque or undertorque.<br/>ON : The output current/torque &gt; <i>L6-05</i> [<i>Torque Detection Level 2</i>], or the output current/torque &lt; <i>L6-05</i> for longer than the time set in <i>L6-06</i> [<i>Torque Detection Time 2</i>].</p>   | 639  |
| 19            | Torque Detection 2 (N.C.)      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates when the drive detects overtorque or undertorque.<br/>OFF : The output current/torque &gt; <i>L6-05</i> [<i>Torque Detection Level 2</i>], or the output current/torque &lt; <i>L6-05</i> for longer than the time set in <i>L6-06</i> [<i>Torque Detection Time 2</i>].</p>  | 639  |
| 1A            | During Reverse                 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the motor operates in the reverse direction.<br/>ON : The motor is operating in the reverse direction.<br/>OFF : The motor is operating in the forward direction or the motor stopped.</p>   | 639  |
| 1B            | During Baseblock (N.C.)        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal deactivates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage.<br/>ON : The drive is not in baseblock.<br/>OFF : During baseblock</p>  | 640  |
| 1C            | Motor 2 Selected               | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when motor 2 is selected.<br/>ON : Motor 2 Selection<br/>OFF : Motor 1 Selection</p>  | 640  |
| 1E            | Executing Auto-Restart         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the Auto Restart function is trying to restart after a fault.</p>  | 640  |
| 1F            | Motor Overload Alarm (oL1)     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the electronic thermal protection value of the motor overload protective function is a minimum of 90% of the detection level.</p>  | 640  |
| 20            | Drive Overheat Pre-Alarm (oH)  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive heatsink temperature is at the level set with <i>L8-02</i> [<i>Overheat Alarm Level</i>].</p>  | 640  |
| 21            | Safe Torque OFF                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates (safety stop state) when the safety circuit and safety diagnosis circuit are operating correctly and when terminals H1-HC and H2-HC are OFF (Open).<br/>ON : Safety stop state<br/>OFF : Safety circuit fault or RUN/READY</p>  | 641  |
| 22            | Mechanical Weakening Detection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects mechanical weakening.</p>  | 641  |
| 2F            | Maintenance Notification       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when drive components are at their estimated maintenance period.<br/>Tells the user about the maintenance period for these items:</p> <ul style="list-style-type: none"> <li>• IGBT</li> <li>• Cooling fan</li> <li>• Capacitor</li> <li>• Soft charge bypass relay</li> </ul>  | 641  |
| 30            | During Torque Limit            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the torque reference is the torque limit set with <i>L7</i> parameters or <i>H3-02</i> or <i>H3-10</i> [<i>MFAI Function Selection</i>].</p>   | 641  |
| 37            | During Frequency Output        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive outputs frequency.<br/>ON : The drive outputs frequency.<br/>OFF : The drive does not output frequency.</p>  | 641  |
| 38            | Drive Enabled                  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>This terminal activates when the <i>H1-xx = 6A</i> [<i>Drive Enable</i>] terminal activates.</p>   | 642  |
| 39            | Watt Hour Pulse Output         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Outputs the pulse that shows the watt hours.</p>   | 642  |

## 11.10 H: Terminal Functions

| Setting Value | Function                         | Description  | Ref. |
|---------------|----------------------------------|--|------|
| 3C            | LOCAL Control Selected           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the Run command source or frequency reference source is LOCAL.<br/>ON : LOCAL<br/>OFF : REMOTE</p>   | 642  |
| 3D            | During Speed Search              | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive is doing speed search.</p>   | 642  |
| 3E            | PID Feedback Low                 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects <i>FbL</i> [PID Feedback Loss].</p>  | 642  |
| 3F            | PID Feedback High                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects <i>FbH</i> [Excessive PID Feedback].</p>   | 643  |
| 4A            | During KEB Ride-Thru             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The activates during KEB Ride-Thru.</p>  | 643  |
| 4B            | During Short Circuit Braking     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates during Short Circuit Braking.<br/><b>Note:</b><br/>When <i>A1-02</i> = 8 [Control Method Selection = EZOLV], this function is available only when you use a PM motor.</p>   | 643  |
| 4C            | During Fast Stop                 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the fast stop is in operation.</p>   | 643  |
| 4D            | oH Pre-Alarm Time Limit          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when <i>L8-03</i> = 4 [Overheat Pre-Alarm Selection = Operate at Reduced Speed (L8-19)] and <i>oH</i> [Heatsink Overheat] does not clear after the drive decreases the frequency for 10 cycles.</p>   | 643  |
| 4E            | Braking Transistor Fault (rr)    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the internal braking transistor overheats and the drive detects an <i>rr</i> [Dynamic Braking Transistor Fault] fault.</p>   | 643  |
| 4F            | Braking Resistor Overheat (rH)   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the braking resistor overheats and the drive detects an <i>rH</i> [Braking Resistor Overheat] fault.</p>   | 643  |
| 61            | Pole Position Detection Complete | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when drive receives a Run command and the drive detects the motor magnetic pole position of the PM motor.</p>   | 644  |
| 62            | Modbus Reg 1 Status Satisfied    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the bit specified by <i>H2-08</i> [Modbus Register 1 Bit Select] for the MEMOBUS register address set with <i>H2-07</i> [Modbus Register 1 Address Select] activates.</p>  | 644  |
| 63            | Modbus Reg 2 Status Satisfied    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the bit specified by <i>H2-10</i> [Modbus Register 2 Bit Select] for the MEMOBUS register address set with <i>H2-09</i> [Modbus Register 2 Address Select] activates.</p>  | 644  |
| 66            | Comparator1                      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates if the monitor value set with <i>H2-20</i> [Comparator 1 Monitor Selection] is in range of the values of <i>H2-21</i> [Comparator 1 Lower Limit] and <i>H2-22</i> [Comparator 1 Upper Limit] for the time set in <i>H2-24</i> [Comparator 1 On-Delay Time].</p>         | 644  |
| 67            | Comparator2                      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates if the monitor value set with <i>H2-26</i> [Comparator 2 Monitor Selection] is not in the range of the values of <i>H2-27</i> [Comparator 2 Lower Limit] and <i>H2-28</i> [Comparator 2 Upper Limit] for the time set in <i>H2-30</i> [Comparator 2 On-Delay Time].</p> | 644  |
| 69            | External Power 24V Supply        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when there is an external 24V power supply between terminals PS-AC.<br/>ON : An external 24V power supply supplies power.<br/>OFF : An external 24V power supply does not supply power.</p>   | 645  |
| 6A            | Data Logger Error                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects <i>LoG</i> [Com Error / Abnormal SD card].</p>   | 645  |
| 90 - 92       | DWEZ Digital Output 1 to 3       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the DriveWorksEZ digital output. Refer to the DriveWorksEZ online manual for more information.</p>  | 645  |
| 100 - 192     | Inverse output of 0 to 92        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Causes inverse output of the function for the selected MFDO. Uses the last two digits of 1xx to select which function to inversely output.</p>   | 645  |

## ◆ H3: Analog Inputs

| No. (Hex.)       | Name                             | Description  | Default (Range)              | Ref. |
|------------------|----------------------------------|--|------------------------------|------|
| H3-01 (0410)     | Terminal A1 Signal Level Select  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the input signal level for MFAI terminal A1.<br>0 : 0 to 10V (Lower Limit at 0)<br>1 : 0 V to 10 V (Without Lower Limit)   | 0<br>(0, 1)                  | 647  |
| H3-02 (0434)     | Terminal A1 Function Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for MFAI terminal A1.   | 0<br>(0 - 32)                | 647  |
| H3-03 (0411) RUN | Terminal A1 Gain Setting         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain of the analog signal input to MFAI terminal A1.   | 100.0%<br>(-999.9 - +999.9%) | 647  |
| H3-04 (0412) RUN | Terminal A1 Bias Setting         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias of the analog signal input to MFAI terminal A1.   | 0.0%<br>(-999.9 - +999.9%)   | 648  |
| H3-09 (0417)     | Terminal A2 Signal Level Select  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the input signal level for MFAI terminal A2.<br>0 : 0-10V (LowLim=0)<br>1 : 0-10V (Without Lower Limit)<br>2 : 4 to 20 mA<br>3 : 0 to 20 mA  | 2<br>(0 - 3)                 | 648  |
| H3-10 (0418)     | Terminal A2 Function Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for MFAI terminal A2.   | 0<br>(0 - 32)                | 648  |
| H3-11 (0419) RUN | Terminal A2 Gain Setting         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain of the analog signal input to MFAI terminal A2.   | 100.0%<br>(-999.9 - +999.9%) | 648  |
| H3-12 (041A) RUN | Terminal A2 Bias Setting         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias of the analog signal input to MFAI terminal A2.   | 0.0%<br>(-999.9 - +999.9%)   | 649  |
| H3-13 (041B)     | Analog Input FilterTime Constant | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant for primary delay filters on MFAI terminals.   | 0.03 s<br>(0.00 - 2.00 s)    | 649  |
| H3-14 (041C)     | Analog Input Terminal Enable Sel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the enabled terminal or terminals when $H1-xx = C$ [MFDI Function Select = Analog Terminal Enable Selection] is ON.<br>1 : Terminal A1 only<br>2 : Terminal A2 only<br>7 : Terminals A1 and A2 | 7<br>(1, 2, 7)               | 649  |
| H3-16 (02F0)     | Terminal A1 Offset               | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the offset level for analog signals input to terminal A1. Usually it is not necessary to change this setting.  | 0<br>(-500 - +500)           | 649  |
| H3-17 (02F1)     | Terminal A2 Offset               | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the offset level for analog signals input to terminal A2. Usually it is not necessary to change this setting.  | 0<br>(-500 - +500)           | 649  |
| H3-40 (0B5C)     | Mbus Reg 15C1h Input Function    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MEMOBUS AI1 function.  | F<br>(4 - 2F)                | 650  |
| H3-41 (0B5F)     | Mbus Reg 15C2h Input Function    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MEMOBUS AI2 function.  | F<br>(4 - 2F)                | 650  |
| H3-42 (0B62)     | Mbus Reg 15C3h Input Function    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MEMOBUS AI3 function.  | F<br>(4 - 2F)                | 650  |
| H3-43 (117F)     | Mbus Reg Inputs FilterTime Const | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant to apply a primary delay filter to the MEMOBUS analog input register values.   | 0.00 s<br>(0.00 - 2.00 s)    | 650  |

## ■ H3-xx: MFAI Setting Values

| Setting Value | Function            | Description   | Ref. |
|---------------|---------------------|---|------|
| 0             | Frequency Reference | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The input value from the MFAI terminal set with this function becomes the master frequency reference.          | 650  |
| 1             | Frequency Gain      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The drive multiplies the analog frequency reference with the input value from the MFAI set with this function. | 650  |

## 11.10 H: Terminal Functions

| Setting Value | Function                        | Description  | Ref. |
|---------------|---------------------------------|--|------|
| 2             | Auxiliary Frequency Reference 1 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets Reference 2 through multi-step speed reference to enable the command reference (Auxiliary Frequency Reference 1) from the analog input terminal set here. This value is a percentage where the Maximum Output Frequency setting is a setting value of 100%.</p> <p><b>Note:</b><br/>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br/>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br/>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed]</p> | 651  |
| 3             | Auxiliary Frequency Reference 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets Reference 3 through multi-step speed reference to enable the command reference (Auxiliary Frequency Reference 2) from the analog input terminal set here. This value is a percentage where the Maximum Output Frequency setting is a setting value of 100%.</p> <p><b>Note:</b><br/>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br/>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br/>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed]</p> | 651  |
| 4             | Output Voltage Bias             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Set this parameter to input a bias signal to amplify the output voltage.</p>   | 651  |
| 5             | Accel/Decel Time Gain           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the gain used for <i>C1-01</i> to <i>C1-08</i> [Acceleration/Deceleration Times 1 to 4] and <i>C1-09</i> [Fast Stop Time] when the full scale analog signal (10 V or 20 mA) is 100%.</p>   | 651  |
| 6             | DC Injection Braking Current    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the current level used for DC Injection Braking when the drive rated output current is 100%.</p>   | 652  |
| 7             | Torque Detection Level          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the overtorque/undertorque detection level.</p> <p><b>Note:</b><br/>Use this function with <i>L6-01</i> [Torque Detection Selection 1]. This parameter functions as an alternative to <i>L6-02</i> [Torque Detection Level 1].</p>   | 652  |
| 8             | Stall Prevent Level during Run  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the stall prevention level during run if the drive rated current is 100%.</p>  | 652  |
| 9             | Output Frequency Lower Limit    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters a signal to adjust the output frequency lower limit level as a percentage of the maximum output frequency.</p> <p><b>Note:</b><br/>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br/>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br/>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed]</p>  | 653  |
| B             | PID Feedback                    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enter the PID feedback value as a percentage of the maximum output frequency.</p> <p><b>Note:</b><br/>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br/>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br/>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed]</p>  | 653  |
| C             | PID Setpoint                    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters the PID setpoint as a percentage of the maximum output frequency.</p> <p><b>Note:</b><br/>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br/>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br/>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed]</p>   | 653  |
| D             | Frequency Bias                  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters the bias value added to the frequency reference as a percentage of the maximum output frequency.</p> <p><b>Note:</b><br/>Parameter <i>A1-02</i> [Control Method Selection] selects which parameter is the maximum output frequency.<br/>• <i>A1-02</i> ≠ 8 [EZOLV]: <i>E1-04</i> [Maximum Output Frequency]<br/>• <i>A1-02</i> = 8: <i>E9-02</i> [Maximum Speed]</p>  | 653  |
| E             | Motor Temperature (PTC Input)   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Uses the motor Positive Temperature Coefficient (PTC) thermistor to prevent heat damage to the motor as a percentage of the current value when the 10 V analog signal is input.</p>  | 653  |
| F             | Not Used                        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Use this setting for unused terminals or to use terminals in through mode.</p>   | 653  |
| 10            | Forward Torque Limit            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters the forward torque limit if the motor rated torque is 100%.</p>   | 654  |
| 11            | Reverse Torque Limit            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters the load torque limit if the motor rated torque is 100%.</p>  | 655  |
| 12            | Regenerative Torque Limit       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters the regenerative torque limit if the motor rated torque is 100%.</p>  | 655  |
| 13            | Torque Reference / Torque Limit | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enters the torque reference if the motor rated torque is 100%. This setting is the torque limit for speed control.</p>   | 655  |



| Setting Value | Function                  | Description   | Ref. |
|---------------|---------------------------|---|------|
| 14            | Torque Compensation       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the torque compensation value if the motor rated torque is 100%.  | 655  |
| 15            | General Torque Limit      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the torque limit that is the same for all quadrants for forward, reverse, and regenerative operation if the motor rated torque is 100%. | 655  |
| 16            | Differential PID Feedback | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the PID differential feedback value if the full scale analog signal (10 V or 20 mA) is 100%.  | 655  |
| 1F            | Not Used                  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Use this setting for unused terminals or to use terminals in through mode.   | 656  |
| 30            | DWEZ Analog Input 1       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Use with DriveWorksEZ. Refer to the DriveWorksEZ online manual for more information.   | 656  |
| 31            | DWEZ Analog Input 2       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Use with DriveWorksEZ. Refer to the DriveWorksEZ online manual for more information.   | 656  |

## ◆ H4: Analog Outputs

| No. (Hex.)       | Name                             | Description  | Default (Range)               | Ref. |
|------------------|----------------------------------|--|-------------------------------|------|
| H4-01 (041D)     | Terminal AM Analog Output Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the monitoring number to be output from the MFAO terminal AM.<br>Set the x-xx part of the Ux-xx [Monitor]. For example, set H4-01 = 102 to monitor U1-02 [Output Frequency].                                     | 102<br>(000 - 999)            | 657  |
| H4-02 (041E) RUN | Terminal AM Analog Output Gain   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain of the monitor signal that is sent from MFAO terminal AM.<br>Sets the analog signal output level from the terminal AM at 10 V or 20 mA as 100% when an output for monitoring items is 100%.             | 100.0%<br>(-999.9 - +999.9%)  | 657  |
| H4-03 (041F) RUN | Terminal AM Analog Output Bias   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the bias of the monitor signal that is sent from MFAO terminal AM.<br>When an output for monitoring items is 0%, this parameter sets the analog signal output level from the AM terminal at 10 V or 20 mA as 0%. | 0.0%<br>(-999.9 - +999.9%)    | 657  |
| H4-07 (0423)     | Terminal AM Signal Level Select  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the MFAO terminal AM output signal level.<br><b>Note:</b><br>Make sure that you set jumper S5 on the control circuit terminal board when you change these parameters.<br>0 : 0-10V<br>2 : 4 to 20 mA             | 0<br>(0, 2)                   | 657  |
| H4-20 (0B53)     | Analog Power Monitor 100% Level  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the level at 10 V when U1-08 [Output Power] is set for analog output.  | 0.00 kW<br>(0.00 - 650.00 kW) | 658  |

## ◆ H5: Modbus Communication

| No. (Hex.)   | Name                          | Description  | Default (Range)  | Ref. |
|--------------|-------------------------------|--|------------------|------|
| H5-01 (0425) | Drive Node Address            | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the communication slave address for drives.<br><b>Note:</b><br>• Re-energize the drive or set H5-10 = 1 [Modbus Register 0025H Unit Sel = 1 V units] after you change the parameter setting.<br>• Setting 0 will not let the drive respond to MEMOBUS/Modbus communications.   | 1FH<br>(0 - FFH) | 658  |
| H5-02 (0426) | Communication Speed Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the communications speed for MEMOBUS/Modbus communications.<br><b>Note:</b><br>Re-energize the drive or set H5-20 = 1 [Communication Parameters Reload = Reload Now] after you change the parameter setting.<br>0 : 1200 bps<br>1 : 2400 bps<br>2 : 4800 bps<br>3 : 9600 bps<br>4 : 19.2 kbps<br>5 : 38.4 kbps<br>6 : 57.6 kbps<br>7 : 76.8 kbps<br>8 : 115.2 kbps | 3<br>(0 - 8)     | 658  |

## 11.10 H: Terminal Functions

| No. (Hex.)          | Name                             | Description   | Default (Range)                  | Ref. |
|---------------------|----------------------------------|---|----------------------------------|------|
| H5-03 (0427)        | Communication Parity Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the communications parity used for MEMOBUS/Modbus communications.</p> <p><b>Note:</b><br/>Re-energize the drive or set <math>H5-20 = 1</math> [Communication Parameters Reload = Reload Now] after you change the parameter setting.</p> <p>0 : No parity<br/>1 : Even parity<br/>2 : Odd parity</p> | 0<br>(0 - 2)                     | 659  |
| H5-04 (0428)        | Communication Error Stop Method  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the motor Stopping Method when the drive detects <i>CE</i> [MEMOBUS/Modbus Communication Err] issues.</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only</p>   | 3<br>(0 - 3)                     | 659  |
| H5-05 (0429)        | Comm Fault Detection Selection   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that detects <i>CE</i> [Modbus Communication Error] issues during MEMOBUS/Modbus communications.</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 1<br>(0, 1)                      | 659  |
| H5-06 (042A)        | Drive Transmit Wait Time         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the time to wait to send a response message after the drive receives a command message from the master.</p> <p><b>Note:</b><br/>Restart the drive after changing the parameter setting.</p>  | 5 ms<br>(0 - 65 ms)              | 659  |
| H5-09 (0435)        | CE Detection Time                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the detection time for <i>CE</i> [Modbus Communication Error] issues when communication stops.</p>   | 2.0 s<br>(0.0 - 25.0 s)          | 660  |
| H5-10 (0436)        | Modbus Register 0025H Unit Sel   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the unit of measure used for the MEMOBUS/Modbus communications monitor register 0025H (output voltage reference monitor).</p> <p>0 : 0.1 V units<br/>1 : 1 V units</p>   | 0<br>(0, 1)                      | 660  |
| H5-11 (043C) RUN    | Comm ENTER Command Mode          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to make the Enter command necessary to change parameters through MEMOBUS/Modbus communications.</p> <p>0 : ENTER Command Required<br/>1 : ENTER Command Not Required</p>  | 0<br>(0, 1)                      | 660  |
| H5-12 (043D)        | Run Command Method Selection     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the input method for the Run command when <math>b1-02 = 2</math> [Run Command Selection 1 = Memobus/Modbus Communications] or <math>b1-16 = 2</math> [Run Command Selection 2 = Memobus/Modbus Communications].</p> <p>0 : FWD/Stop, REV/Stop<br/>1 : Run/Stop, FWD/REV</p>                          | 0<br>(0, 1)                      | 660  |
| H5-17 (11A1) Expert | ENTER command response @CPU BUSY | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets operation when the EEPROM write command is sent without EEPROM write available. Usually it is not necessary to change this setting.</p> <p>0 : Ignore Command(No ROM/RAM Write)<br/>1 : Write to RAM Only</p>  | 0<br>(0, 1)                      | 661  |
| H5-18 (11A2)        | Motor Speed Filter over Comms    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the filter time constant used when monitoring motor speed during MEMOBUS/Modbus communications or with a communication option.</p>   | 0 ms<br>(0 - 100 ms)             | 661  |
| H5-20 (0B57)        | Communication Parameters Reload  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to immediately enable updated MEMOBUS/Modbus communications parameters.</p> <p>0 : Reload at Next Power Cycle<br/>1 : Reload Now</p>  | 0<br>(0, 1)                      | 661  |
| H5-22 (11CF)        | Speed Search from MODBUS         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Enables the MEMOBUS/Modbus communication register Speed Search function (bit0 of 15DFH).</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 0<br>(0, 1)                      | 661  |
| H5-25 (1589) RUN    | Function 5A Register 1 Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.</p>  | 0044H (U1-05)<br>(0000H - FFFFH) | 662  |
| H5-26 (158A) RUN    | Function 5A Register 2 Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.</p>  | 0045H (U1-06)<br>(0000H - FFFFH) | 662  |

| No. (Hex.)       | Name                             | Description   | Default (Range)                  | Ref. |
|------------------|----------------------------------|---|----------------------------------|------|
| H5-27 (158B) RUN | Function 5A Register 3 Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device. | 0042H (U1-03)<br>(0000H - FFFFH) | 662  |
| H5-28 (158C) RUN | Function 5A Register 4 Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device. | 0049H (U1-10)<br>(0000H - FFFFH) | 662  |

## ◆ H6: Pulse Train Input/Output

| No. (Hex.)       | Name                             | Description  | Default (Range)   | Ref. |
|------------------|----------------------------------|--|---|------|
| H6-01 (042C) RUN | Terminal RP Pulse Train Function | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for pulse train input terminal RP.<br>0 : Frequency Reference<br>1 : PID Feedback Value<br>2 : PID Setpoint<br>3 : Speed Feedback (V/F Control) | 0<br>(0 - 3)  | 663  |
| H6-02 (042D) RUN | Terminal RP Frequency Scaling    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency of the pulse train input signal used when the item selected with H6-01 [Terminal RP Pulse Train Function] is input at 100%.                    | 1440 Hz<br>(100 - 32000 Hz)   | 664  |
| H6-03 (042E) RUN | Terminal RP Function Gain        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain used when the function in H6-01 [Terminal RP Pulse Train Function] is input to terminal RP.   | 100.0%<br>(0.0 - 1000.0%)   | 664  |
| H6-04 (042F) RUN | Terminal RP Function Bias        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias used when the function in H6-01 [Terminal RP Pulse Train Function] is input to terminal RP. Sets a value at the time when the pulse train is 0 Hz.  | 0.0%<br>(-100.0 - 100.0%)   | 664  |
| H6-05 (0430) RUN | Terminal RP Filter Time          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant for the pulse train input primary delay filters.   | 0.10 s<br>(0.00 - 2.00 s)   | 664  |
| H6-06 (0431) RUN | Terminal MP Monitor Selection    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a function for pulse train monitor output terminal MP. Sets the "x-xx" part of the Ux-xx monitor.  | 102<br>(000, 031, 101, 102, 105, 116, 501, 502, 801 - 809, 821 - 825, 831 - 839, 851 - 855) | 664  |
| H6-07 (0432) RUN | Terminal MP Frequency Scaling    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency of the pulse train output signal used when the monitor set with H6-06 [Terminal MP Monitor Selection] is 100%.                                 | 1440 Hz<br>(0 - 32000 Hz)   | 665  |
| H6-08 (043F) RUN | Terminal RP Minimum Frequency    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum frequency of the pulse train signal that terminal RP can detect.   | 0.5 Hz<br>(0.1 - 1000.0 Hz)   | 665  |

## ◆ H7: Virtual MFIO selection

| No. (Hex.)          | Name                           | Description  | Default (Range) | Ref. |
|---------------------|--------------------------------|--|-----------------|------|
| H7-00 (116F) Expert | Virtual MFIO selection         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to enable and disable the virtual I/O function. Set this parameter to 1 to operate the virtual I/O function.<br>0 : Disabled<br>1 : Enabled | 0<br>(0, 1)     | 666  |
| H7-01 (1185) Expert | Virtual Multi-Function Input 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that enters the virtual input set in H7-10 [Virtual Multi-Function Output 1].   | F<br>(1 - 19F)  | 666  |
| H7-02 (1186) Expert | Virtual Multi-Function Input 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that enters the virtual input set in H7-12 [Virtual Multi-Function Output 2].   | F<br>(1 - 19F)  | 666  |
| H7-03 (1187) Expert | Virtual Multi-Function Input 3 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that enters the virtual input set in H7-14 [Virtual Multi-Function Output 3].   | F<br>(1 - 19F)  | 666  |
| H7-04 (1188) Expert | Virtual Multi-Function Input 4 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that enters the virtual input set in H7-16 [Virtual Multi-Function Output 4].   | F<br>(1 - 19F)  | 667  |

## 11.10 H: Terminal Functions

| No. (Hex.)                       | Name                             | Description   | Default (Range)             | Ref. |
|----------------------------------|----------------------------------|---|-----------------------------|------|
| H7-10<br>(11A4)<br>Expert        | Virtual Multi-Function Output 1  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for virtual digital output 1.  | F<br>(0 - 1A7)              | 667  |
| H7-11<br>(11A5)<br>Expert        | Virtual Output 1 Delay Time      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time for virtual digital output 1.   | 0.1 s<br>(0.0 - 25.0 s)     | 667  |
| H7-12<br>(11A6)<br>Expert        | Virtual Multi-Function Output 2  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for virtual digital output 2.  | F<br>(0 - 1A7)              | 667  |
| H7-13<br>(11A7)<br>Expert        | Virtual Output 2 Delay Time      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time for virtual digital output 2.   | 0.1 s<br>(0.0 - 25.0 s)     | 667  |
| H7-14<br>(11A8)<br>Expert        | Virtual Multi-Function Output 3  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for virtual digital output 3.  | F<br>(0 - 1A7)              | 667  |
| H7-15<br>(11A9)<br>Expert        | Virtual Output 3 Delay Time      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time for virtual digital output 3.   | 0.1 s<br>(0.0 - 25.0 s)     | 667  |
| H7-16<br>(11AA)<br>Expert        | Virtual Multi-Function Output 4  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for virtual digital output 4.  | F<br>(0 - 1A7)              | 667  |
| H7-17<br>(11AB)<br>Expert        | Virtual Output 4 Delay Time      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time for virtual digital output 4.   | 0.1 s<br>(0.0 - 25.0 s)     | 668  |
| H7-30<br>(1177)<br>Expert        | Virtual Analog Input Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the virtual analog input function.  | F<br>(0 - 32)               | 668  |
| H7-31<br>(1178)<br>RUN<br>Expert | Virtual Analog Input Gain        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the virtual analog input gain.  | 100.0%<br>(-999.9 - 999.9%) | 668  |
| H7-32<br>(1179)<br>RUN<br>Expert | Virtual Analog Input Bias        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the virtual analog input bias.  | 0.0%<br>(-999.9 - 999.9%)   | 668  |
| H7-40<br>(1163)                  | Virtual Analog Out Signal Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the signal level of the virtual analog output.<br>0 : 0 to 100% (Absolute Value)<br>1 : -100 to 100%<br>2 : 0 to 100% (Lower Limit at 0)  | 0<br>(0 - 2)                | 668  |
| H7-41<br>(1164)                  | Virtual Analog Output Function   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the monitor to be output from the virtual analog output.<br>Set the <i>x-xx</i> part of the <i>Ux-xx</i> [Monitor]. For example, set <i>H7-41 = 102</i> to monitor <i>U1-02</i> [Output Frequency]. | 102<br>(0 - 999)            | 668  |
| H7-42<br>(1165)                  | Virtual Analog Output FilterTime | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant for a primary filter of the virtual analog output.  | 0.00 s<br>(0.00 - 2.00 s)   | 668  |

## 11.11 L: Protection Functions

### ◆ L1: Motor Protection

| No. (Hex.)       | Name                             | Description  | Default (Range)   | Ref. |
|------------------|----------------------------------|--|---|------|
| L1-01 (0480)     | Motor Overload (oL1) Protection  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the motor overload protection with electronic thermal protectors.</p> <p>0 : No<br/>           1 : Variable Torque<br/>           2 : Constant Torque 10:1 Speed Range<br/>           3 : Constant Torque 100:1 SpeedRange<br/>           4 : PM Variable Torque<br/>           5 : PM Constant Torque<br/>           6 : Variable Torque (50Hz)</p> <p><b>Note:</b><br/>           When only one motor is connected to a drive, set <i>L1-01 = 1 to 6 [Enabled]</i>.<br/>           External thermal relays are not necessary in these conditions.</p> | Determined by A1-02 (0 - 6)                             | 189  |
| L1-02 (0481)     | Motor Overload Protection Time   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the operation time for the electronic thermal protector of the drive to prevent damage to the motor. Usually it is not necessary to change this setting.</p>  | 1.0 min (0.1 - 5.0 min)                                 | 192  |
| L1-03 (0482)     | Motor Thermistor oH Alarm Select | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets drive operation when the PTC input signal entered into the drive is at the <i>oH3 [Motor Overheat Alarm]</i> detection level.</p> <p>0 : Ramp to Stop<br/>           1 : Coast to Stop<br/>           2 : Fast Stop<br/>           3 : Alarm Only</p>   | 3 (0 - 3)   | 192  |
| L1-04 (0483)     | Motor Thermistor oH Fault Select | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive operation when the PTC input signal to the drive is at the <i>oH4 [Motor Overheat Fault (PTC Input)]</i> detection level.</p> <p>0 : Ramp to Stop<br/>           1 : Coast to Stop<br/>           2 : Fast Stop</p>   | 1 (0 - 2)   | 193  |
| L1-05 (0484)     | Motor Thermistor Filter Time     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the primary delay time constant for the PTC input signal entered to the drive. This parameter prevents accidental motor overheat faults.</p>  | 0.20 s (0.00 - 10.00 s)                                 | 674  |
| L1-08 (1103)     | oL1 Current Level                | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the reference current for the motor 1 thermal overload detection. When the current level &gt; 0.0 A, you cannot set this value &lt; 10% of drive rated current.</p>   | 0.0 A (0.0 A or 10% to 150% of the drive rated current) | 674  |
| L1-09 (1104)     | oL1 Current Level for Motor 2    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the reference current for the motor 2 thermal overload detection. When the current level &gt; 0.0 A, you cannot set this value &lt; 10% of drive rated current.</p>   | 0.0 A (0.0 A or 10 to 150% of the drive rated current)  | 674  |
| L1-13 (046D)     | Motor Overload Memory Selection  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that keeps the current electronic thermal protector value when the drive stops receiving power.</p> <p>0 : Disabled<br/>           1 : Enabled</p>   | 1 (0, 1)  | 675  |
| L1-22 (0768) RUN | Leakage Current Filter Time1     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the leakage current detection reduction filter time constant during constant speed run.</p> <p><b>Note:</b><br/>           You can set this parameter when <i>C6-02 = B [Carrier Frequency Selection = Leakage Current Detection Reduction Rate PWM]</i>.</p>   | Determined by C6-02 (0.0 - 60.0 s)                      | 675  |
| L1-23 (0769) RUN | Leakage Current Filter Time2     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the leakage current detection reduction filter time constant during acceleration/ deceleration.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>You can set this parameter when <i>C6-02 = B [Carrier Frequency Selection = Leakage Current Detection Reduction Rate PWM]</i>.</li> <li>When the setting value increases, the current monitor also starts up slowly. Examine the relevant sequence for problems.</li> </ul>  | Determined by C6-02 (0.0 - 60.0 s)                      | 675  |

## ◆ L2: Power Loss Ride Through

| No. (Hex.)          | Name                             | Description  | Default (Range)   | Ref. |
|---------------------|----------------------------------|--|---|------|
| L2-01 (0485)        | Power Loss Ride Through Select   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the drive operation after a momentary power loss.</p> <p>0 : Disabled<br/>           1 : Enabled for L2-02 Time<br/>           2 : Enabled while CPU Power Active<br/>           3 : Kinetic Energy Backup: L2-02<br/>           4 : Kinetic Energy Backup: CPU Power<br/>           5 : Kinetic Energy Backup: DecelStop</p>   | 0<br>(0 - 5)  | 680  |
| L2-02 (0486)        | Power Loss Ride Through Time     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the maximum time that the drive will wait until trying to restart after power loss.</p>   | Determined by o2-04, C6-01<br>(0.0 - 25.5 s)  | 681  |
| L2-03 (0487)        | Minimum Baseblock Time           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum time to continue the drive output block (baseblock) after a baseblock.</p>  | Determined by o2-04, C6-01<br>(0.1 - 5.0 s)   | 682  |
| L2-04 (0488)        | Powerloss V/f Recovery Ramp Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the time for the drive output voltage to go back to correct voltage after completing speed searches.</p>  | Determined by o2-04, C6-01<br>(0.0 - 5.0 s)   | 682  |
| L2-05 (0489)        | Undervoltage Detection Lvl (Uv1) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the voltage at which a <i>Uv1 [DC Bus Undervoltage]</i> fault is triggered or at which the KEB function is activated. Usually it is not necessary to change this setting.</p> <p><b>NOTICE: Damage to Equipment. When you set this parameter to a value lower than the default, you must install an AC reactor on the input side of the power supply. If you do not install an AC reactor, it will cause damage to the drive circuitry.</b></p> | Determined by o2-04 and E1-01<br>(200 V Class: 150 - 210 V, 400 V Class: 300 - 420 V) | 682  |
| L2-06 (048A) Expert | Kinetic Energy Backup Decel Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the deceleration time during KEB operation used to decrease the maximum output frequency to 0.</p> <p><b>Note:</b><br/>           When L2-29 = 1, 2, or 3 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 2, System KEB Ride-Thru 1, or System KEB Ride-Thru 2] and you do KEB Auto-Tuning, the drive will automatically set this value.</p>   | 0.0 s<br>(0.0 - 6000.0 s)   | 682  |
| L2-07 (048B) Expert | Kinetic Energy Backup Accel Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the acceleration time to return the frequency to the frequency reference before a power loss after canceling KEB operation.</p>   | 0.0 s<br>(0.0 - 6000.0 s)   | 683  |
| L2-08 (048C) Expert | Frequency Gain at KEB Start      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the quantity of output frequency reduction used when KEB operation starts as a percentage of the motor rated slip before starting KEB operation.</p>  | 100%<br>(0 - 300%)  | 683  |
| L2-09 (048D) Expert | KEB Minimum Frequency Level      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the quantity of output frequency reduction used as a percentage of E2-02 [Motor Rated Slip] when KEB operation starts.</p>  | 20%<br>(0 - 100%)   | 683  |
| L2-10 (048E) Expert | Minimum KEB Time                 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the minimum length of time to operate the KEB after the drive detects a momentary power loss.</p>   | 50 ms<br>(0 - 25500 ms)   | 683  |
| L2-11 (0461) Expert | KEB DC Bus Voltage Setpoint      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the target value that controls the DC bus voltage to a constant level in Single Drive KEB Ride-Thru 2. Sets the DC bus voltage level that completes the KEB operation for all other KEB methods.</p>  | Determined by E1-01<br>(Determined by E1-01)  | 684  |
| L2-29 (0475) Expert | Kinetic Energy Backup Method     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the KEB function operation mode.</p> <p>0 : Single Drive KEB Ride-Thru 1<br/>           1 : Single Drive KEB Ride-Thru 2<br/>           2 : System KEB Ride-Thru 1<br/>           3 : System KEB Ride-Thru 2</p>  | 0<br>(0 - 3)  | 684  |
| L2-30 (045E) Expert | KEB Zero Speed Operation         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the operation when the output frequency decreases below the zero level (DC braking injection starting frequency) during KEB deceleration when L2-01 = 3 to 5 [Power Loss Ride Through Select = Kinetic Energy Backup: L2-02, Kinetic Energy Backup: CPU Power, or Kinetic Energy Backup: DecelStop].</p> <p>0 : Baseblock<br/>           1 : DC/SC Braking</p>  | 0<br>(0, 1)   | 685  |
| L2-31 (045D) Expert | KEB Start Voltage Offset Level   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the KEB start voltage offset.</p>   | Determined by A1-02<br>(200 V Class: 0 - 100 V, 400 V Class: 0 - 200 V)               | 685  |

## ◆ L3: Stall Prevention

| No. (Hex.)          | Name                             | Description   | Default (Range)  | Ref. |
|---------------------|----------------------------------|---|--|------|
| L3-01 (048F)        | Stall Prevention during Accel    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method of the Stall Prevention During Acceleration.</p> <p>0 : Disabled<br/>1 : Enabled<br/>2 : Intelligent (Ignore Decel Ramp)<br/>3 : Current Limit Acceleration</p>   | 1<br>(0 - 3)   | 686  |
| L3-02 (0490)        | Stall Prevent Level during Accel | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the output current level at which the Stall Prevention function operates during acceleration where the drive rated output current is 100%.</p> <p><b>Note:</b><br/>The upper limit to the setting range changes when the setting for C6-01 [Normal / Heavy Duty Selection] changes.</p> <ul style="list-style-type: none"> <li>• 150% when C6-01 = 0 [Heavy Duty Rating]</li> <li>• 120% when C6-01 = 1 [Normal Duty Rating]</li> </ul>  | Determined by C6-01<br>(0 - 150%)  | 687  |
| L3-03 (0491)        | Stall Prevent Limit during Accel | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the lower limit for the stall prevention level used in the constant output range as a percentage of the drive rated output current.</p>  | 50%<br>(0 - 100%)  | 687  |
| L3-04 (0492)        | Stall Prevention during Decel    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the method that the drive will use to prevent overvoltage faults when decelerating.</p> <p><b>Note:</b></p> <ol style="list-style-type: none"> <li>1. To connect a dynamic braking option (braking resistor or braking resistor unit) to the drive, set this parameter to 0 or 3. Parameter settings 1, 2, 4, 5, and 7 will enable Stall Prevention function during deceleration, and the dynamic braking option will not function.</li> <li>2. The setting range changes when the A1-02 [Control Method Selection] value changes: <ul style="list-style-type: none"> <li>• When A1-02 = 5 [OLV/PM], the setting range is 0 to 2.</li> <li>• When A1-02 = 6 or 8 [AOLV/PM or EZOLV], the setting range is 0 or 1.</li> </ul> </li> </ol> <p>0 : No<br/>1 : General Purpose<br/>2 : Intelligent (Ignore Decel Ramp)<br/>3 : General Purpose w/ DB resistor<br/>4 : Overexcitation/High Flux<br/>5 : Overexcitation/High Flux 2<br/>7 : Overexcitation/High Flux 3</p> | 1<br>(Determined by A1-02)   | 688  |
| L3-05 (0493)        | Stall Prevention during RUN      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to enable and disable Stall Prevention During Run.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• An output frequency less than 6 Hz disables Stall Prevention during Run. The setting values of L3-05 and L3-06 [Stall Prevent Level during Run] do not have an effect.</li> <li>• The setting range changes when the A1-02 [Control Method Selection] value changes: <ul style="list-style-type: none"> <li>–A1-02 = 0, 5[V/f, OLV/PM] : 0 to 2</li> <li>–A1-02 = 8[EZOLV] : 0, 3</li> </ul> </li> </ul> <p>0 : No<br/>1 : Deceleration Time 1 (C1-02)<br/>2 : Deceleration Time 2 (C1-04)<br/>3 : Intelligent (Ignore Decel Ramp)</p>  | Determined by A1-02<br>(0 - Determined by A1-02)   | 689  |
| L3-06 (0494)        | Stall Prevent Level during Run   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the output current level at which the Stall Prevention function is enabled during run when the drive rated output current is 100%.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• This parameter is applicable when L3-05 = 1, 2 [Stall Prevention during RUN = Deceleration Time 1 (C1-02), Deceleration Time 2 (C1-04)].</li> <li>• The upper limit to the setting range changes when the setting for C6-01 [Normal / Heavy Duty Selection] changes. <ul style="list-style-type: none"> <li>–150% when C6-01 = 0 [Heavy Duty Rating]</li> <li>–120% when C6-01 = 1 [Normal Duty Rating]</li> </ul> </li> </ul>   | Determined by C6-01<br>(5 - 150%)  | 690  |
| L3-11 (04C7)        | Overvoltage Suppression Select   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the overvoltage suppression function.</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 0<br>(0, 1)  | 690  |
| L3-17 (0462)        | DC Bus Regulation Level          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the target value for the DC bus voltage when the overvoltage suppression function and the Decel Stall Prevention function (Intelligent Stall Prevention) are active.</p>   | 200 V Class: 375 V, 400 V, 750 V<br>(200 V Class: 150 to 400 V, 400 V Class: 300 to 800 V) | 691  |
| L3-20 (0465) Expert | DC Bus Voltage Adjustment Gain   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the proportional gain used to control the DC bus voltage.</p>  | Determined by A1-02<br>(0.00 - 5.00)   | 691  |

## 11.11 L: Protection Functions

| No. (Hex.)             | Name                              | Description   | Default (Range)   | Ref. |
|------------------------|-----------------------------------|---|---|------|
| L3-21 (0466)<br>Expert | OV/Suppression Accel/Decel P Gain | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the proportional gain to calculate acceleration and deceleration rates.   | Determined by A1-02 (0.10 - 10.00)                              | 691  |
| L3-22 (04F9)           | PM Stall Prevention Decel Time    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the momentary deceleration time that the drive will use when it tries to accelerate a PM motor and detected motor stalls. This function is applicable when L3-01 = 1 [Stall Prevent Select during Accel = General Purpose]. | 0.0 s (0.0 - 6000.0 s)  | 692  |
| L3-23 (04FD)           | Stall P Reduction at Constant HP  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to automatically decrease the Stall Prevention Level during Run for constant output ranges.<br>0 : Use L3-06 for Entire Speed Range<br>1 : Automatic Reduction @ CHP Region                                    | 0 (0, 1)  | 692  |
| L3-24 (046E)<br>Expert | Motor Accel Time @ Rated Torque   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor acceleration time to reach the maximum frequency at the motor rated torque for stopped single-drive motors.   | Determined by o2-04, C6-01, E2-11, and E5-01 (0.001 - 10.000 s) | 692  |
| L3-25 (046F)<br>Expert | Load Inertia Ratio                | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the ratio between motor inertia and machine inertia.  | 1.0 (0.1 - 1000.0)  | 692  |
| L3-26 (0455)<br>Expert | Additional DC Bus Capacitors      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the capacity for external main circuit capacitors. Usually it is not necessary to change this setting. Sets this parameter when you use the KEB Ride-Thru function.   | 0 μF (0 to 65000 μF)  | 693  |
| L3-27 (0456)           | Stall Prevention Detection Time   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets a delay time between reaching the Stall Prevention level and starting the Stall Prevention function.  | 60 ms (0 - 5000 ms)   | 693  |
| L3-34 (016F)<br>Expert | Torque Limit Delay Time           | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the filter time constant that returns the torque limit to its initial value when KEB operation operates in Single Drive KEB Ride-Thru mode.   | Determined by A1-02 (0.000 - 1.000 s)                           | 693  |
| L3-35 (0747)<br>Expert | Speed Agree Width for Auto Decel  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the width for speed agreement when L3-04 = 2 [Decel Stall Prevention Selection = Automatic Decel Reduction]. Usually it is not necessary to change this setting.  | 0.00 Hz (0.00 - 1.00 Hz)  | 693  |
| L3-36 (11D0)           | Current Suppression Gain@Accel    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain to suppress current and motor speed hunting during operation when L3-01 = 3 [Stall Prevention during Accel = Current Limit Method]. Usually it is not necessary to change this setting.                            | Determined by A1-02 (0.0 - 100.0)                               | 693  |
| L3-37 (11D1)<br>Expert | Current Limit P Gain @ Accel      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Suppresses current hunting during acceleration. Usually it is not necessary to change this setting.  | 5 ms (0 - 100 ms)   | 693  |
| L3-38 (11D2)<br>Expert | Current Limit I Time @ Accel      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Suppresses current hunting and overshooting that occurs when the drive stalls during acceleration. Usually it is not necessary to change this setting.   | 10.0 (0.0 - 100.0)  | 694  |
| L3-39 (11D3)           | Current Limit Filter Time @Accel  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the time constant to adjust the acceleration rate when L3-01 = 3 [Stall Prevention during Accel = Current Limit Method]. Usually it is not necessary to change this setting.  | 100.0 ms (1.0 - 1000.0 ms)                                      | 694  |
| L3-40 (11D4)           | Current Limit S-Curve @ Acc/Dec   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to enable and disable the best S-curve characteristic used for current-limited acceleration.<br>0 : Disabled<br>1 : Enabled  | 0 (0, 1)  | 694  |

## ◆ L4: Speed Detection

| No. (Hex.)   | Name                        | Description  | Default (Range)                           | Ref. |
|--------------|-----------------------------|--|---|------|
| L4-01 (0499) | Speed Agree Detection Level | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the level to detect speed agree or motor speed.<br>Sets the level to detect speed agree or motor speed when H2-01 to H2-03 = 2, 3, 4, 5 [MFDO Function Selection = Speed Agree 1, User-set Speed Agree 1, Frequency Detection 1, Frequency Detection 2]. | Determined by A1-02 (Determined by A1-02) | 694  |
| L4-02 (049A) | Speed Agree Detection Width | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the width to detect speed agree or motor speed.<br>Sets the width to detect speed agree or motor speed when H2-01 to H2-03 = 2, 3, 4, 5 [MFDO Function Selection = Speed Agree 1, User-set Speed Agree 1, Frequency Detection 1, Frequency Detection 2]. | Determined by A1-02 (Determined by A1-02) | 694  |



| No. (Hex.)   | Name                             | Description  | Default (Range)                              | Ref. |
|--------------|----------------------------------|--|--|------|
| L4-03 (049B) | Speed Agree Detection Level(+/-) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level to detect speed agree or motor speed.<br>Sets the level to detect speed agree or motor speed when H2-01 to H2-03 = 13, 14, 15, 16 [MFDO Function Selection = Speed Agree 2, User-set Speed Agree 2, Frequency Detection 3, Frequency Detection 4]. | Determined by A1-02<br>(Determined by A1-02) | 695  |
| L4-04 (049C) | Speed Agree Detection Width(+/-) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the width to detect speed agree or motor speed.<br>Sets the width to detect speed agree or motor speed when H2-01 to H2-03 = 13, 14, 15, 16 [MFDO Function Selection = Speed Agree 2, User-set Speed Agree 2, Frequency Detection 3, Frequency Detection 4]. | Determined by A1-02<br>(Determined by A1-02) | 695  |
| L4-05 (049D) | Fref Loss Detection Selection    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the operation when the drive detects a loss of frequency reference.<br>0 : Stop<br>1 : Run at (L4-06 x Last Reference)   | 0<br>(0, 1)                                  | 695  |
| L4-06 (04C2) | Frequency Reference @Loss of Ref | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency reference as a percentage to continue drive operation after it detects a frequency reference loss. The value is a percentage of the frequency reference before the drive detected the loss.  | 80.0%<br>(0.0 - 100.0%)                      | 695  |
| L4-07 (0470) | Speed Agree Detection Selection  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the condition that activates speed detection.<br>0 : No Detection during Baseblock<br>1 : Detection Always Enabled   | 0<br>(0, 1)                                  | 695  |
| L4-08 (047F) | Speed Agree Source Selection     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive to use the soft starter output frequency or the motor speed (estimation value) for speed detection.<br>0 : Softstarter Output (Reference)<br>1 : Motor Speed (Actual Speed)  | 1<br>(0, 1)                                  | 696  |

### ◆ L5: Fault Restart

| No. (Hex.)   | Name                            | Description   | Default (Range)           | Ref. |
|--------------|---------------------------------|---|---------------------------|------|
| L5-01 (049E) | Number of Auto-Restart Attempts | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the number of times that the drive will try to restart.   | 0<br>(0 - 10 times)       | 697  |
| L5-02 (049F) | Fault Contact at Restart Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that sends signals to the MFDO terminal set for Fault [H2-xx = E] while the drive is automatically restarting.<br>0 : Active Only when Not Restarting<br>1 : Always Active | 0<br>(0, 1)               | 697  |
| L5-04 (046C) | Interval Method Restart Time    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time interval between each Auto Restart attempt. This function is enabled when L5-05 = 1 [Auto Restart Operation Selection = Use L5-04 Time].                                       | 10.0 s<br>(0.5 - 600.0 s) | 697  |
| L5-05 (0467) | Auto-Restart Method             | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the count method for the Auto Restart operation.<br>0 : Continuous/Immediate Attempts<br>1 : Interval/Attempt after L5-04 sec   | 0<br>(0, 1)               | 697  |

## 11.11 L: Protection Functions

| No. (Hex.)      | Name                           | Description   | Default (Range)       | Ref. |
|-----------------|--------------------------------|---|-----------------------|------|
| L5-07<br>(0B2A) | Fault Reset Enable Select Grp1 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Use these 4 digits to set the Auto Restart function for <i>oL1</i> to <i>oL4</i>. From left to right, the digits set <i>oL1</i>, <i>oL2</i>, <i>oL3</i>, and <i>oL4</i>, in order.</p> <p>0000 : Disabled</p> <p>0001 : Enabled (—/—/—/—/oL4)</p> <p>0010 : Enabled (—/—/—/oL3/—)</p> <p>0011 : Enabled (—/—/—/oL3/oL4)</p> <p>0100 : Enabled (—/—/oL2/—/—)</p> <p>0101 : Enabled (—/—/oL2/—/oL4)</p> <p>0110 : Enabled (—/—/oL2/oL3/—)</p> <p>0111 : Enabled (—/—/oL2/oL3/oL4)</p> <p>1000 : Enabled (oL1/—/—/—)</p> <p>1001 : Enabled (oL1/—/—/oL4)</p> <p>1010 : Enabled (oL1/—/—/oL3/—)</p> <p>1011 : Enabled (oL1/—/—/oL3/oL4)</p> <p>1100 : Enabled (oL1/oL2/—/—)</p> <p>1101 : Enabled (oL1/oL2/—/oL4)</p> <p>1110 : Enabled (oL1/oL2/oL3/—)</p> <p>1111 : Enabled (oL1/oL2/oL3/oL4)</p>       | 1111<br>(0000 - 1111) | 698  |
| L5-08<br>(0B2B) | Fault Reset Enable Select Grp2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Use these 4 digits to set the Auto Restart function for <i>Uv1</i>, <i>ov</i>, <i>oH1</i>, and <i>GF</i>. From left to right, the digits set <i>Uv1</i>, <i>ov</i>, <i>oH1</i>, and <i>GF</i>, in order.</p> <p>0000 : Disabled</p> <p>0001 : Enabled (—/—/—/—/GF)</p> <p>0010 : Enabled (—/—/—/oH1/—)</p> <p>0011 : Enabled (—/—/—/oH1/GF)</p> <p>0100 : Enabled (—/—/ov/—/—)</p> <p>0101 : Enabled (—/—/ov/—/GF)</p> <p>0110 : Enabled (—/—/ov/oH1/—)</p> <p>0111 : Enabled (—/—/ov/oH1/GF)</p> <p>1000 : Enabled (Uv1/—/—/—)</p> <p>1001 : Enabled (Uv1/—/—/GF)</p> <p>1010 : Enabled (Uv1/—/—/oH1/—)</p> <p>1011 : Enabled (Uv1/—/—/oH1/GF)</p> <p>1100 : Enabled (Uv1/ov/—/—)</p> <p>1101 : Enabled (Uv1/ov/—/GF)</p> <p>1110 : Enabled (Uv1/ov/oH1/—)</p> <p>1111 : Enabled (Uv1/ov/oH1/GF)</p> | 1111<br>(0000 - 1111) | 698  |

### ◆ L6: Torque Detection

| No. (Hex.)      | Name                         | Description  | Default (Range)         | Ref. |
|-----------------|------------------------------|--|-------------------------|------|
| L6-01<br>(04A1) | Torque Detection Selection 1 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the speed range that detects overtorque and undertorque and the operation of drives (operation status) after detection.</p> <p>0 : Disabled</p> <p>1 : oL @ Speed Agree - Alarm only</p> <p>2 : oL @ RUN - Alarm only</p> <p>3 : oL @ Speed Agree - Fault</p> <p>4 : oL @ RUN - Fault</p> <p>5 : UL @ Speed Agree - Alarm only</p> <p>6 : UL @ RUN - Alarm only</p> <p>7 : UL @ Speed Agree - Fault</p> <p>8 : UL @ RUN - Fault</p> | 0<br>(0 - 8)            | 701  |
| L6-02<br>(04A2) | Torque Detection Level 1     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the detection level for Overtorque/Undertorque Detection 1. In V/f control, drive rated output current = 100% value. In vector control, motor rated torque = 100% value.</p>  | 150%<br>(0 - 300%)      | 702  |
| L6-03<br>(04A3) | Torque Detection Time 1      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the detection time for Overtorque/Undertorque Detection 1.</p>  | 0.1 s<br>(0.0 - 10.0 s) | 702  |

| No. (Hex.)   | Name                             | Description   | Default (Range)             | Ref. |
|--------------|----------------------------------|---|-----------------------------|------|
| L6-04 (04A4) | Torque Detection Selection 2     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the speed range that detects overtorque and undertorque and the operation of drives (operation status) after detection.<br>0 : Disabled<br>1 : oL @ Speed Agree - Alarm only<br>2 : oL @ RUN - Alarm only<br>3 : oL @ Speed Agree - Fault<br>4 : oL @ RUN - Fault<br>5 : UL @ Speed Agree - Alarm only<br>6 : UL @ RUN - Alarm only<br>7 : UL @ Speed Agree - Fault<br>8 : UL @ RUN - Fault   | 0<br>(0 - 8)                | 702  |
| L6-05 (04A5) | Torque Detection Level 2         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the detection level for Overtorque/Undertorque Detection 2. In V/f control, drive rated output current = 100% value. In vector control, motor rated torque = 100% value.  | 150%<br>(0 - 300%)          | 703  |
| L6-06 (04A6) | Torque Detection Time 2          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the detection time for Overtorque/Undertorque Detection 2.  | 0.1 s<br>(0.0 - 10.0 s)     | 703  |
| L6-07 (04E5) | Torque Detection Filter Time     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant for a primary filter to the torque reference or to the output current used to detect overtorque/undertorque.  | 0 ms<br>(0 - 1000 ms)       | 703  |
| L6-08 (0468) | Mechanical Fatigue Detect Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the speed where the drive detects mechanical deterioration and how the drive operates (operation status) after detection.<br>0 : Disabled<br>1 : oL5 @ Speed > L6-09 - Alarm<br>2 : oL5 @  Speed  > L6-09 - Alarm<br>3 : oL5 @ Speed > L6-09 - Fault<br>4 : oL5 @  Speed  > L6-09 - Fault<br>5 : UL5 @ Speed < L6-09 - Alarm<br>6 : UL5 @  Speed  < L6-09 - Alarm<br>7 : UL5 @ Speed < L6-09 - Fault<br>8 : UL5 @  Speed  < L6-09 - Fault | 0<br>(0 - 8)                | 703  |
| L6-09 (0469) | Mech Fatigue Detect Speed Level  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the speed level where the drive will operate the mechanical deterioration detection function, as a percentage of the Maximum Output Frequency.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.<br>• A1-02 ≠ 8 [EZOLV]: E1-04 [Maximum Output Frequency]<br>• A1-02 = 8: E9-02 [Maximum Speed]  | 110.0%<br>(-110.0 - 110.0%) | 704  |
| L6-10 (046A) | Mech Fatigue Detect Delay Time   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time for mechanical deterioration detection.  | 0.1 s<br>(0.0 - 10.0 s)     | 704  |
| L6-11 (046B) | Mech Fatigue Hold Off Time       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time that the drive will start mechanical deterioration detection triggered by the cumulative operation time of the drive.  | 0 h<br>(0 - 65535 h)        | 704  |

## ◆ L7: Torque Limit

| No. (Hex.)       | Name                           | Description   | Default (Range)          | Ref. |
|------------------|--------------------------------|---|--------------------------|------|
| L7-01 (04A7) RUN | Forward Torque Limit           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the torque limit value for forward motoring as a percentage, where motor rated torque is the 100% value.  | 200%<br>(0 - 300%)       | 705  |
| L7-02 (04A8) RUN | Reverse Torque Limit           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the torque limit value for reversed motoring as a percentage, where motor rated torque is the 100% value. | 200%<br>(0 - 300%)       | 705  |
| L7-03 (04A9) RUN | Forward Regenerative Trq Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the torque limit value for forward regenerative conditions as a percentage of the motor rated torque.     | 200%<br>(0 - 300%)       | 705  |
| L7-04 (04AA) RUN | Reverse Regenerative Trq Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the torque limit value for reversed regenerative conditions as a percentage of the motor rated torque.    | 200%<br>(0 - 300%)       | 706  |
| L7-06 (04AC)     | Torque Limit Integral Time     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the integral time constant for the torque limit function.   | 200 ms<br>(5 - 10000 ms) | 706  |

## 11.11 L: Protection Functions

| No. (Hex.)   | Name                            | Description  | Default (Range) | Ref. |
|--------------|---------------------------------|--|-----------------|------|
| L7-07 (04C9) | Torque Limit during Accel/Decel | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the torque limit function during acceleration and deceleration.<br/>0 : Proportional only<br/>1 : Proportional &amp; Integral control</p> | 0<br>(0, 1)     | 706  |
| L7-16 (044D) | Torque Limit Process at Start   | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Assigns a time filter to allow the torque limit to build at start.<br/>0 : Disabled<br/>1 : Enabled</p>  | 1<br>(0, 1)     | 706  |

## ◆ L8: Drive Protection

| No. (Hex.)   | Name                             | Description   | Default (Range)                             | Ref. |
|--------------|----------------------------------|---|---|------|
| L8-01 (04AD) | 3% ERF DB Resistor Protection    | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the function to enable braking resistor protection with a Yaskawa ERF series braking resistor (3% ED) installed on the heatsink.<br/>0 : No<br/>1 : Yes</p>  | 0<br>(0, 1)                                 | 707  |
| L8-02 (04AE) | Overheat Alarm Level             | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the <i>oH</i> detection level in temperature.</p>  | Determined by o2-04, C6-01<br>(50 - 150 °C) | 707  |
| L8-03 (04AF) | Overheat Pre-Alarm Selection     | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the operation of drives when an <i>oH</i> alarm is detected.<br/>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only<br/>4 : Operate at Reduced Speed (L8-19)</p>  | 3<br>(0 - 4)                                | 707  |
| L8-05 (04B1) | Input Phase Loss Protection Sel  | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the function to enable and disable input phase loss detection.<br/>0 : Disable<br/>1 : Enabled</p>   | 1<br>(0, 1)                                 | 708  |
| L8-07 (04B3) | Output Phase Loss Protection Sel | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the function to enable and disable output phase loss detection. The drive starts output phase loss detection when the output current decreases to less than 5% of the drive rated current.</p> <p><b>Note:</b><br/>The drive can incorrectly start output phase loss detection in these conditions:<br/>• The motor rated current is very small compared to the drive rating.<br/>• The drive is operating a PM motor with a small load.</p> <p>0 : Disabled<br/>1 : Fault when one phase is lost<br/>2 : Fault when two phases are lost</p> | 0<br>(0 - 2)                                | 708  |
| L8-09 (04B5) | Output Ground Fault Detection    | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the function to enable and disable ground fault protection.<br/>0 : Disabled<br/>1 : Enabled</p>   | Determined by o2-04<br>(0, 1)               | 709  |
| L8-10 (04B6) | Heatsink Fan Operation Selection | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets operation of the heatsink cooling fan.<br/>0 : During Run, w/ L8-11 Off-Delay<br/>1 : Always On<br/>2 : On when Drive Temp Reaches L8-64</p>   | 0<br>(0 - 2)                                | 709  |
| L8-11 (04B7) | Heatsink Fan Off-Delay Time      | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the length of time that the drive will wait before it stops the cooling fan after it cancels the Run command when L8-10 = 0 [<i>Heatsink Cooling Fan Ope Select = Dur Run (OffDly)</i>].</p>   | 60 s<br>(0 - 300 s)                         | 709  |
| L8-12 (04B8) | Ambient Temperature Setting      | <p>V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/></p> <p>Sets the ambient temperature of the drive installation area.</p> <p><b>Note:</b><br/>The setting range changes when the L8-35 [<i>Installation Method Selection</i>] value changes:<br/>• 0 [<i>IP20/UL Open Type</i>]: -10 °C to +60 °C<br/>• 1 [<i>Side-by-Side Mounting</i>]: -10 °C to +50 °C<br/>• 2 [<i>IP20/UL Type 1</i>]: -10 °C to +50 °C<br/>• 3 [<i>External Heatsink</i>]: -10 °C to +50 °C</p>  | 40 °C<br>(-10 °C - +60 °C)                  | 709  |

| No. (Hex.)          | Name                             | Description   | Default (Range)                        | Ref. |
|---------------------|----------------------------------|---|--|------|
| L8-15 (04BB)        | Drive oL2 @ Low Speed Protection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to decrease drive overload at low speeds to prevent damage to the main circuit transistor during low speed operation (at 6 Hz or slower) to prevent oL2 [Drive Overloaded].<br><b>Note:</b><br>Contact Yaskawa or your nearest sales representative before disabling this function at low speeds. If you frequently operate drives with high output current in low speed ranges, it can cause heat stress and decrease the life span of drive IGBTs.<br>0 : Disabled (No Additional Derate)<br>1 : Enabled (Reduced oL2 Level) | 1<br>(0, 1)                            | 710  |
| L8-18 (04BE)        | Software Current Limit Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Set the software current limit selection function to prevent damage to the main circuit transistor caused by too much current.<br>0 : Disabled<br>1 : Enabled  | 0<br>(0, 1)                            | 710  |
| L8-19 (04BF)        | Freq Reduction @ oH Pre-Alarm    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the ratio at which the drive derates the frequency reference during an oH alarm.  | 0.8<br>(0.1 - 0.9)                     | 710  |
| L8-27 (04DD)        | Overcurrent Detection Gain       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the PM motor overcurrent detection level as a percentage of the motor rated current value.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the motor rated current.<br>• A1-02 ≠ 8 [EZOLV]: E5-03 [PM Motor Rated Current (FLA)]<br>• A1-02 = 8: E9-06 [Motor Rated Current (FLA)]   | 300.0%<br>(0.0 - 1000.0%)              | 710  |
| L8-29 (04DF)        | Output Unbalance Detection Sel   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to detect LF2.<br>0 : Disabled<br>1 : Enabled  | 1<br>(0, 1)                            | 711  |
| L8-31 (04E1)        | LF2 Detection Time               | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the LF2 [Output Current Imbalance] detection time.  | 3<br>(1 - 100)                         | 711  |
| L8-35 (04EC)        | Installation Method Selection    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the type of drive installation.<br>0 : IP20/UL Open Type<br>1 : Side-by-Side Mounting<br>2 : IP20/UL Type 1<br>3 : External Heatsink  | 0<br>(0 - 3)                           | 711  |
| L8-40 (04F1)        | Carrier Freq Reduction Off-Delay | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time until the automatically reduced carrier frequency returns to the condition before the reduction.   | Determined by A1-02<br>(0.00 - 2.00 s) | 711  |
| L8-41 (04F2)        | High Current Alarm Selection     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to cause an HCA [Current Alarm] when the output current is more than 150% of the drive rated current.<br>0 : No<br>1 : Yes   | 0<br>(0, 1)                            | 712  |
| L8-51 (0471) Expert | STPo I Detection Level           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the STPo [Motor Step-Out Detected] detection level as a percentage of the motor rated current.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the motor rated current.<br>• A1-02 = 5 [OLV/PM]: E5-03 [PM Motor Rated Current (FLA)]<br>• A1-02 = 8 [EZOLV]: E9-06 [Motor Rated Current (FLA)]  | 0.0%<br>(0.0 - 300.0%)                 | 712  |
| L8-52 (0472) Expert | STPo Integration Level           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the detection level for STPo [Motor Step-Out Detected] related to the ACR integral value.   | 1.0<br>(0.1 - 2.0)                     | 712  |
| L8-53 (0473) Expert | STPo Integration Time            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time until the drive detects STPo after it is more than the value of L8-51 [STPo I Detection Level].  | 1.0 s<br>(1.0 - 10.0 s)                | 712  |
| L8-54 (0474) Expert | STPo Id Diff Detection           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Id deviation detection function for STPo [Motor Step-Out Detected].<br>0 : Disabled<br>1 : Enabled  | 1<br>(0, 1)                            | 712  |
| L8-55 (045F)        | Internal DB TransistorProtection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the protection function for the internal braking transistor.<br>0 : Disable<br>1 : Protection Enabled   | 1<br>(0, 1)                            | 712  |

## 11.11 L: Protection Functions

| No. (Hex.)                | Name                                | Description   | Default (Range)                         | Ref. |
|---------------------------|-------------------------------------|---|---|------|
| L8-56<br>(047D)<br>Expert | Stall P @ Accel<br>Activation Time  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length time that the acceleration stall prevention function can continue to operate before the drive detects an <i>STPo</i> [Motor Step-Out Detected].       | 5000 ms<br>(100 - 5000 ms)              | 713  |
| L8-57<br>(047E)<br>Expert | Stall Prevention Retry<br>Counts    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the number of times the acceleration stall prevention function can operate until speeds agree before the drive detects an <i>STPo</i> [Motor Step-Out Detected]. | 10<br>(1 - 10 times)                    | 713  |
| L8-90<br>(0175)<br>Expert | STPo Detection Level<br>(Low Speed) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the detection level that the control fault must be equal to or more than to cause an <i>STPo</i> [Motor Step-Out Detected].                                      | Determined by A1-02<br>(0 - 5000 times) | 713  |
| L8-93<br>(073C)<br>Expert | Low Speed Pull-out<br>DetectionTime | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time the drive will wait to start baseblock after detecting <i>LSo</i> [Low Speed Motor Step-Out].  | 1.0 s<br>(0.0 - 10.0 s)                 | 713  |
| L8-94<br>(073D)<br>Expert | Low Speed Pull-out<br>Detect Level  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the detection level for <i>LSo</i> [Low Speed Motor Step-Out] as a percentage of <i>E1-04</i> [Maximum Output Frequency].   | 3%<br>(0 - 10%)                         | 713  |
| L8-95<br>(077F)<br>Expert | Low Speed Pull-out<br>Amount        | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the average count of <i>LSo</i> [Low Speed Motor Step-Out] detections.  | 10<br>(1 - 50 times)                    | 713  |

## 11.12 n: Special Adjustment

### ◆ n1: Hunting Prevention

| No. (Hex.)                | Name                             | Description   | Default (Range)                     | Ref. |
|---------------------------|----------------------------------|---|-------------------------------------|------|
| n1-01<br>(0580)           | Hunting Prevention Selection     | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function to prevent hunting.</p> <p><b>Note:</b><br/>When you replace a V1000-series drive with a GA500 drive, set <i>n1-01 = 1</i> [<i>Hunting Prevention Selection = Enabled</i>].</p> <p>0 : Disable<br/>1 : Enabled</p> | 0<br>(0, 1)                         | 714  |
| n1-02<br>(0581)<br>Expert | Hunting Prevention Gain Setting  | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the performance of the hunting prevention function. Usually it is not necessary to change this parameter.</p>   | 1.00<br>(0.00 - 2.50)               | 714  |
| n1-03<br>(0582)<br>Expert | Hunting Prevention Time Constant | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the primary delay time constant of the hunting prevention function. Usually it is not necessary to change this parameter.</p>   | Determined by o2-04<br>(0 - 500 ms) | 714  |
| n1-05<br>(0530)<br>Expert | Hunting Prevent Gain in Reverse  | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the performance of the hunting prevention function. This parameter adjusts Reverse run. Usually it is not necessary to change this parameter.</p>   | 0.00<br>(0.00 - 2.50)               | 714  |
| n1-13<br>(1B59)<br>Expert | DC Bus Stabilization Control     | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the oscillation suppression function for the DC bus voltage.</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 0<br>(0, 1)                         | 715  |
| n1-14<br>(1B5A)<br>Expert | DC Bus Stabilization Time        | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Adjusts the responsiveness of the oscillation suppression function for the DC bus voltage. Set <i>n1-13 = 1</i> [<i>DC Bus Stabilization Control = Enabled</i>] to enable this parameter.</p>  | 100.0 ms<br>(50.0 - 500.0 ms)       | 715  |

### ◆ n2: Auto Freq Regulator (AFR)

| No. (Hex.)      | Name                            | Description  | Default (Range)         | Ref. |
|-----------------|---------------------------------|--|-------------------------|------|
| n2-01<br>(0584) | Automatic Freq Regulator Gain   | <p><input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain of the AFR function as a magnification value. Usually it is not necessary to change this setting.</p>   | 1.00<br>(0.00 - 10.00)  | 715  |
| n2-02<br>(0585) | Automatic Freq Regulator Time 1 | <p><input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the time constant that sets the rate of change for the AFR function. Usually it is not necessary to change this setting.</p>   | 50 ms<br>(0 - 2000 ms)  | 715  |
| n2-03<br>(0586) | Automatic Freq Regulator Time 2 | <p><input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the time constant that sets the speed difference of the AFR function. Use this parameter for speed searches or regeneration. Usually it is not necessary to change this setting.</p> | 750 ms<br>(0 - 2000 ms) | 716  |

### ◆ n3: High Slip/Overexcite Braking

| No. (Hex.)                | Name                             | Description  | Default (Range)                   | Ref. |
|---------------------------|----------------------------------|--|-----------------------------------|------|
| n3-01<br>(0588)<br>Expert | HSB Deceleration Frequency Width | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the amount by which the output frequency is to be lowered during high-slip braking, as a percentage of <i>E1-04</i> [<i>Maximum Output Frequency</i>], which represents the 100% value.</p>  | 5%<br>(1 - 20%)                   | 717  |
| n3-02<br>(0589)<br>Expert | HSB Current Limit Level          | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the maximum current output during high-slip braking as a percentage, where <i>E2-01</i> [<i>Motor Rated Current (FLA)</i>] is 100%. Also set the current suppression to prevent exceeding drive overload tolerance.</p> <p><b>Note:</b><br/>The upper limit to the setting range changes when the setting for <i>C6-01</i> [<i>Normal / Heavy Duty Selection</i>] changes.</p> <ul style="list-style-type: none"> <li>• 150% when <i>C6-01 = 0</i> [<i>Heavy Duty Rating</i>]</li> <li>• 120% when <i>C6-01 = 1</i> [<i>Normal Duty Rating</i>]</li> </ul> | Determined by C6-01<br>(0 - 150%) | 718  |
| n3-03<br>(058A)<br>Expert | HSB Dwell Time at Stop           | <p><input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the dwell time, a length of time when high-slip braking is ending and during which the motor speed decreases and runs at a stable speed. For a set length of time, the drive will hold the actual output frequency at the minimum output frequency set in <i>E1-09</i>.</p>  | 1.0 s<br>(0.0 - 10.0 s)           | 718  |

## 11.12 n: Special Adjustment

| No. (Hex.)                | Name                             | Description  | Default (Range)       | Ref. |
|---------------------------|----------------------------------|--|-----------------------|------|
| n3-04<br>(058B)<br>Expert | HSB Overload Time                | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the time used to detect oL7 [High Slip Braking Overload], which occurs when the output frequency does not change during high-slip braking. Usually it is not necessary to change this parameter. | 40 s<br>(30 - 1200 s) | 718  |
| n3-13<br>(0531)           | OverexcitationBraking (OEB) Gain | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the gain value that the drive multiplies by the V/f pattern output value during overexcitation deceleration to calculate the overexcitation level.   | 1.10<br>(1.00 - 1.40) | 718  |
| n3-14<br>(0532)<br>Expert | OEB High Frequency Injection     | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the function that injects harmonic signals during overexcitation deceleration.<br>0 : Disabled<br>1 : Enabled  | 0<br>(0, 1)           | 719  |
| n3-21<br>(0579)           | HSB Current Suppression Level    | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the upper limit of the current that is suppressed at the time of overexcitation deceleration as a percentage of the drive rated current.   | 100%<br>(0 - 150%)    | 719  |
| n3-23<br>(057B)           | Overexcitation Braking Operation | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the direction of motor rotation where the drive will enable overexcitation.<br>0 : Disabled<br>1 : Enabled Only when Rotating FWD<br>2 : Enabled Only when Rotating REV                          | 0<br>(0 - 2)          | 719  |

### ◆ n5: Feed Forward Control

| No. (Hex.)                       | Name                            | Description  | Default (Range)   | Ref. |
|----------------------------------|---------------------------------|--|---|------|
| n5-01<br>(05B0)                  | Feed Forward Control Selection  | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the feed forward function.<br>0 : Disabled<br>1 : Enabled  | 0<br>(0, 1)   | 720  |
| n5-02<br>(05B1)                  | Motor Inertia Acceleration Time | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the length of time for the motor to accelerate from the stopped to the maximum frequency with a single motor at the rated torque. Inertia Tuning automatically sets the motor acceleration time. | Determined by C6-01, E5-01, and o2-04<br>(0.001 - 10.000 s) | 720  |
| n5-03<br>(05B2)                  | Feed Forward Control Gain       | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the ratio between load inertia and motor inertia. Inertia Tuning automatically sets the Feedforward Control Gain value.  | 1.00<br>(0.00 - 100.00)                                     | 721  |
| n5-04<br>(05B3)<br>RUN<br>Expert | Speed Response Frequency        | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the response frequency for the speed reference. Usually it is not necessary to change this parameter.  | Determined by A1-02<br>(0.00 - 500.00 Hz)                   | 721  |

### ◆ n6: Online Tuning

| No. (Hex.)                | Name                    | Description  | Default (Range)     | Ref. |
|---------------------------|-------------------------|--|---------------------|------|
| n6-01<br>(0570)           | Online Tuning Selection | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the type of motor data that Online Tuning uses for OLV control.<br>0 : Disabled<br>1 : Line-to-Line Resistance Tuning<br>2 : Voltage Correction Tuning | 0<br>(0 - 2)        | 722  |
| n6-05<br>(05C7)<br>Expert | Online Tuning Gain      | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the compensation gain when n6-01 = 2 [Online Tuning Selection = Voltage Correction Tuning]. Usually it is not necessary to change this parameter.      | 1.0<br>(0.1 - 50.0) | 722  |

### ◆ n7: EZ Drive

| No. (Hex.)                | Name                           | Description   | Default (Range)     | Ref. |
|---------------------------|--------------------------------|---|---------------------|------|
| n7-01<br>(3111)<br>Expert | Damping Gain for Low Frequency | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the oscillation suppression gain for the low speed range. | 1.0<br>(0.1 - 10.0) | 722  |
| n7-05<br>(3115)<br>Expert | Response Gain for Load Changes | <b>V/f</b> OLV OLV/PM AOLV/PM EZOLV<br>Sets the response gain related to changes in the load.         | 50<br>(10 - 1000)   | 722  |



| No. (Hex.)                | Name                             | Description  | Default (Range)            | Ref. |
|---------------------------|----------------------------------|--|----------------------------|------|
| n7-07<br>(3117)<br>Expert | Speed Calculation Gain1          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the speed calculation gain during usual operation. Usually it is not necessary to change this setting.  | 15.0 Hz<br>(1.0 - 50.0 Hz) | 723  |
| n7-08<br>(3118)<br>Expert | Speed Calculation Gain2          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the speed calculation gain during a speed search.   | 25.0 Hz<br>(1.0 - 50.0 Hz) | 723  |
| n7-10<br>(311A)<br>Expert | Pull-in Current Switching Speed  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the speed range to operate with the pull-in current command. Drive rated frequency = 100% value. If there is a large quantity of oscillation when you operate in the low speed range, increase the setting value. | 10.0%<br>(0.0 - 100.0%)    | 723  |
| n7-17<br>(3122)           | Resistance TemperatureCorrection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the function to adjust for changes in the motor resistance value caused by changes in the temperature.<br>0 : Invalid<br>1 : Valid (Only 1 time)<br>2 : Valid (Every time)  | 1<br>(0 to 2)              | 723  |
| n7-19<br>(3128)<br>Expert | Flux Error Compensation Gain     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the gain for magnetic flux compensation. Usually it is not necessary to change this setting.  | 5000%<br>(0 - 50000%)      | 723  |

### ◆ n8: PM Motor Control Tuning

| No. (Hex.)                | Name                             | Description  | Default (Range)                       | Ref. |
|---------------------------|----------------------------------|--|---------------------------------------|------|
| n8-01<br>(0540)<br>Expert | Pole Position Detection Current  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input type="checkbox"/> EZOLV<br>Sets, as a percentage, the Initial Rotor Position Estimated Current, taking the E5-03 [Motor Rated Current (FLA)] as the 100% value. Usually it is not necessary to change this setting.   | 50%<br>(0 - 100%)                     | 724  |
| n8-02<br>(0541)<br>Expert | Pole Alignment Current Level     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the current at the time of polar attraction as a percentage where E5-03 [motor rated current] is 100%. Usually it is not necessary to change this setting.  | 80%<br>(0 - 150%)                     | 724  |
| n8-11<br>(054A)           | Observer Calculation Gain 2      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the gain for speed estimation. Usually it is not necessary to change this setting.  | Determined by n8-72<br>(0.0 - 1000.0) | 724  |
| n8-14<br>(054D)<br>Expert | Polarity Compensation Gain 3     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the gain for speed estimation. Usually it is not necessary to change this setting.  | 1.000<br>(0.000 - 10.000)             | 724  |
| n8-15<br>(054E)<br>Expert | Polarity Compensation Gain 4     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the gain for speed estimation. Usually it is not necessary to change this setting.  | 0.500<br>(0.000 - 10.000)             | 724  |
| n8-21<br>(0554)<br>Expert | Motor Back-EMF (Ke) Gain         | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input checked="" type="checkbox"/> EZOLV<br>Sets the gain for speed estimation. Usually it is not necessary to change this setting.  | 0.90<br>(0.80 - 1.00)                 | 724  |
| n8-35<br>(0562)           | Initial Pole Detection Method    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input type="checkbox"/> EZOLV<br>Sets how the drive detects the position of the rotor when the motor starts.<br><b>Note:</b><br>• When you use an SPM motor, set n8-35 = 0. When you use an IPM motor, set n8-35 = 0 to 2.<br>• When you set n8-35 = 1, do High Frequency Injection Auto-Tuning.<br>0 : Pull-in<br>1 : High Frequency Injection<br>2 : Pulse Injection  | Determined by A1-02<br>(0 - 2)        | 725  |
| n8-36<br>(0563)           | HFI Frequency Level for L Tuning | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input type="checkbox"/> EZOLV<br>Sets the injection frequency for high frequency injection.<br><b>Note:</b><br>• Set n8-35 = 1 [Initial Pole Detection Method = High Frequency Injection] or n8-57 = 1 [HFI Overlap Selection = Enabled] to enable this parameter.<br>• The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.   | 500 Hz<br>(200 - 1000 Hz)             | 725  |
| n8-37<br>(0564)<br>Expert | HFI Voltage Amplitude Level      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/IPM <input type="checkbox"/> AOLV/IPM <input type="checkbox"/> EZOLV<br>Sets the high frequency injection amplitude as a percentage where 200 V = 100% for 200 V class drives and 400 V = 100% for a 400 V class drives. Usually it is not necessary to change this setting.<br><b>Note:</b><br>• Set n8-35 = 1 [Initial Pole Detection Method = High Frequency Injection] or n8-57 = 1 [HFI Overlap Selection = Enabled] to enable this parameter.<br>• The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully. | 20.0%<br>(0.0 - 50.0%)                | 725  |

## 11.12 n: Special Adjustment

| No. (Hex.)                       | Name                             | Description  | Default (Range)   | Ref. |
|----------------------------------|----------------------------------|--|---|------|
| n8-39<br>(0566)                  | HFI LPF Cutoff Freq              | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the low-pass filter shut-off frequency for high frequency injection.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set <math>n8-35 = 1</math> [Initial Pole Detection Method = High Frequency Injection] or <math>n8-57 = 1</math> [HFI Overlap Selection = Enabled] to enable this parameter.</li> <li>The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.</li> </ul>  | 250 Hz<br>(0 - 1000 Hz)   | 725  |
| n8-41<br>(0568)<br>Expert        | HFI P Gain                       | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the response gain for the high frequency injection speed estimation.</p> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>Set <math>n8-35 = 1</math> [Initial Pole Detection Method = High Frequency Injection] or <math>n8-57 = 1</math> [HFI Overlap Selection = Enabled] to enable this parameter.</li> <li>When <math>A1-02 = 6</math> [Control Method Selection = AOLV/PM] and you do High Frequency Injection Auto-Tuning, the drive automatically sets this parameter.</li> </ul> | 2.5<br>(-10.0 - +10.0)  | 726  |
| n8-42<br>(0569)<br>Expert        | HFI I Time                       | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the integral time constant for the high frequency injection speed estimation. Usually it is not necessary to change this setting.</p>  | 0.10 s<br>(0.00 - 9.99 s)   | 726  |
| n8-45<br>(0538)                  | Speed Feedback Detection Gain    | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the internal speed feedback detection reduction unit gain as a magnification value. Usually it is not necessary to change this setting.</p>  | 0.80<br>(0.00 - 10.00)  | 726  |
| n8-47<br>(053A)                  | Pull-in Current Comp Filter Time | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the time constant the drive uses to align the pull-in current reference value with the actual current value. Usually it is not necessary to change this setting.</p>   | 5.0 s<br>(0.0 - 100.0 s)  | 726  |
| n8-48<br>(053B)<br>RUN           | Pull-in/Light Load Id Current    | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>On the basis that parameter <math>E5-03</math> [Motor Rated Current (FLA)] is the 100% value, this parameter sets the d-axis current that flows to the motor during run at constant speed as a percentage.</p>  | 30%<br>(0 - 200%)   | 726  |
| n8-49<br>(053C)<br>RUN<br>Expert | Heavy Load Id Current            | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the d-axis current to that the drive will supply to the motor to run it at a constant speed with a heavy load. Considers <math>E5-03</math> [PM Motor Rated Current (FLA)] to be 100%. Usually it is not necessary to change this setting.</p>   | Determined by E5-01<br>(-200.0 - +200.0%)   | 727  |
| n8-50<br>(053D)<br>Expert        | Medium Load Iq Level (High)      | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the load current level at which heavy load control starts where <math>E5-03</math> [Motor Rated Current (FLA)] is 100%. Usually it is not necessary to change this setting.</p>  | 80%<br>(50 - 255)   | 727  |
| n8-51<br>(053E)                  | Pull-in Current @ Acceleration   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the pull-in current allowed to flow during acceleration/deceleration as a percentage of the motor rated current.</p> <p><b>Note:</b></p> <p>Parameter <math>A1-02</math> [Control Method Selection] selects which parameter is the motor rated current.</p> <ul style="list-style-type: none"> <li><math>A1-02 = 5</math> [OLV/PM]: <math>E5-03</math> [Motor Rated Current (FLA)]</li> <li><math>A1-02 = 8</math> [EZOLV]: <math>E9-06</math> [Motor Rated Current (FLA)]</li> </ul>   | Determined by A1-02<br>(0 - 200%)   | 727  |
| n8-54<br>(056D)<br>Expert        | Voltage Error Compensation Time  | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the time constant that the drive uses when adjusting for voltage errors.</p>   | 1.00 s<br>(0.00 - 10.00 s)  | 727  |
| n8-55<br>(056E)                  | Motor to Load Inertia Ratio      | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the ratio between motor inertia and machine inertia.</p> <p>0 : Below 1:10<br/>1 : Between 1:10 and 1:30<br/>2 : Between 1:30 and 1:50<br/>3 : Beyond 1:50</p>   | 0<br>(0 - 3)  | 728  |
| n8-57<br>(0574)                  | HFI Overlap Selection            | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function that detects motor speed with high frequency injection.</p> <p><b>Note:</b></p> <p>When you set <math>n8-57 = 1</math>, do High Frequency Injection Auto-Tuning.</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 0<br>(0, 1)   | 728  |
| n8-62<br>(057D)<br>Expert        | Output Voltage Limit Level       | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the output voltage limit to prevent saturation of the output voltage. Usually it is not necessary to change this parameter.</p>  | 200 V Class: 200.0 V,<br>400 V: 400.0 V<br><br>(200 V Class: 0.0 to<br>230.0 V, 400 V Class:<br>0.0 to 460.0 V) | 729  |
| n8-63<br>(057E)<br>Expert        | Output Voltage Limit P Gain      | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the proportional gain for output voltage control. Usually it is not necessary to change this setting.</p>  | 1.00<br>(0.00 - 100.00)   | 729  |
| n8-65<br>(065C)<br>Expert        | Speed Fdbk Gain @ oV Suppression | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the gain of internal speed feedback detection suppression while the overvoltage suppression function is operating as a magnification value. Usually it is not necessary to change this parameter.</p>  | 1.50<br>(0.00 - 10.00)  | 729  |

| No. (Hex.)                       | Name                            | Description   | Default (Range)        | Ref. |
|----------------------------------|---------------------------------|---|------------------------|------|
| n8-69<br>(065D)<br>Expert        | Speed Observer Control P Gain   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Usually it is not necessary to change this setting. Sets the Proportional gain that the drive uses for speed estimation.  | 1.00<br>(0.00 - 20.00) | 729  |
| n8-72<br>(0655)<br>Expert        | Speed Estimation Method Select  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Selects the speed estimation method. Usually it is not necessary to change this setting.<br>0 : Method 1<br>1 : Method 2  | 1<br>(0, 1)            | 729  |
| n8-74<br>(05C3)<br>Expert        | Light Load Iq Level             | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Set n8-48 [Pull-in/Light Load Id Current] to the percentage of load current (q-axis current) that you will apply, where E5-03 [Motor Rated Current (FLA)] = a setting value of 100%.  | 30%<br>(0 - 255%)      | 729  |
| n8-75<br>(05C4)<br>Expert        | Medium Load Iq Level (low)      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Set n8-78 [Medium Load Id Current] to the percentage of load current (q-axis current) that you will apply, where E5-03 [Motor Rated Current (FLA)] = a setting value of 100%.   | 50%<br>(0 - 255%)      | 730  |
| n8-77<br>(05CE)<br>Expert        | Heavy Load Iq Level             | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Set n8-49 [Heavy Load Id Current] to the percentage of load current (q-axis current) that you will apply, where E5-03 [Motor Rated Current (FLA)] = a setting value of 100%.  | 90%<br>(0 - 255%)      | 730  |
| n8-78<br>(05F4)<br>RUN<br>Expert | Medium Load Id Current          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the level of the pull-in current as a percentage, where E5-03 [PM Motor Rated Current (FLA)] = 100%.   | 0%<br>(0 - 255%)       | 730  |
| n8-79<br>(05FE)                  | Pull-in Current @ Deceleration  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the pull-in current that can flow during deceleration as a percentage of the E5-03 [PM Motor Rated Current (FLA)].<br><b>Note:</b><br>When n8-79 = 0, the drive will use the value set in n8-51 [Pull-in Current @ Acceleration].  | 50%<br>(0 - 200%)      | 730  |
| n8-84<br>(02D3)<br>Expert        | Polarity Detection Current      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the current that the drive uses to estimate the initial motor magnetic pole as a percentage where E5-03 [PM Motor Rated Current (FLA)] = 100%.   | 100%<br>(0 - 150%)     | 730  |
| n8-87<br>(02BC)                  | Output Voltage Limit Method     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the method of output voltage limit. If there is vibration in the constant output range, set Feedforward Method. Usually it is not necessary to change this setting.<br>0 : Feedback Method<br>1 : Feedforward Method   | 0<br>(0, 1)            | 731  |
| n8-88<br>(02BD)                  | Vout Limit Switching Level      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the current level at which output voltage limit sequence selection occurs as a percentage where the motor rated current is 100%. Normally there is no need to change this setting.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the motor rated current.<br>• A1-02 = 5, 6 [OLV/PM, AOLV/PM]: E5-03 [PM Motor Rated Current (FLA)]<br>• A1-02 = 8[EZOLV]: E9-06 [PM Motor Rated Current (FLA)]                         | 400%<br>(0 - 400%)     | 731  |
| n8-89<br>(02BE)                  | Vout Limit Switching Hysteresis | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the hysteresis width of the current level at which output voltage limit sequence selection occurs as a percentage where the motor rated current is 100%. Normally there is no need to change this setting.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the motor rated current.<br>• A1-02 = 5, 6 [OLV/PM, AOLV/PM]: E5-03 [PM Motor Rated Current (FLA)]<br>• A1-02 = 8[EZOLV]: E9-06 [PM Motor Rated Current (FLA)] | 3%<br>(0 - 400%)       | 731  |
| n8-90<br>(02BF)                  | Vout Limit Switching Speed      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the speed level at which output voltage limit sequence selection occurs as a percentage where the maximum output frequency is 100%. Usually it is not necessary to change this setting.<br><b>Note:</b><br>Parameter A1-02 [Control Method Selection] selects which parameter is the maximum output frequency.<br>• A1-02 = 5, 6 [OLV/PM, AOLV/PM]: E1-04 [Maximum Output Frequency]<br>• A1-02 = 8: E9-02 [Motor Max Revolutions]                                 | 200%<br>(0 - 200%)     | 731  |
| n8-91<br>(02F7)                  | Id Limit at Voltage Saturation  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the limit value of feedback output voltage limit Id operation. Enabled when n8-87 = 0 [Output Voltage Control Selection = Speed Feedback Form]. Usually it is not necessary to change this setting.  | -50%<br>(-200 - 0%)    | 731  |

## 11.12 n: Special Adjustment

| No. (Hex.)                | Name                            | Description  | Default (Range)       | Ref. |
|---------------------------|---------------------------------|--|-----------------------|------|
| n8-94<br>(012D)<br>Expert | Flux Position Estimation Method | <div style="display: flex; justify-content: space-between; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the criteria that the drive uses to find changes in speed or load. Usually it is not necessary to change this setting.<br/>           0 : Softstarter<br/>           1 : Speed Feedback</p> | 1<br>(0, 1)           | 731  |
| n8-95<br>(012E)<br>Expert | Flux Position Est Filter Time   | <div style="display: flex; justify-content: space-between; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time constant of the filter used for the recognition criteria value for speed and load changes. Usually it is not necessary to change this setting.</p>                                 | 30 ms<br>(0 - 100 ms) | 732  |

### ◆ nA: PM Motor Control Tuning

| No. (Hex.)                | Name                 | Description   | Default (Range)        | Ref. |
|---------------------------|----------------------|---|------------------------|------|
| nA-01<br>(3129)<br>Expert | Observer Calc Gain 3 | <div style="display: flex; justify-content: space-between; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain for speed estimation. Usually it is not necessary to change this setting.</p> | 30.0<br>(0.0 - 1000.0) | 732  |

## 11.13 o: Keypad-Related Settings


### ◆ o1: Keypad Display

| No. (Hex.)                              | Name                             | Description  | Default (Range)   | Ref. |
|---|----------------------------------|--|---|------|
| o1-01<br>(0500)<br>RUN                  | User Monitor Selection           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the <i>U monitor</i> for the Drive Mode. This parameter is only available when you use an LED keypad.  | 106<br>(104 - 855)  | 734  |
| o1-02<br>(0501)<br>RUN                  | Monitor Selection at Power-up    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the monitor item that the keypad screen shows after energizing the drive. Refer to "U: Monitors" for information about the monitor items that the keypad screen can show. This parameter is only available when you use an LED keypad.<br>1 : Frequency Reference (U1-01)<br>2 : Direction<br>3 : Output Frequency (U1-02)<br>4 : Output Current (U1-03)<br>5 : User Monitor (o1-01) | 1<br>(1 - 5)  | 734  |
| o1-03<br>(0502)                         | Frequency Display Unit Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the display units for the frequency reference and output frequency.<br>0 : 0.01Hz units<br>1 : 0.01% units<br>2 : Revolutions Per Minute (RPM)<br>3 : User Units   | Determined by A1-02<br>(0 - 3)  | 734  |
| o1-04<br>(0503)                         | V/f Pattern Display Unit         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the setting unit for parameters that set the V/f pattern frequency.<br>0 : Hz<br>1 : min <sup>-1</sup> (r/min) unit  | Determined by A1-02<br>(0, 1)   | 735  |
| o1-05<br>(0504)<br>RUN                  | LCD Contrast Adjustment          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the contrast of the LCD display on the keypad.   | 5<br>(0 - 10)   | 735  |
| o1-10<br>(0520)                         | User Units Maximum Value         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the value that the drive shows as the maximum output frequency.  | Determined by o1-03<br>(1 - 60000)  | 735  |
| o1-11<br>(0521)                         | User Units Decimal Position      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the number of decimal places for frequency reference and monitor values.<br>0 : No Decimal Places (XXXXX)<br>1 : One Decimal Places (XXXX.X)<br>2 : Two Decimal Places (XXX.XX)<br>3 : Three Decimal Places (XX.XXX)   | Determined by o1-03<br>(0 - 3)  | 736  |
| o1-24 to o1-35:<br>(11AD - 11B8)<br>RUN | Custom Monitor 1 to 12           | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a maximum of 12 monitors as user monitors. This parameter is only available when using an LCD keypad.  | o1-24: 101<br>o1-25: 102<br>o1-26: 103<br>o1-27 to o1-35: 0<br>(0, 101 - 999) | 736  |
| o1-36<br>(11B9)<br>RUN                  | LCD Backlight Brightness         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the intensity of the LCD keypad backlight.   | 3<br>(1 - 5)  | 736  |
| o1-37<br>(11BA)<br>RUN                  | LCD Backlight ON/OFF Selection   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the automatic shut off function for the LCD backlight.<br>0 : OFF<br>1 : ON  | 1<br>(0, 1)   | 736  |
| o1-38<br>(11BB)<br>RUN                  | LCD Backlight Off-Delay          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time until the LCD backlight automatically turns off.  | 60 s<br>(10 - 300 s)  | 737  |
| o1-39<br>(11BC)<br>RUN                  | Show Initial Setup Screen        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to show the LCD keypad initial setup screen each time the drive is energized. This parameter is only available when using an LCD keypad.<br>0 : No<br>1 : Yes   | 1<br>(0, 1)   | 737  |
| o1-40<br>(11BD)<br>RUN                  | Home Screen Display Selection    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the monitor display mode for the Home screen. This parameter is only available when using an LCD keypad.<br>0 : Custom Monitor<br>1 : Bar Graph<br>2 : Analog Gauge<br>3 : Trend Plot  | 0<br>(0 - 3)  | 737  |

## 11.13 o: Keypad-Related Settings

| No. (Hex.)             | Name                             | Description  | Default (Range)               | Ref. |
|------------------------|----------------------------------|--|-------------------------------|------|
| o1-41<br>(11C1)<br>RUN | 1st Monitor Area Selection       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal range used to display the monitor set in o1-24 [Custom Monitor 1] as a bar graph. This parameter is only available when using an LCD keypad.<br>0 : +/- Area ( - o1-42 ~ o1-42 )<br>1 : + Area ( 0 ~ o1-42 )<br>2 : - Area ( - o1-42 ~ 0 )    | 0<br>(0 - 2)                  | 738  |
| o1-42<br>(11C2)<br>RUN | 1st Monitor Area Setting         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis value used to display the monitor set in o1-24 [Custom Monitor 1] as a bar graph. This parameter is only available when using an LCD keypad.   | 100.0%<br>(0.0 - 100.0%)      | 738  |
| o1-43<br>(11C3)<br>RUN | 2nd Monitor Area Selection       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Selects the horizontal range used to display the monitor set in o1-25 [Custom Monitor 2] as a bar graph. This parameter is only available when using an LCD keypad.<br>0 : +/- Area ( - o1-44 ~ o1-44 )<br>1 : + Area ( 0 ~ o1-44 )<br>2 : - Area ( - o1-44 ~ 0 ) | 0<br>(0 - 2)                  | 738  |
| o1-44<br>(11C4)<br>RUN | 2nd Monitor Area Setting         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis value used to display the monitor set in o1-25 [Custom Monitor 2] as a bar graph. This parameter is only available when using an LCD keypad.   | 100.0%<br>(0.0 - 100.0%)      | 738  |
| o1-45<br>(11C5)<br>RUN | 3rd Monitor Area Selection       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal range used to display the monitor set in o1-26 [Custom Monitor 3] as a bar graph. This parameter is only available when using an LCD keypad.<br>0 : +/- Area ( - o1-46 ~ o1-46 )<br>1 : + Area ( 0 ~ o1-46 )<br>2 : - Area ( - o1-46 ~ 0 )    | 0<br>(0 - 2)                  | 738  |
| o1-46<br>(11C6)<br>RUN | 3rd Monitor Area Setting         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis value used to display the monitor set in o1-26 [Custom Monitor 3] as a bar graph. This parameter is only available when using an LCD keypad.   | 100.0%<br>(0.0 - 100.0%)      | 738  |
| o1-47<br>(11C7)<br>RUN | Trend Plot 1 Scale Minimum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis minimum value used to display the monitor set in o1-24 [Custom Monitor 1] as a trend plot. This parameter is only available when using an LCD keypad.  | -100.0%<br>(-300.0 - +300.0%) | 739  |
| o1-48<br>(11C8)<br>RUN | Trend Plot 1 Scale Maximum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis maximum value used to display the monitor set in o1-24 [Custom Monitor 1] as a trend plot. This parameter is only available when using an LCD keypad.  | 100.0%<br>(-300.0 - +300.0%)  | 739  |
| o1-49<br>(11C9)<br>RUN | Trend Plot 2 Scale Minimum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis minimum value used to display the monitor set in o1-25 [Custom Monitor 2] as a trend plot. This parameter is only available when using an LCD keypad.  | -100.0%<br>(-300.0 - +300.0%) | 739  |
| o1-50<br>(11CA)<br>RUN | Trend Plot 2 Scale Maximum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis maximum value used to display the monitor set in o1-25 [Custom Monitor 2] as a trend plot. This parameter is only available when using an LCD keypad.  | 100.0%<br>(-300.0 - +300.0%)  | 739  |
| o1-51<br>(11CB)<br>RUN | Trend Plot Time Scale Setting    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time scale (horizontal axis) to display the trend plot. When you change this setting, the drive automatically adjusts the data sampling time. This parameter is only available when using an LCD keypad.   | 300 s<br>(1 - 3600 s)         | 739  |
| o1-55<br>(11EE)<br>RUN | Analog Gauge Area Selection      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the range used to display the monitor set in o1-24 [Custom Monitor 1] as an analog gauge. This parameter is only available when using an LCD keypad.<br>0 : +/- Area ( - o1-56 ~ o1-56 )<br>1 : + Area ( 0 ~ o1-56 )   | 1<br>(0, 1)                   | 739  |
| o1-56<br>(11EF)<br>RUN | Analog Gauge Area Setting        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the value used to display the monitor set in o1-24 [Custom Monitor 1] as an analog meter. This parameter is only available when using an LCD keypad.   | 100.0%<br>(0.0 - 100.0%)      | 739  |
| o1-58<br>(3125)        | Motor Power Unit Selection       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the setting unit for parameters that set the motor rated power.<br>0 : kW<br>1 : HP  | 0<br>(0, 1)                   | 739  |

## ◆ o2: Keypad Operation

| No. (Hex.)                | Name                             | Description   | Default (Range)                | Ref. |
|---------------------------|----------------------------------|---|--------------------------------|------|
| o2-01<br>(0505)           | LO/RE Key Function Selection     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that lets you use <b>LO/RE</b> to switch between LOCAL and REMOTE Modes.</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 1<br>(0, 1)                    | 740  |
| o2-02<br>(0506)           | STOP Key Function Selection      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to use <b>STOP</b> on the keypad to stop the drive when the Run command source for the drive is REMOTE (external) and not assigned to the keypad.</p> <p>0 : Disabled<br/>1 : Enabled</p>   | 1<br>(0, 1)                    | 740  |
| o2-03<br>(0507)           | User Parameter Default Value     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to keep the settings of changed parameters as user parameter defaults to use during initialization.</p> <p>0 : No change<br/>1 : Set defaults<br/>2 : Clear all</p>   | 0<br>(0 - 2)                   | 741  |
| o2-04<br>(0508)           | Drive Model (KVA) Selection      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the Drive Model code. Set this parameter after replacing the control board.</p>  | Determined by the drive<br>(-) | 741  |
| o2-05<br>(0509)           | Home Mode Freq Ref Entry Mode    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that makes it necessary to push  to use the keypad to change the frequency reference value while in Drive Mode.</p> <p>0 : ENTER Key Required<br/>1 : Immediate / MOP-style</p>                      | 0<br>(0, 1)                    | 742  |
| o2-06<br>(050A)           | Keypad Disconnect Detection      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that stops the drive if you disconnect the keypad connection cable from the drive or if you damage the cable while the keypad is the Run command source.</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 0<br>(0, 1)                    | 742  |
| o2-07<br>(0527)           | Keypad RUN Direction @ Power-up  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the direction of motor rotation when the drive is energized and the keypad is the Run command source.</p> <p>0 : Forward<br/>1 : Reverse</p>   | 0<br>(0, 1)                    | 742  |
| o2-09<br>(050D)           | Reserved                         | -   | -                              | 742  |
| o2-19<br>(061F)<br>Expert | Parameter Write during Uv        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Lets you change parameters during Uv [<i>Undervoltage</i>].</p> <p>0 : Disable<br/>1 : Enabled</p>  | 0<br>(0, 1)                    | 743  |
| o2-23<br>(11F8)<br>RUN    | External 24V Powerloss Detection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function to give a warning if the backup external 24 V power supply turns off when the main circuit power supply is in operation.</p> <p>0 : Disable<br/>1 : Enabled</p>   | 0<br>(0, 1)                    | 743  |
| o2-26<br>(1563)           | Alarm display at ext. 24V power  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you connect a backup external 24 V power supply, this parameter sets the function to trigger an alarm when the main circuit power supply voltage decreases.</p> <p><b>Note:</b><br/>The drive will not run when it is operating from one 24-V external power supply.</p> <p>0 : No<br/>1 : Yes</p> | 0<br>(0, 1)                    | 743  |
| o2-27<br>(1565)           | bCE Detection Selection          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets drive operation if the Bluetooth device is disconnected when you operate the drive in Bluetooth Mode.</p> <p>0 : Ramp to Stop<br/>1 : Coast to Stop<br/>2 : Fast Stop (Use C1-09)<br/>3 : Alarm Only<br/>4 : No Alarm Display</p>  | 3<br>(0 - 4)                   | 743  |

### ◆ o3: Copy Keypad Function

| No. (Hex.)   | Name                            | Description   | Default (Range) | Ref. |
|--------------|---------------------------------|---|-----------------|------|
| o3-01 (0515) | Copy Keypad Function Selection  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that saves and copies drive parameters to a different drive with the keypad.</p> <p>0 : Copy Select<br/>1 : Backup (drive → keypad)<br/>2 : Restore (keypad → drive)<br/>3 : Verify (check for mismatch)<br/>4 : Erase (backup data of keypad)</p>  | 0<br>(0 - 4)    | 744  |
| o3-02 (0516) | Copy Allowed Selection          | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the copy function when o3-01 = 1 [Copy Keypad Function Selection = Backup (drive → keypad)].</p> <p>0 : Disabled<br/>1 : Enabled</p>   | 0<br>(0, 1)     | 744  |
| o3-04 (0B3E) | Select Backup/Restore Location  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the storage location for drive parameters when you back up and restore parameters. This parameter is only available when using an LCD keypad.</p> <p>0 : Memory Location 1<br/>1 : Memory Location 2<br/>2 : Memory Location 3<br/>3 : Memory Location 4</p>   | 0<br>(0 - 3)    | 744  |
| o3-05 (0BDA) | Select Items to Backup/Restore  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets which parameters are backed up, restored, and referenced. This parameter is only available when using an LCD keypad.</p> <p>0 : Standard Parameters<br/>1 : Standard + DWEZ Parameters</p>   | 0<br>(0, 1)     | 744  |
| o3-06 (0BDE) | Auto Parameter Backup Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the function that automatically backs up parameters. This parameter is only available when using an LCD keypad.</p> <p>0 : Disabled<br/>1 : Enabled</p>  | 1<br>(0, 1)     | 745  |
| o3-07 (0BDF) | Auto Parameter Backup Interval  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the interval at which the automatic parameter backup function saves parameters from the drive to the keypad.</p> <p><b>Note:</b><br/>This parameter is only available when using an LCD keypad.</p> <p>0 : Every 10 minutes<br/>1 : Every 30 minutes<br/>2 : Every 60 minutes<br/>3 : Every 12 hours</p> | 1<br>(0 - 3)    | 745  |

### ◆ o4: Maintenance Monitors

| No. (Hex.)   | Name                             | Description   | Default (Range)     | Ref. |
|--------------|----------------------------------|---|---------------------|------|
| o4-01 (050B) | Elapsed Operating Time Setting   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the initial value of the cumulative drive operation time in 10-hour units.</p>   | 0 h<br>(0 - 9999 h) | 745  |
| o4-02 (050C) | Elapsed Operating Time Selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the condition that counts the cumulative operation time.</p> <p>0 : U4-01 Shows Total Power-up Time<br/>1 : U4-01 Shows Total RUN Time</p> | 0<br>(0, 1)         | 745  |
| o4-03 (050E) | Fan Operation Time Setting       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the value from which to start the cumulative drive cooling fan operation time in 10-hour units.</p>  | 0 h<br>(0 - 9999 h) | 746  |
| o4-05 (051D) | Capacitor Maintenance Setting    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the U4-05 [CapacitorMaintenance] monitor value.</p>  | 0%<br>(0 - 150%)    | 746  |
| o4-07 (0523) | Softcharge Relay Maintenance Set | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the U4-06 [PreChargeRelayMainte] monitor value.</p>  | 0%<br>(0 - 150%)    | 746  |
| o4-09 (0525) | IGBT Maintenance Setting         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Sets the U4-07 [IGBT Maintenance] monitor value.</p>  | 0%<br>(0 - 150%)    | 746  |
| o4-11 (0510) | Fault Trace/History Init (U2/U3) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Resets the records of Monitors U2-xx [Fault Trace] and U3-xx [Fault History].</p> <p>0 : Disabled<br/>1 : Enabled</p>                           | 0<br>(0, 1)         | 746  |



| No. (Hex.)       | Name                             | Description  | Default (Range) | Ref. |
|------------------|----------------------------------|--|-----------------|------|
| o4-12 (0512)     | kWh Monitor Initialization       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Resets the monitor values for U4-10 [kWh, Lower 4 Digits] and U4-11 [kWh, Upper 5 Digits].<br>0 : No Reset<br>1 : Reset   | 0<br>(0, 1)     | 747  |
| o4-13 (0528)     | RUN Command Counter @ Initialize | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Resets the monitor values for U4-02 [Num of Run Commands], U4-24 [Number of Runs (Low)], and U4-25 [Number of Runs (High)].<br>0 : No Reset<br>1 : Reset  | 0<br>(0, 1)     | 747  |
| o4-22 (154F) RUN | Time Format                      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time display format. This parameter is only available when using an LCD keypad.<br>0 : 24 Hour Clock<br>1 : 12 Hour Clock<br>2 : 12 Hour JP Clock  | 0<br>(0 - 2)    | 747  |
| o4-23 (1550) RUN | Date Format                      | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the date display format. This parameter is only available when using an LCD keypad.<br>0 : YYYY/MM/DD<br>1 : DD/MM/YYYY<br>2 : MM/DD/YYYY  | 0<br>(0 - 2)    | 747  |
| o4-24 (310F) RUN | bAT Detection Selection          | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the operation when the drive detects bAT [Keypad Battery Low Voltage] and TIM [Keypad Time Not Set]. This parameter is only available when you use an LCD keypad.<br>0 : Disable<br>1 : Enable (Alarm Detected)<br>2 : Enable (Fault Detected) | 0<br>(0 - 2)    | 748  |

## ◆ o5: Log Function

| No. (Hex.)       | Name                     | Description  | Default (Range)             | Ref. |
|------------------|--------------------------|--|-----------------------------|------|
| o5-01 (1551) RUN | Log Start/Stop Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log function. This parameter is only available when using an LCD keypad.<br>0 : OFF<br>1 : ON | 0<br>(0 - 1)                | 750  |
| o5-02 (1552) RUN | Log Sampling Interval    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log sampling cycle. This parameter is only available when using an LCD keypad.                | 1000 ms<br>(100 - 60000 ms) | 751  |
| o5-03 (1553) RUN | Log Monitor Data 1       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 101<br>(000, 101 - 999)     | 751  |
| o5-04 (1554) RUN | Log Monitor Data 2       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 102<br>(000, 101 - 999)     | 751  |
| o5-05 (1555) RUN | Log Monitor Data 3       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 103<br>(000, 101 - 999)     | 751  |
| o5-06 (1556) RUN | Log Monitor Data 4       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 107<br>(000, 101 - 999)     | 751  |
| o5-07 (1557) RUN | Log Monitor Data 5       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 108<br>(000, 101 - 999)     | 751  |
| o5-08 (1558) RUN | Log Monitor Data 6       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 000<br>(000, 101 - 999)     | 752  |
| o5-09 (1559) RUN | Log Monitor Data 7       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 000<br>(000, 101 - 999)     | 752  |
| o5-10 (155A) RUN | Log Monitor Data 8       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data log monitor. This parameter is only available when using an LCD keypad.                       | 000<br>(000, 101 - 999)     | 752  |

## 11.13 o: Keypad-Related Settings

| No.<br>(Hex.)          | Name                | Description  | Default<br>(Range)      | Ref.                |
|------------------------|---------------------|--|-------------------------|---------------------|
| o5-11<br>(155B)<br>RUN | Log Monitor Data 9  | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the data log monitor. This parameter is only available when using an LCD keypad.</p> | 000<br>(000, 101 - 999) | <a href="#">752</a> |
| o5-12<br>(155C)<br>RUN | Log Monitor Data 10 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the data log monitor. This parameter is only available when using an LCD keypad.</p> | 000<br>(000, 101 - 999) | <a href="#">752</a> |

## 11.14 q: DriveWorksEZ Parameters

### ◆ q1-01 to qx-xx: Reserved for DriveWorksEZ

| No.<br>(Hex.)                   | Name                         | Description   | Default<br>(Range)                           |
|---------------------------------|------------------------------|---|--|
| q1-01 to qx-xx<br>(1600 - xxxx) | Reserved for<br>DriveWorksEZ | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>These parameters are reserved for use with DriveWorksEZ. | Refer to "DriveWorksEZ<br>Operation Manual". |

## 11.15 r: DWEZ Connection 1-20

### ◆ r1-01 to r1-40: DriveWorksEZ Connection Parameters 1 to 20 (Upper / Lower)

| No.<br>(Hex.)                    | Name   | Description   | Default<br>(Range) |
|----------------------------------|--|---|--------------------|
| r1-01 to r1-40:<br>(1840 - 1867) | DriveWorksEZ Connection<br>Parameters 1 to 20 (Upper /<br>Lower) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>DriveWorksEZ Connection Parameters 1 to 20 (Upper / Lower) | 0<br>(0 - FFFFH)   |

## 11.16 T: Motor Tuning

### ◆ T0: Tuning Mode Selection

| No. (Hex.)      | Name                  | Description  | Default (Range) | Ref. |
|-----------------|-----------------------|--|-----------------|------|
| T0-00<br>(1197) | Tuning Mode Selection | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the type of Auto-Tuning.<br/>0 : Motor Parameter Tuning<br/>1 : Control Tuning</p> | 0<br>(0, 1)     | 753  |

### ◆ T1: Induction Motor Auto-Tuning

| No. (Hex.)      | Name                       | Description   | Default (Range)  | Ref. |
|-----------------|----------------------------|---|--|------|
| T1-00<br>(0700) | Motor 1/Motor 2 Selection  | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets which motor to tune when motor 1/2 switching is enabled.<br/>You can only use the keypad to set this parameter. You cannot use external input terminals to set it.</p> <p><b>Note:</b><br/>This parameter is enabled when <math>HI-xx = 16</math> [Motor 2 Selection] is set. When <math>HI-xx \neq 16</math> the keypad will not show this parameter.</p> <p>1 : Motor 1<br/>2 : Motor 2</p> | 1<br>(1, 2)  | 753  |
| T1-01<br>(0701) | Tuning Mode Selection      | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the type of Auto-Tuning.<br/>0 : Rotational Auto-Tuning<br/>1 : Stationary Auto-Tuning 1<br/>2 : Stationary Line-Line Resistance</p>  | Determined by A1-02<br>(Determined by A1-02)   | 754  |
| T1-02<br>(0702) | Motor Rated Power          | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Uses the units set in <math>o1-58</math> [Motor Power Unit Selection] to set the motor rated output power.</p>   | Determined by $o2-04$ ,<br>C6-01<br>(0.00 - 650.00 kW)                                       | 754  |
| T1-03<br>(0703) | Motor Rated Voltage        | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the rated voltage (V) of the motor. Enter the base speed voltage for constant output motors.</p>  | Determined by $o2-04$ ,<br>C6-01<br>(200 V Class: 0.0 - 255.5 V, 400 V Class: 0.0 - 511.0 V) | 754  |
| T1-04<br>(0704) | Motor Rated Current        | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the rated current (A) of the motor.</p>   | Determined by $o2-04$<br>(10% to 200% of the drive rated current)                            | 754  |
| T1-05<br>(0705) | Motor Base Frequency       | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the base frequency (Hz) of the motor.</p>   | 50.0 Hz<br>(0.0 - 590.0 Hz)  | 754  |
| T1-06<br>(0706) | Number of Motor Poles      | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the number of motor poles.</p>  | 4<br>(2 to 120)  | 754  |
| T1-07<br>(0707) | Motor Base Speed           | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the motor base speed for Auto-Tuning (<math>\text{min}^{-1}</math> (r/min)).</p>  | 1450 $\text{min}^{-1}$ (r/min)<br>(0 - 35400 $\text{min}^{-1}$ (r/min))                      | 755  |
| T1-09<br>(0709) | Motor No-Load Current      | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the no-load current of the motor.</p>   | -<br>(0A - T1-04; max. of 2999.9)  | 755  |
| T1-10<br>(070A) | Motor Rated Slip Frequency | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets motor rated slip.</p>   | -<br>(0.000 - 20.000 Hz)   | 755  |
| T1-11<br>(070B) | Motor Iron Loss            | <p><input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV</p> <p>Sets the iron loss for calculating the energy-saving coefficient.</p>  | Determined by E2-11 or<br>E4-11<br>(0 - 65535 W)   | 755  |

## 11.16 T: Motor Tuning

| No. (Hex.)   | Name                | Description  | Default (Range)  | Ref. |
|--------------|---------------------|--|--|------|
| T1-12 (0BDB) | Test Mode Selection | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the function to enable Test Mode after Stationary Auto-Tuning. When you can operate the motor with a light load attached after Stationary Auto-Tuning is complete, enable this parameter.</p> <p><b>Note:</b><br/>You must first set <math>T1-10 = 0</math> [Motor Rated Slip Frequency = 0 Hz] to enable this parameter.<br/>0 : No<br/>1 : Yes</p>  | 0<br>(0, 1)  | 755  |
| T1-13 (0BDC) | No-load voltage     | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the no-load voltage of the motor. When the no-load voltage at rated speed is available, for example on the motor test report, set the voltage in this parameter. If the no-load voltage is not available, do not change this parameter.</p> <p><b>Note:</b><br/>To get the same qualities as a Yaskawa 1000-series drive or previous series drive, set this parameter = <math>T1-03</math> [Motor Rated Voltage].</p> | $T1-03 \times 0.9$<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) | 756  |

### ◆ T2: PM Motor Auto-Tuning

| No. (Hex.)   | Name                       | Description   | Default (Range)  | Ref. |
|--------------|----------------------------|---|--|------|
| T2-01 (0750) | PM Auto-Tuning Selection   | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the type of Auto-Tuning for PM motors.<br/>0 : Manual Entry w/ Motor Data Sheet<br/>1 : Stationary (Ld, Lq, R)<br/>2 : Stationary (R Only)<br/>4 : Rotational (Ld, Lq, R, Back-EMF)<br/>5 : High Frequency Injection</p> | 0<br>(Determined by A1-02)   | 756  |
| T2-02 (0751) | PM Motor Code Selection    | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>If the drive is operating an SMRD, SMRA, or SSR1 series Yaskawa PM motor, enter the PM motor code in to align with the rotation speed and motor output.</p>   | Determined by A1-02 and o2-04<br>(0000 - FFFF)   | 756  |
| T2-03 (0752) | PM Motor Type              | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the type of PM motor the drive will operate.<br/>0 : IPM motor<br/>1 : SPM motor</p>   | 1<br>(0, 1)  | 756  |
| T2-04 (0730) | PM Motor Rated Power       | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Uses the units set in o1-58 [Motor Power Unit Selection] to set the PM motor rated output power.</p>  | Determined by o2-04, C6-01<br>(0.00 - 650.00 kW)   | 757  |
| T2-05 (0732) | PM Motor Rated Voltage     | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the rated voltage (V) of the motor.</p>  | 200 V Class: 200.0 V, 400 V: 400.0 V<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) | 757  |
| T2-06 (0733) | PM Motor Rated Current     | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the rated current (A) of the motor.</p>  | Determined by o2-04<br>(10% to 200% of the drive rated current)                                  | 757  |
| T2-07 (0753) | PM Motor Base Frequency    | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the base frequency (Hz) of the motor.</p>  | 87.5 Hz<br>(0.0 - 590.0 Hz)  | 757  |
| T2-08 (0734) | Number of PM Motor Poles   | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the number of motor poles.</p>   | 6<br>(2 - 48)  | 757  |
| T2-09 (0731) | PM Motor Base Speed        | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the motor base speed (min<sup>-1</sup> (r/min)).</p>   | 1750 min <sup>-1</sup> (r/min)<br>(0 - 34500 min <sup>-1</sup> (r/min))                          | 757  |
| T2-10 (0754) | PM Motor Stator Resistance | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the stator resistance for each motor phase.<br/><b>Note:</b><br/>This parameter does not set line-to-line resistance.</p>  | Determined by T2-02<br>(0.000 - 65.000 Ω)  | 757  |
| T2-11 (0735) | PM Motor d-Axis Inductance | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the d-axis inductance of the motor on a per phase basis.</p>   | Determined by T2-02<br>(0.00 - 600.00 mH)  | 757  |
| T2-12 (0736) | PM Motor q-Axis Inductance | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the q-Axis inductance of the motor on a per phase basis.</p>   | Determined by T2-02<br>(0.00 - 600.00 mH)  | 758  |
| T2-13 (0755) | Back-EMF Units Selection   | <p>V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Sets the units that the drive uses to set the induced voltage constant.<br/>0 : mV/(rev/min)<br/>1 : mV/(rad/sec)</p>   | 1<br>(0, 1)  | 758  |

| No. (Hex.)   | Name                           | Description  | Default (Range)                    | Ref. |
|--------------|--------------------------------|--|------------------------------------|------|
| T2-14 (0737) | Back-EMF Voltage Constant (Ke) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor induced voltage constant (Ke).  | Determined by T2-13 (0.0 - 2000.0) | 758  |
| T2-15 (0756) | Pull-In Current Level          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the level of the pull-in current as a percentage of E5-03 [PM Motor Rated Current (FLA)]. Usually it is not necessary to change this setting. | 30% (0 - 120%)                     | 758  |

### ◆ T3: ASR and Inertia Tuning


| No. (Hex.)   | Name                          | Description   | Default (Range) | Ref. |
|--------------|-------------------------------|---|-----------------|------|
| T3-00 (1198) | Control Loop Tuning Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the type of Control Auto-Tuning.<br>2 : Deceleration Rate Tuning<br>3 : KEB Tuning | 2 (2, 3)        | 758  |

### ◆ T4: EZ Tuning




| No. (Hex.)   | Name                     | Description  | Default (Range)  | Ref. |
|--------------|--------------------------|--|--|------|
| T4-01 (3130) | EZ Tuning Mode Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the type of Auto-Tuning for EZOLV control.<br>0 : Motor Parameter Setting<br>1 : Line-to-Line Resistance    | 0 (0, 1)   | 759  |
| T4-02 (3131) | Motor Type Selection     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the type of motor.<br>0 : Induction (IM)<br>1 : Permanent Magnet (PM)<br>2 : Synchronous Reluctance (SynRM) | 0 (0, 1, 2)  | 759  |
| T4-04 (3133) | Motor Rated Revolutions  | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets rated rotation speed (min <sup>-1</sup> ) of the motor.   | -<br>((40 Hz to 120 Hz) × 60 × 2/E9-08)  | 759  |
| T4-05 (3134) | Motor Rated Frequency    | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the rated frequency (Hz) of the motor.  | Determined by E9-01 and o2-04 (40.0 - 120.0 Hz)  | 759  |
| T4-06 (3135) | Motor Rated Voltage      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the rated voltage (V) of the motor.   | 200 V Class: 200.0 V, 400 V: 400.0 V<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) | 759  |
| T4-07 (3136) | Motor Rated Current      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the rated current (A) of the motor.   | Determined by o2-04, C6-01 (10% to 200% of the drive rated current)                              | 760  |
| T4-08 (3137) | Motor Rated Capacity     | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the motor rated power in the units set in o1-58 [Motor Power Unit Selection].                               | Determined by E9-10 (0.10 - 650.00 kW)   | 760  |
| T4-09 (3138) | Number of Poles          | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the number of motor poles.  | Determined by E9-01 (2 - 48)   | 760  |

# 11.17 U: Monitors

## ◆ U1: Operation Status Monitors

| No. (Hex.)   | Name                     | Description  | MFAO Signal Level  |
|--------------|--------------------------|--|--|
| U1-01 (0040) | Frequency Reference      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the frequency reference value. Parameter <i>o1-03</i> [Keypad Display Unit Selection] sets the display units.<br/>Unit: 0.01 Hz</p>  | 10 V = Maximum frequency (0 V to +10 V)                      |
| U1-02 (0041) | Output frequency         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the output frequency. Parameter <i>o1-03</i> [Keypad Display Unit Selection] sets the display units.<br/>Unit: 0.01 Hz</p>   | 10 V = Maximum frequency (0 V to +10 V)                      |
| U1-03 (0042) | Output Current           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the actual output current.<br/>The keypad shows the value of <i>U1-03</i> in amperes (A). When looking at the monitor through MEMOBUS/Modbus communications, the current is "8192 = drive rated current (A)". Calculate the current from the monitor value that is in at MEMOBUS/Modbus communications using "Numerals being displayed / 8192 × drive rated current (A)."<br/>Unit: When the drive model changes, the display units for this parameter also change.<br/> <ul style="list-style-type: none"> <li>0.01 A units: B001 - B018, 2001 - 2042, 4001 - 4023</li> <li>0.1A units: 2056 - 2082, 4031 - 4060</li> </ul> </p>  | 10 V = Drive rated current                                   |
| U1-04 (0043) | Control method selection | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the drive control method.<br/>0 : V/f Control<br/>2 : Open Loop Vector<br/>5 : PM Open Loop Vector<br/>6 : PM Advanced Open Loop Vector<br/>8 : EZ Vector Control</p>  | No signal output available                                   |
| U1-05 (0044) | Motor Speed              | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the detected motor speed. Parameter <i>o1-03</i> [Keypad Display Unit Selection] sets the display units.<br/>Unit: 0.01 Hz</p>   | 10 V = Maximum frequency (0 V to +10 V)                      |
| U1-06 (0045) | Output Voltage Ref       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the output voltage reference.<br/>Unit: 0.1 V</p>  | 200 V class: 10 V = 200 Vrms<br>400 V class: 10 V = 400 Vrms |
| U1-07 (0046) | DC Bus Voltage           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the DC bus voltage.<br/>Unit: 1 V</p>  | 200 V class: 10 V = 400 V<br>400 V class: 10 V = 800 V       |
| U1-08 (0047) | Output Power             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the internally-calculated output power.<br/>When you change <i>A1-02</i> [Control Method Selection], it will also change the signal level of the analog output.<br/> <ul style="list-style-type: none"> <li>A1-02 = 0: Drive capacity (kW)</li> <li>A1-02 = 2: Motor Rated Power [E2-11] (kW)</li> <li>A1-02 = 5, 6: PM Motor Rated Power [E5-02] (kW)</li> <li>A1-02 = 8: Motor Rated Power [E9-07] (kW)</li> </ul> Unit: When the drive model changes, the display units for this parameter also change.<br/> <ul style="list-style-type: none"> <li>0.01 A units: B001 to B018, 2001 to 2042, 4001 to 4023</li> <li>0.1 A units: 2056 - 2082, 4031 - 4060</li> </ul> </p> | 10 V: Drive capacity (motor rated power) kW (0 V to +10 V)   |
| U1-09 (0048) | Torque Reference         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the internal torque reference value.<br/>Unit: 0.1%</p>  | 10 V = Motor rated torque (0 V to +10 V)                     |
| U1-10 (0049) | Input Terminal Status    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDO terminal where <math>\uparrow</math> = ON and <math>\downarrow</math> = OFF.<br/>For example, <i>U1-10</i> shows  when terminals S1 and S3 are ON.<br/>bit0 : Terminal S1 (MFDI 1)<br/>bit1 : Terminal S2 (MFDI 2)<br/>bit2 : Terminal S3 (MFDI 3)<br/>bit3 : Terminal S4 (MFDI 4)<br/>bit4 : Terminal S5 (MFDI 5)<br/>bit5 : Terminal S6 (MFDI 6)<br/>bit6 : Terminal S7 (MFDI 7)<br/>bit7 : Not used (normal value of [ <math>\downarrow</math> ]).</p>  | No signal output available                                   |







| No. (Hex.)   | Name                      | Description   | MFAO Signal Level                       |
|--------------|---------------------------|---|---|
| U1-11 (004A) | Output Terminal Status    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDO terminal where <math>\bar{1}</math> = ON and <math>1</math> = OFF.</p> <p>For example, U1-11 shows  when terminals MA and P2 are ON.</p> <p><b>Note:</b><br/>When H2-xx = 100 to 1A7 [U1-11 Inverse U1-11 Output of Function], U1-11 does not show the status in inverse.</p> <p>bit0 : Terminal MA/MB-MC<br/>bit1 : Terminal P1-C1<br/>bit2 : Terminal P2-C2</p> <p>bit3 : Not used (normal value of [ <math>1</math>]).<br/>bit4 : Not used (normal value of [ <math>1</math>]).<br/>bit5 : Not used (normal value of [ <math>1</math>]).<br/>bit6 : Not used (normal value of [ <math>1</math>]).<br/>bit7 : Not used (normal value of [ <math>1</math>]).</p> | No signal output available              |
| U1-12 (004B) | Drive Status              | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows drive status where <math>\bar{1}</math> = ON and <math>1</math> = OFF.</p> <p>For example, U1-12 shows  during run with the Reverse Run command.</p> <p>bit0 : During Run<br/>bit1 : During zero-speed<br/>bit2 : During reverse<br/>bit3 : During fault reset signal input<br/>bit4 : During speed agreement<br/>bit5 : Drive Ready<br/>bit6 : During minor fault detection<br/>bit7 : During fault detection</p>   | No signal output available              |
| U1-13 (004E) | Terminal A1 Level         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the signal level of terminal A1.<br/>Unit: 0.1%</p>   | 10 V = 100% (0 V to +10 V)              |
| U1-14 (004F) | Terminal A2 Level         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the signal level of terminal A2.<br/>Unit: 0.1%</p>   | 10 V = 100% (0 V to +10 V)              |
| U1-16 (0053) | SFS Output Frequency      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the output frequency after soft start. Shows the frequency with acceleration and deceleration times and S-curves. Parameter 01-03 [Keypad Display Unit Selection] sets the display units.<br/>Unit: 0.01 Hz</p>   | 10 V = Maximum frequency (0 V to +10 V) |
| U1-18 (0061) | oPE Fault Parameter       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the parameter number that caused the oPE02 [Parameter Range Setting Error] or oPE08 [Parameter Selection Error].</p>  | No signal output available              |
| U1-19 (0066) | MEMOBUS/Modbus Error Code | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the contents of the MEMOBUS/Modbus communication error where <math>\bar{1}</math> = "error" and <math>1</math> = "no error".</p> <p>For example, U1-19 shows  when the drive detects a CRC error.</p> <p>bit0 : CRC Error<br/>bit1 : Data Length Error</p> <p>bit2 : Not used (normal value of [ <math>1</math>]).<br/>bit3 : Parity Error<br/>bit4 : Overrun Error<br/>bit5 : Framing Error<br/>bit6 : Timed Out</p> <p>bit7 : Not used (normal value of [ <math>1</math>]).</p>  | No signal output available              |
| U1-24 (007D) | Input Pulse Monitor       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the frequency to pulse train input terminal RP.<br/>Unit: 1 Hz</p>  | Determined by H6-02                     |
| U1-25 (004D) | Software number           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the ID.</p>   | No signal output available              |
| U1-26 (005B) | SoftwareNumber ROM        | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the ROM ID.</p>   | No signal output available              |

| No. (Hex.)                | Name                 | Description  | MFAO Signal Level  |
|---------------------------|----------------------|--|--|
| U1-50<br>(1199)<br>Expert | Virtual Analog Input | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the virtual analog input value.                             | Determined by H7-40  |
| U1-91<br>(154E)<br>Expert | Output Voltage       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the drive internal output voltage reference.<br>Unit: 0.1 V | 200 V class: 10 V = 200 Vrms<br>400 V class: 10 V = 400 Vrms |

◆ U2: Fault Trace

| No. (Hex.)      | Name                 | Description  | MFAO Signal Level          |
|-----------------|----------------------|--|----------------------------|
| U2-01<br>(0080) | Current Fault        | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the fault that the drive has when viewing the monitor.  | No signal output available |
| U2-02<br>(0081) | Previous Fault       | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the fault that occurred most recently.  | No signal output available |
| U2-03<br>(0082) | Freq Reference@Fault | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the frequency reference at the fault that occurred most recently.<br>Use U1-01 [Frequency Reference] to monitor the frequency reference value.<br>Unit: 0.01 Hz   | No signal output available |
| U2-04<br>(0083) | Output Freq @ Fault  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the output frequency at the fault that occurred most recently.<br>Use U1-02 [Output Frequency] to monitor the actual output frequency.<br>Unit: 0.01 Hz   | No signal output available |
| U2-05<br>(0084) | Output Current@Fault | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the output current at the fault that occurred most recently.<br>Use U1-03 [Output Current] to monitor the actual output current. The keypad shows the value of U1-03 in amperes (A).<br>When looking at the monitor through MEMOBUS/Modbus communications, the current is "8192 = drive rated current (A)". Calculate the current from the monitor value that is in at MEMOBUS/Modbus communications using "Numerals being displayed / 8192 × drive rated current (A)."<br>Unit: When the drive model changes, the display units for this parameter also change.<br>• 0.01 A units: B001 - B018, 2001 - 2042, 4001 - 4023<br>• 0.1A units: 2056 - 2082, 4031 - 4060 | No signal output available |
| U2-06<br>(0085) | Motor Speed @ Fault  | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the motor speed at the fault that occurred most recently.<br>Use U1-05 [Motor Speed] to monitor the motor speed.<br>Unit: 0.01 Hz   | No signal output available |
| U2-07<br>(0086) | Output Voltage@Fault | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the output voltage reference at the fault that occurred most recently.<br>Use U1-06 [Output Voltage Ref] to monitor the output voltage reference.<br>Unit: 0.1 V  | No signal output available |
| U2-08<br>(0087) | DC Bus Voltage@Fault | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the DC bus voltage at the fault that occurred most recently.<br>Use U1-07 [DC Bus Voltage] to monitor the DC bus voltage.<br>Unit: 1 V  | No signal output available |
| U2-09<br>(0088) | Output Power @ Fault | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the output power at the fault that occurred most recently.<br>Use U1-08 [Output Power] to monitor the output power.<br>Unit: 0.1 kW   | No signal output available |
| U2-10<br>(0089) | Torque Ref @ Fault   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the torque reference at the fault that occurred most recently as a percentage of the motor rated torque.<br>Use U1-09 [Torque Reference] to monitor the torque reference.<br>Unit: 0.1%   | No signal output available |

| No. (Hex.)   | Name                           | Description  | MFAO Signal Level          |
|--------------|--------------------------------|--|----------------------------|
| U2-11 (008A) | Input Terminal Status @ Fault  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDI terminals at the most recent fault where <math>\overset{!}{I}</math> = ON and <math>\overset{!}{I}</math> = OFF.</p> <p>For example, U2-11 shows  when terminals S1 and S3 are ON.<br/>Use U1-10 [Input Terminal Status] to monitor the actual MFDI terminal status.</p> <p>bit0 : Terminal S1<br/>bit1 : Terminal S2<br/>bit2 : Terminal S3<br/>bit3 : Terminal S4<br/>bit4 : Terminal S5<br/>bit5 : Terminal S6<br/>bit6 : Terminal S7<br/>bit7 : Not used (normal value of [ <math>\overset{!}{I}</math> ]).</p>  | No signal output available |
| U2-12 (008B) | Output Terminal Status @ Fault | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDO terminals at the most recent fault where <math>\overset{!}{I}</math> = ON and <math>\overset{!}{I}</math> = OFF.</p> <p>For example, U2-12 shows  when terminals MA and P2 are ON.<br/>Use U1-11 [Output Terminal Status] to monitor the actual MFDO terminal status.</p> <p>bit0 : Terminal MA/MB-MC<br/>bit1 : Terminal P1-C1<br/>bit2 : Terminal P2-C2<br/>bit3 : Not used (normal value of [ <math>\overset{!}{I}</math> ]).<br/>bit4 : Not used (normal value of [ <math>\overset{!}{I}</math> ]).<br/>bit5 : Not used (normal value of [ <math>\overset{!}{I}</math> ]).<br/>bit6 : Not used (normal value of [ <math>\overset{!}{I}</math> ]).<br/>bit7 : Not used (normal value of [ <math>\overset{!}{I}</math> ]).</p> | No signal output available |
| U2-13 (008C) | Operation Status @ Fault       | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the status of the MFDO terminals at the most recent fault where <math>\overset{!}{I}</math> = ON and <math>\overset{!}{I}</math> = OFF.</p> <p>For example, U2-13 shows  during run.<br/>Use U1-12 [Drive Status] to monitor the actual MFDO terminal status.</p> <p>bit0 : During Run<br/>bit1 : During zero-speed<br/>bit2 : During reverse<br/>bit3 : During fault reset signal input<br/>bit4 : During speed agreement<br/>bit5 : Drive Ready<br/>bit6 : During minor fault detection<br/>bit7 : During fault detection</p>   | No signal output available |
| U2-14 (008D) | Elapsed Time @ Fault           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the drive at the fault that occurred most recently.<br/>Use U4-01 [Cumulative Ope Time] to monitor the cumulative operation time.<br/>Unit: 1 h</p>   | No signal output available |
| U2-15 (07E0) | SFS Output @ Fault             | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the output frequency after soft start at the fault that occurred most recently.<br/>Use U1-16 [SFS Output Frequency] to monitor the output frequency after soft start.<br/>Unit: 0.01 Hz</p>   | No signal output available |
| U2-16 (07E1) | q-Axis Current@Fault           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the q-Axis current of the motor at the fault that occurred most recently.<br/>Use U6-01 [Iq Secondary Current] to monitor the q-Axis current of the motor.<br/>Unit: 0.1 %</p>   | No signal output available |
| U2-17 (07E2) | d-Axis Current@Fault           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the d-Axis current of the motor at the fault that occurred most recently.<br/>Use U6-02 [Id ExcitationCurrent] to monitor the d-Axis current of the motor.<br/>Unit: 0.1 %</p>   | No signal output available |
| U2-19 (07E4) | ControlDeviation@Flt           | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the amount of control axis deviation (<math>\Delta\theta</math>) at the fault that occurred most recently.<br/>Use U6-10 [ContAxisDeviation <math>\Delta\theta</math>] to monitor the actual amount of control axis deviation (<math>\Delta\theta</math>).<br/>Unit: 0.1 °</p>   | No signal output available |


| No. (Hex.)          | Name                 | Description  | MFAO Signal Level          |
|---------------------|----------------------|--|----------------------------|
| U2-20 (008E)        | Heatsink Temp @Fault | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the heatsink temperature at the fault that occurred most recently.<br/>Use U4-08 [Heatsink Temperature] to monitor the temperature of the heatsink.<br/>Unit: 1 °C</p>   | No signal output available |
| U2-21 (1166) Expert | STPo Detect @ Fault  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Monitors conditions to detect STPo [Motor Step-Out Detected] faults. The bit for each condition is shown as <math>I = ON</math> or <math>I = OFF</math>.</p> <p>For example, U2-21 shows  when the drive detects excessive current.</p> <p>bit0 : Excessive current<br/>bit1 : Induced voltage deviation<br/>bit2 : d-axis current deviation<br/>bit3 : Motor lock at startup<br/>bit4 : Acceleration stall continue<br/>bit5 : Acceleration stall repeat<br/>bit6 : Not used (normal value of [ I]).<br/>bit7 : Not used (normal value of [ I]).</p> | No signal output available |

◆ U3: Fault History

| No. (Hex.)                                 | Name                         | Description  | MFAO Signal Level          |
|--|------------------------------|--|----------------------------|
| U3-01 to U3-04 (0090 - 0093) (0800 - 0803) | 1st to 4th MostRecent Fault  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the fault history of the first to fourth most recent faults.</p> <p><b>Note:</b><br/>The drive saves the U3-01 to U3-04 [1st to 4th MostRecent Fault] fault histories to two types of registers at the same time for the MEMOBUS/Modbus communications.</p>  | No signal output available |
| U3-05 to U3-10 (0804 - 0809)               | 5th to 10th MostRecent Fault | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the fault history of the fifth to tenth most recent faults.</p>  | No signal output available |
| U3-11 to U3-14 (0094 - 0097) (080A - 080D) | ElapsedTime@1st to 4thFault  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time when the first to fourth most recent faults occurred.<br/>Unit: 1 h</p> <p><b>Note:</b><br/>The drive saves the U3-11 to U3-14 [ElapsedTime@1st to 4thFault] the cumulative operation time to two types of registers at the same time for the MEMOBUS/Modbus communications.</p> | No signal output available |
| U3-15 to U3-20 (080E - 0813)               | ElapsedTime@5th to 10thFault | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time when the fifth to tenth most recent faults occurred.<br/>Unit: 1 h</p>   | No signal output available |

◆ U4: Maintenance Monitors

| No. (Hex.)   | Name                | Description   | MFAO Signal Level |
|--------------|---------------------|---|-------------------|
| U4-01 (004C) | Cumulative Ope Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the drive.<br/>Use parameter o4-01 [Elapsed Operating Time Setting] to reset this monitor. Use parameter o4-02 [Elapsed Operating Time Selection] to select the cumulative operation times from:</p> <ul style="list-style-type: none"> <li>The time from when the drive is energized until it is de-energized.</li> <li>The time at which the Run command is turned ON.</li> </ul> <p>The maximum value that the monitor will show is 99999. After this value is more than 99999, the drive automatically resets it and starts to count from 0 again.<br/>Unit: 1 h</p> <p><b>Note:</b><br/>The MEMOBUS/Modbus communication data is shown in 10 h units. Use register 0099H for data in 1 h units.</p> | 10 V: 99999 h     |
| U4-02 (0075) | Num of Run Commands | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows how many times that the drive has received a Run command.<br/>Use parameter o4-13 [RUN Command Counter @ Initialize] to reset this monitor. The maximum value that the monitor will show is 65535. After this value is more than 65535, the drive automatically resets it and starts to count from 0 again.<br/>Unit: 1</p>   | 10 V: 65535 times |

| No. (Hex.)      | Name                 | Description   | MFAO Signal Level          |
|-----------------|----------------------|---|----------------------------|
| U4-03<br>(0067) | Cooling Fan Ope Time | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the cooling fans.</p> <p>Use parameter <i>o4-03 [Fan Operation Time Setting]</i> to reset this monitor. The maximum value that the monitor will show is 99999. After this value is more than 99999, the drive automatically resets it and starts to count from 0 again.</p> <p>Unit: 1 h</p> <p><b>Note:</b><br/>The MEMOBUS/Modbus communication data is shown in 10 h units. Use register 009BH for data in 1 h units.</p> | 10 V: 99999 h              |
| U4-04<br>(007E) | Cool Fan Maintenance | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the cumulative operation time of the cooling fans as a percentage of the replacement life of the cooling fans.</p> <p>Use parameter <i>o4-03 [Fan Operation Time Setting]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b><br/>Replace the cooling fans when this monitor is 90%.</p>   | 10 V: 100%                 |
| U4-05<br>(007C) | CapacitorMaintenance | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation time of the electrolytic capacitors for the main circuit and control circuit as a percentage of the replacement life of the electrolytic capacitors.</p> <p>Use parameter <i>o4-05 [Capacitor Maintenance Setting]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b><br/>Replace the electrolytic capacitor when this monitor is 90%.</p>  | 10 V: 100%                 |
| U4-06<br>(07D6) | PreChargeRelayMainte | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation time of the soft charge bypass relay as a percentage of the replacement life of the soft charge bypass relay.</p> <p>Use parameter <i>o4-07 [Softcharge Relay Maintenance Set]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b><br/>Replace the drive when this monitor is 90%.</p>   | 10 V: 100%                 |
| U4-07<br>(07D7) | IGBT Maintenance     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation time of the IGBTs as a percentage of the replacement life of the IGBTs.</p> <p>Set parameter <i>o4-09 [IGBT Maintenance Setting]</i> to reset this monitor.</p> <p>Unit: 1%</p> <p><b>Note:</b><br/>Replace the drive when this monitor is 90%.</p>   | 10 V: 100%                 |
| U4-08<br>(0068) | Heatsink Temperature | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the heatsink temperature of the drive.</p> <p>Unit: 1 °C</p>  | 10 V: 100 °C               |
| U4-09<br>(005E) | LED Check            | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Turns on all of the keypad LEDs to make sure that the LEDs operate correctly.</p> <p>1. With <i>U4-09</i> displayed, press  All LEDs on the keypad will turn on.</p> <p><b>Note:</b><br/>When Safety input 2 CH is open (STo), READY will flash.</p>   | No signal output available |
| U4-10<br>(005C) | kWh, Lower 4 Digits  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the lower 4 digits of the watt hour value for the drive.</p> <p>Unit: 1 kWh</p> <p><b>Note:</b><br/>The watt hour is displayed in 9 digits. Monitor <i>U4-11 [kWh, Upper 5 Digits]</i> shows the upper 5 digits and <i>U4-10</i> shows the lower 4 digits.</p> <p>Example for 12345678.9 kWh:<br/><i>U4-10: 678.9 kWh</i><br/><i>U4-11: 12345 MWh</i></p>   | No signal output available |
| U4-11<br>(005D) | kWh, Upper 5 Digits  | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the upper 5 digits of the watt hour value for the drive.</p> <p>Unit: 1 MWh</p> <p><b>Note:</b><br/>Monitor <i>U4-11</i> shows the upper 5 digits and <i>U4-10 [kWh, Lower 4 Digits]</i> shows the lower 4 digits.</p> <p>Example for 12345678.9 kWh:<br/><i>U4-10: 678.9 kWh</i><br/><i>U4-11: 12345 MWh</i></p>   | No signal output available |

## 11.17 U: Monitors

| No. (Hex.)      | Name                 | Description  | MFAO Signal Level                      |
|-----------------|----------------------|--|--|
| U4-13<br>(07CF) | Peak Hold Current    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the hold value of the peak value (rms) for the drive output current.</p> <p>Use U4-14 [PeakHold Output Freq] to show the drive output frequency at the time that the drive holds the output current.</p> <p>The drive will hold the peak hold current at the next start up and restart of the power supply. The drive keeps the value that was under hold during baseblock (during stop).</p> <p>The keypad shows the value of U4-13 in amperes (A). When looking at the monitor through MEMOBUS/Modbus communications, the current is "8192 = drive rated current (A)". Calculate the current from the monitor value that is in at MEMOBUS/Modbus communications using "Numerals being displayed / 8192 × drive rated current (A).</p> <p>Unit: When the drive model changes, the display units for this parameter also change.</p> <ul style="list-style-type: none"> <li>• 0.01 A units: B001 - B018, 2001 - 2042, 4001 - 4023</li> <li>• 0.1A units: 2056 - 2082, 4031 - 4060</li> </ul> | No signal output available             |
| U4-14<br>(07D0) | PeakHold Output Freq | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the output frequency at which the peak value (rms) of the drive output current is held.</p> <p>The peak hold current can be monitored by U4-13 [Peak Hold Current].</p> <p>The peak hold output frequency will be cleared at the next startup and restart of the power supply. The drive keeps the value that was under hold during baseblock (during stop).</p> <p>Unit: 0.01 Hz</p>  | No signal output available             |
| U4-16<br>(07D8) | Motor oL1 Level      | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the integrated value of oL1 [Motor Overload] as a percentage of oL1 detection level.</p> <p>Unit: 0.1%</p>   | 10 V: 100%                             |
| U4-18<br>(07DA) | Reference Source     | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the selected frequency reference source.</p> <p>The keypad shows the frequency reference source as "XY-<i>nn</i>" as specified by these rules:</p> <p>X: External Reference 1/2 Selection [H1-<i>xx</i> = 2] selection status</p> <ul style="list-style-type: none"> <li>• 1: b1-01 [Frequency Reference Selection 1]</li> <li>• 2: b1-15 [Frequency Reference Selection 2]</li> </ul> <p>Y-<i>nn</i>: Frequency reference source</p> <ul style="list-style-type: none"> <li>• 0-01: Keypad (d1-01 [Reference 1])</li> <li>• 1-00: Analog input (unassigned)</li> <li>• 1-01: MFAI terminal A1</li> <li>• 1-02: MFAI terminal A2</li> <li>• 2-02 to 2-17: Multi-step speed reference (d1-02 to d1-17 [Reference 2 to 16, Jog Reference])</li> <li>• 3-01: MEMOBUS/Modbus communications</li> <li>• 4-01: Communication option card</li> <li>• 5-01: Pulse train input</li> <li>• 7-01: DriveWorksEZ</li> <li>• 9-01: Up/Down command</li> </ul>  | No signal output available             |
| U4-19<br>(07DB) | Modbus FreqRef (dec) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the frequency reference sent to the drive from the MEMOBUS/Modbus communications as a decimal.</p> <p>Unit: 0.01%</p>  | 10 V: Maximum frequency (0 V to +10 V) |
| U4-20<br>(07DC) | Option Freq Ref(dec) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the frequency reference sent to the drive from the communication option as a decimal.</p>  | 10 V: Maximum frequency (0 V to +10 V) |

| No.<br>(Hex.)   | Name                 | Description  | MFAO Signal Level  |
|-----------------|----------------------|--|--|
| U4-21<br>(07DD) | Run Command Source   | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the selected Run command source.<br/>The keypad shows the Run command source as "XY-nn" as specified by these rules:<br/>X: <i>External Reference 1/2 Selection [H1-xx = 2]</i> selection status</p> <ul style="list-style-type: none"> <li>• 1: <i>b1-02 [Run Command Selection 1]</i></li> <li>• 2: <i>b1-16 [Run Command Selection 2]</i></li> </ul> <p>Y: Run command source</p> <ul style="list-style-type: none"> <li>• 0: Keypad</li> <li>• 1: Control circuit terminal</li> <li>• 3: MEMOBUS/Modbus communications</li> <li>• 4: Communication option card</li> <li>• 7: DriveWorksEZ</li> </ul> <p>nn: Run command limit status data</p> <ul style="list-style-type: none"> <li>• 00: No limit status.</li> <li>• 01: The Run command was left ON when the drive stopped in the Programming Mode.</li> <li>• 02: The Run command was left ON when switching from LOCAL Mode to REMOTE Mode.</li> <li>• 03: The Run command is in standby after the drive was energized until the soft charge bypass contactor turns ON.</li> </ul> <p><b>Note:</b><br/>The drive will detect <i>Uv1 [DC Bus Undervoltage]</i> or <i>Uv [Undervoltage]</i> if the soft charge bypass contactor does not turn ON after 10 s.</p> <ul style="list-style-type: none"> <li>• 04: Restart after run stop is prohibited.</li> <li>• 05: Fast stop has been executed using the MFDI terminal. Or, the motor has ramped to stop by pressing the STOP key on the keypad.</li> <li>• 06: <i>b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command]</i> is set.</li> <li>• 07: During baseblock while coast to stop with timer.</li> <li>• 08: Frequency reference is below <i>E1-09 [Minimum Output Frequency]</i> during baseblock.</li> <li>• 09: Waiting for the Enter command from PLC.</li> </ul> | No signal output The keypad shows the Run command source as "XY-nn" as specified by these rules: available |
| U4-22<br>(07DE) | Modbus CmdData (hex) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation signal (register 0001H) sent to the drive from MEMOBUS/Modbus communications as a 4-digit hexadecimal number (zero suppress).<br/>The keypad shows the operation signal as specified by these rules:</p> <ul style="list-style-type: none"> <li>bit 0 : Forward run/Stop</li> <li>bit 1 : Reverse run/Stop</li> <li>bit 2 : External fault</li> <li>bit 3 : Fault Reset Procedure</li> <li>bit 4 : Multi-function input 1</li> <li>bit 5 : Multi-function input 2</li> <li>bit 6 : Multi-function input 3</li> <li>bit 7 : Multi-function input 4</li> <li>bit 8 : Multi-function input 5</li> <li>bit 9 : Multi-function input 6</li> <li>bit A : Multi-function input 7</li> <li>bit B : Not used (normal value of 0).</li> <li>bit C : Not used (normal value of 0).</li> <li>bit D : Not used (normal value of 0).</li> <li>bit E : Not used (normal value of 0).</li> <li>bit F : Not used (normal value of 0).</li> </ul>  | No signal output available   |
| U4-23<br>(07DF) | Option CmdData (hex) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation signal (register 0001H) sent to the drive from MEMOBUS/Modbus communications as a 4-digit hexadecimal number.<br/>The keypad shows the operation signal as specified by these rules:</p> <ul style="list-style-type: none"> <li>bit 0 : Forward run/Stop</li> <li>bit 1 : Reverse run/Stop</li> <li>bit 2 : External fault</li> <li>bit 3 : Fault Reset Procedure</li> <li>bit 4 : Multi-function input 1</li> <li>bit 5 : Multi-function input 2</li> <li>bit 6 : Multi-function input 3</li> <li>bit 7 : Multi-function input 4</li> <li>bit 8 : Multi-function input 5</li> <li>bit 9 : Multi-function input 6</li> <li>bit A : Multi-function input 7</li> <li>bit B : Not used (normal value of 0).</li> <li>bit C : Not used (normal value of 0).</li> <li>bit D : Not used (normal value of 0).</li> <li>bit E : Not used (normal value of 0).</li> <li>bit F : Not used (normal value of 0).</li> </ul>  | No signal output available   |

## 11.17 U: Monitors

| No. (Hex.)   | Name                 | Description  | MFAO Signal Level          |
|--------------|----------------------|--|----------------------------|
| U4-24 (07E6) | Number of Runs (Low) | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the lower 4 digits of the drive run count.</p> <p><b>Note:</b><br/>The drive run count is an 8-digit number. Monitor <i>U4-25 [Number of Runs(High)]</i> shows the upper 4 digits and <i>U4-24</i> shows the lower 4 digits.</p> | No signal output available |
| U4-25 (07E7) | Number of Runs(High) | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the lower 4 digits of the drive run count.</p> <p><b>Note:</b><br/>The drive run count is an 8-digit number. Monitor <i>U4-25</i> shows the upper 4 digits and <i>U4-24 [Number of Runs (Low)]</i> shows the lower 4 digits.</p> | No signal output available |
| U4-52 (1592) | Torque Ref from Comm | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the torque reference that the drive received from a serial communication option card or from MEMOBUS/Modbus communications as a decimal number.</p> <p>Unit: 0.1%</p>  | 10 V: 100% (0 V to +10 V)  |

### ◆ U5: PID Monitors

| No. (Hex.)          | Name                   | Description   | MFAO Signal Level                      |
|---------------------|------------------------|---|--|
| U5-01 (0057)        | PID Feedback           | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the PID control feedback value. Parameter <i>b5-20 [PID Unit Selection]</i> sets the display units.</p> <p>Unit: 0.01%</p>  | 10 V: Maximum frequency (0 V to +10 V) |
| U5-02 (0063)        | PID Input              | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the change between the PID setpoint and PID feedback (the quantity of PID input) as a percentage of the maximum output frequency.</p> <p>Unit: 0.01%</p>  | 10 V: Maximum frequency (0 V to +10 V) |
| U5-03 (0064)        | PID Output             | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the PID control output as a percentage of the maximum output frequency.</p> <p>Unit: 0.01%</p>  | 10 V: Maximum frequency (0 V to +10 V) |
| U5-04 (0065)        | PID Setpoint           | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the PID setpoint. Parameter <i>b5-20 [PID Unit Selection]</i> sets the display units.</p> <p>Unit: 0.01%</p>  | 10 V: Maximum frequency (0 V to +10 V) |
| U5-05 (07D2)        | PID DifferentialFdbk   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the PID differential feedback value as a percentage of the maximum output frequency.</p> <p>Set <i>H3-02 or H3-10 = 16 [MFAI Function Selection = Differential PID Feedback]</i> to enable this monitor.</p> <p>Unit: 0.01%</p>   | 10 V: Maximum frequency (0 V to +10 V) |
| U5-06 (07D3)        | PID Fdbk-Diff PID Fdbk | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the difference from calculating <i>U5-05 - U5-01 [PID DifferentialFdbk] - [PID Feedback]</i>.</p> <p>Unit: 0.01%</p> <p><b>Note:</b><br/><i>U5-01 [PID Feedback] = U5-06</i> when <i>H3-02 or H3-10 ≠ 16 [MFAI Function Selection ≠ Differential PID Feedback]</i>.</p> | 10 V: Maximum frequency (0 V to +10 V) |
| U5-21 (0872) Expert | Energy Save Coeff Ki   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the energy-saving coefficient Ki value for PM.</p> <p>Unit: 0.01</p>  | No signal output available             |
| U5-22 (0873) Expert | Energy Save Coeff Kt   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the energy-saving coefficient Kt value for PM.</p> <p>Unit: 0.01</p>  | No signal output available             |
| U5-99 (1599)        | PID Setpoint Command   | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>Shows the PID setpoint command. Parameter <i>b5-20 [PID Unit Selection]</i> sets the display units.</p> <p>Unit: 0.01%</p>  | 10 V: Maximum frequency (0 V to +10 V) |



## ◆ U6: Operation Status Monitors

| No. (Hex.)                | Name                   | Description  | MFAO Signal Level  |
|---------------------------|------------------------|--|--|
| U6-01<br>(0051)           | Iq Secondary Current   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the value calculated for the motor secondary current (q-Axis) as a percentage of the motor rated secondary current.<br>Unit: 0.1%   | 10 V: Motor secondary rated current (0 V to +10 V)                             |
| U6-02<br>(0052)           | Id ExcitationCurrent   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the value calculated for the motor excitation current (d-Axis) as a percentage of the motor rated secondary current.<br>Unit: 0.1%  | 10 V: Motor secondary rated current (0 V to +10 V)                             |
| U6-03<br>(0054)           | ASR Input              | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the ASR input value as a percentage of the maximum frequency.<br>Unit: 0.01%  | 10 V: Maximum frequency (0 V to +10 V)   |
| U6-04<br>(0055)           | ASR Output             | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the ASR output value as a percentage of the motor rated secondary current.<br>Unit: 0.01%   | 10 V: Motor secondary rated current (0 V to +10 V)                             |
| U6-05<br>(0059)           | OutputVoltageRef: Vq   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the drive internal voltage reference for motor secondary current control (q-Axis).<br>Unit: 0.1 V   | 200 V class: 10 V = 200 Vrms<br>400 V class: 10 V = 400 Vrms<br>(0 V to +10 V) |
| U6-06<br>(005A)           | OutputVoltageRef: Vd   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the drive internal voltage reference for motor excitation current control (d-Axis).<br>Unit: 0.1 V  | 200 V class: 10 V = 200 Vrms<br>400 V class: 10 V = 400 Vrms<br>(0 V to +10 V) |
| U6-07<br>(005F)<br>Expert | q-Axis ACR Output      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the output value for current control related to motor secondary current (q axis).<br>Unit: 0.1%   | 200 V class: 10 V = 200 Vrms<br>400 V class: 10 V = 400 Vrms<br>(0 V to +10 V) |
| U6-08<br>(0060)<br>Expert | d-Axis ACR Output      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the output value for current control related to motor excitation current (d axis).<br>Unit: 0.1%  | 200 V class: 10 V = 200 Vrms<br>400 V class: 10 V = 400 Vrms<br>(0 V to +10 V) |
| U6-09<br>(07C0)<br>Expert | AdvPhase Compens Δθemp | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Displays the data on forward phase compensation for the calculation results of the amount of control axis deviation.<br>Unit: 1 °   | 5 V: 180 ° (0 V to +10 V)  |
| U6-10<br>(07C1)<br>Expert | ContAxisDeviation Δθ   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the deviation between the γδ-Axis that the drive uses for motor control and the dq-Axis.<br>Unit: 0.1 °   | 5 V: 180 ° (0 V to +10 V)  |
| U6-14<br>(07CB)<br>Expert | MagPolePosition(Obs)   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the value of the flux position estimation.<br>Unit: 0.1 °   | 10 V: 180 ° (0 V to +10 V)   |
| U6-17<br>(07D1)<br>Expert | Energy Save Coeff      | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the total time of direction of motor rotation detections for Speed Estimation Speed Searches. This value adjusts b3-26 [Direction Determination Level].<br><b>Note:</b><br>Upper limit is +32767 and lower limit is -32767. | No signal output available   |
| U6-20<br>(07D4)           | UP/DOWN 2 Bias Value   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the bias value used to adjust the frequency reference.<br>Unit: 0.1%  | 10 V: Maximum Frequency  |
| U6-21<br>(07D5)           | Offset Frequency       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the total value of d7-01 to d7-03 [Offset Frequency 1 to 3] selected with Add Offset Frequency 1 to 3 [H1-xx = 44 to 46].<br>Unit: 0.1%   | 10 V: Maximum Frequency  |
| U6-31<br>(007B)           | TorqueDetect Monitor   | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Monitors the torque reference or the output current after applying the filter set to L6-07 [Torque Detection Filter Time].<br>Unit: 0.1%  | 10 V:100%  |
| U6-36<br>(0720)<br>Expert | Comm Errors-Host       | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Shows the number of inter-CPU communication errors. When you de-energize the drive, this value resets to 0.   | No signal output available   |

## 11.17 U: Monitors

| No. (Hex.)                                    | Name                     | Description  | MFAO Signal Level          |
|---|--------------------------|--|----------------------------|
| U6-37<br>(0721)<br>Expert                     | Comm Errors-Host         | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the number of inter-CPU communication errors. When you de-energize the drive, this value resets to 0.   | No signal output available |
| U6-57<br>(07C4)                               | PolePolarityDeterVal     | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the change from the integrated current when the drive finds the polarity.<br>Unit: 1<br><b>Note:</b><br>If the change from the integrated current is less than 819, increase n8-84 [Polarity Detection Current]. U6-57 = 8192 is equivalent to the motor rated current. | No signal output available |
| U6-80 to U6-83<br>(07B0 - 07B3)               | Option IP Address 1 to 4 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the currently available local IP Address.<br>• U6-80: 1st octet<br>• U6-81: 2nd octet<br>• U6-82: 3rd octet<br>• U6-83: 4th octet   | No signal output available |
| U6-84 to U6-87<br>(07B4 - 07B7)               | Online Subnets 1 to 4    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the currently available subnet mask.<br>• U6-84: 1st octet<br>• U6-85: 2nd octet<br>• U6-86: 3rd octet<br>• U6-87: 4th octet  | No signal output available |
| U6-88 to U6-91<br>(07B8, 07B9,<br>07F0, 07F1) | Online Gateways 1 to 4   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the currently available gateway address.<br>• U6-88: 1st octet<br>• U6-89: 2nd octet<br>• U6-90: 3rd octet<br>• U6-91: 4th octet  | No signal output available |
| U6-92<br>(07F2)                               | Online Speed             | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the currently available communications speed.<br>10: 10 Mbps<br>100: 100 Mbps   | No signal output available |
| U6-93<br>(07F3)                               | Online Duplex            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the currently available Duplex setting.   | No signal output available |
| U6-98<br>(07F8)                               | First Fault              | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the contents of the most recent communication options fault (DeviceNet, Modbus TCP/IP, EtherNet/IP).  | No signal output available |
| U6-99<br>(07F9)                               | Current Fault            | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the contents of current fault from communication options (DeviceNet, Modbus TCP/IP, EtherNet/IP).   | No signal output available |

## ◆ U8: DriveWorksEZ Monitors

| No. (Hex.)      | Name           | Description   | MFAO Signal Level |
|-----------------|----------------|---|-------------------|
| U8-01<br>(1950) | DWEZ Monitor 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 1. (Display range: 0.00% to 999.99%)<br>Unit: 0.01% | 10 V = 100%       |
| U8-02<br>(1951) | DWEZ Monitor 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 2. (Display range: 0.00% to 999.99%)<br>Unit: 0.01% | 10 V = 100%       |
| U8-03<br>(1952) | DWEZ Monitor 3 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 3. (Display range: 0.00% to 999.99%)<br>Unit: 0.01% | 10 V = 100%       |
| U8-04<br>(1953) | DWEZ Monitor 4 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 4. (Display range: 0.00% to 999.99%)<br>Unit: 0.01% | 10 V = 100%       |
| U8-05<br>(1954) | DWEZ Monitor 5 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 5. (Display range: 0.00% to 999.99%)<br>Unit: 0.01% | 10 V = 100%       |
| U8-06<br>(1955) | DWEZ Monitor 6 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 6. (Display range: 0.00% to 999.99%)<br>Unit: 0.01% | 10 V = 100%       |

| No.<br>(Hex.)   | Name              | Description   | MFAO Signal Level          |
|-----------------|-------------------|---|----------------------------|
| U8-07<br>(1956) | DWEZ Monitor 7    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 7. (Display range: -999.9% to +999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-08<br>(1957) | DWEZ Monitor 8    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 8. (Display range: -999.9% to +999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-09<br>(1958) | DWEZ Monitor 9    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 9. (Display range: -999.9% to +999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-10<br>(1959) | DWEZ Monitor 10   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 10.   | No signal output available |
| U8-11<br>(195A) | DWEZ Version 1    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the Upper three digits of the user ID. When you click the setting button on the title bar of the PC tool to open the setting screen, you can confirm the user ID with the primary user ID display. | No signal output available |
| U8-12<br>(195B) | DWEZ Version 2    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the lower five digits of the user ID. When you click the setting button on the title bar of the PC tool to open the setting screen, you can confirm the user ID with the primary user ID display.  | No signal output available |
| U8-13<br>(195C) | DWEZ Version 3    | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the software ID.   | No signal output available |
| U8-18<br>(1961) | DWEZ Platform Ver | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows the DriveWorksEZ platform version.   | No signal output available |
| U8-21<br>(1964) | DWEZ Monitor 21   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 21. (Display range: -999.9% to +999.99%)<br>Unit: 0.01%   | 10 V = 100%                |
| U8-22<br>(1965) | DWEZ Monitor 22   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 22.<br>Unit: The number of decimal points shown is set with Q2-21.  | 10 V = 100%                |
| U8-23<br>(1966) | DWEZ Monitor 23   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 23.<br>Unit: The number of decimal points shown is set with Q2-22.  | 10 V = 100%                |
| U8-24<br>(1967) | DWEZ Monitor 24   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 24.<br>Unit: The number of decimal points shown is set with Q2-23.  | 10 V = 100%                |
| U8-25<br>(1968) | DWEZ Monitor 25   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 25.<br>Unit: The number of decimal points shown is set with Q2-24.  | 10 V = 100%                |
| U8-31<br>(196E) | DWEZ Monitor 31   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 31. (Display range: 0.00% to 999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-32<br>(196F) | DWEZ Monitor 32   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 32. (Display range: 0.00% to 999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-33<br>(1970) | DWEZ Monitor 33   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 33. (Display range: 0.00% to 999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-34<br>(1971) | DWEZ Monitor 34   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 34. (Display range: 0.00% to 999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-35<br>(1972) | DWEZ Monitor 35   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 35. (Display range: 0.00% to 999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-36<br>(1973) | DWEZ Monitor 36   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 36. (Display range: 0.00% to 999.99%)<br>Unit: 0.01%  | 10 V = 100%                |
| U8-37<br>(1974) | DWEZ Monitor 37   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 37. (Display range: -999.9% to +999.99%)<br>Unit: 0.01%   | 10 V = 100%                |
| U8-38<br>(1975) | DWEZ Monitor 38   | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Shows DWEZ Monitor 38. (Display range: -999.9% to +999.99%)<br>Unit: 0.01%   | 10 V = 100%                |

## 11.17 U: Monitors

| No. (Hex.)      | Name                    | Description  | MFAO Signal Level          |
|-----------------|-------------------------|--|----------------------------|
| U8-39<br>(1976) | DWEZ Monitor 39         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows DWEZ Monitor 39. (Display range: -999.9% to +999.99%)<br/>Unit: 0.01%</p>  | 10 V = 100%                |
| U8-40<br>(1977) | DWEZ Monitor 40         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows DWEZ Monitor 40.</p>   | No signal output available |
| U8-51<br>(1982) | DWEZ Monitor 51         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows DWEZ Monitor 51. (Display range: -999.9% to +999.99%)<br/>Unit: 0.01%</p>  | 10 V = 100%                |
| U8-52<br>(1983) | DWEZ Monitor 52         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows DWEZ Monitor 52.<br/>Unit: The number of decimal points shown is set with Q2-41.</p>   | 10 V = 100%                |
| U8-53<br>(1984) | DWEZ Monitor 53         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows DWEZ Monitor 53.<br/>Unit: The number of decimal points shown is set with Q2-42.</p>   | 10 V = 100%                |
| U8-54<br>(1985) | DWEZ Monitor 54         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows DWEZ Monitor 54.<br/>Unit: The number of decimal points shown is set with Q2-43.</p>   | 10 V = 100%                |
| U8-55<br>(1986) | DWEZ Monitor 55         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows DWEZ Monitor 55.<br/>Unit: The number of decimal points shown is set with Q2-44.</p>   | 10 V = 100%                |
| U8-60<br>(198B) | RemoteIO Status         | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation status of Remote IO as 1 (ON) and 0 (OFF). If the DriveWorksEZ MEMOBUS master active signal is ON, for example, the monitor shows <i>U8-60 = 00000001</i>.</p> <p>bit 0 : Bit 0: DriveWorksEZ MEMOBUS Master Active<br/>bit 1 : Not used (normal value of 0)<br/>bit 2 : Not used (normal value of 0)<br/>bit 3 : Not used (normal value of 0)<br/>bit 4 : Not used (normal value of 0)<br/>bit 5 : Not used (normal value of 0)<br/>bit 6 : Not used (normal value of 0)<br/>bit 7 : Not used (normal value of 0)</p> | No signal output available |
| U8-61<br>(198C) | RemoteDI Monitor 0-7bit | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation status of Remote DI1 to DI8 as 1 (ON) and 0 (OFF). If Remote DI1 and DI2 are ON, for example, the monitor shows <i>U8-61 = 00000011</i>.</p> <p>bit 0 : Remote DI1<br/>bit 1 : Remote DI2<br/>bit 2 : Remote DI3<br/>bit 3 : Remote DI4<br/>bit 4 : Remote DI5<br/>bit 5 : Remote DI6<br/>bit 6 : Remote DI7<br/>bit 7 : Remote DI8</p>  | No signal output available |
| U8-62<br>(198D) | RemoteDI Monitor 8-Fbit | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation status of Remote DI9 to DI16 as 1 (ON) and 0 (OFF). If Remote DI9 and DI10 are ON, for example, the monitor shows <i>U8-62 = 00000011</i>.</p> <p>bit 0 : Remote DI9<br/>bit 1 : Remote DI10<br/>bit 2 : Remote DI11<br/>bit 3 : Remote DI12<br/>bit 4 : Remote DI13<br/>bit 5 : Remote DI14<br/>bit 6 : Remote DI15<br/>bit 7 : Remote DI16</p>   | No signal output available |

| No.<br>(Hex.)   | Name                    | Description  | MFAO Signal Level          |
|-----------------|-------------------------|--|----------------------------|
| U8-63<br>(198E) | RemoteDO Monitor 0-7bit | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation status of Remote DO1 to DO8 as 1 (ON) and 0 (OFF). If Remote DO1 and DO2 are ON, for example, the monitor shows <i>U8-63 = 0000011</i>.</p> <p>bit 0 : Remote DO1<br/> bit 1 : Remote DO2<br/> bit 2 : Remote DO3<br/> bit 3 : Remote DO4<br/> bit 4 : Remote DO5<br/> bit 5 : Remote DO6<br/> bit 6 : Remote DO7<br/> bit 7 : Remote DO8</p>          | No signal output available |
| U8-64<br>(198F) | RemoteDO Monitor 8-Fbit | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Shows the operation status of Remote DO9 to DO16 as 1 (ON) and 0 (OFF). If Remote DO9 and DO10 are ON, for example, the monitor shows <i>U8-64 = 0000011</i>.</p> <p>bit 0 : Remote DO9<br/> bit 1 : Remote DO10<br/> bit 2 : Remote DO11<br/> bit 3 : Remote DO12<br/> bit 4 : Remote DO13<br/> bit 5 : Remote DO14<br/> bit 6 : Remote DO15<br/> bit 7 : Remote DO16</p> | No signal output available |

## 11.18 Parameters that Change from the Default Settings with A1-02 [Control Method Selection]

The values for the parameters in these tables depend on the values for parameter *A1-02*. When you change the setting for *A1-02*, the default settings will change.

Table 11.1 A1-02 = 0, 2 [V/f, OLV]

| No.   | Name                             | Range                         | Unit    | Control Method (A1-02 Setting) |                    |
|-------|----------------------------------|-------------------------------|---------|--------------------------------|--------------------|
|       |                                  |                               |         | V/f (0)                        | OLV (2)            |
| b2-01 | DC Injection/Zero SpeedThreshold | 0.0 - 10.0                    | 0.1 Hz  | 0.5                            | 0.5                |
| b2-04 | DC Inject Braking Time at Stop   | 0.00 - 10.00                  | 0.01 s  | 0.50                           | 0.50               |
| b3-01 | Speed Search at Start Selection  | 0 - 1                         | 1       | 0                              | 0                  |
| b3-02 | SpeedSearch Deactivation Current | 0 - 200                       | 1%      | 120                            | 100                |
| b3-08 | Speed Estimation ACR P Gain      | 0.00 - 6.00                   | 0.01    | 0.50 <sup>*1</sup>             | 0.50 <sup>*1</sup> |
| b3-09 | Speed Estimation ACR I Time      | 0.0 - 1000.0                  | 0.1 ms  | 2.0                            | 2.0                |
| b3-14 | Bi-directional Speed Search      | 0 - 1                         | 1       | 0                              | 0                  |
| b5-15 | PID Sleep Function Start Level   | 0.0 - 400.0                   | 0.1 Hz  | 0.0                            | 0.0                |
| b6-01 | Dwell Reference at Start         | 0.0 - 400.0                   | 0.1 Hz  | 0.0                            | 0.0                |
| b6-03 | Dwell Reference at Stop          | 0.0 - 400.0                   | 0.1 Hz  | 0.0                            | 0.0                |
| b8-02 | Energy Saving Gain               | 0.0 - 10.0                    | 0.1     | -                              | 0.7                |
| b8-03 | Energy Saving Filter Time        | 0.00 - 10.00                  | 0.01 s  | -                              | 0.50               |
| b8-19 | E-Save Search Injection Freq     | 10 - 300                      | 1 Hz    | 100                            | 100                |
| C1-11 | Accel/Decel Time Switchover Freq | 0.0 - 400.0                   | 0.1 Hz  | 0.0                            | 0.0                |
| C2-01 | S-Curve Time @ Start of Accel    | 0.00 - 10.00                  | 0.01 s  | 0.20                           | 0.20               |
| C3-01 | Slip Compensation Gain           | 0.0 - 2.5                     | 0.1     | 0.0                            | 1.0                |
| C3-02 | Slip Compensation Delay Time     | 0 - 10000                     | 1 ms    | 2000                           | 200                |
| C4-01 | Torque Compensation Gain         | 0.00 - 2.50                   | 0.01    | 1.00                           | 1.00               |
| C4-02 | Torque Compensation Delay Time   | 0 - 10000                     | 1 ms    | 200                            | 20                 |
| C5-01 | ASR Proportional Gain 1          | 0.00 - 300.00                 | 0.01    | -                              | -                  |
| C5-02 | ASR Integral Time 1              | 0.000 - 60.000                | 0.001 s | -                              | -                  |
| C5-03 | ASR Proportional Gain 2          | 0.00 - 300.00                 | 0.01    | -                              | -                  |
| C5-04 | ASR Integral Time 2              | 0.000 - 10.000                | 0.001 s | -                              | -                  |
| C5-06 | ASR Delay Time                   | 0.000 - 0.500                 | 0.001 s | -                              | -                  |
| C5-07 | ASR Gain Switchover Frequency    | 0.0 - 400.0                   | 0.1 Hz  | 0.0Hz                          | 0.0Hz              |
| C6-02 | Carrier Frequency Selection      | 1 - F                         | 1       | 1 <sup>*2</sup>                | 1 <sup>*2</sup>    |
| d3-01 | Jump Frequency 1                 | 0.0 - 400.0                   | 0.1 Hz  | 0.0                            | 0.0                |
| d3-02 | Jump Frequency 2                 | 0.0 - 400.0                   | 0.1 Hz  | 0.0                            | 0.0                |
| d3-03 | Jump Frequency 3                 | 0.0 - 400.0                   | 0.1 Hz  | 0.0                            | 0.0                |
| d3-04 | Jump Frequency Width             | 0.0 - 20.0                    | 0.1 Hz  | 1.0                            | 1.0                |
| E1-04 | Maximum Output Frequency         | 40.0 - 400.0 <sup>*2 *3</sup> | 0.1 Hz  | 60.0 <sup>*4</sup>             | 60.0               |
| E1-05 | Maximum Output Voltage           | 0.0 - 255.0 <sup>*5</sup>     | 0.1 V   | 200.0 <sup>*4</sup>            | 200.0              |
| E1-06 | Base Frequency                   | 0.0 - 400.0 <sup>*3</sup>     | 0.1 Hz  | 60.0 <sup>*4</sup>             | 60.0               |

## 11.18 Parameters that Change from the Default Settings with A1-02 [Control Method Selection]

| No.   | Name                             | Range              | Unit    | Control Method (A1-02 Setting) |         |
|-------|----------------------------------|--------------------|---------|--------------------------------|---------|
|       |                                  |                    |         | V/f (0)                        | OLV (2) |
| E1-07 | Mid Point A Frequency            | 0.0 - 400.0 *3     | 0.1 Hz  | 3.0 *4                         | 3.0     |
| E1-08 | Mid Point A Voltage              | 0.0 - 255.0 *5     | 0.1 V   | 15.0 *4                        | 11.0    |
| E1-09 | Minimum Output Frequency         | 0.0 - 400.0 *3     | 0.1 Hz  | 1.5 *4                         | 0.5     |
| E1-10 | Minimum Output Voltage           | 0.0 - 255.0 *5     | 0.1 V   | 9.0 *4                         | 2.0     |
| F1-09 | Overspeed Detection Delay Time   | 0.0 - 2.0          | 0.1 s   | -                              | -       |
| L1-01 | Motor Overload (oL1) Protection  | 0 - 4              | 1       | 1                              | 1       |
| L2-31 | KEB Start Voltage Offset Level   | 0 - 100 *5         | 1 V     | 0                              | 0       |
| L3-05 | Stall Prevention during RUN      | 0 - 3              | 1       | 1                              | 1       |
| L3-20 | DC Bus Voltage Adjustment Gain   | 0.00 - 5.00        | 0.01    | 1.00                           | 0.30    |
| L3-21 | OVSUPPRESSION Accel/Decel P Gain | 0.10 - 10.00       | 0.01    | 1.00                           | 1.00    |
| L3-36 | Current Suppression Gain@Accel   | 0.0 - 100.0        | 0.1     | 10.0                           | 20.0    |
| L4-01 | Speed Agree Detection Level      | 0.0 - 400.0 *6     | 0.1     | 0.0 Hz                         | 0.0 Hz  |
| L4-02 | Speed Agree Detection Width      | 0.0 - 20.0         | 0.1     | 2.0 Hz                         | 2.0 Hz  |
| L4-03 | Speed Agree Detection Level(+/-) | -400.0 - +400.0 *7 | 0.1     | 0.0 Hz                         | 0.0 Hz  |
| L4-04 | Speed Agree Detection Width(+/-) | 0.0 - 20.0         | 0.1     | 2.0 Hz                         | 2.0 Hz  |
| L8-40 | Carrier Freq Reduction Off-Delay | 0.00 - 2.00        | 0.01 s  | 0.50                           | 0.50    |
| L8-90 | STPo Detection Level (Low Speed) | 0 - 5000           | 1       | -                              | -       |
| n5-04 | Speed Response Frequency         | 0.00 - 500.00      | 0.00 Hz | -                              | -       |
| n8-35 | Initial Pole Detection Method    | 0 - 2              | 1       | -                              | -       |
| n8-51 | Pull-in Current @ Acceleration   | 0 - 200%           | 1       | 0                              | 0       |
| o1-03 | Frequency Display Unit Selection | 0 - 3              | 1       | 0                              | 0       |
| o1-04 | V/f Pattern Display Unit         | 0 - 1              | 1       | -                              | -       |

- \*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.
- \*2 The default setting changes when the setting of C6-01 [Normal / Heavy Duty Selection] changes.
- \*3 The setting range changes when the setting of E5-01 [PM Motor Code Selection] changes when A1-02 = 5 [OLV/PM].
- \*4 The default setting changes when the drive model and E1-03 [V/f Pattern Selection] change.
- \*5 This is the value for 200 V class drives. Double the value for 400 V class drives.
- \*6 When A1-02 = 5 [OLV/PM], the maximum value of the setting range is 100.0.
- \*7 When A1-02 = 5 [OLV/PM], the setting range is -100.0 to +100.0.

**Table 11.2 A1-02 = 5, 6, 8 [OLV/PM, AOLV/PM, EZOLV]**

| No.   | Name                             | Range        | Unit   | Control Method (A1-02 Setting) |             |           |
|-------|----------------------------------|--------------|--------|--------------------------------|-------------|-----------|
|       |                                  |              |        | OLV/PM (5)                     | AOLV/PM (6) | EZOLV (8) |
| b2-01 | DC Injection/Zero SpeedThreshold | 0.0 - 10.0   | 0.1    | 0.5 Hz                         | 1.0%        | 0.5Hz     |
| b2-04 | DC Inject Braking Time at Stop   | 0.00 - 10.00 | 0.01 s | 0.00                           | 0.00        | 0.00      |
| b3-01 | Speed Search at Start Selection  | 0 - 1        | 1      | 0                              | 0           | 0         |
| b3-02 | SpeedSearch Deactivation Current | 0 - 200      | 1%     | -                              | -           | -         |
| b3-08 | Speed Estimation ACR P Gain      | 0.00 - 6.00  | 0.01   | 0.30                           | 0.30        | 0.30      |

## 11.18 Parameters that Change from the Default Settings with A1-02 [Control Method Selection]

| No.   | Name                             | Range           | Unit    | Control Method (A1-02 Setting) |                     |                     |
|-------|----------------------------------|-----------------|---------|--------------------------------|---------------------|---------------------|
|       |                                  |                 |         | OLV/PM (5)                     | AOLV/PM (6)         | EZOLV (8)           |
| b3-09 | Speed Estimation ACR I Time      | 0.0 - 1000.0    | 0.1 ms  | 4.0                            | 4.0                 | 4.0                 |
| b3-14 | Bi-directional Speed Search      | 0 - 1           | 1       | -                              | -                   | 0                   |
| b5-15 | PID Sleep Function Start Level   | 0.0 - 400.0 *1  | 0.1     | 0.0 Hz                         | 0.0%                | 0.0%                |
| b6-01 | Dwell Reference at Start         | 0.0 - 400.0 *1  | 0.1     | 0.0 Hz                         | 0.0%                | 0.0%                |
| b6-03 | Dwell Reference at Stop          | 0.0 - 400.0 *1  | 0.1     | 0.0 Hz                         | 0.0%                | 0.0%                |
| b8-02 | Energy Saving Gain               | 0.0 - 10.0      | 0.1     | -                              | -                   | -                   |
| b8-03 | Energy Saving Filter Time        | 0.00 - 10.00    | 0.01 s  | -                              | -                   | -                   |
| b8-19 | E-Save Search Injection Freq     | 10 - 300        | 1 Hz    | 100                            | 100                 | 20                  |
| C1-11 | Accel/Decel Time Switchover Freq | 0.0 - 400.0 *1  | 0.1     | 0.0 Hz                         | 0.0%                | 0.0%                |
| C2-01 | S-Curve Time @ Start of Accel    | 0.00 - 10.00    | 0.01 s  | 1.00                           | 0.20                | 1.00                |
| C3-01 | Slip Compensation Gain           | 0.0 - 2.5       | 0.1     | -                              | -                   | 0                   |
| C3-02 | Slip Compensation Delay Time     | 0 - 10000       | 1 ms    | -                              | -                   | 200                 |
| C4-01 | Torque Compensation Gain         | 0.00 - 2.50     | 0.01    | 0.00                           | -                   | 0.00                |
| C4-02 | Torque Compensation Delay Time   | 0 - 10000       | 1 ms    | 100                            | -                   | 100                 |
| C5-01 | ASR Proportional Gain 1          | 0.00 - 300.00   | 0.01    | 10.00                          | 10.00               | 10.00               |
| C5-02 | ASR Integral Time 1              | 0.000 - 60.000  | 0.001 s | 0.500                          | 0.500               | 0.500               |
| C5-03 | ASR Proportional Gain 2          | 0.00 - 300.00   | 0.01    | -                              | 10.00               | 10.00               |
| C5-04 | ASR Integral Time 2              | 0.000 - 10.000  | 0.001 s | -                              | 0.500               | 0.500               |
| C5-06 | ASR Delay Time                   | 0.000 - 0.500   | 0.001 s | -                              | 0.016               | 0.004               |
| C5-07 | ASR Gain Switchover Frequency    | 0.0 - 400.0 *1  | 0.1     | 0.0Hz                          | 0.0%                | 0.0%                |
| C6-02 | Carrier Frequency Selection      | 1 - F           | 1       | 2                              | 2                   | 2                   |
| d3-01 | Jump Frequency 1                 | 0.0 - 400.0 *1  | 0.1     | 0.0 Hz                         | 0.0%                | 0.0%                |
| d3-02 | Jump Frequency 2                 | 0.0 - 400.0 *1  | 0.1     | 0.0 Hz                         | 0.0%                | 0.0%                |
| d3-03 | Jump Frequency 3                 | 0.0 - 400.0 *1  | 0.1     | 0.0 Hz                         | 0.0 %               | 0.0 %               |
| d3-04 | Jump Frequency Width             | 0.0 - 20.0 *2   | 0.1     | 1.0 Hz                         | 1.0 %               | 1.0 %               |
| E1-04 | Maximum Output Frequency         | 40.0 - 400.0 *3 | 0.1 Hz  | Determined by E5-01            | Determined by E5-01 | Determined by E5-01 |
| E1-05 | Maximum Output Voltage           | 0.0 - 255.0 *4  | 0.1 V   | Determined by E5-01            | Determined by E5-01 | Determined by E5-01 |
| E1-06 | Base Frequency                   | 0.0 - 400.0     | 0.1 Hz  | Determined by E5-01            | Determined by E5-01 | Determined by E5-01 |
| E1-07 | Mid Point A Frequency            | 0.0 - 400.0     | 0.1 Hz  | -                              | -                   | -                   |
| E1-08 | Mid Point A Voltage              | 0.0 - 255.0 *4  | 0.1 V   | -                              | -                   | -                   |
| E1-09 | Minimum Output Frequency         | 0.0 - 400.0     | 0.1 Hz  | Determined by E5-01            | Determined by E5-01 | Determined by E5-01 |
| E1-10 | Minimum Output Voltage           | 0.0 - 255.0 *4  | 0.1 V   | -                              | -                   | -                   |
| F1-09 | Overspeed Detection Delay Time   | 0.0 - 2.0       | 0.1 s   | -                              | 0.0                 | -                   |
| L1-01 | Motor Overload (oL1) Protection  | 0 - 4           | 1       | 4                              | 4                   | Determined by E9-01 |
| L2-31 | KEB Start Voltage Offset Level   | 0 - 100 *4      | 1 V     | 50                             | 50                  | 50                  |
| L3-05 | Stall Prevention during RUN      | 0 - 3           | 1       | 1                              | -                   | 3                   |
| L3-20 | DC Bus Voltage Adjustment Gain   | 0.00 - 5.00     | 0.01    | 0.65                           | 0.65                | 0.65                |



## 11.18 Parameters that Change from the Default Settings with A1-02 [Control Method Selection]

| No.   | Name                             | Range              | Unit    | Control Method (A1-02 Setting) |             |           |
|-------|----------------------------------|--------------------|---------|--------------------------------|-------------|-----------|
|       |                                  |                    |         | OLV/PM (5)                     | AOLV/PM (6) | EZOLV (8) |
| L3-21 | OVSUPPRESSION Accel/Decel P Gain | 0.10 - 10.00       | 0.01    | 1.00                           | 1.00        | 1.00      |
| L3-36 | Current Suppression Gain@Accel   | 0.0 - 100.0        | 0.1     | -                              | -           | -         |
| L4-01 | Speed Agree Detection Level      | 0.0 - 400.0 *1     | 0.1     | 0.0 Hz                         | 0.0%        | 0.0%      |
| L4-02 | Speed Agree Detection Width      | 0.0 - 20.0 *2      | 0.1     | 2.0 Hz                         | 4.0%        | 4.0%      |
| L4-03 | Speed Agree Detection Level(+/-) | -400.0 - +400.0 *5 | 0.1     | 0.0 Hz                         | 0.0%        | 0.0%      |
| L4-04 | Speed Agree Detection Width(+/-) | 0.0 - 20.0 *2      | 0.1     | 2.0 Hz                         | 4.0%        | 4.0%      |
| L8-40 | Carrier Freq Reduction Off-Delay | 0.00 - 2.00        | 0.01 s  | 0.00                           | 0.00        | 0.00      |
| L8-90 | STPo Detection Level (Low Speed) | 0 - 5000           | 1       | 0                              | 80          | -         |
| n5-04 | Speed Response Frequency         | 0.00 - 500.00      | 0.00 Hz | -                              | 20.00       | -         |
| n8-35 | Initial Pole Detection Method    | 0 - 2              | 1       | 0                              | 1           | -         |
| n8-51 | Pull-in Current @ Acceleration   | 0 - 200%           | 1       | 50%                            | 0           | 80%       |
| o1-03 | Frequency Display Unit Selection | 0 - 3              | 1       | 0                              | 1           | 1         |
| o1-04 | V/f Pattern Display Unit         | 0 - 1              | 1       | -                              | 1           | -         |

- \*1 The setting range is 0.0 to 100.0 when A1-02 = 6 [PM Advanced Open Loop Vector].
- \*2 The setting range is 0.0 to 40.0 when A1-02 = 6 [PM Advanced Open Loop Vector].
- \*3 The default setting changes when the setting for C6-01 [Normal / Heavy Duty Selection] changes.
- \*4 This is the value for 200 V class drives. Double the value for 400 V class drives.
- \*5 The setting range is -100.0 to +100.0 when A1-02 = 6 [PM Advanced Open Loop Vector].

## 11.19 Parameters that Change from the Default Settings with E3-01 [Motor 2 Control Mode Selection]

The values for the parameters in these tables depend on the values for parameter *E3-01*. When you change the setting for *E3-01*, the default settings will change.

| No.   | Name                             | Range             | Unit                | Motor 2 Control Method (setting value of E3-01) |         |
|-------|----------------------------------|-------------------|---------------------|---|---------|
|       |                                  |                   |                     | V/f (0)   | OLV (2) |
| C3-21 | Motor 2 Slip Compensation Gain   | 0.0 - 2.50        | 0.1                 | 0.0   | 1.0     |
| C3-22 | Motor 2 Slip Comp Delay Time     | 0 - 10000         | 1 ms                | 2000  | 200     |
| E3-04 | Motor 2 Maximum Output Frequency | 40.0 - 590.0      | 0.1 Hz              | 60.0  | 60.0    |
| E3-05 | Motor 2 Maximum Output Voltage   | 0.0 - 255.0<br>*1 | 0.1 V               | 200.0   | 200.0   |
| E3-06 | Motor 2 Base Frequency           | 0.0 - 590.0       | 0.1 Hz              | 60.0  | 60.0    |
| E3-07 | Motor 2 Mid Point A Frequency    | 0.0 - 590.0       | 0.1 Hz              | 3.0   | 3.0     |
| E3-08 | Motor 2 Mid Point A Voltage      | 0.0 - 255.0<br>*1 | 0.1 V               | 15.0  | 11.0    |
| E3-09 | Motor 2 Minimum Output Frequency | 0.0 - 590.0       | 0.1 Hz              | 1.5   | 0.5     |
| E3-10 | Motor 2 Minimum Output Voltage   | 0.0 - 255.0<br>*1 | 0.1 V               | 9.0   | 2.0     |
| E3-11 | Motor 2 Mid Point B Frequency    | 0.0 - 590.0       | Determined by o1-04 | 0.0   | 0.0     |
| E3-12 | Motor 2 Mid Point B Voltage      | 0.0 - 255.0<br>*1 | 0.1 V               | 0.0   | 0.0     |
| E3-13 | Motor 2 Base Voltage             | 0.0 - 255.0<br>*1 | 0.1 V               | 0.0   | 0.0     |

\*1 This is the value for 200 V class drives. Double the value for 400 V class drives.

## 11.20 Parameters Changed by E1-03 [V/f Pattern Selection]

The values for parameters *A1-02* [Control Method Selection] and *E1-03* [V/f Pattern Selection] change the default settings for the parameters in these tables:

**Table 11.3 Parameters Changed by E1-03 (B001 - B018, 2001 - 2021, and 4001 - 4012)**

| No.                 | Unit | Setting Value |       |       |       |       |       |       |       |       |       |       |       |       |       |       |                 | Control Method (A1-02 Setting) |            |              |
|---------------------|------|---------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-----------------|--------------------------------|------------|--------------|
|                     |      | 0             | 1     | 2     | 3     | 4     | 5     | 6     | 7     | 8     | 9     | A     | B     | C     | D     | E     | F <sup>*1</sup> | OLV (2)                        | OLV/PM (5) | AOL V/PM (6) |
| E1-04               | Hz   | 50.0          | 60.0  | 60.0  | 72.0  | 50.0  | 50.0  | 60.0  | 60.0  | 50.0  | 50.0  | 60.0  | 60.0  | 90.0  | 120.0 | 180.0 | 50.0            | 50.0                           | *2         | *2           |
| E1-05 <sup>*3</sup> | V    | 200.0         | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0           | 200.0                          | *2         | *2           |
| E1-06               | Hz   | 50.0          | 60.0  | 50.0  | 60.0  | 50.0  | 50.0  | 60.0  | 60.0  | 50.0  | 50.0  | 60.0  | 60.0  | 60.0  | 60.0  | 60.0  | 50.0            | 50.0                           | *2         | *2           |
| E1-07               | Hz   | 2.5           | 3.0   | 3.0   | 3.0   | 25.0  | 25.0  | 30.0  | 30.0  | 2.5   | 2.5   | 3.0   | 3.0   | 3.0   | 3.0   | 3.0   | 2.5             | 3.0                            | -          | -            |
| E1-08 <sup>*3</sup> | V    | 16.0          | 16.0  | 16.0  | 16.0  | 35.0  | 50.0  | 35.0  | 50.0  | 19.0  | 24.0  | 19.0  | 24.0  | 16.0  | 16.0  | 16.0  | 16.0            | 14.4                           | -          | -            |
| E1-09               | Hz   | 1.3           | 1.5   | 1.5   | 1.5   | 1.3   | 1.3   | 1.5   | 1.5   | 1.3   | 1.3   | 1.5   | 1.5   | 1.5   | 1.5   | 1.5   | 1.3             | 0.5                            | *2         | *2           |
| E1-10 <sup>*3</sup> | V    | 12.0          | 12.0  | 12.0  | 12.0  | 8.0   | 9.0   | 8.0   | 9.0   | 12.0  | 13.0  | 12.0  | 15.0  | 12.0  | 12.0  | 12.0  | 12.0            | 3.0                            | -          | -            |

\*1 These values are the default settings for *E1-04* to *E1-10* and *E3-04* to *E3-10* [V/f Pattern for Motor 2]. These settings are the same as those for the V/f pattern when *E1-03* = 0 [Const Trq, 50 Hz base, 60Hz max].

\*2 The default setting varies depending on the setting of *E5-01* [PM Motor Code Selection].

\*3 This is the value for 200 V class drives. Double the value for 400 V class drives.

**Table 11.4 Parameters Changed by E1-03 (2030 - 2082 and 4018 - 4060)**

| No.                 | Unit | Setting Value |       |       |       |       |       |       |       |       |       |       |       |       |       |       |                 | Control Method (A1-02 Setting) |            |              |
|---------------------|------|---------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-----------------|--------------------------------|------------|--------------|
|                     |      | 0             | 1     | 2     | 3     | 4     | 5     | 6     | 7     | 8     | 9     | A     | B     | C     | D     | E     | F <sup>*1</sup> | OLV (2)                        | OLV/PM (5) | AOL V/PM (6) |
| E1-04               | Hz   | 50.0          | 60.0  | 60.0  | 72.0  | 50.0  | 50.0  | 60.0  | 60.0  | 50.0  | 50.0  | 60.0  | 60.0  | 90.0  | 120.0 | 180.0 | 50.0            | 50.0                           | *2         | *2           |
| E1-05 <sup>*3</sup> | V    | 200.0         | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0 | 200.0           | 200.0                          | *2         | *2           |
| E1-06               | Hz   | 50.0          | 60.0  | 50.0  | 60.0  | 50.0  | 50.0  | 60.0  | 60.0  | 50.0  | 50.0  | 60.0  | 60.0  | 60.0  | 60.0  | 60.0  | 50.0            | 50.0                           | *2         | *2           |
| E1-07               | Hz   | 2.5           | 3.0   | 3.0   | 3.0   | 25.0  | 25.0  | 30.0  | 30.0  | 2.5   | 2.5   | 3.0   | 3.0   | 3.0   | 3.0   | 3.0   | 2.5             | 3.0                            | -          | -            |
| E1-08 <sup>*3</sup> | V    | 14.0          | 14.0  | 14.0  | 14.0  | 35.0  | 50.0  | 35.0  | 50.0  | 18.0  | 23.0  | 18.0  | 23.0  | 14.0  | 14.0  | 14.0  | 14.0            | 13.2                           | -          | -            |
| E1-09               | Hz   | 1.3           | 1.5   | 1.5   | 1.5   | 1.3   | 1.3   | 1.5   | 1.5   | 1.3   | 1.3   | 1.5   | 1.5   | 1.5   | 1.5   | 1.5   | 1.3             | 0.5                            | *2         | *2           |
| E1-10 <sup>*3</sup> | V    | 7.0           | 7.0   | 7.0   | 7.0   | 6.0   | 7.0   | 6.0   | 7.0   | 9.0   | 11.0  | 9.0   | 13.0  | 7.0   | 7.0   | 7.0   | 7.0             | 2.4                            | -          | -            |

\*1 These values are the default settings for *E1-04* to *E1-10* and *E3-04* to *E3-10* [V/f Pattern for Motor 2]. These settings are the same as those for the V/f pattern when *E1-03* = 0 [Const Trq, 50 Hz base, 60Hz max].

\*2 The default setting varies depending on the setting of *E5-01* [PM Motor Code Selection].

\*3 This is the value for 200 V class drives. Double the value for 400 V class drives.

## 11.21 Defaults by Drive Model and Duty Rating ND/HD

The values for the parameters in these tables depend on the values for parameters *o2-04* and *C6-01*. Changing the settings for *o2-04* and *C6-01* will change the default settings.

### ◆ Single-Phase 200 V Class

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | B001    |       | B002  |       | B004  |       | B006  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 30      |       | 31    |       | 32    |       | 33    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 0.1     | 0.2   | 0.2   | 0.4   | 0.4   | 0.75  | 0.75  | 1.1   |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100   | 100   | 100   | 100   | 100   | 100   | 100   |
| b3-06                | Speed Estimation Current Level 1 | -    | 1       | 1     | 1     | 1     | 1     | 1     | 0.5   | 0.5   |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 481.7   | 356.9 | 356.9 | 288.2 | 288.2 | 223.7 | 223.7 | 196.6 |
| C6-02                | Carrier Frequency Selection      | -    | 4       | 7     | 4     | 7     | 4     | 7     | 4     | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 0.6     | 1.1   | 1.1   | 1.9   | 1.9   | 3.3   | 3.3   | 6.2   |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 2.5     | 2.6   | 2.6   | 2.9   | 2.9   | 2.5   | 2.5   | 2.6   |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 0.4     | 0.8   | 0.8   | 1.2   | 1.2   | 1.8   | 1.8   | 2.8   |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 35.98   | 20.56 | 20.56 | 9.842 | 9.842 | 5.156 | 5.156 | 1.997 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 21.6    | 20.1  | 20.1  | 18.2  | 18.2  | 13.8  | 13.8  | 18.5  |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 6       | 11    | 11    | 14    | 14    | 26    | 26    | 53    |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 0.1     | 0.1   | 0.1   | 0.1   | 0.1   | 0.1   | 0.2   | 0.2   |
| L2-03                | Minimum Baseblock Time           | s    | 0.2     | 0.3   | 0.2   | 0.3   | 0.2   | 0.3   | 0.3   | 0.4   |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 160     | 160   | 160   | 160   | 160   | 160   | 160   | 160   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | B001    |       | B002  |       | B004  |       | B006  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 30      |       | 31    |       | 32    |       | 33    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 0.1     | 0.2   | 0.2   | 0.4   | 0.4   | 0.75  | 0.75  | 1.1   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.178   | 0.178 | 0.178 | 0.178 | 0.178 | 0.142 | 0.142 | 0.142 |
| L8-02                | Overheat Alarm Level             | °C   | 105     | 105   | 105   | 105   | 115   | 115   | 115   | 115   |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    | 10    | 10    | 10    | 10    |
| n3-02                | HSB Current Limit Level          | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time  | s    | 0.178   | 0.178 | 0.178 | 0.142 | 0.178 | 0.142 | 0.142 | 0.142 |

\*1 Parameters within parentheses are for motor 2.

| No. */               | Name                             | Unit | Default |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|
|                      |                                  |      | B010    |       | B012  |       | B018  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 34      |       | 35    |       | 37    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 1.5     | 2.2   | 2.2   | 3.0   | 3.7   | 5.5   |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100   | 100   | 100   | 100   | 100   |
| b3-06                | Speed Estimation Current Level 1 | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  | 1000  | 1000  | 1000  | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 169.4   | 156.8 | 156.8 | 136.4 | 122.9 | 94.75 |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7     | 3     | 7     | 3     | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 6.2     | 8.5   | 8.5   | 11.4  | 14    | 19.6  |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 2.6     | 2.9   | 2.9   | 2.7   | 2.73  | 1.5   |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 2.8     | 3     | 3     | 3.7   | 4.5   | 5.1   |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 1.997   | 1.601 | 1.601 | 1.034 | 0.771 | 0.399 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 18.5    | 18.4  | 18.4  | 19    | 19.6  | 18.2  |

## 11.21 Defaults by Drive Model and Duty Rating ND/HD

| No. */               | Name                             | Unit | Default |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|
|                      |                                  |      | B010    |       | B012  |       | B018  |       |
| -                    | Drive Model                      | -    |         |       |       |       |       |       |
| C6-01                | Normal / Heavy Duty Selection    | -    | HD      | ND    | HD    | ND    | HD    | ND    |
|                      |                                  |      | 0       | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 34      |       | 35    |       | 37    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 1.5     | 2.2   | 2.2   | 3.0   | 3.7   | 5.5   |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 53      | 77    | 77    | 91    | 112   | 172   |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 0.3     | 0.3   | 0.5   | 0.5   | 1     | 1     |
| L2-03                | Minimum Baseblock Time           | s    | 0.4     | 0.5   | 0.5   | 0.5   | 0.6   | 0.7   |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 160     | 160   | 160   | 160   | 160   | 160   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   | 150   | 120   | 150   | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   | 150   | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.166   | 0.145 | 0.145 | 0.145 | 0.154 | 0.168 |
| L8-02                | Overheat Alarm Level             | °C   | 105     | 105   | 110   | 110   | 115   | 115   |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0     | 0     | 0     | 0     | 0     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    | 10    | 10    |
| n3-02                | HSB Current Limit Level          | %    | 150     | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time  | s    | 0.166   | 0.145 | 0.145 | 0.145 | 0.154 | 0.168 |

\*1 Parameters within parentheses are for motor 2.

### ◆ Three-Phase 200 V Class

| No. */               | Name                             | Unit | Default |     |      |     |      |      |      |     |
|----------------------|----------------------------------|------|---------|-----|------|-----|------|------|------|-----|
|                      |                                  |      | 2001    |     | 2002 |     | 2004 |      | 2006 |     |
| -                    | Drive Model                      | -    |         |     |      |     |      |      |      |     |
| C6-01                | Normal / Heavy Duty Selection    | -    | HD      | ND  | HD   | ND  | HD   | ND   | HD   | ND  |
|                      |                                  |      | 0       | 1   | 0    | 1   | 0    | 1    | 0    | 1   |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 60      |     | 61   |     | 62   |      | 63   |     |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 0.1     | 0.2 | 0.2  | 0.4 | 0.4  | 0.75 | 0.75 | 1.1 |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100 | 100  | 100 | 100  | 100  | 100  | 100 |
| b3-06                | Speed Estimation Current Level 1 | -    | 1       | 1   | 1    | 1   | 1    | 1    | 0.5  | 0.5 |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5 | 0.5  | 0.5 | 0.5  | 0.5  | 0.5  | 0.5 |

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | 2001    |       | 2002  |       | 2004  |       | 2006  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 60      |       | 61    |       | 62    |       | 63    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 0.1     | 0.2   | 0.2   | 0.4   | 0.4   | 0.75  | 0.75  | 1.1   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 481.7   | 356.9 | 356.9 | 288.2 | 288.2 | 223.7 | 223.7 | 196.6 |
| C6-02                | Carrier Frequency Selection      | -    | 4       | 7     | 4     | 7     | 4     | 7     | 4     | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 0.6     | 1.1   | 1.1   | 1.9   | 1.9   | 3.3   | 3.3   | 4.9   |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 2.5     | 2.6   | 2.6   | 2.9   | 2.9   | 2.5   | 2.5   | 2.6   |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 0.4     | 0.8   | 0.8   | 1.2   | 1.2   | 1.8   | 1.8   | 2.3   |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 35.98   | 20.56 | 20.56 | 9.842 | 9.842 | 5.156 | 5.156 | 3.577 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 21.6    | 20.1  | 20.1  | 18.2  | 18.2  | 13.8  | 13.8  | 18.5  |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 6       | 11    | 11    | 14    | 14    | 26    | 26    | 38    |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 0.1     | 0.1   | 0.1   | 0.1   | 0.1   | 0.1   | 0.2   | 0.2   |
| L2-03                | Minimum Baseblock Time           | s    | 0.2     | 0.3   | 0.2   | 0.3   | 0.2   | 0.3   | 0.3   | 0.4   |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 190     | 190   | 190   | 190   | 190   | 190   | 190   | 190   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.178   | 0.178 | 0.178 | 0.178 | 0.178 | 0.142 | 0.142 | 0.142 |
| L8-02                | Overheat Alarm Level             | °C   | 115     | 115   | 115   | 115   | 115   | 115   | 120   | 120   |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    | 10    | 10    | 10    | 10    |

## 11.21 Defaults by Drive Model and Duty Rating ND/HD

| No. */               | Name                            | Unit | Default |       |       |       |       |       |       |       |
|----------------------|---------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                 |      | 2001    |       | 2002  |       | 2004  |       | 2006  |       |
| -                    | Drive Model                     | -    |         |       |       |       |       |       |       |       |
| C6-01                | Normal / Heavy Duty Selection   | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
|                      |                                 |      | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection     | Hex. | 60      |       | 61    |       | 62    |       | 63    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power               | kW   | 0.1     | 0.2   | 0.2   | 0.4   | 0.4   | 0.75  | 0.75  | 1.1   |
| n3-02                | HSB Current Limit Level         | 1    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time | s    | 0.178   | 0.178 | 0.178 | 0.142 | 0.178 | 0.142 | 0.142 | 0.142 |

\*1 Parameters within parentheses are for motor 2.

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | 2008    |       | 2010  |       | 2012  |       | 2018  |       |
| -                    | Drive Model                      | -    |         |       |       |       |       |       |       |       |
| C6-01                | Normal / Heavy Duty Selection    | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
|                      |                                  |      | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 64      |       | 65    |       | 66    |       | 67    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 1.1     | 1.5   | 1.5   | 2.2   | 2.2   | 3.0   | 3.0   | 3.7   |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100   | 100   | 100   | 100   | 100   | 100   | 100   |
| b3-06                | Speed Estimation Current Level 1 | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 196.6   | 169.4 | 169.4 | 156.8 | 156.8 | 136.4 | 136.4 | 122.9 |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7     | 3     | 7     | 3     | 7     | 3     | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 4.9     | 6.2   | 6.2   | 8.5   | 8.5   | 11.4  | 11.4  | 14    |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 2.6     | 2.6   | 2.6   | 2.9   | 2.9   | 2.7   | 2.7   | 2.73  |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 2.3     | 2.8   | 2.8   | 3     | 3     | 3.7   | 3.7   | 4.5   |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 3.577   | 1.997 | 1.997 | 1.601 | 1.601 | 1.034 | 1.034 | 0.771 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 18.5    | 18.5  | 18.5  | 18.4  | 18.4  | 19    | 19    | 19.6  |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 38      | 53    | 53    | 77    | 77    | 91    | 91    | 112   |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 0.3     | 0.3   | 0.3   | 0.3   | 0.5   | 0.5   | 1     | 1     |



| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | 2008    |       | 2010  |       | 2012  |       | 2018  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 64      |       | 65    |       | 66    |       | 67    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 1.1     | 1.5   | 1.5   | 2.2   | 2.2   | 3.0   | 3.0   | 3.7   |
| L2-03                | Minimum Baseblock Time           | s    | 0.4     | 0.4   | 0.4   | 0.5   | 0.5   | 0.5   | 0.5   | 0.6   |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 190     | 190   | 190   | 190   | 190   | 190   | 190   | 190   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.142   | 0.166 | 0.166 | 0.145 | 0.145 | 0.145 | 0.145 | 0.154 |
| L8-02                | Overheat Alarm Level             | °C   | 110     | 110   | 110   | 110   | 110   | 110   | 115   | 115   |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    | 10    | 10    | 10    | 10    |
| n3-02                | HSB Current Limit Level          | 1    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time  | s    | 0.142   | 0.166 | 0.166 | 0.145 | 0.145 | 0.145 | 0.145 | 0.154 |

\*1 Parameters within parentheses are for motor 2.

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | 2021    |       | 2030  |       | 2042  |       | 2056  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 68      |       | 6A    |       | 6B    |       | 6D    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 3.7     | 5.5   | 5.5   | 7.5   | 7.5   | 11    | 11    | 15    |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100   | 100   | 100   | 100   | 100   | 100   | 100   |
| b3-06                | Speed Estimation Current Level 1 | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 122.9   | 94.75 | 94.75 | 72.69 | 72.69 | 70.44 | 70.44 | 63.13 |

## 11.21 Defaults by Drive Model and Duty Rating ND/HD

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | 2021    |       | 2030  |       | 2042  |       | 2056  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 68      |       | 6A    |       | 6B    |       | 6D    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 3.7     | 5.5   | 5.5   | 7.5   | 7.5   | 11    | 11    | 15    |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7     | 3     | 7     | 3     | 7     | 3     | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 14      | 19.6  | 19.6  | 26.6  | 26.6  | 39.7  | 39.7  | 53    |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 2.73    | 1.5   | 1.5   | 1.3   | 1.3   | 1.7   | 1.7   | 1.6   |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 4.5     | 5.1   | 5.1   | 8     | 8     | 11.2  | 11.2  | 15.2  |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 0.771   | 0.399 | 0.399 | 0.288 | 0.288 | 0.23  | 0.23  | 0.138 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 19.6    | 18.2  | 18.2  | 15.5  | 15.5  | 19.5  | 19.5  | 17.2  |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 112     | 172   | 172   | 262   | 262   | 245   | 245   | 272   |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 1       | 1     | 1     | 1     | 1     | 1     | 2     | 2     |
| L2-03                | Minimum Baseblock Time           | s    | 0.6     | 0.7   | 0.7   | 0.8   | 0.8   | 0.9   | 0.9   | 1     |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.6   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 190     | 190   | 190   | 190   | 190   | 190   | 190   | 190   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.154   | 0.168 | 0.168 | 0.175 | 0.175 | 0.265 | 0.265 | 0.244 |
| L8-02                | Overheat Alarm Level             | °C   | 115     | 115   | 105   | 105   | 115   | 115   | 125   | 125   |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0     | 1     | 1     | 1     | 1     | 1     | 1     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    | 10    | 10    | 10    | 10    |
| n3-02                | HSB Current Limit Level          | 1    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time  | s    | 0.154   | 0.168 | 0.168 | 0.175 | 0.175 | 0.265 | 0.265 | 0.244 |

\*1 Parameters within parentheses are for motor 2.

| No. */               | Name                             | Unit | Default |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|
|                      |                                  |      | 2070    |       | 2082  |       |
| -                    | Drive Model                      | -    |         |       |       |       |
| C6-01                | Normal / Heavy Duty Selection    | -    | HD      | ND    | HD    | ND    |
|                      |                                  |      | 0       | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 6E      |       | 6F    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 15      | 18.5  | 18.5  | 22    |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100   | 100   | 100   |
| b3-06                | Speed Estimation Current Level 1 | -    | 0.5     | 0.5   | 0.5   | 0.5   |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5   | 0.5   | 0.5   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  | 1000  | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   | 0.5   | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 63.13   | 57.87 | 57.87 | 51.79 |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7     | 3     | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 53      | 65.8  | 65.8  | 77.2  |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 1.6     | 1.67  | 1.67  | 1.7   |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 15.2    | 15.7  | 15.7  | 18.5  |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 0.138   | 0.101 | 0.101 | 0.079 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 17.2    | 15.7  | 20.1  | 19.5  |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 272     | 505   | 505   | 538   |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 2       | 2     | 2     | 2     |
| L2-03                | Minimum Baseblock Time           | s    | 1       | 1     | 1     | 1     |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.6     | 0.6   | 0.6   | 0.6   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 190     | 190   | 190   | 190   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   | 150   | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.244   | 0.317 | 0.317 | 0.355 |
| L8-02                | Overheat Alarm Level             | °C   | 120     | 120   | 135   | 135   |
| L8-09                | Output Ground Fault Detection    | -    | 1       | 1     | 1     | 1     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    |
| n3-02                | HSB Current Limit Level          | %    | 150     | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time  | s    | 0.244   | 0.317 | 0.317 | 0.355 |

\*1 Parameters within parentheses are for motor 2.

◆ Three-Phase 400 V Class

| No. */               | Name                             | Unit | Default |        |        |        |        |       |       |       |
|----------------------|----------------------------------|------|---------|--------|--------|--------|--------|-------|-------|-------|
|                      |                                  |      | 4001    |        | 4002   |        | 4004   |       | 4005  |       |
| -                    | Drive Model                      | -    | HD      | ND     | HD     | ND     | HD     | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1      | 0      | 1      | 0      | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 91      |        | 92     |        | 93     |       | 94    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 0.2     | 0.4    | 0.4    | 0.75   | 0.75   | 1.5   | 1.5   | 2.2   |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100    | 100    | 100    | 100    | 100   | 100   | 100   |
| b3-06                | Speed Estimation Current Level 1 | -    | 1.0     | 1.0    | 0.5    | 0.5    | 0.5    | 0.5   | 0.5   | 0.5   |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5    | 0.5    | 0.5    | 0.5    | 0.5   | 0.5   | 0.5   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000   | 1000   | 1000   | 1000   | 1000  | 1000  | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5    | 0.5    | 0.5    | 0.5    | 0.5   | 0.5   | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 713.8   | 576.4  | 576.4  | 447.4  | 447.4  | 338.8 | 338.8 | 313.6 |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7      | 3      | 7      | 3      | 7     | 3     | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 0.6     | 1      | 1      | 1.6    | 1.6    | 3.1   | 3.1   | 4.2   |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 2.5     | 2.9    | 2.9    | 2.6    | 2.6    | 2.5   | 2.5   | 3     |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 0.4     | 0.6    | 0.6    | 0.8    | 0.8    | 1.4   | 1.4   | 1.5   |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 83.94   | 38.198 | 38.198 | 22.459 | 22.459 | 10.1  | 10.1  | 6.495 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 21.9    | 18.2   | 18.2   | 14.3   | 14.3   | 18.3  | 18.3  | 18.7  |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 12      | 14     | 14     | 26     | 26     | 53    | 53    | 77    |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF   | FFFF   | FFFF   | FFFF   | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 0.1     | 0.1    | 0.1    | 0.1    | 0.2    | 0.2   | 0.3   | 0.3   |
| L2-03                | Minimum Baseblock Time           | s    | 0.2     | 0.2    | 0.2    | 0.3    | 0.3    | 0.4   | 0.4   | 0.5   |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3    | 0.3    | 0.3    | 0.3    | 0.3   | 0.3   | 0.3   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 380     | 380    | 380    | 380    | 380    | 380   | 380   | 380   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120    | 150    | 120    | 150    | 120   | 150   | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120    | 150    | 120    | 150    | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.178   | 0.178  | 0.178  | 0.142  | 0.142  | 0.166 | 0.166 | 0.145 |

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | 4001    |       | 4002  |       | 4004  |       | 4005  |       |
| -                    | Drive Model                      | -    |         |       |       |       |       |       |       |       |
| C6-01                | Normal / Heavy Duty Selection    | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
|                      |                                  |      | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 91      |       | 92    |       | 93    |       | 94    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 0.2     | 0.4   | 0.4   | 0.75  | 0.75  | 1.5   | 1.5   | 2.2   |
| L8-02                | Overheat Alarm Level             | °C   | 120     | 120   | 120   | 120   | 105   | 105   | 90    | 90    |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    | 10    | 10    | 10    | 10    |
| n3-02                | HSB Current Limit Level          | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time  | s    | 0.178   | 0.178 | 0.178 | 0.142 | 0.142 | 0.166 | 0.166 | 0.145 |

\*1 Parameters within parentheses are for motor 2.

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |        |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|--------|
|                      |                                  |      | 4007    |       | 4009  |       | 4012  |       | 4018  |        |
| -                    | Drive Model                      | -    |         |       |       |       |       |       |       |        |
| C6-01                | Normal / Heavy Duty Selection    | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND     |
|                      |                                  |      | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1      |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 95      |       | 96    |       | 97    |       | 99    |        |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 2.2     | 3.0   | 3.0   | 3.7   | 4.0   | 5.5   | 5.5   | 7.5    |
| b3-04                | V/F Gain during Speed Search     | %    | 100     | 100   | 100   | 100   | 100   | 100   | 100   | 100    |
| b3-06                | Speed Estimation Current Level 1 | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5    |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5    |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  | 1000  | 1000  | 1000  | 1000  | 1000  | 1000   |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.5    |
| b8-04                | Energy Saving Coefficient Value  | -    | 313.6   | 265.7 | 265.7 | 245.8 | 245.8 | 189.5 | 189.5 | 145.38 |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7     | 3     | 7     | 3     | 7     | 3     | 7      |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 4.2     | 5.7   | 5.7   | 7     | 7     | 9.8   | 9.8   | 13.3   |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 3       | 2.7   | 2.7   | 2.7   | 2.7   | 1.5   | 1.5   | 1.3    |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 1.5     | 1.9   | 1.9   | 2.3   | 2.3   | 2.6   | 2.6   | 4      |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 6.495   | 4.36  | 4.36  | 3.333 | 3.333 | 1.595 | 1.595 | 1.152  |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 18.7    | 19    | 19    | 19.3  | 19.3  | 18.2  | 18.2  | 15.5   |

## 11.21 Defaults by Drive Model and Duty Rating ND/HD

| No. */               | Name                             | Unit | Default |       |       |       |       |       |       |       |
|----------------------|----------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
|                      |                                  |      | 4007    |       | 4009  |       | 4012  |       | 4018  |       |
| -                    | Drive Model                      | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 95      |       | 96    |       | 97    |       | 99    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 2.2     | 3.0   | 3.0   | 3.7   | 4.0   | 5.5   | 5.5   | 7.5   |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 77      | 105   | 105   | 130   | 130   | 193   | 193   | 263   |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 0.5     | 0.5   | 0.5   | 0.5   | 0.5   | 0.5   | 0.8   | 0.8   |
| L2-03                | Minimum Baseblock Time           | s    | 0.5     | 0.5   | 0.5   | 0.6   | 0.6   | 0.7   | 0.7   | 0.8   |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   | 0.3   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 380     | 380   | 380   | 380   | 380   | 380   | 380   | 380   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.145   | 0.145 | 0.145 | 0.154 | 0.154 | 0.168 | 0.168 | 0.175 |
| L8-02                | Overheat Alarm Level             | °C   | 90      | 90    | 115   | 115   | 110   | 110   | 120   | 120   |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0     | 0     | 0     | 0     | 0     | 0     | 0     |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10    | 10    | 10    | 10    | 10    | 10    | 10    |
| n3-02                | HSB Current Limit Level          | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time  | s    | 0.145   | 0.145 | 0.145 | 0.154 | 0.154 | 0.168 | 0.168 | 0.175 |

\*1 Parameters within parentheses are for motor 2.

| No. */               | Name                             | Unit | Default |     |      |     |      |      |      |     |
|----------------------|----------------------------------|------|---------|-----|------|-----|------|------|------|-----|
|                      |                                  |      | 4023    |     | 4031 |     | 4038 |      | 4044 |     |
| -                    | Drive Model                      | -    | HD      | ND  | HD   | ND  | HD   | ND   | HD   | ND  |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1   | 0    | 1   | 0    | 1    | 0    | 1   |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 9A      |     | 9C   |     | 9D   |      | 9E   |     |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 7.5     | 11  | 11   | 15  | 15   | 18.5 | 18.5 | 22  |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100 | 100  | 100 | 100  | 100  | 100  | 100 |
| b3-06                | Speed Estimation Current Level 1 | -    | 0.5     | 0.5 | 0.5  | 0.5 | 0.5  | 0.5  | 0.5  | 0.5 |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5 | 0.5  | 0.5 | 0.5  | 0.5  | 0.5  | 0.5 |

| No. */               | Name                             | Unit | Default |        |        |        |        |        |        |        |
|----------------------|----------------------------------|------|---------|--------|--------|--------|--------|--------|--------|--------|
|                      |                                  |      | 4023    |        | 4031   |        | 4038   |        | 4044   |        |
| -                    | Drive Model                      | -    | HD      | ND     | HD     | ND     | HD     | ND     | HD     | ND     |
| C6-01                | Normal / Heavy Duty Selection    | -    | 0       | 1      | 0      | 1      | 0      | 1      | 0      | 1      |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 9A      |        | 9C     |        | 9D     |        | 9E     |        |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 7.5     | 11     | 11     | 15     | 15     | 18.5   | 18.5   | 22     |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000   | 1000   | 1000   | 1000   | 1000   | 1000   | 1000   |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5    | 0.5    | 0.5    | 0.5    | 0.5    | 0.5    | 0.5    |
| b8-04                | Energy Saving Coefficient Value  | -    | 145.38  | 140.88 | 140.88 | 126.26 | 126.26 | 115.74 | 115.74 | 103.58 |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7      | 3      | 7      | 3      | 7      | 3      | 7      |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 13.3    | 19.9   | 19.9   | 26.5   | 26.5   | 32.9   | 32.9   | 38.6   |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 1.3     | 1.7    | 1.7    | 1.6    | 1.6    | 1.67   | 1.67   | 1.7    |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 4       | 5.6    | 5.6    | 7.6    | 7.6    | 7.8    | 7.8    | 9.2    |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 1.152   | 0.922  | 0.922  | 0.55   | 0.55   | 0.403  | 0.403  | 0.316  |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 15.5    | 19.6   | 19.6   | 17.2   | 17.2   | 20.1   | 20.1   | 23.5   |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 263     | 385    | 385    | 440    | 440    | 508    | 508    | 586    |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF   | FFFF   | FFFF   | FFFF   | FFFF   | FFFF   | FFFF   |
| L2-02                | Power Loss Ride Through Time     | s    | 1       | 1      | 2      | 2      | 2      | 2      | 2      | 2      |
| L2-03                | Minimum Baseblock Time           | s    | 0.8     | 0.9    | 0.9    | 1      | 1      | 1      | 1      | 1      |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.3     | 0.3    | 0.3    | 0.6    | 0.6    | 0.6    | 0.6    | 0.6    |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 380     | 380    | 380    | 380    | 380    | 380    | 380    | 380    |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120    | 150    | 120    | 150    | 120    | 150    | 120    |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120    | 150    | 120    | 150    | 120    | 150    | 120    |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.175   | 0.265  | 0.265  | 0.244  | 0.244  | 0.317  | 0.317  | 0.355  |
| L8-02                | Overheat Alarm Level             | °C   | 120     | 120    | 120    | 120    | 120    | 120    | 125    | 125    |
| L8-09                | Output Ground Fault Detection    | -    | 0       | 0      | 1      | 1      | 1      | 1      | 1      | 1      |
| n1-03                | Hunting Prevention Time Constant | ms   | 10      | 10     | 10     | 10     | 10     | 10     | 10     | 10     |

## 11.21 Defaults by Drive Model and Duty Rating ND/HD

| No. */               | Name                            | Unit | Default |       |       |       |       |       |       |       |
|----------------------|---------------------------------|------|---------|-------|-------|-------|-------|-------|-------|-------|
| -                    | Drive Model                     | -    | 4023    |       | 4031  |       | 4038  |       | 4044  |       |
| C6-01                | Normal / Heavy Duty Selection   | -    | HD      | ND    | HD    | ND    | HD    | ND    | HD    | ND    |
|                      |                                 |      | 0       | 1     | 0     | 1     | 0     | 1     | 0     | 1     |
| o2-04                | Drive Model (KVA) Selection     | Hex. | 9A      |       | 9C    |       | 9D    |       | 9E    |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power               | kW   | 7.5     | 11    | 11    | 15    | 15    | 18.5  | 18.5  | 22    |
| n3-02                | HSB Current Limit Level         | %    | 150     | 120   | 150   | 120   | 150   | 120   | 150   | 120   |
| n5-02                | Motor Inertia Acceleration Time | s    | 0.175   | 0.265 | 0.265 | 0.244 | 0.244 | 0.317 | 0.317 | 0.355 |

\*1 Parameters within parentheses are for motor 2.

| No. */               | Name                             | Unit | Default |       |
|----------------------|----------------------------------|------|---------|-------|
| -                    | Drive Model                      | -    | 4060    |       |
| C6-01                | Normal / Heavy Duty Selection    | -    | HD      | ND    |
|                      |                                  |      | 0       | 1     |
| o2-04                | Drive Model (KVA) Selection      | Hex. | 9F      |       |
| E2-11 (E4-11, E5-02) | Motor Rated Power                | kW   | 22      | 30    |
| b3-04                | V/f Gain during Speed Search     | %    | 100     | 100   |
| b3-06                | Speed Estimation Current Level 1 | -    | 0.5     | 0.5   |
| b3-08                | Speed Estimation ACR P Gain      | -    | 0.5     | 0.5   |
| b3-26                | Direction Determination Level    | -    | 1000    | 1000  |
| b8-03                | Energy Saving Filter Time        | s    | 0.5     | 0.5   |
| b8-04                | Energy Saving Coefficient Value  | -    | 103.58  | 92.54 |
| C6-02                | Carrier Frequency Selection      | -    | 3       | 7     |
| E2-01 (E4-01)        | Motor Rated Current (FLA)        | A    | 38.6    | 52.3  |
| E2-02 (E4-02)        | Motor Rated Slip                 | Hz   | 1.7     | 1.8   |
| E2-03 (E4-03)        | Motor No-Load Current            | A    | 9.2     | 10.9  |
| E2-05 (E4-05)        | Motor Line-to-Line Resistance    | Ω    | 0.316   | 0.269 |
| E2-06 (E4-06)        | Motor Leakage Inductance         | %    | 23.5    | 20.7  |
| E2-10 (E4-10)        | Motor Iron Loss                  | W    | 586     | 750   |
| E5-01                | PM Motor Code Selection          | -    | FFFF    | FFFF  |
| L2-02                | Power Loss Ride Through Time     | s    | 2       | 2     |
| L2-03                | Minimum Baseblock Time           | s    | 1       | 1.1   |
| L2-04                | Powerloss V/f Recovery Ramp Time | s    | 0.6     | 0.6   |
| L2-05                | Undervoltage Detection Lvl (Uv1) | -    | 380     | 380   |
| L3-02                | Stall Prevent Level during Accel | %    | 150     | 120   |
| L3-06                | Stall Prevent Level during Run   | %    | 150     | 120   |
| L3-24                | Motor Accel Time @ Rated Torque  | s    | 0.355   | 0.323 |
| L8-02                | Overheat Alarm Level             | °C   | 115     | 115   |
| L8-09                | Output Ground Fault Detection    | -    | 1       | 1     |



| No. */                  | Name                             | Unit | Default |       |
|-------------------------|----------------------------------|------|---------|-------|
| -                       | Drive Model                      | -    | 4060    |       |
| C6-01                   | Normal / Heavy Duty Selection    | -    | HD      | ND    |
|                         |                                  |      | 0       | 1     |
| o2-04                   | Drive Model (KVA) Selection      | Hex. | 9F      |       |
| E2-11<br>(E4-11, E5-02) | Motor Rated Power                | kW   | 22      | 30    |
| n1-03                   | Hunting Prevention Time Constant | ms   | 10      | 10    |
| n3-02                   | HSB Current Limit Level          | %    | 150     | 120   |
| n5-02                   | Motor Inertia Acceleration Time  | s    | 0.355   | 0.323 |

\*1 Parameters within parentheses are for motor 2.

## 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]

**Note:**

The motor codes listed in these tables are the only correct setting values.

### ◆ Yaskawa SMRA Series SPM Motors

**Table 11.5 SMRA Series Motor Code Setting for Specification of 200 V at 1800 min<sup>-1</sup> (r/min)**

| No.   | Name                             | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |
|-------|----------------------------------|----------------------|-------------------------------------|-------|-------|-------|-------|
| E5-01 | PM Motor Code Selection          | -                    | 0002                                | 0003  | 0005  | 0006  | 0008  |
|       | Voltage Class                    | V                    | 200                                 | 200   | 200   | 200   | 200   |
|       | Capacity                         | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   |
|       | Motor Rotation Speed             | min <sup>-1</sup>    | 1800                                | 1800  | 1800  | 1800  | 1800  |
| E5-02 | PM Motor Rated Power             | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   |
| E5-03 | PM Motor Rated Current (FLA)     | A                    | 2.1                                 | 4.0   | 6.9   | 10.8  | 17.4  |
| E5-04 | PM Motor Pole Count              | -                    | 8                                   | 8     | 8     | 8     | 8     |
| E5-05 | PM Motor Resistance (ohms/phase) | Ω                    | 2.47                                | 1.02  | 0.679 | 0.291 | 0.169 |
| E5-06 | PM d-axis Inductance (mH/phase)  | mH                   | 12.7                                | 4.8   | 3.9   | 3.6   | 2.5   |
| E5-07 | PM q-axis Inductance (mH/phase)  | mH                   | 12.7                                | 4.8   | 3.9   | 3.6   | 2.5   |
| E5-09 | PM Back-EMF Vpeak (mV/(rad/s))   | mVs/rad              | 0                                   | 0     | 0     | 0     | 0     |
| E5-24 | PM Back-EMF L-L Vrms (mV/rpm)    | mV/min <sup>-1</sup> | 62.0                                | 64.1  | 73.4  | 69.6  | 72.2  |
| E1-04 | Maximum Output Frequency         | Hz                   | 120                                 | 120   | 120   | 120   | 120   |
| E1-05 | Maximum Output Voltage           | V                    | 200.0                               | 200.0 | 200.0 | 200.0 | 200.0 |
| E1-06 | Base Frequency                   | Hz                   | 120                                 | 120   | 120   | 120   | 120   |
| E1-09 | Minimum Output Frequency         | Hz                   | 6                                   | 6     | 6     | 6     | 6     |
| L3-24 | Motor Accel Time @ Rated Torque  | s                    | 0.064                               | 0.066 | 0.049 | 0.051 | 0.044 |
| n5-02 | Motor Inertia Acceleration Time  | s                    | 0.064                               | 0.066 | 0.049 | 0.051 | 0.044 |
| n8-49 | Heavy Load Id Current            | %                    | 0                                   | 0     | 0     | 0     | 0     |

**Table 11.6 SMRA Series Motor Code Setting for Specification of 200 V at 3600 min<sup>-1</sup> (r/min)**

| No.   | Name                             | Unit                 | Motor Code (setting value of E5-01) |      |      |       |
|-------|----------------------------------|----------------------|-------------------------------------|------|------|-------|
| E5-01 | PM Motor Code Selection          | -                    | 0103                                | 0105 | 0106 | 0108  |
|       | Voltage Class                    | V                    | 200                                 | 200  | 200  | 200   |
|       | Capacity                         | kW                   | 0.75                                | 1.5  | 2.2  | 3.7   |
|       | Motor Rotation Speed             | min <sup>-1</sup>    | 3600                                | 3600 | 3600 | 3600  |
| E5-02 | PM Motor Rated Power             | kW                   | 0.75                                | 1.5  | 2.2  | 3.7   |
| E5-03 | PM Motor Rated Current (FLA)     | A                    | 4.1                                 | 8.0  | 10.5 | 16.5  |
| E5-04 | PM Motor Pole Count              | -                    | 8                                   | 8    | 8    | 8     |
| E5-05 | PM Motor Resistance (ohms/phase) | Ω                    | 0.538                               | 0.20 | 0.15 | 0.097 |
| E5-06 | PM d-axis Inductance (mH/phase)  | mH                   | 3.2                                 | 1.3  | 1.1  | 1.1   |
| E5-07 | PM q-axis Inductance (mH/phase)  | mH                   | 3.2                                 | 1.3  | 1.1  | 1.1   |
| E5-09 | PM Back-EMF Vpeak (mV/(rad/s))   | mVs/rad              | 0                                   | 0    | 0    | 0     |
| E5-24 | PM Back-EMF L-L Vrms (mV/rpm)    | mV/min <sup>-1</sup> | 32.4                                | 32.7 | 36.7 | 39.7  |

| No.   | Name                            | Unit | Motor Code (setting value of E5-01) |       |       |       |
|-------|---------------------------------|------|-------------------------------------|-------|-------|-------|
| E1-04 | Maximum Output Frequency        | Hz   | 240                                 | 240   | 240   | 240   |
| E1-05 | Maximum Output Voltage          | V    | 200.0                               | 200.0 | 200.0 | 200.0 |
| E1-06 | Base Frequency                  | Hz   | 240                                 | 240   | 240   | 240   |
| E1-09 | Minimum Output Frequency        | Hz   | 12                                  | 12    | 12    | 12    |
| L3-24 | Motor Accel Time @ Rated Torque | s    | 0.137                               | 0.132 | 0.132 | 0.122 |
| n5-02 | Motor Inertia Acceleration Time | s    | 0.137                               | 0.132 | 0.132 | 0.122 |
| n8-49 | Heavy Load Id Current           | %    | 0                                   | 0     | 0     | 0     |

◆ Yaskawa SMRD Series SPM Motors

Table 11.7 SMRD Series Motor Code Setting for Specification of 200 V at 1800 min<sup>-1</sup> (r/min)

| No.   | Name                             | Unit                 | Motor Code (setting value of E5-01) |       |       |
|-------|----------------------------------|----------------------|-------------------------------------|-------|-------|
| E5-01 | PM Motor Code Selection          | -                    | 3000                                | 3001  | 3002  |
|       | Voltage Class                    | V                    | 200                                 | 200   | 200   |
|       | Capacity                         | kW                   | 0.1                                 | 0.2   | 0.4   |
|       | Motor Rotation Speed             | min <sup>-1</sup>    | 1800                                | 1800  | 1800  |
| E5-02 | PM Motor Rated Power             | kW                   | 0.1                                 | 0.2   | 0.4   |
| E5-03 | PM Motor Rated Current (FLA)     | A                    | 0.64                                | 1     | 1.9   |
| E5-04 | PM Motor Pole Count              | -                    | 6                                   | 6     | 6     |
| E5-05 | PM Motor Resistance (ohms/phase) | Ω                    | 17.200                              | 9.960 | 3.590 |
| E5-06 | PM d-axis Inductance (mH/phase)  | mH                   | 33.20                               | 19.40 | 11.90 |
| E5-07 | PM q-axis Inductance (mH/phase)  | mH                   | 33.20                               | 19.40 | 11.90 |
| E5-09 | PM Back-EMF Vpeak (mV/(rad/s))   | mVs/rad              | 0.0                                 | 0.0   | 0.0   |
| E5-24 | PM Back-EMF L-L Vrms (mV/rpm)    | mV/min <sup>-1</sup> | 59.1                                | 69.8  | 75.9  |
| E1-04 | Maximum Output Frequency         | Hz                   | 90.0                                | 90.0  | 90.0  |
| E1-05 | Maximum Output Voltage           | V                    | 200.0                               | 200.0 | 200.0 |
| E1-06 | Base Frequency                   | Hz                   | 90.0                                | 90.0  | 90.0  |
| E1-09 | Minimum Output Frequency         | Hz                   | 9.0                                 | 9.0   | 9.0   |
| L3-24 | Motor Accel Time @ Rated Torque  | s                    | 0.100                               | 0.100 | 0.100 |
| n5-02 | Motor Inertia Acceleration Time  | s                    | 0.100                               | 0.100 | 0.100 |
| n8-49 | Heavy Load Id Current            | %                    | 0.0                                 | 0.0   | 0.0   |

Table 11.8 SMRD Series Motor Code Setting for Specification of 200 V at 3600 min<sup>-1</sup> (r/min)

| No.   | Name                             | Unit                 | Motor Code (setting value of E5-01) |       |       |
|-------|----------------------------------|----------------------|-------------------------------------|-------|-------|
| E5-01 | PM Motor Code Selection          | -                    | 3101                                | 3102  | 3103  |
|       | Voltage Class                    | V                    | 200                                 | 200   | 200   |
|       | Capacity                         | kW                   | 0.2                                 | 0.4   | 0.75  |
|       | Motor Rotation Speed             | min <sup>-1</sup>    | 3600                                | 3600  | 3600  |
| E5-02 | PM Motor Rated Power             | kW                   | 0.20                                | 0.40  | 0.75  |
| E5-03 | PM Motor Rated Current (FLA)     | A                    | 1.50                                | 2.60  | 4.20  |
| E5-04 | PM Motor Pole Count              | -                    | 6                                   | 6     | 6     |
| E5-05 | PM Motor Resistance (ohms/phase) | Ω                    | 3.340                               | 1.560 | 0.541 |
| E5-06 | PM d-axis Inductance (mH/phase)  | mH                   | 6.58                                | 3.82  | 2.24  |
| E5-07 | PM q-axis Inductance (mH/phase)  | mH                   | 6.58                                | 3.82  | 2.24  |
| E5-09 | PM Back-EMF Vpeak (mV/(rad/s))   | mVs/rad              | 0.0                                 | 0.0   | 0.0   |
| E5-24 | PM Back-EMF L-L Vrms (mV/rpm)    | mV/min <sup>-1</sup> | 26.3                                | 31.0  | 32.9  |

## 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]

| No.   | Name                            | Unit | Motor Code (setting value of E5-01) |       |       |
|-------|---------------------------------|------|-------------------------------------|-------|-------|
| E1-04 | Maximum Output Frequency        | Hz   | 180.0                               | 180.0 | 180.0 |
| E1-05 | Maximum Output Voltage          | V    | 200.0                               | 200.0 | 200.0 |
| E1-06 | Base Frequency                  | Hz   | 180.0                               | 180.0 | 180.0 |
| E1-09 | Minimum Output Frequency        | Hz   | 18.0                                | 18.0  | 18.0  |
| L3-24 | Motor Accel Time @ Rated Torque | s    | 0.100                               | 0.100 | 0.100 |
| n5-02 | Motor Inertia Acceleration Time | s    | 0.100                               | 0.100 | 0.100 |
| n8-49 | Heavy Load Id Current           | %    | 0.0                                 | 0.0   | 0.0   |

### ◆ Yaskawa SSR1 Series IPM Motors (Derated Torque)

Table 11.9 SSR1 Series Motor Code Setting for Specification of 200 V at 1750 min<sup>-1</sup> (r/min)

| No.         | Name                             | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------------|----------------------------------|----------------------|-------------------------------------|-------|-------|-------|-------|-------|
| E5-01       | PM Motor Code Selection          | -                    | 1202                                | 1203  | 1205  | 1206  | 1208  | 120A  |
|             | Voltage Class                    | V                    | 200                                 | 200   | 200   | 200   | 200   | 200   |
|             | Capacity                         | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   | 5.5   |
|             | Motor Rotation Speed             | min <sup>-1</sup>    | 1750                                | 1750  | 1750  | 1750  | 1750  | 1750  |
| E5-02       | PM Motor Rated Power             | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   | 5.5   |
| E5-03       | PM Motor Rated Current (FLA)     | A                    | 1.77                                | 3.13  | 5.73  | 8.44  | 13.96 | 20.63 |
| E5-04       | PM Motor Pole Count              | -                    | 6                                   | 6     | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase) | Ω                    | 8.233                               | 2.284 | 1.470 | 0.827 | 0.455 | 0.246 |
| E5-06       | PM d-axis Inductance (mH/phase)  | mH                   | 54.84                               | 23.02 | 17.22 | 8.61  | 7.20  | 4.86  |
| E5-07       | PM q-axis Inductance (mH/phase)  | mH                   | 64.10                               | 29.89 | 20.41 | 13.50 | 10.02 | 7.43  |
| E5-09       | PM Back-EMF Vpeak (mV/(rad/s))   | mVs/rad              | 223.7                               | 220.3 | 240.8 | 238.0 | 238.7 | 239.6 |
| E5-24       | PM Back-EMF L-L Vrms (mV/rpm)    | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency         | Hz                   | 87.5                                | 87.5  | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-05       | Maximum Output Voltage           | V                    | 190.0                               | 190.0 | 190.0 | 190.0 | 190.0 | 190.0 |
| E1-06       | Base Frequency                   | Hz                   | 87.5                                | 87.5  | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-09       | Minimum Output Frequency         | Hz                   | 4.4                                 | 4.4   | 4.4   | 4.4   | 4.4   | 4.4   |
| L3-24<br>*1 | Motor Accel Time @ Rated Torque  | s                    | 0.092                               | 0.076 | 0.051 | 0.066 | 0.075 | 0.083 |
| n5-02       | Motor Inertia Acceleration Time  | s                    | 0.092                               | 0.076 | 0.051 | 0.066 | 0.075 | 0.083 |
| n8-49       | Heavy Load Id Current            | %                    | -7.6                                | -11.5 | -9.1  | -19.0 | -18.7 | -23.4 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

Table 11.10 SSR1 Series Motor Code Setting for Specification of 200 V at 1750 min<sup>-1</sup> (r/min)

| No.   | Name                             | Unit              | Motor Code (setting value of E5-01) |       |       |       |       |
|-------|----------------------------------|-------------------|-------------------------------------|-------|-------|-------|-------|
| E5-01 | PM Motor Code Selection          | -                 | 120B                                | 120D  | 120E  | 120F  | 1210  |
|       | Voltage Class                    | V                 | 200                                 | 200   | 200   | 200   | 200   |
|       | Capacity                         | kW                | 7.5                                 | 11    | 15    | 18.5  | 22    |
|       | Motor Rotation Speed             | min <sup>-1</sup> | 1750                                | 1750  | 1750  | 1750  | 1750  |
| E5-02 | PM Motor Rated Power             | kW                | 7.5                                 | 11.0  | 15.00 | 18.50 | 22.00 |
| E5-03 | PM Motor Rated Current (FLA)     | A                 | 28.13                               | 41.4  | 55.4  | 68.2  | 80.6  |
| E5-04 | PM Motor Pole Count              | -                 | 6                                   | 6     | 6     | 6     | 6     |
| E5-05 | PM Motor Resistance (ohms/phase) | Ω                 | 0.198                               | 0.094 | 0.066 | 0.051 | 0.037 |

## 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]

| No.         | Name                            | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |
|-------------|---------------------------------|----------------------|-------------------------------------|-------|-------|-------|-------|
|             |                                 |                      |                                     |       |       |       |       |
| E5-06       | PM d-axis Inductance (mH/phase) | mH                   | 4.15                                | 3.40  | 2.45  | 2.18  | 1.71  |
| E5-07       | PM q-axis Inductance (mH/phase) | mH                   | 5.91                                | 3.91  | 3.11  | 2.55  | 2.05  |
| E5-09       | PM Back-EMF Vpeak (mV/(rad/s))  | mVs/rad              | 258.2                               | 239.3 | 248.1 | 253.6 | 250.0 |
| E5-24       | PM Back-EMF L-L Vrms (mV/rpm)   | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency        | Hz                   | 87.5                                | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-05       | Maximum Output Voltage          | V                    | 190.0                               | 190.0 | 190.0 | 190.0 | 190.0 |
| E1-06       | Base Frequency                  | Hz                   | 87.5                                | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-09       | Minimum Output Frequency        | Hz                   | 4.4                                 | 4.4   | 4.4   | 4.4   | 4.4   |
| L3-24<br>*/ | Motor Accel Time @ Rated Torque | s                    | 0.077                               | 0.084 | 0.102 | 0.101 | 0.098 |
| n5-02       | Motor Inertia Acceleration Time | s                    | 0.077                               | 0.084 | 0.102 | 0.101 | 0.098 |
| n8-49       | Heavy Load Id Current           | %                    | -18.5                               | -10.9 | -16.5 | -11.3 | -12.8 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.11 SSR1 Series Motor Code Setting for Specification of 400 V at 1750 min<sup>-1</sup> (r/min)**

| No.         | Name                             | Unit                 | Motor Code (setting value of E5-01) |        |       |       |       |       |
|-------------|----------------------------------|----------------------|-------------------------------------|--------|-------|-------|-------|-------|
|             |                                  |                      |                                     |        |       |       |       |       |
| E5-01       | PM Motor Code Selection          | -                    | 1232                                | 1233   | 1235  | 1236  | 1238  | 123A  |
|             | Voltage Class                    | V                    | 400                                 | 400    | 400   | 400   | 400   | 400   |
|             | Capacity                         | kW                   | 0.4                                 | 0.75   | 1.5   | 2.2   | 3.7   | 5.5   |
|             | Motor Rotation Speed             | min <sup>-1</sup>    | 1750                                | 1750   | 1750  | 1750  | 1750  | 1750  |
| E5-02       | PM Motor Rated Power             | kW                   | 0.4                                 | 0.75   | 1.5   | 2.2   | 3.7   | 5.5   |
| E5-03       | PM Motor Rated Current (FLA)     | A                    | 0.89                                | 1.56   | 2.81  | 4.27  | 7.08  | 10.31 |
| E5-04       | PM Motor Pole Count              | -                    | 6                                   | 6      | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase) | Ω                    | 25.370                              | 9.136  | 6.010 | 3.297 | 1.798 | 0.982 |
| E5-06       | PM d-axis Inductance (mH/phase)  | mH                   | 169.00                              | 92.08  | 67.71 | 34.40 | 32.93 | 22.7  |
| E5-07       | PM q-axis Inductance (mH/phase)  | mH                   | 197.50                              | 119.56 | 81.71 | 54.00 | 37.70 | 26.80 |
| E5-09       | PM Back-EMF Vpeak (mV/(rad/s))   | mVs/rad              | 392.6                               | 440.6  | 478.3 | 466.3 | 478.8 | 478.1 |
| E5-24       | PM Back-EMF L-L Vrms (mV/rpm)    | mV/min <sup>-1</sup> | 0.0                                 | 0.0    | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency         | Hz                   | 87.5                                | 87.5   | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-05       | Maximum Output Voltage           | V                    | 380.0                               | 380.0  | 380.0 | 380.0 | 380.0 | 380.0 |
| E1-06       | Base Frequency                   | Hz                   | 87.5                                | 87.5   | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-09       | Minimum Output Frequency         | Hz                   | 4.4                                 | 4.4    | 4.4   | 4.4   | 4.4   | 4.4   |
| L3-24<br>*/ | Motor Accel Time @ Rated Torque  | s                    | 0.092                               | 0.076  | 0.051 | 0.066 | 0.075 | 0.083 |
| n5-02       | Motor Inertia Acceleration Time  | s                    | 0.092                               | 0.076  | 0.051 | 0.066 | 0.075 | 0.083 |
| n8-49       | Heavy Load Id Current            | %                    | -8.6                                | -11.5  | -10.3 | -19.8 | -8.5  | -11.0 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.12 SSR1 Series Motor Code Setting for Specification of 400 V at 1750 min<sup>-1</sup> (r/min)**

| No.   | Name                    | Unit              | Motor Code (setting value of E5-01) |      |      |       |       |       |
|-------|-------------------------|-------------------|-------------------------------------|------|------|-------|-------|-------|
|       |                         |                   |                                     |      |      |       |       |       |
| E5-01 | PM Motor Code Selection | -                 | 123B                                | 123D | 123E | 123F  | 1240  | 1242  |
|       | Voltage Class           | V                 | 400                                 | 400  | 400  | 400   | 400   | 400   |
|       | Capacity                | kW                | 7.5                                 | 11   | 15   | 18.5  | 22    | 30    |
|       | Motor Rotation Speed    | min <sup>-1</sup> | 1750                                | 1750 | 1750 | 1750  | 1750  | 1750  |
| E5-02 | PM Motor Rated Power    | kW                | 7.5                                 | 11.0 | 15   | 18.50 | 22.00 | 30.00 |

## 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------------|--|----------------------|-------------------------------------|-------|-------|-------|-------|-------|
| E5-03       | PM Motor Rated Current (FLA)               | A                    | 13.65                               | 20.7  | 27.5  | 33.4  | 39.8  | 52.0  |
| E5-04       | PM Motor Pole Count                        | -                    | 6                                   | 6     | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase)           | Ω                    | 0.786                               | 0.349 | 0.272 | 0.207 | 0.148 | 0.235 |
| E5-06       | PM d-axis Inductance (mH/phase)            | mH                   | 16.49                               | 13.17 | 10.30 | 8.72  | 6.81  | 5.4   |
| E5-07       | PM q-axis Inductance (mH/phase)            | mH                   | 23.46                               | 15.60 | 12.77 | 11.22 | 8.47  | 7.26  |
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 520.0                               | 481.5 | 498.8 | 509.5 | 503.9 | 561.7 |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency                   | Hz                   | 87.5                                | 87.5  | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-05       | Maximum Output Voltage                     | V                    | 380.0                               | 380.0 | 380.0 | 380.0 | 380.0 | 380.0 |
| E1-06       | Base Frequency                             | Hz                   | 87.5                                | 87.5  | 87.5  | 87.5  | 87.5  | 87.5  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 4.4                                 | 4.4   | 4.4   | 4.4   | 4.4   | 4.4   |
| L3-24<br>*/ | Motor Accel Time @ Rated Torque            | s                    | 0.077                               | 0.084 | 0.102 | 0.101 | 0.098 | 0.130 |
| n5-02       | Motor Inertia Acceleration Time            | s                    | 0.077                               | 0.084 | 0.102 | 0.101 | 0.098 | 0.130 |
| n8-49       | Heavy Load Id Current                      | %                    | -18.6                               | -12.5 | -15.5 | -17.9 | -15.1 | -16.8 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.13 SSR1 Series Motor Code Setting for Specification of 200 V at 1450 min<sup>-1</sup> (r/min)**

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------------|--|----------------------|-------------------------------------|-------|-------|-------|-------|-------|
| E5-01       | PM Motor Code Selection                    | -                    | 1302                                | 1303  | 1305  | 1306  | 1308  | 130A  |
|             | Voltage Class                              | V                    | 200                                 | 200   | 200   | 200   | 200   | 200   |
|             | Capacity                                   | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   | 5.5   |
|             | Motor Rotation Speed                       | min <sup>-1</sup>    | 1450                                | 1450  | 1450  | 1450  | 1450  | 1450  |
| E5-02       | PM Motor Rated Power                       | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   | 5.5   |
| E5-03       | PM Motor Rated Current (FLA)               | A                    | 1.88                                | 3.13  | 5.63  | 8.33  | 14.17 | 20.63 |
| E5-04       | PM Motor Pole Count                        | -                    | 6                                   | 6     | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase)           | Ω                    | 3.190                               | 1.940 | 1.206 | 0.665 | 0.341 | 0.252 |
| E5-06       | PM d-axis Inductance (mH/phase)            | mH                   | 32.15                               | 26.12 | 14.72 | 12.27 | 8.27  | 6.49  |
| E5-07       | PM q-axis Inductance (mH/phase)            | mH                   | 41.74                               | 34.30 | 20.15 | 14.77 | 9.81  | 7.74  |
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 264.3                               | 269.6 | 284.3 | 287.1 | 284.5 | 298.0 |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency                   | Hz                   | 72.5                                | 72.5  | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-05       | Maximum Output Voltage                     | V                    | 190.0                               | 190.0 | 190.0 | 190.0 | 190.0 | 190.0 |
| E1-06       | Base Frequency                             | Hz                   | 72.5                                | 72.5  | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 3.6                                 | 3.6   | 3.6   | 3.6   | 3.6   | 3.6   |
| L3-24<br>*/ | Motor Accel Time @ Rated Torque            | s                    | 0.098                               | 0.071 | 0.066 | 0.087 | 0.085 | 0.072 |
| n5-02       | Motor Inertia Acceleration Time            | s                    | 0.098                               | 0.071 | 0.066 | 0.087 | 0.085 | 0.072 |
| n8-49       | Heavy Load Id Current                      | %                    | -6.6                                | -10.9 | -13.5 | -9.0  | -9.5  | -10.1 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.14 SSR1 Series Motor Code Setting for Specification of 200 V at 1450 min<sup>-1</sup> (r/min)**

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |
|-------------|--|----------------------|-------------------------------------|-------|-------|-------|-------|
| E5-01       | PM Motor Code Selection                    | -                    | 130B                                | 130D  | 130E  | 130F  | 1310  |
|             | Voltage Class                              | V                    | 200                                 | 200   | 200   | 200   | 200   |
|             | Capacity                                   | kW                   | 7.5                                 | 11    | 15    | 18.5  | 22    |
|             | Motor Rotation Speed                       | min <sup>-1</sup>    | 1450                                | 1450  | 1450  | 1450  | 1450  |
| E5-02       | PM Motor Rated Power                       | kW                   | 7.5                                 | 11.0  | 15.00 | 18.50 | 22.00 |
| E5-03       | PM Motor Rated Current (FLA)               | A                    | 27.71                               | 39.6  | 55.5  | 65.6  | 75.1  |
| E5-04       | PM Motor Pole Count                        | -                    | 6                                   | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase)           | Ω                    | 0.184                               | 0.099 | 0.075 | 0.057 | 0.041 |
| E5-06       | PM d-axis Inductance (mH/phase)            | mH                   | 6.91                                | 4.07  | 3.29  | 2.53  | 1.98  |
| E5-07       | PM q-axis Inductance (mH/phase)            | mH                   | 7.66                                | 4.65  | 3.84  | 3.01  | 2.60  |
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 335.0                               | 303.9 | 311.2 | 300.9 | 327.7 |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency                   | Hz                   | 72.5                                | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-05       | Maximum Output Voltage                     | V                    | 190.0                               | 190.0 | 190.0 | 190.0 | 190.0 |
| E1-06       | Base Frequency                             | Hz                   | 72.5                                | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 3.6                                 | 3.6   | 3.6   | 3.6   | 3.6   |
| L3-24<br>*1 | Motor Accel Time @ Rated Torque            | s                    | 0.084                               | 0.096 | 0.085 | 0.080 | 0.122 |
| n5-02       | Motor Inertia Acceleration Time            | s                    | 0.084                               | 0.096 | 0.085 | 0.080 | 0.122 |
| n8-49       | Heavy Load Id Current                      | %                    | -6.0                                | -9.3  | -10.7 | -13.2 | -15.7 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.15 SSR1 Series Motor Code Setting for Specification of 400 V at 1450 min<sup>-1</sup> (r/min)**

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |        |       |       |       |       |
|-------------|--|----------------------|-------------------------------------|--------|-------|-------|-------|-------|
| E5-01       | PM Motor Code Selection                    | -                    | 1332                                | 1333   | 1335  | 1336  | 1338  | 133A  |
|             | Voltage Class                              | V                    | 400                                 | 400    | 400   | 400   | 400   | 400   |
|             | Capacity                                   | kW                   | 0.4                                 | 0.75   | 1.5   | 2.2   | 3.7   | 5.5   |
|             | Motor Rotation Speed                       | min <sup>-1</sup>    | 1450                                | 1450   | 1450  | 1450  | 1450  | 1450  |
| E5-02       | PM Motor Rated Power                       | kW                   | 0.4                                 | 0.75   | 1.5   | 2.2   | 3.7   | 5.5   |
| E5-03       | PM Motor Rated Current (FLA)               | A                    | 0.94                                | 1.56   | 2.81  | 4.27  | 6.98  | 10.21 |
| E5-04       | PM Motor Pole Count                        | -                    | 6                                   | 6      | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase)           | Ω                    | 12.760                              | 7.421  | 4.825 | 2.656 | 1.353 | 0.999 |
| E5-06       | PM d-axis Inductance (mH/phase)            | mH                   | 128.60                              | 85.11  | 58.87 | 46.42 | 31.73 | 26.20 |
| E5-07       | PM q-axis Inductance (mH/phase)            | mH                   | 166.96                              | 113.19 | 80.59 | 60.32 | 40.45 | 30.94 |
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 528.6                               | 544.2  | 568.5 | 572.8 | 562.9 | 587.6 |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0    | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency                   | Hz                   | 72.5                                | 72.5   | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-05       | Maximum Output Voltage                     | V                    | 380.0                               | 380.0  | 380.0 | 380.0 | 380.0 | 380.0 |
| E1-06       | Base Frequency                             | Hz                   | 72.5                                | 72.5   | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 3.6                                 | 3.6    | 3.6   | 3.6   | 3.6   | 3.6   |
| L3-24<br>*1 | Motor Accel Time @ Rated Torque            | s                    | 0.098                               | 0.071  | 0.066 | 0.087 | 0.085 | 0.072 |

## 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]

| No.   | Name                            | Unit | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------|---------------------------------|------|-------------------------------------|-------|-------|-------|-------|-------|
| n5-02 | Motor Inertia Acceleration Time | s    | 0.098                               | 0.071 | 0.066 | 0.087 | 0.085 | 0.072 |
| n8-49 | Heavy Load Id Current           | %    | -6.6                                | -9.2  | -13.5 | -12.1 | -13.7 | -10.1 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.16 SSR1 Series Motor Code Setting for Specification of 400 V at 1450 min<sup>-1</sup> (r/min)**

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------------|--|----------------------|-------------------------------------|-------|-------|-------|-------|-------|
| E5-01       | PM Motor Code Selection                    | -                    | 133B                                | 133D  | 133E  | 133F  | 1340  | 1342  |
|             | Voltage Class                              | V                    | 400                                 | 400   | 400   | 400   | 400   | 400   |
|             | Capacity                                   | kW                   | 7.5                                 | 11    | 15    | 18.5  | 22    | 30    |
|             | Motor Rotation Speed                       | min <sup>-1</sup>    | 1450                                | 1450  | 1450  | 1450  | 1450  | 1450  |
| E5-02       | PM Motor Rated Power                       | kW                   | 7.5                                 | 11.0  | 15    | 18.50 | 22.00 | 30.00 |
| E5-03       | PM Motor Rated Current (FLA)               | A                    | 13.85                               | 19.5  | 27.4  | 32.9  | 37.6  | 52.5  |
| E5-04       | PM Motor Pole Count                        | -                    | 6                                   | 6     | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase)           | Ω                    | 0.713                               | 0.393 | 0.295 | 0.223 | 0.164 | 0.137 |
| E5-06       | PM d-axis Inductance (mH/phase)            | mH                   | 27.06                               | 15.51 | 12.65 | 9.87  | 7.90  | 7.01  |
| E5-07       | PM q-axis Inductance (mH/phase)            | mH                   | 33.45                               | 19.63 | 15.87 | 12.40 | 10.38 | 8.68  |
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 670.1                               | 612.7 | 624.6 | 610.4 | 655.4 | 708.4 |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency                   | Hz                   | 72.5                                | 72.5  | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-05       | Maximum Output Voltage                     | V                    | 380.0                               | 380.0 | 380.0 | 380.0 | 380.0 | 380.0 |
| E1-06       | Base Frequency                             | Hz                   | 72.5                                | 72.5  | 72.5  | 72.5  | 72.5  | 72.5  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 3.6                                 | 3.6   | 3.6   | 3.6   | 3.6   | 3.6   |
| L3-24<br>*1 | Motor Accel Time @ Rated Torque            | s                    | 0.084                               | 0.096 | 0.085 | 0.080 | 0.122 | 0.108 |
| n5-02       | Motor Inertia Acceleration Time            | s                    | 0.084                               | 0.096 | 0.085 | 0.080 | 0.122 | 0.108 |
| n8-49       | Heavy Load Id Current                      | %                    | -12.2                               | -15.5 | -15.1 | -16.0 | -15.7 | -11.5 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.17 SSR1 Series Motor Code Setting for Specification of 200 V at 1150 min<sup>-1</sup> (r/min)**

| No.   | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------|--|----------------------|-------------------------------------|-------|-------|-------|-------|-------|
| E5-01 | PM Motor Code Selection                    | -                    | 1402                                | 1403  | 1405  | 1406  | 1408  | 140A  |
|       | Voltage Class                              | V                    | 200                                 | 200   | 200   | 200   | 200   | 200   |
|       | Capacity                                   | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   | 5.5   |
|       | Motor Rotation Speed                       | min <sup>-1</sup>    | 1150                                | 1150  | 1150  | 1150  | 1150  | 1150  |
| E5-02 | PM Motor Rated Power                       | kW                   | 0.4                                 | 0.75  | 1.5   | 2.2   | 3.7   | 5.5   |
| E5-03 | PM Motor Rated Current (FLA)               | A                    | 1.88                                | 3.02  | 6.00  | 8.85  | 14.27 | 20.21 |
| E5-04 | PM Motor Pole Count                        | -                    | 6                                   | 6     | 6     | 6     | 6     | 6     |
| E5-05 | PM Motor Resistance (ohms/phase)           | Ω                    | 4.832                               | 2.704 | 1.114 | 0.511 | 0.412 | 0.303 |
| E5-06 | PM d-axis Inductance (mH/phase)            | mH                   | 48.68                               | 32.31 | 19.22 | 12.15 | 7.94  | 11.13 |
| E5-07 | PM q-axis Inductance (mH/phase)            | mH                   | 63.21                               | 40.24 | 24.38 | 15.35 | 11.86 | 14.06 |
| E5-09 | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 320.4                               | 327.1 | 364.4 | 344.4 | 357.5 | 430.8 |
| E5-24 | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04 | Maximum Output Frequency                   | Hz                   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  | 57.5  |



## 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]

| No.         | Name                            | Unit | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------------|---------------------------------|------|-------------------------------------|-------|-------|-------|-------|-------|
|             |                                 |      |                                     |       |       |       |       |       |
| E1-05       | Maximum Output Voltage          | V    | 190.0                               | 190.0 | 190.0 | 190.0 | 190.0 | 190.0 |
| E1-06       | Base Frequency                  | Hz   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  | 57.5  |
| E1-09       | Minimum Output Frequency        | Hz   | 2.9                                 | 2.9   | 2.9   | 2.9   | 2.9   | 2.9   |
| L3-24<br>*1 | Motor Accel Time @ Rated Torque | s    | 0.062                               | 0.044 | 0.080 | 0.090 | 0.067 | 0.072 |
| n5-02       | Motor Inertia Acceleration Time | s    | 0.062                               | 0.044 | 0.080 | 0.090 | 0.067 | 0.072 |
| n8-49       | Heavy Load Id Current           | %    | -8.8                                | -9.9  | -9.3  | -10.0 | -17.7 | -12.3 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.18 SSR1 Series Motor Code Setting for Specification of 200 V at 1150 min<sup>-1</sup> (r/min)**

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |  |
|-------------|--|----------------------|-------------------------------------|-------|-------|-------|-------|--|
|             |  |                      |                                     |       |       |       |       |  |
| E5-01       | PM Motor Code Selection                    | -                    | 140B                                | 140D  | 140E  | 140F  | 1410  |  |
|             | Voltage Class                              | V                    | 200                                 | 200   | 200   | 200   | 200   |  |
|             | Capacity                                   | kW                   | 7.5                                 | 11    | 15    | 18.5  | 22    |  |
|             | Motor Rotation Speed                       | min <sup>-1</sup>    | 1150                                | 1150  | 1150  | 1150  | 1150  |  |
| E5-02       | PM Motor Rated Power                       | kW                   | 7.5                                 | 11.0  | 15    | 18.50 | 22.00 |  |
| E5-03       | PM Motor Rated Current (FLA)               | A                    | 26.67                               | 39.9  | 55.6  | 63.5  | 74.4  |  |
| E5-04       | PM Motor Pole Count                        | -                    | 6                                   | 6     | 6     | 6     | 6     |  |
| E5-05       | PM Motor Resistance (ohms/phase)           | Ω                    | 0.165                               | 0.113 | 0.084 | 0.066 | 0.048 |  |
| E5-06       | PM d-axis Inductance (mH/phase)            | mH                   | 6.59                                | 4.96  | 3.83  | 3.33  | 2.38  |  |
| E5-07       | PM q-axis Inductance (mH/phase)            | mH                   | 8.55                                | 6.12  | 4.65  | 4.50  | 3.15  |  |
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 391.5                               | 384.4 | 372.1 | 421.3 | 410.9 |  |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   |  |
| E1-04       | Maximum Output Frequency                   | Hz                   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  |  |
| E1-05       | Maximum Output Voltage                     | V                    | 190.0                               | 190.0 | 190.0 | 190.0 | 190.0 |  |
| E1-06       | Base Frequency                             | Hz                   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  |  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 2.9                                 | 2.9   | 2.9   | 2.9   | 2.9   |  |
| L3-24<br>*1 | Motor Accel Time @ Rated Torque            | s                    | 0.088                               | 0.073 | 0.062 | 0.091 | 0.092 |  |
| n5-02       | Motor Inertia Acceleration Time            | s                    | 0.088                               | 0.073 | 0.062 | 0.091 | 0.092 |  |
| n8-49       | Heavy Load Id Current                      | %                    | -15.3                               | -13.9 | -14.4 | -17.9 | -15.9 |  |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.19 SSR1 Series Motor Code Setting for Specification of 400 V at 1150 min<sup>-1</sup> (r/min)**

| No.   | Name                             | Unit              | Motor Code (setting value of E5-01) |        |       |       |       |       |
|-------|----------------------------------|-------------------|-------------------------------------|--------|-------|-------|-------|-------|
|       |                                  |                   |                                     |        |       |       |       |       |
| E5-01 | PM Motor Code Selection          | -                 | 1432                                | 1433   | 1435  | 1436  | 1438  | 143A  |
|       | Voltage Class                    | V                 | 400                                 | 400    | 400   | 400   | 400   | 400   |
|       | Capacity                         | kW                | 0.4                                 | 0.75   | 1.5   | 2.2   | 3.7   | 5.5   |
|       | Motor Rotation Speed             | min <sup>-1</sup> | 1150                                | 1150   | 1150  | 1150  | 1150  | 1150  |
| E5-02 | PM Motor Rated Power             | kW                | 0.4                                 | 0.75   | 1.5   | 2.2   | 3.7   | 5.5   |
| E5-03 | PM Motor Rated Current (FLA)     | A                 | 0.94                                | 1.51   | 3.00  | 4.43  | 7.08  | 10.10 |
| E5-04 | PM Motor Pole Count              | -                 | 6                                   | 6      | 6     | 6     | 6     | 6     |
| E5-05 | PM Motor Resistance (ohms/phase) | Ω                 | 19.320                              | 10.800 | 4.456 | 2.044 | 1.483 | 1.215 |
| E5-06 | PM d-axis Inductance (mH/phase)  | mH                | 194.70                              | 129.20 | 76.88 | 48.60 | 37.58 | 44.54 |
| E5-07 | PM q-axis Inductance (mH/phase)  | mH                | 252.84                              | 160.90 | 97.52 | 61.40 | 47.65 | 56.26 |

## 11.22 Parameters Changed by E5-01 [PM Motor Code Selection]

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------------|--|----------------------|-------------------------------------|-------|-------|-------|-------|-------|
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 640.9                               | 654.1 | 728.8 | 688.9 | 702.0 | 861.5 |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency                   | Hz                   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  | 57.5  |
| E1-05       | Maximum Output Voltage                     | V                    | 380.0                               | 380.0 | 380.0 | 380.0 | 380.0 | 380.0 |
| E1-06       | Base Frequency                             | Hz                   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  | 57.5  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 2.9                                 | 2.9   | 2.9   | 2.9   | 2.9   | 2.9   |
| L3-24<br>*J | Motor Accel Time @ Rated Torque            | s                    | 0.062                               | 0.044 | 0.080 | 0.090 | 0.067 | 0.072 |
| n5-02       | Motor Inertia Acceleration Time            | s                    | 0.062                               | 0.044 | 0.080 | 0.090 | 0.067 | 0.072 |
| n8-49       | Heavy Load Id Current                      | %                    | -8.8                                | -9.9  | -9.3  | -10.0 | -12.8 | -12.3 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

**Table 11.20 SSR1 Series Motor Code Setting for Specification of 400 V at 1150 min<sup>-1</sup> (r/min)**

| No.         | Name                                       | Unit                 | Motor Code (setting value of E5-01) |       |       |       |       |       |
|-------------|--|----------------------|-------------------------------------|-------|-------|-------|-------|-------|
| E5-01       | PM Motor Code Selection                    | -                    | 143B                                | 143D  | 143E  | 143F  | 1440  | 1442  |
|             | Voltage Class                              | V                    | 400                                 | 400   | 400   | 400   | 400   | 400   |
|             | Capacity                                   | kW                   | 7.5                                 | 11    | 15    | 18.5  | 22    | 30    |
|             | Motor Rotation Speed                       | min <sup>-1</sup>    | 1150                                | 1150  | 1150  | 1150  | 1150  | 1150  |
| E5-02       | PM Motor Rated Power                       | kW                   | 7.5                                 | 11.0  | 15    | 18.50 | 22.00 | 30.00 |
| E5-03       | PM Motor Rated Current (FLA)               | A                    | 13.33                               | 19.9  | 27.8  | 31.8  | 37.2  | 52.1  |
| E5-04       | PM Motor Pole Count                        | -                    | 6                                   | 6     | 6     | 6     | 6     | 6     |
| E5-05       | PM Motor Resistance (ohms/phase)           | Ω                    | 0.660                               | 0.443 | 0.331 | 0.264 | 0.192 | 0.140 |
| E5-06       | PM d-axis Inductance (mH/phase)            | mH                   | 26.36                               | 19.10 | 15.09 | 13.32 | 9.52  | 8.16  |
| E5-07       | PM q-axis Inductance (mH/phase)            | mH                   | 34.20                               | 24.67 | 18.56 | 18.00 | 12.60 | 11.40 |
| E5-09       | PM Back-EMF V <sub>peak</sub> (mV/(rad/s)) | mVs/rad              | 783.0                               | 762.2 | 749.6 | 842.7 | 821.8 | 872.3 |
| E5-24       | PM Back-EMF L-L V <sub>rms</sub> (mV/rpm)  | mV/min <sup>-1</sup> | 0.0                                 | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |
| E1-04       | Maximum Output Frequency                   | Hz                   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  | 57.5  |
| E1-05       | Maximum Output Voltage                     | V                    | 380.0                               | 380.0 | 380.0 | 380.0 | 380.0 | 380.0 |
| E1-06       | Base Frequency                             | Hz                   | 57.5                                | 57.5  | 57.5  | 57.5  | 57.5  | 57.5  |
| E1-09       | Minimum Output Frequency                   | Hz                   | 2.9                                 | 2.9   | 2.9   | 2.9   | 2.9   | 2.9   |
| L3-24<br>*J | Motor Accel Time @ Rated Torque            | s                    | 0.088                               | 0.073 | 0.062 | 0.091 | 0.092 | 0.125 |
| n5-02       | Motor Inertia Acceleration Time            | s                    | 0.088                               | 0.073 | 0.062 | 0.091 | 0.092 | 0.125 |
| n8-49       | Heavy Load Id Current                      | %                    | -15.3                               | -16.7 | -14.9 | -17.9 | -15.9 | -17.7 |

\*1 The default setting changes when the setting for o2-04 [Drive Model Selection] changes.

## Parameter Details

---

|       |                                      |     |
|-------|--------------------------------------|-----|
| 12.1  | Section Safety .....                 | 460 |
| 12.2  | A: Initialization Parameters.....    | 461 |
| 12.3  | b: Application .....                 | 480 |
| 12.4  | C: Tuning .....                      | 524 |
| 12.5  | d: References .....                  | 544 |
| 12.6  | E: Motor Parameters .....            | 560 |
| 12.7  | F: Options .....                     | 580 |
| 12.8  | H: Terminal Function Selection ..... | 603 |
| 12.9  | L: Protection Functions .....        | 669 |
| 12.10 | n: Special Adjustment.....           | 714 |
| 12.11 | o: Keypad-Related Settings.....      | 733 |
| 12.12 | T: Auto-Tuning.....                  | 753 |

## 12.1 Section Safety

 **DANGER**

**Do not ignore the safety messages in this manual.**

If you ignore the safety messages in this manual, it will cause serious injury or death. The manufacturer is not responsible for injuries or damage to equipment.

## 12.2 A: Initialization Parameters

*A1* parameters [Initialization Parameters] set the operating environment and operating conditions for the drive.

### ◆ A1: Initialization

*A1* parameters set the operating environment and operating conditions for the drive. For example, these parameters set the keypad language, the control method, and the parameter access level for the drive.

#### ■ A1-00: Language Selection

| No.<br>(Hex.)          | Name               | Description   | Default<br>(Range) |
|------------------------|--------------------|---|--------------------|
| A1-00<br>(0100)<br>RUN | Language Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the language for the LCD keypad. | 0<br>(0 - 12)      |

**Note:**

- This parameter is only available when you use an LCD keypad or a Bluetooth LCD Keypad.
- When you use *A1-03* [Initialize Parameters] to initialize the drive, the drive will not set this parameter to factory default.

#### 0 : English

#### 1 : Japanese

#### 2 : German

#### 3 : French

#### 4 : Italian

#### 5 : Spanish

#### 6 : Portuguese

#### 7 : Chinese

#### 8 : Czech

#### 9 : Russian

#### 10 : Turkish

#### 11 : Polish

#### 12 : Greek

#### ■ A1-01: Access Level Selection

| No.<br>(Hex.)          | Name                   | Description  | Default<br>(Range) |
|------------------------|------------------------|--|--------------------|
| A1-01<br>(0101)<br>RUN | Access Level Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets user access to parameters. The access level controls which parameters the keypad will display, and which parameters the user can set. | 2<br>(0 - 3)       |

#### 0 : Operation Only

Access to *A1-00*, *A1-01*, *A1-04* [Password], and the *U* Monitors.

#### 1 : User Parameters

Access to *A1-00*, *A1-01*, *A1-04*, and *A2-01* to *A2-32* [User Parameters 1 to 32].

#### 2 : Advanced Level

Access to all parameters, but not Expert Mode parameters.

#### 3 : Expert Level

Access to all parameters including Expert Mode parameters.

Table 12.1 shows which keypad screens are available for each *A1-01* settings.

**Table 12.1 Access Level and Available Keypad Screens**

| Mode             | Keypad Screen                 | A1-01 [Access Level Selection] Setting |     |     |     |
|------------------|-------------------------------|--|-----|-----|-----|
|                  |                               | 0                                      | 1   | 2   | 3   |
| Drive Mode       | Monitors                      | Yes                                    | Yes | Yes | Yes |
| Programming Mode | Parameters                    | Yes                                    | Yes | Yes | Yes |
|                  | User Custom Parameters        | No                                     | Yes | Yes | Yes |
|                  | Parameter Backup/Restore      | No                                     | No  | Yes | Yes |
|                  | Modified Parameters/Fault Log | No                                     | No  | Yes | Yes |
|                  | Auto-Tuning                   | No                                     | No  | Yes | Yes |
|                  | Initial Setup Screen          | No                                     | No  | Yes | Yes |
|                  | Diagnostic Tools              | No                                     | No  | Yes | Yes |

**Note:**

- When you use A1-04 and A1-05 [Password Setting] to set a password, you cannot change the values set in A1-01 to A1-03, A1-06, A1-07, or A2-01 to A2-32.
- When H1-xx = 1B [MFDI Function Select = Program Lockout], you must activate the terminal to change parameter settings.
- When you use MEMOBUS/Modbus communications, you must send the Enter command from the controller to the drive and complete the serial communication write process before you can use the keypad to change parameter settings.

**■ A1-02: Control Method Selection**

| No. (Hex.)   | Name                     | Description   | Default (Range)   |
|--------------|--------------------------|---|-------------------|
| A1-02 (0102) | Control Method Selection | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the control method for the drive application and the motor. | 0 (0, 2, 5, 6, 8) |

**Note:**

When you change the A1-02 setting, the parameter values specified by A1-02 are changed to their default values.

Sets the control method for the drive application and the motor.

**0 : V/f Control**

Use this control method in these applications and conditions:

- For general variable-speed control applications in which a high level of responsiveness or high-precision speed control is not necessary.
- To connect more than one motor to one drive
- When there is not sufficient data to set the motor parameters
- When it is not possible to do Auto-Tuning. The speed control range is 1:40.

**2 : Open Loop Vector**

Use this control method for general variable-speed control applications in which high-precision speed control is necessary. In this control method, a feedback signal from the motor is not necessary to have high torque response and high torque when operating at low speeds. The speed control range is 1:120.

**5 : PM Open Loop Vector**

The drive controls an IPM motor or SPM motor in this control method. Use this control method for general variable-speed control applications in which a high level of responsiveness or high-precision speed control are not necessary. The speed control range is 1:20.

**6 : PM Advanced Open Loop Vector**

The drive can control an IPM motor in this control method. Use this control method for general variable-speed control applications in which high-precision speed control and torque limit are necessary. The speed control range is 1:20. The speed control range is 1:100 when n8-57 = 1 [HFI Overlap Selection = Enabled].

**8 : EZ Vector Control**

The drive controls induction motors and PM motors in this control method. This control method uses an easier procedure to operate motors with more efficiency. Use this control method for derating torque applications. For example, fans and pumps.

## ■ A1-03: Initialize Parameters

| No.<br>(Hex.)   | Name                  | Description  | Default<br>(Range) |
|-----------------|-----------------------|--|--------------------|
| A1-03<br>(0103) | Initialize Parameters | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets parameters to default values. | 0<br>(0 - 3330)    |

### Note:

- After you initialize the drive, the drive automatically sets  $A1-03 = 0$ .
- User Parameters can save the parameter values for your application and use these values as default values for drive initialization.
- To use the 2 motor switchover function, first turn OFF the terminal to which  $H1-xx = 16$  [MFDI Function Selection = Motor 2 Selection] is set, then change the  $A1-03$  setting. An incorrect procedure will trigger  $oPE08$  [Parameter Selection Error].

## 0 : No Initialization

### 1110 : User Initialization

Sets parameters to the values set by the user as user settings. Set  $o2-03 = 1$  [User Parameter Default Value = Set defaults] to save the user settings.

You can save the parameter settings that were adjusted for the test run as user-set default values to the drive. When you make changes to the parameter values after you save the settings as User Parameter Settings, the drive will set the parameters to the User Parameter Setting value when you initialize with  $A1-03 = 1110$ .

Follow this procedure to save User Parameter setting values, and to do a User Initialization.

1. Set parameters correctly for the application.
2. Set  $o2-03 = 1$  [User Parameter Default Value = Set defaults].  
This saves parameter settings for a User Initialization.  
The drive will then automatically set  $o2-03 = 0$ .
3. Set  $A1-03 = 1110$  to reset to the saved parameter settings.  
When you initialize the drive, the drive sets the parameter values to the User Parameter setting values.

### 2220 : 2-Wire Initialization

Sets MFDI terminal S1 to Forward Run and terminal S2 to Reverse Run, and resets all parameters to default settings.

### 3330 : 3-Wire Initialization

Sets MFDI terminal S1 to Run, terminal S2 to Stop, and terminal S5 to FWD/REV, and resets all parameters to default settings.

The drive will not initialize the parameters in [Table 12.2](#) when  $A1-03 = 2220, 3330$ .

**Table 12.2 Parameters that are not Initialized Using a 2-Wire Sequence or a 3-Wire Sequence**

| No.         | Name   |
|-------------|--|
| A1-00       | Language Selection   |
| A1-02       | Control Method Selection   |
| A1-07       | DriveWorksEZ Function Selection  |
| A1-12       | Bluetooth ID   |
| E1-03       | V/f Pattern Selection  |
| E5-01       | PM Motor Code Selection  |
| E5-02       | PM Motor Rated Power (kW)  |
| E5-03       | Motor Rated Current (FLA)  |
| E5-04       | PM Motor Pole Count  |
| E5-05       | PM Motor Resistance (ohms/phase)   |
| E5-06       | PM d-axis Inductance (mH/phase)  |
| E5-07       | PM q-axis Inductance (mH/phase)  |
| E5-09       | PM Back-EMF $V_{peak}$ (mV/(rad/s))  |
| E5-24       | PM Back-EMF L-L $V_{rms}$ (mV/rpm)   |
| E5-25       | Polarity Estimation Timeout  |
| F6-08       | Comm Parameter Reset @Initialize   |
| F6-xx/F7-xx | Communication Option Parameters<br>Set $F6-08 = 1$ [Comm Parameter Reset @Initialize = Reset Back to Factory Default] to initialize communication option parameters. |


## 12.2 A: Initialization Parameters

| No.           | Name                          |
|---------------|-------------------------------|
| L8-35         | Installation Method Selection |
| o2-04         | Drive Model (KVA) Selection   |
| q1-xx - q8-xx | DriveWorksEZ Parameters       |
| r1-xx         | DWEZ Connection 1-20          |

### Note:


- Set *A1-06 [Application Preset]* to let the drive automatically set the best parameter settings for the selected application. The drive does not initialize *A1-02* when *A1-03 = 2220, 3330*.
- When *A1-03 = 2220, 3330*, the drive automatically set *A1-05 [Password Setting] = 0000*. Make sure that you set the password again for applications where a password is necessary.

### ■ A1-04: Password

| No. (Hex.)   | Name     | Description   | Default (Range)       |
|--------------|----------|---|-----------------------|
| A1-04 (0104) | Password | <br>Entry point for the password set in <i>A1-05 [Password Setting]</i> . The user can view the settings of parameters that are locked without entering the password. Enter the correct password in this parameter to change parameter settings. | 0000<br>(0000 - 9999) |

If the password entered in *A1-04* does not agree with the password setting in *A1-05*, you cannot change these parameters:

- *A1-01 [Access Level Selection]*
- *A1-02 [Control Method Selection]*
- *A1-03 [Initialize Parameters]*
- *A1-06 [Application Preset]*
- *A1-07 [DriveWorksEZ Function Selection]*
- *A2-01 to A2-32 [User Parameter 1 to 32]*















To lock parameter settings after making changes without changing the password, enter the incorrect password in *A1-04* and push .


### Enter the Password to Unlock Parameters

Use this procedure to unlock parameter settings.


Set the password in *A1-05 [Password Setting]*, and show the Parameter Setting Mode screen on the keypad.

This procedure verifies the password, and makes sure that the parameter settings are unlocked.

1. Push  or  to select "A: Initialization Parameters", then push .
2. Push  or  to select [*A1-04*], then push .  
You can now change parameter settings.
3. Push  or  to move the digit and enter the password.
4. Push  to confirm the password.  
The drive unlocks the parameters and automatically shows the Parameters Screen.
5. Push  or  to show [*A1-02*], then push .
6. Push  or  to make sure that you can change the setting value.

Push  (Back) until the keypad shows the Parameter Setup Mode screen.

### ■ A1-05: Password Setting



| No. (Hex.)   | Name             | Description  | Default (Range)       |
|--------------|------------------|--|-----------------------|
| A1-05 (0105) | Password Setting | <br>Set the password to lock parameters and prevent changes to parameter settings. Enter the correct password in <i>A1-04 [Password]</i> to unlock parameters and accept changes. | 0000<br>(0000 - 9999) |

This parameter can lock these parameter settings:








- A1-01 [Access Level Selection]
- A1-02 [Control Method Selection]
- A1-03 [Initialize Parameters]
- A1-06 [Application Preset]
- A1-07 [DriveWorksEZ Function Selection]
- A2-01 to A2-32 [User Parameter 1 to 32]

**Note:**

- Usually, the keypad will not show A1-05. To show and set A1-05, show A1-04 [Password] and then push  and  on the keypad at the same time.
- After you set A1-05, the keypad will not show it again until you enter the correct password in A1-04. Make sure that you remember the A1-05 setting value. If you do not know the A1-05 setting value, contact Yaskawa or your nearest sales representative.
- When A1-03 = 2220, 3330 [2-Wire Initialization, 3-Wire Initialization], the drive is initialized to A1-05 = 0000. Be sure to set the password again when a password is necessary for the application.
- Change the setting value in A1-05 to change the password. The new setting value becomes the new password.
- When you use the password to unlock and change a parameter, enter a value other than the password in A1-04 to lock the parameter again with the same password.
- If A1-04 ≠ A1-05, MEMOBUS Communication cannot read or write A1-05.

## ■ A1-06: Application Preset

**WARNING!** Sudden Movement Hazard. Check the I/O signals and the external sequences for the drive before you set the Application Preset function. When you set the Application Preset function (A1-06 ≠ 0), it changes the I/O terminal functions for the drive and it can cause equipment to operate unusually. This can cause serious injury or death.

| No. (Hex.)      | Name               | Description  | Default (Range) |
|-----------------|--------------------|--|-----------------|
| A1-06<br>(0127) | Application Preset |     <br>Sets the drive to operate in selected application conditions. | 0<br>(0 - 8)    |

The drive software contains the application presets shown below. Set A1-06 to align with the application to let the drive automatically set the best parameter settings for the selected application. The drive saves parameters that you frequently use the application in parameters A2-01 to A2-16 [User Parameters 1 to 16] for easy configuration and reference in Setup Mode.

- Water supply pump
- Conveyor
- Exhaust fan
- HVAC fan
- Air compressor
- Crane (hoist)
- Crane (traveling)

**Note:**

- Before you set A1-06, make sure that you set A1-03 = 2220, 3330 [Initialize Parameters = 2-Wire Initialization, 3-Wire Initialization] to initialize parameters.
- After you set A1-06 for a hoist application (A1-06 = 6 or 7), make sure that you do Auto-Tuning.
- It is not possible to change the A1-06 value. To set an application preset, set A1-03 = 2220 to initialize parameters, then set this parameter. If initializing all parameters will cause a problem, do not change the settings.  
If you set A2-33 = 1 [User Parameter Auto Selection = Enabled: Auto Save Recent Parms] to set parameters to A2-17 to A2-32 [User Parameters 17 to 32] automatically, the drive will reset these parameters when you change the A1-06 setting.

## 0 : General-purpose

The drive saves the parameters in Table 12.3 as User Parameters.

**Table 12.3 Parameters Saved as User Parameters with the General-purpose Preset**

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-01              | A1-02               | Control Method Selection        |
| A2-02              | b1-01               | Frequency Reference Selection 1 |
| A2-03              | b1-02               | Run Command Selection 1         |
| A2-04              | b1-03               | Stopping Method Selection       |
| A2-05              | C1-01               | Acceleration Time 1             |
| A2-06              | C1-02               | Deceleration Time 1             |

## 12.2 A: Initialization Parameters

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-07              | C6-01               | Normal / Heavy Duty Selection   |
| A2-08              | C6-02               | Carrier Frequency Selection     |
| A2-09              | d1-01               | Reference 1                     |
| A2-10              | d1-02               | Reference 2                     |
| A2-11              | d1-03               | Reference 3                     |
| A2-12              | d1-04               | Reference 4                     |
| A2-13              | d1-17               | Jog Reference                   |
| A2-14              | E1-01               | Input AC Supply Voltage         |
| A2-15              | E1-03               | V/f Pattern Selection           |
| A2-16              | E1-04               | Maximum Output Frequency        |
| A2-17              | E1-05               | Maximum Output Voltage          |
| A2-18              | E1-06               | Base Frequency                  |
| A2-19              | E1-09               | Minimum Output Frequency        |
| A2-20              | E1-13               | Base Voltage                    |
| A2-21              | E2-01               | Motor Rated Current (FLA)       |
| A2-22              | E2-04               | Motor Pole Count                |
| A2-23              | E2-11               | Motor Rated Power               |
| A2-24              | H4-02               | Terminal AM Analog Output Gain  |
| A2-25              | L1-01               | Motor Overload (oL1) Protection |
| A2-26              | L3-04               | Stall Prevention during Decel   |

### 1 : Water Supply Pump 2

The drive automatically sets the parameters in [Table 12.4](#) for a water supply pump application.

**Table 12.4 Best Parameter Settings for Water Supply Pump Applications**

| No.   | Name                           | Optimal Value             |
|-------|--------------------------------|---------------------------|
| A1-02 | Control Method Selection       | 0: V/f Control            |
| b1-04 | Reverse Operation Selection    | 1: Reverse Disabled       |
| C1-01 | Acceleration Time 1            | 1.0 s                     |
| C1-02 | Deceleration Time 1            | 1.0 s                     |
| C6-01 | Normal / Heavy Duty Selection  | 1: Normal Duty Rating     |
| E1-03 | V/f Pattern Selection          | F: Custom                 |
| E1-07 | Mid Point A Frequency          | 30.0 Hz                   |
| E1-08 | Mid Point A Voltage            | 50.0 V                    |
| L2-01 | Power Loss Ride Through Select | 1: Enabled for L2-02 Time |
| L3-04 | Stall Prevention during Decel  | 1: General Purpose        |

The drive saves the parameters in [Table 12.5](#) as User Parameters.

**Table 12.5 Parameters Saved as User Parameters with the Water Supply Pump Preset**

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-01              | b1-01               | Frequency Reference Selection 1 |
| A2-02              | b1-02               | Run Command Selection 1         |
| A2-03              | b1-04               | Reverse Operation Selection     |
| A2-04              | C1-01               | Acceleration Time 1             |
| A2-05              | C1-02               | Deceleration Time 1             |
| A2-06              | E1-03               | V/f Pattern Selection           |
| A2-07              | E1-07               | Mid Point A Frequency           |
| A2-08              | E1-08               | Mid Point A Voltage             |

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-09              | E2-01               | Motor Rated Current (FLA)       |
| A2-10              | H1-05               | Terminal S5 Function Selection  |
| A2-11              | H1-06               | Terminal S6 Function Selection  |
| A2-12              | H1-07               | Terminal S7 Function Selection  |
| A2-13              | L5-01               | Number of Auto-Restart Attempts |

## 2 : Conveyor

The drive automatically sets the parameters in [Table 12.6](#) for a conveyor application.

**Table 12.6 Best Parameter Settings for Conveyor Applications**

| No.   | Name                          | Optimal Value        |
|-------|-------------------------------|----------------------|
| A1-02 | Control Method Selection      | 0: V/f Control       |
| C1-01 | Acceleration Time 1           | 3.0 s                |
| C1-02 | Deceleration Time 1           | 3.0 s                |
| C6-01 | Normal / Heavy Duty Selection | 0: Heavy Duty Rating |
| L3-04 | Stall Prevention during Decel | 1: General Purpose   |

The drive saves the parameters in [Table 12.7](#) as User Parameters.

**Table 12.7 Parameters Saved as User Parameters with the Conveyor Preset**

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-01              | A1-02               | Control Method Selection        |
| A2-02              | b1-01               | Frequency Reference Selection 1 |
| A2-03              | b1-02               | Run Command Selection 1         |
| A2-04              | C1-01               | Acceleration Time 1             |
| A2-05              | C1-02               | Deceleration Time 1             |
| A2-06              | E2-01               | Motor Rated Current (FLA)       |
| A2-07              | L3-04               | Stall Prevention during Decel   |

## 3 : Exhaust Fan

The drive automatically sets the parameters in [Table 12.8](#) for an exhaust fan application.

**Table 12.8 Best Parameter Settings for Exhaust Fan Applications**

| No.   | Name                           | Optimal Value             |
|-------|--------------------------------|---------------------------|
| A1-02 | Control Method Selection       | 0: V/f Control            |
| b1-04 | Reverse Operation Selection    | 1: Reverse Disabled       |
| C6-01 | Normal / Heavy Duty Selection  | 1: Normal Duty Rating     |
| E1-03 | V/f Pattern Selection          | F: Custom                 |
| E1-07 | Mid Point A Frequency          | 30.0 Hz                   |
| E1-08 | Mid Point A Voltage            | 50.0 V                    |
| L2-01 | Power Loss Ride Through Select | 1: Enabled for L2-02 Time |
| L3-04 | Stall Prevention during Decel  | 1: General Purpose        |

The drive saves the parameters in [Table 12.9](#) as User Parameters.

**Table 12.9 Parameters Saved as User Parameters with the Exhaust Fan Preset**

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-01              | b1-01               | Frequency Reference Selection 1 |
| A2-02              | b1-02               | Run Command Selection 1         |
| A2-03              | b1-04               | Reverse Operation Selection     |
| A2-04              | b3-01               | Speed Search at Start Selection |
| A2-05              | C1-01               | Acceleration Time 1             |

## 12.2 A: Initialization Parameters

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-06              | C1-02               | Deceleration Time 1             |
| A2-07              | E1-03               | V/f Pattern Selection           |
| A2-08              | E1-07               | Mid Point A Frequency           |
| A2-09              | E1-08               | Mid Point A Voltage             |
| A2-10              | E2-01               | Motor Rated Current (FLA)       |
| A2-11              | H1-05               | Terminal S5 Function Selection  |
| A2-12              | H1-06               | Terminal S6 Function Selection  |
| A2-13              | H1-07               | Terminal S7 Function Selection  |
| A2-14              | L5-01               | Number of Auto-Restart Attempts |

### 4 : HVAC Fan

The drive automatically sets the parameters in [Table 12.10](#) for an HVAC fan application.

**Table 12.10 Best Parameter Settings for HVAC Fan Applications**

| No.   | Name                           | Optimal Value                       |
|-------|--------------------------------|-------------------------------------|
| A1-02 | Control Method Selection       | 0: V/f Control                      |
| b1-04 | Reverse Operation Selection    | 1: Reverse Disabled                 |
| b1-17 | Run Command at Power Up        | 1: Accept Existing RUN Command      |
| C6-01 | Normal / Heavy Duty Selection  | 1: Normal Duty Rating               |
| C6-02 | Carrier Frequency Selection    | 3: 8.0 kHz (6.0 kHz for AOLV/PM)    |
| H2-03 | Term P2 Function Selection     | 39: Watt Hour Pulse Output          |
| L2-01 | Power Loss Ride Through Select | 2: Enabled while CPU Power Active   |
| L8-03 | Overheat Pre-Alarm Selection   | 4: Operate at Reduced Speed (L8-19) |

The drive saves the parameters in [Table 12.11](#) as User Parameters.

**Table 12.11 Parameters Saved as User Parameters with the HVAC Fan Preset**

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-01              | b1-01               | Frequency Reference Selection 1 |
| A2-02              | b1-02               | Run Command Selection 1         |
| A2-03              | b1-03               | Stopping Method Selection       |
| A2-04              | b1-04               | Reverse Operation Selection     |
| A2-05              | C1-01               | Acceleration Time 1             |
| A2-06              | C1-02               | Deceleration Time 1             |
| A2-07              | C6-02               | Carrier Frequency Selection     |
| A2-08              | d2-01               | Frequency Reference Upper Limit |
| A2-09              | d2-02               | Frequency Reference Lower Limit |
| A2-10              | E1-03               | V/f Pattern Selection           |
| A2-11              | E1-04               | Maximum Output Frequency        |
| A2-12              | E2-01               | Motor Rated Current (FLA)       |
| A2-13              | H3-11               | Terminal A2 Gain Setting        |
| A2-14              | H3-12               | Terminal A2 Bias Setting        |
| A2-15              | L2-01               | Power Loss Ride Through Select  |
| A2-16              | o4-12               | kWh Monitor Initialization      |

### 5 : Air Compressor

The drive automatically sets the parameters in [Table 12.12](#) for an air compressor application.

**Table 12.12 Best Parameter Settings for Air Compressor Applications**

| No.   | Name                           | Optimal Value             |
|-------|--------------------------------|---------------------------|
| A1-02 | Control Method Selection       | 0: V/f Control            |
| b1-04 | Reverse Operation Selection    | 1: Reverse Disabled       |
| C1-01 | Acceleration Time 1            | 5.0 s                     |
| C1-02 | Deceleration Time 1            | 5.0 s                     |
| C6-01 | Normal / Heavy Duty Selection  | 0: Heavy Duty Rating      |
| E1-03 | V/f Pattern Selection          | F: Custom                 |
| L2-01 | Power Loss Ride Through Select | 1: Enabled for L2-02 Time |
| L3-04 | Stall Prevention during Decel  | 1: General Purpose        |

The drive saves the parameters in [Table 12.13](#) as User Parameters.

**Table 12.13 Parameters Saved as User Parameters with the Air Compressor Preset**

| User Parameter No. | Parameter No. Saved | Name                            |
|--------------------|---------------------|---------------------------------|
| A2-01              | b1-01               | Frequency Reference Selection 1 |
| A2-02              | b1-02               | Run Command Selection 1         |
| A2-03              | b1-04               | Reverse Operation Selection     |
| A2-04              | C1-01               | Acceleration Time 1             |
| A2-05              | C1-02               | Deceleration Time 1             |
| A2-06              | E1-03               | V/f Pattern Selection           |
| A2-07              | E1-07               | Mid Point A Frequency           |
| A2-08              | E1-08               | Mid Point A Voltage             |
| A2-09              | E2-01               | Motor Rated Current (FLA)       |

## 6 : Crane (Hoist)

The drive automatically sets the parameters in [Table 12.14](#) for a hoist application.

### Note:

Make sure that you do Auto-Tuning after you set *A1-06* for a hoist application. Refer to [Notes for Elevator Applications on page 471](#) for hoist (elevator) instructions.

**Table 12.14 Best Parameter Settings for Hoist Applications**

| No.   | Name                             | Optimal Value                    |
|-------|----------------------------------|----------------------------------|
| A1-02 | Control Method Selection         | 2: Open Loop Vector              |
| b1-01 | Frequency Reference Selection 1  | 0: Keypad                        |
| b6-01 | Dwell Reference at Start         | 3.0 Hz                           |
| b6-02 | Dwell Time at Start              | 0.3 s                            |
| C1-01 | Acceleration Time 1              | 3.0 s                            |
| C1-02 | Deceleration Time 1              | 3.0 s                            |
| C6-01 | Normal / Heavy Duty Selection    | 0: Heavy Duty Rating             |
| C6-02 | Carrier Frequency Selection      | 2: 5.0 kHz (4.0 kHz for AOLV/PM) |
| d1-01 | Reference 1                      | 6.00 Hz                          |
| d1-02 | Reference 2                      | 30.00 Hz                         |
| d1-03 | Reference 3                      | 50.00 Hz                         |
| E1-03 | V/f Pattern Selection            | F: Custom                        |
| H2-01 | Term MA/MB-MC Function Selection | 5: Frequency Detection 2         |
| H2-02 | Term P1 Function Selection       | 37: During Frequency Output      |
| L2-03 | Minimum Baseblock Time           | 0.3 s                            |
| L3-04 | Stall Prevention during Decel    | 0: Disabled                      |
| L4-01 | Speed Agree Detection Level      | 2.0 Hz                           |
| L4-02 | Speed Agree Detection Width      | 0.0 Hz                           |

## 12.2 A: Initialization Parameters

| No.   | Name                             | Optimal Value                   |
|-------|----------------------------------|---------------------------------|
| L6-01 | Torque Detection Selection 1     | 8: UL @ RUN - Fault             |
| L6-02 | Torque Detection Level 1         | 2%                              |
| L6-03 | Torque Detection Time 1          | 0.5 s                           |
| L8-05 | Input Phase Loss Protection Sel  | 1: Enabled                      |
| L8-07 | Output Phase Loss Protection Sel | 1: Fault when One Phase is Lost |
| L8-41 | High Current Alarm Selection     | 1: Enabled                      |

The drive saves the parameters in [Table 12.15](#) as User Parameters.

**Table 12.15 Parameters Saved as User Parameters with the Hoist Preset**

| User Parameter No. | Parameter No. Saved | Name                             |
|--------------------|---------------------|----------------------------------|
| A2-01              | A1-02               | Control Method Selection         |
| A2-02              | b1-01               | Frequency Reference Selection 1  |
| A2-03              | b6-01               | Dwell Reference at Start         |
| A2-04              | b6-02               | Dwell Time at Start              |
| A2-05              | C1-01               | Acceleration Time 1              |
| A2-06              | C1-02               | Deceleration Time 1              |
| A2-07              | C6-02               | Carrier Frequency Selection      |
| A2-08              | d1-01               | Reference 1                      |
| A2-09              | d1-02               | Reference 2                      |
| A2-10              | d1-03               | Reference 3                      |
| A2-11              | E1-08               | Mid Point A Voltage              |
| A2-12              | H2-01               | Term MA/MB-MC Function Selection |
| A2-13              | L1-01               | Motor Overload (oL1) Protection  |
| A2-14              | L4-01               | Speed Agree Detection Level      |
| A2-15              | L6-02               | Torque Detection Level 1         |
| A2-16              | L6-03               | Torque Detection Time 1          |

### 7 : Crane (Traveling)

The drive automatically sets the parameters in [Table 12.16](#) for a traveling application.

**Table 12.16 Optimal Settings for Traveling Applications**

| No.   | Name                             | Optimal Value                    |
|-------|----------------------------------|----------------------------------|
| A1-02 | Control Method Selection         | 0: V/f Control                   |
| b1-01 | Frequency Reference Selection 1  | 0: Keypad                        |
| C1-01 | Acceleration Time 1              | 3.0 s                            |
| C1-02 | Deceleration Time 1              | 3.0 s                            |
| C6-01 | Normal / Heavy Duty Selection    | 0: Heavy Duty Rating             |
| C6-02 | Carrier Frequency Selection      | 2: 5.0 kHz (4.0 kHz for AOLV/PM) |
| d1-01 | Reference 1                      | 6.00 Hz                          |
| d1-02 | Reference 2                      | 30.00 Hz                         |
| d1-03 | Reference 3                      | 50.00 Hz                         |
| H1-05 | Terminal S5 Function Selection   | 3: Multi-Step Speed Reference 1  |
| H1-06 | Terminal S6 Function Selection   | 4: Multi-Step Speed Reference 2  |
| H2-01 | Term MA/MB-MC Function Selection | 37: During Frequency Output      |
| H2-02 | Term P1 Function Selection       | 37: During Frequency Output      |
| L3-04 | Stall Prevention during Decel    | 0: Disabled                      |
| L8-05 | Input Phase Loss Protection Sel  | 1: Enabled                       |

| No.   | Name                             | Optimal Value                   |
|-------|----------------------------------|---------------------------------|
| L8-07 | Output Phase Loss Protection Sel | 1: Fault when One Phase is Lost |
| L8-41 | High Current Alarm Selection     | 1: Enabled                      |

The drive saves the parameters in [Table 12.17](#) as User Parameters.

**Table 12.17 Parameters Saved as User Parameters with the Traveling Preset**

| User Parameter No. | Parameter No. Saved | Name                             |
|--------------------|---------------------|----------------------------------|
| A2-01              | b1-01               | Frequency Reference Selection 1  |
| A2-02              | C1-01               | Acceleration Time 1              |
| A2-03              | C1-02               | Deceleration Time 1              |
| A2-04              | C6-02               | Carrier Frequency Selection      |
| A2-05              | d1-01               | Reference 1                      |
| A2-06              | d1-02               | Reference 2                      |
| A2-07              | d1-03               | Reference 3                      |
| A2-08              | E2-01               | Motor Rated Current (FLA)        |
| A2-09              | H1-05               | Terminal S5 Function Selection   |
| A2-10              | H1-06               | Terminal S6 Function Selection   |
| A2-11              | H2-01               | Term MA/MB-MC Function Selection |
| A2-12              | L1-01               | Motor Overload (oL1) Protection  |

## 8 : Conveyor 2

The drive automatically sets the parameters in [Table 12.18](#) for a conveyor 2 application.

**Table 12.18 Best Parameter Settings for Conveyor 2 Application**

| No.   | Name                             | Optimal Value                 |
|-------|----------------------------------|-------------------------------|
| A1-02 | Control Method Selection         | 0: V/f Control                |
| C1-01 | Acceleration Time 1              | 3.0 s                         |
| C1-02 | Deceleration Time 1              | 3.0 s                         |
| C6-01 | Normal / Heavy Duty Selection    | 0: Heavy Duty Rating          |
| L3-04 | Stall Prevention during Decel    | 7: Overexcitation/High Flux 3 |
| n3-13 | OverexcitationBraking (OEB) Gain | 1.40                          |
| n3-21 | HSB Current Suppression Level    | 150                           |

The drive saves the parameters in [Table 12.19](#) as User Parameters.

**Table 12.19 Parameters Saved as User Parameters with the Conveyor 2 Preset**

| User Parameter No. | Parameter No. Saved | Name                             |
|--------------------|---------------------|----------------------------------|
| A2-01              | A1-02               | Control Method Selection         |
| A2-02              | b1-01               | Frequency Reference Selection 1  |
| A2-03              | b1-02               | Run Command Selection 1          |
| A2-04              | C1-01               | Acceleration Time 1              |
| A2-05              | C1-02               | Deceleration Time 1              |
| A2-06              | E2-01               | Motor Rated Current (FLA)        |
| A2-07              | L3-04               | Stall Prevention during Decel    |
| A2-08              | n3-13               | OverexcitationBraking (OEB) Gain |
| A2-09              | n3-21               | HSB Current Suppression Level    |

### ■ Notes for Elevator Applications

When using the drive for elevator applications, read the safety descriptions and precautions, and safely and correctly use the device.

**Conditions to Open and Close the Brake**

Set  $L4-07 = 0$  [*Speed Agree Detection Selection = No Detection during Baseblock*] to open and close the holding brake.

When  $L4-07 = 1$  [*Detection Always Enabled*], the output frequency increases when you input the Run command although the external baseblock command is input. Because of this, speed detection operates and will open the brake signal.

- Set Related Parameters

Table 12.20 shows examples of parameter settings to use the terminal P2-C2 as the holding brake open and close signal.


**Table 12.20 Holding Brake Open and Close Signal Setting Example**

| Brake Open and Close Signal  |                    | Brake Open and Close Level Adjust |   | Applicable Control Methods (A1-02 Settings) |         |
|------------------------------|--------------------|-----------------------------------|---|---|---------|
| Signal Name                  | Parameter Settings | Signal Name                       | Parameter Settings                            | V/f (0)                                     | OLV (2) |
| Frequency (FOUT) Detection 2 | $L4-07 = 0$        | Speed Agree Detection Level       | $L4-01 = 1.0 \text{ Hz to } 3.0 \text{ Hz}^*$ | x   | x       |
|                              | $H2-03 = 5$        | Speed Agree Detection Width       | $L4-02 = 0.0 \text{ Hz to } 0.5 \text{ Hz}$   |   |         |

\*1 When  $A1-02 = 2$  [*Open Loop Vector*], it is the usual setting range. When  $A1-02 = 0$  [*V/f Control*], set  $L4-01$  to the rated slip frequency of the motor + approximately 0.5 Hz. If you set the value too low, motor torque will not be sufficient and it will cause motor rollback. Set the parameter to agree with these conditions at the same time. If you set the value too high, it will cause overshoot at start.

- $L4-01 > E1-09$  [*Minimum Output Frequency*]
- $L4-01 > L4-02$  [*Speed Agree Detection Width*]

\*2 Use  $L4-02$  to adjust the detection width of Frequency Detection 2. If rollback occurs when the motor stops, change the frequency to approximately 0.1 Hz.

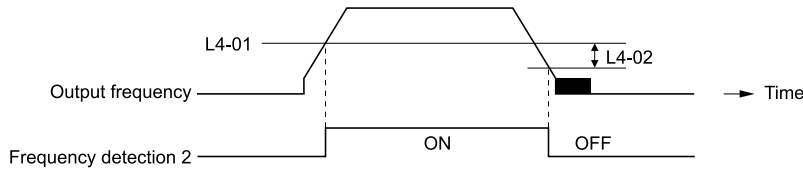


**Figure 12.1 Frequency Detection 2**

**Sequence Circuit Configuration**

Use these conditions to set the circuit for the open/close sequence of the holding brake:

- Set the sequence-side operation conditions to activate terminal P2-C2 and open the holding brake.
- Set the sequence to close the holding brake in an emergency if the drive detects a fault.
- Set the sequence to open the holding brake when you enter an increase or decrease command.

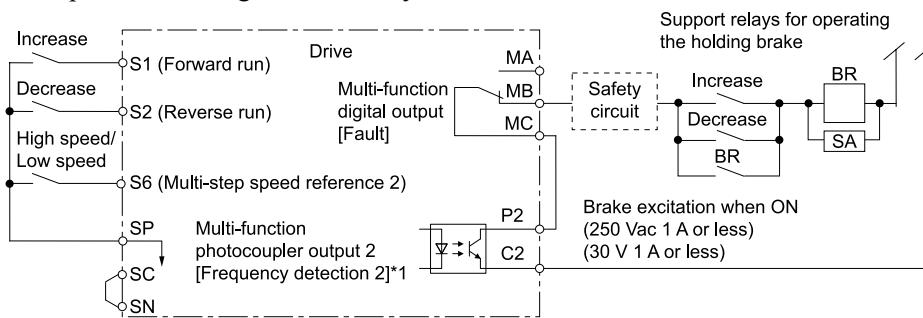

**Figure 12.2 Sequence Circuit Configuration Diagram**

\*1  $L4-07 = 0$  [*Speed Agree Detection Selection = No detection during baseblock*]

**Time Chart**

Figure 12.3 shows the open and close sequence of the holding brake.



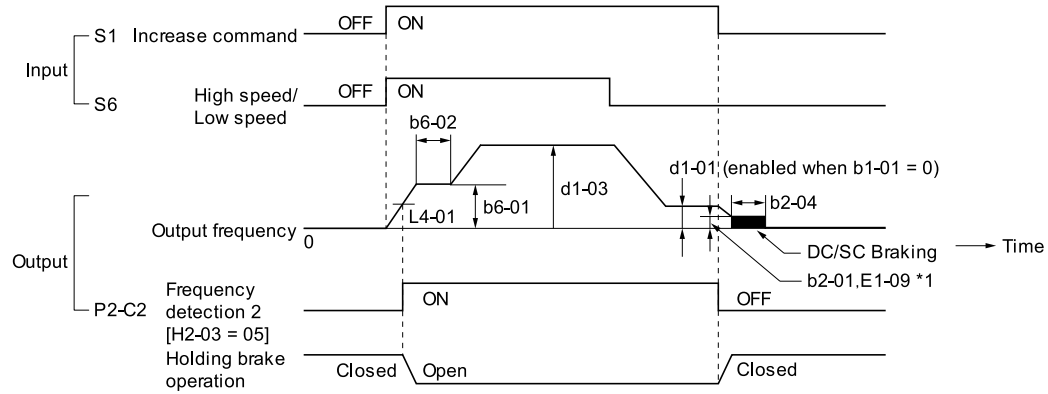


Figure 12.3 Holding Brake Open and Close Sequence Time Chart (V/f, OLV)

\*1 Start braking from the higher set frequency between *b2-01* [DC Injection/Zero SpeedThreshold] or *E1-09* [Minimum Output Frequency].

Notes on when Using Other Functions

| Function   | Precautions  |
|--|--|
| Stall Prevention during Deceleration                     | When you connect a braking resistor to discharge the regenerative power to the drive, set <i>L3-04</i> = 0 [Stall Prevention during Decel = Disabled].<br><b>Note:</b><br>If <i>L3-04</i> = 1 [General Purpose], it is possible that the drive will not stop in the set deceleration time. Do not change the default settings of these related parameters:<br>• <i>L3-01</i> = 1 [Stall Prevention during Accel = Enabled]<br>• <i>L3-05</i> = 1 [Stall Prevention during RUN = Deceleration Time 1 (C1-02)]   |
| Auto-Tuning for Induction Motors                         | • When <i>A1-02</i> = 2 [Control Method Selection = Open Loop Vector], Auto-Tune the motor before you operate the drive.<br>• Disconnect the drive from the motor to do Rotational Auto-Tuning.<br>• Auto-Tuning runs automatically for approximately 1 minute. Do not do Auto-Tuning with the motor engaged in the elevator system.<br><b>Note:</b><br>• If you cannot disconnect the motor from the machine, do Stationary Auto-Tuning. During this time, the drive automatically measures the necessary motor data. If the motor test report or the motor nameplate is not available, use Stationary Auto-Tuning. Do Stationary Auto-Tuning for Line-to-Line Resistance for better torque characteristics at low speeds in the V/f Control mode.<br>• When you do Stationary Auto-Tuning, the drive energizes the motor and the motor stays stopped.<br>• To Auto-Tune a specialized motor, for example a wound motor, prepare a motor test report before Auto-Tuning and make sure that the motor parameter <i>E2-xx</i> is not too different than the value in the test report. |
| Auto-Tuning for PM Motors                                | You must set the motor data in the drive to run a PM motor.<br>• When you use a PM motor recommended by Yaskawa<br>Input the motor code in <i>E5-01</i> . <i>E5</i> and other related motor parameters will be automatically set to the optimal values.<br>• When you use a non-Yaskawa PM motor<br>Do Auto-Tuning.<br>– When the motor nameplate or motor test report is available, enter the PM motor parameters directly with PM Motor Parameter Settings.<br>– If the motor nameplate or motor test report is not available, and the motor cannot rotate, do PM Stationary Auto-Tuning.<br>– If the motor nameplate or motor test report is not available, and the motor can rotate, do PM Rotational Auto-Tuning.   |
| Braking Resistor Overheat Protection                     | When you use a braking resistor that is not the optional Yaskawa braking resistor unit (LKEB-series), this function uses the thermal overload relay to detect braking resistor overheat. Load a sequence program that turns OFF the drive input power supply when the braking resistor overheats.<br><b>Note:</b><br>Refer to page 50 when you load the sequence circuit.  |
| Continuous Operation                                     | Do not use the momentary power loss continuous operation function and the Auto Restart function. If you use these functions, there is a risk that the motor will coast to a stop if the brake is open when there is a momentary power loss and the drive is operating or if there is a fault.<br>Set the these parameters:<br>• <i>L2-01</i> = 0 [Power Loss Ride Through Select = Disabled]<br>• <i>L5-01</i> = 0 [Number of Auto-Restart Attempts = 0]   |
| Torque Limit   | The motor rated torque sets the value for <i>L7-01</i> to <i>L7-04</i> [Torque Limit]. If there will not be sufficient torque during start up, replace the drive with a larger capacity drive and set the torque limit between 200% and 300%. The <i>L7-01</i> to <i>L7-04</i> default setting is 200%.  |
| Input/Output Phase Loss Protection, Overtorque Detection | To stop a fall because of phase loss, set these parameters:<br>• <i>L8-05</i> = 1 [Input Phase Loss Protection Sel = Enabled]<br>• <i>L8-07</i> = 1 [Output Phase Loss Protection Sel = Fault when One Phase is Lost]<br>• <i>L6-01</i> , <i>L6-04</i> = 1 to 8 [Torque Detection Selection 1/2 = oL @ Speed Agree - Alarm only to UL @ RUN - Fault]<br>• <i>L6-02</i> , <i>L6-05</i> [Torque Detection Level 1/2]<br>• <i>L6-03</i> , <i>L6-06</i> [Torque Detection Time 1/2]<br><b>Note:</b><br>Use precautions, for example fall detection, on the machine side.   |

## 12.2 A: Initialization Parameters

| Function   | Precautions   |
|--|---|
| External Baseblock Command                         | <ul style="list-style-type: none"> <li>If you enter the external baseblock signal set in H1-01 to H1-07 = 8 or 9 [Terminal S1 to S7 Function Selection = Baseblock Command] during run, the motor immediately coasts to stop. When you enter a baseblock command while the motor is operating, make sure that it is necessary.</li> <li>When you use an external baseblock command for the fast stop and operation start up interlocks, load the sequence to lock the holding brake when you enter the external baseblock command.</li> <li>If you enter the external baseblock command and then immediately remove it, the drive will not output the voltage in the time set in L2-03 [Minimum Baseblock Time]. Do not use an external baseblock command for applications that have frequent Run/Stop commands.</li> </ul>   |
| Acceleration and Deceleration Times                | If you set the acceleration and deceleration times for the drive side too short and you do not add the mechanical operation delay time of the holding brake, the holding brake could operate late, or there could be overcurrent at start up, the brake could grind, or the motor could roll back when it stops. In these conditions, use Dwell Reference at Start/Time and DC Injection Braking at Stop to adjust the holding brake timing.  |
| Electromagnetic Contactor on the Drive Output Side | <p>Usually you must not install the electromagnetic contactor between the drive and motor. When you must install an electromagnetic contactor to use one drive to switchover more than one motor, follow these precautions:</p> <ul style="list-style-type: none"> <li>Load a sequence that opens and closes the electromagnetic contactor when these two conditions are satisfied at the same time, unless there is an emergency: <ul style="list-style-type: none"> <li>The holding brake is fully closed</li> <li>The drive terminals set for H2-xx = 8 or 1B [MFDO Function Selection = During Baseblock] are activated</li> </ul> </li> <li>If you open and close the electromagnetic contactor during motor control or during DC Injection Braking (or zero speed control), the surge voltage and the motor direct input current can cause the drive to detect faults.</li> <li>When you use an electromagnetic contactor between the drive and motor, set L8-07 = 1 or 2 [Output Phase Loss Protection Sel = Fault when One Phase is Lost, Fault when Two Phases are Lost].</li> </ul> |

### Adjustments Relating to Control

When there is oscillation, rollback, or other control problems, adjust the parameters as specified by the control method.

V/f Control on page 474 shows only the frequently adjusted parameters.

#### Note:

Torque and speed response for high-resistance and high-slip motors are slow. Adjust the torque and speed response to increase them. Low impedance (low-slip) motors will hunt and oscillate. Adjust the torque and speed response to increase them.

### V/f Control

When you use V/f Control, do not use C3-01 [Slip Compensation Gain].

**Table 12.21 Adjustment of Drive Control (V/f Control)**

| Adjustment Description   | Parameter Number                        | Possible Solutions  | Default      | Recommended Setting |
|--|---|---|--------------|---------------------|
| Prevent hunting and oscillation at middle-range speeds (10 Hz to 40 Hz)  | n1-02 [Hunting Prevention Gain Setting] | <ul style="list-style-type: none"> <li>If the torque is not sufficient with heavy loads, decrease the setting.</li> <li>If there is hunting or oscillation with light loads, increase the setting. Set n1-01 = 1 [Hunting Prevention Selection = Enabled].</li> </ul> | 1.00         | 0.50 - 2.00         |
| <ul style="list-style-type: none"> <li>Increasing motor excitation sound</li> <li>Hunting and oscillation suppression at low speeds and middle-range speeds</li> </ul> | C6-02 [Carrier Frequency Selection]     | <ul style="list-style-type: none"> <li>If there is a loud motor excitation sound, increase the setting value.</li> <li>If there is hunting or oscillation at low speeds or middle-range speeds, decrease the setting value.</li> </ul>                                | *1           | 1 - F               |
| <ul style="list-style-type: none"> <li>Increase torque at low speeds (10 Hz or lower)</li> <li>Prevent hunting and oscillation</li> </ul>                              | C4-01 [Torque Compensation Gain]        | <ul style="list-style-type: none"> <li>If the torque is not sufficient at low speeds, increase the setting value.</li> <li>If there is hunting or oscillation with light loads, decrease the setting value.</li> </ul>  | 1.00         | 0.50 - 1.50         |
| <ul style="list-style-type: none"> <li>Increase torque at low speeds</li> <li>Prevent shock during start up</li> </ul>   | E1-08 [Mid Point A Voltage]             | <ul style="list-style-type: none"> <li>If the torque is not sufficient at low speeds, increase the setting value.</li> <li>If there is a large shock during start up, decrease the setting value.</li> </ul>  | 15.0 V *2 *3 | 13.0 V to 16.0 V *3 |
|  | E1-10 [Minimum Output Voltage]          |   | 9.0 V *2 *3  | 7.0 V to 10.0 V *3  |

\*1 The default setting changes when the settings for C6-01 [Normal / Heavy Duty Selection] and o2-04 [Drive Model (KVA) Selection] change.

\*2 The default setting changes when the settings for A1-02 [Control Method Selection] and E1-03 [V/f Pattern Selection] change.

\*3 This is the setting for 200 V class drives. Multiply the voltage by 2 for 400 V class drives.

### Open Loop Vector Control Method

Do not adjust parameter C4-01 [Torque Compensation Gain]. Keep this parameter at its default setting.

If you cannot get speed accuracy during regeneration, set C3-04 = 1 [Slip Compensation at Regen = Enabled Above 6Hz]. If you cannot get speed accuracy at high speeds, set C3-05 = 1 [Output Voltage Limit Selection = Enabled].

**Table 12.22 Adjustment of Drive Control (Open Loop Vector Control Method)**

| Adjustment description   | Parameter Number                                     | Possible Solutions  | Default              | Recommended Setting            |
|--|--|---|----------------------|--------------------------------|
| <ul style="list-style-type: none"> <li>Torque, increase speed response</li> <li>Prevent hunting and oscillation at middle-range speeds (10 Hz to 40 Hz)</li> </ul>   | n2-01 [Automatic Freq Regulator Gain]                | <ul style="list-style-type: none"> <li>If torque and speed response are slow, decrease the setting value.</li> <li>If there is hunting or oscillation, increase the setting value.</li> </ul>                   | 1.00                 | 0.50 - 2.00                    |
| <ul style="list-style-type: none"> <li>Torque, increase speed response</li> <li>Prevent hunting and oscillation</li> </ul>   | C4-02 [Torque Compensation Delay Time] <sup>*1</sup> | <ul style="list-style-type: none"> <li>If torque and speed response are slow, decrease the setting value.</li> <li>If there is hunting or oscillation, increase the setting value.</li> </ul>                   | 20 ms                | 20 ms to 100 ms                |
| <ul style="list-style-type: none"> <li>Increase speed response</li> <li>Increase speed stability</li> </ul>  | C3-02 [Slip Compensation Delay Time]                 | <ul style="list-style-type: none"> <li>When speed response is slow, decrease the setting value.</li> <li>If speed is not stable, increase the setting value.</li> </ul>   | 200 ms               | 100 ms to 500 ms               |
| <ul style="list-style-type: none"> <li>Improve speed accuracy</li> </ul>   | C3-01 [Slip Compensation Gain]                       | <ul style="list-style-type: none"> <li>If speed is too slow, increase the setting value.</li> <li>If speed is too fast, decrease the setting value.</li> </ul>  | 1.0                  | 0.5 - 1.5                      |
| <ul style="list-style-type: none"> <li>Increasing motor excitation sound</li> <li>Prevent hunting and oscillation at low-range speeds (10 Hz to or lower)</li> </ul> | C6-02 [Carrier Frequency Selection]                  | <ul style="list-style-type: none"> <li>If there is a loud motor excitation sound, increase the setting value.</li> <li>If there is hunting or oscillation at low speeds, decrease the setting value.</li> </ul> | <sup>*2</sup>        | 1 - F                          |
| <ul style="list-style-type: none"> <li>Increase torque and speed response at low speeds</li> <li>Prevent shock during start up</li> </ul>                            | E1-08 [Mid Point A Voltage]                          | <ul style="list-style-type: none"> <li>If the torque and speed response are slow, increase the setting value.</li> <li>If there is a large shock during start up, decrease the setting value.</li> </ul>        | 11.0 V <sup>*3</sup> | 12.0 V to 13.0 V <sup>*3</sup> |
|  | E1-10 [Minimum Output Voltage]                       |   | 2.0 V <sup>*3</sup>  | 2.0 V to 3.0 V <sup>*3</sup>   |


- <sup>\*1</sup> If the value for C4-02 [Torque Compensation Delay Time] is high, the current can increase during start up. Adjust and check the current during start up.
- <sup>\*2</sup> The default setting changes when the settings for C6-01 [Normal / Heavy Duty Selection] and o2-04 [Drive Model (KVA) Selection] change.
- <sup>\*3</sup> This is the setting for 200 V class drives. Multiply the voltage by 2 for 400 V class drives.

**Elevator Start/Stop and Accel/Decel Time Shock Reduction**

Shock when you start and stop the elevator and when you accelerate and decelerate is an issue for passenger elevator applications. If shock has an effect on the quality of the ride, adjust these parameters:

**S-Curve Characteristics, Accel & Decel Time**

| Adjustment Parameter       | Name                          |
|----------------------------|-------------------------------|
| C1-01, C1-03, C1-05, C1-07 | Acceleration Time 1 to 4      |
| C1-02, C1-04, C1-06, C1-08 | Deceleration Time 1 to 4      |
| C2-01                      | S-Curve Time @ Start of Accel |
| C2-02                      | S-Curve Time @ End of Accel   |
| C2-03                      | S-Curve Time @ Start of Decel |
| C2-04                      | S-Curve Time @ End of Decel   |

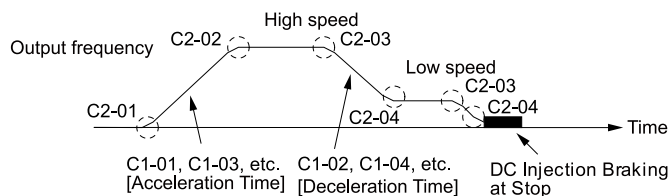

**Figure 12.4 S-curve Characteristics, Accel & Decel Time**

## 12.2 A: Initialization Parameters

### Note:

- When decreased operation times are necessary for the application, for example with cranes and hoists, do not use S-curve characteristic times.
- The default setting for *C2-04 [S-Curve Time @ End of Decel]* will be 0.00 seconds. The default setting for other S-curve characteristics will be 0.20 seconds. Set the acceleration/deceleration times and S-curve characteristic time correctly for acceleration/deceleration start up and end. The recommended setting of the S-curve characteristics time is 0.2 to 1.0 seconds.
- When you use the *C1-11 [Accel/Decel Time Switchover Freq]*, you can switch the acceleration/deceleration rate automatically during acceleration/deceleration. The default setting is disabled.  
When the *Output Frequency*  $\geq$  *C1-11*, operate at the acceleration and deceleration times set in *C1-01* and *C1-02*  
When the *Output Frequency*  $<$  *C1-11*, operate at the acceleration and deceleration times set in *C1-07* and *C1-08*
- During low speed operation, if the *Output Frequency*  $<$  *E1-09 [Minimum Output Frequency]* in the S-Curve Time @ Start of Decel, the drive will cancel the S-curve characteristics and do DC Inject Braking at Stop.

### Dwell Function at Start

| Adjustment Parameter | Name                     |
|----------------------|--------------------------|
| b6-01                | Dwell Reference at Start |
| b6-02                | Dwell Time at Start      |
| H2-xx = 5            | Frequency Detection 2    |

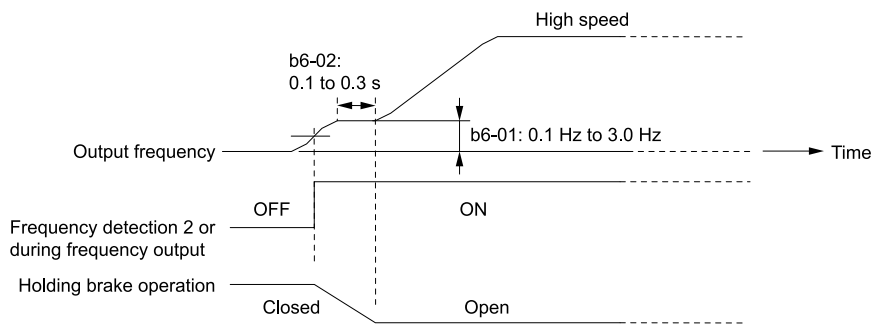


Figure 12.5 Dwell Function at Start

### Note:

- If the mechanical operation of the holding brake is slow, use the Dwell Function at Start to prevent brake grinding (friction). Accelerate after the brake is fully open.
- When you use V/f Control or Open Loop Vector Control, set *b6-01 [Dwell Reference at Start]*  $>$  *Frequency Detection 2 (brake open frequency)*.
- If the motor torque is not sufficient during start up, use the DC Inject Braking function to secure the motor current (torque) before you start the motor.  
–*b2-02 [DC Injection Braking Current]* recommended setting: 50% to 75% (V/f Control, Open Loop Vector Control)  
–*b2-03 [DC Inject Braking Time at Start]* recommended setting: 0.2 s to 0.5 s

### DC Injection Braking at Stop Function

#### Note:

If you disconnect a drive from a motor when it is controlling the motor or during DC Injection Braking (Zero speed level), a voltage surge can trigger a drive fault. When you use an electromagnetic contactor between the drive and motor, set *L8-07 = 1 or 2 [Output Phase Loss Protection Sel = Fault when One Phase is Lost, Fault when Two Phases are Lost]*. If it is necessary to disconnect the motor and drive when you stop the elevator, fully close the holding brake and disconnect the drive while the Baseblock signal is ON. This does not apply for emergency conditions.

| Adjustment Parameter | Name                             |
|----------------------|----------------------------------|
| b2-01                | DC Injection/Zero SpeedThreshold |
| b2-02                | DC Injection Braking Current     |
| b2-04                | DC Inject Braking Time at Stop   |
| H2-xx = 5            | Frequency Detection 2            |

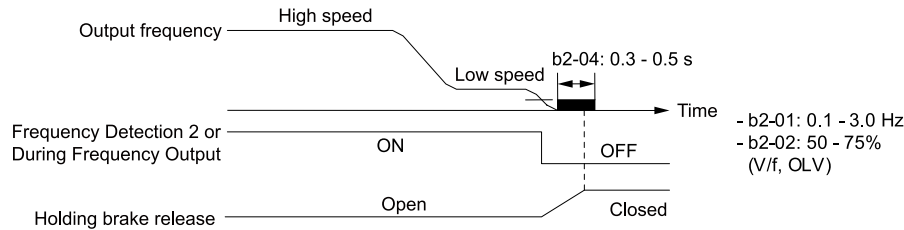


Figure 12.6 DC Injection Braking at Stop Function

**Note:**

- If the mechanical operation of the holding brake is slow, use DC Injection Braking until the brake is fully closed to prevent rollback.
- If you cannot hold the load with DC Injection Braking when it is stopped in V/f Control and Open Loop Vector Control modes, use Dwell Function at Stop.
  - b6-03 [Dwell Reference at Stop]: Minimum output frequency to 3.0 Hz
  - When Frequency Detection 2 is OFF, it is less than L4-01 [Speed Agree Detection Level] - L4-02 [Speed Agree Detection Width].
  - b6-04 [Dwell Time at Stop] recommended setting: 0.3 s to 0.5 s
  - b2-04 [DC Inject Braking Time at Stop] recommended setting: 0.0 s

**Analog Input FilterTime Constant**

When b1-01 = 1 [Frequency Reference Selection 1 = Analog Input], it adds noise to the analog frequency reference during run.

- Minimize the effects of noise.
- Change H3-13 [Analog Input FilterTime Constant] to a range of 0.01 s to 0.10 s.

**Startup Current Check**

When you do a test run, set L8-41 = 1 [High Current Alarm Selection = Enabled] and use U4-13 [Peak Hold Current] and a clamp ammeter with the machine under load and not under load to check the motor current during start up.

If the motor torque is not sufficient during start up or if the timing between the motor and the holding brake is unsatisfactory and causes the motor to lock, a large quantity of current will flow. In these conditions, adjust the parameters again and decrease the load to decrease the current to less than 150%. If the current flow is more than 150% of the drive rated current, the heat stress on the IGBTs will decrease the service life of drive parts.

To decrease the effects of heat stress, decrease the carrier frequency of the drive to 2.0 kHz to 2.5 kHz for applications where low audible noise is not necessary.

**Overvoltage Suppression Function**

If the overvoltage suppression function is used in elevator type applications, there is a risk of rollback and falls. Set L3-11 = 0 [Overvoltage Suppression Select = Disabled].

The overvoltage suppression function is designed to prevent an overvoltage trip in a situation in which a braking resistor is not used with a regenerative load. If the overvoltage suppression function is enabled, the regeneration torque reference within the drive is automatically controlled during regeneration.

**Note:**

When using the drive for applications such as high speed elevators with a speed of 2 ms or more and direct drive elevators, or when you need drives designed for cranes, contact Yaskawa or your Yaskawa sales representative.

**■ A1-07: DriveWorksEZ Function Selection**

| No. (Hex.)   | Name                            | Description  | Default (Range) |
|--------------|---------------------------------|--|-----------------|
| A1-07 (0128) | DriveWorksEZ Function Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the drive to operate with DriveWorksEZ. | 0 (0 - 2)       |

DriveWorksEZ is a simple visual programming tool that lets you connect function blocks to customize the drive and add PLC functions.

**Note:**

- DriveWorksEZ will overwrite drive settings when it uses MFDI/MFDO and MFAI/MFAO. When you use DriveWorksEZ to make changes to the drive, the changes will stay after you disable DriveWorksEZ.
- For more information about DriveWorksEZ, contact Yaskawa or your nearest sales representative.

**0 : DWEZ Disabled**

**1 : DWEZ Enabled**

**2 : Enabled/Disabled wDigital Input**

## 12.2 A: Initialization Parameters

Set  $H1-xx = 9F$  [*MFDI Function Select = DWEZ Disable*]. Deactivate the digital input to enable programs made with DriveWorksEZ and activate the terminal to disable the programs.

### ■ A1-11: Firmware Update Lock

| No. (Hex.)          | Name                 | Description   | Default (Range) |
|---------------------|----------------------|---|-----------------|
| A1-11 (111D) Expert | Firmware Update Lock | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Protects the drive firmware. When you enable the protection, you cannot update the drive firmware. | 0<br>(0, 1)     |

#### 0 : Disabled

Lock is disabled.

#### 1 : Enabled

Lock is enabled.

### ■ A1-12: Bluetooth ID

| No. (Hex.)   | Name         | Description   | Default (Range)    |
|--------------|--------------|---|--------------------|
| A1-12 (1564) | Bluetooth ID | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the password necessary to use Bluetooth to control the drive with a smartphone or tablet. | -<br>(0000 - 9999) |

## ◆ A2: User Parameters

You can register frequently used parameters and recently changed parameters here to access them quickly. Use Setup Mode to show the saved parameters.

### ■ A2-01 to A2-32: User Parameters 1 to 32

| No. (Hex.)                   | Name                    | Description  | Default (Range)   |
|------------------------------|-------------------------|--|---|
| A2-01 to A2-32 (0106 - 0125) | User Parameters 1 to 32 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>You can select a maximum of 32 parameters for the drive and save the values to parameters <i>A2-01 to A2-32</i> . Use Setup Mode to show the saved parameters. You can immediately access these saved parameters. | Parameters in General-Purpose Setup Mode<br>(Determined by A1-06) |

#### Note:

- When the *A1-06 [Application Preset]* value changes, the settings for *A2-01 to A2-32* change.
- You must set *A1-01 = 1 [Access Level Selection = User Parameters]* to access parameters *A2-01 to A2-32*.
- When *A1-07 = 1 or 2 [DriveWorksEZ Function Selection = DWEZ Enabled or Enabled/Disabled wDigital Input]*, the drive saves *qx-xx [DriveWorksEZ Parameters]* to *A2-01 to A2-32*.

The drive saves these parameters to *A2-01 to A2-32*.

- The drive saves a maximum of 32 parameters.

#### Note:

Set *A1-01 = 2 [Advanced Level]* or *A1-01 = 3 [Expert Level]* to save the necessary parameters.

- The drive automatically saves changed parameters to *A2-17 to A2-32*.

#### Note:

Set *A2-33 = 1 [User Parameter Auto Selection = Enabled]*.

### ■ A2-33: User Parameter Auto Selection

| No. (Hex.)   | Name                          | Description   | Default (Range)               |
|--------------|-------------------------------|---|-------------------------------|
| A2-33 (0126) | User Parameter Auto Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the automatic save feature for changes to parameters <i>A2-17 to A2-32 [User Parameters 17 to 32]</i> . | Determined by A1-06<br>(0, 1) |

#### 0 : Disabled: Manual Entry Required

Set User Parameters manually.

#### 1 : Enabled: Auto Save Recent Parms

The drive automatically registers changed parameter *A2-17 to A2-32*. The drive automatically saves the most recently changed parameter to *A2-17*, and saves a maximum of 16 parameters. After the drive registers 16

parameters, when you save a new parameter, the drive will remove a parameter from the User Parameter list to make space for the new parameter. The drive removes parameters with First In, First Out.

Use Setup Mode to show the saved parameters.

**Note:**

In General-Purpose Setup Mode, the drive saves parameters starting with *A2-27* because the drive saves parameters *A2-26* and lower by default.

## 12.3 b: Application

*b* parameters set these functions:

- Frequency reference source/Run command source
- Stopping method settings
- DC Injection Braking
- Speed Search
- Timer Function
- PID control
- Dwell function
- Energy-Saving Control

### ◆ b1: Operation Mode Selection

*b1* parameters set the operation mode for the drive.

#### ■ b1-01: Frequency Reference Selection 1

| No. (Hex.)   | Name                            | Description  | Default (Setting Range) |
|--------------|---------------------------------|--|-------------------------|
| b1-01 (0180) | Frequency Reference Selection 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the input method for the frequency reference. | 1 (0 - 4)               |

**Note:**

- Push **LO/RE** on the keypad to set the input mode to LOCAL and use the keypad to enter the frequency reference.
- If the frequency reference is 0 Hz or less than the value set in *E1-09 [Minimum Output Frequency]* and the drive receives the Run command, the RUN LED on the keypad will flash. Examine the setting for the frequency reference input and enter a value  $\geq$  E1-09.

#### 0 : Keypad

Use the keypad to enter the frequency reference.

Use **▲** and **▼** on the keypad to change the frequency reference.

#### 1 : Analog Input

Use MFAI terminals A1 and A2 to input an analog frequency reference with a voltage or current input signal.


- Voltage Input

Refer to [Table 12.23](#) to use a voltage signal input to one of the MFAI terminals.

**Table 12.23 Frequency Reference Voltage Input**

| Terminal | Terminal Signal Level          | Parameter Settings     |                                    |       |       | Note  |
|----------|--------------------------------|------------------------|------------------------------------|-------|-------|---|
|          |                                | Signal Level Selection | Function Selection                 | Gain  | Bias  |   |
| A1       | 0 - 10 V (Lower Limit at 0)    | H3-01 = 0              | H3-02 = 0<br>[Frequency Reference] | H3-03 | H3-04 | -   |
|          | 0 - 10 V (Without Lower Limit) | H3-01 = 1              |                                    |       |       |   |
| A2       | 0 - 10 V (Lower Limit at 0)    | H3-01 = 0              | H3-10 = 0<br>[Frequency Reference] | H3-11 | H3-12 | Set DIP switch S1 to "V" for voltage input. |
|          | 0 - 10 V (Without Lower Limit) | H3-01 = 1              |                                    |       |       |   |



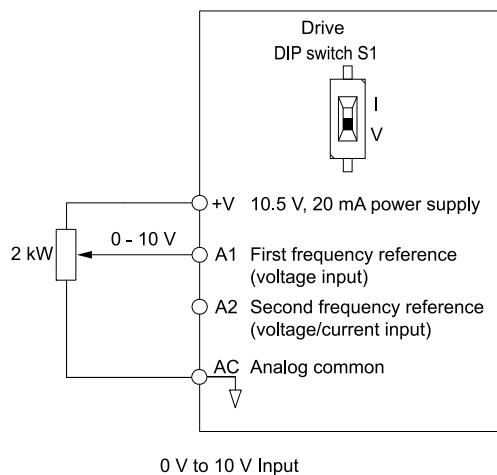

**Figure 12.7 Example of Setting the Frequency Reference with a Voltage Signal to Terminal A1**

**Note:**


You can also use this diagram to wire terminal A2.

• **Current Input**

Refer to [Table 12.24](#) to use a current signal input to one of the MFAI terminals.

**Table 12.24 Frequency Reference Current Input**

| Terminal | Signal Level | Parameter Settings     |                                    |       |       | Note  |
|----------|--------------|------------------------|------------------------------------|-------|-------|---|
|          |              | Signal Level Selection | Function Selection                 | Gain  | Bias  |   |
| A2       | 4 - 20 mA    | H3-09 = 2              | H3-10 = 0<br>[Frequency Reference] | H3-11 | H3-12 | Set DIP switch S1 to "I" for current input. |
|          | 0 - 20 mA    | H3-09 = 3              |                                    |       |       |   |

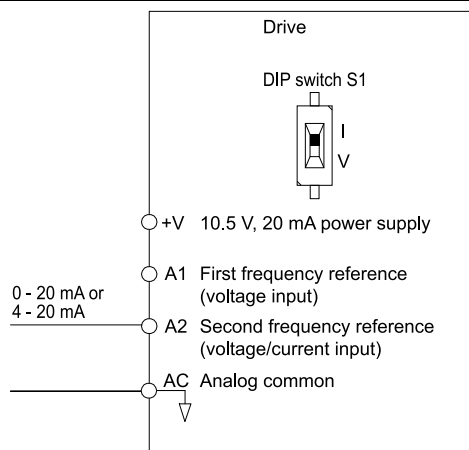

**Figure 12.8 Example of Setting the Frequency Reference with a Current Signal to Terminal A2**

**Changing between Master and Auxiliary Frequency References**

Use the multi-step speed reference function to change the frequency reference input between terminals A1 and A2.

**2 : Memobus/Modbus Communications**

Use MEMOBUS/Modbus communications to enter the frequency reference.

**3 : Option PCB**

Use a communications option connected to the drive to enter the Run command.

Refer to the instruction manual included with the option to install and set the option.

**Note:**

If  $b1-01 = 3$  but you did not connect an option,  $oPE05$  [Run Cmd/Freq Ref Source Sel Err] will flash on the keypad.

**4 : Pulse Train Input**






Use a pulse train signal from the pulse train input terminal RP to enter the frequency reference.

Do this procedure to make sure that the pulse train signal is operating correctly.

1. Set  $b1-01 = 4$ ,  $H6-01 = 0$  [Terminal RP Pulse Train Function = Frequency Reference].

2. Set *H6-02 [Terminal RP Frequency Scaling]* to the number of pulses that determine 100% of the frequency reference.
3. Enter a pulse train signal on the terminal RP and make sure that the keypad shows a correct frequency reference.

### ■ b1-02: Run Command Selection 1


| No. (Hex.)   | Name                    | Description   | Default (Range) |
|--------------|-------------------------|---|-----------------|
| b1-02 (0181) | Run Command Selection 1 |     <br>Sets the input method for the Run command. | 1<br>(0 - 3)    |

#### 0 : Keypad

Use the keypad to enter the Run command.

You can use the JOG operation or the FWD/REV commands from the keypad.

**Note:**

The  on the keypad is on while keypad is the Run command source.

#### 1 : Digital Input

Use the control circuit terminals to enter the Run command. Select the input method for the Run command with an *H1-xx* parameter.

Set *H1-xx = 0, 40 to 43 [3-Wire Sequence, Run Command (2-Wire Sequence)]*. The default setting is 2-wire sequence 1.

- 2-wire Sequence 1  
This sequence has two input types: FWD/Stop and REV/Stop. Set *A1-03 = 2220 [Initialize Parameters = 2-Wire Initialization]* to initialize the drive and set terminals S1 and S2 for a 2-wire sequence.
- 2-wire Sequence 2  
This sequence has two input types: Run/Stop and FWD/REV.
- 3-Wire Sequence  
This sequence has three input types: Run, Stop, and FWD/REV. Set *A1-03 = 3330 [Initialize Parameters = 3-Wire Initialization]* to initialize the drive and set terminals S1, S2, and S5 for a 3-wire sequence.

#### 2 : Memobus/Modbus Communications

Use MEMOBUS/Modbus communications to enter the Run command.

#### 3 : Option PCB






Use a communications option card or input option card connected to the drive to enter the Run command.

Refer to the instruction manual included with the option card to install and set the option card.

**Note:**

If *b1-02 = 3* but no connected option card, then *oPE05 [Run Cmd/Freq Ref Source Sel Err]* will flash on the keypad.

### ■ b1-03: Stopping Method Selection

| No. (Hex.)   | Name                      | Description   | Default (Range) |
|--------------|---------------------------|---|-----------------|
| b1-03 (0182) | Stopping Method Selection |     <br>Sets the method to stop the motor after removing a Run command or entering a Stop command. | 0<br>(0 - 3, 9) |

**Note:**

When *A1-02 = 5, 6, 8 [Control Method Selection = OLV/PM, AOLV/PM, EZOLV]*, the setting range is 0, 1, 3.

Select the applicable stopping method for the application from these four options:

#### 0 : Ramp to Stop


When you enter the Stop command or turn OFF the Run command, the drive ramps the motor to stop.

The drive ramps the motor to stop as specified by the deceleration time. The default setting for the deceleration time is *C1-02 [Deceleration Time 1]*. The actual deceleration time changes as the load conditions change (for example, mechanical loss and inertia).

If the output frequency is less than or equal to the value set in *b2-01 [DC Injection/Zero SpeedThreshold]* during deceleration, the drive will do DC Injection Braking, Zero Speed Control, or Short Circuit Braking, as specified by the control method.

- Ramp to Stop with V/f Control and OLV Control Methods

Parameter  $b2-01$  sets the frequency to start DC Injection Braking at stop. If the output frequency is less than or equal to the value set in  $b2-01$  during deceleration, then the drive will perform DC Injection Braking for the time set in  $b2-04$  [DC Inject Braking Time at Stop].

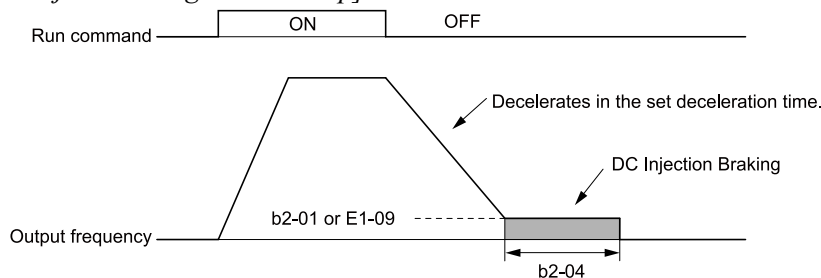


**Figure 12.9 Ramp to Stop with V/f and OLV Control Methods**

**Note:**

When  $b2-01 \leq E1-09$  [Minimum Output Frequency], the drive will start DC Injection Braking from the frequency set in  $E1-09$ .

• **Ramp to Stop with OLV/PM, AOLV/PM, and EZOLV Control Methods**

Parameter  $b2-01$  sets the frequency to start Short Circuit Braking. When the output frequency is less than or equal to the value set in  $b2-01$  during deceleration, then the drive will do Short Circuit Braking for the time set in  $b2-13$  [Short Circuit Brake Time @ Stop]. When  $b2-04 \neq 0$ , the drive will do DC Injection Braking for the time set in  $b2-04$  when Short Circuit Braking is complete.

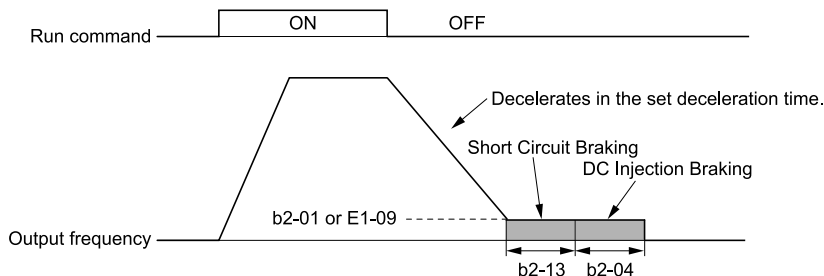

**Figure 12.10 Ramp to Stop with OLV/PM, AOLV/PM, and EZOLV Control Methods**

**Note:**


When  $b2-01 \leq E1-09$ , the drive will start Short Circuit Braking from the frequency set in  $E1-09$ .

If  $b2-01 = 0$  Hz and  $E1-09 = 0$  Hz, the drive will not do Short Circuit Braking.

**1 : Coast to Stop**

When you enter the Stop command or turn OFF the Run command, the drive turns OFF the output and coasts the motor to stop.

Load conditions will have an effect on the deceleration rate as the motor coasts to stop (for example, mechanical loss and inertia).

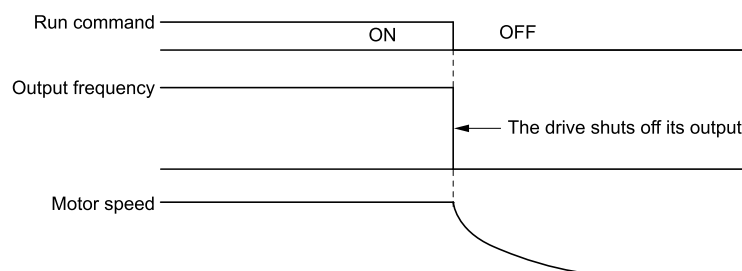

**Figure 12.11 Coast to Stop**

**Note:**

When you enter the Stop command or turn OFF the Run command, the drive ignores the Run command for the time set in  $L2-03$  [Minimum Baseblock Time]. Do not enter the Run command until the motor comes to a complete stop. Use DC Injection or Speed Search to restart the motor before it stops.


**2 : DC Injection Braking to Stop**

When you enter the Stop command or turn OFF the Run command, the drive turns OFF the output for the time set in  $L2-03$ . The drive waits for the minimum baseblock time and then injects the amount of DC current into the motor set in  $b2-02$  [DC Injection Braking Current] to stop the motor with DC current.

DC Injection Braking stops the motor more quickly than coast to stop.


**Note:**

If  $A1-02 = 5, 6$ , DC Injection Braking to Stop is not available.

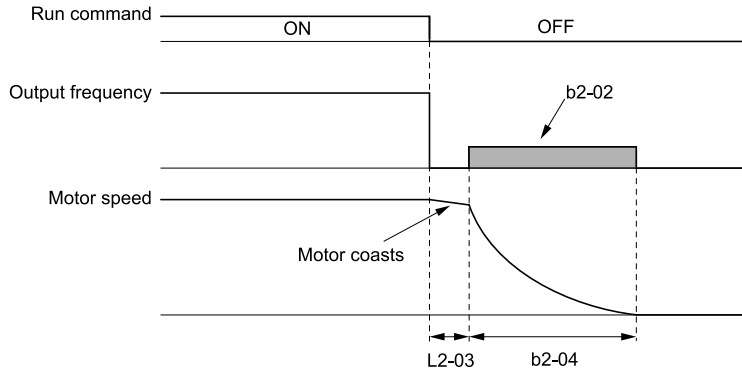

**Figure 12.12 DC Injection Braking to Stop**

The value set in  $b2-04$  and the output frequency when the drive receives the Stop command determine the DC Injection Braking time. The drive calculates the DC Injection Braking time as in [Figure 12.13](#).

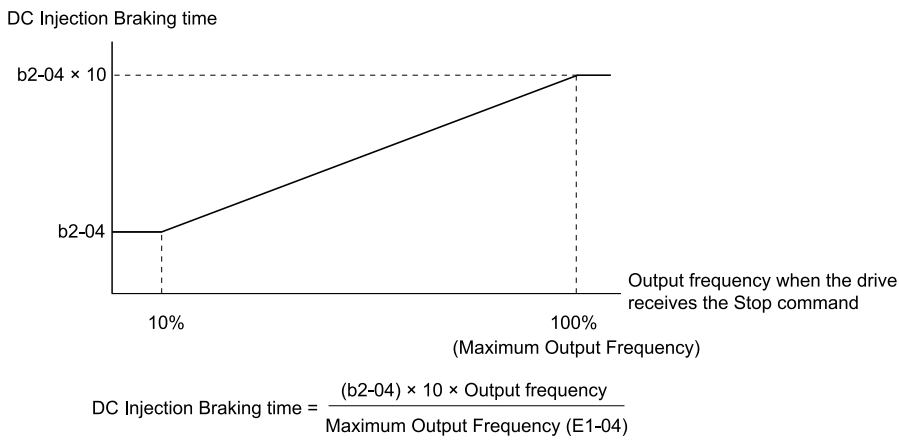

**Figure 12.13 DC Injection Braking Time and Output Frequency**


**Note:**

Set  $L2-03$  to a high value that will not trigger *oC* [Overcurrent] when the drive uses DC Injection Braking to stop the motor.

**3 : Coast to Stop with Timer**

Enter the Stop command or turn OFF the Run command and turn OFF drive output and coast the motor to stop. The drive ignores the Run command until the “Run wait time  $t$ ” is expired.

To start the drive again, wait until the the “Run wait time  $t$ ” is expired then enter the Run command.

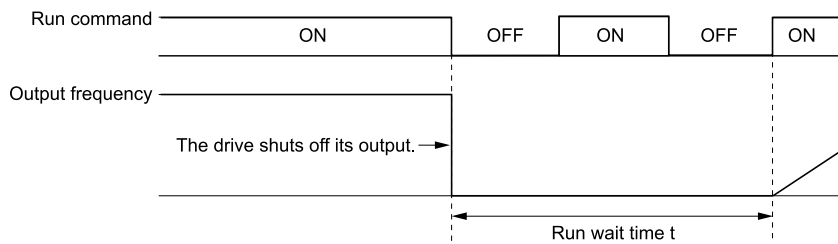

**Figure 12.14 Coast to Stop with Timer**

The active deceleration time and the output frequency when drive receives the Stop command determine the length of “Run wait time  $t$ ”.

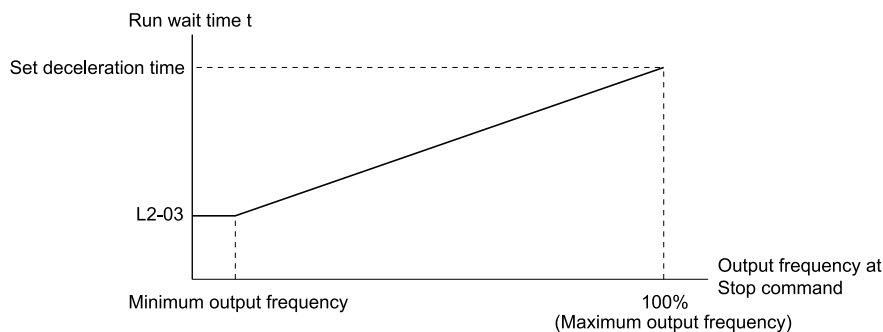


Figure 12.15 Run Wait Time and Output Frequency

### 9 : Stop with Constant Distance

Enter the Stop command or turn OFF the Run command for the drive to always decelerate for the same distance. The drive uses the active deceleration time and the value set in *E1-04 [Maximum Output Frequency]* to calculate stopping distance *S1*. The drive holds its current speed when stopping from a frequency less than the maximum speed. When the distance covered is equal to *S1* minus *S2*, the drive ramps to stop in the current deceleration time. Adjust the stopping precision with *d4-12 [Stop Position Gain]*.

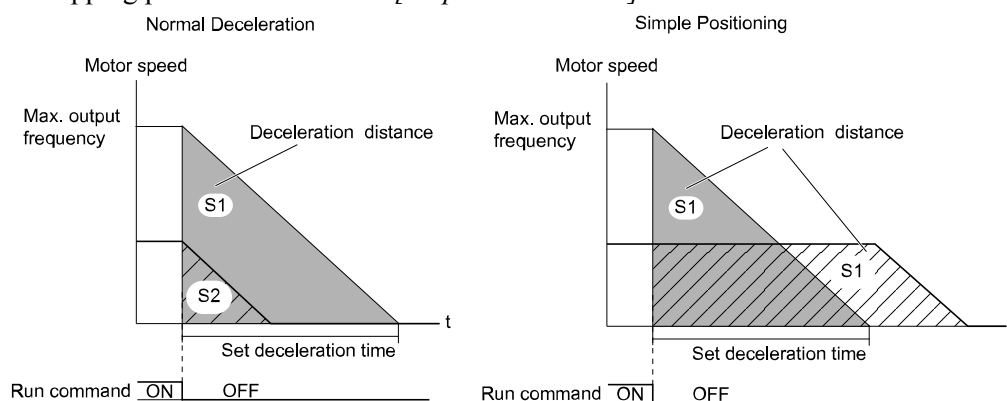


Figure 12.16 Deceleration When Set for Stop in Position

#### Note:

Note these points when setting Stop in Position.

- The drive uses the deceleration time that was active when the drive received the Stop command or when the Run command was turned OFF to calculate the stop time. If you change the deceleration time during deceleration, the positioning will not be accurate.
- Set *b6-03 = 0.0 [Dwell Reference at Stop = 0.0]*, *b6-04 = 0.0 [Dwell Time at Stop = 0.0 s]*.
- The KEB Ride-Thru function is not available. Set *H1-xx ≠ 65, 66, 7A, 7B [MFDI Function Selection = KEB Ride-Thru 1/2 Activate (N.O.N.C.)]*.
- Set *L3-04 = 0 [Stall Prevention during Decel = Disabled]*. A dynamic braking option can be necessary for regenerative loads.
- Set *L3-11 = 0 [Overvoltage Suppression Select = Disabled]*.
- The High Slip Braking function is not available. Set *H1-xx ≠ 68 [MFDI Function Selection ≠ High Slip Braking (HSB) Activate]*.
- Set *C2-03, C2-04 = 0.00 [S-Curve Time @ Start of Decel, S-Curve Time @ End of Decel = 0.00 s]*.

### ■ b1-04: Reverse Operation Selection

| No. (Hex.)   | Name                        | Description  | Default (Range) |
|--------------|-----------------------------|--|-----------------|
| b1-04 (0183) | Reverse Operation Selection | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the reverse operation function. Disable reverse operation in fan or pump applications where reverse rotation is dangerous. | 0<br>(0, 1)     |

When reverse operation is prohibited, the drive will not accept a Reverse operation command.

#### 0 : Reverse Enabled

The drive will accept a Reverse operation command.

#### 1 : Reverse Disabled

The drive will not accept a Reverse operation command.

### ■ b1-06: Digital Input Reading

| No. (Hex.)      | Name                  | Description   | Default (Range) |
|-----------------|-----------------------|---|-----------------|
| b1-06<br>(0185) | Digital Input Reading | <div style="display: flex; gap: 5px;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets the number of times that the drive reads the sequence input command to prevent malfunction because of electrical interference.</p> | 1<br>(0, 1)     |

#### 0 : Single Scan

The drive reads the terminal status one time. The drive immediately reads all changes to the terminal status.

This setting lets the drive quickly respond to changes in the sequence, but noise can cause malfunction.

#### 1 : Double Scan

The drive reads all changes to the terminal status two times to make sure that the reading is the same.

The drive responds slower than when it reads the sequence one time, but this setting prevents malfunction because of electrical interference.

### ■ b1-07: LOCAL/REMOTE Run Selection

| No. (Hex.)      | Name                       | Description  | Default (Range) |
|-----------------|----------------------------|--|-----------------|
| b1-07<br>(0186) | LOCAL/REMOTE Run Selection | <div style="display: flex; gap: 5px;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets drive response to an existing Run command when the drive receives a second Run command from a different location.</p> | 0<br>(0, 1)     |

This parameter interlocks the drive to help prevent accidents that can occur if the motor starts to rotate because the Run command source changed.

To switch the RUN command source, push **LORE** on the keypad or set  $HI-xx = 1, 2$  [*MFDI Function Selection = LOCAL/REMOTE Selection, External Reference 1/2 Selection*] and activate/deactivate the terminal.

#### 0 : Disregard Existing RUN Command

If a Run command is enabled when you switch between Run command sources, the drive will not operate the motor.

When the drive is operating the motor, turn OFF the Run command to stop the motor. Enter the Run command again to start operation.

#### 1 : Accept Existing RUN Command

If a Run command is enabled when you switch between Run command sources, the drive will start to operate the motor or continue to operate the motor.

**WARNING!** *Sudden Movement Hazard. When you use a 3-Wire sequence, set A1-03 = 3330 [Initialize Parameters = 3-Wire Initialization] and make sure that b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command] (default). If you do not correctly set the drive parameters for 3-Wire operation before you energize the drive, the motor can suddenly rotate when you energize the drive.*

### ■ b1-08: Run Command Select in PRG Mode

| No. (Hex.)      | Name                           | Description  | Default (Range) |
|-----------------|--------------------------------|--|-----------------|
| b1-08<br>(0187) | Run Command Select in PRG Mode | <div style="display: flex; gap: 5px;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets the conditions for the drive to accept a Run command entered from an external source when using the keypad to set parameters.</p> | 0<br>(0 - 2)    |

As a safety precaution, when the drive is in Programming Mode, it will not respond to a Run command.

This parameter helps prevent accidents that can occur if the motor starts to rotate because the drive received a Run command from an external source while the user is programming the drive. You can also set the drive to not show the Programming Mode when a Run command is active.

**Note:**

Refer to this table for Drive Mode and Programming Mode functions.

| Mode             | Keypad Screen                 | Function                                     |
|------------------|-------------------------------|--|
| Drive Mode       | Monitors                      | Sets monitor display.                        |
| Programming Mode | Parameters                    | Changes parameter settings.                  |
|                  | User Custom Parameters        | Shows the User Parameters.                   |
|                  | Parameter Backup/Restore      | Saves parameters to the keypad as backup.    |
|                  | Modified Parameters/Fault Log | Shows modified parameters and fault history. |
|                  | Auto-Tuning                   | Auto-Tunes the drive.                        |
|                  | Initial Setup                 | Changes initial settings.                    |
|                  | Diagnostic Tools              | Sets data logs and backlight.                |

**0 : Disregard RUN while Programming**

The drive rejects the Run command while in Programming Mode.

**1 : Accept RUN while Programming**

The drive accepts a Run command entered from an external source while in Programming Mode.

**2 : Allow Programming Only at Stop**

The drive does not let the user enter Programming Mode when the drive is operating. The drive does not show the Programming Mode when a Run command is active.

**■ b1-14: Phase Order Selection**

| No. (Hex.)      | Name                  | Description  | Default (Range) |
|-----------------|-----------------------|--|-----------------|
| b1-14<br>(01C3) | Phase Order Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the phase order for output terminals U/T1, V/T2, and W/T3. This parameter can align the Forward Run command from the drive and the forward direction of the motor without changing wiring.</p> | 0<br>(0, 1)     |

**0 : Standard****1 : Switch Phase Order****■ b1-15: Frequency Reference Selection 2**

| No. (Hex.)      | Name                            | Description   | Default (Range) |
|-----------------|---------------------------------|---|-----------------|
| b1-15<br>(01C4) | Frequency Reference Selection 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the input method for frequency reference 2.</p> | 0<br>(0 - 4)    |

This parameter is enabled when  $HI-xx = 2$  [MFDI Function Selection = External Reference 1/2 Selection] is activated.

**Note:**

- Push **LO/RE** on the keypad to set the input mode to LOCAL and use the keypad to enter the frequency reference.
- If the frequency reference is 0 Hz or less than or equal to the value set in *E1-09* [Minimum Output Frequency] and the drive receives the Run command, the RUN LED on the keypad will flash. Examine the setting for the frequency reference input and enter a value more than or equal to *E1-09*.

**0 : Keypad**

Use the keypad to enter the frequency reference.

Use **▲** and **▼** on the keypad to change the frequency reference.


**1 : Analog Input**

Use MFAI terminals A1 and A2 to input an analog frequency reference with a voltage or current input signal.

- Voltage Input  
Refer to [Table 12.25](#) to use a voltage signal input to one of the MFAI terminals.

**Table 12.25 Frequency Reference Voltage Input**

| Terminal | Terminal Signal Level          | Parameter Settings     |                                    |       |       | Note  |
|----------|--------------------------------|------------------------|------------------------------------|-------|-------|---|
|          |                                | Signal Level Selection | Function Selection                 | Gain  | Bias  |   |
| A1       | 0 - 10 V (Lower Limit at 0)    | H3-01 = 0              | H3-02 = 0<br>[Frequency Reference] | H3-03 | H3-04 |   |
|          | 0 - 10 V (Without Lower Limit) | H3-01 = 1              |                                    |       |       |   |
| A2       | 0 - 10 V (Lower Limit at 0)    | H3-01 = 0              | H3-10 = 0<br>[Frequency Reference] | H3-11 | H3-12 | Set DIP switch S1 to "V" for voltage input. |
|          | 0 - 10 V (Without Lower Limit) | H3-01 = 1              |                                    |       |       |   |

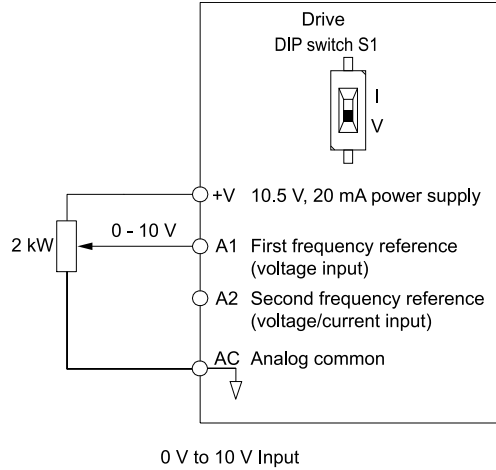

**Figure 12.17 Example of Setting the Frequency Reference with a Voltage Signal to Terminal A1**

**Note:**


You can also use this diagram to wire terminal A2.

• **Current Input**

Refer to [Table 12.26](#) to use a current signal input to one of the MFAI terminals.

**Table 12.26 Frequency Reference Current Input**

| Terminal | Signal Level | Parameter Settings     |                                    |       |       | Note  |
|----------|--------------|------------------------|------------------------------------|-------|-------|---|
|          |              | Signal Level Selection | Function Selection                 | Gain  | Bias  |   |
| A2       | 4 - 20 mA    | H3-09 = 2              | H3-10 = 0<br>[Frequency Reference] | H3-11 | H3-12 | Set DIP switch S1 to "I" for current input. |
|          | 0 - 20 mA    | H3-09 = 3              |                                    |       |       |   |

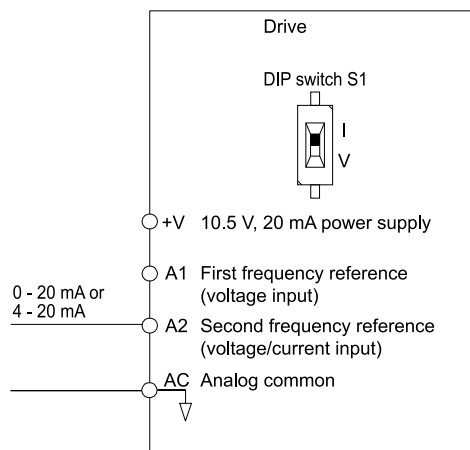

**Figure 12.18 Example of Setting the Frequency Reference with a Current Signal to Terminal A2**

**Changing between Master and Auxiliary Frequency References**

Use the multi-step speed reference function to change the frequency reference input between terminals A1 and A2.

**2 : Memobus/Modbus Communications**



Use MEMOBUS/Modbus communications to enter the frequency reference.

### 3 : Option PCB

Use a communications option card connected to the drive to enter the Run command.

Refer to the instruction manual included with the option card to install and set the option card.

**Note:**

If you set  $b1-15 = 3$  but you do not connect an option card,  $oPE03$  [Multi-Function Input Setting Err] will flash on the keypad.


### 4 : Pulse Train Input

Use a pulse train signal from the pulse train input terminal RP to enter the frequency reference.

Do this procedure to make sure that the pulse train signal is operating correctly.

1. Set  $b1-15 = 4$ ,  $H6-01 = 0$  [Terminal RP Pulse Train Function = Frequency Reference].
2. Set  $H6-02$  [Terminal RP Frequency Scaling] to the number of pulses that determine 100% of the frequency reference.
3. The terminal set in  $H1-xx = 2$  [MFDI Function Selection = External Reference 1/2 Selection] is activated.
4. Enter a pulse train signal on the terminal RP and make sure that the keypad shows a correct frequency reference.

## ■ b1-16: Run Command Selection 2

| No.<br>(Hex.)   | Name                    | Description  | Default<br>(Range) |
|-----------------|-------------------------|--|--------------------|
| b1-16<br>(01C5) | Run Command Selection 2 | <br>Sets the input method for Run Command 2 when the user switches the control circuit terminals ON/OFF to change the Run command source. | 0<br>(0 - 3)       |

Activate  $H1-xx = 2$  [MFDI Function Selection = External Reference 1/2 Selection] to enable this parameter.

### 0 : Keypad

Use the keypad to enter the Run command.

You can use the JOG operation or the FWD/REV commands from the keypad.

**Note:**

The  is on while the keypad is the Run command source.

### 1 : Digital Input

Use the control circuit terminals to enter the Run command. Select the input method for the Run command with an  $H1-xx$  parameter.

Set  $H1-xx = 0, 40$  to  $43$  [3-Wire Sequence, Run Command (2-Wire Sequence)]. The default setting is 2-wire sequence 1.

- 2-wire Sequence 1  
This sequence has two input types: FWD/Stop and REV/Stop. Set  $A1-03 = 2220$  [Initialize Parameters = 2-Wire Initialization] to initialize the drive and set terminals S1 and S2 for a 2-wire sequence.
- 2-wire Sequence 2  
This sequence has two input types: Run/Stop and FWD/REV.
- 3-Wire Sequence  
This sequence has three input types: Run, Stop, and FWD/REV. Set  $A1-03 = 3330$  [Initialize Parameters = 3-Wire Initialization] to initialize the drive and set terminals S1, S2, and S5 for a 3-wire sequence.

### 2 : Memobus/Modbus Communications

Use MEMOBUS/Modbus communications to enter the Run command.

### 3 : Option PCB

Use a communications option card or input option card connected to the drive to enter the Run command.

Refer to the instruction manual included with the option card to install and set the option card.

**Note:**

If  $b1-16 = 3$  but no option card is connected, then  $oPE03$  [Multi-Function Input Setting Err] will flash on the keypad.

### ■ b1-17: Run Command at Power Up


| No. (Hex.)   | Name                    | Description  | Default (Range) |
|--------------|-------------------------|--|-----------------|
| b1-17 (01C6) | Run Command at Power Up | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets drive response when energizing a drive that has an external Run command. Set this parameter in applications where energizing or de-energizing the drive enables the Run command.</p> | 0 (0, 1)        |

#### 0 : Disregard Existing RUN Command

The drive does not start to operate the application when the power is switched ON, even when there is an existing Run command.

Enter the Run command again to operate the application.

**Note:**

When you energize the drive,  on the keypad will flash quickly if the Run command is already enabled from an external source.

#### 1 : Accept Existing RUN Command

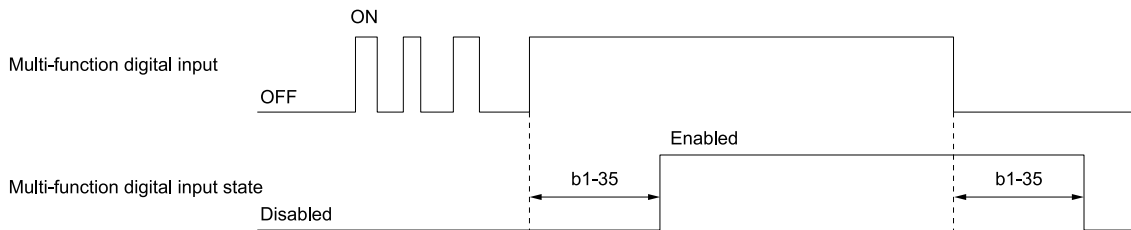
When there is an existing Run command, the drive starts to operate the application when the power is switched ON.

**WARNING! Sudden Movement Hazard.** When you use a 3-Wire sequence, set A1-03 = 3330 [Initialize Parameters = 3-Wire Initialization] and make sure that b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command] (default). If you do not correctly set the drive parameters for 3-Wire operation before you energize the drive, the motor can suddenly rotate when you energize the drive.

### ■ b1-35: Digital Input Deadband Time

| No. (Hex.)          | Name                        | Description  | Default (Range)          |
|---------------------|-----------------------------|--|--------------------------|
| b1-35 (1117) Expert | Digital Input Deadband Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the deadband time for MFDIs.</p> | 0.0 ms (0.0 to 100.0 ms) |

When the on/off time for MFDIs is longer than the time set in b1-35, the drive activates the MFDI. Set this parameter to prevent malfunctions caused by relay chattering for applications in which relays send input to MFDI terminals.



## ◆ b2: DC Injection Braking and Short Circuit Braking

b2 parameters set the DC Injection Braking and Short Circuit Braking functions.

- DC Injection Braking: A braking method that injects DC current into the motor windings. This function should not be used too frequently, because it generates a fair amount of heat in the motor.
- Short Circuit Braking: A braking method for PM motors.

### ■ b2-01: DC Injection/Zero SpeedThreshold

| No. (Hex.)   | Name                             | Description   | Default (Range)                     |
|--------------|----------------------------------|---|-------------------------------------|
| b2-01 (0189) | DC Injection/Zero SpeedThreshold | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the frequency to start DC Injection Braking or Short Circuit Braking.</p> | Determined by A1-02 (0.0 - 10.0 Hz) |

**Note:**

This parameter is available when b1-03 = 0 [Stopping Method Selection = Ramp to Stop].

When the control method selected in A1-02 [Control Method Selection] changes, the b2-01 function changes.

| Parameter Settings  | Functions of b2-01  |
|---|---|
| $A1-02 = 0, 2$ [V/f or OLV]                               | <p>Parameter <math>b2-01</math> sets the frequency to start DC Injection Braking at stop. When the output frequency is less than or equal to the value set in <math>b2-01</math>, the drive will inject the quantity of DC current set in <math>b2-02</math> [DC Injection Braking Current] into the motor for the time set in <math>b2-04</math> [DC Inject Braking Time at Stop].</p> <p><b>Figure 12.19 DC Injection Braking at Stop</b></p> <p><b>Note:</b><br/>When <math>b2-01 \leq E1-09</math> [Minimum Output Frequency], the drive will start DC Injection Braking from the frequency set in <math>E1-09</math>.</p>  |
| $A1-02 = 5, 6, \text{ or } 8$ [OLV/PM, AOLV/PM, or EZOLV] | <p>Parameter <math>b2-01</math> sets the frequency to start for Short Circuit Braking at stop. When the output frequency is less than or equal to the value set in <math>b2-01</math>, the drive will do Short Circuit Braking for the time set in <math>b2-13</math> [Short Circuit Brake Time @ Stop]. When <math>b2-04 &gt; 0.00</math> s, the drive will complete Short Circuit Braking, then do DC Injection Braking for the time set in <math>b2-04</math>.</p> <p><b>Figure 12.20 Short Circuit Braking at Stop</b></p> <p><b>Note:</b><br/>When <math>b2-01 \leq E1-09</math>, the drive will start Short Circuit Braking from the frequency set in <math>E1-09</math>. If <math>b2-01</math> and <math>E1-09 = 0</math> Hz, the drive will not do Short Circuit Braking.</p> |

### ■ b2-02: DC Injection Braking Current

| No. (Hex.)   | Name                         | Description  | Default (Range) |
|--------------|------------------------------|--|-----------------|
| b2-02 (018A) | DC Injection Braking Current | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the DC Injection Braking current as a percentage of the drive rated current. | 50% (0 - 75%)   |

When the DC Injection Braking current is more than 50%, the drive decreases the carrier frequency to 1 kHz. The motor rated current determines how much DC Injection Braking current that the drive can use.

The DC Injection Braking current level has an effect on the strength of the magnetic field that locks the motor shaft. As the current level increases, the motor windings will supply more heat. Do not set this parameter higher than the level that is necessary to hold the motor shaft.

### ■ b2-03: DC Inject Braking Time at Start

| No. (Hex.)   | Name                            | Description  | Default (Range)         |
|--------------|---------------------------------|--|-------------------------|
| b2-03 (018B) | DC Inject Braking Time at Start | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the DC Injection Braking Time at stop. | 0.00 s (0.00 - 10.00 s) |

This function stops then restarts a coasting motor and increases motor flux to make high starting torque (a process called initial excitation). Set this parameter to 0.00 to disable the function.

**Note:**

To restart a coasting motor, use DC Injection Braking to stop and then restart the motor, or enable Speed Search. Enable DC Injection Braking or Speed Search to prevent *ov* [Overvoltage] or *oC* [Overcurrent] faults.

### ■ b2-04: DC Inject Braking Time at Stop

| No. (Hex.)   | Name                           | Description  | Default (Range)                      |
|--------------|--------------------------------|--|--------------------------------------|
| b2-04 (018C) | DC Inject Braking Time at Stop | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the DC Injection Braking Time at stop. | Determined by A1-02 (0.00 - 10.00 s) |

This function fully stops a motor with a large inertia during deceleration and will not let the inertia continue to rotate the motor.

Set this parameter to 0.00 to disable the function.

When a longer time is required to stop the motor, increase the value.

■ **b2-08: Magnetic Flux Compensation Value**

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| b2-08 (0190) | Magnetic Flux Compensation Value | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets how much current the drive injects when DC Injection Braking at Start starts (Initial Excitation) as a percentage of E2-03 [Motor No-Load Current].</p> | 0% (0 - 1000%)  |

This parameter is effective when you start a high-capacity motor (a motor with a large secondary circuit time constant). This function can quickly increase motor flux to make high starting torque (a process called initial excitation).

The current level for DC Injection Braking at start changes linearly from the setting of b2-08 to the setting of b2-03 as shown in Figure 12.21.

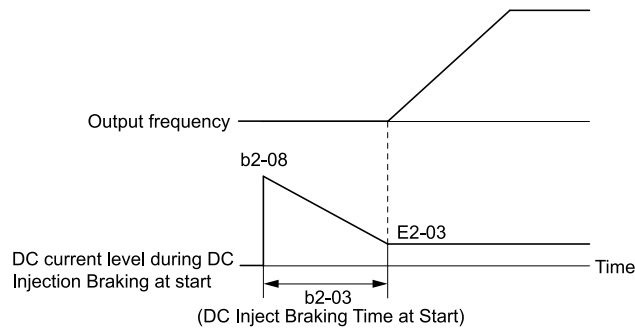


Figure 12.21 DC Current Level during DC Injection Braking at Start

**Note:**

- If *b2-08* < 100%, flux will develop very slowly.
- When *b2-08* = 0%, the DC current level will be the DC Injection current set in *b2-02* [DC Injection Braking Current].
- If *b2-08* is set too high, DC Injection Braking at start can cause a large noise. Adjust *b2-08* to decrease the volume to the permitted level.

■ **b2-12: Short Circuit Brake Time @ Start**

| No. (Hex.)   | Name                             | Description  | Default (Range)         |
|--------------|----------------------------------|--|-------------------------|
| b2-12 (01BA) | Short Circuit Brake Time @ Start | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the Short Circuit Braking time at start.</p> | 0.00 s (0.00 - 25.50 s) |

This function stops and restarts a coasting PM motor. The drive short circuits all the three motor phases to make braking torque in the motor.

Set this parameter to 0.00 to disable the function.

**Note:**

- Short circuit Braking will let external forces rotate the PM motor. Use DC Injection Braking to prevent motor rotation from external forces.
- Motor speed and load conditions can make it necessary to install a dynamic braking option on the drive.

■ **b2-13: Short Circuit Brake Time @ Stop**

| No. (Hex.)   | Name                            | Description   | Default (Range)   |
|--------------|---------------------------------|---|---|
| b2-13 (01BB) | Short Circuit Brake Time @ Stop | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the Short Circuit Braking time at stop.</p> | A1-02 = 8: 0.00 s<br>Other than A1-02 = 8: 0.50 s<br>(0.00 - 25.50 s) |

This function fully stops a PM motor with a large inertia during deceleration and will not let the inertia continue to rotate the motor.

Short Circuit Braking operates for the time set in *b2-13* when output frequency is less than the value set in *b2-01* [DC Injection/Zero SpeedThreshold] or *E1-09* [Minimum Output Frequency].

Set this parameter to 0.00 to disable the function.

**Note:**

- Motor speed and load conditions can make it necessary to install a dynamic braking option on the drive.

## ■ b2-18: Short Circuit Braking Current

| No.<br>(Hex.)   | Name                          | Description  | Default<br>(Range)       |
|-----------------|-------------------------------|--|--------------------------|
| b2-18<br>(0177) | Short Circuit Braking Current | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the Short Circuit Braking Current as a percentage of the motor rated current. | 100.0%<br>(0.0 - 200.0%) |

The Short Circuit Braking current cannot be higher than the drive rated current, although you can use *b2-18* to set a higher current level. The maximum rated current is 120% when the drive is set for Normal Duty (*C6-01 = 1* [*Normal Duty Rating*]). The maximum rated current is 150% when the drive is set for Heavy Duty (*C6-01 = 0* [*Heavy Duty Rating*]).

## ◆ b3: Speed Search

The Speed Search function detects the actual speed of a coasting motor, then restarts the motor before the motor stops. Use Speed Search in these conditions:

- To continue operation after momentary power loss
- To switch from commercial power supply to drive power
- To restart a coasting fan

For example, the drive output turns off and the motor coasts when there is a momentary loss of power. After you return power, the drive does Speed Search on the coasting motor, and restarts the motor from the detected speed.

When you use a PM motor, enable *b3-01* [*Speed Search at Start Selection*].

There are two types of Speed Search for induction motors: Current Detection and Speed Estimation. Use parameter *b3-24* [*Speed Search Method Selection*] to select the type of Speed Search.

Parameter settings are different for different types of Speed Search. Refer to [Table 12.27](#) for more information.

**Table 12.27 Speed Search and Related Parameters**


| Parameter                                | Speed Estimation | Current Detection 2 |
|--|------------------|---------------------|
|  | b3-24 = 1        | b3-24 = 2           |
| b3-01 [Speed Search at Start Selection]  | x                | x                   |
| b3-03 [Speed Search Deceleration Time]   | -                | x                   |
| b3-05 [Speed Search Delay Time]          | x                | x                   |
| b3-06 [Speed Estimation Current Level 1] | x                | -                   |
| b3-07 [Speed Estimation Current Level 2] | x                | -                   |
| b3-08 [Speed Estimation ACR P Gain]      | x                | -                   |
| b3-09 [Speed Estimation ACR I Time]      | x                | -                   |
| b3-10 [Speed Estimation Detection Gain]  | x                | -                   |
| b3-14 [Bi-directional Speed Search]      | x                | x                   |
| b3-17 [Speed Est Retry Current Level]    | x                | x                   |
| b3-18 [Speed Est Retry Detection Time]   | x                | x                   |
| b3-19 [Speed Search Restart Attempts]    | x                | x                   |
| b3-24 [Speed Search Method Selection]    | x (1)            | x (2)               |
| b3-25 [Speed Search Wait Time]           | x                | x                   |
| b3-26 [Direction Determination Level]    | x                | -                   |
| b3-29 [Speed Search Back-EMF Threshold]  | -                | -                   |
| b3-31 [Spd Search Current Reference Lvl] | -                | x                   |
| b3-32 [Spd Search Current Complete Lvl]  | -                | x                   |
| b3-33 [Speed Search during Uv Selection] | x                | x                   |
| b3-54 [Search Time]                      | -                | -                   |
| b3-55 [Current Increment Time]           | -                | -                   |
| b3-56 [InverseRotationSearch WaitTime]   | -                | x                   |

**Note:**

- To use Speed Estimation Speed Search with V/f Control, do Rotational Auto-Tuning before you set the Speed Search function. If the wire length between the drive and motor changed since the last time you did Auto-Tuning, do Stationary Auto-Tuning for Line-to-Line Resistance process again.
- If  $A1-02 = 5, 6$  [PM Open Loop Vector; PM Advanced Open Loop Vector] and the wiring distance between the motor and drive is long or if the motor is coasting at more than or equal to 120 Hz, do not use Speed Search to restart the motor. Use Short Circuit Braking.

■ **Current Detection 2**

Use this Speed Search function with induction motors. Set  $b3-24 = 2$  [Speed Search Method Selection = Current Detection 2]. Current Detection Speed Search injects current into the motor to detect the speed of an induction motor. Speed Search increases the output voltage for the time set in  $L2-04$  [Powerloss V/f Recovery Ramp Time], starting from the maximum output frequency or the frequency reference.

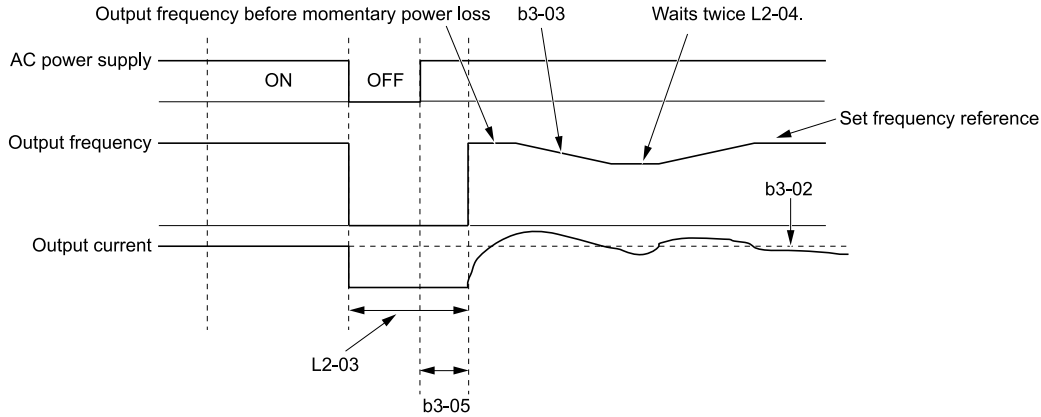


**Figure 12.22 Current Detection 2 after Momentary Power Loss**

**Note:**

Once power is restored, the drive will not execute Speed Search until the time set in  $b3-05$  [Speed Search Delay Time] has passed. Thus, the drive will not always start Speed Search although the time set in  $L2-03$  [Minimum Baseblock Time] is expired.

If you enter the Run command at the same time as Speed Search, the drive will not do Speed Search until the time set in  $L2-03$  is expired. When the value set in  $L2-03 < b3-05$ , the drive will use the wait time set in  $b3-05$ .

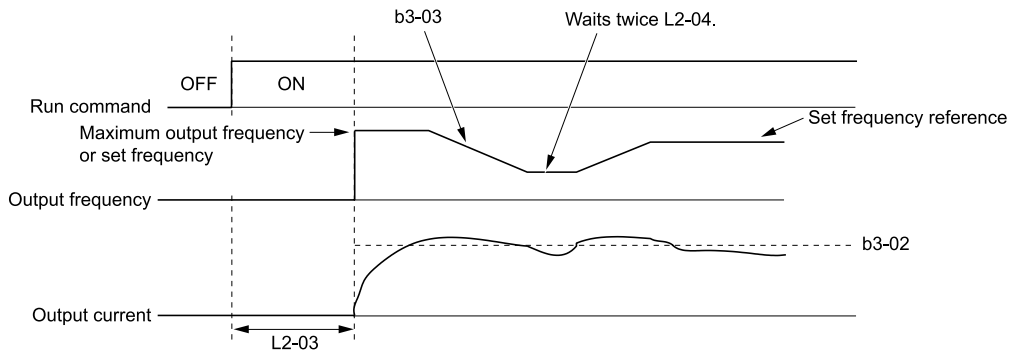

**Figure 12.23 Speed Search Selection at Start (Current Detection Type)**

**WARNING! Sudden Movement Hazard.** Do not do Current Detection Speed Search with light loads or a stopped motor. If you do Auto-Tuning in these conditions, the motor can suddenly accelerate and cause serious injury or death.

**Note:**

- You cannot use Current Detection Speed Search with PM motors.
- If the motor is rotating in reverse, you cannot do Speed Search.
- If the drive detects  $oL1$  [Motor Overload] during Current Detection Speed Search, decrease the value set in  $b3-03$ .
- If the drive detects  $oC$  [Overcurrent] or  $ov$  [Overvoltage] during Current Detection Speed Search after the drive recovers from a momentary power loss, increase the value set in  $L2-03$ .

■ **Speed Estimation**

Use this Speed Search function with induction motors. Set  $b3-24 = 1$  [Speed Search Method Selection = Speed Estimation]. This function uses less current and has a shorter search time than other functions. This function lets you do Speed Search when the motor is rotating in reverse. When you return power after a power loss, the motor will not suddenly accelerate.

**Note:**

You cannot do Speed Estimation Speed Search in these conditions:


- When You Operate More than One Motor with One Drive
- When you use a high-speed motor (120 Hz or higher)
- When you use a 1.5 kW or smaller motor.
- When the motor output is more than 1 frame size smaller than the drive capacity
- When there is a long wiring distance between the drive and motor

For these conditions, use Current Detection Speed Search.

Speed Estimation Speed Search uses these two steps to estimate the motor speed:

### 1. Residual Voltage Search

When there is a short baseblock time, the drive searches for residual voltage. The drive uses the residual voltage in the motor to estimate the motor speed and direction of rotation. The drive outputs the estimated motor speed as frequency, then uses the deceleration rate set in *L2-04* to increase the voltage. When the output voltage aligns with the  $V/f$  pattern, the drive accelerates or decelerates the motor to the frequency reference. If the drive cannot estimate the motor speed because of low residual voltage, it will automatically do Current Injection.

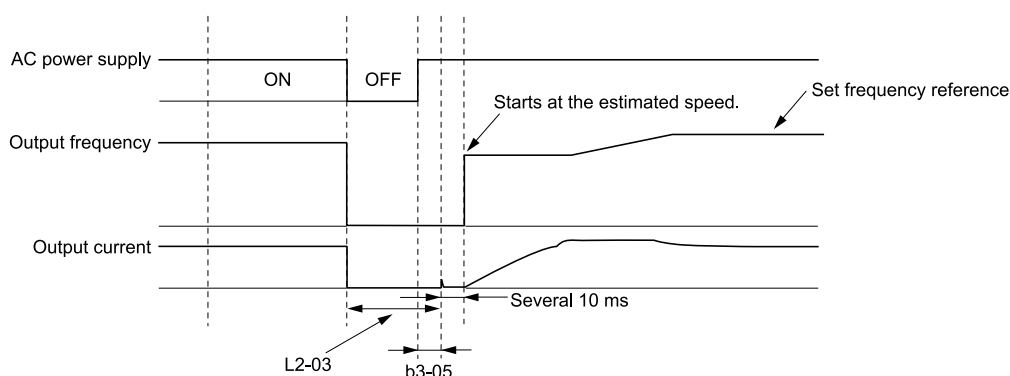


**Figure 12.24 Speed Search after Baseblock**

**Note:**

After you return power, the drive waits for the time set in *b3-05*. If power loss is longer than the time set in *L2-03*, the drive will start Speed Search when the time set in *b3-05* is expired after the power recovery.

### 2. Current Injection

If there is not sufficient residual voltage in the motor, the drive does Current Injection. The drive injects the quantity of DC current set in *b3-06* [*Speed Estimation Current Level 1*] into the motor windings to estimate the motor speed and direction of rotation. The drive outputs the estimated motor speed as frequency, then uses the deceleration rate set in *L2-04* to increase the voltage. When the output voltage aligns with the  $V/f$  pattern, the drive accelerates or decelerates the motor to the frequency reference.

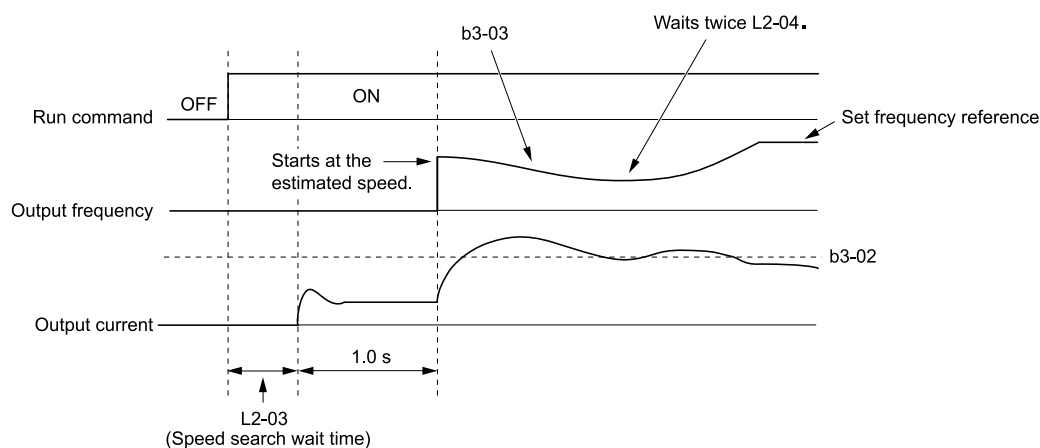

**Figure 12.25 Speed Search Selection at Start**

**Note:**

Set the lower limit of the delay time to *b3-05* for when Speed Search starts.

## ■ Speed Search and Operation Conditions

These conditions apply to Speed Search operation. When *A1-02* = 0, 2 [*Control Method Selection* = *V/f Control*, *Open Loop Vector*], set *b3-24* [*Speed Search Method Selection*] before you do Speed Search.

- Do Speed Search with each Run Command  
The drive ignores a Speed Search command from the external terminals.
- Use an MFDI to do an External Speed Search Command  
To use an MFDI to do Speed Search, input the Run command at the same time that terminal Sx set for Speed Search activates, or after Speed Search activates.  
Set Speed Search to *H1-xx* to do the function externally. You cannot set external Speed Search 1 and 2 at the same time.

**Table 12.28 Execute Speed Search via the Digital Input Terminals**

| H1-xx Setting | Name                   | Current Detection 2   | Speed Estimation   |
|---------------|------------------------|---|--|
| 61            | Speed Search from Fmax | ON: Speed Search starts from <i>E1-04</i> [Maximum Output Frequency].                                       | External Speed Search commands 1 and 2 work the same.<br>The drive estimates the motor speed, then starts Speed Search from the estimated speed. |
| 62            | Speed Search from Fref | ON: Speed Search starts from the frequency reference immediately before you input the Speed Search command. |  |

- Do Speed Search with Each Auto Restart  
Set *L5-01* [Number of Auto-Restart Attempts] = 1 or more. After there is an Auto Restart fault, the drive automatically does Speed Search.
- Do Speed Search after Momentary Power Loss  
Set *L2-01* = 1, 2 [Power Loss Ride Through Select = Enabled for L2-02 Time, Enabled while CPU Power Active].
- Do Speed Search after You Clear the External Baseblock Command  
After you clear the external baseblock command, enable the Run command, and when the output frequency is higher than the minimum frequency, the drive does Speed Search.

**■ b3-01: Speed Search at Start Selection**

| No. (Hex.)   | Name                            | Description   | Default (Range)            |
|--------------|---------------------------------|---|----------------------------|
| b3-01 (0191) | Speed Search at Start Selection | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the Speed Search at Start function where the drive will perform Speed Search with each Run command. | Determined by A1-02 (0, 1) |

**0 : Disable**

Enter a Run command to start to operate the drive at the minimum output frequency.  
When you enable the Run command and input the *Speed Search from Fmax or Fref* [*H1-xx* = 61, 62] from a multi-function input terminal, the drive will do Speed Search and start to operate the motor.

**1 : Enabled**

Enter the Run command to do Speed Search. The drive completes Speed Search then starts to operate the motor.

**■ b3-02: SpeedSearch Deactivation Current**

| No. (Hex.)   | Name                             | Description  | Default (Range)                |
|--------------|----------------------------------|--|--------------------------------|
| b3-02 (0192) | SpeedSearch Deactivation Current | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the current level that stops Speed Search as a percentage of the drive rated output current. Usually it is not necessary to change this setting. | Determined by A1-02 (0 - 200%) |

If the drive cannot restart the motor, decrease this setting.

**■ b3-03: Speed Search Deceleration Time**

| No. (Hex.)   | Name                           | Description  | Default (Range)      |
|--------------|--------------------------------|--|----------------------|
| b3-03 (0193) | Speed Search Deceleration Time | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the deceleration time during Speed Search operation. Set the length of time to decelerate from the maximum output frequency to the minimum output frequency. | 2.0 s (0.1 - 10.0 s) |

This is the output frequency deceleration time used by Current Detection Speed Search and by the Current Injection Method of Speed Estimation Speed Search.

**Note:**

- When *A1-02* = 8 [Control Method Selection = EZOLV], this parameter takes effect only in Expert Mode.
- If the drive detects *oL1* [Motor Overload] during Current Detection Speed Search, decrease the value set in *b3-03*.



### ■ b3-04: V/f Gain during Speed Search

| No. (Hex.)      | Name                         | Description   | Default (Range)                   |
|-----------------|------------------------------|---|-----------------------------------|
| b3-04<br>(0194) | V/f Gain during Speed Search | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the ratio used to reduce the V/f during searches to reduce the output current during speed searches. | Determined by o2-04<br>(10 - 100) |

Use the this formula to calculate the output voltage during Speed Search:

Output voltage during Speed Search = Configured V/f × b3-04

When the current detection search operates correctly, this configuration is not necessary.

### ■ b3-05: Speed Search Delay Time

| No. (Hex.)      | Name                    | Description  | Default (Range)          |
|-----------------|-------------------------|--|--------------------------|
| b3-05<br>(0195) | Speed Search Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the Speed Search delay time to activate a magnetic contactor installed between the drive and motor. | 0.2 s<br>(0.0 - 100.0 s) |

When you use a magnetic contactor between the drive and motor, you must close the contactor before the drive will do Speed Search. This parameter sets a delay time to activate the magnetic contactor.

### ■ b3-06: Speed Estimation Current Level 1

| No. (Hex.)                | Name                             | Description   | Default (Range)                    |
|---------------------------|----------------------------------|---|------------------------------------|
| b3-06<br>(0196)<br>Expert | Speed Estimation Current Level 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the level of current that flows to the motor during Speed Estimation Speed Search as a coefficient of the motor rated current. Usually it is not necessary to change this setting. | Determined by o2-04<br>(0.0 - 2.0) |

When the speed estimation value is the minimum output frequency, increase this setting. You can do this when the motor coasts at a high speed while the drive estimates the speed during Speed Estimation Speed Search. The limit of the output current during speed search is automatically the drive rated current.

#### Note:

When the drive cannot accurately estimate the speed after you adjust this parameter, use Current Detection Speed Search.

### ■ b3-07: Speed Estimation Current Level 2

| No. (Hex.)                | Name                             | Description  | Default (Range)    |
|---------------------------|----------------------------------|--|--------------------|
| b3-07<br>(0197)<br>Expert | Speed Estimation Current Level 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the level of current that flows to the motor during Speed Estimation Speed Search as a coefficient of E2-03 [Motor No-Load Current] or E4-03 [Motor 2 Rated No-Load Current]. Usually it is not necessary to change this setting. | 1.0<br>(0.0 - 3.0) |

During Speed Estimation Speed Searches, when the speed estimation value aligns with the minimum output frequency, increase the setting value in 0.1-unit increments. The limit of the output current during speed search is automatically the drive rated current.

### ■ b3-08: Speed Estimation ACR P Gain

| No. (Hex.)                | Name                        | Description  | Default (Range)                                |
|---------------------------|-----------------------------|--|--|
| b3-08<br>(0198)<br>Expert | Speed Estimation ACR P Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the proportional gain for the automatic current regulator during Speed Estimation Speed Search. Also adjusts speed search responsiveness. Usually it is not necessary to change this setting. | Determined by A1-02 and o2-04<br>(0.00 - 6.00) |

### ■ b3-09: Speed Estimation ACR I Time

| No. (Hex.)                | Name                        | Description  | Default (Range)                          |
|---------------------------|-----------------------------|--|--|
| b3-09<br>(0199)<br>Expert | Speed Estimation ACR I Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the integral time for the automatic current regulator during Speed Estimation Speed Search. Also adjusts speed search responsiveness. Usually it is not necessary to change this setting. | Determined by A1-02<br>(0.0 - 1000.0 ms) |

### ■ b3-10: Speed Estimation Detection Gain

| No. (Hex.)                | Name                            | Description  | Default (Range)       |
|---------------------------|---------------------------------|--|-----------------------|
| b3-10<br>(019A)<br>Expert | Speed Estimation Detection Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the gain to correct estimated frequencies from Speed Estimation Speed Search. | 1.05<br>(1.00 - 1.20) |

If the drive detects *ov* [*DC Bus Overvoltage*] when you restart the motor, increase the setting value.

### ■ b3-14: Bi-directional Speed Search

| No. (Hex.)      | Name                        | Description   | Default (Range)                         |
|-----------------|-----------------------------|---|---|
| b3-14<br>(019E) | Bi-directional Speed Search | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the direction of Speed Search to the direction of the frequency reference or in the motor rotation direction as detected by the drive. | Determined by A1-02 and b3-24<br>(0, 1) |

#### Note:

- When  $E9-01 = 0$  [*Motor Type Selection = Induction (IM)*] and  $A1-02 = 0, 2, \text{ or } 8$  [*Control Method Selection = V/f, OLV, or EZOLV*], the default settings change when the setting of b3-24 [*Speed Search Method Selection*] changes.
  - $-b3-24 = 1$  [*Speed Estimation*]: Refer to [Parameters that Change from the Default Settings with A1-02 \[Control Method Selection\] on page 430](#).
  - $-b3-24 = 2$  [*Current Detection 2*]: 0
- When  $E9-01 = 1$  or  $2$  [*Permanent Magnet (PM), Synchronous Reluctance (SynRM)*] and  $A1-02 = 0$  or  $8$  [*V/f, EZOLV*], refer to [Parameters that Change from the Default Settings with A1-02 \[Control Method Selection\] on page 430](#).  
When you set A1-02, b3-24, and E9-01, set b3-14.

#### 0 : Disabled

The drive uses the frequency reference to detect the direction of motor rotation.

#### 1 : Enabled

The drive detects the direction of motor rotation during Speed Search.

### ■ b3-17: Speed Est Retry Current Level

| No. (Hex.)                | Name                          | Description   | Default (Range)    |
|---------------------------|-------------------------------|---|--------------------|
| b3-17<br>(01F0)<br>Expert | Speed Est Retry Current Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the current level for the search retry function in Speed Estimation Speed Search as a percentage where drive rated current is a setting value of 100%. | 150%<br>(0 - 200%) |

When a large quantity of current flows during Speed Estimation Speed Search, the drive temporarily stops operation to prevent overvoltage and overcurrent. When the current is at the level set in b3-17, the drive tries speed search again.

### ■ b3-18: Speed Est Retry Detection Time

| No. (Hex.)                | Name                           | Description  | Default (Range)           |
|---------------------------|--------------------------------|--|---------------------------|
| b3-18<br>(01F1)<br>Expert | Speed Est Retry Detection Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time that the drive will wait to retry Speed Estimation Speed Search when too much current flow stopped the Speed Search. | 0.10 s<br>(0.00 - 1.00 s) |

When the current is more than the level set in b3-17 [*Speed Est Retry Current Level*] during the time set in b3-18, the drive tries speed search again.

### ■ b3-19: Speed Search Restart Attempts

| No. (Hex.)      | Name                          | Description   | Default (Range)           |
|-----------------|-------------------------------|---|---------------------------|
| b3-19<br>(01F2) | Speed Search Restart Attempts | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the number of times to restart Speed Search if Speed Search does not complete. | 3 times<br>(0 - 10 times) |

If the drive does the number of Speed Search restarts set in this parameter, it will trigger an *Ser* [*Speed Search Retries Exceeded*] error.

### ■ b3-24: Speed Search Method Selection

| No. (Hex.)      | Name                          | Description  | Default (Range) |
|-----------------|-------------------------------|--|-----------------|
| b3-24<br>(01C0) | Speed Search Method Selection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the Speed Search method when you start the motor or when you restore power after a momentary power loss. | 2<br>(1, 2)     |

**Note:**

- When  $A1-02 = 8$  [Control Method Selection = EZOLV], the default setting changes when the setting for  $E9-01$  [Motor Type Selection] and the drive model change.
  - $E9-01 = 0$  [Induction (IM)]
  - $E9-01 = 1, 2$  [Permanent Magnet (PM), Synchronous Reluctance (SynRM)]: 1
- When you set  $A1-02 = 8$  and  $E9-01 = 1$  or  $2$ , set  $b3-24 = 1$ . If  $b3-24 = 2$ , the drive will detect  $oPE08$  [Parameter Selection Error].

Set  $b3-01 = 1$  [Speed Search at Start Selection = Enabled] to do Speed Search at start. Set  $L2-01 = 1$  [Power Loss Ride Through Select = Enabled for L2-02 Time] to do Speed Search after you restore power after a momentary power loss.

#### 1 : Speed Estimation

The drive uses the residual voltage from a short baseblock time to estimate the motor speed.

If there is not sufficient residual voltage, then the drive will inject DC current into the motor to estimate the motor speed.

#### 2 : Current Detection 2

The drive will inject DC current into the motor to estimate motor speed.

### ■ b3-25: Speed Search Wait Time

| No. (Hex.)                | Name                   | Description  | Default (Range)         |
|---------------------------|------------------------|--|-------------------------|
| b3-25<br>(01C8)<br>Expert | Speed Search Wait Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time the drive will wait to start the Speed Search Retry function. | 0.5 s<br>(0.0 - 30.0 s) |

If the drive detects these faults during speed search, increase the setting value:

- $oC$  [Overcurrent]
- $ov$  [Overvoltage]
- $SEr$  [Speed Search Retries Exceeded]

### ■ b3-26: Direction Determination Level

| No. (Hex.)                | Name                          | Description  | Default (Range)       |
|---------------------------|-------------------------------|--|-----------------------|
| b3-26<br>(01C7)<br>Expert | Direction Determination Level | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the level to find the motor rotation direction. Increase the value if the drive cannot find the direction. | 1000<br>(40 to 60000) |

### ■ b3-29: Speed Search Back-EMF Threshold

| No. (Hex.)                | Name                            | Description  | Default (Range)  |
|---------------------------|---------------------------------|--|------------------|
| b3-29<br>(077C)<br>Expert | Speed Search Back-EMF Threshold | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the induced voltage for motors that use Speed Search. The drive will start Speed Search when the motor induced voltage level is the same as the setting value. Usually it is not necessary to change this setting. | 10%<br>(0 - 10%) |

To make adjustments, gradually decrease the setting value. If you decrease the setting value too much, speed search will not operate correctly.

### ■ b3-31: Spd Search Current Reference Lvl

| No. (Hex.)                | Name                             | Description  | Default (Range)       |
|---------------------------|----------------------------------|--|-----------------------|
| b3-31<br>(0BC0)<br>Expert | Spd Search Current Reference Lvl | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the current level that decreases the output current during Current Detection Speed Search. | 1.50<br>(1.50 - 3.50) |

## 12.3 b: Application

Set this parameter as a ratio of  $E2-03$  [Motor No-Load Current]. The setting is a ratio with respect to 30% of the motor rated current when  $E2-03 \leq E2-01$  [Motor Rated Current]  $\times 0.3$ .

**Note:**

The setting is a ratio with respect to  $E9-06$  [Motor Rated Current (FLA)]  $\times 0.5$  when  $A1-02 = 8$  [Control Method Selection = EZOLV].

### ■ b3-32: Spd Search Current Complete Lvl

| No. (Hex.)                | Name                            | Description  | Default (Range)       |
|---------------------------|---------------------------------|--|-----------------------|
| b3-32<br>(0BC1)<br>Expert | Spd Search Current Complete Lvl | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the current level that completes Speed Search. | 1.20<br>(0.00 - 1.49) |

The Current Detection Speed Search gradually decreases the output frequency to search for the motor speed when the output current is equal to or less than Speed Search Current Complete Level.

Set this parameter as a ratio of  $E2-03$  [Motor No-Load Current]. The setting is a ratio with respect to 30% of the motor rated current when  $E2-03 \leq E2-01$  [Motor Rated Current]  $\times 0.3$ .

**Note:**

The setting is a ratio with respect to  $E9-06$  [Motor Rated Current (FLA)]  $\times 0.5$  when  $A1-02 = 8$  [Control Method Selection = EZOLV].

### ■ b3-33: Speed Search during Uv Selection

| No. (Hex.)                | Name                             | Description  | Default (Range) |
|---------------------------|----------------------------------|--|-----------------|
| b3-33<br>(0B3F)<br>Expert | Speed Search during Uv Selection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function that starts Speed Search at start-up if the drive detects a $Uv$ [Undervoltage] when it receives a Run command. | 1<br>(0, 1)     |

Set these three parameters as shown to enable  $b3-33$ :

- $L2-01 = 1, 2$  [Power Loss Ride Through Select = Enabled for L2-02 Time, Enabled while CPU Power Active]
- $b3-01 = 1$  [Speed Search at Start Selection = Enabled]
- $b1-03 = 1$  [Stopping Method Selection = Coast to Stop]

**0 : Disabled**

**1 : Enabled**

### ■ b3-54: Search Time

| No. (Hex.)      | Name        | Description  | Default (Range)          |
|-----------------|-------------|--|--------------------------|
| b3-54<br>(3123) | Search Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time that the drive will run Speed Search. | 400 ms<br>(10 - 2000 ms) |

If you set this parameter too low, Speed Search will not operate correctly.

If the drive detects  $oC$  [Overcurrent] immediately after Speed Search Starts:

- Increase the value of  $L2-03$  [Minimum Baseblock Time] and decrease the motor speed you use to start Speed Search.
- Increases the setting value of  $b3-08$  [Speed Estimation ACR P Gain].
- Increase the value of  $b3-54$ .

If the drive detects  $oC$  or  $ov$  [DC Bus Overvoltage] during Speed Search, increase the value of  $b3-08$ .

### ■ b3-55: Current Increment Time

| No. (Hex.)                | Name                   | Description   | Default (Range)         |
|---------------------------|------------------------|---|-------------------------|
| b3-55<br>(3124)<br>Expert | Current Increment Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time that the drive will increase the current from zero current to the setting value of $b3-06$ [Speed Estimation Current Level 1]. | 10 ms<br>(10 - 2000 ms) |

Gradually increase the setting value when a large quantity of current flows after speed search starts. If you set this value too high, speed search will not operate correctly.

### ■ b3-56: InverseRotationSearch WaitTime

| No. (Hex.)   | Name                           | Description  | Default (Range)                   |
|--------------|--------------------------------|--|-----------------------------------|
| b3-56 (3126) | InverseRotationSearch WaitTime | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the wait time until the drive starts inverse rotation search after it completes forward search when you do inverse rotation search during Current Detection Speed Search. | Determined by o2-04 (0.1 - 5.0 s) |

### ■ b3-61: Initial Pole Detection Gain

| No. (Hex.)          | Name                                 | Description   | Default (Range)     |
|---------------------|--------------------------------------|---|---------------------|
| b3-61 (1B96) Expert | Initial Pole Detection Response Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the responsiveness for initial motor magnetic pole calculation when $A1-02 = 6$ [Control Method Selection = AOLV/PM]. Set $b3-61 > 0.0$ for an ordinary IPM motor. | 5.0 (-20.0 - +20.0) |

Used when  $n8-35 = 1$  [Initial Pole Detection Method = High Frequency Injection]. Sets the responsiveness for initial motor magnetic pole calculation. Set this parameter to a positive value for an ordinary motor. When you use High Frequency injection Tuning, it will automatically set this parameter.

## ◆ b4: Timer Function

The drive uses timers to delay activating and deactivating MFDO terminals.

Timers prevent sensors and switches from making chattering noise.

There are two types of timers:

- Timers that set a delay for timer inputs and timer outputs. These timers delay activating and deactivating of the MFDis and MFDOs. To enable this function, set  $H1-xx = 18$  [MFDI Function Selection = Timer Function], and set  $H2-01$  to  $H2-03 = 12$  [MFDO Function Selection = Timer Output].
- Timers that set a delay to activate and deactivate MFDO terminals. These timers delay activating and deactivating MFDO terminals. To enable this function, set delay times in parameters  $b4-03$  to  $b4-08$ .

### ■ Timer Function Operation

- Timers that Set a Delay for Timer Inputs and Timer Outputs  
Triggers timer output if the timer input is active for longer than the time set in  $b4-01$  [Timer Function ON-Delay Time]. Triggers timer output late for the time set in  $b4-02$  [Timer Function OFF-Delay Time]. Figure 12.26 shows an example of how the timer function works.

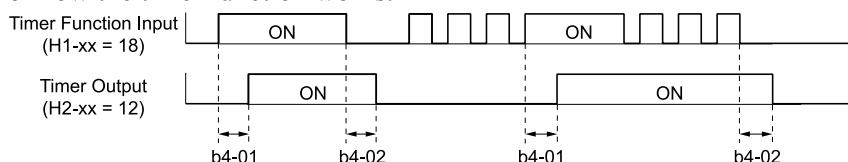


Figure 12.26 Example of Timer Function Operation

- Setting On/Off-delay Time for MFDO  
Figure 12.27 uses H2-01 terminals to show an example of how the timer function works. Use  $b4-03$  [Terminal M1-M2 ON-Delay Time] and  $b4-04$  [Terminal M1-M2 OFF-Delay Time] to set this function.

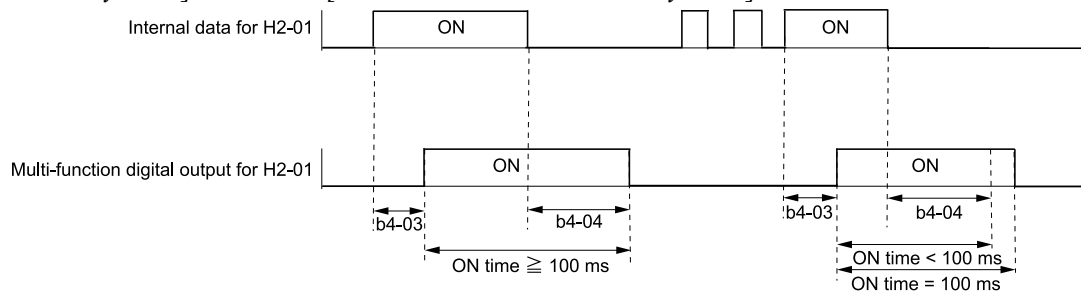


Figure 12.27 Example of How the Timer Function Works with H2-01 Terminals

#### Note:

When the terminal is triggered, it continues for a minimum of 100 ms. The on/off-delay time of MFDO terminal does not have an effect.

### ■ b4-01: Timer Function ON-Delay Time

| No. (Hex.)      | Name                         | Description  | Default (Range)           |
|-----------------|------------------------------|--|---------------------------|
| b4-01<br>(01A3) | Timer Function ON-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the ON-delay time for the timer input. | 0.0 s<br>(0.0 - 3000.0 s) |

### ■ b4-02: Timer Function OFF-Delay Time

| No. (Hex.)      | Name                          | Description   | Default (Range)           |
|-----------------|-------------------------------|---|---------------------------|
| b4-02<br>(01A4) | Timer Function OFF-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the OFF-delay time for the timer input. | 0.0 s<br>(0.0 - 3000.0 s) |

### ■ b4-03: Terminal M1-M2 ON-Delay Time

| No. (Hex.)                | Name                         | Description  | Default (Range)        |
|---------------------------|------------------------------|--|------------------------|
| b4-03<br>(0B30)<br>Expert | Terminal M1-M2 ON-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the delay time to activate the contact after the function set in <i>H2-01</i> activates. | 0 ms<br>(0 - 65000 ms) |

### ■ b4-04: Terminal M1-M2 OFF-Delay Time

| No. (Hex.)                | Name                          | Description  | Default (Range)        |
|---------------------------|-------------------------------|--|------------------------|
| b4-04<br>(0B31)<br>Expert | Terminal M1-M2 OFF-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the delay time to deactivate the contact after the function set in <i>H2-01</i> deactivates. | 0 ms<br>(0 - 65000 ms) |

### ■ b4-05: Terminal M3-M4 ON-Delay Time

| No. (Hex.)                | Name                         | Description  | Default (Range)        |
|---------------------------|------------------------------|--|------------------------|
| b4-05<br>(0B32)<br>Expert | Terminal M3-M4 ON-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the delay time to activate the contact after the function set in <i>H2-02</i> activates. | 0 ms<br>(0 - 65000 ms) |

### ■ b4-06: Terminal M3-M4 OFF-Delay Time

| No. (Hex.)                | Name                          | Description  | Default (Range)        |
|---------------------------|-------------------------------|--|------------------------|
| b4-06<br>(0B33)<br>Expert | Terminal M3-M4 OFF-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the delay time to deactivate the contact after the function set in <i>H2-02</i> deactivates. | 0 ms<br>(0 - 65000 ms) |

### ■ b4-07: Terminal P2 ON-Delay Time

| No. (Hex.)                | Name                      | Description  | Default (Range)        |
|---------------------------|---------------------------|--|------------------------|
| b4-07<br>(0B34)<br>Expert | Terminal P2 ON-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the delay time until the contact is turned ON after the function set with <i>H2-03</i> turns ON. | 0 ms<br>(0 - 65000 ms) |

### ■ b4-08: Terminal P2 OFF-Delay Time

| No. (Hex.)                | Name                       | Description  | Default (Range)        |
|---------------------------|----------------------------|--|------------------------|
| b4-08<br>(0B35)<br>Expert | Terminal P2 OFF-Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the delay time to deactivate the contact after the function set in <i>H2-03</i> deactivates. | 0 ms<br>(0 - 65000 ms) |

## ◆ b5: PID control

The drive has a PID control function. You can control drive output to adjust the proportional gain, integral time, and derivative time that has an effect on the bias between the target value and the feedback value to match the

target value to the detected value. Use this function to adjust the drive output to accurately match the flow, pressure, and temperature in the application match the target value.

Use a combination of these controls to increase the performance:

- **P control**  
P control has a proportional effect on the deviation. It outputs the product (the controlled output) proportional to the deviation. You cannot use only the offset from P control to get to zero deviation.
- **I control**  
I control is the integral of the deviation. It uses an integral value of the deviation to output the product (the controlled output). I control helps align the feedback value and the target value. If you use only a proportional effect (P control), it will cause an offset. Use a proportional effect with integral control, and the offset will disappear over time.
- **D control**  
D control is the derivative of the deviation. D control has an effect on drive output when there are sudden, large changes in the deviation or feedback value. It quickly returns drive output to the value before the sudden change. It multiplies a time constant by a derivative value of the deviation (slope of the deviation), and adds that result to PID input to calculate the deviation of the signal, then it corrects the deviation.

**Note:**

D control has causes less stable operation because the noise changes the deviation signal. Use D control only when necessary.

## ■ PID Control Operation

Figure 12.28 shows PID control operation. The modified output (output frequency) changes when the drive uses PID control to keep the deviation (the difference between the target value and the feedback value) constant.

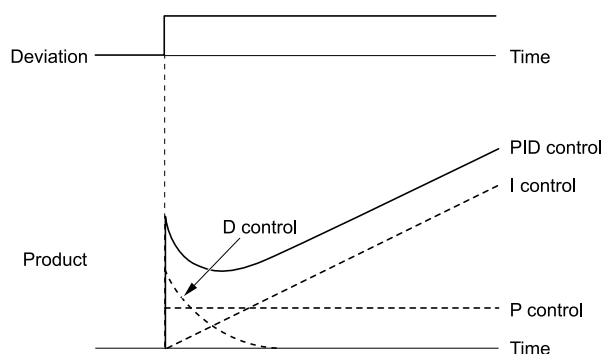


Figure 12.28 PID Control Operation

## ■ PID Control Applications

Table 12.29 shows applications for PID control.

Table 12.29 PID Control Applications

| Application         | Control Content   | Sensors Used              |
|---------------------|---|---------------------------|
| Speed Control       | <ul style="list-style-type: none"> <li>• The drive uses a feedback signal for the machine speed, and adjusts that speed to align with the target value.</li> <li>• The drive uses speed data from other machinery as the target value to do synchronous control. The drive then adds that target value to the feedback from the machine it is operating to align its speed with the other machinery.</li> </ul> | Tacho generator           |
| Pressure control    | The drive uses feedback from the actual pressure to hold constant pressure.   | Pressure sensor           |
| Flow control        | The drive uses feedback from the actual flow to hold constant flow.   | Flow rate sensor          |
| Temperature control | The drive uses feedback from the actual temperature to control a fan and hold constant temperature.   | Thermocoupler, thermistor |

## ■ Input Methods for the PID Setpoint

Use *b5-01 [PID Mode Setting]* to select how the PID setpoint is input to the drive.

When *b5-01 = 1 or 2 [Standard or Standard (D on feedback)]*, either the frequency reference set in *b1-01 [Frequency Reference Selection 1]* or *b1-15 [Frequency Reference Selection 2]* will be the PID setpoint, or the one of the inputs in Table 12.30 will be the PID setpoint.

When  $b5-01 = 3$  or  $4$  [ $Fref + PID Trim$  or  $Fref + PID Trim (D on feedback)$ ], one of the inputs in [Table 12.30](#) will be the PID setpoint.

**Table 12.30 Input Methods for the PID Setpoint**

| Input Methods for the PID Setpoint | Setting Value   |
|------------------------------------|---|
| MFAI terminal A1                   | Set $H3-02 = C$ [ <i>Terminal A1 Function Selection = PID Setpoint</i> ].   |
| MFAI terminal A2                   | Set $H3-10$ [ <i>Terminal A2 Function Selection</i> ] = $C$ .   |
| MEMOBUS/Modbus register 0006H      | Sets MEMOBUS/Modbus register 000FH (Control Selection Setting) bit 1 to 1 (PID setpoint input). Enters the PID setpoint to MEMOBUS/Modbus register 0006H (PID Target, 0.01% units, signed). |
| Pulse train input terminal RP      | Set $H6-01 = 2$ [ <i>Terminal RP Pulse Train Function = PID Setpoint Value</i> ].   |
| b5-19 [PID Setpoint Value]         | Set $b5-18 = 1$ [ <i>b5-19 PID Setpoint Selection = Enabled</i> ]. Enters the PID setpoint to b5-19.  |

**Note:**

If you set two inputs for the PID setpoint, it will trigger operation error  $oPE07$  [*Analog Input Selection Error*].

■ **Entering the PID Feedback Value**

You can use two methods to input the PID feedback value to the drive. One method uses a single feedback signal for usual PID control. The other method uses two signals. The difference between those signals sets the deviation.

• **Use a single feedback signal.**

Use [Table 12.31](#) to select how the feedback signal is input to the drive for PID control.

**Table 12.31 PID Feedback Input Method**

| PID Feedback Input Method     | Setting Value                                  |
|-------------------------------|--|
| MFAI terminal A1              | Set $H3-02 = B$ [ <i>PID Feedback</i> ].       |
| MFAI terminal A2              | Set $H3-10 = B$ .                              |
| Pulse train input terminal RP | Set $H6-01 = 1$ [ <i>PID Feedback Value</i> ]. |

• **Use two signals, and use the difference between those signals as the feedback signal.**

The drive uses two feedback signals, and the difference between those signals becomes the deviation.

Use [Table 12.32](#) to select how the second feedback value is input to the drive. The drive calculates the deviation of the second feedback value. Set  $H3-02$  or  $H3-10 = 16$  [*Terminal A1 or A2 Function Selection = Differential PID Feedback*] to enable the second feedback signal used to calculate the deviation.

**Table 12.32 PID Differential Feedback Input Method**

| PID Differential Feedback Input Method | Setting Value  |
|--|--|
| MFAI terminal A1                       | Set $H3-02 = 16$ [ <i>Differential PID Feedback</i> ]. |
| MFAI terminal A2                       | Set $H3-10 = 16$ .                                     |

**Note:**

If you set  $H3-02$  and  $H3-10 = 16$ , it will trigger  $oPE07$  [*Analog Input Selection Error*].



## PID Control Block Diagram

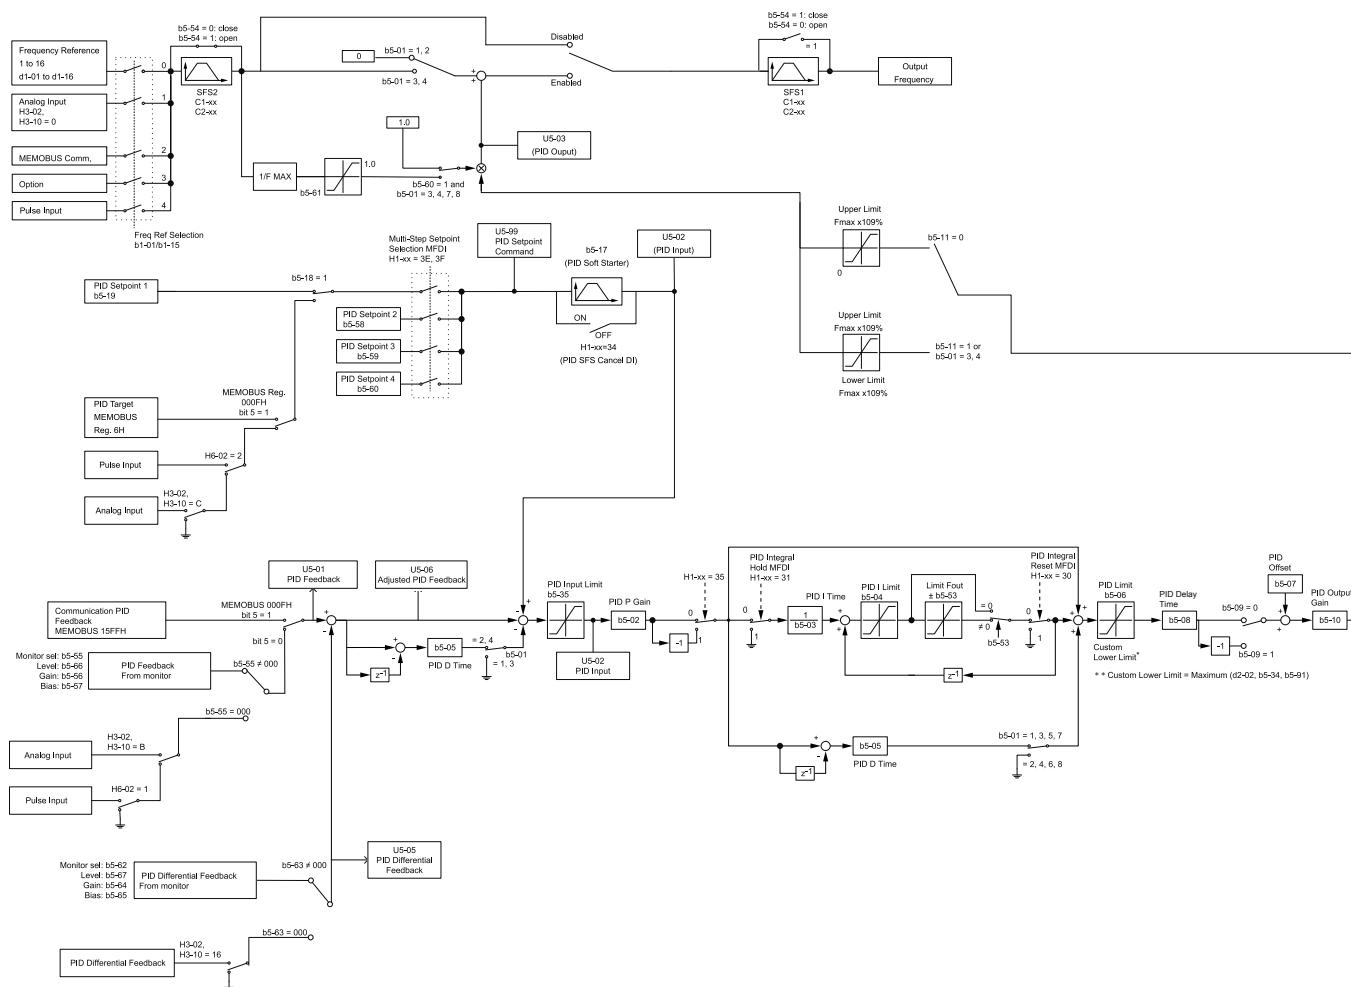


Figure 12.29 PID Control Block Diagram

## PID Feedback Loss Detection

The PID feedback loss detection function detects broken sensors and defective wiring between the drive and sensors.

Use the PID feedback loss detection function when you use PID control. If the feedback signal is too low, the motor can suddenly accelerate to the maximum output frequency. This function prevents such risks to the load.

The drive uses two methods to detect feedback loss:

- *PID Feedback Loss [FbL]*

Set these parameters for the PID feedback loss detection function.

The drive detects feedback loss when the feedback value is less than the value in *b5-13* for longer than the time in *b5-14*.

- *b5-12 [Feedback Loss Detection Select]*
- *b5-13 [PID Feedback Loss Detection Lvl]*
- *b5-14 [PID Feedback Loss Detection Time]*

- *Excessive PID Feedback [FbH]*

Set these parameters to set how the drive detects a feedback level that is too high.

The drive detects too much PID feedback when the feedback value is more than the value in *b5-36* for longer than the time in *b5-37*.

- *b5-12 [Feedback Loss Detection Select]*
- *b5-36 [PID High Feedback Detection Lvl]*
- *b5-37 [PID High Feedback Detection Time]*

Figure 12.30 shows the operation principle when the feedback value is too low, and the drive detects feedback loss. The operation is the same when the drive detects too much feedback.

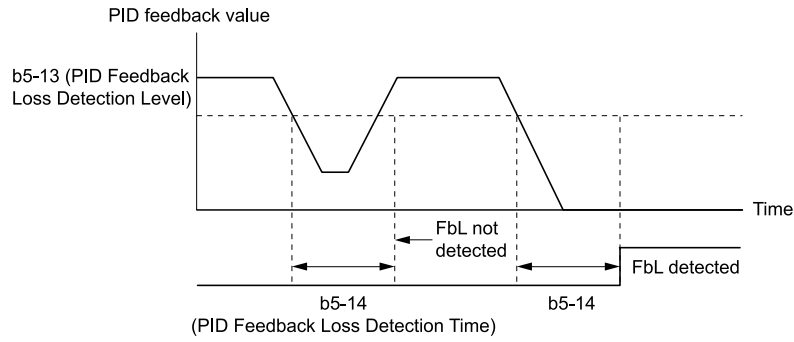


Figure 12.30 Time Chart for PID Feedback Loss Detection Time

■ PID Sleep

PID sleep stops drive operation when the PID output or the frequency reference is less than *b5-15 [PID Sleep Function Start Level]*. This function shuts off drive output after the motor decelerates to the set frequency.

The drive will automatically restart the motor when the PID output or the frequency reference is more than the *b5-15* value for the time set in *b5-16 [PID Sleep Delay Time]*.

Figure 12.31 shows the PID Sleep function.

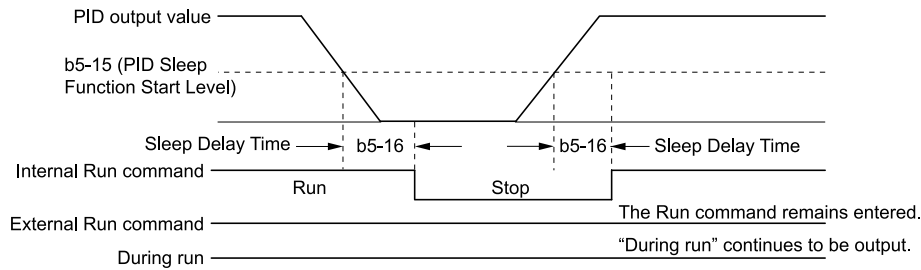


Figure 12.31 PID Sleep Time Chart

**Note:**

- The PID Sleep function is enabled when PID control is disabled.
- When the PID Sleep function is triggered, the drive will stop the motor as specified by *b1-03 [Stopping Method Selection]*.

■ Fine-Tuning PID

Fine-tune the following parameter settings to have PID control eliminate problems with overshoot and oscillation.

- *b5-02 [Proportional Gain (P)]*
- *b5-03 [Integral Time (I)]*
- *b5-05 [Derivative Time (D)]*
- *b5-08 [PID Primary Delay Time Constant]*

| Purpose                           | Procedure   | Results |
|-----------------------------------|---|---------|
| Prevent overshoot.                | <ul style="list-style-type: none"> <li>Set <i>b5-05</i> [<i>Derivative Time (D)</i>] to a smaller value.</li> <li>Set <i>b5-03</i> [<i>Integral Time (I)</i>] to a larger value.</li> </ul>   |         |
| Quickly stabilize control.        | <ul style="list-style-type: none"> <li>Set <i>b5-05</i> [<i>Derivative Time (D)</i>] to a larger value.</li> <li>Set <i>b5-03</i> [<i>Integral Time (I)</i>] to a smaller value.</li> </ul>   |         |
| Prevent long-cycle oscillations.  | Set <i>b5-03</i> [ <i>Integral Time (I)</i> ] to a larger value.  |         |
| Prevent short-cycle oscillations. | <ul style="list-style-type: none"> <li>Set <i>b5-05</i> [<i>Derivative Time (D)</i>] to a smaller value.</li> <li>If you set <i>b5-05</i> = 0.00 [<i>Derivative Time (D)</i> = disabling <i>D</i> control] and it does not stop oscillation, then set <i>b5-02</i> [<i>Proportional Gain (P)</i>] to a smaller value or set <i>b5-08</i> [<i>PID Primary Delay Time Constant</i>] to a larger value.</li> </ul> |         |

## ■ EZ Sleep/Wake-up Functionality

Set *b5-89* = 1 [*Sleep Method Selection* = *EZ Sleep/Wake-up*] to enable the EZ Sleep/Wake-up function.

### Note:

- When *b5-89* = 0 [*Sleep Mode Selection* = *Standard*], the EZ Sleep function and related parameters are disabled. Parameter *b5-91* [*EZ Minimum Speed*] is not included in this rule.
- Set *b5-89* = 1 to disable *b5-15* [*PID Sleep Function Start Level*].

| Configuration Parameter                  | Description   |
|--|---|
| <i>b5-90</i> [ <i>EZ Sleep Unit</i> ]    | Sets the unit of measure for <i>b5-92</i> [ <i>EZ Sleep Level</i> ]. When <i>b5-90</i> = 0 [ <i>0.1Hz units</i> ], the setting range of <i>b5-91</i> [ <i>EZ Minimum Speed</i> ] is 0.0 to 590.0 Hz. When <i>b5-90</i> = 1 [ <i>rev/min</i> ], the setting range is 0 to 35400 min <sup>-1</sup> (r/min).<br><b>Note:</b><br>When you change <i>b5-90</i> , the value of <i>b5-92</i> is not automatically updated. |
| <i>b5-91</i> [ <i>EZ Minimum Speed</i> ] | This parameter sets the lower limit for PID output. The drive uses the largest value of <i>b5-91</i> , <i>b5-34</i> [ <i>PID Output Lower Limit</i> ], and <i>d2-02</i> [ <i>Frequency Reference Lower Limit</i> ] to internally set the lower limit of PID output. The <i>b5-89</i> setting does not have an effect.   |
| <i>b5-92</i> [ <i>EZ Sleep Level</i> ]   | When the output frequency or motor speed is less than the value of <i>b5-92</i> for longer than the value of <i>b5-93</i> [ <i>EZ Sleep Time</i> ], the drive does to sleep.  |

| Configuration Parameter                        | Description  |
|--|--|
| $b5-95 = 0$ [EZ Wake-up Mode = Absolute]       | When the PID feedback is less than the value of $b5-94$ [EZ Wake-up Level] for longer than the time set in $b5-96$ [EZ Sleep Wake-up Time], the drive restarts operation from sleep. |
| $b5-95 = 1$ [EZ Wake-up Mode = Setpoint Delta] | When the PID feedback is less than the value set as the PID setpoint value minus $b5-94$ for the time set in $b5-96$ , the drive restarts operation from sleep.                      |

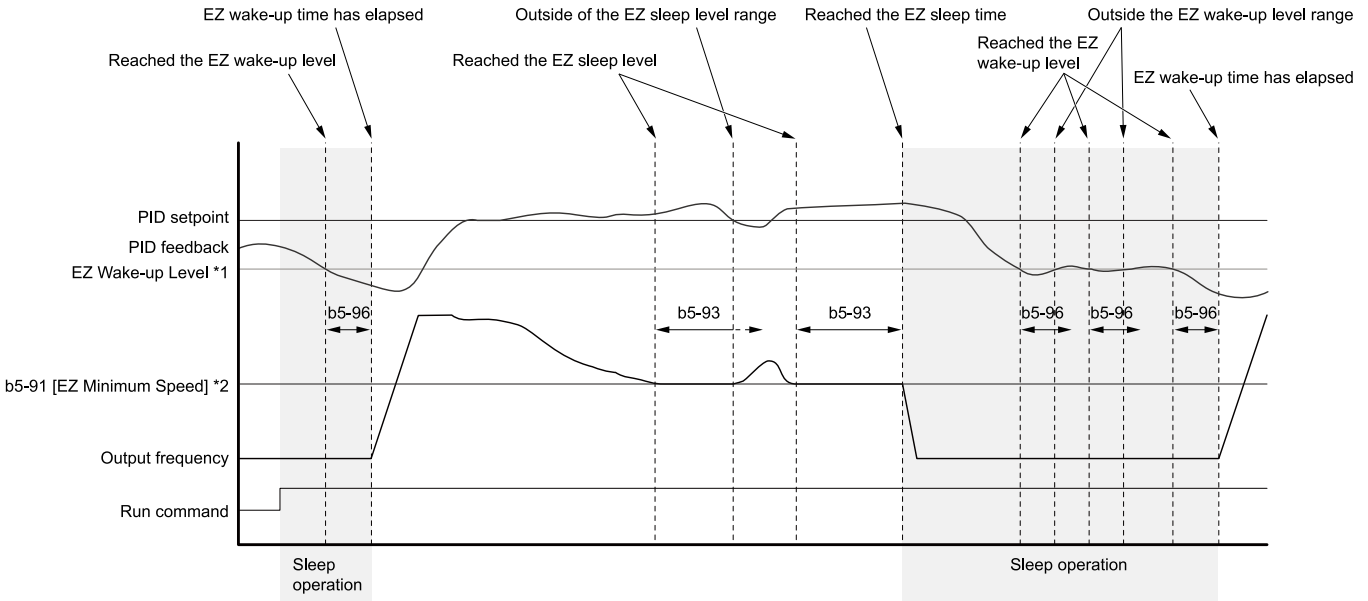


Figure 12.32 EZ Sleep/Wake-up Operation: PID Output is Normal and  $b5-92 = 0.0$  Hz

- \*1 The values of  $b5-94$  and  $b5-95$  set operation.
- \*2 In the example,  $b5-92$  is at the default setting of 0.0 Hz.  $b5-91$  is the EZ sleep level.

### ■ b5-01: PID Mode Setting

| No. (Hex.)   | Name             | Description  | Default (Range) |
|--------------|------------------|--|-----------------|
| b5-01 (01A5) | PID Mode Setting | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the type of PID control. | 0 (0 - 8)       |

#### 0 : PID control disabled

#### 1 : Standard

Enables PID control. The drive performs D control on the difference between the feedback value and the PID setpoint output via  $U5-02$  [PID Input].

#### 2 : Standard (D on feedback)

Enables PID control. The drive performs D control on the feedback output via  $U5-06$  [PID Fdbk-Diff PID Fdbk].

#### 3 : Fref + PID Trim

Enables PID control. The drive adds the frequency reference to the PID output. The drive performs D control on the difference between the feedback value and the PID setpoint output via  $U5-02$  [PID Input].

#### 4 : Fref + PID Trim (D on feedback)

Enables PID control. The drive adds the frequency reference to the PID output. The drive performs D control on the feedback output via  $U5-06$  [PID Fdbk-Diff PID Fdbk].

#### 5 : Same as 7series & prior, b5-01=1

#### 6 : Same as 7series & prior, b5-01=2

#### 7 : Same as 7series & prior, b5-01=3

#### 8 : Same as 7series & prior, b5-01=4

**Note:**

Use settings 5 to 8 when the drive is a replacement for a previous generation drive.

### ■ b5-02: Proportional Gain (P)

| No. (Hex.)             | Name                  | Description   | Default (Range)        |
|------------------------|-----------------------|---|------------------------|
| b5-02<br>(01A6)<br>RUN | Proportional Gain (P) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the proportional gain (P) that is applied to PID input. | 1.00<br>(0.00 - 25.00) |

Larger values decrease errors, but can cause oscillations. Smaller values let too much offset between the setpoint and feedback.

Set  $b5-02 = 0.00$  to disable P control.

### ■ b5-03: Integral Time (I)

| No. (Hex.)             | Name              | Description   | Default (Range)          |
|------------------------|-------------------|---|--------------------------|
| b5-03<br>(01A7)<br>RUN | Integral Time (I) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the integral time (I) that is applied to PID input. | 1.0 s<br>(0.0 - 360.0 s) |

Set a short integral time in  $b5-03$  to remove the offset more quickly. If the integral time is too short, overshoot or oscillation can occur.

Set  $b5-03 = 0.00$  to disable I control.

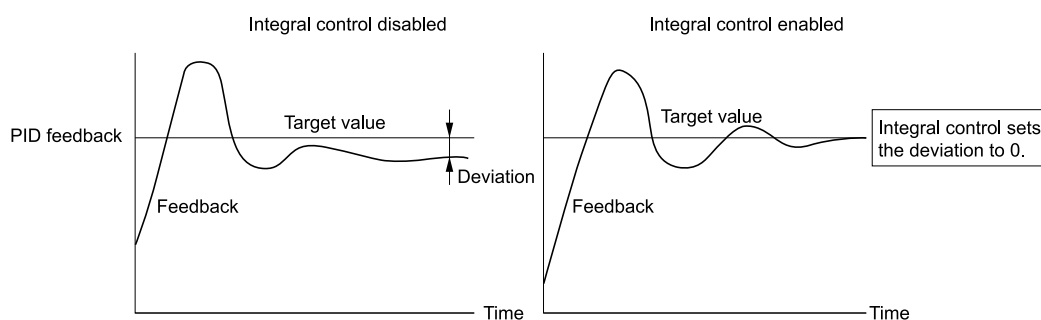


Figure 12.33 Integral Time and Deviation

### ■ b5-04: Integral Limit

| No. (Hex.)             | Name           | Description   | Default (Range)          |
|------------------------|----------------|---|--------------------------|
| b5-04<br>(01A8)<br>RUN | Integral Limit | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the upper limit for integral control (I) as a percentage of the Maximum Output Frequency. | 100.0%<br>(0.0 - 100.0%) |

Applications with loads that quickly change will cause the output of the PID function to oscillate. Set this parameter to a low value to prevent oscillation, mechanical loss, and motor speed loss.

### ■ b5-05: Derivative Time (D)

| No. (Hex.)             | Name                | Description  | Default (Range)            |
|------------------------|---------------------|--|----------------------------|
| b5-05<br>(01A9)<br>RUN | Derivative Time (D) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the derivative time (D) for PID control. This parameter adjusts system responsiveness. | 0.00 s<br>(0.00 - 10.00 s) |

When you increase the time setting, it will increase controller responsiveness, but it can also cause vibration. When you decrease the time setting, it will suppress overshoot and decrease controller responsiveness.

Set  $b5-05 = 0.00$  to disable D control.

### ■ b5-06: PID Output Limit

| No. (Hex.)             | Name             | Description  | Default (Range)          |
|------------------------|------------------|--|--------------------------|
| b5-06<br>(01AA)<br>RUN | PID Output Limit | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the maximum possible output from the PID controller as a percentage of the Maximum Output Frequency. | 100.0%<br>(0.0 - 100.0%) |

### ■ b5-07: PID Offset Adjustment

| No. (Hex.)             | Name                  | Description  | Default (Range)            |
|------------------------|-----------------------|--|----------------------------|
| b5-07<br>(01AB)<br>RUN | PID Offset Adjustment | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the offset for the PID control output as a percentage of the Maximum Output Frequency. | 0.0%<br>(-100.0 - +100.0%) |

### ■ b5-08: PID Primary Delay Time Constant

| No. (Hex.)                       | Name                            | Description   | Default (Range)            |
|----------------------------------|---------------------------------|---|----------------------------|
| b5-08<br>(01AC)<br>RUN<br>Expert | PID Primary Delay Time Constant | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the primary delay time constant for the PID control output. Usually it is not necessary to change this setting. | 0.00 s<br>(0.00 - 10.00 s) |

Prevents resonance if there is a large quantity of mechanical friction or if rigidity is unsatisfactory. Set the value larger than the resonant frequency cycle. A value that is too large will decrease drive responsiveness.

### ■ b5-09: PID Output Level Selection

| No. (Hex.)      | Name                       | Description   | Default (Range) |
|-----------------|----------------------------|---|-----------------|
| b5-09<br>(01AD) | PID Output Level Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the polarity of the PID output. | 0<br>(0, 1)     |

Use this parameter in applications that decrease the drive output frequency when you increase the PID setpoint.

#### 0 : Normal Output (Direct Acting)

A positive PID input increases the PID output (direct acting).

#### 1 : Reverse Output (Reverse Acting)

A positive PID input decreases the PID output (reverse acting).

### ■ b5-10: PID Output Gain Setting

| No. (Hex.)             | Name                    | Description  | Default (Range)        |
|------------------------|-------------------------|--|------------------------|
| b5-10<br>(01AE)<br>RUN | PID Output Gain Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the amount of gain to apply to the PID output. | 1.00<br>(0.00 - 25.00) |

Applies a gain to the PID output and can help when  $b5-01 = 3$  or  $4$  [ $PID\ Mode\ Setting = Fref + PID\ Trim, Fref + PID\ Trim (D\ on\ feedback)$ ].

### ■ b5-11: PID Output Reverse Selection

| No. (Hex.)      | Name                         | Description  | Default (Range) |
|-----------------|------------------------------|--|-----------------|
| b5-11<br>(01AF) | PID Output Reverse Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that enables and disables reverse motor rotation for negative PID control output. | 0<br>(0, 1)     |

This parameter is disabled when  $b5-01 = 3, 4$  [ $PID\ Mode\ Setting = Fref + PID\ Trim, Fref + PID\ Trim (D\ on\ feedback)$ ]. There is no limit for PID output (PID output can be positive or negative). Operates the same as setting "1: Enabled: Negative lower limit".

#### 0 : Lower Limit is Zero

When PID output is negative, PID output is limited to 0 and drive output is shut off.

#### 1 : Negative Output Accepted

When the PID output is negative, the motor will rotate in reverse. When  $b1-04 = 1$  [ $Reverse\ Operation\ Selection = Reverse\ Disabled$ ], the lower limit is 0.

## ■ b5-12: Feedback Loss Detection Select

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range) |
|-----------------|--------------------------------|---|--------------------|
| b5-12<br>(01B0) | Feedback Loss Detection Select | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the drive response to PID feedback loss/excess. Sets drive operation after the drive detects PID feedback loss/excess. | 0<br>(0 - 5)       |

### 0 : Digital Out Only, Always Detect

The MFDO terminal set for *PID Feedback Low* or *PID Feedback High* [H2-01 to H2-03 = 3E, 3F] activates. When the drive detects feedback loss/excess, the keypad will not show an alarm and the drive will continue operation.

When the feedback signal is less than the level set in *b5-13* [*PID Feedback Loss Detection Lvl*] for longer than the time set in *b5-14* [*PID Feedback Loss Detection Time*], the MFDO terminal set for *PID Feedback Low* activates.

When the feedback signal is more than the level set in *b5-36* [*PID High Feedback Detection Lvl*] for longer than the time set in *b5-37* [*PID High Feedback Detection Time*] the MFDO terminal set for *PID Feedback High* activates.

When the feedback value is not in the detection range, the drive resets the MFDO.

### 1 : Alarm + Digital Out, Always Det

The drive detects *FbL* [*PID Feedback Loss*] and *FbH* [*Excessive PID Feedback*]. The MFDO terminal set for *PID Feedback Low* or *PID Feedback High* [H2-01 to H2-03 = 3E, 3F] activates. The output terminal set for *Alarm* [H2-01 to H2-03 = 10] activates and the drive continues operation.

When the feedback signal is less than the level set in *b5-13* for longer than the time set in *b5-14*, the MFDO terminal set for *PID Feedback Low* activates.

When the feedback signal is more than the level set in *b5-36* for longer than the time set in *b5-37*, the MFDO terminal set for *PID Feedback High* activates.

When the feedback value is not in the detection range, the drive resets the MFDO.

### 2 : Fault + Digital Out, Always Det

The drive detects *FbL* and *FbH*. MFDO terminal MA-MC turns ON, MB-MC turns OFF, and the motor coasts to stop.

When the feedback signal is less than the level set in *b5-13* for the time set in *b5-14*, the drive detects *FbL*.

When the feedback signal is more than the level set in *b5-36* for the time set in *b5-37*, the drive detects *FbH*.

### 3 : Digital Out Only, @ PID Enable

The MFDO terminal set for *PID Feedback Low* or *PID Feedback High* activates. The keypad will not show an alarm. The drive continues operation.

When the MFDI terminal set to *PID Disable* [H1-xx = 19] activates, the drive disables fault detection.

### 4 : Alarm + Digital Out, @PID Enable

The drive detects *FbL* and *FbH*. The MFDO terminal set for *PID Feedback Low* or *PID Feedback High* activates. The output terminal set for *Alarm* [H2-01 to H2-03 = 10] activates and the drive continues operation.

When the MFDI terminal set to *PID Disable* [H1-xx = 19] activates, the drive disables fault detection.

### 5 : Fault + Digital Out, @PID Enable

The drive detects *FbL* and *FbH*. MFDO terminal MA-MC turns ON, MB-MC turns OFF, and the drive coasts to stop.

When the MFDI terminal set to *PID Disable* [H1-xx = 19] activates, the drive disables fault detection.

## ■ b5-13: PID Feedback Loss Detection Lvl

| No.<br>(Hex.)   | Name                            | Description   | Default<br>(Range) |
|-----------------|---------------------------------|---|--------------------|
| b5-13<br>(01B1) | PID Feedback Loss Detection Lvl | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the level that triggers <i>PID Feedback Loss</i> [ <i>FbL</i> ] detection as a percentage of the Maximum Output Frequency. | 0%<br>(0 - 100%)   |

The drive detects *PID Feedback Loss* [*FbL*] when the feedback signal decreases to less than the level set in *b5-13* for longer than the time set in *b5-14* [*PID Feedback Loss Detection Time*].

### ■ b5-14: PID Feedback Loss Detection Time

| No. (Hex.)      | Name                             | Description   | Default (Range)         |
|-----------------|----------------------------------|---|-------------------------|
| b5-14<br>(01B2) | PID Feedback Loss Detection Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time that PID Feedback must be less than <i>b5-13 [PID Feedback Loss Detection Lvl]</i> to detect <i>PID Feedback Loss [FbL]</i> . | 1.0 s<br>(0.0 - 25.5 s) |

### ■ b5-15: PID Sleep Function Start Level

| No. (Hex.)      | Name                           | Description   | Default (Range)                      |
|-----------------|--------------------------------|---|--------------------------------------|
| b5-15<br>(01B3) | PID Sleep Function Start Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the output level that triggers the PID Sleep function. | Determined by A1-02<br>(0.0 - 590.0) |

The drive goes into Sleep mode when the PID output or frequency reference is less than *b5-15* for longer than the time set to *b5-16 [PID Sleep Delay Time]*. The drive continues operation when the PID output or frequency reference is more than *b5-15* for longer than the time set to *b5-16*.

### ■ b5-16: PID Sleep Delay Time

| No. (Hex.)      | Name                 | Description  | Default (Range)         |
|-----------------|----------------------|--|-------------------------|
| b5-16<br>(01B4) | PID Sleep Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets a delay time to start or stop the PID Sleep function. | 0.0 s<br>(0.0 - 25.5 s) |

### ■ b5-17: PID Accel/Decel Time

| No. (Hex.)             | Name                 | Description  | Default (Range)           |
|------------------------|----------------------|--|---------------------------|
| b5-17<br>(01B5)<br>RUN | PID Accel/Decel Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Raises or lowers the PID setpoint using the acceleration and deceleration times set to the drive. This is a soft-starter for the PID setpoint. | 0.0 s<br>(0.0 - 6000.0 s) |

The drive usually uses the acceleration and deceleration times set in *C1-xx [Accel and Decel Times]*, but when PID control is enabled, the drive applies *C1-xx* after PID output. If you frequently change the PID setpoint, the drive responsiveness decreases. When resonance with PID control causes hunting, overshoot, or undershoot, set *b5-17* for longer acceleration and deceleration times.

Decrease *C1-xx* until hunting stops, then use *b5-17* to check the acceleration and deceleration. To enable and disable the setting in *b5-17* through an MFDI terminal, set *PID Soft Starter Disable [H1-xx = 34]*.

### ■ b5-18: b5-19 PID Setpoint Selection

| No. (Hex.)      | Name                         | Description   | Default (Range) |
|-----------------|------------------------------|---|-----------------|
| b5-18<br>(01DC) | b5-19 PID Setpoint Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function that enables and disables <i>b5-19 [PID Setpoint Value]</i> . | 0<br>(0, 1)     |

#### 0 : Disabled

The drive does not use the value set in *b5-19* as the PID setpoint.

#### 1 : Enabled

The drive uses the value set in *b5-19* as the PID setpoint.

### ■ b5-19: PID Setpoint Value

| No. (Hex.)             | Name               | Description  | Default (Range)           |
|------------------------|--------------------|--|---------------------------|
| b5-19<br>(01DD)<br>RUN | PID Setpoint Value | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the PID setpoint when <i>b5-18 = 1 [b5-19 PID Setpoint Selection = Enabled]</i> . | 0.00%<br>(0.00 - 100.00%) |



## ■ b5-20: PID Unit Selection

| No. (Hex.)      | Name               | Description   | Default (Range) |
|-----------------|--------------------|---|-----------------|
| b5-20<br>(01E2) | PID Unit Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the number of digits to set and show the PID setpoint. | 1<br>(0 - 3)    |

Set the units for these parameters and monitors:

- b5-19 [PID Setpoint Value]
- b5-58 [PID Setpoint2]
- b5-59 [PID Setpoint3]
- b5-60 [PID Setpoint4]
- U5-01 [PID Feedback]
- U5-04 [PID Setpoint]
- U5-99 [PID Setpoint Command]

### 0 : 0.01Hz units

The drive uses 0.01 Hz units.

### 1 : 0.01% units

The drive uses 0.01% units. Set the value as a percentage of *E1-04 [Maximum Output Frequency]*.

### 2 : min<sup>-1</sup>

The drive uses 1 min<sup>-1</sup> unit. Set *E2-04, E4-04, or E5-04 [Motor Pole Count]*.

### 3 : User Units

The drive uses the units set in *b5-38 [PID User Unit Display Scaling]* and *b5-39 [PID User Unit Display Digits]* to show the PID setpoint in *U5-01, U5-04, U5-06 [PID Feedback, PID Setpoint, PID Fdbk-Diff PID Fdbk]*.

## ■ b5-34: PID Output Lower Limit Level

| No. (Hex.)             | Name                         | Description  | Default (Range)            |
|------------------------|------------------------------|--|----------------------------|
| b5-34<br>(019F)<br>RUN | PID Output Lower Limit Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the output lower limit for the PID control as a percentage of the Maximum Output Frequency. | 0.0%<br>(-100.0 - +100.0%) |

Use a lower limit to keep PID control output from dropping below a fixed level.

Set this parameter to 0.0% to disable this function.

## ■ b5-35: PID Input Limit Level

| No. (Hex.)             | Name                  | Description  | Default (Range)            |
|------------------------|-----------------------|--|----------------------------|
| b5-35<br>(01A0)<br>RUN | PID Input Limit Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the output upper limit for the PID control as a percentage of the Maximum Output Frequency. | 1000.0%<br>(0.0 - 1000.0%) |

A large input value for PID control makes a high output. The drive applies this limit to the negative and positive domains.

## ■ b5-36: PID High Feedback Detection Lvl

| No. (Hex.)      | Name                            | Description   | Default (Range)    |
|-----------------|---------------------------------|---|--------------------|
| b5-36<br>(01A1) | PID High Feedback Detection Lvl | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the level that triggers <i>Excessive PID Feedback [FbH]</i> as a percentage of the Maximum Output Frequency. | 100%<br>(0 - 100%) |

When the feedback signal increases to more than the level set in *b5-36* for the time set in *b5-37 [PID High Feedback Detection Time]*, the drive will detect *Excessive PID Feedback [FbH]*.

### ■ b5-37: PID High Feedback Detection Time

| No. (Hex.)      | Name                             | Description   | Default (Range)         |
|-----------------|----------------------------------|---|-------------------------|
| b5-37<br>(01A2) | PID High Feedback Detection Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time that the PID feedback signal must be more than the level set in <i>b5-36 [PID Feedback High Detection Lvl]</i> to cause <i>Excessive PID Feedback [FbH]</i> . | 1.0 s<br>(0.0 - 25.5 s) |

### ■ b5-38: PID User Unit Display Scaling

| No. (Hex.)      | Name                          | Description   | Default (Range)                    |
|-----------------|-------------------------------|---|------------------------------------|
| b5-38<br>(01FE) | PID User Unit Display Scaling | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the value that the drive sets or shows as the PID setpoint when at the maximum output frequency. | Determined by b5-20<br>(1 - 60000) |

The drive uses this parameter and *b5-39 [PID Setpoint Display Digits]* together.

When *b5-20 = 3 [PID Unit Selection = User Units]*, the drive applies user-set PID setpoint and display units to these parameters and monitors:

- b5-19 [PID Setpoint Value]
- b5-58 [PID Setpoint2]
- b5-59 [PID Setpoint3]
- b5-60 [PID Setpoint4]
- U5-01 [PID Feedback]
- U5-04 [PID Setpoint]
- U5-99 [PID Setpoint Command]

### ■ b5-39: PID User Unit Display Digits

| No. (Hex.)      | Name                         | Description   | Default (Range)                |
|-----------------|------------------------------|---|--------------------------------|
| b5-39<br>(01FF) | PID User Unit Display Digits | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the number of digits to set and show the PID setpoint. | Determined by b5-20<br>(0 - 3) |

The drive uses this parameter and *b5-38 [PID Setpoint User Display]* together.

When *b5-20 = 3 [PID Unit Selection = User Units]*, the drive applies user-set PID setpoint and display units to these parameters and monitors:

- b5-19 [PID Setpoint Value]
- b5-58 [PID Setpoint2]
- b5-59 [PID Setpoint3]
- b5-60 [PID Setpoint4]
- U5-01 [PID Feedback]
- U5-04 [PID Setpoint]
- U5-99 [PID Setpoint Command]

**0 : No Decimal Places (XXXXX)**

**1 : One Decimal Places (XXXX.X)**

**2 : Two Decimal Places (XXX.XX)**

**3 : Three Decimal Places (XX.XXX)**

### ■ b5-40: Frequency Reference Monitor @PID

| No. (Hex.)      | Name                             | Description  | Default (Range) |
|-----------------|----------------------------------|--|-----------------|
| b5-40<br>(017F) | Frequency Reference Monitor @PID | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the contents for monitor <i>U1-01 [Frequency Reference]</i> in PID control. | 0<br>(0, 1)     |

**0 : U1-01 Includes PID Output**

Monitor *U1-01* shows the frequency reference that was increased or decreased by the PID output.

**1 : U1-01 Excludes PID Output**

Monitor *U1-01* shows the actual frequency reference.

### ■ b5-47: PID Trim Mode Output Reverse Sel

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| b5-47 (017D) | PID Trim Mode Output Reverse Sel | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets reverse motor rotation when the PID control output is negative. | 1<br>(0, 1)     |

This parameter is enabled when  $b5-01 = 3$  or  $4$  [PID Mode Setting = Fref + PID Trim, Fref + PID Trim (D on feedback)].

#### 0 : Lower Limit is Zero

When PID output is negative, PID output is limited to 0 and drive output is shut off.

#### 1 : Negative Output Accepted

When the PID output is negative, the motor will rotate in reverse.

### ■ b5-53: PID Integrator Ramp Limit

| No. (Hex.)          | Name                      | Description  | Default (Range)           |
|---------------------|---------------------------|--|---------------------------|
| b5-53 (0B8F)<br>RUN | PID Integrator Ramp Limit | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the responsiveness of PID control when the PID feedback changes quickly. | 0.0 Hz<br>(0.0 - 10.0 Hz) |

#### Note:

- This parameter is disabled when set to 0.0 Hz.
- When  $b5-53 > 0.0$  Hz and the drive enables the integrator ramp limit, the PID integrator value limit is the range set by the output frequency  $\pm b5-53$ .
- When the PID feedback changes quickly, gradually decrease this parameter in 0.1 Hz increments to decrease the speed of the response of PID control.

### ■ b5-54: PID Softstarter Cancel Selection

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| b5-54 (0BB7) | PID Softstarter Cancel Selection | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets how the soft-starter responds to PID input/output. | 0<br>(0, 1)     |

Table 12.33 shows how the soft-starter responds to PID input/output.

Table 12.33 Soft Starter and PID Input/Output

| Selection      | PID Frequency Reference Input | PID Frequency Reference Output | Soft Starter Input             | Soft Starter Output           |
|----------------|-------------------------------|--------------------------------|--------------------------------|-------------------------------|
| Soft Starter 1 | Frequency Reference           | Soft Starter Input             | PID Frequency Reference Output | Output Frequency              |
| Soft Starter 2 | Soft Starter Output           | Output Frequency               | Frequency Reference            | PID Frequency Reference Input |

#### 0 : Soft Starter 1

The soft starter process occurs downstream from the PID function. The PID function input functions as the frequency reference, the PID function output functions as the soft starter input, and the soft starter output functions as the output frequency.

#### 1 : Soft Starter 2

The soft starter process occurs upstream from the PID function. The soft starter input functions as the frequency reference, the soft starter output functions as the PID function input, and the PID function output functions as the output frequency.

### ■ b5-55: PID Feedback Monitor Selection

| No. (Hex.)   | Name                           | Description   | Default (Range)    |
|--------------|--------------------------------|---|--------------------|
| b5-55 (0BE1) | PID Feedback Monitor Selection | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the monitor ( $Ux-xx$ ) used as the PID Feedback. Set the $x-xx$ part of the $Ux-xx$ [Monitor]. | 000<br>(000 - 999) |

#### Note:

- You cannot select parameter  $U5-xx$ .
- This parameter is disabled when set to 000.

■ **b5-56: PID Feedback Monitor Gain**

| No. (Hex.)   | Name                      | Description   | Default (Range)        |
|--------------|---------------------------|---|------------------------|
| b5-56 (0BE2) | PID Feedback Monitor Gain | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain for the monitor set in b5-55 [PID Feedback Monitor Selection]. | 1.00<br>(0.00 - 10.00) |

■ **b5-57: PID Feedback Monitor Bias**

| No. (Hex.)   | Name                      | Description   | Default (Range)           |
|--------------|---------------------------|---|---------------------------|
| b5-57 (11DD) | PID Feedback Monitor Bias | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the bias for the monitor specified in b5-55 [PID Feedback Monitor Selection]. | 0.00<br>(-10.00 - +10.00) |

■ **b5-58 to b5-60: PID Setpoints 2 to 4**

| No. (Hex.)                        | Name                 | Description  | Default (Range)           |
|-----------------------------------|----------------------|--|---------------------------|
| b5-58 to b5-60: (1182 - 1184) RUN | PID Setpoints 2 to 4 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the PID setpoint when H1-xx = 3E or 3F [MFDI Function Selection = PID Setpoint Selection 1/2]. This value is a percentage of the maximum output frequency. | 0.00%<br>(0.00 - 100.00%) |

Table 12.34 shows how the different MFDI H1-xx values (3E and 3F) have an effect on the PID setpoint value.

**Table 12.34 Switching of MFDI and PID Setpoint Value**

| H1-xx = 3E | H1-xx = 3F | PID Setpoint Value    |
|------------|------------|-----------------------|
| OFF        | OFF        | No switch             |
| ON         | OFF        | b5-58 [PID Setpoint2] |
| OFF        | ON         | b5-59 [PID Setpoint3] |
| ON         | ON         | b5-60 [PID Setpoint4] |

■ **b5-61: PID Trim Mode Lower Limit Sel**

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| b5-61 (119A) | PID Trim Mode Lower Limit Sel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function that adjusts the PID output in relation to the frequency reference. | 0<br>(0, 1)     |

**0 : Disabled**

Does not adjust the PID output with the frequency reference.

**1 : Enabled**

Adjusts the PID output in relation to the frequency reference. The setting value of b5-62 [PID Trim Mode Lower Limit Value] sets the lower limit of the post-adjustment value. The maximum output frequency sets the upper limit.

**Note:**

- Set b5-01 = 3, 4, 7, or 8 to enable this parameter.
- When b5-61 = 1, you can use this formula to adjust PID output proportional to the frequency reference:

$$U5-03 = U5-03 \times \left| \frac{Fref}{Fmax} \right|^{*1}$$

U5-03 [PID Output], Fref [Frequency Reference], and Fmax [Maximum Output Frequency]

\*1 Lower limit = b5-62, Upper limit = Maximum output frequency

■ **b5-62: PID Trim Mode Lower Limit Value**

| No. (Hex.)   | Name                            | Description  | Default (Range)           |
|--------------|---------------------------------|--|---------------------------|
| b5-62 (119B) | PID Trim Mode Lower Limit Value | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the PID Trim Mode Lower Limit Value as a percentage of the maximum output frequency. | 0.00%<br>(0.00 - 100.00%) |

**Note:**

Set b5-01 = 3, 4, 7, or 8 to enable this parameter.

### ■ b5-63: PID Differential FB Monitor Sel

| No.<br>(Hex.)   | Name                            | Description   | Default<br>(Range) |
|-----------------|---------------------------------|---|--------------------|
| b5-63<br>(119C) | PID Differential FB Monitor Sel | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Selects the monitor ( <i>Ux-xx</i> ) used as the PID Differential Feedback. Set the <i>x-xx</i> part of the <i>Ux-xx</i> [Monitor]. | 000<br>(000 - 999) |

**Note:**

- You cannot select *parameter U5-xx*.
- This parameter is disabled when set to 000.

### ■ b5-64: PID Differential FB Monitor Gain

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range)     |
|-----------------|----------------------------------|--|------------------------|
| b5-64<br>(119D) | PID Differential FB Monitor Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the gain for the monitor specified in <i>b5-63</i> [PID Differential FB Monitor Sel]. | 1.00<br>(0.00 - 10.00) |

### ■ b5-65: PID Differential FB Monitor Bias

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range)        |
|-----------------|----------------------------------|--|---------------------------|
| b5-65<br>(119F) | PID Differential FB Monitor Bias | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the bias for the monitor specified in <i>b5-63</i> [PID Differential FB Monitor Sel]. | 0.00<br>(-10.00 - +10.00) |

### ■ b5-66: PID Feedback Monitor Level

| No.<br>(Hex.)   | Name                       | Description   | Default<br>(Range) |
|-----------------|----------------------------|---|--------------------|
| b5-66<br>(11DE) | PID Feedback Monitor Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the signal level for the monitor specified in <i>b5-55</i> [PID Feedback Monitor Selection]. | 0<br>(0, 1)        |

0 : Absolute

1 : Bi-directional (+/-)

### ■ b5-67: PID Differential FB Monitor Lvl

| No.<br>(Hex.)   | Name                            | Description  | Default<br>(Range) |
|-----------------|---------------------------------|--|--------------------|
| b5-67<br>(11DF) | PID Differential FB Monitor Lvl | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the signal level for the monitor specified in <i>b5-63</i> [PID Differential FB Monitor Sel]. | 0<br>(0, 1)        |

0 : Absolute

1 : Bi-directional (+/-)

### ■ b5-89: Sleep Method Selection

| No.<br>(Hex.)          | Name                   | Description  | Default<br>(Range) |
|------------------------|------------------------|--|--------------------|
| b5-89<br>(0B89)<br>RUN | Sleep Method Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets sleep and wake up operation when using PID. | 0<br>(0, 1)        |

0 : Standard

1 : EZ Sleep/Wake-up

### ■ b5-90: EZ Sleep Unit

| No.<br>(Hex.)   | Name          | Description   | Default<br>(Range) |
|-----------------|---------------|---|--------------------|
| b5-90<br>(0B90) | EZ Sleep Unit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the measurement units for <i>b5-91</i> [EZ Sleep Minimum Speed] and <i>b5-92</i> [EZ Sleep Level]. | 0<br>(0, 1)        |

0 : 0.1Hz units

1 : rev/min

### ■ b5-91: EZ Sleep Minimum Speed

| No. (Hex.)             | Name                   | Description   | Default (Range)  |
|------------------------|------------------------|---|--|
| b5-91<br>(0B91)<br>RUN | EZ Sleep Minimum Speed | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the minimum speed for the EZ Sleep/Wakeup function. This parameter uses the largest value from <i>b5-91</i> , <i>b5-34</i> [PID Output Lower Limit Level], and <i>d2-02</i> [Frequency Reference Lower Limit]. | 0.0 Hz or 0 min <sup>-1</sup> (r/min)<br>(0.0 to 590.0 Hz or 0 to 35400 min <sup>-1</sup> (r/min)) |

**Note:**

The value of *b5-90* [EZ Sleep Unit] sets the units. When *b5-90* changes, this parameter does not automatically update. Set this parameter again after you change *b5-90* is changed.

### ■ b5-92: EZ Sleep Level

| No. (Hex.)             | Name           | Description   | Default (Range)  |
|------------------------|----------------|---|--|
| b5-92<br>(0B92)<br>RUN | EZ Sleep Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the value that the output frequency or motor speed must be less than for longer than <i>b5-93</i> [EZ Sleep Time] to enter Sleep Mode. | 0.0 Hz or 0 min <sup>-1</sup> (r/min)<br>(0.0 to 590.0 Hz or 0 to 35400 min <sup>-1</sup> (r/min)) |

**Note:**

When *b5-90* [EZ Sleep Unit] changes, this parameter does not automatically update. Set this parameter again after you change *b5-90*.

### ■ b5-93: EZ Sleep Time

| No. (Hex.)             | Name          | Description   | Default (Range)           |
|------------------------|---------------|---|---------------------------|
| b5-93<br>(0B93)<br>RUN | EZ Sleep Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time that the output frequency or motor speed must be less than <i>b5-92</i> [EZ Sleep Level] to enter Sleep Mode. | 5.0 s<br>(0.0 - 1000.0 s) |

### ■ b5-94: EZ Sleep Wake-up Level

| No. (Hex.)             | Name                   | Description  | Default (Range)           |
|------------------------|------------------------|--|---------------------------|
| b5-94<br>(0B94)<br>RUN | EZ Sleep Wake-up Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the level at which the drive resumes operation when exiting Sleep Mode. | 0.00%<br>(0.00 - 600.00%) |

**Note:**

The values of *b5-20* [PID Unit Selection], *b5-38* [PID User Unit Display Scaling], and *b5-39* [PID User Unit Display Digits] set the units. When *b5-20*, *b5-38*, and *b5-39* change, this parameter does not automatically update. Set this parameter again after you change *b5-20*, *b5-38*, and *b5-39* are changed.

- When *b5-95* = 0 [EZ Sleep Wake-up Mode = Absolute]:  
When *b5-09* = 0 [PID Output Level Selection = Normal Output (Direct Acting)], and the PID Feedback [H3-xx = B] is less than the value of *b5-94* for a time longer than the value of *b5-96* [EZ Sleep Wake-up Time], the drive will exit sleep and start operation again. When *b5-09* = 1 [Reverse Output (Reverse Acting)], and the PID feedback is more than setting value of *b5-94* for a time longer than the setting value of *b5-96*, the drive will exit sleep and start operation again.
- When *b5-95* = 1 [Setpoint Delta]:  
When *b5-09* = 0, and the PID feedback is less than the value of "PID setpoint value - *b5-94*" for a time longer than the value of *b5-96*, the drive will exit sleep and start operation again. When *b5-09* = 1, and the PID feedback is more than the value of "PID setpoint value + *b5-94*" for a time longer than the setting value of *b5-96*, the drive will exit sleep and start operation again.

### ■ b5-95: EZ Sleep Wake-up Mode

| No. (Hex.)      | Name                  | Description   | Default (Range) |
|-----------------|-----------------------|---|-----------------|
| b5-95<br>(0B95) | EZ Sleep Wake-up Mode | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the wake-up mode to use when exiting Sleep Mode. | 0<br>(0, 1)     |

**0 : Absolute**

**1 : Setpoint Delta**

## ■ b5-96: EZ Sleep Wake-up Time

| No. (Hex.)             | Name                  | Description  | Default (Range)           |
|------------------------|-----------------------|--|---------------------------|
| b5-96<br>(0B96)<br>RUN | EZ Sleep Wake-up Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the EZ Wake-up time. | 1.0 s<br>(0.0 - 1000.0 s) |

When the PID feedback is less than the value of *b5-94* [*EZ Sleep Wake-up Level*] continuously for the time set in *b5-96*, the drive will exit sleep and start operation again.

## ◆ b6: Dwell Function

The Dwell function momentarily holds the output frequency at start and stop.

This prevents motor speed loss when you start and stop heavy loads. The Dwell function is also enabled when backlash on the machine side causes sudden movement at the start of acceleration and deceleration.

At the start of acceleration, the drive uses the output frequency and acceleration time set for the Dwell function to automatically operate at low speed to minimize the effects of backlash. Then, the drive can accelerate again. The Dwell function operates the same for deceleration.

For conveyor applications, the Dwell function also lets the drive interlock the output frequency and a delay time for the holding brake on the load side.

The Dwell function momentarily stops during acceleration to prevent a PM motor from stepping out. [Figure 12.34](#) shows how the Dwell function works.

### Note:

When you use the Dwell function at stop, set *b1-03* = 0 [*Stopping Method Selection = Ramp to Stop*].

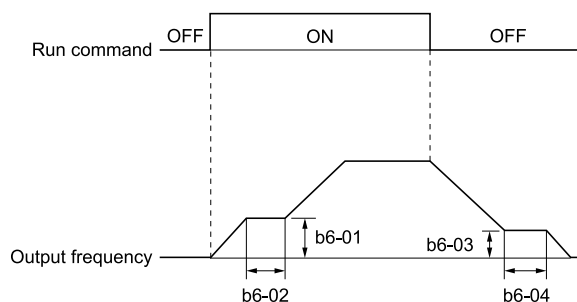


Figure 12.34 Time Chart for the Dwell Function at Start/Stop

## ■ b6-01: Dwell Reference at Start

| No. (Hex.)      | Name                     | Description  | Default (Range)              |
|-----------------|--------------------------|--|------------------------------|
| b6-01<br>(01B6) | Dwell Reference at Start | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the output frequency that the drive will hold momentarily when the motor starts. | 0.0<br>(Determined by A1-02) |

When the drive accelerates to the output frequency set in *b6-01*, it holds that frequency for the time set in *b6-02* [*Dwell Time at Start*], and starts to accelerate again.

## ■ b6-02: Dwell Time at Start

| No. (Hex.)      | Name                | Description   | Default (Range)         |
|-----------------|---------------------|---|-------------------------|
| b6-02<br>(01B7) | Dwell Time at Start | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that the drive will hold the output frequency when the motor starts. | 0.0 s<br>(0.0 - 10.0 s) |

## ■ b6-03: Dwell Reference at Stop

| No. (Hex.)      | Name                    | Description   | Default (Range)              |
|-----------------|-------------------------|---|------------------------------|
| b6-03<br>(01B8) | Dwell Reference at Stop | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the output frequency that the drive will hold momentarily when ramping to stop the motor. | 0.0<br>(Determined by A1-02) |

When the drive decelerates to the output frequency set in *b6-03*, it holds that frequency for the time set in *b6-04* [*Dwell Time at Stop*] and starts to decelerate again.

### ■ b6-04: Dwell Time at Stop

| No. (Hex.)      | Name               | Description   | Default (Range)         |
|-----------------|--------------------|---|-------------------------|
| b6-04<br>(01B9) | Dwell Time at Stop | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time for the drive to hold the output frequency when ramping to stop the motor. | 0.0 s<br>(0.0 - 10.0 s) |

### ◆ b8: Energy Saving

Energy-saving control improves overall system operating efficiency by operating the motor at its most efficient level.

Set *b8-01* and these parameters according to the control method and the motor.

- When you use V/f Control, set parameters *b8-04 to b8-06*.
- When you use vector control with an induction motor, set parameters *b8-02 and b8-03*.
- When you use a PM motor, set parameters *b8-16 and b8-17*.

#### Note:

- Energy-saving control is not appropriate for applications with sudden changes in the load, or applications driving heavy loads such as a traverse car application.
- Energy-saving control maximizes operation based on precise motor data set to the drive. Make sure that you do Auto-Tuning and enter the correct information about the motor before you use the Energy-saving control.

### ■ b8-01: Energy Saving Control Selection

| No. (Hex.)      | Name                            | Description   | Default (Range) |
|-----------------|---------------------------------|---|-----------------|
| b8-01<br>(01CC) | Energy Saving Control Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the Energy-saving control function. | 0<br>(0 - 2)    |

0 : Disabled

1 : Enabled

2 : Automatic Optimization

#### Note:

When *A1-02 = 6* [Control Method Selection = AOLV/PM], you can only select setting 2 in Expert Mode.

### ■ b8-02: Energy Saving Gain

| No. (Hex.)                       | Name               | Description   | Default (Range)                     |
|----------------------------------|--------------------|---|-------------------------------------|
| b8-02<br>(01CD)<br>RUN<br>Expert | Energy Saving Gain | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain for Energy-saving control. | Determined by A1-02<br>(0.0 - 10.0) |

Increase the setting value to increase energy saving. If the setting value is too large, the motor will stall.

### ■ b8-03: Energy Saving Filter Time

| No. (Hex.)                       | Name                      | Description   | Default (Range)   |
|----------------------------------|---------------------------|---|---|
| b8-03<br>(01CE)<br>RUN<br>Expert | Energy Saving Filter Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the responsiveness for Energy-saving control. | Determined by A1-02 , C6-01 and o2-04<br>(0.00 - 10.00 s) |

Decrease the setting value to increase responsiveness. If the setting value is too low, operation will not be stable.

### ■ b8-04: Energy Saving Coefficient Value

| No. (Hex.)                | Name                            | Description  | Default (Range)  |
|---------------------------|---------------------------------|--|--|
| b8-04<br>(01CF)<br>Expert | Energy Saving Coefficient Value | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the Energy-saving control coefficient to maintain maximum motor efficiency. The default setting is for Yaskawa motors. | Determined by C6-01, E2-11, and o2-04<br>(0.00 - 655.00) |



When you use a motor from a different manufacturer, increase the setting value in 5% increments to find the minimum value for *U1-08 [Output Power]* at light loads.

When you decrease the setting value, it decreases the output voltage and decreases power consumption. If the setting value is too low, the motor will stall.

**Note:**

When you do Rotational Auto-Tuning, the drive will automatically set the energy-saving coefficient.

### ■ b8-05: Power Detection Filter Time

| No. (Hex.)                | Name                        | Description   | Default (Range)        |
|---------------------------|-----------------------------|---|------------------------|
| b8-05<br>(01D0)<br>Expert | Power Detection Filter Time | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the time constant to measure output power. | 20 ms<br>(0 - 2000 ms) |

Decrease the setting value to increase responsiveness to load changes. If you set the value too low during operation at light loads, motor speed is not stable.

### ■ b8-06: Search Operation Voltage Limit

| No. (Hex.)                | Name                           | Description   | Default (Range)  |
|---------------------------|--------------------------------|---|------------------|
| b8-06<br>(01D1)<br>Expert | Search Operation Voltage Limit | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the voltage limit for Search Operation as a percentage of the motor rated voltage. | 0%<br>(0 - 100%) |

The Search Operation changes the output voltage in small increments to find a setpoint at which the drive can use minimum power to operate.

Set this parameter to 0 to disable Search Operation. This will not disable Energy-saving control.

If the setting value is too low, the motor will stall when loads suddenly increase.

### ■ b8-16: PM E-Save Coefficient Ki

| No. (Hex.)                | Name                     | Description   | Default (Range)       |
|---------------------------|--------------------------|---|-----------------------|
| b8-16<br>(01F8)<br>Expert | PM E-Save Coefficient Ki | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets torque linearity. This parameter uses the Ki value from the motor nameplate. Usually it is not necessary to change this setting. | 1.00<br>(0.00 - 3.00) |

When *b8-16 = 1.00* (default), the drive will automatically calculate and control the energy-saving coefficient. If the motor nameplate has a description for "Ki", set this parameter to the Ki value.

Do this procedure to prevent oscillation when you set *b8-01 = 1 [Energy Saving Control Selection = Enabled]*.

1. Check *U5-21 [Energy Save Coeff Ki]* and make sure that it aligns with the Ki value on the motor nameplate.
2. If the numbers are different, set *b8-16* to the Ki value on the motor nameplate.

### ■ b8-17: PM E-Save Coefficient Kt

| No. (Hex.)                | Name                     | Description   | Default (Range)       |
|---------------------------|--------------------------|---|-----------------------|
| b8-17<br>(01F9)<br>Expert | PM E-Save Coefficient Kt | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets torque linearity. This parameter uses the Kt value from the motor nameplate. Usually it is not necessary to change this setting. | 1.00<br>(0.00 - 3.00) |

When *E5-01 = 1xxx [PM Motor Code Selection = Yaskawa SSR1 series IPM motor]*, the drive automatically calculates the energy-saving coefficient Kt and uses that value to control operation.

Do this procedure to prevent oscillation when you set *b8-01 = 1 [Energy Saving Control Selection = Enabled]*.

1. Check *U5-22 [Energy Save Coeff Kt]* and make sure that it aligns with the Kt value on the motor nameplate.
2. If the numbers are different, set *b8-17* to the Kt value on the motor nameplate.

■ **b8-18: E-Save d-axis Current FilterTime**

| No. (Hex.)                | Name                             | Description  | Default (Range)              |
|---------------------------|----------------------------------|--|------------------------------|
| b8-18<br>(01FA)<br>Expert | E-Save d-axis Current FilterTime | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the d-axis current reference filter time constant.</p> | 0.100 s<br>(0.000 - 5.000 s) |

■ **b8-19: E-Save Search Frequency**

| No. (Hex.)                | Name                    | Description   | Default (Range)                      |
|---------------------------|-------------------------|---|--------------------------------------|
| b8-19<br>(0B40)<br>Expert | E-Save Search Frequency | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the frequency of Energy-saving control search operations. Usually it is not necessary to change this setting.</p> | Determined by A1-02<br>(10 - 300 Hz) |

**Note:**

- If low inertia causes vibration in the machine, increase the setting value in 10 Hz increments and check the response. If  $A1-02 = 8$  [Control Method Selection = EZOLV], increase the setting value in 1 Hz increments.
- To make the motor more efficient, decrease the setting value in 1 Hz increments until the point immediately before machine vibration starts to occur.

■ **b8-20: E-Save Search Width**

| No. (Hex.)                | Name                | Description   | Default (Range)                    |
|---------------------------|---------------------|---|------------------------------------|
| b8-20<br>(0B41)<br>Expert | E-Save Search Width | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the amplitude of Energy-saving control search operations.</p> | 1.0 degrees<br>(0.1 - 5.0 degrees) |

An increase in the value can make the operational efficiency better. However, if the load inertia is small, it may be necessary to adjust the value to prevent machine vibration.

**Note:**

- If low inertia causes vibration in the machine, decrease the setting value in 1.0-degree increments and check the response.
- To make the motor more efficient, increase the setting value in 1.0-degree increments until the point immediately before machine vibration starts to occur.

■ **b8-21: PM E-Save Search Gain**

| No. (Hex.)                | Name                  | Description  | Default (Range)          |
|---------------------------|-----------------------|--|--------------------------|
| b8-21<br>(0B42)<br>Expert | PM E-Save Search Gain | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain of Energy-saving control search operations.</p> | 0.3Hz<br>(0.1 - 20.0 Hz) |

When you decrease the value of C5-01 [ASR Proportional Gain 1], also decrease the value of b8-21 to keep the correct ratio.

■ **b8-22: PM E-Save Search LPF Cutoff Freq**

| No. (Hex.)                | Name                             | Description   | Default (Range)            |
|---------------------------|----------------------------------|---|----------------------------|
| b8-22<br>(0B43)<br>Expert | PM E-Save Search LPF Cutoff Freq | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the frequency of the filter used to extract the high-efficiency phase from search operations. Usually it is not necessary to change this setting.</p> | 10.0 Hz<br>(1.0 - 30.0 Hz) |

■ **b8-23: PM E-Save Search Limit**

| No. (Hex.)                | Name                   | Description   | Default (Range)                      |
|---------------------------|------------------------|---|--------------------------------------|
| b8-23<br>(0B44)<br>Expert | PM E-Save Search Limit | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the search operations output limit. Usually it is not necessary to change this setting.</p> | 15.0 degrees<br>(0.0 - 30.0 degrees) |

When the motor characteristics are correct, increase this value to make the motor more efficient.

### ■ b8-24: PM E-Save High Freq ACR Gain

| No.<br>(Hex.)             | Name                         | Description   | Default<br>(Range)              |
|---------------------------|------------------------------|---|---------------------------------|
| b8-24<br>(0B45)<br>Expert | PM E-Save High Freq ACR Gain | V/f OLV OLV/PM AOLV/PM EZOLV<br>Sets the gain for high-frequency current control. | 200.0 Hz<br>(100.0 - 1000.0 Hz) |

**Note:**

If the drive detects *oC* [Overcurrent], decrease the value.

### ■ b8-25: PM E-Save Search Start Level

| No.<br>(Hex.)             | Name                         | Description   | Default<br>(Range)      |
|---------------------------|------------------------------|---|-------------------------|
| b8-25<br>(0B46)<br>Expert | PM E-Save Search Start Level | V/f OLV OLV/PM AOLV/PM EZOLV<br>Sets the start level for search operations. | 10.0%<br>(0.0 - 100.0%) |

**Note:**

If there is vibration in the machine, increase the value.

### ■ b8-26: PM E-Save Power Setpoint

| No.<br>(Hex.)             | Name                     | Description   | Default<br>(Range)       |
|---------------------------|--------------------------|---|--------------------------|
| b8-26<br>(0B47)<br>Expert | PM E-Save Power Setpoint | V/f OLV OLV/PM AOLV/PM EZOLV<br>Sets a value to increase torque accuracy. | 0.0%<br>(-10.0 - +10.0%) |

### ■ b8-28: Over Excitation Action Selection

| No.<br>(Hex.)             | Name                             | Description   | Default<br>(Range) |
|---------------------------|----------------------------------|---|--------------------|
| b8-28<br>(0B8B)<br>Expert | Over Excitation Action Selection | V/f OLV OLV/PM AOLV/PM EZOLV<br>Sets the function for excitation operation. | 0<br>(0, 1)        |

When operation is not stable at low speeds, set this parameter to 1 to enable the function.

**0 : Disabled**

**1 : Enabled**

### ■ b8-29: Energy Saving Priority Selection

| No.<br>(Hex.)   | Name                             | Description   | Default<br>(Range) |
|-----------------|----------------------------------|---|--------------------|
| b8-29<br>(0B8C) | Energy Saving Priority Selection | V/f OLV OLV/PM AOLV/PM EZOLV<br>Sets the priority of drive response between changes to the load or Energy-saving control. Enable this to prioritize energy-saving control. Disable this to prioritize tracking related to fast load changes, and prevent motor stall. | 0<br>(0, 1)        |

Enable this parameter when there are small changes in the load. It is possible that the motor cannot respond correctly to changes in the load.

**0 : Priority: Drive Response**

**1 : Priority: Energy Savings**

## 12.4 C: Tuning

*C* parameters adjust drive operation, including:

- Acceleration Time
- Deceleration Time
- Slip Compensation
- Torque Compensation
- Carrier Frequency

### ◆ C1: Accel & Decel Time

You can set four different acceleration and deceleration time pairs in the drive. When you activate and deactivate H1-xx = 7, 16, 1A [MFDI Function Select = Accel/Decel Time Selection 1, Motor 2 Selection, Accel/Decel Time Selection 2], you can switch acceleration and deceleration times during run.

Acceleration time parameters always set the time to accelerate from 0 Hz to *E1-04* [Maximum Output Frequency]. Deceleration time parameters always set the time to decelerate from *E1-04* to 0 Hz.

*C1-01* [Acceleration Time 1] and *C1-02* [Deceleration Time 1] are the default active accel/decel settings.

| Parameter                   | Range           |
|-----------------------------|-----------------|
| C1-01 [Acceleration Time 1] | 0.0 to 6000.0 s |
| C1-02 [Deceleration Time 1] |                 |
| C1-03 [Acceleration Time 2] |                 |
| C1-04 [Deceleration Time 2] |                 |
| C1-05 [Acceleration Time 3] |                 |
| C1-06 [Deceleration Time 3] |                 |
| C1-07 [Acceleration Time 4] |                 |
| C1-08 [Deceleration Time 4] |                 |

**Note:**

The setting range for acceleration and deceleration times is 0.00 to 600.00 s when *C1-10* = 0 [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)].

### ■ Use MFDIs to Switch Acceleration Times

Table 12.35 shows the different acceleration and deceleration times.

**Table 12.35 Accel/Decel Times and Active Parameters**

| H1-xx = 7<br>[Accel/Decel Time Selection<br>1] | H1-xx = 1A<br>[Accel/Decel Time Selection<br>2] | Active Parameter            |                             |
|--|---|-----------------------------|-----------------------------|
|  |   | Acceleration Time           | Deceleration Time           |
| OFF  | OFF   | C1-01 [Acceleration Time 1] | C1-02 [Deceleration Time 1] |
| ON   | OFF   | C1-03 [Acceleration Time 2] | C1-04 [Deceleration Time 2] |
| OFF  | ON  | C1-05 [Acceleration Time 3] | C1-06 [Deceleration Time 3] |
| ON   | ON  | C1-07 [Acceleration Time 4] | C1-08 [Deceleration Time 4] |

Figure 12.35 shows an operation example to change acceleration and deceleration times. It is necessary to set *b1-03* = 0 [Stopping Method Selection = Ramp to Stop] for this example.

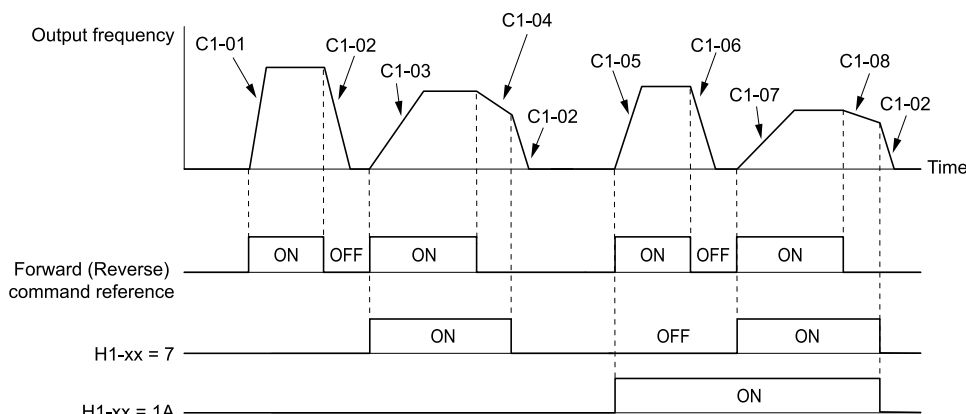


Figure 12.35 Timing Diagram of Acceleration and Deceleration Times

### ■ Use Motor Selection to Switch Acceleration and Deceleration Times

When you set  $H1-xx = 16$  [MFDI Function Selection = Motor 2 Selection], you can activate and deactivate the input terminal to switch between motor 1 and motor 2.

**Note:**

You cannot use the Motor 2 Selection function with PM motors.

Table 12.36 shows the possible acceleration and deceleration time combinations when you use the Motor 2 Selection function.

Table 12.36 Motor Selection and Acceleration and Deceleration Times

| H1-xx = 7<br>[Accel/Decel Time Selection 1] | H1-xx = 16 [Motor 2 Selection] |                   |                       |                   |
|---|--------------------------------|-------------------|-----------------------|-------------------|
|   | Motor 2 Selection: OFF         |                   | Motor 2 Selection: ON |                   |
|   | Acceleration Time              | Deceleration Time | Acceleration Time     | Deceleration Time |
| OFF   | C1-01                          | C1-02             | C1-05                 | C1-06             |
| ON  | C1-03                          | C1-04             | C1-07                 | C1-08             |

### ■ Use Output Frequency Level to Switch Acceleration and Deceleration Times

The drive can use output frequency to automatically switch between different acceleration and deceleration times. When the output frequency =  $C1-11$  [Accel/Decel Time Switchover Freq], the drive automatically switches the acceleration and deceleration times. Set  $C1-11 = 0.0$  Hz to disable this function.

**Note:**

- Acceleration and deceleration times set to MFDIs are more important than the automatic switch using the frequency level set in  $C1-11$ . For example, if you set the switchover frequency to  $C1-11$ , the drive will not automatically switch acceleration and deceleration times when the MFDI terminal set for Accel/Decel Time Selection 1 [ $H1-xx = 7$ ] is activated.
- If Motor 2 Selection [ $H1-xx = 16$ ] is activated, the drive will set the acceleration/deceleration time to  $C1-05$  and  $C1-06$  for motor 2 when the output frequency is more than the frequency level set in  $C1-11$ .

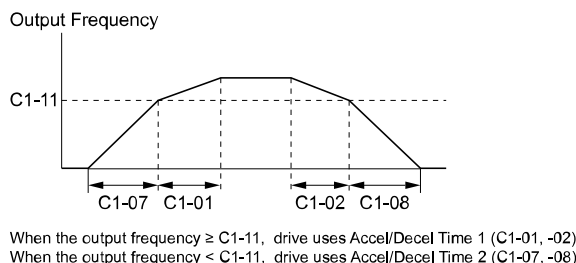


Figure 12.36 Accel/Decel Time Switching Frequency

### ■ C1-01: Acceleration Time 1

| No. (Hex.)       | Name                | Description   | Default (Range)         |
|------------------|---------------------|---|-------------------------|
| C1-01 (0200) RUN | Acceleration Time 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency. | 10.0 s (0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

**■ C1-02: Deceleration Time 1**

| No. (Hex.)             | Name                | Description   | Default (Range)            |
|------------------------|---------------------|---|----------------------------|
| C1-02<br>(0201)<br>RUN | Deceleration Time 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

**■ C1-03: Acceleration Time 2**

| No. (Hex.)             | Name                | Description   | Default (Range)            |
|------------------------|---------------------|---|----------------------------|
| C1-03<br>(0202)<br>RUN | Acceleration Time 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

**■ C1-04: Deceleration Time 2**

| No. (Hex.)             | Name                | Description   | Default (Range)            |
|------------------------|---------------------|---|----------------------------|
| C1-04<br>(0203)<br>RUN | Deceleration Time 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

**■ C1-05: Acceleration Time 3**

| No. (Hex.)             | Name                | Description   | Default (Range)            |
|------------------------|---------------------|---|----------------------------|
| C1-05<br>(0204)<br>RUN | Acceleration Time 3 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

**■ C1-06: Deceleration Time 3**

| No. (Hex.)             | Name                | Description   | Default (Range)            |
|------------------------|---------------------|---|----------------------------|
| C1-06<br>(0205)<br>RUN | Deceleration Time 3 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

**■ C1-07: Acceleration Time 4**

| No. (Hex.)             | Name                | Description   | Default (Range)            |
|------------------------|---------------------|---|----------------------------|
| C1-07<br>(0206)<br>RUN | Acceleration Time 4 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to accelerate from zero to maximum output frequency. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

### ■ C1-08: Deceleration Time 4

| No. (Hex.)             | Name                | Description   | Default (Range)            |
|------------------------|---------------------|---|----------------------------|
| C1-08<br>(0207)<br>RUN | Deceleration Time 4 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time to decelerate from maximum output frequency to zero. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.

### ■ C1-09: Fast Stop Time

| No. (Hex.)             | Name           | Description  | Default (Range)            |
|------------------------|----------------|--|----------------------------|
| C1-09<br>(0208)<br>RUN | Fast Stop Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the length of time that the drive will decelerate to zero for a Fast Stop. | 10.0 s<br>(0.0 - 6000.0 s) |

**Note:**

- When  $C1-10 = 0$  [Accel/Decel Time Setting Units = 0.01 s (0.00 to 600.00 s)], the setting range is 0.00 to 600.00 s.
- When  $L2-29 = 0$  [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 1] and you do KEB Auto-Tuning, the drive will automatically set  $C1-09$ . If you must not change the Fast Stop time, do not do KEB Auto-Tuning.

The Fast Stop function will be triggered in the following circumstances.

- The Fast Stop operation will be triggered by the input of the Fast Stop command via the multi-function digital input terminal.
- The Fast Stop operation is will be triggered when by the input of the Fast Stop command is input via the multi-function digital input terminal.

Set  $H1-xx = 15, 17$  [MFDI Function Select = Fast Stop (N.O.), Fast Stop (N.C.)].

When the Fast Stop command is input, the Fast Stop operation will be triggered at the deceleration time set to  $C1-09$ . The drive cannot be restarted after initiating a Fast Stop operation until deceleration is complete. Complete deceleration and cycle the Run command to clear the Fast Stop input.

The terminal set for  $H2-xx = 4C$  [MFDO Function Select = During Fast Stop] will be ON during Fast Stop.

**Note:**

Decelerating too quickly can cause an *ov* [Overvoltage] fault that shuts off the drive while the motor to coasts to a stop. Set a Fast Stop time in  $C1-09$  that prevents motor coasting and makes sure that the motor stops quickly and safely.

### ■ C1-10: Accel/Decel Time Setting Units

| No. (Hex.)      | Name                           | Description  | Default (Range) |
|-----------------|--------------------------------|--|-----------------|
| C1-10<br>(0209) | Accel/Decel Time Setting Units | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the setting units for $C1-01$ to $C1-08$ [Accel/Decel Times 1 to 4], $C1-09$ [Fast Stop Time], $L2-06$ [Kinetic Energy Backup Decel Time], and $L2-07$ [Kinetic Energy Backup Accel Time]. | 1<br>(0, 1)     |

#### 0 : 0.01 s (0.00 to 600.00 s)

Sets acceleration and deceleration times in 0.01 s units. The setting range is 0.0 to 6000.0 s.

If one of these parameters is set to 1000.0 s or longer, you cannot set  $C1-10 = 0$ :

- $C1-01$  to  $C1-09$
- $L2-06$
- $L2-07$

When one of those parameters is set to a value between 600.1 s and 1000.0 s, you can set  $C1-10 = 0$ , but the time will change to 600.00 s.


#### 1 : 0.1 s (0.0 to 6000.0 s)

Sets acceleration and deceleration times in 0.1 s units. The setting range is 0.0 to 6000.0 s.

### ■ C1-11: Accel/Decel Time Switchover Freq

| No. (Hex.)      | Name                                 | Description   | Default (Range)                         |
|-----------------|--------------------------------------|---|---|
| C1-11<br>(020A) | Accel/Decel Time Switching Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency at which the drive will automatically change acceleration and deceleration times. | Determined by A1-02<br>(0.0 - 590.0 Hz) |

When the output frequency is at the *C1-11* value, the drive automatically switches the acceleration and deceleration times. Set this parameter to 0.0 to disable this function.

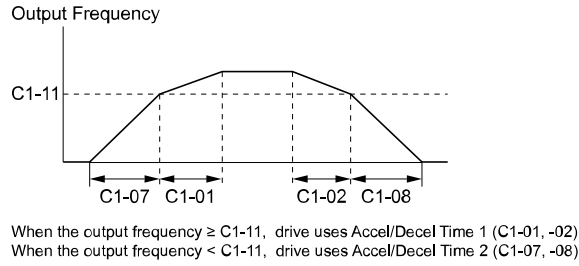

**Figure 12.37 Accel/Decel Time Switchover Freq**

Table 12.37 lists the possible combinations of acceleration and deceleration time switchover frequencies and the acceleration times for the Motor 2 Selection function.

**Table 12.37 Motor and Acceleration and Deceleration Time Combination**


| C1-11                                   | Motor 1                     |                             | Motor 2                     |                             |
|---|-----------------------------|-----------------------------|-----------------------------|-----------------------------|
|   | Acceleration Time           | Deceleration Time           | Acceleration Time           | Deceleration Time           |
| Less than the setting value             | C1-07 [Acceleration Time 4] | C1-08 [Deceleration Time 4] | C1-07 [Acceleration Time 4] | C1-08 [Deceleration Time 4] |
| Equal to or more than the setting value | C1-01 [Acceleration Time 1] | C1-02 [Deceleration Time 1] | C1-05 [Acceleration Time 3] | C1-06 [Deceleration Time 3] |

■ **C1-14: Accel/Decel Rate Frequency**

| No. (Hex.)       | Name                       | Description  | Default (Range)         |
|------------------|----------------------------|--|-------------------------|
| C1-14 (0264) RUN | Accel/Decel Rate Frequency | <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span style="background-color: black; color: white; padding: 2px;">OLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">AOLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span><br>Sets the base frequency used to calculate acceleration and deceleration rates. | 0.0 Hz (0.0 - 590.0 Hz) |

The acceleration and deceleration rates set in *C1-01* to *C1-09* [Acceleration/Deceleration Times 1 to 4, Fast Stop Time] will change when the value of *C1-14* changes.


- When *C1-14* = 0.0 Hz
  - *C1-01, C1-03, C1-05, C1-07* [Acceleration Times 1 to 4]: Time to accelerate from 0 Hz to *E1-04* [Maximum Output Frequency]
  - *C1-02, C1-04, C1-06, C1-08* [Deceleration Times 1 to 4], *C1-09* [Fast Stop Time]: Time to decelerate from *E1-04* to 0 Hz.

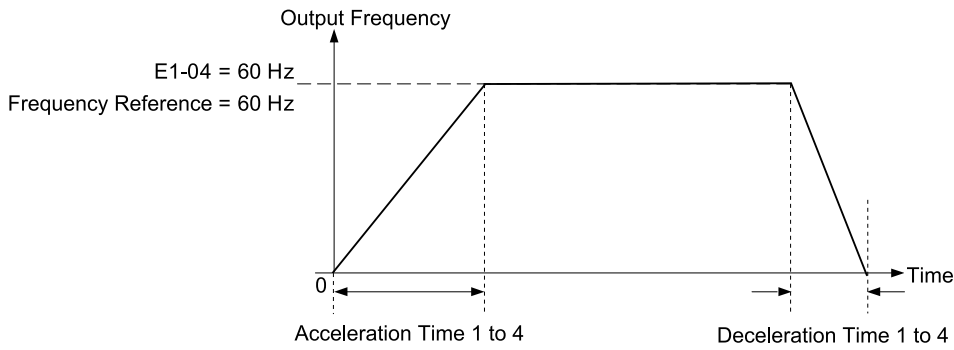


**Figure 12.38 Example 1: Acceleration/Deceleration Rate (When C1-14 = 0 Hz, E1-04 = 60 Hz, and the Frequency Reference is 60 Hz)**

- When *C1-14* ≠ 0.0 Hz
  - *C1-01, C1-03, C1-05, C1-07*: Time to accelerate from 0 Hz to *C1-14*
  - *C1-02, C1-04, C1-06, C1-08, C1-09*: Time to decelerate from *C1-14* to 0 Hz



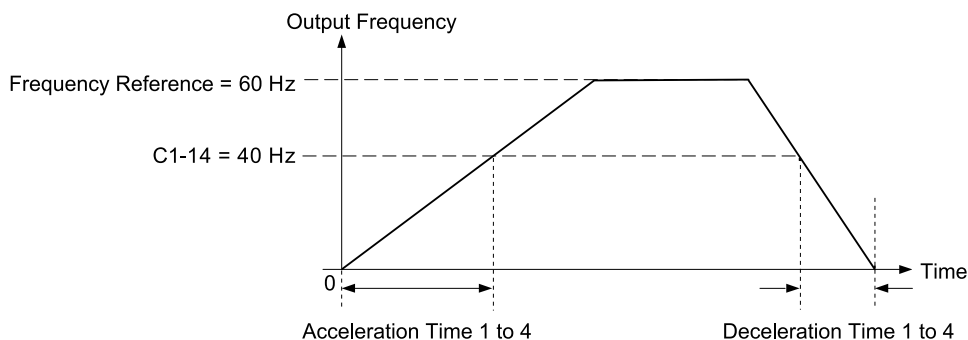

**Figure 12.39 Example 2: Acceleration/Deceleration Rate (When C1-14 = 40 Hz, E1-04 = 60 Hz, and the Frequency Reference is 60 Hz)**

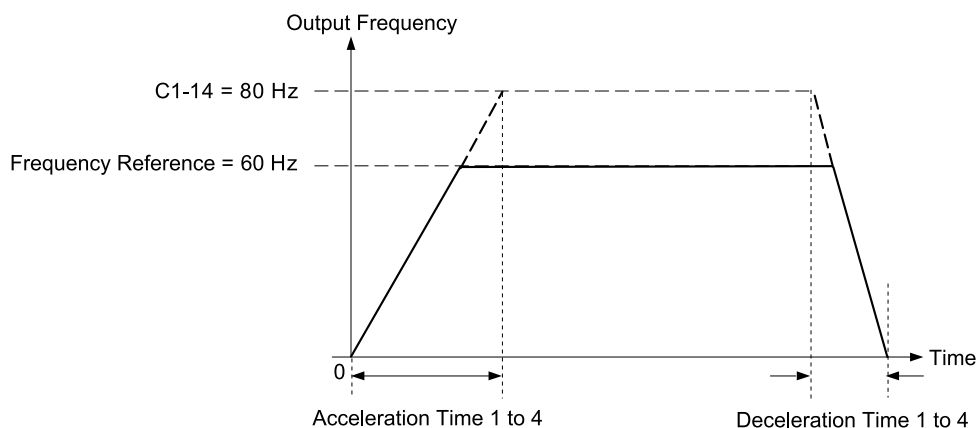


**Figure 12.40 Example 3: Acceleration/Deceleration Rate (When C1-14 = 80 Hz, E1-04 = 60 Hz, and the Frequency Reference is 60 Hz)**

**Note:**

- Figure 12.38 to Figure 12.40 show the accel/decel times when C2-01 to C2-04 [S-Curve Times @ Start/End of Accel/Decel] = 0.00 s.
- When L3-01 ≠ 0 [Stall Prevention during Accel ≠ Disabled], Stall Prevention could cause the acceleration time to be longer than the set value.
- When L3-04 ≠ 0 [Stall Prevention during Decel ≠ Disabled], Stall Prevention could cause the deceleration time to be longer than the set value.

## ◆ C2: S-Curve Characteristics

Use S-curve characteristics to smooth acceleration and deceleration and to minimize abrupt shock to the load. Set S-curve characteristic time during acceleration/deceleration at start and acceleration/deceleration at stop. The following figure explains how S-curves are applied.

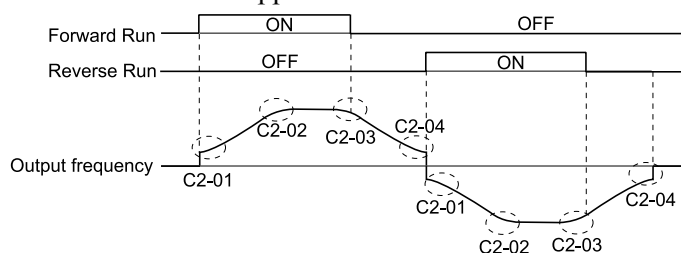

**Figure 12.41 S-Curve Timing Diagram - Forward/Reverse Operation**

**Note:**

- If STPo [Motor Step-Out Detected] occurs when starting a PM motor, try increasing the value set to C2-01.
- Setting the S-curve will increase the acceleration and deceleration times.

$$\text{Acceleration time} = \text{Selected acceleration time} + \frac{C2-01 + C2-02}{2}$$

$$\text{Deceleration time} = \text{Selected deceleration time} + \frac{C2-03 + C2-04}{2}$$

### ■ C2-01: S-Curve Time @ Start of Accel

| No. (Hex.)   | Name                          | Description   | Default (Range)                      |
|--------------|-------------------------------|---|--------------------------------------|
| C2-01 (020B) | S-Curve Time @ Start of Accel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the S-curve acceleration time at start. | Determined by A1-02 (0.00 - 10.00 s) |

### ■ C2-02: S-Curve Time @ End of Accel

| No. (Hex.)   | Name                        | Description  | Default (Range)         |
|--------------|-----------------------------|--|-------------------------|
| C2-02 (020C) | S-Curve Time @ End of Accel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the S-curve acceleration time at completion. | 0.20 s (0.00 - 10.00 s) |

### ■ C2-03: S-Curve Time @ Start of Decel

| No. (Hex.)   | Name                          | Description   | Default (Range)         |
|--------------|-------------------------------|---|-------------------------|
| C2-03 (020D) | S-Curve Time @ Start of Decel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the S-curve deceleration time at start. | 0.20 s (0.00 - 10.00 s) |

### ■ C2-04: S-Curve Time @ End of Decel

| No. (Hex.)   | Name                        | Description  | Default (Range)         |
|--------------|-----------------------------|--|-------------------------|
| C2-04 (020E) | S-Curve Time @ End of Decel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the S-curve deceleration time at completion. | 0.00 s (0.00 - 10.00 s) |

## ◆ C3: Slip Compensation

The Slip Compensation function improves the speed accuracy of an induction motor. As loads on induction motors increase, motor slip increases and motor speed decreases. By adjusting the output frequency in accordance with the motor load, it compensates the slip and makes the motor speed equal to the frequency reference.

### ■ C3-01: Slip Compensation Gain

| No. (Hex.)          | Name                   | Description  | Default (Range)                 |
|---------------------|------------------------|--|---------------------------------|
| C3-01 (020F)<br>RUN | Slip Compensation Gain | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain for the slip compensation function. Usually it is not necessary to change this setting. | Determined by A1-02 (0.0 - 2.5) |

#### Note:

Correctly set these parameters before changing the slip compensation gain:

- E2-01 [Motor Rated Current (FLA)]
- E2-02 [Motor Rated Slip]
- E2-03 [Motor No-Load Current]

Adjust this parameter as follows if necessary:

- If the motor speed is slower than the frequency reference, increase this parameter in 0.1-unit increments.
- If the motor speed is slower than the frequency reference value, decrease this parameter value in 0.1-unit increments.

### ■ C3-02: Slip Compensation Delay Time

| No. (Hex.)          | Name                         | Description   | Default (Range)                    |
|---------------------|------------------------------|---|------------------------------------|
| C3-02 (0210)<br>RUN | Slip Compensation Delay Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the slip compensation delay time when speed is unstable or when the slip compensation response is too slow. Usually it is not necessary to change this setting. | Determined by A1-02 (0 - 10000 ms) |

Use these settings to adjust this parameter as necessary:

- When the speed is not stable, increase the setting.
- When the slip compensation response is too slow, decrease the setting.

### ■ C3-03: Slip Compensation Limit

| No. (Hex.)      | Name                    | Description  | Default (Range)    |
|-----------------|-------------------------|--|--------------------|
| C3-03<br>(0211) | Slip Compensation Limit | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the upper limit for the slip compensation function as a percentage of the motor rated slip. | 200%<br>(0 - 250%) |

If you increase the value of *C3-01 [Slip Compensation Gain]* and the motor speed is slow, use this parameter. The drive uses this parameter when the slip is at the upper limit of slip compensation. Make sure that you measure the motor speed when you increase this parameter value. Set this parameter to make the frequency reference and the slip compensation limit less than the permitted range of the machine.

The slip compensation limit is constant in the constant torque range (frequency reference  $\leq E1-06$  [Base Frequency]). In the constant output range where the frequency reference  $> E1-06$ , the slip compensation limit increases with the *C3-03* value and the output frequency as shown in Figure 12.42.

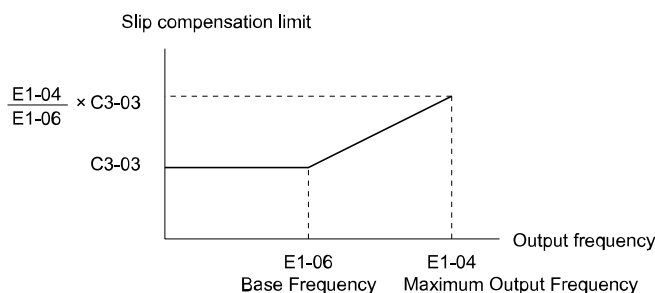


Figure 12.42 Slip Compensation Limit

### ■ C3-04: Slip Compensation at Regen

| No. (Hex.)      | Name                       | Description  | Default (Range) |
|-----------------|----------------------------|--|-----------------|
| C3-04<br>(0212) | Slip Compensation at Regen | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the slip compensation function during regenerative operation. | 0<br>(0 - 2)    |

If you apply a regenerative load when slip compensation function during regeneration is active, the quantity of regeneration can increase immediately. In this condition, it is necessary to use a dynamic braking option (braking resistor or braking resistor unit).

#### 0 : Disabled

The drive does not provide slip compensation during regeneration.

The load and operation status (regenerative operation) can cause the motor speed to be higher or lower than the frequency reference.

#### 1 : Enabled Above 6Hz

Slip compensation function is enabled during regeneration. Slip compensation is disabled at output frequencies of 6 Hz or less.

#### 2 : Enabled Above C3-15

The drive uses *E2-02 [Motor Rated Slip]* to automatically calculate the frequency range where it will disable slip compensation function during regenerative operation.

Slip compensation is enabled at frequencies as low as 2 Hz.

### ■ C3-05: Output Voltage Limit Selection

| No. (Hex.)      | Name                           | Description   | Default (Range) |
|-----------------|--------------------------------|---|-----------------|
| C3-05<br>(0213) | Output Voltage Limit Selection | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the automatic reduction of motor magnetic flux when the output voltage is saturated. | 0<br>(0, 1)     |

The drive will decrease flux and increase current to compensate torque when voltage is saturated. Make sure that the drive has sufficient output current capacity before you enable this parameter. When this parameter = 1 [Enabled], the output current will increase by 10% at a maximum (at rated load) before it is enabled.

Enable this parameter to increase speed precision when you move heavy loads at high speeds in these conditions:

- Power supply voltage is low

## 12.4 C: Tuning

- Motor rated voltage is high

Do not enable this parameter in these conditions:

- Operating a motor in the middle speed range or low speed range
- Power supply voltage is a minimum of 10% more than the motor rated voltage

When you enable this parameter, if the power supply voltage is much less than the motor rated voltage, torque control will not be accurate.

**0 : Disabled**

**1 : Enabled**

### ■ C3-16: Vout Modulation Limit Start Lvl

| No. (Hex.)                | Name                            | Description  | Default (Range)         |
|---------------------------|---------------------------------|--|-------------------------|
| C3-16<br>(0261)<br>Expert | Vout Modulation Limit Start Lvl | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: #ccc; border: 1px solid #ccc; border-radius: 3px; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the modulation factor that starts the output voltage limit operation when <math>C3-05 = 1</math> [Output Voltage Limit Selection = Enabled].</p> | 90.0%<br>(70.0 - 90.0%) |

### ■ C3-17: Vout Modulation Limit Max Level

| No. (Hex.)                | Name                            | Description  | Default (Range)           |
|---------------------------|---------------------------------|--|---------------------------|
| C3-17<br>(0262)<br>Expert | Vout Modulation Limit Max Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: #ccc; border: 1px solid #ccc; border-radius: 3px; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the modulation factor used with <math>C3-18</math> [Output Voltage Limit Level] for the output voltage limit operation when <math>C3-05 = 1</math> [Output Voltage Limit Selection = Enabled].</p> | 100.0%<br>(85.0 - 100.0%) |

### ■ C3-18: Output Voltage Limit Level

| No. (Hex.)                | Name                       | Description   | Default (Range)          |
|---------------------------|----------------------------|---|--------------------------|
| C3-18<br>(0263)<br>Expert | Output Voltage Limit Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: #ccc; border: 1px solid #ccc; border-radius: 3px; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the maximum drop width of the voltage reference when <math>C3-05 = 1</math> [Output Voltage Limit Selection = Enabled].</p> | 90.0%<br>(50.0 - 100.0%) |

### ■ C3-21: Motor 2 Slip Compensation Gain

| No. (Hex.)             | Name                           | Description  | Default (Range)                    |
|------------------------|--------------------------------|--|------------------------------------|
| C3-21<br>(033E)<br>RUN | Motor 2 Slip Compensation Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: #ccc; border: 1px solid #ccc; border-radius: 3px; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain for the motor 2 slip compensation function. Usually it is not necessary to change this setting.</p> | Determined by E3-01<br>(0.0 - 2.5) |

**Note:**

Correctly set these parameters before changing the slip compensation gain:

- E4-01 [Motor 2 Rated Current]
- E4-02 [Motor 2 Rated Slip]
- E4-03 [Motor 2 Rated No-Load Current]

Use these settings to adjust this parameter as necessary:

- If the motor speed is slower than the frequency reference, increase C3-01 in 0.1 unit increments.
- If the motor speed is higher than the frequency reference, decrease the setting of this parameter in 0.1-unit increments.

### ■ C3-22: Motor 2 Slip Comp Delay Time

| No. (Hex.)             | Name                         | Description   | Default (Range)                       |
|------------------------|------------------------------|---|---------------------------------------|
| C3-22<br>(0241)<br>RUN | Motor 2 Slip Comp Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: #ccc; border: 1px solid #ccc; border-radius: 3px; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the slip compensation delay time for motor 2 when speed is unstable or when the slip compensation response is too slow. Usually it is not necessary to change this setting.</p> | Determined by E3-01<br>(0 - 10000 ms) |

Use these settings to adjust this parameter as necessary:

- When the speed is not stable, increase the setting.
- When the slip compensation response is too slow, decrease the setting.

### ■ C3-23: Motor 2 Slip Compensation Limit

| No. (Hex.)   | Name                            | Description   | Default (Range)    |
|--------------|---------------------------------|---|--------------------|
| C3-23 (0242) | Motor 2 Slip Compensation Limit | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the upper limit for the slip compensation function as a percentage of the motor 2 rated slip. | 200%<br>(0 - 250%) |

If you increase the value of C3-21 [Motor 2 Slip Compensation Gain] and the motor speed is slow, use this parameter. The drive uses this parameter when the slip is at the upper limit of slip compensation. Make sure that you measure the motor speed when you increase this parameter value. Set this parameter to make the frequency reference and the slip compensation limit less than the permitted range of the machine.

The slip compensation limit is constant in the constant torque range (frequency reference  $\leq$  E3-06 [Motor 2 Base Frequency]). In the constant power range where the frequency reference  $>$  E3-06, the slip compensation limit increases with the C3-23 value and the output frequency as shown in Figure 12.43.

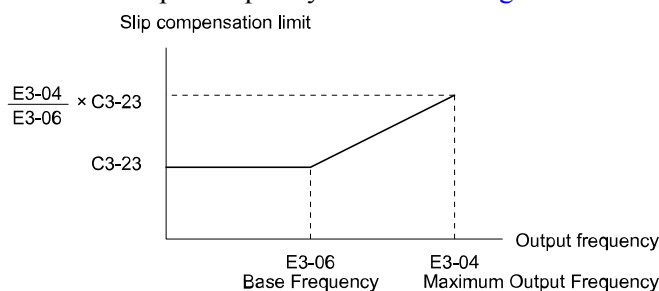


Figure 12.43 Motor 2 Slip Compensation Limit

### ■ C3-24: Motor 2 Slip Comp during Regen

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| C3-24 (0243) | Motor 2 Slip Comp during Regen | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the slip compensation during regenerative operation function for motor 2. | 0<br>(0 - 2)    |

If you enable the slip compensation function during regeneration, the quantity of regeneration can increase immediately. In this condition, it is necessary to use a dynamic braking option (braking resistor or braking resistor unit).

#### 0 : Disabled

The drive will not do Slip compensation during regeneration.

The load and operation status (regenerative operation) can cause the motor speed to be higher or lower than the frequency reference.

#### 1 : Enabled Above 6Hz

The slip compensation function is enabled during regeneration. Slip compensation is disabled at output frequencies of 6 Hz or less.

#### 2 : Enabled Above C3-15

The drive uses E2-02 [Motor Rated Slip] to automatically calculate the frequency range where it will disable slip compensation function during regeneration.

Slip compensation is enabled at frequencies as low as 2 Hz.

### ■ C3-29: Slip Compensation Gain @ Low Spd

| No. (Hex.)          | Name                             | Description  | Default (Range)    |
|---------------------|----------------------------------|--|--------------------|
| C3-29 (1B5D) Expert | Slip Compensation Gain @ Low Spd | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the gain for the slip compensation function in the low speed range. Usually it is not necessary to change this setting. | 0.0<br>(0.0 - 2.5) |

Adjust this parameter as follows if necessary:

- If the motor speed is slower than the frequency reference, increase the setting value in 0.1 unit increments.
- If the motor speed is faster than the frequency reference, decrease the setting value in 0.1 unit increments.

## ◆ C4: Torque Compensation

Torque compensation is a function that increases voltage to increase output torque as compensation for insufficient torque production at start-up or low-speed operation.

Voltage drops due to motor winding resistance cause torque generating voltage to decrease, which causes insufficient torque. If the main circuit cable connecting the drive and motor is long, this can also cause insufficient torque due to voltage drops.

**Note:**

Set the motor parameters and V/f pattern properly before setting *C4 parameters*.

### ■ C4-01: Torque Compensation Gain

| No. (Hex.)             | Name                     | Description  | Default (Range)                      |
|------------------------|--------------------------|--|--------------------------------------|
| C4-01<br>(0215)<br>RUN | Torque Compensation Gain | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the gain for the torque compensation function. Use this parameter value for motor 1 when operating multiple motors. | Determined by A1-02<br>(0.00 - 2.50) |

For these control methods and states, adjust the setting value.

| A1-02 [Control Method Selection]         | Status   | Adjustment                                    |
|--|--|---|
| 0 [V/f Control]<br>8 [EZ Vector Control] | Torque is not sufficient during low-speed operation of 10 Hz or less.                          | Increase the setting in 0.05-unit increments. |
|  | There is vibration in the motor or the motor hunts when operating the drive with a light load. | Decrease the setting in 0.05-unit decrements. |
|  | The cable length between the drive and motor is too long.                                      | Increase the setting in 0.05-unit increments. |

**Note:**

- Adjust *C4-01* to make sure that output current is not more than the drive rated current while the drive operates at low speed.
- When *A1-02* = 2 [Open Loop Vector], do not change this parameter under normal conditions. Torque accuracy will decrease.
- When *A1-02* = 5 [PM Open Loop Vector], do not change this parameter under normal conditions. Setting this value too high can cause overcompensation and motor oscillation.
- When *A1-02* = 8 [EZ Vector Control], you cannot change this parameter during drive run.

### ■ C4-02: Torque Compensation Delay Time

| No. (Hex.)             | Name                           | Description  | Default (Range)                       |
|------------------------|--------------------------------|--|---------------------------------------|
| C4-02<br>(0216)<br>RUN | Torque Compensation Delay Time | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the torque compensation delay time. Usually it is not necessary to change this setting. | Determined by A1-02<br>(0 - 60000 ms) |

**Note:**

If *A1-02* = 8 [Control Method Selection = EZOLV], you cannot change the setting while the drive is running.

Set this parameter in these conditions:

- If there is vibration in the motor, increase the setting.
- If the motor speed or motor torque response is too slow, decrease the setting.

### ■ C4-03: Torque Compensation @ FWD Start

| No. (Hex.)      | Name                            | Description   | Default (Range)        |
|-----------------|---------------------------------|---|------------------------|
| C4-03<br>(0217) | Torque Compensation @ FWD Start | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Set the amount of torque reference for forward start as a percentage of the motor rated torque. | 0.0%<br>(0.0 - 200.0%) |

The torque compensation function is performed using the time constant set in *C4-05 [Torque Compensation Time]*.

This is available only when you start the motor with the forward command. Set this parameter to 0.0 to disable this function.

### ■ C4-04: Torque Compensation @ REV Start

| No. (Hex.)   | Name                            | Description   | Default (Range)         |
|--------------|---------------------------------|---|-------------------------|
| C4-04 (0218) | Torque Compensation @ REV Start | V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the amount of torque reference for reverse start as a percentage of the motor rated torque. | 0.0%<br>(-200.0 - 0.0%) |

The drive uses the time constant set in *C4-05 [Torque Compensation Time]* to do the torque compensation function.

This is available only when you start the motor with the reverse Run command.

### ■ C4-05: Torque Compensation Time

| No. (Hex.)   | Name                     | Description  | Default (Range)       |
|--------------|--------------------------|--|-----------------------|
| C4-05 (0219) | Torque Compensation Time | V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the starting torque constant to use with <i>C4-03</i> and <i>C4-04 [Torque Compensation @ FWD/REV Start]</i> . | 10 ms<br>(0 - 200 ms) |

### ■ C4-06: Motor 2 Torque Comp Delay Time

| No. (Hex.)   | Name                           | Description   | Default (Range)          |
|--------------|--------------------------------|---|--------------------------|
| C4-06 (021A) | Motor 2 Torque Comp Delay Time | V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the value if <i>ov</i> [Overvoltage] occurs with sudden changes in the load, at the end of acceleration, or at the start of deceleration. | 150 ms<br>(0 - 10000 ms) |

Sets the time constant used during Speed Search or during regenerative operation when *ov* occurs.

Adjust this parameter in the following circumstances.

- Gradually reduce the setting in 10 ms increments and check the performance to improve motor torque speed response when *ov* occurs.

**Note:**

- Ensure that  $C4-06 \geq C4-02$  [Torque Compensation Delay Time].
- Increase the setting value of *n2-03 [Automatic Freq Regulator Time 2]* proportional to *C4-06*.

### ■ C4-07: Motor 2 Torque Compensation Gain

| No. (Hex.)          | Name                             | Description  | Default (Range)       |
|---------------------|----------------------------------|--|-----------------------|
| C4-07 (0341)<br>RUN | Motor 2 Torque Compensation Gain | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain for motor 2 torque compensation function when using the Motor Switch function. | 1.00<br>(0.00 - 2.50) |

In V/f Control, adjust the value in 0.05-unit increments for these conditions:

- When torque is not sufficient during low-speed operation of 10 Hz or less, increase the setting value
- When there is vibration in the motor or when the motor hunts when operating the drive with a light load, decrease the setting value
- When you use a long motor cable, increase the setting value.

**Note:**

- Adjust *C4-07* to make sure that the output current is not more than the drive rated current during low-speed operation.
- When  $A1-02 = 2$  [Control Method Selection = OLV], usually it is not necessary to change the setting. Torque accuracy will decrease.

### ■ C4-23: Current Control Gain

| No. (Hex.)                    | Name                 | Description  | Default (Range)       |
|-------------------------------|----------------------|--|-----------------------|
| C4-23 (1583)<br>RUN<br>Expert | Current Control Gain | V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Current control gain. Usually it is not necessary to change this parameter. | 1.00<br>(0.50 - 2.50) |

## ◆ C5: Auto Speed Regulator (ASR)

The ASR adjusts the torque reference to decrease the difference between frequency reference and motor speed.

| A1-02 [Control Method Selection]  | Targets of Adjustment |
|---|-----------------------|
| <ul style="list-style-type: none"> <li>• 6: PM Advanced Open Loop Vector (AOLV/PM)</li> <li>• 8: EZ Vector Control (EZOLV)</li> </ul> | Torque Reference      |

Figure 12.44 is a speed control block diagram of each control method.

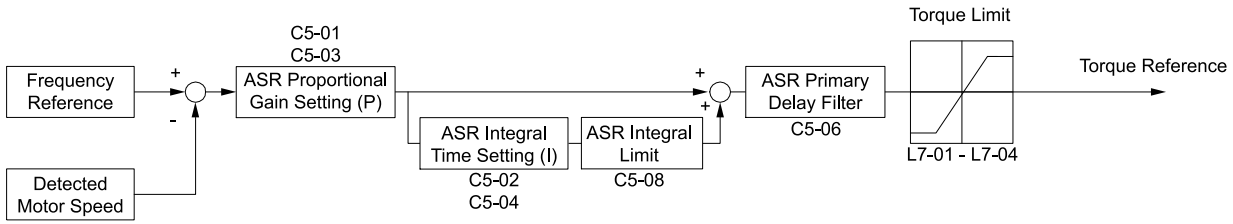


Figure 12.44 Speed Control Block Diagram for AOLV/PM and EZOLV

**Note:**

The detected speed is the speed estimation value when configured such that A1-02 = 6 or 8 [Control Method Selection = AOLV/PM or EZOLV].

**■ Before You Adjust ASR Parameters**

- Do Auto-Tuning and set up all motor data correctly.
- Always make adjustments with the load connected to the motor.
- Use analog output signals to monitor U1-16 [SFS Output Frequency] and U1-05 [Motor Speed] when you adjust the ASR.

**■ ASR Adjustment Procedure for AOLV/PM and EZOLV**

Do this procedure to adjust ASR parameters:

1. Run the motor at zero speed or low speed and increase C5-01 [ASR Proportional Gain 1] until immediately before vibration starts to occur.
2. Run the motor at zero speed or low speed and decrease C5-02 [ASR Integral Time 1] until immediately before vibration starts to occur.
3. Check for oscillation when you run the motor at maximum speed.
4. If oscillation occurs, increase C5-02 and decrease C5-01. When there is no oscillation, the adjustment procedure is complete.
5. Set the low-speed gain. Run the motor at zero speed or low speed and increase C5-03 [ASR Proportional Gain 2] until immediately before vibration starts to occur.

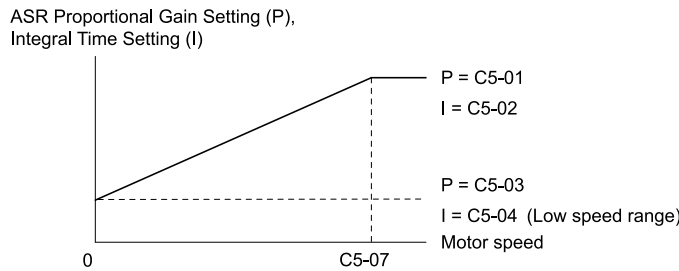


Figure 12.45 Low-speed/High-speed Gain Settings

6. Set the low-speed integral time. Run the motor at zero speed or low speed and decrease C5-04 [ASR Integral Time 2] until immediately before vibration starts to occur.
7. Set C5-07 [ASR Gain Switchover Frequency].
8. Check for oscillation when you run the motor at speeds more than the setting in C5-07.

**Note:**

- If overshooting occurs when acceleration ends, decrease the value set in C5-01 and increase the value set in C5-02.
- If undershoot occurs at stop, decrease C5-03 and increase C5-04.

**■ Use MFDI Switch for Proportional Gain**

You can use the input terminals set for ASR Gain (C5-03) Select [H1-xx = 77] to switch the proportional gains set with C5-01 and C5-03. When the configured input terminal is deactivated, the proportional gain set for C5-01 is selected. When the terminal is activated, the proportional gain set for C5-03 is selected. The proportional gain changes linearly over the time set in C5-02 [ASR Integral Time 1]. The signals from this MFDI are more important than C5-07 [ASR Gain Switchover Frequency].



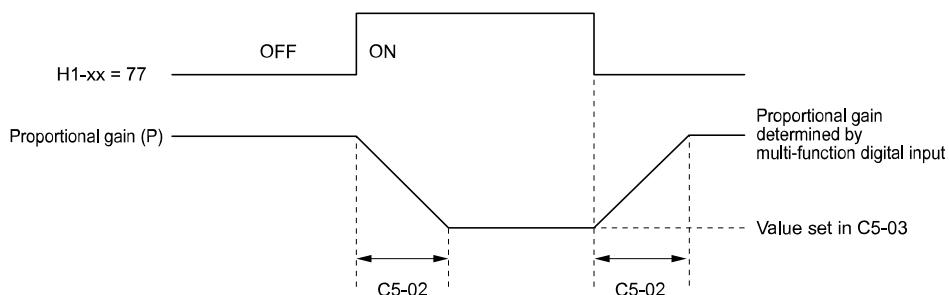


Figure 12.46 Proportional Gain through Multi-function Digital Input Switch

## ■ Speed Waveform Monitoring Method

To make small adjustments of ASR parameters, monitor the speed waveforms when you make the adjustments. Table 12.38 shows example settings of parameters to monitor speed waveforms.

Table 12.38 Example Settings of MFAO Terminals to Monitor Speed Waveforms

| No.   | Name                             | Setting Value | Description  |
|-------|----------------------------------|---------------|--|
| H4-01 | Terminal AM Analog Output Select | 116           | Lets you use terminal AM to monitor <i>UI-16</i> [SFS Output Frequency]. |
| H4-02 | Terminal AM Analog Output Gain   | 100.0%        |  |
| H4-03 | Terminal AM Analog Output Bias   | 0.0%          |  |
| H4-07 | Terminal AM Signal Level Select  | 0             | Lets you monitor in a 0 V to 10 V range.                                 |

Based on this setting, MFAO terminal AM outputs the output frequency after SFS in a 0 V to 10 V (0% to 100%) range. The MFAO common is terminal AC:

Yaskawa recommends that you monitor the output frequency after SFS and the motor speed for delays in response and differences in reference values.

## ■ Adjust ASR Parameters

Use Table 12.39 to adjust ASR. The table lists parameters for motor 1. You can make the same changes to motor 2 parameters when you run a second motor.

### Note:

When adjusting the proportional gain and integral time, adjust the proportional gain first.

Table 12.39 ASR Response and Possible Solutions

| Problem  |   | Possible Solutions   |
|--|---|--|
| Speed response is slow.  |   | <ul style="list-style-type: none"> <li>• Increase C5-01/C5-03 [ASR Proportional Gain].</li> <li>• Decrease C5-02/C5-04 [ASR Integral Time].</li> </ul>   |
| Overshoot or undershoot occurs at the end of acceleration or deceleration.   |   | <ul style="list-style-type: none"> <li>• Decrease C5-01/C5-03.</li> <li>• Increase C5-02/C5-04.</li> </ul>   |
| Vibration and oscillation occur at constant speed.   |   | <ul style="list-style-type: none"> <li>• Decrease C5-01/C5-03.</li> <li>• Increase C5-02/C5-04.</li> <li>• Increase C5-06 [ASR Delay Time].</li> </ul>   |
| Oscillation at low speed and response is too slow at high speed.<br>Oscillation at high speed and response is too slow at low speed. | - | When A1-02 = 6 [Control Method Selection = AOLV/PM], use C5-01 to C5-04 to set the best ASR settings for high and low speed. Use C5-07 [ASR Gain Switchover Frequency] to switch the ASR proportional gain and ASR integral time as specified by the output frequency. |

### ■ C5-01: ASR Proportional Gain 1

| No. (Hex.)             | Name                    | Description   | Default (Range)                        |
|------------------------|-------------------------|---|--|
| C5-01<br>(021B)<br>RUN | ASR Proportional Gain 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the gain to adjust ASR response. | Determined by A1-02<br>(0.00 - 300.00) |

A higher gain provides a higher speed response. Usually, the gain increases with larger loads. Too much gain will cause vibration.

**Note:**

- When  $A1-02 = 0$  [Control Method Selection = V/f], set  $H6-01 = 3$  [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.
- The drive usually sets Motor 1 ASR with C5-01 and C5-02 [ASR Integral Time 1]. When you set  $H1-xx = 77$  [MFDI Function Select = ASR Gain Switch], you can switch between C5-01 and C5-03 [ASR Proportional Gain 2]. You can also use C5-01 as an alternative to C5-03 and C5-02 as an alternative to C5-04 when the speed is less than or equal to the frequency set in C5-07 [ASR Gain Switchover Frequency].
- The drive automatically adjusts C5-01 in ASR Tuning.

### ■ C5-02: ASR Integral Time 1

| No. (Hex.)             | Name                | Description   | Default (Range)                           |
|------------------------|---------------------|---|---|
| C5-02<br>(021C)<br>RUN | ASR Integral Time 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the ASR integral time. | Determined by A1-02<br>(0.000 - 60.000 s) |

When you increase the integral time, the responsiveness will decrease. An integral time that is too short can cause oscillation.

**Note:**

When  $A1-02 = 0$  [Control Method Selection = V/f], set  $H6-01 = 3$  [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

### ■ C5-03: ASR Proportional Gain 2

| No. (Hex.)             | Name                    | Description   | Default (Range)                        |
|------------------------|-------------------------|---|--|
| C5-03<br>(021D)<br>RUN | ASR Proportional Gain 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the gain to adjust ASR response. | Determined by A1-02<br>(0.00 - 300.00) |

A higher gain provides a higher speed response. Usually, the gain increases with larger loads. Too much gain will cause vibration.

**Note:**

When  $A1-02 = 0$  [Control Method Selection = V/f], set  $H6-01 = 3$  [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

### ■ C5-04: ASR Integral Time 2

| No. (Hex.)             | Name                | Description   | Default (Range)                           |
|------------------------|---------------------|---|---|
| C5-04<br>(021E)<br>RUN | ASR Integral Time 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the ASR integral time. | Determined by A1-02<br>(0.000 - 60.000 s) |

When you increase the integral time, the responsiveness will decrease. An integral time that is too short can cause oscillation.

**Note:**

When  $A1-02 = 0$  [Control Method Selection = V/f], set  $H6-01 = 3$  [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

### ■ C5-05: ASR Limit

| No. (Hex.)      | Name      | Description   | Default (Range)       |
|-----------------|-----------|---|-----------------------|
| C5-05<br>(021F) | ASR Limit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the ASR output limit where $E1-04$ [Maximum Output Frequency] is 100%. | 5.0%<br>(0.0 - 20.0%) |

If the motor rated slip is high, it is necessary to increase the setting for correct motor speed control. Use *U6-04 [ASR Output]* to make sure that ASR is operating at the limit set in this parameter. When ASR is operating at the limit, correctly set the encoder (PG) signal before you make changes to *C5-05*.

**Note:**

When *A1-02 = 0 [Control Method Selection = V/f]*, set *H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)]* to enable this parameter.

### ■ C5-06: ASR Delay Time

| No. (Hex.)      | Name           | Description  | Default (Range)                          |
|-----------------|----------------|--|--|
| C5-06<br>(0220) | ASR Delay Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the filter time constant of the torque reference output from the speed loop. Usually it is not necessary to change this setting. | Determined by A1-02<br>(0.000 - 0.500 s) |

If you have a load with low rigidity or if oscillation is a problem, decrease *C5-01* in 2-unit decrements or decrease *C5-06* in 0.001-unit decrements.

### ■ C5-07: ASR Gain Switchover Frequency

| No. (Hex.)      | Name                          | Description   | Default (Range)                              |
|-----------------|-------------------------------|---|--|
| C5-07<br>(0221) | ASR Gain Switchover Frequency | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency where the drive will switch between these parameters:<br><i>C5-01 and C5-03 [ASR Proportional Gain 1/2]</i><br><i>C5-02 and C5-04 [ASR Integral Time 1/2]</i> | Determined by A1-02<br>(Determined by A1-02) |

Switching the proportional gain and integral time in the low or high speed range can help operation become stable. A good switching point is 80% of the frequency where oscillation occurs or at 80% of the maximum output frequency.

**Note:**

An MFDI set for *H1-xx = 77 [MFDI Function Selection = ASR Gain (C5-03) Select]* will have priority over the ASR gain switching frequency.

### ■ C5-08: ASR Integral Limit

| No. (Hex.)      | Name               | Description  | Default (Range)    |
|-----------------|--------------------|--|--------------------|
| C5-08<br>(0222) | ASR Integral Limit | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Set the upper limit of the ASR integral amount as a percentage of the rated load. | 400%<br>(0 - 400%) |

### ■ C5-12: Integral Operation @ Accel/Decel

| No. (Hex.)      | Name                             | Description  | Default (Range) |
|-----------------|----------------------------------|--|-----------------|
| C5-12<br>(0386) | Integral Operation @ Accel/Decel | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets ASR integral operation during acceleration and deceleration. | 0<br>(0, 1)     |

Set this parameter to *1* to keep the motor speed near the frequency reference during operation and acceleration/ deceleration.

**Note:**

- When *A1-02 = 0 [Control Method Selection = V/f]*, set *H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)]* to enable this parameter.
- If you enable integral control, overshoot or undershoot can occur when acceleration or deceleration complete. If there are problems with overshooting and undershooting, set this parameter to *0*.

#### 0 : Disabled

The drive will not enable integral operation during acceleration or deceleration. The drive always enables integral operation during constant speed.

#### 1 : Enabled

Integral operation is always enabled.

■ **C5-29: Speed Control Response**

| No. (Hex.)          | Name                   | Description  | Default (Range) |
|---------------------|------------------------|--|-----------------|
| C5-29 (0B18) Expert | Speed Control Response | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the level of speed control responsiveness. Usually it is not necessary to change this setting. | 1 (0, 1)        |

If a high level of speed control responsiveness is necessary, set  $C5-29 = 1$ , then adjust the speed control (ASR) parameter.

**0 : Standard**

**1 : High Performance 1**

■ **C5-39: ASR Primary Delay Time Const 2**

| No. (Hex.)   | Name                           | Description  | Default (Range)           |
|--------------|--------------------------------|--|---------------------------|
| C5-39 (030D) | ASR Primary Delay Time Const 2 | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the filter time constant used when the torque reference is output from ASR. Usually it is not necessary to change this parameter. | 0.000 s (0.000 - 0.500 s) |

If you have a load with low rigidity or if oscillation is a problem, increase this setting in 0.01 unit increments.

◆ **C6: Duty & Carrier Frequency**

*C6 parameters* are used to set the selection of drive duty rating, selection of carrier frequency, and upper and lower limits of carrier frequencies.

■ **C6-01: Normal / Heavy Duty Selection**

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| C6-01 (0223) | Normal / Heavy Duty Selection | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the drive duty rating. | 0 (0, 1)        |

**0 : Heavy Duty Rating**

The overload tolerance is 150% of the rated output current for 60 seconds.

**1 : Normal Duty Rating**

The overload tolerance is 110% of the rated output current for 60 seconds.

There are two types of load ratings for this product depending on the load characteristics of the application: Heavy Duty Rating (HD) and Normal Duty Rating (ND).

The drive rated output current, overload tolerance, and acceleration stall prevention level change when the duty rating changes. Set the drive to agree with the duty rating of the selected drive capacity. In HD, the tolerance is 150% overload for 60 seconds. In ND, the tolerance is 110% overload for 60 seconds. The rated output current for ND drives is higher than the rated output current for HD drives. Refer to [Model Specifications \(Single-Phase 200 V Class\) on page 314](#), [Model Specifications \(Three-Phase 200 V Class\) on page 315](#), and [Model Specifications \(Three-Phase 400 V Class\) on page 319](#) for more information about the rated output current.

**Table 12.40 Differences between Heavy Duty Rating and Normal Duty Rating**


| Item                 | Heavy Duty Rating (HD) | Normal Duty Rating (ND) |
|----------------------|------------------------|-------------------------|
| C6-01 Setting        | 0                      | 1                       |
| Load Characteristics |                        |                         |

| Item                             | Heavy Duty Rating (HD)  | Normal Duty Rating (ND)   |
|----------------------------------|---|---|
| Application                      | A high overload tolerance is necessary during start up, acceleration, deceleration, and equivalent conditions.<br><ul style="list-style-type: none"> <li>• Extruder</li> <li>• Conveyor</li> <li>• Cranes and hoists</li> <li>• Constant torque or high overload capacity are necessary.</li> </ul> | Overload tolerance is not necessary.<br><ul style="list-style-type: none"> <li>• Fan</li> <li>• Pump</li> <li>• Blower</li> </ul> |
| Overload Tolerance               | 150% - 60 seconds   | 110% - 60 seconds   |
| Stall Prevent Level during Accel | 150%  | 120%  |
| Stall Prevent Level during Run   | 150%  | 120%  |
| Carrier Frequency                | 2 kHz   | 2 kHz Swing-PWM   |

**Note:**

- Set the stall prevention level during acceleration with *L3-02* and the stall prevention level during run with *L3-06*.
- Changing *C6-01* also changes the maximum capacity of applicable drive motors. The drive automatically changes the setting values *E2-xx* and *E4-xx* to applicable values. The drive also automatically changes these parameters that depend on motor output:  
–b8-04 [Energy Saving Coefficient Value]  
–L2-03 [Minimum Baseblock Time]  
–L3-24 [Motor Accel Time @ Rated Torque]  
–n5-02 [Motor Inertia Acceleration Time]

## ■ C6-02: Carrier Frequency Selection

| No. (Hex.)      | Name                        | Description   | Default (Range)  |
|-----------------|-----------------------------|---|--|
| C6-02<br>(0224) | Carrier Frequency Selection | <br>Sets the carrier frequency for the transistors in the drive. | Determined by A1-02, C6-01, and o2-04<br>(Determined by A1-02) |

Changes to the switching frequency will decrease audible noise and decrease leakage current.

**Note:**

Increasing the carrier frequency to more than the default setting will automatically decrease the drive current rating.

**1 : 2.0 kHz**

**2 : 5.0 kHz (4.0 kHz for AOLV/PM)**

**3 : 8.0 kHz**

**4 : 10.0 kHz**

**5 : 12.5 kHz**

**6 : 15.0 kHz**

**7 : Swing PWM1 (Audible Sound 1)**

**8 : Swing PWM2 (Audible Sound 2)**

**9 : Swing PWM3 (Audible Sound 3)**

**A : Swing PWM4 (Audible Sound 4)**

**B : Leakage Current Rejection PWM**

Set this when the wiring distance between the drive and motor is long and there is a fault in the current monitor or the drive detects and alarm because of the effect of a leakage current.

The carrier frequency is equivalent to 2.0 kHz.

**F : User Defined (C6-03 to C6-05)**

Use *C6-03* to *C6-05* to set detailed setting values.

**Note:**

- The setting range changes when the *A1-02* [Control Method Selection] value changes:  
–5, 8 [OLV/PM, EZOLV]: Settings 7 to A are not available.  
–6 [AOLV/PM]: Only 6 [15.0 kHz] is available.
- The carrier frequency for Swing PWM 1 is equivalent to 2.0 kHz. Swing PWM applies a special PWM pattern to decrease the audible noise.

**Table 12.41 Guidelines for Carrier Frequency Parameter Setup**

| Symptom   | Remedy   |
|---|--|
| Speed and torque are not stable at low speed.   | Decrease the carrier frequency.  |
| Speed and torque are not stable at low speed.   | Decrease the carrier frequency.  |
| Too much leakage current from the drive.        | Decrease the carrier frequency.  |
| Wiring between the drive and motor is too long. | Decrease the carrier frequency.<br><b>Note:</b><br>If the motor cable is too long, it can be necessary to decrease the carrier frequency. Refer to Table 12.42 for the wiring distance and decrease the carrier frequency.   |
| Audible motor noise is too loud.                | Increase the carrier frequency. Use Swing PWM.<br><b>Note:</b><br>The default carrier frequency in ND is $C6-02 = 7$ [Swing PWM1 (Audible Sound 1)], with a 2 kHz base. You can increase the carrier frequency in Normal Duty mode, but this will also decrease the drive rated current. |

**Table 12.42 Wiring Distance**

| Wiring Distance                     | 50 mm (164 ft) Maximum | 100 m (328 ft) Maximum  | More than 100 m (328 ft) |
|-------------------------------------|------------------------|-------------------------|--------------------------|
| C6-02 [Carrier Frequency Selection] | 1 to F (up to 15 kHz)  | 1 to 2 (up to 5 kHz), 7 | 1 (up to 2 kHz), 7       |

**Note:**

- When the wiring length is longer than 100 m (328 ft), set  $A1-02 = 0$  [V/f].
- The maximum wiring cable length between the drive and a PM motor is 100 m (328 ft).
- If the cable length between the drive and the motor is too long when  $A1-02 = 6$ , set  $A1-02 = 5$ .

**■ C6-03: Carrier Frequency Upper Limit**

| No. (Hex.)   | Name                          | Description  | Default (Range)                      |
|--------------|-------------------------------|--|--------------------------------------|
| C6-03 (0225) | Carrier Frequency Upper Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the upper limit of the carrier frequency. Set $C6-02 = F$ [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter. | Determined by C6-02 (1.0 - 15.0 kHz) |


**Setting a Fixed User-Defined Carrier Frequency**

When you cannot use C6-02 to set a carrier frequency between set selectable values, you can set the value in C6-03. The carrier frequency will be fixed to the value set to C6-03.

When  $A1-02 = 0$  [Control Method Selection = V/f], set  $C6-03 = C6-04$  [Carrier Frequency Lower Limit] to fix the carrier frequency.

**Setting a Variable Carrier Frequency to Agree with the Output Frequency**

When  $A1-02 = 0$ , set C6-03, C6-04, and C6-05 [Carrier Freq Proportional Gain] as shown in Figure 12.47 to make the carrier frequency change linearly with the output frequency.

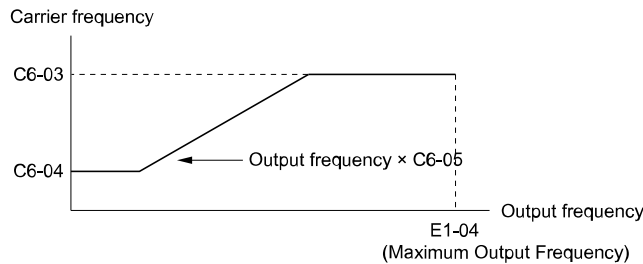

**Figure 12.47 Setting a Variable Carrier Frequency to Agree with the Output Frequency**

**Note:**

- When  $C6-05 \leq 7$ , the drive disables C6-04. The carrier frequency is fixed to the value set to C6-03.
- The drive detects oPE11 [Carrier Frequency Setting Error] when these conditions are correct at the same time:
  - $C6-05 \geq 6$
  - $C6-04 \geq C6-03$

**■ C6-04: Carrier Frequency Lower Limit**

| No. (Hex.)   | Name                          | Description  | Default (Range)                      |
|--------------|-------------------------------|--|--------------------------------------|
| C6-04 (0226) | Carrier Frequency Lower Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower limit of the carrier frequency. Set $C6-02 = F$ [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter. | Determined by C6-02 (1.0 - 15.0 kHz) |

Set *C6-03* [Carrier Frequency Upper Limit], *C6-04*, and *C6-05* [Carrier Freq Proportional Gain] to make the carrier frequency change linearly with the output frequency.

**Note:**

The drive detects *oPE11* [Carrier Frequency Setting Error] when these conditions are correct at the same time:

- $C6-04 \geq C6-03$
- $C6-05 \geq 6$

### ■ C6-05: Carrier Freq Proportional Gain

| No. (Hex.)   | Name                           | Description  | Default (Range)              |
|--------------|--------------------------------|--|------------------------------|
| C6-05 (0227) | Carrier Freq Proportional Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the proportional gain for the carrier frequency. Set <i>C6-02</i> = <i>F</i> [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] to set this parameter. | Determined by C6-02 (0 - 99) |

Set *C6-03* [Carrier Frequency Upper Limit], *C6-04* [Carrier Frequency Lower Limit], and *C6-05* to make the carrier frequency change linearly with the output frequency.

### ■ C6-09: Carrier Freq at Rotational Tune

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| C6-09 (022B) | Carrier Freq at Rotational Tune | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the Auto-Tuning carrier frequency. Usually it is not necessary to change this setting. | 0 (0, 1)        |

If *C6-09* = 0 and you do Auto-Tuning on a high frequency motor or low impedance motor, it can cause *oC* [Overcurrent]. To prevent *oC*, increase the carrier frequency value, set *C6-09* = 1, then do Auto-Tuning.

The procedure to set the carrier frequency when the *A1-02* [Control Method Selection] setting changes.

- When *A1-02* = 2 [OLV], set *C6-02* = *F* [Carrier Frequency Selection = User Defined (C6-03 to C6-05)] and then increase the value set to *C6-03* [Carrier Frequency Upper Limit].
- When *A1-02* = 5 or 6 [OLV/PM or AOLV/PM], use *C6-02* to increase the carrier frequency.

#### 0 : 5 kHz

**Note:**

When *A1-02* = 5 or 6, the carrier frequency is 2 kHz.

#### 1 : Use C6-03

**Note:**

When *A1-02* = 5 or 6, the carrier frequency is the value set to *C6-02*.

## 12.5 d: References

*d* parameters [References] set the frequency reference input method and dead band range. They also set torque control, field weakening, and field forcing functions.

**WARNING! Sudden Movement Hazard.** Use fast stop circuits to safely and quickly stop the drive. After you wire the fast stop circuits, you must check their operation. Test the operation of the fast stop function before you use the drive. If you do not test the fast stop circuit before you operate the drive, it can cause serious injury or death.

**WARNING! Sudden Movement Hazard.** When you use the drive in a lifting application, you must also install external safety circuitry. The drive does not have protection against accidental load drops in lifting applications. Install electrical and/or mechanical safety circuit mechanisms that are isolated from the drive circuitry. If you do not use external safety circuitry, the drive could drop the load and cause serious injury or death.

### ◆ d1: Frequency Reference

Figure 12.48 shows the frequency reference input method, command source selection method, and priority descriptions.

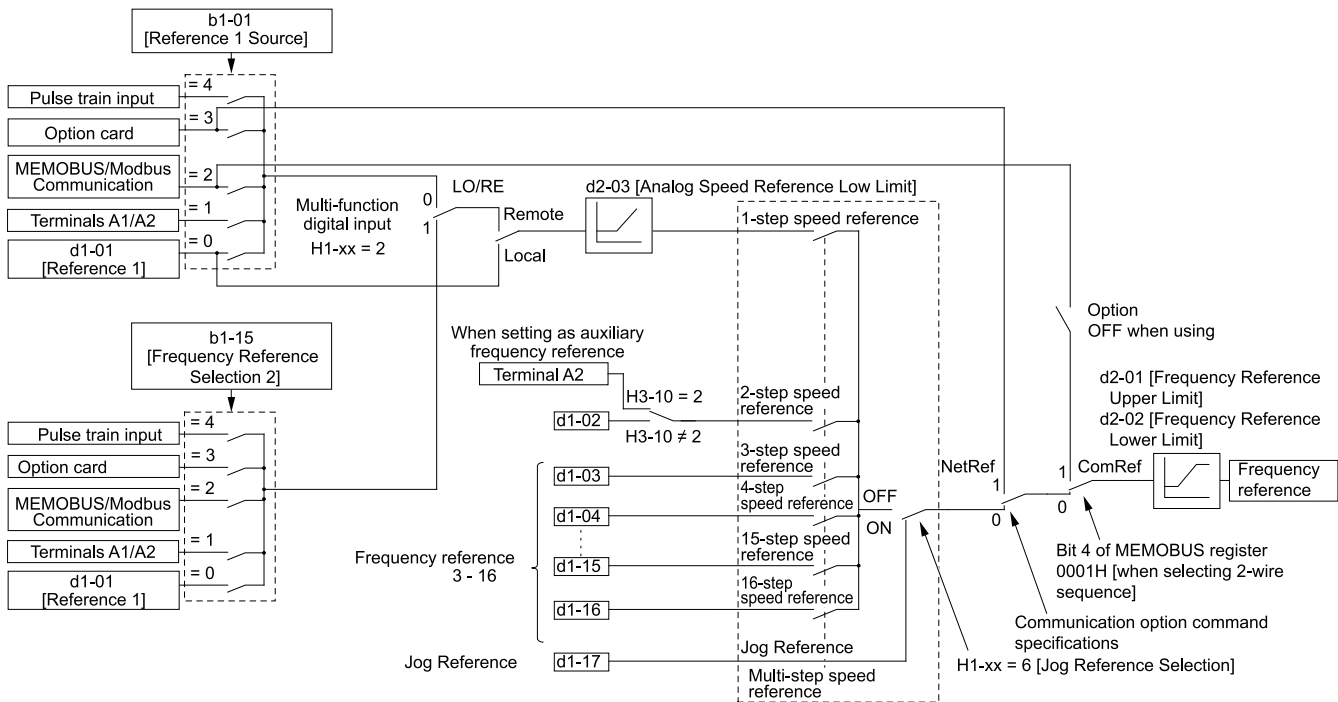


Figure 12.48 Frequency Reference Setting Hierarchy

### ■ Multi-Step Speed Operation

The drive has a multi-step speed operation function that can set many frequency references in advance. Set frequency references in *d1-xx* parameters. You can select the set frequency references with MFDI signals from an external source. Activate and deactivate the digital input to select the frequency reference to change the motor speed in steps. You can use the 16-step frequency reference and one Jog Frequency Reference (JOG command) to switch the speed to the maximum 17-step speeds.

#### Note:

- The Jog Frequency Reference (JOG command) overrides all other frequency references.
- You can use the MFDI to switch the frequency reference when the motor is running. The drive will apply the enabled acceleration and deceleration times.
- The default settings for Multi-Step Speed Reference 1 (master frequency reference) and Multi-Step Speed Reference 2 (auxiliary frequency reference) are the analog frequency reference. Also, voltage command input terminal A1 and current input terminal A2 for Multi-Step Speed Reference 1 (master frequency reference) are added internally by default. The drive uses Multi-Step Speed Reference 1 when the signal is connected to an analog input terminal.

### ■ Setting Procedures for Multi-step Speed Operation

#### Use an Analog Input as Reference 1 and 2

This section gives information about the procedures to set these examples:

- Multi-Step Speed 6 (6 types of frequency references)



- When you set the voltage input of analog inputs from terminals A1 and A2 to 0 V to 10 V (Lower Limit at 0)

| Procedure | Configuration Parameter           | Task Contents   |
|-----------|-----------------------------------|---|
| 1         | Reference 1                       | <ol style="list-style-type: none"> <li>Sets <math>b1-01 = 1</math> [Frequency Reference Selection 1 = Analog Input].</li> <li>Sets <math>H3-02 = 0</math> [Terminal A1 Function Selection = Frequency Reference].</li> <li>Sets <math>H3-01 = 0</math> [Terminal A1 Signal Level Select = 0 V to 10 V (Lower Limit at 0)].</li> </ol> |
| 2         | Reference 2                       | <ol style="list-style-type: none"> <li>Sets <math>H3-10 = 2</math> [Terminal A2 Function Selection = Auxiliary Frequency Reference 1].</li> <li>Sets <math>H3-09 = 0</math> [Terminal A2 Signal Level Select = 0 V to 10 V (Lower Limit at 0)].</li> </ol>  |
| 3         | Signal type of analog input       | Set DIP switch S1 on the control circuit board to the V-side (voltage) to set terminal A2 only for voltage input.<br><b>Note:</b><br>Set this before you energize the drive.  |
| 4         | Reference 3                       | Sets the value of $d1-03$ [Reference 3].  |
| 5         | Reference 4                       | Sets the value of $d1-04$ [Reference 4].  |
| 6         | Reference 5                       | Sets the value of $d1-05$ [Reference 5].  |
| 7         | Jog Reference                     | Sets $d1-17$ [Jog Reference] to the jog speed.  |
| 8         | External digital input (3 inputs) | Set the Multi-Step Speed Reference 1 to 3 [ $H1-xx = 3, 4, 5$ ] to one of the MFDI terminals S1 to S7.  |
| 9         | JOG command                       | Set the Jog Reference Selection [ $H1-xx = 6$ ] to one of the MFDI terminals S1 to S7.  |

### Use the Maximum 17-Step Speed with All Digital Inputs

This section is the procedure to set the 17-step speeds (17 types of frequency references) without an analog input.

| Procedure | Configuration Parameter           | Task Contents  |
|-----------|-----------------------------------|--|
| 1         | Analog reference                  | <ol style="list-style-type: none"> <li>Sets <math>H3-02 = F</math> [Terminal A1 Function Selection = Not Used], and disables the analog reference.</li> <li>Sets <math>H3-10 = F</math> [Terminal A2 Function Selection = Not Used], and disables the analog reference.</li> </ol> |
| 2         | Reference 2 to 16                 | Sets the values of $d1-02$ to $d1-16$ [Reference 2 to 16].   |
| 3         | Jog Reference                     | Sets $d1-17$ [Jog Reference] to the jog speed.   |
| 4         | External digital input (4 inputs) | Set Multi-Step Speed Reference 1 to 4 [ $H1-xx = 3, 4, 5, 32$ ] to one of the MFDI terminals S1 to S7.   |
| 5         | JOG command                       | Set the Jog Reference Selection [ $H1-xx = 6$ ] to one of the MFDI terminals S1 to S7.   |

### Multi-step Speed Operation Combinations

Refer to [Table 12.43](#) and [Figure 12.49](#) for information about multi-step speed reference combinations. The selected frequency reference changes when the combination of digital input signals from an external source changes.

**Table 12.43 Multi-step Speed Reference and MFDI Terminal Combinations**

| Related Parameters                         | Multi-Step Speed Reference 1<br>$H1-xx = 3$ | Multi-Step Speed Reference 2<br>$H1-xx = 4$ | Multi-Step Speed Reference 3<br>$H1-xx = 5$ | Multi-Step Speed Reference 4<br>$H1-xx = 32$ | Jog Reference<br>$H1-xx = 6$ |
|--|---|---|---|--|------------------------------|
| Reference 1 (set in $b1-01$ )              | OFF   | OFF   | OFF   | OFF  | OFF                          |
| Reference 2 ( $d1-02$ or terminals A1, A2) | ON  | OFF   | OFF   | OFF  | OFF                          |
| Reference 3 ( $d1-03$ or terminals A1, A2) | OFF   | ON  | OFF   | OFF  | OFF                          |
| Reference 4 ( $d1-04$ )                    | ON  | ON  | OFF   | OFF  | OFF                          |
| Reference 5 ( $d1-05$ )                    | OFF   | OFF   | ON  | OFF  | OFF                          |
| Reference 6 ( $d1-06$ )                    | ON  | OFF   | ON  | OFF  | OFF                          |
| Reference 7 ( $d1-07$ )                    | OFF   | ON  | ON  | OFF  | OFF                          |
| Reference 8 ( $d1-08$ )                    | ON  | ON  | ON  | OFF  | OFF                          |
| Reference 9 ( $d1-09$ )                    | OFF   | OFF   | OFF   | ON   | OFF                          |
| Reference 10 ( $d1-10$ )                   | ON  | OFF   | OFF   | ON   | OFF                          |
| Reference 11 ( $d1-11$ )                   | OFF   | ON  | OFF   | ON   | OFF                          |
| Reference 12 ( $d1-12$ )                   | ON  | ON  | OFF   | ON   | OFF                          |
| Reference 13 ( $d1-13$ )                   | OFF   | OFF   | ON  | ON   | OFF                          |
| Reference 14 ( $d1-14$ )                   | ON  | OFF   | ON  | ON   | OFF                          |
| Reference 15 ( $d1-15$ )                   | OFF   | ON  | ON  | ON   | OFF                          |

| Related Parameters       | Multi-Step Speed Reference 1<br>H1-xx = 3 | Multi-Step Speed Reference 2<br>H1-xx = 4 | Multi-Step Speed Reference 3<br>H1-xx = 5 | Multi-Step Speed Reference 4<br>H1-xx = 32 | Jog Reference<br>H1-xx = 6 |
|--------------------------|---|---|---|--|----------------------------|
| Reference 16 (d1-16)     | ON  | ON  | ON  | ON   | OFF                        |
| Jog Reference (d1-17) *1 | -   | -   | -   | -  | ON                         |

\*1 The Jog Frequency Reference (JOG command) overrides all other frequency references.

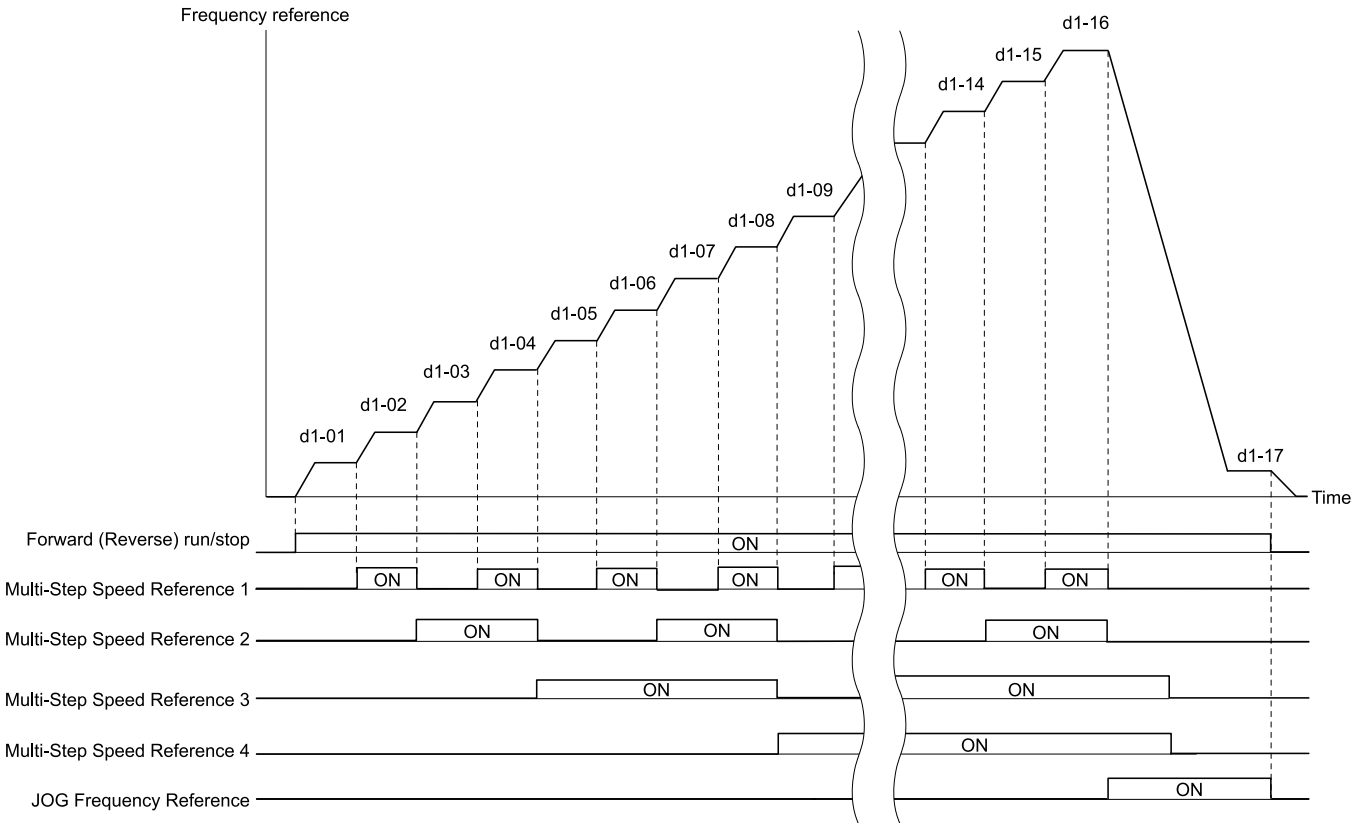


Figure 12.49 Time Chart for Multi-step Speed Reference/JOG Reference

### ■ d1-01: Reference 1

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-01<br>(0280)<br>RUN | Reference 1 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change. Calculate the upper limit value with this formula:  
Upper limit value = (E1-04) × (d2-01) / 100
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- To set d1-01 to 1-step speed parameter in a multi-step speed operation, set b1-01 = 0 [Frequency Reference Selection 1 = Keypad].

### ■ d1-02: Reference 2

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-02<br>(0281)<br>RUN | Reference 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- To set d1-02 to Multi-Step Speed 2, set H3-02 and 3-10 ≠ 2 [MFAI Function Select ≠ Auxiliary Frequency Reference 1].

### ■ d1-03: Reference 3

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-03<br>(0282)<br>RUN | Reference 3 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- To set d1-03 to Multi-Step Speed 3, set H3-02 and H3-10 ≠ 3 [MFAI Function Select ≠ Auxiliary Frequency Reference 2].

### ■ d1-04: Reference 4

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-04<br>(0283)<br>RUN | Reference 4 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 4.

### ■ d1-05: Reference 5

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-05<br>(0284)<br>RUN | Reference 5 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 5.

### ■ d1-06: Reference 6

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-06<br>(0285)<br>RUN | Reference 6 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 6.

### ■ d1-07: Reference 7

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-07<br>(0286)<br>RUN | Reference 7 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 7.

### ■ d1-08: Reference 8

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-08<br>(0287)<br>RUN | Reference 8 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from <i>o1-03</i> [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the *E1-04* [Maximum Output Frequency] and *d2-01* [Frequency Reference Upper Limit] values change.
- When *A1-02* = 6 [Control Method Selection = AOLV/PM], the drive sets *o1-03* = 1 [0.01% (100% = *E1-04*)].
- This parameter sets the frequency reference of Multi-Step Speed 8.

### ■ d1-09: Reference 9

| No. (Hex.)             | Name        | Description   | Default (Range)               |
|------------------------|-------------|---|-------------------------------|
| d1-09<br>(0288)<br>RUN | Reference 9 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from <i>o1-03</i> [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the *E1-04* [Maximum Output Frequency] and *d2-01* [Frequency Reference Upper Limit] values change.
- When *A1-02* = 6 [Control Method Selection = AOLV/PM], the drive sets *o1-03* = 1 [0.01% (100% = *E1-04*)].
- This parameter sets the frequency reference of Multi-Step Speed 9.

### ■ d1-10: Reference 10

| No. (Hex.)             | Name         | Description   | Default (Range)               |
|------------------------|--------------|---|-------------------------------|
| d1-10<br>(028B)<br>RUN | Reference 10 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from <i>o1-03</i> [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the *E1-04* [Maximum Output Frequency] and *d2-01* [Frequency Reference Upper Limit] values change.
- When *A1-02* = 6 [Control Method Selection = AOLV/PM], the drive sets *o1-03* = 1 [0.01% (100% = *E1-04*)].
- This parameter sets the frequency reference of Multi-Step Speed 10.

### ■ d1-11: Reference 11

| No. (Hex.)             | Name         | Description   | Default (Range)               |
|------------------------|--------------|---|-------------------------------|
| d1-11<br>(028C)<br>RUN | Reference 11 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from <i>o1-03</i> [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the *E1-04* [Maximum Output Frequency] and *d2-01* [Frequency Reference Upper Limit] values change.
- When *A1-02* = 6 [Control Method Selection = AOLV/PM], the drive sets *o1-03* = 1 [0.01% (100% = *E1-04*)].
- This parameter sets the frequency reference of Multi-Step Speed 11.

### ■ d1-12: Reference 12

| No. (Hex.)             | Name         | Description   | Default (Range)               |
|------------------------|--------------|---|-------------------------------|
| d1-12<br>(028D)<br>RUN | Reference 12 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from <i>o1-03</i> [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the *E1-04* [Maximum Output Frequency] and *d2-01* [Frequency Reference Upper Limit] values change.
- When *A1-02* = 6 [Control Method Selection = AOLV/PM], the drive sets *o1-03* = 1 [0.01% (100% = *E1-04*)].
- This parameter sets the frequency reference of Multi-Step Speed 12.

### ■ d1-13: Reference 13

| No. (Hex.)             | Name         | Description   | Default (Range)               |
|------------------------|--------------|---|-------------------------------|
| d1-13<br>(028E)<br>RUN | Reference 13 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 13.

### ■ d1-14: Reference 14

| No. (Hex.)             | Name         | Description   | Default (Range)               |
|------------------------|--------------|---|-------------------------------|
| d1-14<br>(028F)<br>RUN | Reference 14 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 14.

### ■ d1-15: Reference 15

| No. (Hex.)             | Name         | Description   | Default (Range)               |
|------------------------|--------------|---|-------------------------------|
| d1-15<br>(0290)<br>RUN | Reference 15 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 15.

### ■ d1-16: Reference 16

| No. (Hex.)             | Name         | Description   | Default (Range)               |
|------------------------|--------------|---|-------------------------------|
| d1-16<br>(0291)<br>RUN | Reference 16 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the frequency reference in the units from o1-03 [Frequency Display Unit Selection]. | 0.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].
- This parameter sets the frequency reference of Multi-Step Speed 16.

### ■ d1-17: Jog Reference

| No. (Hex.)             | Name          | Description  | Default (Range)               |
|------------------------|---------------|--|-------------------------------|
| d1-17<br>(0292)<br>RUN | Jog Reference | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the Jog frequency reference in the units from o1-03 [Frequency Display Unit Selection]. Set H1-xx = 6 [MFDI Function Select = Jog Reference Selection] to use the Jog frequency reference. | 6.00 Hz<br>(0.00 - 590.00 Hz) |

**Note:**

- The upper limit value changes when the E1-04 [Maximum Output Frequency] and d2-01 [Frequency Reference Upper Limit] values change.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive sets o1-03 = 1 [0.01% (100% = E1-04)].

## ◆ d2: Reference Limits

*d2 parameters* set the upper and lower frequency limits to control the motor speed. Apply these parameters to for example, run the motor at low-speed due to mechanical strength concerns, or if the motor should not be run at low speed because of lubrication issues with the gears and bearings.

The upper frequency limit is set in *d2-01* [*Frequency Reference Upper Limit*] and the lower limit is set in *d2-02* [*Frequency Reference Lower Limit*].

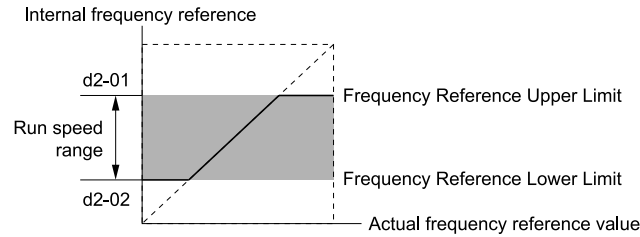


Figure 12.50 Upper and Lower Frequency Limits

### ■ d2-01: Frequency Reference Upper Limit

| No. (Hex.)   | Name                            | Description   | Default (Range)          |
|--------------|---------------------------------|---|--------------------------|
| d2-01 (0289) | Frequency Reference Upper Limit | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets maximum limit for all frequency references. The maximum output frequency is 100%. | 100.0%<br>(0.0 - 110.0%) |

When the frequency reference is more than the value set in *d2-01* the drive will continue to operate at the value set in *d2-01*.

### ■ d2-02: Frequency Reference Lower Limit

| No. (Hex.)   | Name                            | Description   | Default (Range)        |
|--------------|---------------------------------|---|------------------------|
| d2-02 (028A) | Frequency Reference Lower Limit | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets minimum limit for all frequency references. The maximum output frequency is 100%. | 0.0%<br>(0.0 - 110.0%) |

When the frequency reference is less than the value set in *d2-02*, the drive will continue to operate at the value set in *d2-02*. The motor will accelerate to the *d2-02* value after the drive receives a Run command and a lower frequency reference than *d2-02* has been entered.

### ■ d2-03: Analog Frequency Ref Lower Limit

| No. (Hex.)   | Name                             | Description   | Default (Range)        |
|--------------|----------------------------------|---|------------------------|
| d2-03 (0293) | Analog Frequency Ref Lower Limit | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the lower limit for the master frequency reference (the first frequency of the multi-step speed reference) as a percentage. The maximum output frequency is 100%. | 0.0%<br>(0.0 - 110.0%) |

This parameter does not change the lower limit of Jog reference, frequency reference for multi-step speed operation, or the auxiliary frequency reference.

The drive operates at the value set in *d2-03* when the frequency reference decreases to less than the value set in *d2-03*.

**Note:**

When lower limits are set to parameters *d2-02* [*Frequency Reference Lower Limit*] and *d2-03*, the drive uses the larger value as the lower limit.

## ◆ d3: Jump Frequency

The Jump frequency is a function that sets the dead band to a specified frequency band. If a machine that operated at constant speed is operated with variable speed, it can make resonance. To operate the machine without resonance from the natural frequency of the machinery mechanical system, use a frequency band jump.

You can program the drive to have three different Jump frequencies. Set *d3-01* to *d3-03* [*Jump Frequencies*] to the median value for the jumped frequency and set *d3-04* [*Jump Frequency Width*] to the Jump frequency width.

When you input a frequency reference that is the same as or near the Jump frequency width, the frequency reference changes automatically.

The drive accelerates or decelerates the motor smoothly until the frequency reference is not in the range of the Jump frequency band. The drive will use the active accel/decel time to go through the specified dead band range. If the frequency reference is not in the range of the Jump frequency band, switch to constant speed operation.

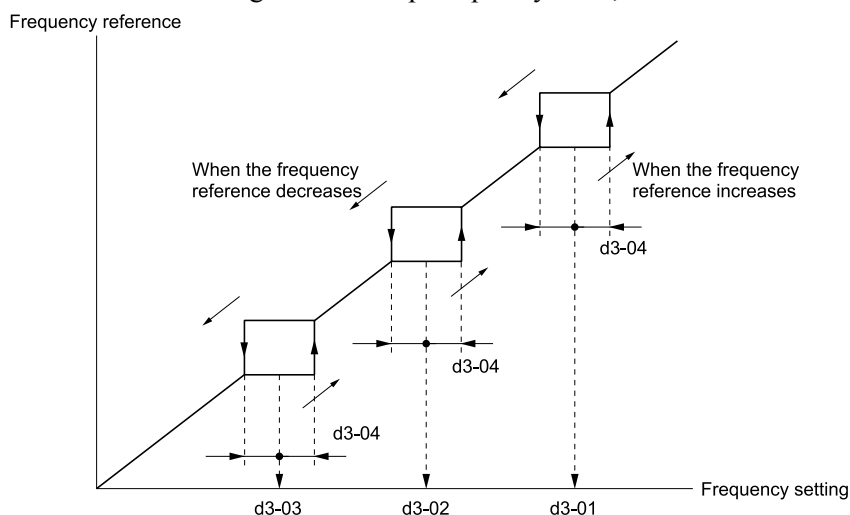


Figure 12.51 Jump Frequency

**Note:**

- When you set Jump Frequencies 1 to 3, make sure that the parameters do not overlap.
- When the drive is in the range of the Jump frequency, the frequency reference changes automatically. When Jump is executed, the output frequency changes smoothly as specified by the values set in C1-01 [Acceleration Time 1] and C1-02 [Deceleration Time 1].

### ■ d3-01: Jump Frequency 1

| No. (Hex.)      | Name             | Description   | Default (Range)                 |
|-----------------|------------------|---|---------------------------------|
| d3-01<br>(0294) | Jump Frequency 1 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the median value of the frequency band that the drive will avoid. | 0.0 Hz<br>(Determined by A1-02) |

**Note:**

Set this parameter to 0.0 Hz to disable the Jump frequency.

### ■ d3-02: Jump Frequency 2

| No. (Hex.)      | Name             | Description   | Default (Range)                 |
|-----------------|------------------|---|---------------------------------|
| d3-02<br>(0295) | Jump Frequency 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the median value of the frequency band that the drive will avoid. | 0.0 Hz<br>(Determined by A1-02) |

**Note:**

Set this parameter to 0.0 Hz to disable the Jump frequency.

### ■ d3-03: Jump Frequency 3

| No. (Hex.)      | Name             | Description   | Default (Range)                 |
|-----------------|------------------|---|---------------------------------|
| d3-03<br>(0296) | Jump Frequency 3 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the median value of the frequency band that the drive will avoid. | 0.0 Hz<br>(Determined by A1-02) |

**Note:**

Set this parameter to 0.0 Hz to disable the Jump frequency.

### ■ d3-04: Jump Frequency Width

| No. (Hex.)      | Name                 | Description  | Default (Range)                 |
|-----------------|----------------------|--|---------------------------------|
| d3-04<br>(0297) | Jump Frequency Width | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the width of the frequency band that the drive will avoid. | 1.0 Hz<br>(Determined by A1-02) |

## ◆ d4: Frequency Ref Up/Down & Hold


The *d4 parameters* set the Frequency Reference Hold function and Up/Down and Up/Down 2 commands.

**WARNING! Sudden Movement Hazard.** When you use the drive in a lifting application, you must also install external safety circuitry. The drive does not have protection against accidental load drops in lifting applications. Install electrical and/or mechanical safety circuit mechanisms that are isolated from the drive circuitry. If you do not use external safety circuitry, the drive could drop the load and cause serious injury or death.

**WARNING! Sudden Movement Hazard.** When you use a mechanical holding brake with the drive in a lifting application, you must close the brake if an input terminal triggers the Baseblock command to stop drive output. If you enter the baseblock command, the motor will suddenly coast and the load will slip, which can cause serious injury or death.

- **Frequency Reference Hold Function Command:** This acceleration/deceleration ramp hold command uses an MFDI to momentarily stop the acceleration/deceleration of the motor, and continues to operate the motor at the output frequency at which the command reference was input. Turn OFF the acceleration/deceleration ramp hold command to continue acceleration/deceleration.  
With a crane for example, use the function and a 2-stage push button to stop acceleration and operate at low speed with one of the output frequencies.
- **Up/Down command:** The Up/Down command is a function to activate and deactivate an MFDI to increase and decrease the frequency reference. The Up/Down command overrides frequency references from the analog input terminal, pulse train input terminal, and keypad.
- **Up/Down 2 command:** The Up/Down 2 command is a function that adds a set bias value to the frequency reference to accelerate or decelerate. The Up/Down 2 command activates and deactivates the MFDI to add a bias value.

### ■ d4-01: Freq Reference Hold Selection

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| d4-01 (0298) | Freq Reference Hold Selection | <br>Sets the function that saves the frequency reference or the frequency bias (Up/Down 2) after a Stop command or when de-energizing the drive. | 0<br>(0, 1)     |

Set *H1-xx [MFDI Function Selection]* to one of these values to enable this parameter:

- *A [Accel/Decel Ramp Hold]*
- *10/11 [Up/Down Command]*
- *75/76 [Up/Down 2 Command]*

#### 0 : Disabled

- **Acceleration/Deceleration Ramp Hold**  
When you enter a Stop command or de-energize the drive, the hold value is reset to 0 Hz. The drive will use the active frequency reference when it restarts.
- **Up/Down Command**  
When you enter a Stop command or de-energize the drive, the frequency reference value is reset to 0 Hz. The drive will start from 0 Hz when it restarts.
- **Up/Down 2 Command**  
When you enter the Stop command or 5 s after you release the Up/Down 2 command, the drive does not save the frequency bias. The Up/Down 2 function will start with a bias of 0% when the drive restarts.


#### 1 : Enabled

- **Acceleration/Deceleration Ramp Hold**  
When you clear the Run command or de-energize the drive, it will save the last hold value. The drive will use the saved value as the frequency reference when it restarts.

##### Note:


When you energize the drive, continuously enable the MFDI terminal set for *Accel/Decel Ramp Hold [H1-xx = A]*. If the digital input does not activate, the drive will clear the hold value and set it to 0 Hz.



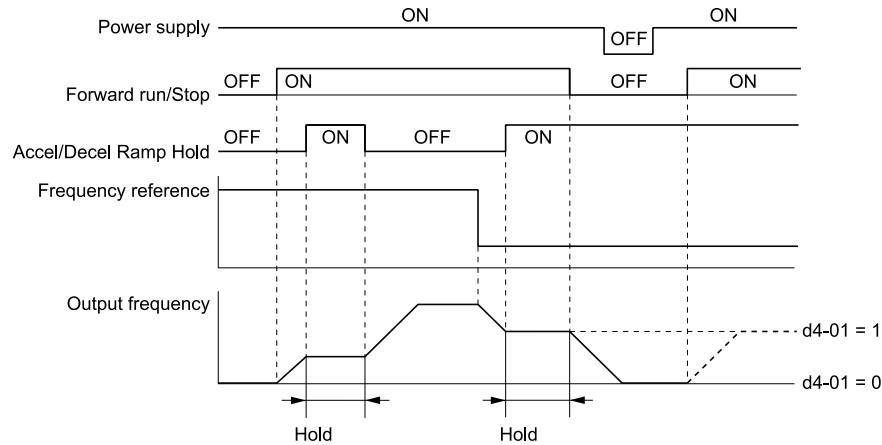


**Figure 12.52 Frequency Reference Hold with Accel/Decel Hold Function**

- **Up/Down Command**  
When you clear the Run command or de-energize the drive, it will save the frequency reference value. The drive will use the saved value as the frequency reference when it restarts.
- **Up/Down 2 Command with Frequency Reference from Keypad**  
When a Run command is active and you release the Up/Down 2 command for longer than 5 s, the drive adds the Up/Down 2 bias value to the frequency reference and sets it to 0. The drive saves the frequency reference value to which the bias value was added. The drive will use the new value as the frequency reference when it restarts.

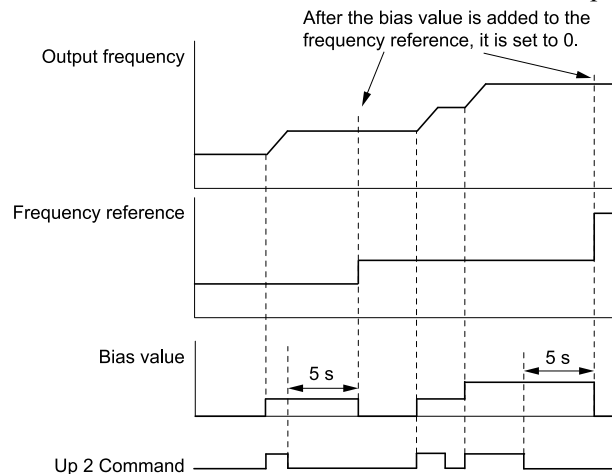

**Figure 12.53 Up/Down 2 Example with Reference from Keypad and d4-01 = 1**

- **Up/Down 2 Command with Frequency Reference from Input Sources Other Than the Keypad**  
When a Run command is active and you release the Up/Down 2 command for longer than 5 s, the drive will save the bias value in d4-06 [Frequency Ref Bias (Up/Down 2)]. The drive saves the frequency reference + d4-06 as a frequency reference value. The drive will use the new value as the frequency reference when it restarts.

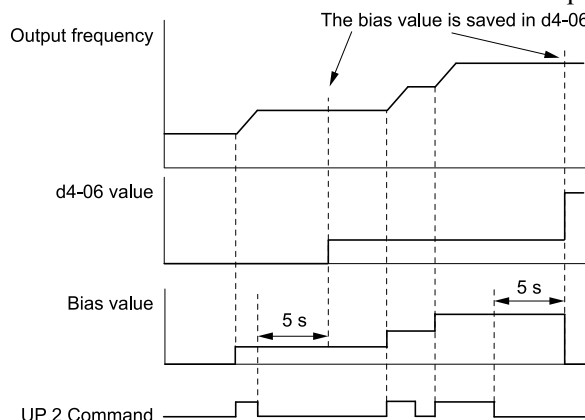

**Figure 12.54 Up/Down 2 Example with Other Reference than Keypad and d4-01 = 1**

**Note:**

To use the combination of the frequency reference hold function and the Up/Down 2 function, configure the Up/Down 2 upper limit [d4-08] and lower limit [d4-09] correctly.

**Remove the Saved Frequency Reference Value**

The procedure to remove the saved frequency reference value is different for different functions. Use these methods to remove the value:

- Release the input programmed for *Accel/Decel Ramp Hold* [ $HI-xx = A$ ].
- Set an Up or Down command while no Run command is active.
- Use the Up/Down 2 Command to set  $d4-06 = 0.0$  or set  $d4-06 = 0.0$  during stop.


**■ d4-03: Up/Down 2 Bias Step Frequency**

| No. (Hex.)       | Name                          | Description   | Default (Range)           |
|------------------|-------------------------------|---|---------------------------|
| d4-03 (02AA) RUN | Up/Down 2 Bias Step Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias that the Up/Down 2 function adds to or subtracts from the frequency reference. | 0.00 Hz (0.00 - 99.99 Hz) |

The operation is different for different setting values:

**• Setting d4-03 = 0.00 Hz**


When the *Up/Down 2 Command* [ $HI-xx = 75, 76$ ] is active, the drive uses the accel/decel times set in  $d4-04$  [*Up/Down 2 Ramp Selection*] to increase or decrease the bias value.

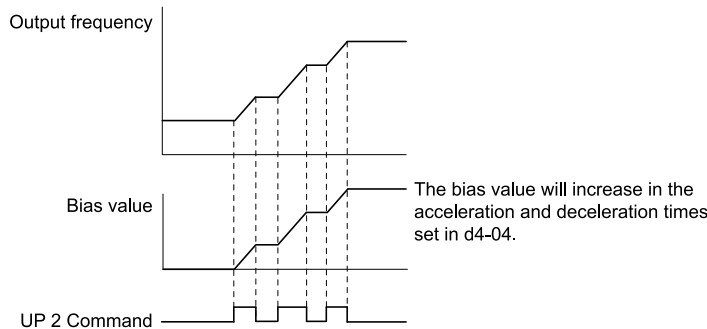

**Figure 12.55 Up/Down 2 Bias when d4-03 = 0.00 Hz**

**• Setting d4-03 ≠ 0.00 Hz**

When the *Up/Down 2 Command* [ $HI-xx = 75, 76$ ] is active, the drive increases or decreases the bias in steps for the value set in  $d4-03$ . The drive uses the acceleration and deceleration times set in  $d4-04$ .

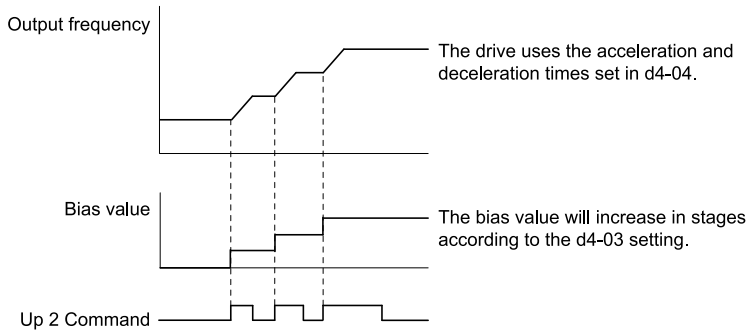

**Figure 12.56 Up/Down 2 Bias when d4-03 ≠ 0.00 Hz**

**■ d4-04: Up/Down 2 Ramp Selection**

| No. (Hex.)       | Name                     | Description  | Default (Range) |
|------------------|--------------------------|--|-----------------|
| d4-04 (02AB) RUN | Up/Down 2 Ramp Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the acceleration and deceleration times for the Up/Down 2 function to apply the bias to the frequency reference. | 0 (0, 1)        |

**0 : Use Selected Accel/Decel Time**

Use the active acceleration and deceleration times to increase or decrease the bias.

**1 : Use Accel/Decel Time 4**

Use  $CI-07$  [*Acceleration Time 4*] and  $CI-08$  [*Deceleration Time 4*] to increase or decrease the bias.

## ■ d4-05: Up/Down 2 Bias Mode Selection

| No.<br>(Hex.)          | Name                          | Description   | Default<br>(Range) |
|------------------------|-------------------------------|---|--------------------|
| d4-05<br>(02AC)<br>RUN | Up/Down 2 Bias Mode Selection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function that saves the bias value to the drive when you open or close the two <i>Up/Down 2 Commands</i> [<i>H1-xx = 75, 76</i>]. Set <i>d4-03 [Up/Down 2 Bias Step Frequency] = 0.00</i> before you set this parameter.</p> | 0<br>(0, 1)        |

### 0 : Hold when Neither Up/Down Closed

When the two MFDI terminals set for *Up/Down 2 Command* [*H1-xx = 75, 76*] activate or deactivate, the drive will hold the bias value.

### 1 : Reset when Neither / Both Closed

When the two MFDI terminals set for *Up/Down 2 Command* [*H1-xx = 75, 76*] activate or deactivate, the drive will reset the bias value to 0. The drive will use the acceleration and deceleration times set in *d4-04 [Up/Down 2 Ramp Selection]* to accelerate and decelerate the motor to the selected output frequency.

## ■ d4-06: Frequency Ref Bias (Up/Down 2)

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range)        |
|-----------------|--------------------------------|---|---------------------------|
| d4-06<br>(02AD) | Frequency Ref Bias (Up/Down 2) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Saves the bias value from the Up/Down 2 Command where the Maximum Output Frequency is 100%.</p> | 0.0%<br>(-99.9 - +100.0%) |

The Up/Down 2 function setting changes the function of *d4-06*:

#### Note:

When the keypad sets the frequency reference, you do not usually use parameter *d4-06*.

- When *d4-01 = 0 [Freq Reference Hold Selection = Disabled]* and a source other than the keypad sets the frequency reference, the drive adds the value set in *d4-06* to the frequency reference. If the value set in *d4-06* is a negative number, the drive will subtract it from frequency reference.
- When *d4-01 = 1 [Enabled]* and a source other than the keypad sets the frequency reference, the drive will store the bias value adjusted with the Up/Down 2 command in *d4-06* 5 seconds after you release the Up/Down 2 command. The drive adds or subtracts the value set in *d4-06* to the frequency reference.

### Conditions that Reset or Disable d4-06

The drive resets and disables the bias value in these conditions:

- *d4-01 = 0* and the Run command was cleared.
- *H1-xx = 75, 76 [MFDI Function Select = Up/Down 2 Command]* is not set.
- The frequency reference source was changed.  
This includes switching LOCAL/REMOTE and multi-step speed reference.
- A digital input changed the frequency reference value.
- *d4-03 [Up/Down 2 Bias Step Frequency] = 0* and *d4-05 = 1 [Up/Down 2 Bias Mode Selection = Reset when Neither / Both Closed]*, and the two MFDI terminals set for *Up/Down 2 Command* [*H1-xx = 75/76*] are activated or deactivated.
- The value of *E1-04 [Maximum Output Frequency]* was changed.

## ■ d4-07: Analog Freq Ref Fluctuate Limit

| No.<br>(Hex.)          | Name                            | Description   | Default<br>(Range)     |
|------------------------|---------------------------------|---|------------------------|
| d4-07<br>(02AE)<br>RUN | Analog Freq Ref Fluctuate Limit | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>If the frequency reference changes for more than the level set to this parameter, then the bias value will be held. The value is set as a percentage of the Maximum Output Frequency.</p> | 1.0%<br>(0.1 - 100.0%) |

Handles frequency reference changes while *Up/Down 2 Command* [*H1-xx = 75, 76*] is activated. When the frequency reference changes for more than the level set in *d4-07*, the drive will hold the bias value, and the drive will accelerate or decelerate to the frequency reference. When the drive is at the frequency reference, it releases the bias hold and the bias follows the Up/Down 2 input commands.

This parameter is applicable only when an analog or pulse input sets the frequency reference.

### ■ d4-08: Up/Down 2 Bias Upper Limit

| No. (Hex.)             | Name                       | Description  | Default (Range)          |
|------------------------|----------------------------|--|--------------------------|
| d4-08<br>(02AF)<br>RUN | Up/Down 2 Bias Upper Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the upper limit of the Up/Down 2 bias as a percentage of the Maximum Output Frequency. | 100.0%<br>(0.0 - 100.0%) |

The drive saves the set bias upper limit in *d4-06* [Frequency Ref Bias (Up/Down 2)]. Set *d4-08* an applicable value before you use the Up/Down 2 function.

**Note:**

When *d4-01* = 1 [Freq Reference Hold Selection = Enabled] and *b1-01* = 0 [Frequency Reference Selection 1 = Keypad], the drive will add the bias value to the frequency reference when it does not receive an Up/Down 2 command for 5 s. Then the drive will reset the value to 0 at which time you can increase the bias to the limit set in *d4-08* again.

### ■ d4-09: Up/Down 2 Bias Lower Limit

| No. (Hex.)             | Name                       | Description  | Default (Range)        |
|------------------------|----------------------------|--|------------------------|
| d4-09<br>(02B0)<br>RUN | Up/Down 2 Bias Lower Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower limit of the Up/Down 2 bias as a percentage of the Maximum Output Frequency. | 0.0%<br>(-99.9 - 0.0%) |

The drive saves the set bias lower limit in *d4-06* [Frequency Ref Bias (Up/Down 2)]. Set *d4-09* to an applicable value before you use the Up/Down 2 function.

**Note:**

When *d4-01* = 1 [Freq Reference Hold Selection = Enabled] and *b1-01* = 0 [Frequency Reference Selection 1 = Keypad], the drive will add the bias value to the frequency reference when it does not receive an Up/Down 2 command for 5 s. Then the drive will reset the value to 0.

If you increase the bias with the Up 2 command and *d4-09* = 0, you cannot use a Down 2 command to decrease the frequency reference. To decrease speed in this condition, set a negative lower limit in *d4-09*.

### ■ d4-10: Up/Down Freq Lower Limit Select

| No. (Hex.)      | Name                            | Description   | Default (Range) |
|-----------------|---------------------------------|---|-----------------|
| d4-10<br>(02B6) | Up/Down Freq Lower Limit Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the lower frequency limit for the Up/Down function. | 0<br>(0, 1)     |

#### 0 : Greater of d2-02 or Analog

The higher value between *d2-02* [Frequency Reference Lower Limit] and an analog input programmed for Frequency Reference [*H3-02*, *H3-10* = 0] sets the lower frequency reference limit.

**Note:**

When you use External Reference 1/2 Selection [*H1-xx* = 2] to switch between the Up/Down function and an analog input as the reference source, the analog value becomes the lower reference limit when the Up/Down command is active. Set *d4-10* = 1 to isolate the Up/Down function and the analog input value.

#### 1 : d2-02

You can only use *d2-02* to set the lower limit of the frequency reference.

### ■ d4-11: Bi-directional Output Selection

| No. (Hex.)      | Name                            | Description   | Default (Range) |
|-----------------|---------------------------------|---|-----------------|
| d4-11<br>(02B7) | Bi-directional Output Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that changes the frequency reference to a Bi-Directional internal frequency reference. | 0<br>(0, 1)     |

#### 0 : Disabled

The drive will not change the frequency reference or PID output value to Bi-Directional internal frequency reference.

When the frequency reference or PID output value is 0% to 100% of the maximum output frequency, the drive runs the motor in the set direction.

#### 1 : Enabled

Changes the frequency reference or PID output value to Bi-Directional output.

When the frequency reference or PID output value is 0% to 50%, the drive reverses the motor in the set direction. When the frequency reference or PID output value is 50% to 100%, the drive operates the motor in the set direction.

**Note:**


When you use the Bi-Directional function with PID control, you can use an MFDI terminal set for *PID Bi-Directional Enable* [*H1-xx = 7F*] to enable/disable the Bi-Directional function.

Table 12.44 shows how the drive operates when you use the PID control function with the Bi-Directional function and *d4-11 = 1*.

**Table 12.44 Bi-Directional Function Operation Conditions**
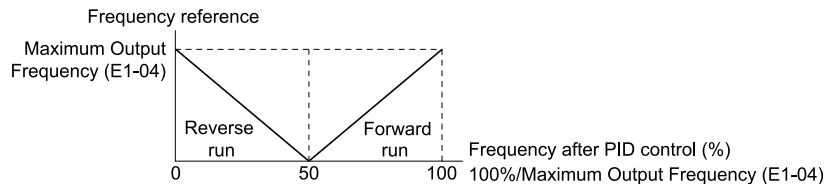
| b5-01 [PID Mode Setting] Setting | Status of MFDI Terminal Set for 7F [PID Bi-Directional Enable] |   |
|----------------------------------|--|---|
|                                  | ON   | OFF   |
| b5-01 = 0 [Disabled]             | Bi-Directional function enabled                                | Bi-Directional function enabled                     |
| b5-01 ≠ 0 [Enabled]              | Bi-Directional function enabled                                | Normal operation (Bi-Directional function disables) |

- When PID Control is Disabled or *H1-xx = 19* [MFDI Function Select = PID Disable] is Activated**  
 When the frequency reference is 0% to 50%, the drive reverses the motor in the set direction. When the frequency reference is 50% to 100%, the drive runs the motor in the set direction. Figure 12.57 shows the frequency reference change at this time. This is an example of operation when the Forward Run command is input.

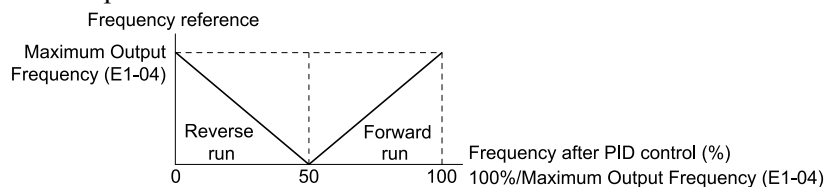


**Figure 12.57 Frequency Reference Transition when PID Control is Disabled or PID Disable is ON**

**Note:**

When *b1-04 = 1* [Reverse Operation Selection = Reverse Disabled], the drive will not run in Reverse. The frequency reference limit is 0 Hz.

- When PID Control is Enabled and *H1-xx = 7F* [PID Bi-Directional Enable] is Activated**  
 When the frequency reference is 0% to 50% after PID control execution, the drive runs the motor opposite of the set direction. When the frequency reference is 50% to 100%, the drive runs the motor in the set direction. Figure 12.58 shows the frequency reference change at this time. This is an example of operation when the Forward Run command is input.



**Figure 12.58 Frequency Reference Transition when PID Control and PID Bi-Directional are Enabled**

**Note:**

When *b1-04 = 1*, the drive will not run the motor in Reverse. The frequency reference limit is 0 Hz.

- When PID Control is Enabled and *H1-xx = 7F* is Deactivated**  
 The Bi-Directional function is disabled. When the frequency reference is a negative value after PID control execution, the drive runs the motor opposite of the set direction. The frequency reference value is an absolute value.

## ■ d4-12: Stop Position Gain

| No. (Hex.)   | Name               | Description  | Default (Range)       |
|--------------|--------------------|--|-----------------------|
| d4-12 (02B8) | Stop Position Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the gain to adjust the stopping accuracy. Set this parameter when <i>b1-03 = 9</i> [Stopping Method Selection = Stop with Constant Distance]. | 1.00<br>(0.50 - 2.55) |

If the motor stops before the necessary stop position, increase the setting value. If the length of time for the motor to stop is too long, decrease the setting value.

## ◆ d6: Field Weakening /Forcing

*d6 parameters* set the field weakening and field forcing functions.

The field weakening function decreases the energy consumption of the motor. It decreases the output voltage of the drive to a set level. The function decreases the motor excitation current inversely proportional to speed in a constant output range, and does not let the induced voltage of the motor become more than the power supply voltage. To enable this function, set *Field Weakening* [*H1-xx = 63*] ON.

### Note:

Use the Field Weakening function in constant light-load applications. To control the energy consumption of the motor for other load conditions, use the *b8 parameters* [*Energy Saving*].

The Field Forcing function adjusts the delaying influence of the motor time constant when the drive changes the excitation current reference and it also increases motor responsiveness. This function uses a high motor excitation current reference for drive start-up only to help develop actual motor excitation current. Enable the Field Forcing function to increase motor responsiveness.

### Note:

You cannot use Field Forcing during DC Injection Braking.

### ■ d6-01: Field Weakening Level

| No. (Hex.)      | Name                  | Description  | Default (Range)   |
|-----------------|-----------------------|--|-------------------|
| d6-01<br>(02A0) | Field Weakening Level | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the drive output voltage as a percentage of <i>E1-05</i> [ <i>Maximum Output Voltage</i> ] when <i>H1-xx = 63</i> [ <i>Field Weakening</i> ] is activated. | 80%<br>(0 - 100%) |

### ■ d6-02: Field Weakening Frequency Limit

| No. (Hex.)      | Name                            | Description  | Default (Range)            |
|-----------------|---------------------------------|--|----------------------------|
| d6-02<br>(02A1) | Field Weakening Frequency Limit | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the minimum output frequency to start field weakening. | 0.0 Hz<br>(0.0 - 590.0 Hz) |

Make sure that these two conditions are correct to enable the Field Weakening command:

- The output frequency  $\geq$  *d6-02*.
- There is a speed agreement status.

### ■ d6-03: Field Forcing Selection

| No. (Hex.)      | Name                    | Description  | Default (Range) |
|-----------------|-------------------------|--|-----------------|
| d6-03<br>(02A2) | Field Forcing Selection | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the field forcing function. | 0<br>(0, 1)     |

0 : Disabled

1 : Enabled

### ■ d6-06: Field Forcing Limit

| No. (Hex.)      | Name                | Description   | Default (Range)      |
|-----------------|---------------------|---|----------------------|
| d6-06<br>(02A5) | Field Forcing Limit | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the limit value for field forcing to increase the motor excitation current reference as a percentage of <i>E2-03</i> [ <i>Motor No-Load Current</i> ]. Usually it is not necessary to change this setting. | 400%<br>(100 - 400%) |

### Note:

You cannot use Field Forcing during DC Injection Braking.

## ◆ d7: Offset Frequency

The drive will use 3 digital signal inputs, to add or subtract the set frequency (Offset frequency) to/from the frequency reference and correct the speed. The drive uses the terminal set in *H1-xx = 44 to 46* [*MFDI Function Select = Add Offset Frequency 1 to 3*] to set the Offset frequency. When you close more than one input at the same time, the drive adds the selected offset values together.

Figure 12.59 shows the Offset frequency function:

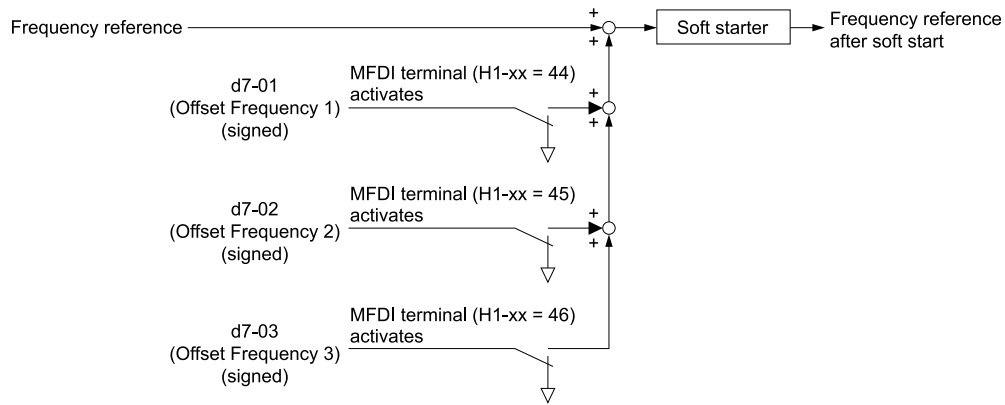


Figure 12.59 Offset Frequency Operation

■ d7-01: Offset Frequency 1

| No. (Hex.)             | Name               | Description  | Default (Range)            |
|------------------------|--------------------|--|----------------------------|
| d7-01<br>(02B2)<br>RUN | Offset Frequency 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses H1-xx = 44 [MFDI Function Select = Add Offset Frequency 1 (d7-01)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference. | 0.0%<br>(-100.0 - +100.0%) |

■ d7-02: Offset Frequency 2

| No. (Hex.)             | Name               | Description  | Default (Range)            |
|------------------------|--------------------|--|----------------------------|
| d7-02<br>(02B3)<br>RUN | Offset Frequency 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses H1-xx = 45 [MFDI Function Select = Add Offset Frequency 2 (d7-02)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference. | 0.0%<br>(-100.0 - +100.0%) |

■ d7-03: Offset Frequency 3

| No. (Hex.)             | Name               | Description  | Default (Range)            |
|------------------------|--------------------|--|----------------------------|
| d7-03<br>(02B4)<br>RUN | Offset Frequency 3 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses H1-xx = 46 [MFDI Function Select = Add Offset Frequency 3 (d7-03)] as a percentage of the Maximum Output Frequency to add or subtract the set frequency to/from the frequency reference. | 0.0%<br>(-100.0 - +100.0%) |

## 12.6 E: Motor Parameters

*E* parameters cover drive input voltage, V/f pattern, and motor parameters.

### ◆ E1: V/f Pattern for Motor 1

*E1* parameters set the drive input voltage and motor V/f characteristics. To switch drive operation from one motor to another motor, set the V/f characteristics for motor 1.

#### ■ V/f Pattern Settings

The drive uses a V/f pattern to adjust the output voltage relative to the frequency reference.

This product has been preconfigured with 15 voltage/frequency (V/f) patterns. Use *E1-03* [*V/f Pattern Selection*] to select the V/f pattern that is appropriate for the application.

Additionally, one custom V/f pattern is available. Set *E1-03* = *F* [*Custom*] and then manually set parameters *E1-04* to *E1-10*.

**Table 12.45 Predefined V/f Patterns**

| Setting Value | Specification                     | Characteristic                 | Application   |
|---------------|-----------------------------------|--------------------------------|---|
| 0             | VT, 50Hz                          | Constant torque                | For general purpose applications. This pattern is used when the load torque is constant without any rotation speed such as that used for linear conveyor systems.   |
| 1             | VT, 60 Hz                         |                                |   |
| 2             | Const Trq, 50Hz base, 60Hz max    |                                |   |
| 3             | Const Trq, 60 Hz base, 72 Hz max  |                                |   |
| 4             | VT, 50 Hz, 65% Vmid reduction     | Derated Torque Characteristics | This pattern is used for torque loads proportional to 2 or 3 times the rotation speed, such as is the case with fans and pumps.   |
| 5             | VT, 50 Hz, 50% Vmid reduction     |                                |   |
| 6             | VT, 60 Hz, 65% Vmid reduction     |                                |   |
| 7             | VT, 60 Hz, 50% Vmid reduction     |                                |   |
| 8             | High Trq, 50 Hz, 25% Vmin Boost   | High starting torque           | This pattern is used when strong torque is required during startup.   |
| 9             | High Trq, 50 Hz, 65% Vmin Boost   |                                |   |
| A             | High Trq, 60 Hz, 25% Vmin Boost   |                                |   |
| B             | High Trq, 60 Hz, 65% Vmin Boost   |                                |   |
| C             | Const Trq, 60 Hz base, 90 Hz max  | Constant output                | This pattern is used to rotate motors at greater than 60 Hz. Output voltage is constant when operating at greater than 60 Hz.   |
| D             | Const Trq, 60 Hz base, 120 Hz max |                                |   |
| E             | Const Trq, 60 Hz base, 180 Hz max |                                |   |
| F             | V/f Pattern Selection             | Constant torque                | Enables a custom V/f pattern by changing <i>E1-04</i> to <i>E1-13</i> [ <i>V/f Pattern for Motor 1</i> ]. The default settings for <i>E1-04</i> to <i>E1-13</i> are the same as <i>Setting Value 1</i> [ <i>Const Trq, 60Hz base, 60Hz max</i> ]. |



**Note:**

Be aware of the following points when manually setting V/f patterns.

- To set linear V/f characteristics at frequencies lower than E1-06 [Base Frequency], set E1-07 = E1-09 [Mid Point A Frequency = Minimum Output Frequency]. In this application, the drive ignores E1-08 [Mid Point A Voltage].
- Set the five frequencies as specified by these rules: Incorrect settings will cause oPE10 [V/f Data Setting Error].  
 $E1-09 \leq E1-07 < E1-06 \leq E1-11 \leq E1-04$  [Minimum Output Frequency  $\leq$  Mid Point A Frequency  $<$  Base Frequency  $\leq$  Mid Point B Frequency  $\leq$  Maximum Output Frequency]
- Setting E1-11 = 0 [Mid Point B Frequency = 0 Hz] disables E1-12 [Mid Point B Voltage]. Ensure that the four frequencies are set according to the following rules;  
 $E1-09 \leq E1-07 < E1-06 \leq E1-04$
- When you use A1-03 [Initialize] to initialize the drive, it will not reset E1-03.

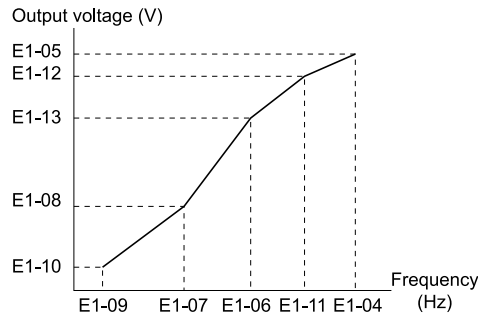


Figure 12.60 V/f Pattern

■ E1-01: Input AC Supply Voltage

| No. (Hex.)   | Name                    | Description   | Default (Range)  |
|--------------|-------------------------|---|--|
| E1-01 (0300) | Input AC Supply Voltage | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the drive input voltage. | 200 V Class: 230 V, 400 V: 400 V<br>(200 V Class: 155 to 255 V, 400 V Class: 310 to 510 V) |

**NOTICE:** Set parameter E1-01 to align with the drive input voltage (not motor voltage). If this parameter is incorrect, the protective functions of the drive will not operate correctly and it can cause damage to the drive.

**Values Related to the Drive Input Voltage**

The value set in E1-01 is the base value that the drive uses for the motor protective functions in Table 12.46. With a 400 V class drive, the detection level changes for some motor protective functions.

Table 12.46 Values Related to the Drive Input Voltage

| Voltage     | E1-01 Setting              | Approximate Values |  |  |                                     |                                 |
|-------------|----------------------------|--------------------|--|--|-------------------------------------|---------------------------------|
|             |                            | ov Detection Level | BTR Operation Level (rr Detection Level) <sup>*1</sup> | L2-05 [Undervoltage Detection Lvl (Uv1)] | L2-11 [KEB DC Bus Voltage Setpoint] | L3-17 [DC Bus Regulation Level] |
| 200 V class | All settings               | 410 V              | 394 V  | 190 V                                    | 260 V                               | 375 V                           |
| 400 V class | Setting value $\geq$ 400 V | 820 V              | 788 V  | 380 V                                    | 500 V                               | 750 V                           |
|             | Setting value $<$ 400 V    | 820 V              | 788 V  | 350 V                                    | 460 V                               | 750 V                           |

\*1 This is the protection function enabled in drives with built-in braking transistors. These values show the level that will trigger the built-in braking transistor. Refer to “YASKAWA AC Drive 72060001 Series Option Braking Unit and Braking Resistor Unit Installation Manual (TOBPC72060001)” for more information.

■ E1-03: V/f Pattern Selection

| No. (Hex.)   | Name                  | Description  | Default (Range)            |
|--------------|-----------------------|--|----------------------------|
| E1-03 (0302) | V/f Pattern Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the V/f pattern for the drive and motor. You can use one of the preset patterns or you can make a custom pattern. | F<br>(Determined by A1-02) |

**Note:**

- When A1-02 = 2 [Control Method Selection = OLV], settings 0 to E are not available.
- Set the correct V/f pattern for the application and operation area. An incorrect V/f pattern can decrease motor torque and increase current from overexcitation.
- Parameter A1-03 [Initialize Parameters] will not reset the value of E1-03.

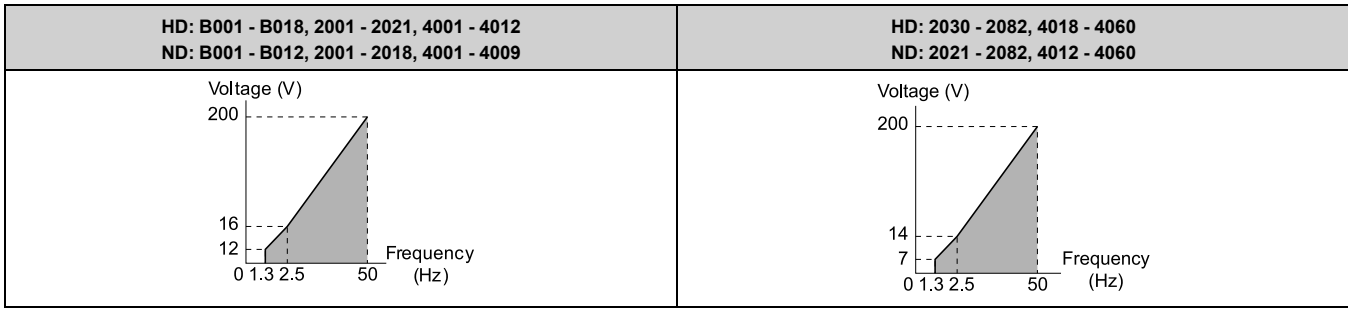
**0 : Const Trq, 50Hz base, 50Hz max**

## 12.6 E: Motor Parameters

Use this constant torque pattern for general applications. This pattern is used when the load torque is constant without any rotation speed such as that used for linear conveyor systems.

**Note:**

The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




### 1 : Const Trq, 60 Hz base, 50Hz max

Use this constant torque pattern for general applications. This pattern is used when the load torque is constant without any rotation speed such as that used for linear conveyor systems.

**Note:**

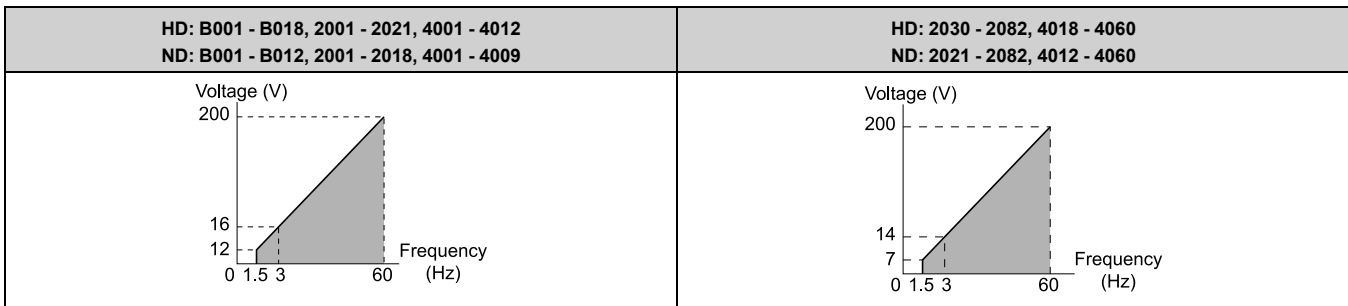The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




### 2 : Const Trq, 50Hz base, 60Hz max

Use this constant torque pattern for general applications. This pattern is used when the load torque is constant without any rotation speed such as that used for linear conveyor systems.

**Note:**

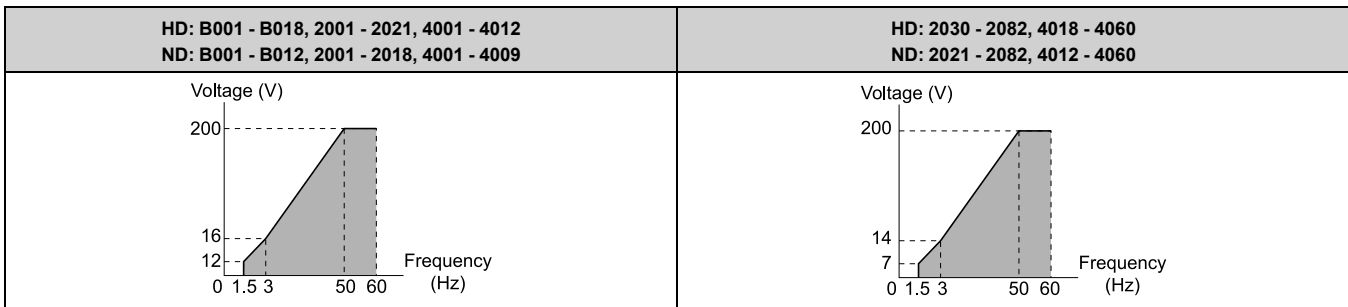The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




### 3 : Const Trq, 60 Hz base, 72 Hz max

Use this constant torque pattern for general applications. This pattern is used when the load torque is constant without any rotation speed such as that used for linear conveyor systems.

**Note:**

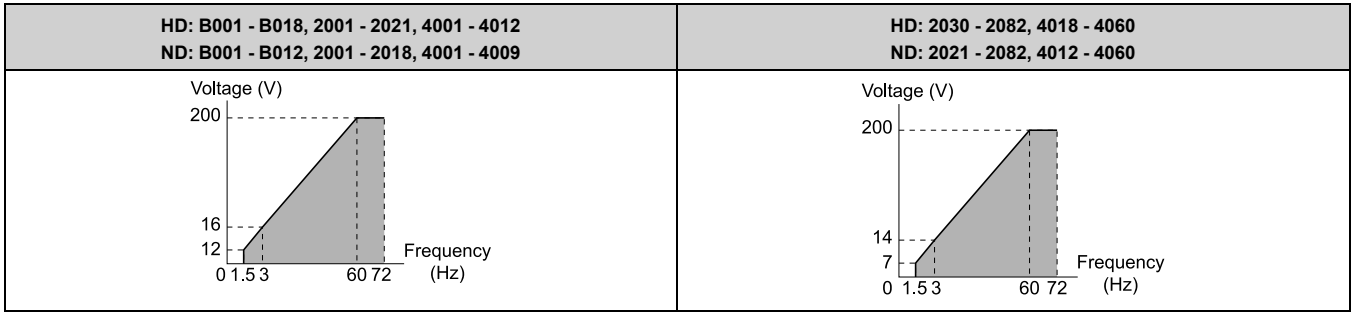The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




**4 : VT, 50Hz, 65% Vmid reduction**

Use this derated torque pattern for torque loads proportional to three times the rotation speed. For example, fans and pumps.

**Note:**

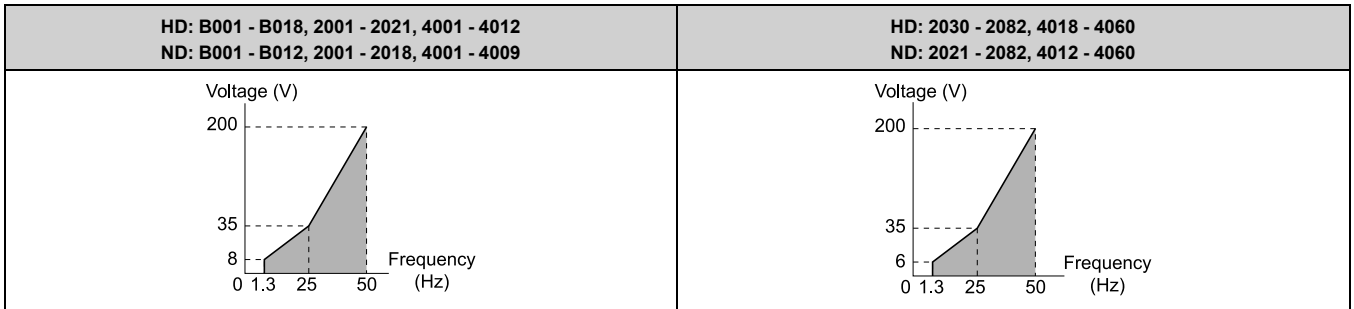The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




**5 : VT, 50Hz, 50% Vmid reduction**

Use this derated torque pattern for torque loads proportional to two times the rotation speed. For example, fans and pumps.

**Note:**

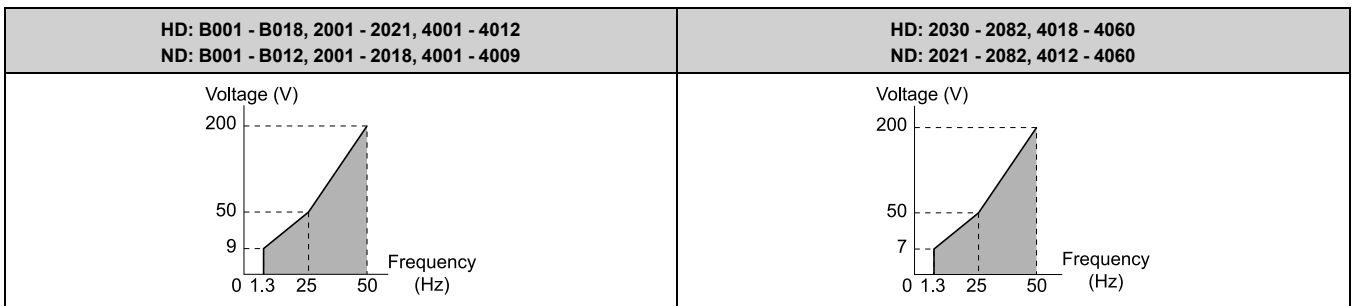The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




**6 : VT, 60 Hz, 65% Vmid reduction**

Use this derated torque pattern for torque loads proportional to three times the rotation speed. For example, fans and pumps.

**Note:**

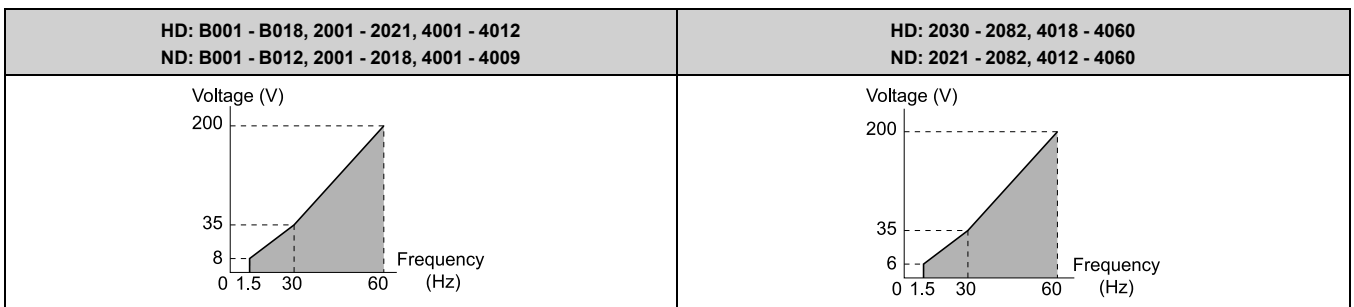The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




**7 : VT, 60 Hz, 50% Vmid reduction**

## 12.6 E: Motor Parameters

Use this derated torque pattern for torque loads proportional to two times the rotation speed. For example, fans and pumps.

**Note:**

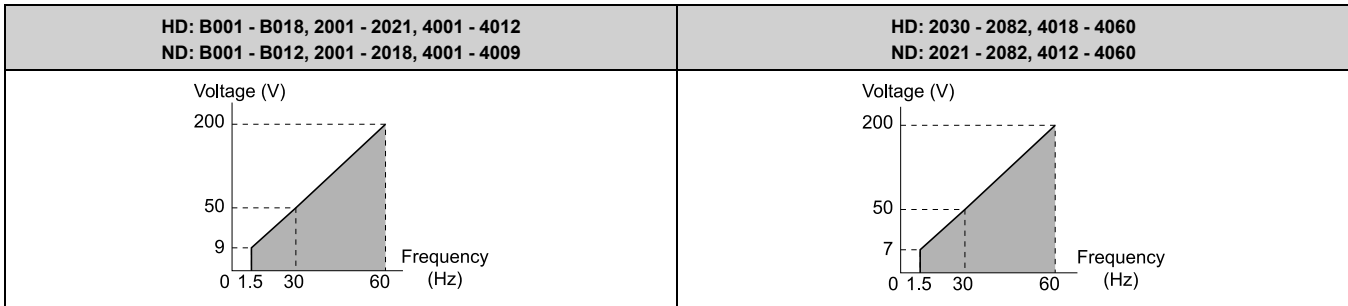The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.



### 8 : High Trq, 50 Hz, 25% Vmin Boost

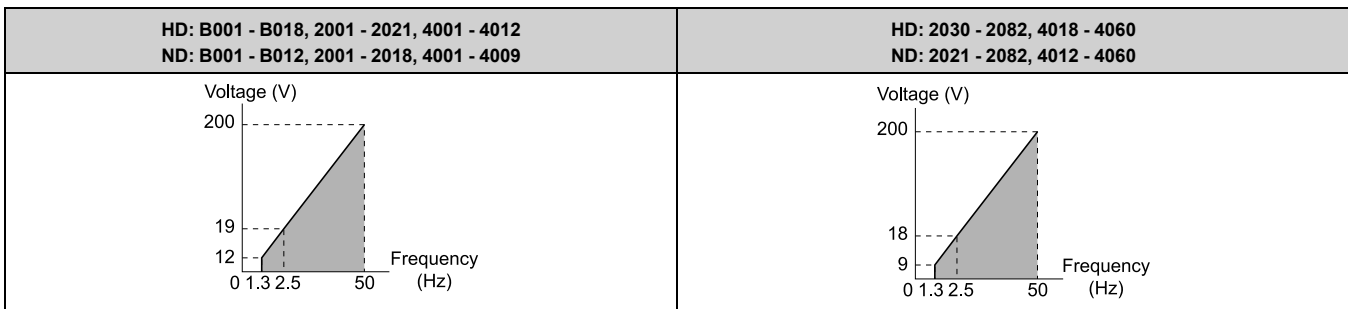
Use this pattern when moderate torque is necessary during start up.

Select this pattern only in these conditions:

- The wiring distance between the drive and motor is 150 m (492.1 ft) minimum
- There is an AC reactor connected to the drive output.

**Note:**

The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.



### 9 : High Trq, 50 Hz, 65% Vmin Boost

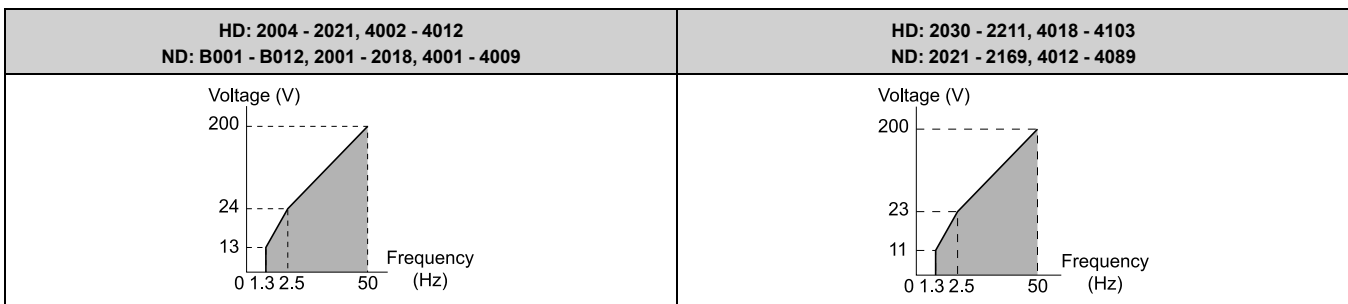
Use this pattern when high torque is necessary during start up.

Select this pattern only in these conditions:

- The wiring distance between the drive and motor is 150 m (492.1 ft) minimum
- There is an AC reactor connected to the drive output.

**Note:**

The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.



### A : High Trq, 60 Hz, 25% Vmin Boost

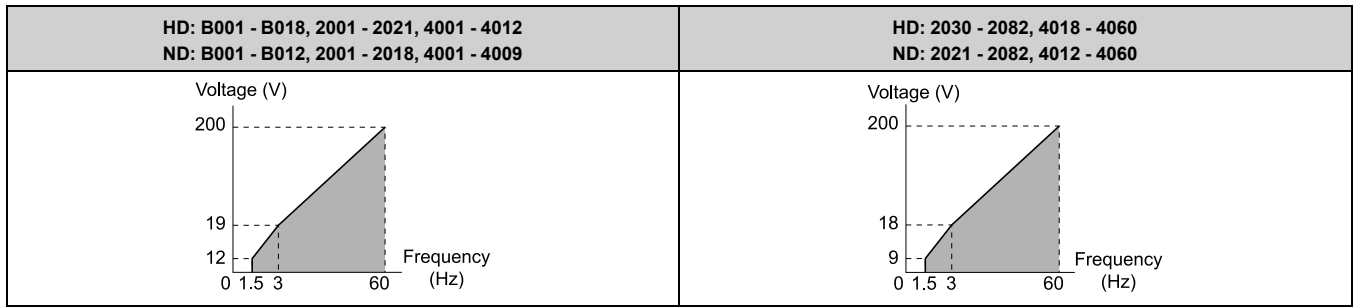
Use this pattern when moderate torque is necessary during start up.

Select this pattern only in these conditions:

- The wiring distance between the drive and motor is 150 m (492.1 ft) minimum
- There is an AC reactor connected to the drive output.

**Note:**

The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.



**B : High Trq, 60 Hz, 65% Vmin Boost**

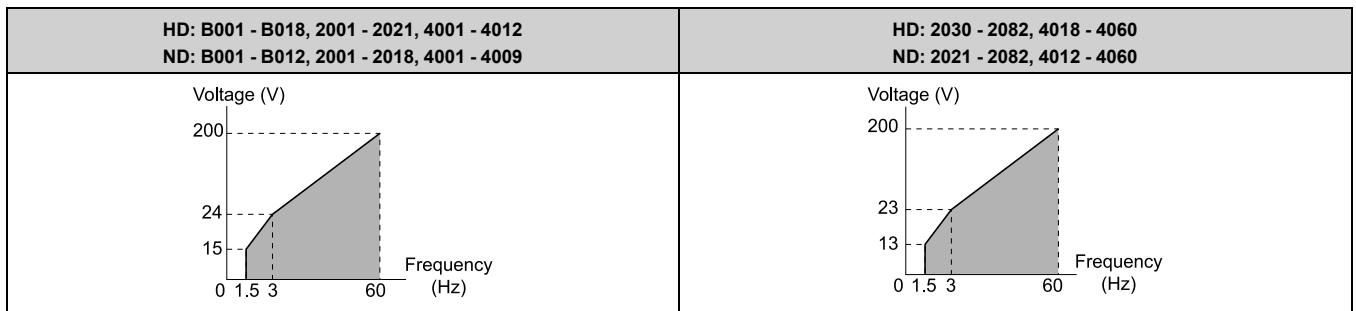
Use this pattern when high torque is necessary during start up.

Select this pattern only in these conditions:

- The wiring distance between the drive and motor is 150 m (492.1 ft) minimum
- There is an AC reactor connected to the drive output.

**Note:**

The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




**C : Const Trq, 60 Hz base, 90 Hz max**

Use this constant output pattern to rotate motors at more than 60 Hz. Output voltage is constant when you operate at more than 60 Hz.

**Note:**

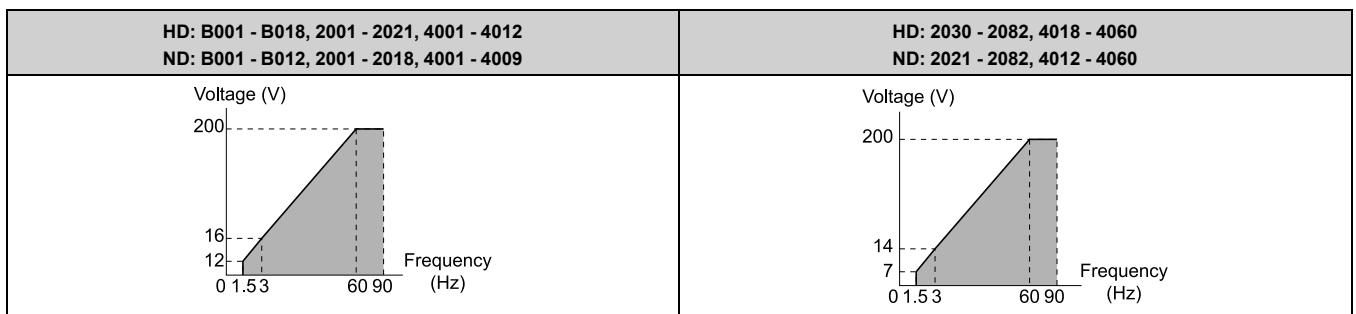The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.




**D : Const Trq, 60 Hz base, 120 Hz max**

Use this constant output pattern to rotate motors at more than 60 Hz. Output voltage is constant when you operate at more than 60 Hz.

**Note:**

The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.
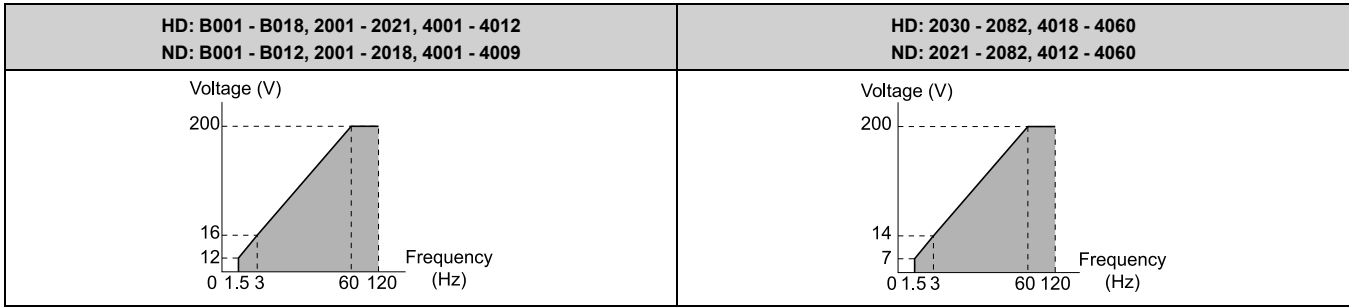
## 12.6 E: Motor Parameters




### E : Const Trq, 60 Hz base, 180 Hz max

Use this constant output pattern to rotate motors at more than 60 Hz. Output voltage is constant when you operate at more than 60 Hz.

#### Note:

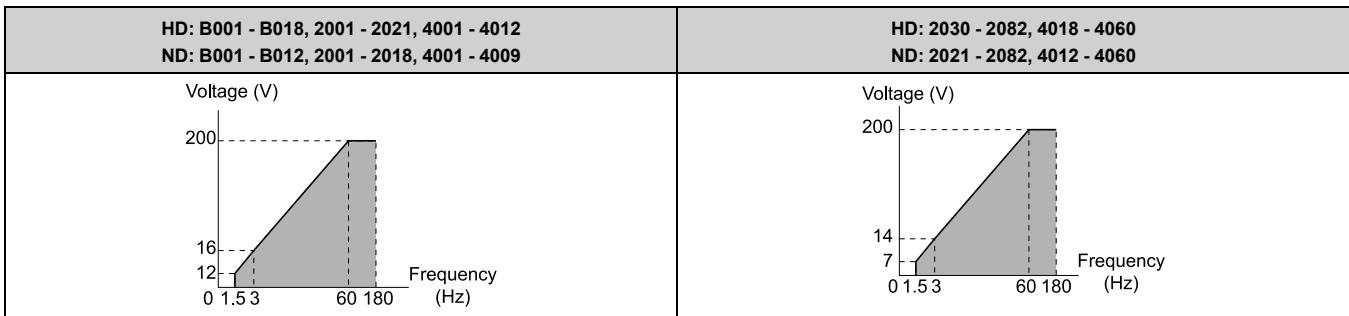The voltage values in the figures are for 200 V class drives. Multiply the values by 2 for 400 V class drives.



### F : V/f Pattern Selection

Set E1-04 to E1-13 [V/f Pattern for Motor 1] to set the values for this custom pattern.

The default settings are the same as Setting Value 0 [Const Trq, 50 Hz base, 60Hz max].

#### ■ E1-04: Maximum Output Frequency

| No. (Hex.)   | Name                     | Description   | Default (Range)  |
|--------------|--------------------------|---|--|
| E1-04 (0303) | Maximum Output Frequency | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the maximum output frequency for the V/f pattern. | Determined by A1-02 and E5-01<br>(Determined by A1-02 and E5-01) |

#### ■ E1-05: Maximum Output Voltage

| No. (Hex.)   | Name                   | Description   | Default (Range)  |
|--------------|------------------------|---|--|
| E1-05 (0304) | Maximum Output Voltage | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the maximum output voltage for the V/f pattern. | 200.0<br>(200 V Class: 0.0 - 255.0 V,<br>400 V Class: 0.0 - 510.0 V) |

#### ■ E1-06: Base Frequency

| No. (Hex.)   | Name           | Description   | Default (Range)                                |
|--------------|----------------|---|--|
| E1-06 (0305) | Base Frequency | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the base frequency for the V/f pattern. | Determined by A1-02 and E5-01<br>(0.0 - E1-04) |

#### ■ E1-07: Mid Point A Frequency

| No. (Hex.)   | Name                  | Description  | Default (Range)                      |
|--------------|-----------------------|--|--------------------------------------|
| E1-07 (0306) | Mid Point A Frequency | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets a middle output frequency for the V/f pattern. | Determined by A1-02<br>(0.0 - E1-04) |

### ■ E1-08: Mid Point A Voltage

| No. (Hex.)      | Name                | Description   | Default (Range)   |
|-----------------|---------------------|---|---|
| E1-08<br>(0307) | Mid Point A Voltage | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets a middle output voltage for the V/f pattern. | Determined by A1-02 , C6-01 and o2-04<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) |

**Note:**

Default setting is determined by *A1-02 [Control Method Selection]*, *C6-01 [Normal / Heavy Duty Selection]*, and *o2-04 [Drive Model Selection]*.

### ■ E1-09: Minimum Output Frequency

| No. (Hex.)      | Name                     | Description  | Default (Range)  |
|-----------------|--------------------------|--|--|
| E1-09<br>(0308) | Minimum Output Frequency | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the minimum output frequency for the V/f pattern. | Determined by A1-02 and E5-01<br>(Determined by A1-02, E1-04, and E5-01) |

### ■ E1-10: Minimum Output Voltage

| No. (Hex.)      | Name                   | Description  | Default (Range)   |
|-----------------|------------------------|--|---|
| E1-10<br>(0309) | Minimum Output Voltage | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the minimum output voltage for the V/f pattern. | Determined by A1-02<br>(200 V Class: 0.0 to 255.0 V, 400 V Class: 0.0 to 510.0 V) |

### ■ E1-11: Mid Point B Frequency

| No. (Hex.)                | Name                  | Description   | Default (Range)         |
|---------------------------|-----------------------|---|-------------------------|
| E1-11<br>(030A)<br>Expert | Mid Point B Frequency | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets a middle output frequency for the V/f pattern. | 0.0 Hz<br>(0.0 - E1-04) |

**Note:**

Set this parameter to *0.0* to disable the function.

### ■ E1-12: Mid Point B Voltage

| No. (Hex.)                | Name                | Description  | Default (Range)   |
|---------------------------|---------------------|--|---|
| E1-12<br>(030B)<br>Expert | Mid Point B Voltage | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets a middle point voltage for the V/f pattern. | 0.0 V<br>(200 V Class: 0.0 to 255.0 V, 400 V Class: 0.0 to 510.0 V) |

**Note:**

Set this parameter to *0.0* to disable the function.

### ■ E1-13: Base Voltage

| No. (Hex.)                | Name         | Description  | Default (Range)   |
|---------------------------|--------------|--|---|
| E1-13<br>(030C)<br>Expert | Base Voltage | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the base voltage for the V/f pattern. | 0.0 V<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) |

**Note:**

- After Auto-Tuning, the value of *E1-13 = E1-05 [Maximum Output Voltage]*.
- When *E1-13 = 0.0*, use the value of *E1-05* to control the voltage.

### ■ E1-21: No-Load Voltage Adjustment

| No. (Hex.)   | Name                       | Description   | Default (Range)         |
|--------------|----------------------------|---|-------------------------|
| E1-21 (1568) | No-Load Voltage Adjustment | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span><b>OLV</b></span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the type of Auto-Tuning. Considers $T1-13$ [PM Motor Rated Voltage] FLA] to be 100%. | 90.0%<br>(0.0 - 100.0%) |

### ◆ E2: Motor Parameters

*E2 parameters [Motor Parameters]* are used to set induction motor data. To switch drive operation from one motor to another motor, configure the first motor (motor 1).

If Auto-Tuning cannot be performed, set the *E2 parameters* manually. Performing Auto-Tuning automatically sets the *E2 parameters* to the optimal values.

**Note:**

If *A1-02 [Control Method Selection]* is set to the following control modes, the keypad does not display *E2-xx*.

- 5 [PM Open Loop Vector]
- 6 [PM Advanced Open Loop Vector]
- 8 [EZ Vector Control]

### ■ E2-01: Motor Rated Current (FLA)

| No. (Hex.)   | Name                      | Description   | Default (Range)  |
|--------------|---------------------------|---|--|
| E2-01 (030E) | Motor Rated Current (FLA) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span><b>OLV</b></span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor rated current in amps. | Determined by o2-04, C6-01<br>(10% to 200% of the drive rated current) |

**Note:**

- If  $E2-01 < E2-03$  [Motor No-Load Current], the drive will detect *oPE02 [Parameter Range Setting Error]*.
- When the drive model changes, the display units for this parameter also change.
  - 0.01 A: B001 to B018, 2001 to 2042, 4001 to 4023
  - 0.1 A: 2056 to 2082, 4031 to 4060

The value set for *E2-01* becomes the reference value for motor protection and the torque limit. Enter the motor rated current written on the motor nameplate. Auto-Tuning the drive will automatically set *E2-01* to the value input for *T1-04 [Motor Rated Current]*.

### ■ E2-02: Motor Rated Slip

| No. (Hex.)   | Name             | Description  | Default (Range)                                   |
|--------------|------------------|--|---|
| E2-02 (030F) | Motor Rated Slip | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span><b>OLV</b></span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets motor rated slip. | Determined by o2-04, C6-01<br>(0.000 - 20.000 Hz) |

This parameter value becomes the base slip compensation value. The drive automatically sets this parameter during Auto-Tuning. When you cannot do Auto-Tuning, calculate the motor rated slip with the information on the motor nameplate and this formula:

$$E2-02 = f - (n \times p) / 120$$

- f: Motor rated frequency (Hz)
- n: Rated motor speed ( $\text{min}^{-1}$  (r/min))
- p: Number of motor poles

### ■ E2-03: Motor No-Load Current

| No. (Hex.)   | Name                  | Description   | Default (Range)                            |
|--------------|-----------------------|---|--|
| E2-03 (0310) | Motor No-Load Current | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span><b>OLV</b></span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the no-load current for the motor in amps when operating at the rated frequency and the no-load voltage. | Determined by o2-04, C6-01<br>(0 to E2-01) |

**Note:**

When the drive model changes, the display units for this parameter also change.

- 0.01 A: B001 - B018, 2001 - 2042, 4001 - 4023
- 0.1 A: 2056 - 2082, 4031 - 4060



The drive automatically sets this parameter during Auto-Tuning. When you cannot do Auto-Tuning, you can also use the motor no-load current on the motor test report to enter this value manually. Get the test report from the motor manufacturer.

**Note:**

The default setting of the no-load current is for a 4-pole motor recommended by Yaskawa.

### ■ E2-04: Motor Pole Count

| No. (Hex.)      | Name             | Description  | Default (Range) |
|-----------------|------------------|--|-----------------|
| E2-04<br>(0311) | Motor Pole Count | <input type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the number of motor poles. | 4<br>(2 - 120)  |

**Note:**

- When  $A1-02 = 0$  [Control Method Selection = V/f], the maximum value is 120.
- When  $A1-02 = 2$  [OLV], the maximum value is 48.

Auto-Tuning automatically sets this parameter to the value of [Number of Motor Poles].

### ■ E2-05: Motor Line-to-Line Resistance

| No. (Hex.)      | Name                          | Description  | Default (Range)                                  |
|-----------------|-------------------------------|--|--|
| E2-05<br>(0312) | Motor Line-to-Line Resistance | <input type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the line-to-line resistance for the motor stator windings. | Determined by o2-04, C6-01<br>(0.000 - 65.000 Ω) |

**Note:**

This value is the motor line-to-line resistance. Do not set this parameter with the per-phase resistance.

Auto-Tuning automatically sets this parameter. If you cannot do Auto-Tuning, use the test report from the motor manufacturer to configure the settings. You can calculate the motor line-to-line resistance with one of these formulas:

- E-type insulation: [the resistance value (Ω) shown on the test report at 75 °C] × 0.92
- B-type insulation: [the resistance value (Ω) shown on the test report at 75 °C] × 0.92
- F-type insulation: [the resistance value (Ω) shown on the test report at 115 °C] × 0.87

### ■ E2-06: Motor Leakage Inductance

| No. (Hex.)      | Name                     | Description   | Default (Range)                             |
|-----------------|--------------------------|---|---|
| E2-06<br>(0313) | Motor Leakage Inductance | <input type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the voltage drop from motor leakage inductance when the motor is operating at the rated frequency and rated current. This value is a percentage of Motor Rated Voltage. | Determined by o2-04, C6-01<br>(0.0 - 60.0%) |

The drive automatically sets this parameter during Auto-Tuning.

**Note:**

The motor nameplate does not usually show the quantity of voltage drop. If you do not know the value of the motor leakage inductance, contact the motor manufacturer to receive a copy of the motor test report.

### ■ E2-07: Motor Saturation Coefficient 1

| No. (Hex.)      | Name                           | Description   | Default (Range)       |
|-----------------|--------------------------------|---|-----------------------|
| E2-07<br>(0314) | Motor Saturation Coefficient 1 | <input type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the motor iron-core saturation coefficient at 50% of the magnetic flux. | 0.50<br>(0.00 - 0.50) |

The drive uses this coefficient when it operates with constant output. The drive uses this coefficient when it operates the motor in the constant output range.

### ■ E2-08: Motor Saturation Coefficient 2

| No. (Hex.)      | Name                           | Description   | Default (Range)        |
|-----------------|--------------------------------|---|------------------------|
| E2-08<br>(0315) | Motor Saturation Coefficient 2 | <input type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the motor iron-core saturation coefficient at 75% of the magnetic flux. | 0.75<br>(E2-07 - 0.75) |

The drive uses this coefficient when it operates with constant output. The drive uses this coefficient when it operates the motor in the constant output range.

■ **E2-09: Motor Mechanical Loss**

| No. (Hex.)          | Name                  | Description  | Default (Range)    |
|---------------------|-----------------------|--|--------------------|
| E2-09 (0316) Expert | Motor Mechanical Loss | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the mechanical loss of the motor. It is set as a percentage of E2-11 [Motor Rated Power]. Usually it is not necessary to change this setting. | 0.0% (0.0 - 10.0%) |

Adjust this parameter in these conditions. The drive adds the configured mechanical loss to the torque reference value as a torque compensation value:

- There is a large quantity of torque loss from motor bearing friction.
- There is a large quantity of torque loss in fans and pumps.

■ **E2-10: Motor Iron Loss**

| No. (Hex.)   | Name            | Description   | Default (Range)                          |
|--------------|-----------------|---|--|
| E2-10 (0317) | Motor Iron Loss | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor iron loss. | Determined by o2-04, C6-01 (0 - 65535 W) |

■ **E2-11: Motor Rated Power**

| No. (Hex.)   | Name              | Description   | Default (Range)                               |
|--------------|-------------------|---|---|
| E2-11 (0318) | Motor Rated Power | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor rated output in the units from o1-58 [Motor Power Unit Selection]. | Determined by o2-04, C6-01 (0.00 - 650.00 kW) |

The drive automatically sets this parameter to the value input for “Motor Rated Power” during Auto-Tuning.

◆ **E3: V/f Pattern for Motor 2**

E3 parameters [V/f Pattern for Motor 2] set the control mode and V/f pattern used for motor 2.

**Note:**

V/f preset patterns equivalent to those set with E1-03 [V/f Pattern Selection] are not available for E3 parameters. Use E3-04 [Motor 2 Maximum Output Frequency] to E3-10 [Motor 2 Minimum Output Voltage] to manually set the V/f pattern.

■ **Notes on Manually Setting V/f Patterns**

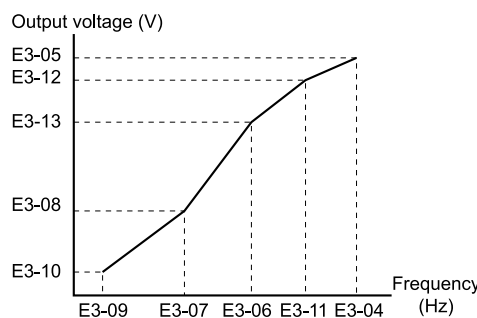


Figure 12.61 Motor 2 V/f Pattern Diagram

- To configure a linear V/f pattern at frequencies lower than E3-06 [Motor 2 Base Frequency], set E3-07 = E3-09 [Motor 2 Mid Point A Frequency = Motor 2 Minimum Output Frequency]. In this application, the drive ignores E1-08 [Mid Point A Voltage].
- Set the five frequencies as specified by these rules:  
 $E3-09 \leq E3-07 < E3-06 \leq E3-11 \leq E3-04$  [Motor 2 Minimum Output Frequency ≤ Motor 2 Mid Point A Frequency < Motor 2 Base Frequency ≤ Motor 2 Mid Point B Frequency ≤ Motor 2 Maximum Output Frequency]  
 Incorrect settings will trigger oPE10 [V/f Data Setting Error].
- If E3-11 = 0.0 Hz, the drive will ignore the V/f pattern settings.

- When you use *A1-03 [Initialize Parameters]* to initialize the drive, the drive will reset the manually set values for *E3-04 to E3-13 [Motor 2 Base Voltage]* to default values.

### ■ E3-01: Motor 2 Control Mode Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| E3-01 (0319) | Motor 2 Control Mode Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the control method for motor 2. | 0<br>(0, 2)     |

**Note:**

- When you change this setting, the drive will set all parameters that are dependent on *E3-01* to their default settings.
- Parameter *L1-01 [Motor Overload (oL1) Protection]* sets the protection operation of *oL1 [Motor Overload]* the same as Motor 1.
- When you use parameter *A1-03 [Initialize Parameters]* to initialize the drive, this parameter is not reset.

#### 0 : V/f Control

#### 2 : Open Loop Vector

### ■ E3-04: Motor 2 Maximum Output Frequency

| No. (Hex.)   | Name                             | Description  | Default (Range)                          |
|--------------|----------------------------------|--|--|
| E3-04 (031A) | Motor 2 Maximum Output Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Set the maximum output frequency for the motor 2 V/f pattern. | Determined by E3-01<br>(40.0 - 590.0 Hz) |

### ■ E3-05: Motor 2 Maximum Output Voltage

| No. (Hex.)   | Name                           | Description   | Default (Range)  |
|--------------|--------------------------------|---|--|
| E3-05 (031B) | Motor 2 Maximum Output Voltage | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the maximum output voltage for the motor 2 V/f pattern. | Determined by E3-01<br>(200 V Class: 0.0 - 255.0 V,<br>400 V Class: 0.0 - 510.0 V) |

### ■ E3-06: Motor 2 Base Frequency

| No. (Hex.)   | Name                   | Description   | Default (Range)                      |
|--------------|------------------------|---|--------------------------------------|
| E3-06 (031C) | Motor 2 Base Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the base frequency for the motor 2 V/f pattern. | Determined by E3-01<br>(0.0 - E3-04) |

### ■ E3-07: Motor 2 Mid Point A Frequency

| No. (Hex.)   | Name                          | Description  | Default (Range)                      |
|--------------|-------------------------------|--|--------------------------------------|
| E3-07 (031D) | Motor 2 Mid Point A Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a middle output frequency for the motor 2 V/f pattern. | Determined by E3-01<br>(0.0 - E3-04) |

### ■ E3-08: Motor 2 Mid Point A Voltage

| No. (Hex.)   | Name                        | Description  | Default (Range)  |
|--------------|-----------------------------|--|--|
| E3-08 (031E) | Motor 2 Mid Point A Voltage | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a middle output voltage for the motor 2 V/f pattern. | Determined by E3-01<br>(200 V Class: 0.0 - 255.0 V,<br>400 V Class: 0.0 - 510.0 V) |

### ■ E3-09: Motor 2 Minimum Output Frequency

| No. (Hex.)   | Name                             | Description   | Default (Range)                      |
|--------------|----------------------------------|---|--------------------------------------|
| E3-09 (031F) | Motor 2 Minimum Output Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum output frequency for the motor 2 V/f pattern. | Determined by E3-01<br>(0.0 - E3-04) |

■ **E3-10: Motor 2 Minimum Output Voltage**

| No. (Hex.)   | Name                           | Description   | Default (Range)  |
|--------------|--------------------------------|---|--|
| E3-10 (0320) | Motor 2 Minimum Output Voltage | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum output voltage for the motor 2 V/f pattern. | Determined by E3-01<br>(200 V Class: 0.0 - 255.0 V,<br>400 V Class: 0.0 - 510.0 V) |

■ **E3-11: Motor 2 Mid Point B Frequency**

| No. (Hex.)             | Name                          | Description  | Default (Range)         |
|------------------------|-------------------------------|--|-------------------------|
| E3-11 (0345)<br>Expert | Motor 2 Mid Point B Frequency | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a middle output frequency for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter. | 0.0 Hz<br>(0.0 - E3-04) |

**Note:**

- Set this parameter to 0.0 to disable the function.
- When you initialize the drive, this parameter is reset to the default value.

■ **E3-12: Motor 2 Mid Point B Voltage**

| No. (Hex.)             | Name                        | Description  | Default (Range)  |
|------------------------|-----------------------------|--|--|
| E3-12 (0346)<br>Expert | Motor 2 Mid Point B Voltage | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a middle output voltage for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter. | 0.0 V<br>(200 V Class: 0.0 to 255.0 V,<br>400 V Class: 0.0 to 510.0 V) |

**Note:**

- Set this parameter to 0.0 to disable the function.
- When you initialize the drive, this parameter is reset to the default value.
- The setting value changes automatically when you do Auto-Tuning (rotational and stationary 1 or 2).

■ **E3-13: Motor 2 Base Voltage**

| No. (Hex.)             | Name                 | Description   | Default (Range)  |
|------------------------|----------------------|---|--|
| E3-13 (0347)<br>Expert | Motor 2 Base Voltage | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the base voltage for the motor 2 V/f pattern. Set this parameter to adjust the V/f pattern for the constant output range. Usually it is not necessary to change this parameter. | 0.0 V<br>(200 V Class: 0.0 to 255.0 V,<br>400 V Class: 0.0 to 510.0 V) |

**Note:**

- When you initialize the drive, this parameter is reset to the default value.
- The setting value changes automatically when you do Auto-Tuning (rotational and stationary 1 or 2).

◆ **E4: Motor 2 Parameters**

*E4 parameters [Motor 2 Parameters]* set induction motor data. To switch drive operation from one motor to a different motor, configure motor 2.

Auto-Tuning automatically sets the *E4 parameters* to the best values for the application. If you cannot do Auto-Tuning, set the *E4 parameters* manually.

**Note:**

*E3-xx* and *E4-xx* are available when *H1-xx* = 16 [*MFDI Function Select* = Motor 2 Selection].

■ **E4-01: Motor 2 Rated Current**

| No. (Hex.)   | Name                  | Description  | Default (Range)  |
|--------------|-----------------------|--|--|
| E4-01 (0321) | Motor 2 Rated Current | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the motor rated current for motor 2 in amps. | Determined by o2-04, C6-01<br>(10% to 200% of the drive rated current) |

**Note:**

- If  $E4-01 \leq E4-03$  [Motor 2 Rated No-Load Current], the drive will detect  $oPE02$  [Parameter Range Setting Error].
- When the drive model changes, the display units for this parameter also change.
  - 0.01 A: B001 - B018, 2001 - 2042, 4001 - 4023
  - 0.1 A: 2056 - 2082, 4031 - 4060

The value set for  $E4-01$  becomes the reference value for motor protection, the torque limit, and torque control. Enter the motor rated current written on the motor nameplate. Auto-Tuning automatically sets the value of  $E4-01$  to the value input for [Motor Rated Current].

### ■ E4-02: Motor 2 Rated Slip

| No. (Hex.)   | Name               | Description  | Default (Range)                                   |
|--------------|--------------------|--|---|
| E4-02 (0322) | Motor 2 Rated Slip | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor rated slip for motor 2. | Determined by o2-04, C6-01<br>(0.000 - 20.000 Hz) |

The value set in  $E4-02$  becomes the base slip compensation value. The drive sets this parameter during Rotational Auto-Tuning and Stationary Auto-Tuning. If you cannot do Auto-Tuning, use the information written on the motor nameplate and this formula to calculate the motor rated slip:

$$E4-02 = f - (n \times p) / 120$$

- f: Motor rated frequency (Hz)
- n: Rated motor speed ( $\text{min}^{-1}$  (r/min))
- p: Number of motor poles

### ■ E4-03: Motor 2 Rated No-Load Current

| No. (Hex.)   | Name                          | Description   | Default (Range)                            |
|--------------|-------------------------------|---|--|
| E4-03 (0323) | Motor 2 Rated No-Load Current | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the no-load current for motor 2 in amps when operating at the rated frequency and the no-load voltage. | Determined by o2-04, C6-01<br>(0 to E4-01) |

**Note:**

When the drive model changes, the display units for this parameter also change.

- 0.01 A: B001 - B018, 2001 - 2042, 4001 - 4023
- 0.1 A: 2056 - 2082, 4031 - 4060

You can also manually enter the motor no-load current shown on the motor test report to  $E4-03$ . Contact the motor manufacturer for the motor test report.

**Note:**

The default setting of the no-load current is for a 4-pole motor recommended by Yaskawa.

### ■ E4-04: Motor 2 Motor Poles

| No. (Hex.)   | Name                | Description   | Default (Range) |
|--------------|---------------------|---|-----------------|
| E4-04 (0324) | Motor 2 Motor Poles | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the number of poles for motor 2. | 4<br>(2 - 120)  |

Auto-Tuning automatically sets  $E4-04$  to the value input for [Number of Motor Poles].

### ■ E4-05: Motor 2 Line-to-Line Resistance

| No. (Hex.)   | Name                            | Description   | Default (Range)  |
|--------------|---------------------------------|---|--|
| E4-05 (0325) | Motor 2 Line-to-Line Resistance | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the line-to-line resistance for the motor 2 stator windings. | Determined by o2-04, C6-01<br>(0.000 - 65.000 $\Omega$ ) |

**Note:**

This value is the line-to-line resistance for motor 2. Do not set this parameter with the per-phase resistance.

The drive automatically calculates this value when Auto-Tuning completes successfully. If you cannot do Auto-Tuning, get the test report from the motor manufacturer. To calculate the motor line-to-line resistance, use the information shown on the motor nameplate with one of these formulas:

- E-type insulation: the resistance value ( $\Omega$ ) shown on the test report at  $75\text{ }^{\circ}\text{C} \times 0.92$
- B-type insulation: the resistance value ( $\Omega$ ) shown on the test report at  $75\text{ }^{\circ}\text{C} \times 0.92$
- F-type insulation: the resistance value ( $\Omega$ ) shown on the test report at  $115\text{ }^{\circ}\text{C} \times 0.87$

■ **E4-06: Motor 2 Leakage Inductance**

| No. (Hex.)   | Name                       | Description  | Default (Range)                             |
|--------------|----------------------------|--|---|
| E4-06 (0326) | Motor 2 Leakage Inductance | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the voltage drop from motor 2 leakage inductance as a percentage of Motor Rated Voltage when motor 2 operates at the rated frequency and rated current. | Determined by o2-04, C6-01<br>(0.0 - 60.0%) |

The drive sets this parameter during Rotational Auto-Tuning and Stationary Auto-Tuning.

**Note:**

You cannot usually find the quantity of voltage drop on the motor nameplate. If you do not know the value of the motor 2 leakage inductance, get the test report from the motor manufacturer.

■ **E4-07: Motor 2 Saturation Coefficient 1**

| No. (Hex.)   | Name                             | Description  | Default (Range)       |
|--------------|----------------------------------|--|-----------------------|
| E4-07 (0343) | Motor 2 Saturation Coefficient 1 | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor 2 iron-core saturation coefficient at 50% of the magnetic flux. | 0.50<br>(0.00 - 0.50) |

The drive sets this parameter during Rotational Auto-Tuning. The drive uses this value when it operates the motor in the constant output range.

■ **E4-08: Motor 2 Saturation Coefficient 2**

| No. (Hex.)   | Name                             | Description  | Default (Range)        |
|--------------|----------------------------------|--|------------------------|
| E4-08 (0344) | Motor 2 Saturation Coefficient 2 | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor 2 iron-core saturation coefficient at 75% of the magnetic flux. | 0.75<br>(E4-07 - 0.75) |

The drive sets this parameter during Rotational Auto-Tuning. The drive uses this value when it operates the motor in the constant output range.

■ **E4-09: Motor 2 Mechanical Loss**

| No. (Hex.)          | Name                    | Description  | Default (Range)       |
|---------------------|-------------------------|--|-----------------------|
| E4-09 (033F) Expert | Motor 2 Mechanical Loss | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the mechanical loss of motor 2. It is set as a percentage of E4-11 [Motor 2 Rated Power]. Usually it is not necessary to change this setting. | 0.0%<br>(0.0 - 10.0%) |

Adjust this parameter in these conditions. The drive adds the configured mechanical loss to the torque reference value as a torque compensation value:

- There is a large quantity of torque loss from motor bearing friction.
- There is a large quantity of torque loss in fans and pumps.

■ **E4-10: Motor 2 Iron Loss**

| No. (Hex.)   | Name              | Description   | Default (Range)                             |
|--------------|-------------------|---|---|
| E4-10 (0340) | Motor 2 Iron Loss | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor iron loss for motor 2. | Determined by o2-04, C6-01<br>(0 - 65535 W) |

■ **E4-11: Motor 2 Rated Power**

| No. (Hex.)   | Name                | Description  | Default (Range)                                  |
|--------------|---------------------|--|--|
| E4-11 (0327) | Motor 2 Rated Power | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor rated power in the units from o1-58 [Motor Power Unit Selection]. | Determined by o2-04, C6-01<br>(0.00 - 650.00 kW) |

Auto-Tuning automatically sets this parameter to the value input for [Motor Rated Power].

## ◆ E5: PM Motor Settings

*E5 parameters* are used to set PM motor data.

Set *E5-01* to the motor code when using PM motors recommended by Yaskawa. *E5* and other related motor parameters will be automatically set to the optimal values.

Perform Auto-Tuning for all other PM motors. If information from motor nameplates or test reports is available, the *E5 parameters* can be manually entered.

**Note:**

- The keypad shows *E5-xx* only when *A1-02* = 5, 6 [*Control Method Selection* = *OLV/PM*, *AOLV/PM*].
- *E5-xx parameters* are not reset when the drive is initialized using parameter *A1-03* [*Initialize Parameters*].

### ■ E5-01: PM Motor Code Selection

| No. (Hex.)      | Name                    | Description  | Default (Range)       |
|-----------------|-------------------------|--|-----------------------|
| E5-01<br>(0329) | PM Motor Code Selection | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the motor code for Yaskawa PM motors. The drive uses the motor code to automatically set some parameters to their correct settings. | FFFF<br>(0000 - FFFF) |

**Note:**

- If the drive hunts or shows an alarm after you enter a motor code, use the keypad to enter the value shown on the nameplate to *E5-xx*.
- When you use a PM motor other than a Yaskawa SMRD, SMRA, or SSR1 series, set *E5-01* = FFFF.

Figure 12.62 gives information about the motor code setting digits.

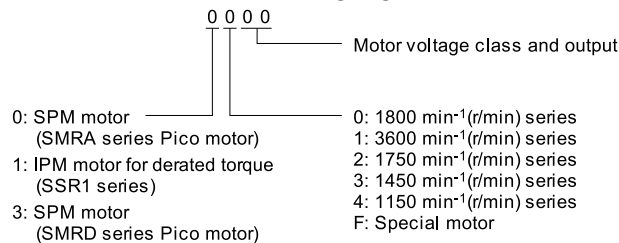


Figure 12.62 PM Motor Code

### ■ E5-02: PM Motor Rated Power

| No. (Hex.)      | Name                 | Description  | Default (Range)  |
|-----------------|----------------------|--|--|
| E5-02<br>(032A) | PM Motor Rated Power | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the PM motor rated output in the units from <i>o1-58</i> [ <i>Motor Power Unit Selection</i> ]. | Determined by <i>o2-04</i> , <i>C6-01</i><br>(0.10 - 30.00 kW) |

These Auto-Tuning methods will automatically set this parameter:

- PM Motor Parameter Settings
- PM Stationary Auto-Tuning
- PM Rotational Auto-Tuning

### ■ E5-03: Motor Rated Current (FLA)

| No. (Hex.)      | Name                      | Description  | Default (Range)   |
|-----------------|---------------------------|--|---|
| E5-03<br>(032B) | Motor Rated Current (FLA) | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the PM motor rated current (FLA). | Determined by <i>o2-04</i> , <i>C6-01</i><br>(10% to 200% of the drive rated current) |

**Note:**

When the drive model changes, the display units for this parameter also change.

- 0.01 A: B001 - B018, 2001 - 2042, 4001 - 4023
- 0.1 A: 2056 - 2082, 4031 - 4060

The drive automatically sets *E5-03* to the value input for *T2-06* [*PM Motor Rated Current*] after you do these types of Auto-Tuning:

- PM Motor Parameter Settings
- PM Stationary Auto-Tuning

- PM Stationary Tuning for Stator Resistance
- PM Rotational Auto-Tuning

■ **E5-04: PM Motor Pole Count**

| No. (Hex.)   | Name                | Description   | Default (Range) |
|--------------|---------------------|---|-----------------|
| E5-04 (032C) | PM Motor Pole Count | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the number of PM motor poles. | 4<br>(2 - 120)  |

These types of Auto-Tuning will automatically set this parameter to the value of [Number of Motor Poles]:

- PM Motor Parameter Settings
- PM Stationary Auto-Tuning
- PM Rotational Auto-Tuning

■ **E5-05: PM Motor Resistance (ohms/phase)**

| No. (Hex.)   | Name                             | Description   | Default (Range)               |
|--------------|----------------------------------|---|-------------------------------|
| E5-05 (032D) | PM Motor Resistance (ohms/phase) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the resistance per phase of a PM motor. Set 50% of the line-to-line resistance. | 0.100 Ω<br>(0.000 - 65.000 Ω) |

PM motor Auto-Tuning automatically sets this parameter to the value of [PM Motor Stator Resistance].

**Note:**

Do not change the setting calculated by Auto-Tuning unless it is necessary.

■ **E5-06: PM d-axis Inductance (mH/phase)**

| No. (Hex.)   | Name                            | Description   | Default (Range)               |
|--------------|---------------------------------|---|-------------------------------|
| E5-06 (032E) | PM d-axis Inductance (mH/phase) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the PM motor d-axis inductance. | 1.00 mH<br>(0.00 - 300.00 mH) |

PM motor Auto-Tuning automatically sets this parameter to the value of [PM Motor d-Axis Inductance].

**Note:**

Do not change the setting calculated by Auto-Tuning unless it is necessary.

■ **E5-07: PM q-axis Inductance (mH/phase)**

| No. (Hex.)   | Name                            | Description   | Default (Range)               |
|--------------|---------------------------------|---|-------------------------------|
| E5-07 (032F) | PM q-axis Inductance (mH/phase) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the PM motor q-axis inductance. | 1.00 mH<br>(0.00 - 300.00 mH) |

PM motor Auto-Tuning automatically sets this parameter to the value of [PM Motor q-Axis Inductance].

**Note:**

Do not change the setting calculated by Auto-Tuning unless it is necessary.

■ **E5-09: PM Back-EMF Vpeak (mV/(rad/s))**

| No. (Hex.)   | Name                           | Description   | Default (Range)                               |
|--------------|--------------------------------|---|---|
| E5-09 (0331) | PM Back-EMF Vpeak (mV/(rad/s)) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the peak value of PM motor induced voltage. | 0.0 mV/(rad/sec)<br>(0.0 - 2000.0 mV/(rad/s)) |

PM motor Auto-Tuning automatically sets this parameter to the value of [Back-EMF Voltage Constant (Ke)].

When *E5-01 = FFFF*, only set *E5-09* or *E5-24 [PM Back-EMF L-L Vrms (mV/rpm)]* as the induced voltage constant.

**Note:**

When you set this parameter, also set *E5-24 = 0.0*. The drive will detect *oPE08 [Parameter Selection Error]* in these conditions:

- *E5-09 = 0.0* and *E5-24 = 0.0*
- *E5-09 ≠ 0.0* and *E5-24 ≠ 0.0*



### ■ E5-24: PM Back-EMF L-L Vrms (mV/rpm)

| No. (Hex.)   | Name                          | Description  | Default (Range)  |
|--------------|-------------------------------|--|--|
| E5-24 (0353) | PM Back-EMF L-L Vrms (mV/rpm) | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the RMS value for PM motor line voltage. | 200 V class: 100.0 mV/min<br>400 V class: 200.0 mV/min<br>(0.0 - 6500.0 mV/min <sup>-1</sup> ) |

PM motor Auto-Tuning automatically sets this parameter to the value of [Back-EMF Voltage Constant (Ke)]. When  $E5-01 = FFFF$ , only set  $E5-09$  [PM Back-EMF  $V_{peak}$  (mV/(rad/s))] or  $E5-24$  as the induced voltage constant.

**Note:**

When you set this parameter, also set  $E5-09 = 0.0$ . The drive will detect  $oPE08$  [Parameter Selection Error] in these conditions:

- $E5-09 = 0.0$  and  $E5-24 = 0.0$
- $E5-09 \neq 0.0$  and  $E5-24 \neq 0.0$

### ■ E5-25: Polarity Estimation Timeout

| No. (Hex.)          | Name                        | Description  | Default (Range) |
|---------------------|-----------------------------|--|-----------------|
| E5-25 (035E) Expert | Polarity Estimation Timeout | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function that switches polarity for initial polarity estimation. Usually it is not necessary to change this setting. | 0<br>(0, 1)     |

**0 : Disabled**

**1 : Enabled**

## ◆ E9: Motor Setting

$E9$  parameters are used to configure induction motors, PM motors, and SynRM motors. Configure these parameters only for derating torque applications in which a high level of responsiveness and accurate speed control are not required.

$E9$  parameters are automatically configured with values input by the Auto-Tuning process for motor parameter settings.  $E9$  parameters can be manually configured when the EZ Tuning process cannot be performed.

### ■ E9-01: Motor Type Selection

| No. (Hex.)   | Name                 | Description  | Default (Range) |
|--------------|----------------------|--|-----------------|
| E9-01 (11E4) | Motor Type Selection | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the type of motor. | 0<br>(0 to 2)   |

EZ Tuning automatically sets this parameter to the value of [Motor Type Selection].

**0 : Induction (IM)**

**1 : Permanent Magnet (PM)**

**2 : Synchronous Reluctance (SynRM)**

### ■ E9-02: Maximum Speed

| No. (Hex.)   | Name          | Description   | Default (Range)                          |
|--------------|---------------|---|--|
| E9-02 (11E5) | Maximum Speed | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the maximum speed of the motor. | Determined by E9-01<br>(40.0 - 120.0 Hz) |

**Note:**

The unit of measure changes when the setting of  $o1-04$  [V/f Pattern Display Unit].

EZ Tuning automatically sets this parameter to the value of [Motor Max Revolutions].

■ **E9-03: Rated Speed**

| No. (Hex.)   | Name        | Description  | Default (Range)                                     |
|--------------|-------------|--|---|
| E9-03 (11E6) | Rated Speed | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the rated rotation speed of the motor. | Determined by E9-01 (100 - 7200 min <sup>-1</sup> ) |

EZ Tuning automatically sets this parameter to the value of [Rated Speed].

**Note:**

Set *E9-01* = 0 [Motor Type Selection = Induction (IM)] before you set this parameter.

■ **E9-04: Base Frequency**

| No. (Hex.)   | Name           | Description   | Default (Range)                       |
|--------------|----------------|---|---------------------------------------|
| E9-04 (11E7) | Base Frequency | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the rated frequency of the motor. | Determined by E9-01 (40.0 - 120.0 Hz) |

**Note:**

The unit of measure changes when the setting of *o1-04* [V/f Pattern Display Unit].

EZ Tuning automatically sets this parameter to the value of [Base Frequency].

■ **E9-05: Base Voltage**

| No. (Hex.)   | Name                | Description   | Default (Range)  |
|--------------|---------------------|---|--|
| E9-05 (11E8) | Motor Rated Voltage | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the rated voltage of the motor. | 200 V Class: 200.0 V, 400 V: 400.0 V<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) |

EZ Tuning automatically sets this parameter to the value of [Base Voltage].

■ **E9-06: Motor Rated Current (FLA)**

| No. (Hex.)   | Name                      | Description  | Default (Range)  |
|--------------|---------------------------|--|--|
| E9-06 (11E9) | Motor Rated Current (FLA) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the motor rated current in amps. | Determined by E9-01 and o2-04 (10% to 200% of the drive rated current) |

**Note:**

When the drive model changes, the display units for this parameter also change.

- 0.01 A: B001 to B018, 2001 to 2042, 4001 to 4023
- 0.1 A: 2056 to 2082, 4031 to 4060

The setting value of *E9-06* is the reference value for motor protection. Enter the motor rated current written on the motor nameplate. Auto-Tuning the drive will automatically set *E9-06* to the value input for *T4-07* [Motor Rated Current].

■ **E9-07: Motor Rated Power**

| No. (Hex.)   | Name              | Description   | Default (Range)                                  |
|--------------|-------------------|---|--|
| E9-07 (11EA) | Motor Rated Power | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the motor rated output in the units from <i>o1-58</i> [Motor Power Unit Selection]. | Determined by E9-02 and o2-04 (0.00 - 650.00 kW) |

Auto-Tuning automatically sets this parameter to the value of [Motor Rated Power (kW)].

■ **E9-08: Motor Pole Count**

| No. (Hex.)   | Name             | Description  | Default (Range) |
|--------------|------------------|--|-----------------|
| E9-08 (11EB) | Motor Pole Count | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the number of motor poles. | 4 (2 to 120)    |

Auto-Tuning automatically sets this parameter to the value of [Number of Motor Poles].

### ■ E9-09: Motor Rated Slip

| No.<br>(Hex.)   | Name             | Description   | Default<br>(Range)              |
|-----------------|------------------|---|---------------------------------|
| E9-09<br>(11EC) | Motor Rated Slip | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the motor rated slip. | 0.000 Hz<br>(0.000 - 20.000 Hz) |

The setting value of this parameter is the slip compensation reference value.

The drive uses the setting values of *E9-03*, *E9-04*, and *E9-08* to calculate this parameter. When Motor Rated Slip = 0, Auto-Tuning automatically sets this parameter to the value of [Motor Rated Slip].

**Note:**

Set *E9-01* = 0 [*Motor Type Selection = Induction (IM)*] before you set this parameter.

### ■ E9-10: Motor Line-to-Line Resistance

| No.<br>(Hex.)   | Name                          | Description  | Default<br>(Range)                        |
|-----------------|-------------------------------|--|---|
| E9-10<br>(11ED) | Motor Line-to-Line Resistance | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the line-to-line resistance for the motor stator windings. | Determined by o2-04<br>(0.000 - 65.000 Ω) |

**Note:**

This value is the motor line-to-line resistance. Do not set this parameter with the per-phase resistance.

Stationary Auto-Tuning automatically sets this parameter. If you cannot do Stationary Auto-Tuning, use the test report from the motor manufacturer. You can calculate the motor line-to-line resistance with one of these formulas:

- E-type insulation: the resistance value (Ω) shown on the test report at 75 °C × 0.92
- B-type insulation: the resistance value (Ω) shown on the test report at 75 °C × 0.92
- F-type insulation: the resistance value (Ω) shown on the test report at 115 °C × 0.87

## 12.7 F: Options

*F* parameters are used to set option cards, which function as interfaces for encoders, analog I/O, digital I/O, and fieldbus communication.

### ◆ F1: Fault Detection in PG Speed Control

F1 parameters set the fault detection function in Speed Feedback (V/F Control). When  $A1-02 = 0$  [Control Method Selection = V/f], set  $H6-01 = 3$  [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this function. For speed feedback, connect the single-channel pulse signal from the PG encoder to pulse train input terminal RP. Use the Slip Compensation signal to improve the accuracy of Speed Control. This function is available for Motor 1.

**WARNING! Sudden Movement Hazard.** Do test runs and examine the drive to make sure that the command references are correct. If you set the command reference incorrectly, it can cause damage to the drive or serious injury or death.

**WARNING! Sudden Movement Hazard.** Make sure that the host controller circuitry has correct safety design that will let you keep control of the motor if the drive loses speed feedback. If you do not have control of the motor, it can cause serious injury or death.

#### ■ F1-02: Encoder Signal Loss Detect Sel

| No. (Hex.)   | Name                           | Description  | Default (Range) |
|--------------|--------------------------------|--|-----------------|
| F1-02 (0381) | Encoder Signal Loss Detect Sel | <div style="display: flex; gap: 5px;"> <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="border: 1px solid gray; padding: 2px;">OLV</span> <span style="border: 1px solid gray; padding: 2px;">OLV/PM</span> <span style="border: 1px solid gray; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid gray; padding: 2px;">EZOLV</span> </div> Sets the method to stop the motor or let the motor continue operating when the drive detects <i>PGo</i> [Encoder (PG) Feedback Loss]. | 1<br>(0 - 4)    |

If the drive does not detect output pulses from the encoder for the time set in  $F1-14$  [Encoder Open-Circuit Detect Time], it will trigger *PGo*.

**Note:**

- When  $A1-02 = 0$  [Control Method Selection = V/f], set  $H6-01 = 3$  [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.
- Motor speed and load conditions can cause *ov* [Overvoltage] and *oC* [Overcurrent] faults.

#### 0 : Ramp to Stop

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

#### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

#### 2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in  $C1-09$  [Fast Stop Time]. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

#### 3 : Alarm Only

The keypad shows *PGo* and the drive continues operation. Only use this setting in special conditions to prevent damage to the motor and machinery. The output terminal set to *Alarm* [ $H2-01$  to  $H2-03 = 10$ ] activates.

#### 4 : No Alarm Display

The drive continues operation and does not show *PGo* on the keypad. Only use this setting in special conditions to prevent damage to the motor and machinery.

#### ■ F1-03: Overspeed Detection Selection

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| F1-03 (0382) | Overspeed Detection Selection | <div style="display: flex; gap: 5px;"> <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="border: 1px solid gray; padding: 2px;">OLV</span> <span style="border: 1px solid gray; padding: 2px;">OLV/PM</span> <span style="border: 1px solid gray; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid gray; padding: 2px;">EZOLV</span> </div> Sets the method to stop the motor or let the motor continue to operate when the drive detects <i>oS</i> [Overspeed]. | 1<br>(0 - 3)    |

When the motor speed is more than the value set in  $F1-08$  [Overspeed Detection Level] for longer than the time set in  $F1-09$  [Overspeed Detection Delay Time] it will trigger *oS*.

#### 0 : Ramp to Stop

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

### 2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in C1-09 [Fast Stop Time]. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

### 3 : Alarm Only

The keypad shows *oS* and the drive continues operation. Only use this setting in special conditions to prevent damage to the motor and machinery. The output terminal set to *Alarm* [H2-01 to H2-03 = 10] activates.

**Note:**

- When A1-02 = 0 [Control Method Selection = V/f], set H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.
- When A1-02 = 6 [Control Method Selection = AOLV/PM], the drive will automatically set F1-03 = 1 [Coast to Stop]. You cannot change this value.

## ■ F1-04: Speed Deviation Detection Select

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| F1-04 (0383) | Speed Deviation Detection Select | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the method to stop the motor or let the motor continue to operate when the drive detects <i>dEv</i> [Speed Deviation]. | 3<br>(0 - 3)    |

When the difference between the frequency reference and the motor speed is more than the value set in F1-10 [Speed Deviation Detection Level] for longer than the time set in F1-11 [Speed Deviation Detect DelayTime], it will trigger *dEv*.

**Note:**

When A1-02 = 0 [Control Method Selection = V/f], set H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

### 0 : Ramp to Stop

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

### 2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in C1-09 [Fast Stop Time]. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

### 3 : Alarm Only

The keypad shows *dEv* and the drive continues operation. Only use this setting in special conditions to prevent damage to the motor and machinery. The output terminal set to *Alarm* [H2-01 to H2-03 = 10] activates.

## ■ F1-08: Overspeed Detection Level

| No. (Hex.)   | Name                      | Description   | Default (Range)    |
|--------------|---------------------------|---|--------------------|
| F1-08 (0387) | Overspeed Detection Level | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the detection level of <i>oS</i> [Overspeed] as a percentage when the maximum output frequency is 100%. | 115%<br>(0 - 120%) |

When the motor speed is more than the value set in F1-08 for longer than the time set in F1-09 [Overspeed Detection Delay Time], the drive will detect *oS*.

**Note:**

When A1-02 = 0 [Control Method Selection = V/f], set H6-01 = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

■ **F1-09: Overspeed Detection Delay Time**

| No. (Hex.)   | Name                           | Description  | Default (Range)                   |
|--------------|--------------------------------|--|-----------------------------------|
| F1-09 (0388) | Overspeed Detection Delay Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the length of time that the speed feedback must be more than the <i>F1-08</i> level to cause <i>oS</i> [Overspeed].</p> | Determined by A1-02 (0.0 - 2.0 s) |

When the motor speed is more than the value set in *F1-08* [Overspeed Detection Level] for longer than the time set in *F1-09*, the drive will detect *oS*.

**Note:**

When *A1-02* = 0 [Control Method Selection = V/f], set *H6-01* = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

■ **F1-10: Speed Deviation Detection Level**

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| F1-10 (0389) | Speed Deviation Detection Level | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the detection level of <i>dEv</i> [Speed Deviation] as a percentage when the maximum output frequency is 100%.</p> | 10% (0 - 50%)   |

When the speed deviation between the frequency reference and the actual motor speed is more than the value set in *F1-10* for longer than the time set in *F1-11* [Speed Deviation Detect DelayTime], the drive will detect *dEv*.

**Note:**

When *A1-02* = 0 [Control Method Selection = V/f], set *H6-01* = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

■ **F1-11: Speed Deviation Detect DelayTime**

| No. (Hex.)   | Name                             | Description   | Default (Range)      |
|--------------|----------------------------------|---|----------------------|
| F1-11 (038A) | Speed Deviation Detect DelayTime | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the length of time that the difference between the frequency reference and speed feedback must be more than the level in <i>F1-10</i> to cause <i>dEv</i> [Speed Deviation].</p> | 0.5 s (0.0 - 10.0 s) |

When the speed deviation between the frequency reference and the actual motor speed is more than the value set in *F1-10* [Speed Deviation Detection Level] for longer than the time set in *F1-11*, the drive will detect *dEv*.

**Note:**

When *A1-02* = 0 [Control Method Selection = V/f], set *H6-01* = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.

■ **F1-14: Encoder Open-Circuit Detect Time**

| No. (Hex.)   | Name                             | Description  | Default (Range)      |
|--------------|----------------------------------|--|----------------------|
| F1-14 (038D) | Encoder Open-Circuit Detect Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the length of time that the drive must not receive a pulse signal to cause <i>PGo</i> [Encoder (PG) Feedback Loss].</p> | 2.0 s (0.0 - 10.0 s) |

If the drive does not detect output pulses from the encoder for the time set in *F1-14*, it will trigger *PGo*.

**Note:**

- When *A1-02* = 0 [Control Method Selection = V/f], set *H6-01* = 3 [Terminal RP Pulse Train Function = Speed Feedback (V/F Control)] to enable this parameter.
- Motor speed and load conditions can cause *ov* [Overvoltage] and *oC* [Overcurrent] faults.

◆ **F6, F7: Communication Options**

*F6* and *F7* parameters are used to set the basic communication settings and method of fault detection for the communication option card. The communication option card parameters include common option card parameters and communication protocol-specific parameters.

The following table lists the parameters that need to be set for each communication option card.

Refer to the technical manual for each communication option card for more information on installing, wiring, and configuring the details needed before starting communication.

**WARNING!** Sudden Movement Hazard. Do test runs and examine the drive to make sure that the command references are correct. If you set the command reference incorrectly, it can cause damage to the drive or serious injury or death.

**Table 12.47 Correspondence Between Communication Protocols and Parameters (SI-C3, SI-T3, SI-ET3, SI-P3, SI-S3, and SI-ES3)**

| Parameter      | CC-Link<br>SI-C3 | MECHATROLINK-II<br>SI-T3 | MECHATROLINK-III<br>SI-ET3 | PROFIBUS-DP<br>SI-P3 | CANopen<br>SI-S3 | EtherCAT<br>SI-ES3 |
|----------------|------------------|--------------------------|----------------------------|----------------------|------------------|--------------------|
| F6-01 to F6-03 | x                | x                        | x                          | x                    | x                | x                  |
| F6-04          | x                | -                        | -                          | -                    | -                | -                  |
| F6-06 to F6-08 | x                | x                        | x                          | x                    | x                | x                  |
| F6-10, F6-11   | x                | -                        | -                          | -                    | -                | -                  |
| F6-14          | x                | x                        | x                          | x                    | x                | x                  |
| F6-16          | x                | x                        | x                          | x                    | x                | x                  |
| F6-20, F6-21   | -                | x                        | x                          | -                    | -                | -                  |
| F6-22          | -                | x                        | -                          | -                    | -                | -                  |
| F6-23 to F6-26 | -                | x                        | x                          | -                    | -                | -                  |
| F6-30 to F6-32 | -                | -                        | -                          | x                    | -                | -                  |
| F6-35, F6-36   | -                | -                        | -                          | -                    | x                | -                  |
| F6-50 to F6-71 | -                | -                        | -                          | -                    | -                | -                  |
| F7-01 to F7-15 | -                | -                        | -                          | -                    | -                | -                  |
| F7-16          | -                | -                        | -                          | -                    | -                | -                  |
| F7-17 to F7-42 | -                | -                        | -                          | -                    | -                | -                  |
| F7-60 to F7-79 | -                | -                        | -                          | x                    | -                | -                  |

**Table 12.48 Relation Between Communication Protocols and Parameters (SI-B3, SI-N3, SI-W3, SI-EM3, SI-EP3, and SI-EN3)**

| Parameter      | DeviceNet<br>SI-N3 | LonWorks<br>SI-W3 | Modbus TCP/IP<br>SI-EM3 | PROFINET<br>SI-EP3 | EtherNet/IP<br>SI-EN3 |
|----------------|--------------------|-------------------|-------------------------|--------------------|-----------------------|
| F6-01 to F6-03 | x                  | x                 | x                       | x                  | x                     |
| F6-04          | -                  | -                 | -                       | -                  | -                     |
| F6-06 to F6-08 | x                  | x                 | x                       | x                  | x                     |
| F6-10, F6-11   | -                  | -                 | -                       | -                  | -                     |
| F6-14          | x                  | x                 | x                       | x                  | x                     |
| F6-16          | x                  | x                 | x                       | x                  | x                     |
| F6-20, F6-21   | -                  | -                 | -                       | -                  | -                     |
| F6-22          | -                  | -                 | -                       | -                  | -                     |
| F6-23 to F6-26 | -                  | -                 | -                       | -                  | -                     |
| F6-30 to F6-32 | -                  | -                 | -                       | -                  | -                     |
| F6-35, F6-36   | -                  | -                 | -                       | -                  | -                     |
| F6-50 to F6-71 | x                  | -                 | -                       | -                  | -                     |
| F7-01 to F7-15 | -                  | -                 | x                       | x                  | x                     |
| F7-16          | -                  | -                 | x                       | -                  | -                     |
| F7-17 to F7-42 | -                  | -                 | -                       | x                  | x                     |
| F7-60 to F7-79 | -                  | -                 | -                       | -                  | -                     |

## ■ Gateway Mode

### Note:

When you use Gateway Mode, do not install the communication option in slave drives. If you install a communication option in a slave drive, the drive commands and responses will not synchronize.

In gateway mode, you can use one communication option to communicate with more than one drive.

You can use one communication option to connect a maximum of five drives to the field bus communications.

Refer to [Figure 12.63](#) for more information.

When you install a communication option on the master drive, you can use the RS-485 communication terminals to transmit data to slave drives that do not have a communication option.

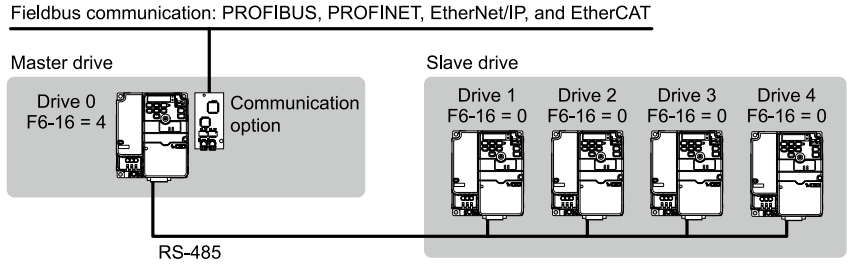


Figure 12.63 Connection Examples in Gateway Mode

Table 12.49 Specification

| Item                         | Specification  |
|------------------------------|--|
| Applicable options           | All options that support the MEMOBUS access function (for example, PROFIBUS-DP, PROFINET, EtherNet/IP, EtherCAT)   |
| Compatible Products          | Drives that can set F6-16 [Gateway Mode] *1  |
| Number of connected drives   | Maximum: 5 units   |
| Communication specifications | MEMOBUS/Modbus (RTUmode) communications  |
| Commands/responses           | The controller can send this data to each drive (Drive 0 to Drive 4): <ul style="list-style-type: none"> <li>Control commands: Run commands and frequency references</li> <li>Control responses: Output frequency and drive status (during run, faults)</li> <li>Read and write parameters</li> <li>Read monitors</li> </ul> |
| Synchronous control          | Not supported  |

\*1 Gateway Mode is not available with Yaskawa 1000-series drives or previous series drives.

**Note:**

- The communication speed in gateway mode is slower than the speed in fieldbus communications. Make sure that the speed is acceptable for your system.
- Response speed with the communication option is slower than with point-to-point communications.
- Set H5-03 [Communication Parity Selection] to the same value on the master drive and slave drives.

**WARNING! Injury to Personnel.** Separately prepare safety protection equipment and systems, for example fast stop switches. If the motor does not stop correctly from the disconnection of communications cable or electrical interference, it can cause serious injury.

**Setting Gateway Mode**

Table 12.50 shows sample settings to connect 4 slave drives:

Table 12.50 Sample Settings for Using Gateway Mode

|                           | F6-16<br>[Gateway Mode] | H5-01<br>[Drive Node Address] *1 | H5-02<br>[Communication Speed Selection]<br>H5-03<br>[Communication Parity Selection] | H5-06<br>[Drive Transmit Wait Time] | H5-09<br>[CE Detection Time] | b1-01<br>[Frequency Reference Selection 1] | b1-02<br>[Run Command Selection 1]   |
|---------------------------|-------------------------|----------------------------------|---|-------------------------------------|------------------------------|--|--------------------------------------|
| Drive 0<br>(Master Drive) | 1 - 4 *2                | 1F (Default)                     | *5  | 5 ms (Default) *6                   | ≥ 2.0 s *7                   | 3 [Option PCB]                             | 3 [Option PCB]                       |
| Drive 1<br>(Slave Drive)  | 0                       | 01 *3 *4                         | *5  | 5 ms (Default) *6                   | ≥ 0.9 s *7                   | 2 [Memobus/Modbus Communications] *8       | 2 [Memobus/Modbus Communications] *8 |
| Drive 2<br>(Slave Drive)  | 0                       | 02 *3 *4                         | *5  | 5 ms (Default) *6                   | ≥ 0.9 s *7                   | 2 [Memobus/Modbus Communications] *8       | 2 [Memobus/Modbus Communications] *8 |
| Drive 3<br>(Slave Drive)  | 0                       | 03 *3 *4                         | *5  | 5 ms (Default) *6                   | ≥ 0.9 s *7                   | 2 [Memobus/Modbus Communications] *8       | 2 [Memobus/Modbus Communications] *8 |
| Drive 4<br>(Slave Drive)  | 0                       | 04 *3 *4                         | *5  | 5 ms (Default) *6                   | ≥ 0.9 s *7                   | 2 [Memobus/Modbus Communications] *8       | 2 [Memobus/Modbus Communications] *8 |

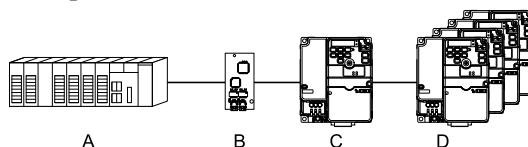
- \*1 Re-energize the drive to apply the new settings.
- \*2 Specify the number of slave drives you will connect.
- \*3 Setting 0 will not let the drive respond to MEMOBUS/Modbus communications.
- \*4 Set a slave address that is different from other slave devices.
- \*5 Enter the same value that you use for the master drive.
- \*6 To correctly detect the response timeout, do not change the value of H5-06 from the default value.



- \*7 Set  $H5-09 \geq 0.9$ . When  $H5-09 < 0.9$ , the drive will detect *CE* [Modbus Communication Error] before it detects a response timeout.
- \*8 On each slave drive, set *b1-01* [Frequency Reference Selection 1] and *b1-02* [Run Command Selection 1] to 2 [Memobus/Modbus Communications].

### An Overview of Gateway Mode

When in gateway mode, the drive will operate as shown in Table 12.51.



**A - Controller**

**B - Communication Option**

**C - Master Drive (Drive 0)**

**D - Slave Drives (Drives 1 to 4)**

**Table 12.51 Operation in Gateway Mode**

| Controller to Communication Option   | Communication Option to Master Drive (Drive 0)   | Master Drive (Drive 0) to Slave Drives (Drives 1 to 4)  |
|--|--|---|
| <ul style="list-style-type: none"> <li>• The controller and card communicate in the format of each field bus communications protocol.</li> <li>• Drive 0 sends commands and monitors through normal field bus communications.</li> <li>• The special registers of Drive 0 use read and write to send commands to and monitor Drives 1 to 4.</li> </ul> | Field bus communication data is written to and read from the special registers of Drive 0. | <ul style="list-style-type: none"> <li>• Uses MEMOBUS communications.</li> <li>• Drive 0 sends data from its special registers to Drives 1 to 4.</li> </ul> |

### Operations at the Time of Communication Error

| Communication Error                       | Error Codes | Operation  |
|---|-------------|--|
| From controller to communication option   | bUS         | <ul style="list-style-type: none"> <li>• Master drive<br/>Detects bUS [Option Communication Error] and operates as specified by <i>F6-01</i> [Communication Error Selection].</li> <li>• Slave drive<br/>Detects <i>CE</i> [Modbus Communication Error] and operates as specified by <i>H5-04</i> [Communication Error Stop Method].</li> </ul> <p><b>Note:</b></p> <ul style="list-style-type: none"> <li>• After error detection, each drive can continue the operation specified by the last received command if the <i>F6-01</i> and <i>H5-04</i> settings agree. Because the controller cannot stop the operation, you must supply a stopping method, for example an emergency stop switch.</li> <li>• If you set <math>H5-05 = 0</math> [Comm Fault Detection Selection = Disabled], the drive will not detect <i>CE</i>. The <i>H5-04</i> setting does not have an effect.</li> </ul> |
| From communication option to master drive | oFAxx       | <ul style="list-style-type: none"> <li>• Master drive<br/>Detects oFAxx and coasts to stop.</li> <li>• Slave drive<br/>Detects <i>hLCE</i> [High Level Communication Errors] and coasts to stop.</li> </ul>  |
| From master drive to slave drive          | CE          | <p>The master drive stops communicating with the slave drive in these conditions: Reset the fault to restart communication.</p> <p>The slave drive detects <i>CE</i> after <i>H5-09</i> [CE Detection Time] is expired. Then it operates in as specified with <i>H5-04</i> [Communication Error Stop Method].</p> <ul style="list-style-type: none"> <li>• A message error occurred in the send data from the slave drive 10 consecutive times.</li> <li>• Response from the slave drive timed out 10 consecutive times.</li> </ul>  |

## Gateway Special Register Specification

Table 12.52 Command Data

| Register No. (Hex.) | Description                                |   |   |  |  |
|---------------------|--|---|---|--|--|
| 15C5                | Command source update                      |   | This flag enables command updates.  |  |  |
|                     | bit 0                                      | Drive 1 Update Command Enabled  | To input the Run command and frequency reference at the same time, write all commands, then change the bit value from 0 to 1.   |  |  |
|                     | bit 1                                      | Drive 2 Update Command Enabled  |   |  |  |
|                     | bit 2                                      | Drive 3 Update Command Enabled  |   |  |  |
|                     | bit 3                                      | Drive 4 Update Command Enabled  |   |  |  |
|                     | bit 4                                      | Update Register Access Command Enabled  |   |  |  |
|                     | bit 5 - F                                  | Reserved  |   |  |  |
| 15C6                | Run Command (Drive 1)                      |   |   |  |  |
|                     | bit 0                                      | H5-12 = 0: FWD/Stop<br>0 = Stop<br>1 = Forward run  |   |  |  |
|                     |  | H5-12 = 1: Run/Stop<br>0 = Stop<br>1 = Run  |   |  |  |
|                     | bit 1                                      | H5-12 = 0: REV/Stop<br>0 = Stop<br>1 = Reverse run  |   |  |  |
|                     |  | H5-12 = 1: FWD/REV<br>0 = Forward run<br>1 = Reverse run  |   |  |  |
|                     | bit 2                                      | External fault  |   |  |  |
|                     | bit 3                                      | Fault Reset   |   |  |  |
|                     | bit 4                                      | ComRef  |   |  |  |
|                     | bit 5                                      | ComCtrl   |   |  |  |
| bit 6 - F           | Reserved                                   |   |   |  |  |
| 15C7                | Frequency Reference (Drive 1)              |   | The unit of measure changes when <i>o1-03</i> changes.  |  |  |
| 15C8                | Run Command (Drive 2)                      |   | Refer to "15C6: Run Command (Drive 1)" for more information.  |  |  |
| 15C9                | Frequency Reference (Drive 2)              |   | The unit of measure changes when <i>o1-03</i> changes.  |  |  |
| 15CA                | Run Command (Drive 3)                      |   | Refer to "15C6: Run Command (Drive 1)" for more information.  |  |  |
| 15CB                | Frequency Reference (Drive 3)              |   | The unit of measure changes when <i>o1-03</i> changes.  |  |  |
| 15CC                | Run Command (Drive 4)                      |   | Refer to "15C6: Run Command (Drive 1)" for more information.  |  |  |
| 15CD                | Frequency Reference (Drive 4)              |   | The unit of measure changes when <i>o1-03</i> changes.  |  |  |
| 15CE                | Slave Address for Reg. Access + Read/Write |   |   |  |  |
|                     | bit 0<br>bit 1<br>bit 2<br>bit 3           | Slave address<br>0: Broadcast Messages (MEMOBUS)<br>1: Drive 1<br>2: Drive 2<br>3: Drive 3<br>4: Drive 4<br>5: Broadcast Messages (run command and frequency reference) | When bit 0 to 3 = 0, access is enabled for broadcast messages only.<br>When bit 0 to 3 = 5, access is enabled for Run command and frequency reference broadcast messages only. Drive 0 is excluded. |  |  |
|                     |  | bit 4   | 0: Read, 1: Write   |  |  |
|                     |  | bit 5 - F   | Reserved  |  |  |
|                     |  | 15CF  | Register number   |  |  |
|                     |  | 15D0  | Data (write register)   |  |  |

Table 12.53 Monitor Data

| Register No. (Hex.) | Description   |   |   |
|---------------------|---|---|---|
| 15E7                | Drive Status (Drive 1)  |   |   |
|                     | bit 0   | During Run  |   |
|                     | bit 1   | During Reverse Run  |   |
|                     | bit 2   | Drive ready   |   |
|                     | bit 3   | Fault   |   |
|                     | bit 4   | Frequency Reference Setting Fault   | 1: Upper/Lower Limit Fault  |
|                     | bit 5   | No response from slave  | 1: Response has timed out.  |
|                     | bit 6   | Communication Error   | 1: The drive detected a fault from a slave.                                       |
|                     | bit 7   | No response from slave 10 consecutive attempts.   | 1: Timeout occurred 10 consecutive times.   |
|                     | bit 8   | Communication fault occurred 10 consecutive times.  | 1: Fault has occurred from a slave 10 consecutive times.                          |
|                     | bit 9   | Receive broadcast command while drive is running  | 1: Drive operates as specified by the broadcast message command.                  |
|                     | bit A   | Communication error with master drive   | 1: The slave cannot communicate with the master because of a communication error. |
|                     | bit B - D   | Reserved  |   |
|                     | bit E   | ComRef status   |   |
| bit F               | ComCtrl status  |   |   |
| 15E8                | Output frequency or frequency reference (Drive Status Bit 1: ON) (Drive 1)<br>Drive Status Bit 4 = 0 [Output Frequency]<br>Drive Status Bit 4 = 1 [Frequency Reference] | The unit of measure changes when <i>o1-03</i> changes.<br>Outputs when:<br><ul style="list-style-type: none"> <li>• Normal operation: Output frequency</li> <li>• Drive detects Frequency Reference Setting Fault: Frequency reference when the error occurs</li> </ul> Clears the value when the drive detects a communication error or communication stops. |   |
| 15E9                | Drive Status (Drive 2)  | Refer to "15E7: Drive Status (Drive 1)" for more information.   |   |
| 15EA                | Output frequency or frequency reference (Drive Status Bit 4: ON) (Drive 2)  | The unit of measure changes when <i>o1-03</i> changes.<br>Outputs when:<br><ul style="list-style-type: none"> <li>• Normal operation: Output frequency</li> <li>• Drive detects Frequency Reference Setting Fault: Frequency reference when the error occurs</li> </ul> Clears the value when the drive detects a communication error or communication stops. |   |
| 15EB                | Drive Status (Drive 3)  | Refer to "15E7: Drive Status (Drive 1)" for more information.   |   |
| 15EC                | Output frequency or frequency reference (Drive Status Bit 4: ON) (Drive 3)  | The unit of measure changes when <i>o1-03</i> changes.<br>Outputs when:<br><ul style="list-style-type: none"> <li>• Normal operation: Output frequency</li> <li>• Drive detects Frequency Reference Setting Fault: Frequency reference when the error occurs</li> </ul> Clears the value when the drive detects a communication error or communication stops. |   |
| 15ED                | Drive Status (Drive 4)  | Refer to "15E7: Drive Status (Drive 1)" for more information.   |   |
| 15EE                | Output frequency or frequency reference (Drive Status Bit 4: ON) (Drive 4)  | The unit of measure changes when <i>o1-03</i> changes.<br>Outputs when:<br><ul style="list-style-type: none"> <li>• Normal operation: Output frequency</li> <li>• Drive detects Frequency Reference Setting Fault: Frequency reference when the error occurs</li> </ul> Clears the value when the drive detects a communication error or communication stops. |   |

| Register No. (Hex.) | Description  |   |
|---------------------|--|---|
| 15EF                | Slave Address for Reg. Access + During MEMOBUS process & ErrCode |   |
|                     | bit 0  | 00H: MEMOBUS/Modbus Communication Complete                  |
|                     | bit 1  | 02H: Register number not registered                         |
|                     | bit 2  | 21H: Upper/Lower Limit Fault                                |
| 15EF                | bit 3  | 22H: Write Mode Error                                       |
|                     | bit 4  | 23H: Write performed during <i>Uv</i>                       |
|                     | bit 5  | 24H: Write performed while writing parameter settings       |
|                     | bit 6  | FFH: During MEMOBUS/Modbus Communication                    |
|                     | bit 7  |   |
|                     | Slave address  |   |
|                     | bit 8  | 0: Broadcast Messages (MEMOBUS)                             |
| 15EF                | bit 9  | 1: Drive 1  |
|                     | bit A  | 2: Drive 2  |
| 15EF                | bit A  | 3: Drive 3  |
|                     |  | 4: Drive 4  |
| 15EF                | bit B - F  | 5: Broadcast Messages (run command and frequency reference) |
|                     |  | Reserved  |
| 15F0                | Register number  |   |
| 15F1                | Data (write register)  |   |

**Note:**  
If you change the access command before the MEMOBUS/Modbus access flag turns on, the drive will not do the command from before.

### ■ F6-01: Communication Error Selection

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| F6-01 (03A2) | Communication Error Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the method to stop the motor or let the motor continue operating when the drive detects <i>bUS</i> [Option Communication Error].</p> | 1 (0 - 5)       |

#### 0 : Ramp to Stop

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

#### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

#### 2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in *C1-09* [Fast Stop Time]. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

#### 3 : Alarm Only

The keypad shows *bUS* and the drive continues operation at the current frequency reference.

**Note:**

Separately prepare safety protection equipment and systems, for example fast stop switches.

The output terminal set to *Alarm* [H2-01 to H2-03 = 10] activates.

#### 4 : Alarm (Run at d1-04)

The keypad shows *bUS* and the drive continues operation at the speed set in *d1-04* [Reference 4].

**Note:**

Separately prepare safety protection equipment and systems, for example fast stop switches.

#### 5 : Alarm - Ramp Stop

The drive stops the motor during the deceleration time set in *C1-02* [Deceleration Time 1].

After you remove the *bUS* alarm, the motor will accelerate to the previous frequency reference.

### ■ F6-02: Comm External Fault (EF0) Detect

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| F6-02 (03A3) | Comm External Fault (EF0) Detect | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the conditions at which <i>EF0</i> [Option Card External Fault] is detected.</p> | 0 (0, 1)        |

**0 : Always Detected**

**1 : Detected during RUN Only**

### ■ F6-03: Comm External Fault (EF0) Select

| No.<br>(Hex.)   | Name                             | Description   | Default<br>(Range) |
|-----------------|----------------------------------|---|--------------------|
| F6-03<br>(03A4) | Comm External Fault (EF0) Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the method to stop the motor or let the motor continue operating when the drive detects <i>EF0</i> [ <i>Option Card External Fault</i> ]. | 1<br>(0 - 3)       |

**0 : Ramp to Stop**

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [*H2-01 to H2-03 = E*] activates.

**1 : Coast to Stop**

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [*H2-01 to H2-03 = E*] activates.

**2 : Fast Stop (Use C1-09)**

The drive stops the motor in the deceleration time set in *C1-09* [*Fast Stop Time*]. The output terminal set for *Fault* [*H2-01 to H2-03 = E*] activates.

**3 : Alarm Only**

The keypad shows *EF0* and the drive continues operation.

**Note:**

Separately prepare safety protection equipment and systems, for example fast stop switches.

The output terminal set to *Alarm* [*H2-01 to H2-03 = 10*] activates.

### ■ F6-04: bUS Error Detection Time

| No.<br>(Hex.)   | Name                     | Description  | Default<br>(Range)      |
|-----------------|--------------------------|--|-------------------------|
| F6-04<br>(03A5) | bUS Error Detection Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the delay time for the drive to detect <i>bUS</i> [ <i>Option Communication Error</i> ]. | 2.0 s<br>(0.0 - 12.0 s) |

**Note:**

When you install a CC-Link option (SI-C3) to the drive, the setting value changes to 0.0 s.

### ■ F6-06: Torque Reference/Limit by Comm

| No.<br>(Hex.)   | Name                           | Description  | Default<br>(Range) |
|-----------------|--------------------------------|--|--------------------|
| F6-06<br>(03A7) | Torque Reference/Limit by Comm | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function that enables and disables the torque reference and torque limit received from the communication option. | 0<br>(0, 1)        |

**0 : Disabled**

**1 : Enabled**

### ■ F6-07: Multi-Step Ref @ NetRef/ComRef

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range) |
|-----------------|--------------------------------|---|--------------------|
| F6-07<br>(03A8) | Multi-Step Ref @ NetRef/ComRef | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function that enables and disables the multi-step speed reference when the frequency reference source is NetRef or ComRef (communication option card or MEMOBUS/Modbus communications). | 1<br>(0, 1)        |

**0 : Disable Multi-Step References**

When NetRef or ComRef are the frequency reference source, the multi-step speed reference (2-step speed to 16-step speed references) and the Jog Frequency Reference (JOG command) are disabled.

**1 : Enable Multi-Step References**

When NetRef or ComRef are the frequency reference source, the multi-step speed reference (2-step speed through 16-step speed references) and the Jog Frequency Reference (JOG command) are enabled, and you can change the frequency reference.

### ■ F6-08: Comm Parameter Reset @Initialize

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| F6-08 (036A) | Comm Parameter Reset @Initialize | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to initialize F6-xx and F7-xx parameters when the drive is initialized with A1-03 [Initialize Parameters]. | 0<br>(0, 1)     |

**0 : No Reset - Parameters Retained**

**1 : Reset Back to Factory Default**

**Note:**

When you use A1-03 to initialize the drive, this setting will not change.

### ■ F6-10: CC-Link Node Address

| No. (Hex.)   | Name                 | Description   | Default (Range) |
|--------------|----------------------|---|-----------------|
| F6-10 (03B6) | CC-Link Node Address | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the node address for CC-Link communication. Restart the drive after you change the parameter setting. | 0<br>(0 - 64)   |

**Note:**

Be sure to set a node address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause AEr [Station Address Setting Error] errors and the L.ERR LED on the option will come on.

When the only drive is connected, you can connect a maximum of 42 nodes. Follow these rules to connect devices that are not drives:

- $\{(1 \times a) + (2 \times b) + (3 \times c) + (4 \times d)\} \leq 64$   
(a: number of units that occupies 1 node, b: number of units that occupies 2 nodes, c: number of units that occupies 3 nodes, d: number of units that occupies 4 nodes)
- $\{(16 \times A) + (54 \times B) + (88 \times C)\} \leq 2304$   
(A: number of remote I/O nodes (64 max.), B: number of remote device nodes (42 max.), C: number of local nodes (26 max.))

### ■ F6-11: CC-Link Communication Speed

| No. (Hex.)   | Name                        | Description  | Default (Range) |
|--------------|-----------------------------|--|-----------------|
| F6-11 (03B7) | CC-Link Communication Speed | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the communication speed for CC-Link communication. Restart the drive after you change the parameter setting. | 0<br>(0 - 4)    |

**0 : 156 kbps**

**1 : 625 kbps**

**2 : 2.5 Mbps**

**3 : 5 Mbps**

**4 : 10 Mbps**

### ■ F6-14: BUS Error Auto Reset

| No. (Hex.)   | Name                 | Description   | Default (Range) |
|--------------|----------------------|---|-----------------|
| F6-14 (03BB) | BUS Error Auto Reset | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the automatic reset function for bUS [Option Communication Errors]. | 0<br>(0, 1)     |

**0 : Disabled**

**1 : Enabled**

### ■ F6-15: Comm. Option Parameters Reload

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| F6-15 (0B5B) | Comm. Option Parameters Reload | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the update method when you change F6-xx, F7-xx [Communication Options]. | 0<br>(0 - 2)    |

**Note:**

- Set F6-15 = 0, 1 to reload F6-xx, F7-xx.
- Set F6-15 = 0, 1 to reset the display on the keypad to 0.

**0 : Reload at Next Power Cycle**

Restart the drive to update parameters.

**1 : Reload Now**

The changed parameters are updated without restarting the drive.

**2 : Cancel Reload Request**

Cancels CyPo [Cycle Power to Accept Changes].

**■ F6-16: Gateway Mode**

| No.<br>(Hex.)   | Name         | Description  | Default<br>(Range) |
|-----------------|--------------|--|--------------------|
| F6-16<br>(0B8A) | Gateway Mode | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gateway mode operation and the number of connected slave drives. | 0<br>(0 to 4)      |

**0 : Disabled****1 : Enabled: 1 Slave Drives****2 : Enabled: 2 Slave Drives****3 : Enabled: 3 Slave Drives****4 : Enabled: 4 Slave Drives****■ F6-20: MECHATROLINK Station Address**

| No.<br>(Hex.)   | Name                         | Description   | Default<br>(Range)  |
|-----------------|------------------------------|---|---|
| F6-20<br>(036B) | MECHATROLINK Station Address | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the station address for MECHATROLINK communication. Change the parameter then cycle power on the drive. | 0021h<br>(MECHATROLINK-II:<br>0020h - 003Fh,<br>MECHATROLINK-III:<br>0003h - 00EFh) |

**Note:**

- The setting range changes if using MECHATROLINK-II or MECHATROLINK-III:  
–MECHATROLINK-II (SI-T3) range: 20 to 3F  
–MECHATROLINK-III (SI-ET3) range: 03 to EF
- Be sure to set a node address that is different than all other node addresses. Incorrect parameter settings will cause AEr [Station Address Setting Error] errors and the L.ERR LED on the option will come on.
- The drive detects AEr errors when the station address is 20 or 3F.

**■ F6-21: MECHATROLINK Frame Size**

| No.<br>(Hex.)   | Name                    | Description  | Default<br>(Range) |
|-----------------|-------------------------|--|--------------------|
| F6-21<br>(036C) | MECHATROLINK Frame Size | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the frame size for MECHATROLINK communication. Restart the drive after you change the parameter setting. | 0<br>(0, 1)        |

**0 : 32byte (M-2) / 64byte (M-3)****1 : 17byte (M-2) / 32byte (M-3)****■ F6-22: MECHATROLINK Link Speed**

| No.<br>(Hex.)   | Name                    | Description   | Default<br>(Range) |
|-----------------|-------------------------|---|--------------------|
| F6-22<br>(036D) | MECHATROLINK Link Speed | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the communications speed for MECHATROLINK-II. Restart the drive after you change the parameter setting. | 0<br>(0, 1)        |

**Note:**

This parameter is only available with the MECHATROLINK-II option.

**0 : 10 Mbps****1 : 4 Mbps**

### ■ F6-23: MECHATROLINK Monitor Select (E)

| No. (Hex.)   | Name                            | Description  | Default (Range)          |
|--------------|---------------------------------|--|--------------------------|
| F6-23 (036E) | MECHATROLINK Monitor Select (E) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the MEMOBUS register used for the monitor functions of INV_CTL (drive operation control command) and INV_I/O (drive I/O control command). Restart the drive after you change the parameter setting.</p> | 0000h<br>(0000h - FFFFh) |

To enable the MEMOBUS register set in *F6-23*, set SEL\_MON2/1 to 0EH or set SEL\_MON 3/4 and SEL\_MON 5/6 to 0EH. Bytes of the response data enable the MEMOBUS register content that was set in *F6-23*.

### ■ F6-24: MECHATROLINK Monitor Select (F)

| No. (Hex.)   | Name                            | Description  | Default (Range)          |
|--------------|---------------------------------|--|--------------------------|
| F6-24 (036F) | MECHATROLINK Monitor Select (F) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the MEMOBUS register used for the monitor functions of INV_CTL (drive operation control command) and INV_I/O (drive I/O control command). Restart the drive after you change the parameter setting.</p> | 0000h<br>(0000h - FFFFh) |

To enable the MEMOBUS register set in *F6-24*, set SEL\_MON2/1 to 0FH or set SEL\_MON3/4 and SEL\_MON 5/6 to 0FH. Bytes of the response data enable the MEMOBUS register content that was set *F6-24*.

### ■ F6-25: MECHATROLINK Watchdog Error Sel

| No. (Hex.)   | Name                            | Description  | Default (Range) |
|--------------|---------------------------------|--|-----------------|
| F6-25 (03C9) | MECHATROLINK Watchdog Error Sel | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the method to stop the motor or let the motor continue operating when the drive detects <i>E5</i> [<i>MECHATROLINK Watchdog Timer Err</i>].</p> | 1<br>(0 - 3)    |

#### 0 : Ramp to Stop

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [*H2-01 to H2-03 = E*] activates.

#### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [*H2-01 to H2-03 = E*] activates.

#### 2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in *C1-09* [*Fast Stop Time*]. The output terminal set for *Fault* [*H2-01 to H2-03 = E*] activates.

#### 3 : Alarm Only

The keypad shows *E5*, and the drive continues to operate.

##### Note:

Separately prepare safety protection equipment and systems, for example fast stop switches.

The output terminal set to *Alarm* [*H2-01 to H2-03 = 10*] activates.

### ■ F6-26: MECHATROLINK Allowable No of Err

| No. (Hex.)   | Name                             | Description  | Default (Range)     |
|--------------|----------------------------------|--|---------------------|
| F6-26 (03CA) | MECHATROLINK Allowable No of Err | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the number of times that the option must detect a <i>bUS</i> alarm to cause a <i>bUS</i> [<i>Option Communication Error</i>].</p> | 2<br>(2 - 10 times) |

### ■ F6-30: PROFIBUS-DP Node Address

| No. (Hex.)   | Name                     | Description  | Default (Range) |
|--------------|--------------------------|--|-----------------|
| F6-30 (03CB) | PROFIBUS-DP Node Address | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the node address for PROFIBUS-DP communication. Restart the drive after you change the parameter setting.</p> | 0<br>(0 - 125)  |

##### Note:

- Be sure to set a node address that is different than all other node addresses.
- Node addresses 0, 1, and 2 are usually reserved for control, maintenance, and device self-diagnosis.



### ■ F6-31: PROFIBUS-DP Clear Mode Selection

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range) |
|-----------------|----------------------------------|--|--------------------|
| F6-31<br>(03CC) | PROFIBUS-DP Clear Mode Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets what the drive will do after it receives the Clear Mode command. | 0<br>(0, 1)        |

#### 0 : Reset

Resets drive settings, for example frequency reference and I/O settings.

#### 1 : Hold Previous State

The drive keeps the same status as before it received the command.

### ■ F6-32: PROFIBUS-DP Data Format Select

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range) |
|-----------------|--------------------------------|---|--------------------|
| F6-32<br>(03CD) | PROFIBUS-DP Data Format Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the data format of PROFIBUS-DP communication. Restart the drive after you change the parameter setting. | 0<br>(0 - 5)       |

#### Note:

The *H5-11 [Comm ENTER Command Mode]* setting makes the RAM enter command necessary or not necessary to write parameters over network communication. When *F6-32 = 0, 1, or 2*, the *H5-11* setting does not have an effect. The RAM enter command is always necessary to write parameters.

#### 0 : PPO Type

#### 1 : Conventional

#### 2 : PPO (bit0)

This function operates when bit 0 and bit 4 in the register STW have values of 1 (operate). Refer to the PROFIBUS-DP communication manual for more information.

#### 3 : PPO (Enter)

#### 4 : Conventional (Enter)

#### 5 : PPO (bit0, Enter)

This function operates when bit 0 and bit 4 in the register STW have values of 1 (operate). Refer to the PROFIBUS-DP communication manual for more information.

### ■ F6-35: CANopen Node ID Selection

| No.<br>(Hex.)   | Name                      | Description   | Default<br>(Range) |
|-----------------|---------------------------|---|--------------------|
| F6-35<br>(03D0) | CANopen Node ID Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the node address for CANopen communication. Restart the drive after you change the parameter setting. | 0<br>(0 - 126)     |

#### Note:

Be sure to set an address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause *AEr [Station Address Setting Error]* errors and the L.ERR LED on the option will come on.

### ■ F6-36: CANopen Communication Speed

| No.<br>(Hex.)   | Name                        | Description   | Default<br>(Range) |
|-----------------|-----------------------------|---|--------------------|
| F6-36<br>(03D1) | CANopen Communication Speed | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the CANopen communications speed. Restart the drive after you change the parameter setting. | 0<br>(0 - 8)       |

#### 0 : Auto-detection

The drive detects the network communication speed and automatically adjusts the communications speed.

#### 1 : 10 kbps

#### 2 : 20 kbps

#### 3 : 50 kbps

#### 4 : 125 kbps

#### 5 : 250 kbps

**6 : 500 kbps****7 : 800 kbps****8 : 1 Mbps****■ F6-50: DeviceNet MAC Address**

| No.<br>(Hex.)   | Name                  | Description  | Default<br>(Range) |
|-----------------|-----------------------|--|--------------------|
| F6-50<br>(03C1) | DeviceNet MAC Address | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the MAC address for DeviceNet communication. Restart the drive after you change the parameter setting. | 0<br>(0 - 64)      |

**Note:**

Be sure to set a MAC address that is different than all other node addresses. Do not set this parameter to 0. Incorrect parameter settings will cause *Aer* [Station Address Setting Error] errors and the MS LED on the option will flash.

**■ F6-51: DeviceNet Baud Rate**

| No.<br>(Hex.)   | Name                | Description   | Default<br>(Range) |
|-----------------|---------------------|---|--------------------|
| F6-51<br>(03C2) | DeviceNet Baud Rate | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the DeviceNet communications speed. Restart the drive after you change the parameter setting. | 0<br>(0 - 4)       |

**0 : 125 kbps****1 : 250 kbps****2 : 500 kbps****3 : Adjustable from Network**

The controller sets the communications speed.

**4 : Detect Automatically**

The drive detects the network communication speed and automatically adjusts the communications speed.

**■ F6-52: DeviceNet PCA Setting**

| No.<br>(Hex.)   | Name                  | Description  | Default<br>(Range) |
|-----------------|-----------------------|--|--------------------|
| F6-52<br>(03C3) | DeviceNet PCA Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the format of data that the DeviceNet communication master sends to the drive. | 21<br>(0 - 255)    |

**Note:**

If F6-52 [DeviceNet PCA Setting] and F6-53 [DeviceNet PPA Setting] are not correct, the value is reset to default.

**■ F6-53: DeviceNet PPA Setting**

| No.<br>(Hex.)   | Name                  | Description  | Default<br>(Range) |
|-----------------|-----------------------|--|--------------------|
| F6-53<br>(03C4) | DeviceNet PPA Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the format of data that the drive sends to the DeviceNet communication master. | 71<br>(0 - 255)    |

**Note:**

If F6-52 [DeviceNet PCA Setting] and F6-53 [DeviceNet PPA Setting] are not correct, the value is reset to default.

**■ F6-54: DeviceNet Idle Fault Detection**

| No.<br>(Hex.)   | Name                           | Description  | Default<br>(Range) |
|-----------------|--------------------------------|--|--------------------|
| F6-54<br>(03C5) | DeviceNet Idle Fault Detection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to detect <i>EF0</i> [Option Card External Fault] when the drive does not receive data from the DeviceNet master. | 0<br>(0 - 4)       |

**0 : Enabled****1 : Disabled, No Fault Detection**

Does not detect *EF0* issues.

**2 : Vendor Specific****3 : RUN Forward**

## 4 : RUN Reverse

## ■ F6-55: DeviceNet Baud Rate Monitor

| No. (Hex.)   | Name                        | Description   | Default (Range) |
|--------------|-----------------------------|---|-----------------|
| F6-55 (03C6) | DeviceNet Baud Rate Monitor | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to see the actual DeviceNet communications speed using the keypad. This parameter functions as a monitor only. | 0<br>(0 - 2)    |

0 : 125 kbps

1 : 250 kbps

2 : 500 kbps

## ■ F6-56: DeviceNet Speed Scaling

| No. (Hex.)   | Name                    | Description  | Default (Range)  |
|--------------|-------------------------|--|------------------|
| F6-56 (03D7) | DeviceNet Speed Scaling | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the speed scale for DeviceNet communication. | 0<br>(-15 - +15) |

## ■ F6-57: DeviceNet Current Scaling

| No. (Hex.)   | Name                      | Description  | Default (Range)  |
|--------------|---------------------------|--|------------------|
| F6-57 (03D8) | DeviceNet Current Scaling | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the current scale of the DeviceNet communication master. | 0<br>(-15 - +15) |

## ■ F6-58: DeviceNet Torque Scaling

| No. (Hex.)   | Name                     | Description   | Default (Range)  |
|--------------|--------------------------|---|------------------|
| F6-58 (03D9) | DeviceNet Torque Scaling | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the torque scale of the DeviceNet communication master. | 0<br>(-15 - +15) |

## ■ F6-59: DeviceNet Power Scaling

| No. (Hex.)   | Name                    | Description  | Default (Range)  |
|--------------|-------------------------|--|------------------|
| F6-59 (03DA) | DeviceNet Power Scaling | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the power scale of the DeviceNet communication master. | 0<br>(-15 - +15) |

## ■ F6-60: DeviceNet Voltage Scaling

| No. (Hex.)   | Name                      | Description  | Default (Range)  |
|--------------|---------------------------|--|------------------|
| F6-60 (03DB) | DeviceNet Voltage Scaling | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the voltage scale of the DeviceNet communication master. | 0<br>(-15 - +15) |

## ■ F6-61: DeviceNet Time Scaling

| No. (Hex.)   | Name                   | Description   | Default (Range)  |
|--------------|------------------------|---|------------------|
| F6-61 (03DC) | DeviceNet Time Scaling | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time scale of the DeviceNet communication master. | 0<br>(-15 - +15) |

## ■ F6-62: DeviceNet Heartbeat Interval

| No. (Hex.)   | Name                         | Description   | Default (Range) |
|--------------|------------------------------|---|-----------------|
| F6-62 (03DD) | DeviceNet Heartbeat Interval | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the heartbeat for DeviceNet communication. Set this parameter to 0 to disable the heartbeat function. | 0<br>(0 - 10)   |

### ■ F6-63: DeviceNet Network MAC ID

| No. (Hex.)      | Name                     | Description  | Default (Range) |
|-----------------|--------------------------|--|-----------------|
| F6-63<br>(03DE) | DeviceNet Network MAC ID | <div style="display: flex; justify-content: space-between; align-items: center;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets the function to see the actual DeviceNet MAC address using the keypad. This parameter functions as a monitor only.</p> | 0<br>(0 - 63)   |

### ■ F6-64 to F6-67: Dynamic Out Assembly 109 Param1 to 4

| No. (Hex.)                      | Name                                  | Description  | Default (Range)          |
|---------------------------------|---------------------------------------|--|--------------------------|
| F6-64 to F6-67<br>(03DF - 03E2) | Dynamic Out Assembly 109 Param 1 to 4 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets Configurable Outputs 1 to 4 written to the MEMOBUS register.</p> | 0000h<br>(0000h - FFFFh) |

### ■ F6-68 to F6-71: Dynamic In Assembly 159 Param 1 to 4

| No. (Hex.)                                     | Name                                 | Description  | Default (Range)          |
|--|--------------------------------------|--|--------------------------|
| F6-68 to F6-71<br>(03E3, 03E4, 03C7, and 03C8) | Dynamic In Assembly 159 Param 1 to 4 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets Configurable Inputs 1 to 4 read from the MEMOBUS register.</p> | 0000h<br>(0000h - FFFFh) |

### ■ F6-72: PowerLink Node Address

| No. (Hex.)      | Name                   | Description  | Default (Range) |
|-----------------|------------------------|--|-----------------|
| F6-72<br>(081B) | PowerLink Node Address | <div style="display: flex; justify-content: space-between; align-items: center;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets the node ID for PowerLink communication.</p> | 0<br>(0 - 255)  |

### ■ F7-01: IP Address 1

| No. (Hex.)      | Name         | Description  | Default (Range)  |
|-----------------|--------------|--|------------------|
| F7-01<br>(03E5) | IP Address 1 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets the first octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter.</p> | 192<br>(0 - 255) |

**Note:**

When  $F7-13 = 0$  [Address Mode at Startup = Static]:

- Use parameters  $F7-01$  to  $F7-04$  [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.
- Also set parameters  $F7-01$  to  $F7-12$ .

### ■ F7-02: IP Address 2

| No. (Hex.)      | Name         | Description   | Default (Range)  |
|-----------------|--------------|---|------------------|
| F7-02<br>(03E6) | IP Address 2 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets the second octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter.</p> | 168<br>(0 - 255) |

**Note:**

When  $F7-13 = 0$  [Address Mode at Startup = Static]:

- Use parameters  $F7-01$  to  $F7-04$  [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.
- Also set parameters  $F7-01$  to  $F7-12$ .

### ■ F7-03: IP Address 3

| No. (Hex.)      | Name         | Description  | Default (Range) |
|-----------------|--------------|--|-----------------|
| F7-03<br>(03E7) | IP Address 3 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span><input type="checkbox"/> V/f</span> <span><input type="checkbox"/> OLV</span> <span><input type="checkbox"/> OLV/PM</span> <span><input type="checkbox"/> AOLV/PM</span> <span><input type="checkbox"/> EZOLV</span> </div> <p>Sets the third octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter.</p> | 1<br>(0 - 255)  |

**Note:**

When  $F7-13 = 0$  [Address Mode at Startup = Static]:

- Use parameters  $F7-01$  to  $F7-04$  [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.
- Also set parameters  $F7-01$  to  $F7-12$ .

### ■ F7-04: IP Address 4

| No.<br>(Hex.)   | Name         | Description  | Default<br>(Range) |
|-----------------|--------------|--|--------------------|
| F7-04<br>(03E8) | IP Address 4 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the fourth octet of the IP Address for the device that is connecting to the network. Restart the drive after you change this parameter. | 20<br>(0 - 255)    |

**Note:**

When  $F7-13 = 0$  [Address Mode at Startup = Static]:

- Use parameters  $F7-01$  to  $F7-04$  [IP Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.
- Also set parameters  $F7-01$  to  $F7-12$ .

### ■ F7-05: Subnet Mask 1

| No.<br>(Hex.)   | Name          | Description   | Default<br>(Range) |
|-----------------|---------------|---|--------------------|
| F7-05<br>(03E9) | Subnet Mask 1 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the first octet of the subnet mask of the connected network. | 255<br>(0 - 255)   |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

### ■ F7-06: Subnet Mask 2

| No.<br>(Hex.)   | Name          | Description  | Default<br>(Range) |
|-----------------|---------------|--|--------------------|
| F7-06<br>(03EA) | Subnet Mask 2 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the second octet of the subnet mask of the connected network. | 255<br>(0 - 255)   |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

### ■ F7-07: Subnet Mask 3

| No.<br>(Hex.)   | Name          | Description   | Default<br>(Range) |
|-----------------|---------------|---|--------------------|
| F7-07<br>(03EB) | Subnet Mask 3 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the third octet of the subnet mask of the connected network. | 255<br>(0 - 255)   |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

### ■ F7-08: Subnet Mask 4

| No.<br>(Hex.)   | Name          | Description  | Default<br>(Range) |
|-----------------|---------------|--|--------------------|
| F7-08<br>(03EC) | Subnet Mask 4 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the fourth octet of the subnet mask of the connected network. | 0<br>(0 - 255)     |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

### ■ F7-09: Gateway Address 1

| No.<br>(Hex.)   | Name              | Description   | Default<br>(Range) |
|-----------------|-------------------|---|--------------------|
| F7-09<br>(03ED) | Gateway Address 1 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the first octet of the gateway address of the connected network. | 192<br>(0 - 255)   |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

### ■ F7-10: Gateway Address 2

| No.<br>(Hex.)   | Name              | Description  | Default<br>(Range) |
|-----------------|-------------------|--|--------------------|
| F7-10<br>(03EE) | Gateway Address 2 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the second octet of the gateway address of the connected network. | 168<br>(0 - 255)   |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

**■ F7-11: Gateway Address 3**

| No.<br>(Hex.)   | Name              | Description  | Default<br>(Range) |
|-----------------|-------------------|--|--------------------|
| F7-11<br>(03EF) | Gateway Address 3 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the third octet of the gateway address of the connected network. | 1<br>(0 - 255)     |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

**■ F7-12: Gateway Address 4**

| No.<br>(Hex.)   | Name              | Description   | Default<br>(Range) |
|-----------------|-------------------|---|--------------------|
| F7-12<br>(03F0) | Gateway Address 4 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the fourth octet of the gateway address of the connected network. | 1<br>(0 - 255)     |

**Note:**

Set this parameter when  $F7-13 = 0$  [Address Mode at Startup = Static].

**■ F7-13: Address Mode at Startup**

| No.<br>(Hex.)   | Name                    | Description   | Default<br>(Range) |
|-----------------|-------------------------|---|--------------------|
| F7-13<br>(03F1) | Address Mode at Startup | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the method to set option card IP addresses. | 2<br>(0 - 2)       |

**0 : Static****1 : BOOTP****2 : DHCP****Note:**

- The following setting values are available when using the PROFINET communication option card (SI-EP3).
  - 0: Static
  - 2: DCP
- When  $F7-13 = 0$ , set parameters  $F7-01$  to  $F7-12$  [IP Address 1 to Gateway Address 4] to set the IP Address. Be sure to set a different IP address for each drive on the network.

**■ F7-14: Duplex Mode Selection**

| No.<br>(Hex.)   | Name                  | Description   | Default<br>(Range) |
|-----------------|-----------------------|---|--------------------|
| F7-14<br>(03F2) | Duplex Mode Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the duplex mode setting method. | 1<br>(0 - 8)       |

**0 : Half/Half****1 : Auto/Auto****2 : Full/Full****3 : Half/Auto**

Port 1 is set to "Half" and port 2 is set to "Auto".

**4 : Half/Full**

Port 1 is set to "Half" and port 2 is set to "Full".

**5 : Auto/Half**

Port 1 is set to "Auto" and port 2 is set to "Half".

**6 : Auto/Full**

Port 1 is set to "Auto" and port 2 is set to "Full".

**7 : Full/Half**

Port 1 is set to "Full" and port 2 is set to "Half".

**8 : Full/Auto**

Port 1 is set to "Full" and port 2 is set to "Auto".

### ■ F7-15: Communication Speed Selection

| No.<br>(Hex.)   | Name                          | Description   | Default<br>(Range)    |
|-----------------|-------------------------------|---|-----------------------|
| F7-15<br>(03F3) | Communication Speed Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the communications speed. | 10<br>(10, 100 - 102) |

**10 : 10/10 Mbps**

**100 : 100/100 Mbps**

**101 : 10/100 Mbps**

**102 : 100/10 Mbps**

**Note:**

Set this parameter when F7-14 = 0 or 2 [Duplex Mode Selection = Half/Half or Full/Full].

### ■ F7-16: Timeout Value

| No.<br>(Hex.)   | Name          | Description  | Default<br>(Range)      |
|-----------------|---------------|--|-------------------------|
| F7-16<br>(03F4) | Timeout Value | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the detection time for a communications timeout. | 0.0 s<br>(0.0 - 30.0 s) |

**Note:**

Set this parameter to 0.0 to disable the connection timeout function.

### ■ F7-17: EtherNet/IP Speed Scaling Factor

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range) |
|-----------------|----------------------------------|--|--------------------|
| F7-17<br>(03F5) | EtherNet/IP Speed Scaling Factor | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the scaling factor for the speed monitor in the EtherNet/IP Class ID 2AH Object. | 0<br>(-15 - +15)   |

### ■ F7-18: EtherNet/IP Current Scale Factor

| No.<br>(Hex.)   | Name                             | Description   | Default<br>(Range) |
|-----------------|----------------------------------|---|--------------------|
| F7-18<br>(03F6) | EtherNet/IP Current Scale Factor | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the scaling factor for the output current monitor in the EtherNet/IP Class ID 2AH Object. | 0<br>(-15 - +15)   |

### ■ F7-19: EtherNet/IP Torque Scale Factor

| No.<br>(Hex.)   | Name                            | Description   | Default<br>(Range) |
|-----------------|---------------------------------|---|--------------------|
| F7-19<br>(03F7) | EtherNet/IP Torque Scale Factor | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the scaling factor for the torque monitor in the EtherNet/IP Class ID 2AH Object. | 0<br>(-15 - +15)   |

### ■ F7-20: EtherNet/IP Power Scaling Factor

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range) |
|-----------------|----------------------------------|--|--------------------|
| F7-20<br>(03F8) | EtherNet/IP Power Scaling Factor | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the scaling factor for the power monitor in the EtherNet/IP Class ID 2AH Object. | 0<br>(-15 - +15)   |

### ■ F7-21: EtherNet/IP Voltage Scale Factor

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range) |
|-----------------|----------------------------------|--|--------------------|
| F7-21<br>(03F9) | EtherNet/IP Voltage Scale Factor | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the scaling factor for the voltage monitor in the EtherNet/IP Class ID 2AH Object. | 0<br>(-15 - +15)   |

### ■ F7-22: EtherNet/IP Time Scaling

| No.<br>(Hex.)   | Name                     | Description   | Default<br>(Range) |
|-----------------|--------------------------|---|--------------------|
| F7-22<br>(03FA) | EtherNet/IP Time Scaling | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the scaling factor for the time monitor in the EtherNet/IP Class ID 2AH Object. | 0<br>(-15 - +15)   |

### ■ F7-23 to F7-32: Dynamic Out Param 1 to 10 for CommCard

| No. (Hex.)   | Name                                   | Description   | Default (Range) |
|--|--|---|-----------------|
| F7-23 to F7-27 (03FB - 03FF)<br>F7-28 to F7-32 (0370 - 0374) | Dynamic Out Param 1 to 10 for CommCard | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use an Ethernet/IP option, sets Output Assembly 116. The drive writes the values from Output Assembly 116 to the MEMOBUS/Modbus address register that is stored for each parameter. The drive will not write the values from Output Assembly 116 to the registers when the MEMOBUS/Modbus address is 0. When you use a ProfiNet option, set <i>F7-23</i> to <i>F7-27</i> to configurable Output 1-5.</p> | 0               |

### ■ F7-33 to F7-42: Dynamic In Param 1 to 10 for CommCard

| No. (Hex.)                   | Name                                  | Description  | Default (Range) |
|------------------------------|---------------------------------------|--|-----------------|
| F7-33 to F7-42 (0375 - 037E) | Dynamic In Param 1 to 10 for CommCard | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use an Ethernet/IP option, sets Input Assembly 166. The drive sends the values from the MEMOBUS/Modbus address registers stored for each parameter to Input Assembly 166. The drive returns the default register value for the option card when the MEMOBUS/Modbus address is 0 and the value sent to Input Assembly 166 is not defined. When you use a ProfiNet option, set <i>F7-33</i> to <i>F7-37</i> to configurable inputs 1-5.</p> | 0               |

### ■ F7-60: PZD1 Write (Control Word)

| No. (Hex.)   | Name                      | Description  | Default (Range) |
|--------------|---------------------------|--|-----------------|
| F7-60 (0780) | PZD1 Write (Control Word) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use a Profibus option, set the MEMOBUS/Modbus address for PZD1 (PPO output). PZD1 (PPO output) functions as the STW when <i>F7-60</i> = 0 to 2.</p> | 0               |

### ■ F7-61: PZD2 Write (Frequency Reference)

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| F7-61 (0781) | PZD2 Write (Frequency Reference) | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD2 (PPO output). PZD2 (PPO output) functions as the HSW when <i>F7-61</i> = 0 to 2.</p> | 0               |

### ■ F7-62: PZD3 Write

| No. (Hex.)   | Name       | Description   | Default (Range) |
|--------------|------------|---|-----------------|
| F7-62 (0782) | PZD3 Write | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD3 (PPO output). A value of 0, 1, or 2 will disable the PZD3 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0               |

### ■ F7-63: PZD4 Write

| No. (Hex.)   | Name       | Description   | Default (Range) |
|--------------|------------|---|-----------------|
| F7-63 (0783) | PZD4 Write | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD4 (PPO output). A value of 0, 1, or 2 will disable the PZD4 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0               |

### ■ F7-64: PZD5 Write

| No. (Hex.)   | Name       | Description   | Default (Range) |
|--------------|------------|---|-----------------|
| F7-64 (0784) | PZD5 Write | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD5 (PPO output). A value of 0, 1, or 2 will disable the PZD5 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0               |

### ■ F7-65: PZD6 Write

| No. (Hex.)   | Name       | Description   | Default (Range) |
|--------------|------------|---|-----------------|
| F7-65 (0785) | PZD6 Write | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD6 (PPO output). A value of 0, 1, or 2 will disable the PZD6 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0               |



### ■ F7-66: PZD7 Write

| No.<br>(Hex.)   | Name       | Description   | Default<br>(Range) |
|-----------------|------------|---|--------------------|
| F7-66<br>(0786) | PZD7 Write | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD7 (PPO output). A value of 0, 1, or 2 will disable the PZD7 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-67: PZD8 Write

| No.<br>(Hex.)   | Name       | Description   | Default<br>(Range) |
|-----------------|------------|---|--------------------|
| F7-67<br>(0787) | PZD8 Write | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD8 (PPO output). A value of 0, 1, or 2 will disable the PZD8 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-68: PZD9 Write

| No.<br>(Hex.)   | Name       | Description   | Default<br>(Range) |
|-----------------|------------|---|--------------------|
| F7-68<br>(0788) | PZD9 Write | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD9 (PPO output). A value of 0, 1, or 2 will disable the PZD9 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-69: PZD10 Write

| No.<br>(Hex.)   | Name        | Description   | Default<br>(Range) |
|-----------------|-------------|---|--------------------|
| F7-69<br>(0789) | PZD10 Write | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD10 (PPO output). A value of 0, 1, or 2 will disable the PZD10 (PPO output) write operation to the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-70: PZD1 Read (Status Word)

| No.<br>(Hex.)   | Name                    | Description  | Default<br>(Range) |
|-----------------|-------------------------|--|--------------------|
| F7-70<br>(078A) | PZD1 Read (Status Word) | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD1 (PPO input). PZD1 (PPO input) functions as the ZSW when <math>F7-70 = 0</math>.</p> | 0                  |

### ■ F7-71: PZD2 Read (Output Frequency)

| No.<br>(Hex.)   | Name                         | Description  | Default<br>(Range) |
|-----------------|------------------------------|--|--------------------|
| F7-71<br>(078B) | PZD2 Read (Output Frequency) | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD2 (PPO input). PZD2 (PPO input) functions as the HIW when <math>F7-71 = 0</math>.</p> | 0                  |

### ■ F7-72: PZD3 Read

| No.<br>(Hex.)   | Name      | Description   | Default<br>(Range) |
|-----------------|-----------|---|--------------------|
| F7-72<br>(078C) | PZD3 Read | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD3 (PPO input). A value of 0 will disable the PZD3 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-73: PZD4 Read

| No.<br>(Hex.)   | Name      | Description   | Default<br>(Range) |
|-----------------|-----------|---|--------------------|
| F7-73<br>(078D) | PZD4 Read | <p><input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV</p> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD4 (PPO input). A value of 0 will disable the PZD4 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-74: PZD5 Read

| No.<br>(Hex.)   | Name      | Description  | Default<br>(Range) |
|-----------------|-----------|--|--------------------|
| F7-74<br>(078E) | PZD5 Read | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD5 (PPO input). A value of 0 will disable the PZD5 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-75: PZD6 Read

| No.<br>(Hex.)   | Name      | Description  | Default<br>(Range) |
|-----------------|-----------|--|--------------------|
| F7-75<br>(078F) | PZD6 Read | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD6 (PPO input). A value of 0 will disable the PZD6 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-76: PZD7 Read

| No.<br>(Hex.)   | Name      | Description  | Default<br>(Range) |
|-----------------|-----------|--|--------------------|
| F7-76<br>(0790) | PZD7 Read | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD7 (PPO input). A value of 0 will disable the PZD7 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-77: PZD8 Read

| No.<br>(Hex.)   | Name      | Description  | Default<br>(Range) |
|-----------------|-----------|--|--------------------|
| F7-77<br>(0791) | PZD8 Read | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD8 (PPO input). A value of 0 will disable the PZD8 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-78: PZD9 Read

| No.<br>(Hex.)   | Name      | Description  | Default<br>(Range) |
|-----------------|-----------|--|--------------------|
| F7-78<br>(0792) | PZD9 Read | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD9 (PPO input). A value of 0 will disable the PZD9 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

### ■ F7-79: PZD10 Read

| No.<br>(Hex.)   | Name       | Description  | Default<br>(Range) |
|-----------------|------------|--|--------------------|
| F7-79<br>(0793) | PZD10 Read | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>When you use a Profibus option, sets the MEMOBUS/Modbus address for PZD10 (PPO input). A value of 0 will disable the PZD10 (PPO input) load operation from the MEMOBUS/Modbus register.</p> | 0                  |

## 12.8 H: Terminal Function Selection

*H* parameters set functions for external input and output terminals.

### ◆ H1: Digital Inputs

*H1* Parameters set the MFDI terminal functions.

#### ■ H1-01 to H1-07 Terminal S1 to S7 Function Selection

The drive has 7 MFDI terminals. Refer to [Table 12.54](#) for drive default settings and functions.

**Table 12.54 MFDI Default Settings and Functions**

| No.   | Name                           | Default          | Function                         |
|-------|--------------------------------|------------------|----------------------------------|
| H1-01 | Terminal S1 Function Selection | 40 (F) <i>*I</i> | Forward RUN (2-Wire)             |
| H1-02 | Terminal S2 Function Selection | 41 (F) <i>*I</i> | Reverse RUN (2-Wire)             |
| H1-03 | Terminal S3 Function Selection | 24               | External Fault (NO-Always-Coast) |
| H1-04 | Terminal S4 Function Selection | 14               | Fault Reset                      |
| H1-05 | Terminal S5 Function Selection | 3 (0) <i>*I</i>  | Multi-Step Speed Reference 1     |
| H1-06 | Terminal S6 Function Selection | 4 (3) <i>*I</i>  | Multi-Step Speed Reference 2     |
| H1-07 | Terminal S7 Function Selection | 6 (4) <i>*I</i>  | Jog Reference Selection          |

\*1 The value in parentheses identifies the default setting when you set *A1-03* = 3330 [*Initialize Parameters = 3-Wire Initialization*]. Refer to the and use *H1-xx* [*MFDI Function Select*] to set the function.

Refer to the [Table 12.55](#) and use *H1-xx* [*MFDI Function Select*] to set the function.

**Table 12.55 MFDI Setting Values**

| Setting Value | Function                         | Reference | Setting Value      | Function                        | Reference |
|---------------|----------------------------------|-----------|--------------------|---------------------------------|-----------|
| 0 <i>*I</i>   | 3-Wire Sequence                  | 606       | 1A                 | Accel/Decel Time Selection 2    | 614       |
| 1             | LOCAL/REMOTE Selection           | 607       | 1B <i>*2</i>       | Programming Lockout             | 614       |
| 2             | External Reference 1/2 Selection | 608       | 1E                 | Reference Sample Hold           | 615       |
| 3             | Multi-Step Speed Reference 1     | 608       | 20 to 2F <i>*I</i> | External fault                  | 615       |
| 4             | Multi-Step Speed Reference 2     | 608       | 30                 | PID Integrator Reset            | 616       |
| 5             | Multi-Step Speed Reference 3     | 608       | 31                 | PID Integrator Hold             | 616       |
| 6             | Jog Reference Selection          | 608       | 32                 | Multi-Step Speed Reference 4    | 616       |
| 7             | Accel/Decel Time Selection 1     | 608       | 34                 | PID Soft Starter Disable        | 616       |
| 8 <i>*I</i>   | Baseblock Command (N.O.)         | 608       | 35                 | PID Input (Error) Invert        | 617       |
| 9 <i>*I</i>   | Baseblock Command (N.C.)         | 609       | 3E                 | PID Setpoint Selection 1        | 617       |
| A             | Accel/Decel Ramp Hold            | 609       | 3F                 | PID Setpoint Selection 2        | 617       |
| B             | Overheat Alarm (oH2)             | 609       | 40 <i>*I</i>       | Forward RUN (2-Wire)            | 617       |
| C             | Analog Terminal Enable Selection | 609       | 41 <i>*I</i>       | Reverse RUN (2-Wire)            | 617       |
| E             | ASR Integral Reset               | 610       | 42 <i>*I</i>       | Run Command (2-Wire Sequence 2) | 618       |
| F             | Through Mode                     | 610       | 43 <i>*I</i>       | FWD/REV (2-Wire Sequence 2)     | 618       |
| 10            | Up Command                       | 610       | 44                 | Add Offset Frequency 1 (d7-03)  | 618       |
| 11            | Down Command                     | 611       | 45                 | Add Offset Frequency 2 (d7-03)  | 618       |
| 12 <i>*I</i>  | Forward Jog                      | 612       | 46                 | Add Offset Frequency 3 (d7-03)  | 618       |
| 13 <i>*I</i>  | Reverse Jog                      | 612       | 47                 | Node Setup (CANopen)            | 618       |
| 14            | Fault Reset                      | 612       | 60                 | DC Injection Braking Command    | 619       |
| 15 <i>*I</i>  | Fast Stop (N.O.)                 | 613       | 61                 | Speed Search from Fmax          | 619       |
| 16            | Motor 2 Selection                | 613       | 62                 | Speed Search from Fref          | 619       |
| 17 <i>*I</i>  | Fast Stop (N.C.)                 | 614       | 63                 | Field Weakening                 | 619       |
| 18            | Timer Function                   | 614       | 65 <i>*I</i>       | KEB Ride-Thru 1 Activate (N.C.) | 619       |
| 19            | PID Disable                      | 614       | 66 <i>*I</i>       | KEB Ride-Thru 1 Activate (N.O.) | 620       |

## 12.8 H: Terminal Function Selection

| Setting Value | Function                         | Reference |
|---------------|----------------------------------|-----------|
| 67            | Communications Test Mode         | 620       |
| 68            | High Slip Braking (HSB) Activate | 620       |
| 6A            | Drive Enable                     | 620       |
| 75            | Up 2 Command                     | 620       |
| 76            | Down 2 Command                   | 622       |
| 77            | ASR Gain (C5-03) Select          | 622       |
| 7A */         | KEB Ride-Thru 2 Activate (N.C.)  | 622       |
| 7B */         | KEB Ride-Thru 2 Activate (N.O.)  | 622       |
| 7C */         | Short Circuit Braking (N.O.)     | 622       |

| Setting Value | Function   | Reference |
|---------------|--|-----------|
| 7D */         | Short Circuit Braking (N.C.)   | 623       |
| 7E            | Reverse Rotation Identifier  | 623       |
| 7F            | PID Bi-Directional Enable  | 623       |
| 90 to 96 */   | DWEZ Digital Inputs 1 to 7   | 623       |
| 9F            | DWEZ Disable   | 623       |
| 101 to 19F    | Inverse Inputs of 1 to 9F<br>Sets the function of the selected MFDI to operate inversely. To select the function for inverse input, enter two digits 01 to 9F for the "xx" in "1xx". | 624       |

\*1 Inverse input is not available.

\*2 You cannot use H7-01 to H7-04 [Virtual Multi-Function Input 1 to 4] to set this.

### ■ H1-01: Terminal S1 Function Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| H1-01 (0438) | Terminal S1 Function Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for MFDI terminal S1. | 40<br>(1 - 1FF) |

**Note:**

The default setting is *F* when you initialize the drive for *3-Wire Initialization* [A1-03 = 3330].

### ■ H1-02: Terminal S2 Function Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| H1-02 (0439) | Terminal S2 Function Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for MFDI terminal S2. | 41<br>(1 - 1FF) |

**Note:**

The default setting is *F* when you initialize the drive for *3-Wire Initialization* [A1-03 = 3330].

### ■ H1-03: Terminal S3 Function Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| H1-03 (0400) | Terminal S3 Function Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for MFDI terminal S3. | 24<br>(0 - 1FF) |

### ■ H1-04: Terminal S4 Function Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| H1-04 (0401) | Terminal S4 Function Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for MFDI terminal S4. | 14<br>(0 - 1FF) |

### ■ H1-05: Terminal S5 Function Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| H1-05 (0402) | Terminal S5 Function Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for MFDI terminal S5. | 3<br>(0 - 1FF)  |

**Note:**

The default setting is *0* when the drive is initialized for *3-Wire Initialization* [A1-03 = 3330].

### ■ H1-06: Terminal S6 Function Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| H1-06 (0403) | Terminal S6 Function Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for MFDI terminal S6. | 4<br>(0 - 1FF)  |

**Note:**

The default setting is 3 when the drive is initialized for *3-Wire Initialization* [A1-03 = 3330].

### ■ H1-07: Terminal S7 Function Selection

| No. (Hex.)   | Name                           | Description  | Default (Range) |
|--------------|--------------------------------|--|-----------------|
| H1-07 (0404) | Terminal S7 Function Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function for MFDI terminal S7. | 6<br>(0 - 1FF)  |

**Note:**

The default setting is 4 when the drive is initialized for *3-Wire Initialization* [A1-03 = 3330].

### ■ H1-21: Terminal S1 Function Select 2

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| H1-21 (0B70) | Terminal S1 Function Selection 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the second function for MFDI terminal S1. | F<br>(1 - 19F)  |

When MFDI terminal S1 activates, it will operate the function set to *H1-01* [Terminal S1 Function Selection] and the function set to *H1-21* at the same time.

When the setting value is *F*, the function is disabled.

### ■ H1-22: Terminal S2 Function Select 2

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| H1-22 (0B71) | Terminal S2 Function Select 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the second function for MFDI terminal S2. | F<br>(1 - 19F)  |

When MFDI terminal S2 activates, it will operate the function set to *H1-02* [Terminal S2 Function Selection] and the function set to *H1-22* at the same time.

When the setting value is *F*, the function is disabled.

### ■ H1-23: Terminal S3 Function Select 2

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| H1-23 (0B72) | Terminal S3 Function Selection 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the second function for MFDI terminal S3. | F<br>(1 - 19F)  |

When MFDI terminal S3 activates, it will operate the function set to *H1-03* [Terminal S3 Function Selection] and the function set to *H1-23* at the same time.

When the setting value is *F*, the function is disabled.

### ■ H1-24: Terminal S4 Function Selection 2

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| H1-24 (0B73) | Terminal S4 Function Selection 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the second function for MFDI terminal S4. | F<br>(1 - 19F)  |

When MFDI terminal S4 activates, it will operate the function set to *H1-04* [Terminal S4 Function Selection] and the function set to *H1-24* at the same time.

When the setting value is *F*, the function is disabled.

### ■ H1-25: Terminal S5 Function Select 2

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| H1-25 (0B74) | Terminal S5 Function Selection 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the second function for MFDI terminal S5. | F<br>(1 - 19F)  |

When MFDI terminal S5 activates, it will operate the function set to *H1-05* [Terminal S5 Function Selection] and the function set to *H1-25* at the same time.

When the setting value is *F*, the function is disabled.

■ **H1-26: Terminal S6 Function Select 2**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| H1-26 (0B75) | Terminal S6 Function Selection 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the second function for MFDI terminal S6. | F<br>(1 - 19F)  |

When MFDI terminal S6 activates, it will operate the function set to *H1-06 [Terminal S6 Function Selection]* and the function set to *H1-26* at the same time.

When the setting value is *F*, the function is disabled.

■ **H1-27: Terminal S7 Function Select 2**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| H1-27 (0B76) | Terminal S7 Function Selection 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the second function for MFDI terminal S7. | F<br>(1 - 19F)  |

When MFDI terminal S7 activates, it will operate the function set to *H1-07 [Terminal S7 Function Selection]* and the function set to *H1-27* at the same time.

When the setting value is *F*, the function is disabled.

■ **MEMOBUS/Modbus MFDI 1 to 3 Function Selection**

You can set the function for the MFDI to MEMOBUS register *bit 0 to 2* of [*15C0(Hex.)*]. Use *H1-40 to H1-42 [Extend MFDI Function Selection]* to select the bit function for each bit.

**Note:**

- Refer to *MFDI Setting Values on page 606* for more information about MFDI setting values.
- You cannot set values *0 [3-Wire Sequence]* and *20 to 2F [External Fault]* for *H1-40 to H1-42*.
- When you will not use *H1-40 to H1-42*, set them to *F [Through Mode]*.

■ **H1-40: Mbus Reg 15C0h bit0 Input Func**

| No. (Hex.)   | Name                           | Description  | Default (Range) |
|--------------|--------------------------------|--|-----------------|
| H1-40 (0B54) | Mbus Reg 15C0h bit0 Input Func | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets MFDI function to set to <i>bit 0</i> of the MEMOBUS register <i>15C0 (Hex.)</i> . | F<br>(1 - 19F)  |

■ **H1-41: Mbus Reg 15C0h bit1 Input Func**

| No. (Hex.)   | Name                           | Description  | Default (Range) |
|--------------|--------------------------------|--|-----------------|
| H1-41 (0B55) | Mbus Reg 15C0h bit1 Input Func | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets MFDI function to set to <i>bit 1</i> of the MEMOBUS register <i>15C0 (Hex.)</i> . | F<br>(1 - 19F)  |

■ **H1-42: Mbus Reg 15C0h bit2 Input Func**

| No. (Hex.)   | Name                           | Description  | Default (Range) |
|--------------|--------------------------------|--|-----------------|
| H1-42 (0B56) | Mbus Reg 15C0h bit2 Input Func | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets MFDI function to set to <i>bit 2</i> of the MEMOBUS register <i>15C0 (Hex.)</i> . | F<br>(1 - 19F)  |

◆ **MFDI Setting Values**

Selects a function set with *H1-01 to H1-42*.

■ **0: 3-Wire Sequence**

| Setting Value | Function        | Description   |
|---------------|-----------------|---|
| 0             | 3-Wire Sequence | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the direction of motor rotation for 3-wire sequence. |

If the 3-wire sequence is set to a terminal that is not MFDI terminals S1 and S2, these terminals will be the input terminals for Forward run/Reverse run command. The drive will automatically set terminal S1 to Run command (RUN) and terminal S2 to Stop command (STOP).

When terminal S1 (Run command) activates for 1 ms minimum, the drive rotates the motor. When terminal S2 (Stop command) deactivates, the drive stops. When terminal Sx that is set in 3-wire sequence deactivates, the drive operates in the forward direction, and when it activates, the drive operates in the reverse direction.

**WARNING! Sudden Movement Hazard.** Set the MFDI parameters before you close control circuit switches. Incorrect Run/Stop circuit sequence settings can cause serious injury or death from moving equipment.

**WARNING! Sudden Movement Hazard.** When you use a 3-Wire sequence, set A1-03 = 3330 [Initialize Parameters = 3-Wire Initialization] and make sure that b1-17 = 0 [Run Command at Power Up = Disregard Existing RUN Command] (default). If you do not correctly set the drive parameters for 3-Wire operation before you energize the drive, the motor can suddenly rotate when you energize the drive.

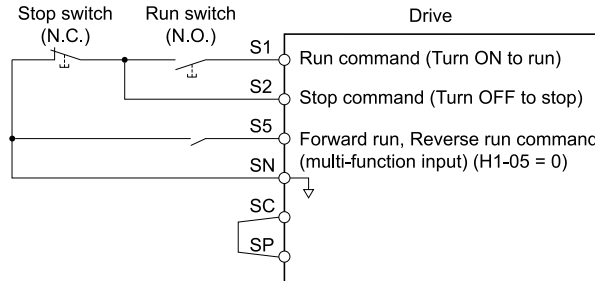


Figure 12.64 3-Wire Sequence Wiring Example

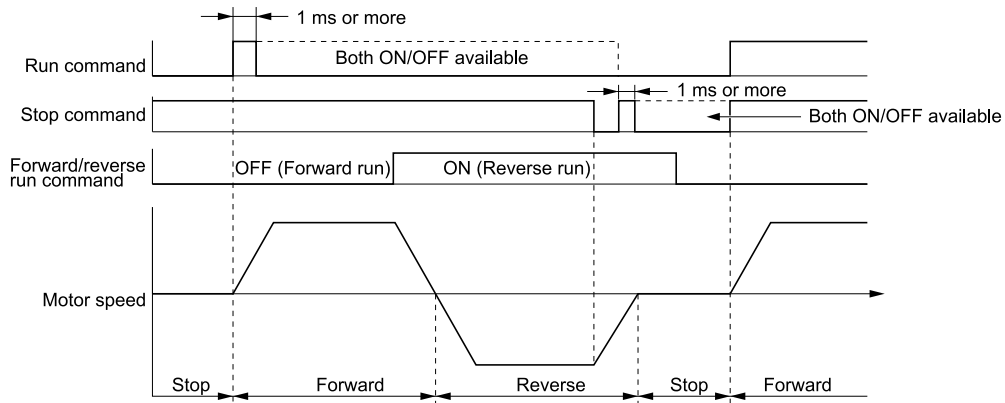


Figure 12.65 3-Wire Sequence Time Chart

**Note:**

- To input the Run command, activate the terminal for 1 ms minimum.
- The default setting for b1-17 [Run Command at Power Up] is 0 [Disregard existing RUN command]. If you enable the Run command on an energized drive, the protective function activates and the **RUN** flashes quickly. When the application will let an energized drive Run, set b1-17 = 1 [Accept Existing RUN Command].

**1: LOCAL/REMOTE Selection**

| Setting Value | Function               | Description  |
|---------------|------------------------|--|
| 1             | LOCAL/REMOTE Selection | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets drive control for the keypad (LOCAL) or an external source (REMOTE). |

**Note:**

- When the MFDI terminal sets the LOCAL/REMOTE selection, **LORE** on the keypad is disabled.
- When LOCAL Mode is selected, the green light for **LORE** comes on.
- When the Run command is ON, you cannot switch between LOCAL Mode and REMOTE Mode.

**ON : LOCAL**

The keypad is the Frequency reference source and Run command source.

**OFF : REMOTE**

The frequency reference and Run command settings are set in b1-01, b1-02 [Frequency Reference Selection 1/2] or b1-15, b1-16 [Run Command Selection 1/2].

■ 2: External Reference 1/2 Selection

| Setting Value | Function                         | Description   |
|---------------|----------------------------------|---|
| 2             | External Reference 1/2 Selection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span> <input type="checkbox"/> V/f                     <input type="checkbox"/> OLV                     <input type="checkbox"/> OLV/PM                     <input type="checkbox"/> AOLV/PM                     <input type="checkbox"/> EZOLV                 </span> </div> Sets the drive to use Run command source 1/2 or Reference command source 1/2 when in REMOTE Mode. |

**Note:**

When the drive is receiving a Run command, you cannot switch between reference sources.

**ON : b1-15 = [Frequency Reference Selection 2], b1-16 [Run Command Selection 2]**

**OFF : b1-01 = [Frequency Reference Selection 1], b1-02 [Run Command Selection 1]**

■ 3: Multi-Step Speed Reference 1

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 3             | Multi-Step Speed Reference 1 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span> <input type="checkbox"/> V/f                     <input type="checkbox"/> OLV                     <input type="checkbox"/> OLV/PM                     <input type="checkbox"/> AOLV/PM                     <input type="checkbox"/> EZOLV                 </span> </div> Uses speed references d1-01 to d1-16 to set a multi-step speed reference. |

**Note:**

Refer to [Setting Procedures for Multi-step Speed Operation on page 544](#) for more information.

■ 4: Multi-Step Speed Reference 2

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 4             | Multi-Step Speed Reference 2 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span> <input type="checkbox"/> V/f                     <input type="checkbox"/> OLV                     <input type="checkbox"/> OLV/PM                     <input type="checkbox"/> AOLV/PM                     <input type="checkbox"/> EZOLV                 </span> </div> Uses speed references d1-01 to d1-16 to set a multi-step speed reference. |

**Note:**

Refer to [Setting Procedures for Multi-step Speed Operation on page 544](#) for more information.

■ 5: Multi-Step Speed Reference 3

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 5             | Multi-Step Speed Reference 3 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span> <input type="checkbox"/> V/f                     <input type="checkbox"/> OLV                     <input type="checkbox"/> OLV/PM                     <input type="checkbox"/> AOLV/PM                     <input type="checkbox"/> EZOLV                 </span> </div> Uses speed references d1-01 to d1-16 to set a multi-step speed reference. |

**Note:**

Refer to [Setting Procedures for Multi-step Speed Operation on page 544](#) for more information.

■ 6: Jog Reference Selection

| Setting Value | Function                | Description  |
|---------------|-------------------------|--|
| 6             | Jog Reference Selection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span> <input type="checkbox"/> V/f                     <input type="checkbox"/> OLV                     <input type="checkbox"/> OLV/PM                     <input type="checkbox"/> AOLV/PM                     <input type="checkbox"/> EZOLV                 </span> </div> Sets the drive to use the JOG Frequency Reference (JOG command) set in d1-17. The JOG Frequency Reference (JOG command) overrides Frequency References 1 to 16 (d1-01 to d1-16). |

■ 7: Accel/Decel Time Selection 1

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 7             | Accel/Decel Time Selection 1 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span> <input type="checkbox"/> V/f                     <input type="checkbox"/> OLV                     <input type="checkbox"/> OLV/PM                     <input type="checkbox"/> AOLV/PM                     <input type="checkbox"/> EZOLV                 </span> </div> Sets the drive to use Acceleration/Deceleration Time 1 [C1-01, C1-02] or Acceleration/Deceleration Time 2 [C1-03, C1-04]. |

**Note:**

Refer to [C1: Accel & Decel Time on page 524](#) for more information.

■ 8: Baseblock Command (N.O.)

| Setting Value | Function                 | Description   |
|---------------|--------------------------|---|
| 8             | Baseblock Command (N.O.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span> <input type="checkbox"/> V/f                     <input type="checkbox"/> OLV                     <input type="checkbox"/> OLV/PM                     <input type="checkbox"/> AOLV/PM                     <input type="checkbox"/> EZOLV                 </span> </div> Sets the command that stops drive output and coasts the motor to stop when the input is ON. |

The keypad flashes *bb* [Baseblock]. If you cancel the baseblock command when the Run command is active, the drive will restart the motor and use the speed search function.

**WARNING! Sudden Movement Hazard.** When you use a mechanical holding brake with the drive in a lifting application, you must close the brake if an input terminal triggers the Baseblock command to stop drive output. If you enter the baseblock command, the motor will suddenly coast and the load will slip, which can cause serious injury or death.



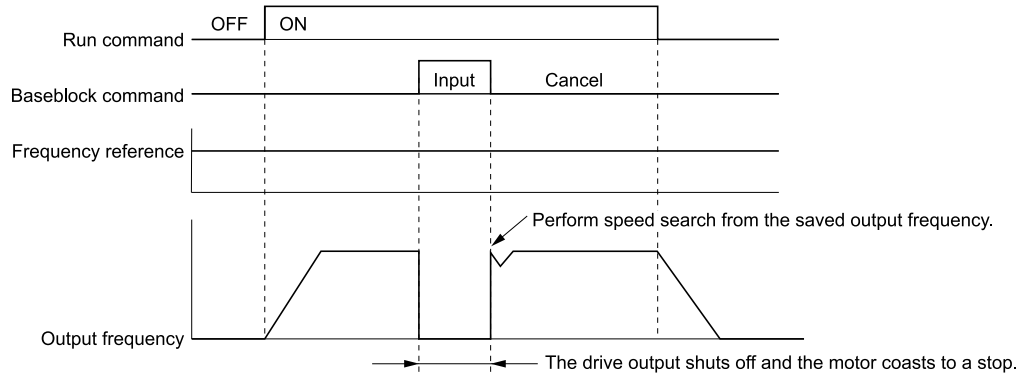


Figure 12.66 Baseblock Command Time Chart

**ON : Baseblock (drive output stop)**

**OFF : Normal operation**

■ **9: Baseblock Command (N.C.)**

| Setting Value | Function                 | Description  |
|---------------|--------------------------|--|
| 9             | Baseblock Command (N.C.) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command that stops drive output and coasts the motor to stop when the input terminal is OFF. |

The keypad flashes *bb* [Baseblock]. If you cancel the baseblock command when the Run command is active, the drive will restart the motor and use the speed search function.

**ON : Normal operation**

**OFF : Baseblock (drive output stop)**

**WARNING! Sudden Movement Hazard.** When you use a mechanical holding brake with the drive in a lifting application, you must close the brake if an input terminal triggers the Baseblock command to stop drive output. If you enter the baseblock command, the motor will suddenly coast and the load will slip, which can cause serious injury or death.

■ **A: Accel/Decel Ramp Hold**

| Setting Value | Function              | Description   |
|---------------|-----------------------|---|
| A             | Accel/Decel Ramp Hold | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Momentarily pauses motor acceleration and deceleration when the terminal is turned ON, retains the output frequency that was stored in the drive at the time of the pause, and restarts motor operation. |

If the terminal is deactivated, the drive restarts acceleration and deceleration.

When the acceleration/deceleration ramp hold terminal is activated and  $d4-01 = 1$  [Freq Reference Retention Select = Enabled], the drive will store the output frequency in memory. While the acceleration/deceleration ramp hold command is activated, the drive will always restart the motor at this output frequency.

Note:

Refer to [d4-01: Freq Reference Hold Selection on page 552](#) for more information.

■ **B: Overheat Alarm (oH2)**

| Setting Value | Function             | Description   |
|---------------|----------------------|---|
| B             | Overheat Alarm (oH2) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the drive to display an oH2 [Drive Overheat Warning] alarm when the input terminal is ON. The alarm does not have an effect on drive operation. |

■ **C: Analog Terminal Enable Selection**

| Setting Value | Function                         | Description  |
|---------------|----------------------------------|--|
| C             | Analog Terminal Enable Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command that enables or disables the terminals selected in H3-14 [Analog Input Terminal Enable Sel]. |

**ON : Terminal selected with H3-14 is enabled**

**OFF : Terminal selected with H3-14 is disabled**

■ **E: ASR Integral Reset**

| Setting Value | Function           | Description  |
|---------------|--------------------|--|
| E             | ASR Integral Reset | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the command to reset the integral value and use PI control or P control for the speed control loop.</p> |

**ON : P control**

**OFF : PI control**

■ **F: Not Used**

| Setting Value | Function | Description  |
|---------------|----------|--|
| F             | Not Used | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Use this setting for unused terminals or to use terminals in through mode.</p> |

Through Mode uses the signal input to the terminal as a digital input for the upper sequence through a communication option or MEMOBUS/Modbus communications. This input signal does not have an effect on drive operation.

■ **10: Up Command**

| Setting Value | Function   | Description   |
|---------------|------------|---|
| 10            | Up Command | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the command to use a push button switch to increase the drive frequency reference. You must also set <i>Setting 11 [Down Command]</i>.</p> |

**ON : Increases the frequency reference.**

**OFF : Holds the current frequency reference.**

**Note:**

- If you set only the Up command or only the Down command, the drive will detect *oPE03 [Multi-Function Input Setting Err]*.
- If you set two or more of these functions at the same time, the drive will detect *oPE03*:
  - Up/Down command
  - Accel/Decel Ramp Hold
  - Reference Sample Hold
  - Offset Frequency 1, 2, 3 addition
  - Up/Down 2 Command
- The Up/Down command does not function in these conditions:
  - b1-01 = 2, 3 [Frequency Reference Selection 1 = Memobus/Modbus Communications, Option PCB]*
  - b1-02 ≠ 1 [Run Command Selection 1 ≠ Control Circuit Terminal]*
  - Drive is in LOCAL mode
  - Set to *b1-15 [Frequency Reference Selection 2]* by use of *H1-xx = 2 [MFDI Function Select = External Reference 1/2 Selection]*

When you enter the UP command, the frequency reference increases.

The Up and Down commands have priority over all other frequency references. When you enable the Up/Down command, the drive will ignore these frequency references:

- Frequency reference from Keypad [*b1-01 = 0*]
- Frequency reference from Analog Input [*b1-01 = 1*]
- Frequency reference from Pulse Train Input [*b1-01 = 4*]

Table 12.56 shows the Up and Down commands with their operation.

**Table 12.56 Up Command and Down Command**

| Command status  |                   | Drive operation                        |
|-----------------|-------------------|--|
| Up command (10) | Down command (11) |  |
| OFF             | OFF               | Keeps the current frequency reference. |
| ON              | OFF               | Increases the frequency reference.     |
| OFF             | ON                | Decreases the frequency reference.     |
| ON              | ON                | Keeps the current frequency reference. |

**Combine Frequency Reference Hold Functions and Up/Down Commands**

- When you clear the Run command or when *d4-01 = 0 [Freq Reference Hold Selection = Disabled]*, and you restart the drive, the Up/Down command resets to 0.

- When  $d4-01 = 1$  [Enabled], the drive saves the frequency reference set during the Up/Down command. When you cycle the Run command or restart the drive, the drive saves the frequency reference value and restarts the motor at this frequency value. After you clear the Run command, activate the terminal set for the Up command or Down command to set the saved reference value to 0.

**Note:**

Refer to *d4-01: Freq Reference Hold Selection on page 552* for more information.

**Combine Upper/Lower Limits of the Frequency Reference and the Up/Down Commands**

Set the upper limit value of the frequency reference to  $d2-01$  [Frequency Reference Upper Limit].

Use an analog input or  $d2-02$  [Frequency Reference Lower Limit] to set the lower limit value of the frequency reference. The configurable values change when the setting for  $d4-10$  [Up/Down Freq Lower Limit Select] changes. When you input a Run command, these are the lower limits of the frequency reference:

- When the lower limit of the frequency reference is set only for  $d2-02$ , the drive accelerates the motor to the lower limit value of the frequency reference at the same time that you input the Run command.
- When the lower limit of the frequency reference is set only for analog input, the drive accelerates the motor to the lower limit value of the frequency reference when the Run command, and Up command or Down command for the drive is enabled. When only the Run command is enabled, the motor does not start.
- When these conditions occur, the drive accelerates the motor to the  $d2-02$  setting value when the Run command is input. When the motor accelerates to the setting value of  $d2-02$ , if the Up/Down command is enabled, the motor accelerates to the lower limit value of the analog input.
  - The lower limit value of the frequency reference is set for the analog input and  $d2-02$
  - The lower limit value of the analog input is higher than the setting value of  $d2-02$

**Note:**

Refer to *d4-01: Freq Reference Hold Selection on page 552* for more information.

Figure 12.67 shows an example of how Up/Down command operates. In this example, the lower limit value of the frequency reference is set in  $d2-02$ . Figure 12.67 shows the time chart when Freq Reference Retention Select [ $d4-01$ ] is enabled and disabled.

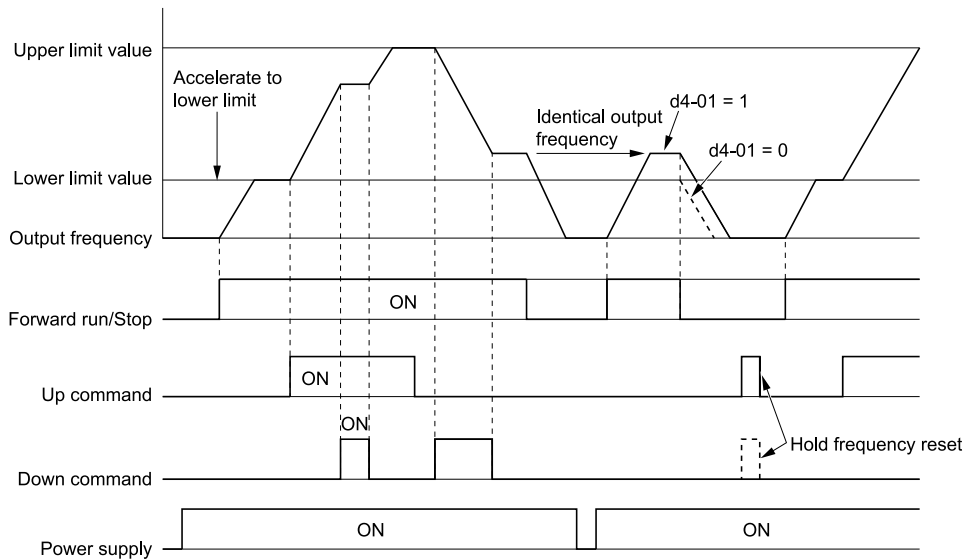


Figure 12.67 Up/Down Command Time Chart

■ 11: Down Command

| Setting Value | Function     | Description  |
|---------------|--------------|--|
| 11            | Down Command | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the command to use a push button switch to decrease the drive frequency reference. You must also set <i>Setting 10</i> [Up Command].</p> |

- ON** : Decreases the frequency reference.
- OFF** : Holds the current frequency reference.

## 12.8 H: Terminal Function Selection

### Note:

- If you set only the Up command or only the Down command, the drive will detect *oPE03* [Multi-Function Input Setting Err].
- If you set two or more of these functions at the same time, the drive will detect *oPE03*:
  - Up/Down command
  - Accel/Decel Ramp Hold
  - Reference Sample Hold
  - Offset Frequency 1, 2, 3 addition
  - Up/Down 2 Command
- The Up/Down command does not function in these conditions:
  - $b1-01 = 2, 3$  [Frequency Reference Selection 1 = Memobus/Modbus Communications, Option PCB]
  - $b1-02 \neq 1$  [Run Command Selection 1  $\neq$  Control Circuit Terminal]
  - Drive is in LOCAL mode
  - Set to  $b1-15$  [Frequency Reference Selection 2] by use of  $H1-xx = 2$  [MFDI Function Select = External Reference 1/2 Selection]

When you enter the UP command, the frequency reference increases. When you enter the Down command, the frequency reference decreases.

The Up and Down commands have priority over all other frequency references. When you enable the Up/Down command, the drive will ignore these frequency references:

- Frequency reference from Keypad [ $b1-01 = 0$ ]
- Frequency reference from Analog Input [ $b1-01 = 1$ ]
- Frequency reference from Pulse Train Input [ $b1-01 = 4$ ]

## 12: Forward Jog

| Setting Value | Function    | Description  |
|---------------|-------------|--|
| 12            | Forward Jog | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the command to operate the motor in the forward direction at the Jog Frequency set in $d1-17$ [Jog Reference]. |

### Note:

- It is not necessary to input the Run command.
- The Forward JOG command has priority over all other frequency references.
- When the Forward JOG and Reverse JOG commands are activated at the same time for 500 ms or longer, the drive will ramp to stop.

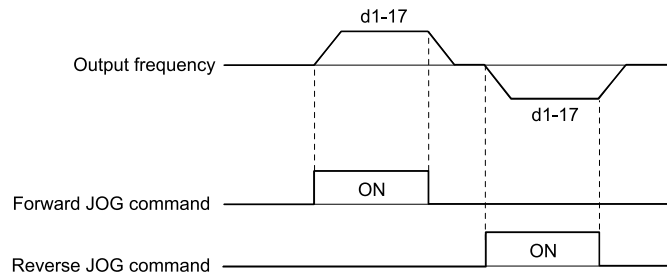


Figure 12.68 JOG Operation Pattern

## 13: Reverse Jog

| Setting Value | Function    | Description  |
|---------------|-------------|--|
| 13            | Reverse Jog | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the command to operate the motor in reverse at the Jog Frequency set in $d1-17$ [Jog Reference]. |

### Note:

- It is not necessary to input the Run command.
- The Reverse JOG command has priority over all other frequency references.
- When the Forward JOG and Reverse JOG commands are activated at the same time for 500 ms or longer, the drive will ramp to stop.

## 14: Fault Reset

| Setting Value | Function    | Description  |
|---------------|-------------|--|
| 14            | Fault Reset | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the command to reset the current fault when the Run command is inactive. |

If the drive detects a fault, the drive will activate the fault relay output, turn off the output, and the motor will coast to stop.

If the drive detects a fault for which you can set the stopping method, apply the appropriate Stopping Method. Then push **[>]** (RESET) on the keypad to turn the Run command OFF, or activate the fault reset terminal to reset the fault.

**Note:**

The drive ignores the fault reset command when the Run command is active. Remove the Run command before trying to reset a fault.

**15: Fast Stop (N.O.)**

| Setting Value | Function         | Description  |
|---------------|------------------|--|
| 15            | Fast Stop (N.O.) | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the command to ramp to stop in the deceleration time set in C1-09 [Fast Stop Time] when the input terminal is activated while the drive is operating.</p> |

If you cancel the fast stop input, the drive will not restart the motor until you meet these conditions:

- Fully stop the motor
- Cancel the Run command
- Cancel the fast stop command

**Note:**

- To use the N.C. switch to input the fast stop command, set 17 (Fast Stop (N.C.)).
- Refer to [C1-09: Fast Stop Time on page 527](#) for more information.
- Set C1-09 [Fast Stop Time] to a correct deceleration time. If the deceleration time is too short, it can cause an overvoltage fault and failure to stop the motor from coasting.

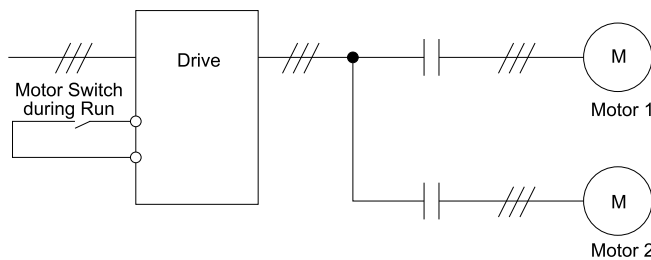
**16: Motor 2 Selection**

| Setting Value | Function          | Description   |
|---------------|-------------------|---|
| 16            | Motor 2 Selection | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the command for the drive to operate motor 1 or motor 2. Stop the motors before switching.</p> |

You can use an external input to switch operation between two induction motors. The drive will save the control methods, V/f patterns, and motor parameters for the two motors.

**ON : Operate motor 2**

**OFF : Operate motor 1**



When you select motor 2, the drive will switch to motor 2 parameters.

**Table 12.57 Parameters that Switch between Motor 1 and Motor 2**

| Parameter  | Motor 2 Selection     |                |
|--|-----------------------|----------------|
|  | OFF (Motor 1)         | ON (Motor 2)   |
| C1-xx [Accel & Decel Time]                                     | C1-01 to C1-04        | C1-05 to C1-08 |
| C3-xx [Slip Compensation]                                      | C3-01 to C3-04        | C3-21 to C3-24 |
| C4-xx [Torque Compensation]                                    | C4-01                 | C4-07          |
| C5-xx [Automatic Speed Regulator (ASR)]                        | C5-01 to C5-08, C5-12 | -              |
| E1-xx, E3-xx [V/f Patterns]<br>E2-xx, E4-xx [Motor Parameters] | E1-xx, E2-xx          | E3-xx, E4-xx   |

**Note:**

- When you use 2 motors, the drive applies the protective function set in L1-01 [Motor Overload Protection Select] to motor 1 and motor 2.
- You cannot switch between motors 1 and 2 during run. If you try to switch motors when they are running, it will cause a rUn error.
- You must wait 200 ms minimum to input a Run command.

■ 17: Fast Stop (N.C.)

| Setting Value | Function         | Description   |
|---------------|------------------|---|
| 17            | Fast Stop (N.C.) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the command to ramp to stop in the deceleration time set in C1-09 [Fast Stop Time] when the input terminal is activated while the drive is operating. |

If you cancel the fast stop input, the drive will not restart the motor until you meet these conditions:

- Fully stop the motor
- Cancel the Run command
- Cancel the fast stop command

**Note:**

- To use the N.O. switch to input the fast stop command, set 15 (Fast Stop (N.O.)).
- Refer to C1-09: Fast Stop Time on page 527 for more information.
- Set C1-09 [Fast Stop Time] to a correct deceleration time. If the deceleration time is too short, it can cause an overvoltage fault and failure to stop the motor from coasting.

Figure 12.69 shows an example of how fast stop operates.

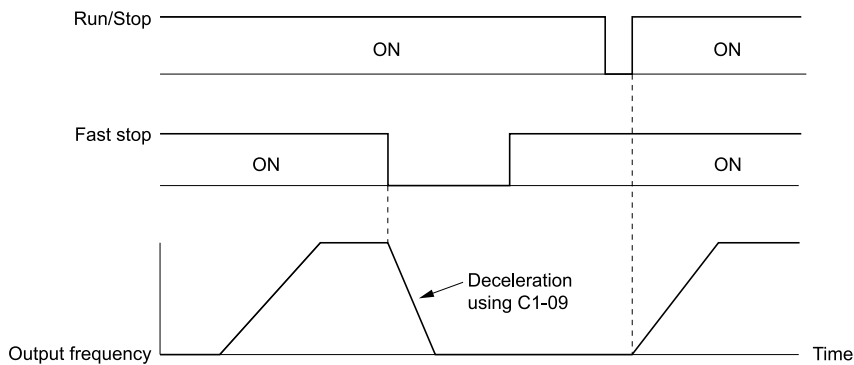


Figure 12.69 Fast Stop Time Chart

■ 18: Timer Function

| Setting Value | Function       | Description   |
|---------------|----------------|---|
| 18            | Timer Function | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the command to start the timer function. Use this setting with Timer Output [H2-xx = 12]. |

**Note:**

Refer to b4: Timer Function on page 501 for more information.

■ 19: PID Disable

| Setting Value | Function    | Description  |
|---------------|-------------|--|
| 19            | PID Disable | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the command to disable PID control when b5-01 = 1 to 8 [PID Mode Setting = Enabled]. |

ON : PID control disabled

OFF : PID control enabled

■ 1A: Accel/Decel Time Selection 2

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 1A            | Accel/Decel Time Selection 2 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Set this function and H1-xx = 7 [Accel/Decel Time Selection 1] together. Sets the drive to use Acceleration/Deceleration Time 3 [C1-05, C1-06] or Acceleration/Deceleration Time 4 [C1-07, C1-08]. |

**Note:**

Refer to C1: Accel & Decel Time on page 524 for more information.

■ 1B: Programming Lockout

| Setting Value | Function            | Description  |
|---------------|---------------------|--|
| 1B            | Programming Lockout | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the command to prevent parameter changes when the terminal is OFF. |

You can continue to view parameter setting values when the terminal is *OFF* [*Parameters Cannot be Edited*].

**ON : Program Lockout**

**OFF : Parameter Write Prohibit**

■ **1E: Reference Sample Hold**

| Setting Value | Function              | Description   |
|---------------|-----------------------|---|
| 1E            | Reference Sample Hold | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the command to sample the frequency reference at terminal A1 or A2, and hold the frequency reference at that frequency.</p> |

When the terminal is active for 100 ms, this function reads a sample of the analog frequency reference and holds that sample. When you input the sample/hold command again, the function again reads a sample of the analog frequency reference and holds that sample. When you turn off the power, the drive erases the saved analog frequency and resets the frequency reference to 0.

Figure 12.70 shows an example of how the function operates.

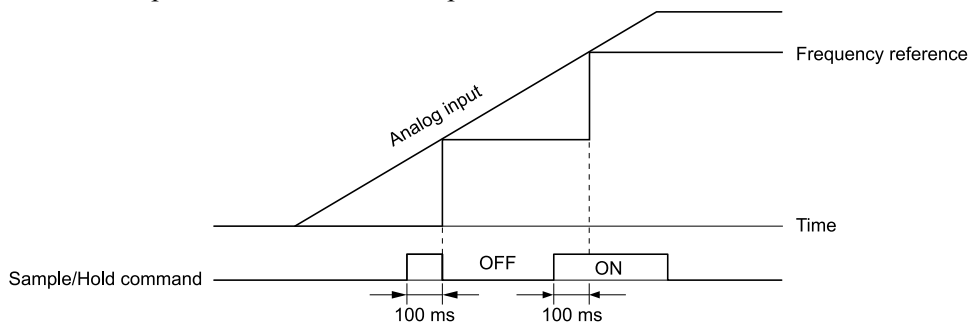


Figure 12.70 Reference Sample Hold

You cannot set the Reference Sample Hold function at the same time as these functions:

- *H1-xx = A* [*Accel/Decel Ramp Hold*]
- *H1-xx = 10, 11* [*Up Command, Down Command*]
- *H1-xx = 44 to 46* [*Add Offset Frequency 1 to 3*]
- *H1-xx = 75, 76* [*Up 2 Command, Down 2 Command*]

If you set them at the same time, the drive will detect *oPE03* [*Multi-Function Input Setting Err*].

■ **20 to 2F: External Fault**

| Setting Value | Function       | Description   |
|---------------|----------------|---|
| 20 to 2F      | External fault | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets a command to stop the drive when a failure or fault occurs on an external device.</p> |

If an external fault is input to the drive, the keypad will show *EFx* [*External Fault (Terminal Sx)*], where x is the number of the terminal (terminal Sx) to which the external fault signal is assigned. For example, when an external fault signal is input to terminal S3, the keypad will show EF3.

Use these conditions to select the value to set in *H1-xx*:

- Signal input method from peripheral devices
- External fault detection method
- Motor stopping method (operation after external fault detection)

Table 12.58 shows the relation between the conditions and the value set to *H1-xx*.

Table 12.58 Stopping Methods for External Fault

| Setting | Signal Input Method from Peripheral Devices *1 |      | External Fault Detection Method *2 |                          | Stopping Method      |                       |                   |                                   |
|---------|--|------|------------------------------------|--------------------------|----------------------|-----------------------|-------------------|-----------------------------------|
|         | N.O.   | N.C. | Always Detected                    | Detected during RUN Only | Ramp to Stop (Fault) | Coast to Stop (Fault) | Fast Stop (Fault) | Continuous Operation (Alarm Only) |
| 20      | x  | -    | x                                  | -                        | x                    | -                     | -                 | -                                 |
| 21      | -  | x    | x                                  | -                        | x                    | -                     | -                 | -                                 |
| 22      | x  | -    | -                                  | x                        | x                    | -                     | -                 | -                                 |
| 23      | -  | x    | -                                  | x                        | x                    | -                     | -                 | -                                 |

## 12.8 H: Terminal Function Selection

| Setting | Signal Input Method from Peripheral Devices *1 |      | External Fault Detection Method *2 |                          | Stopping Method      |                       |                   |                                   |
|---------|--|------|------------------------------------|--------------------------|----------------------|-----------------------|-------------------|-----------------------------------|
|         | N.O.   | N.C. | Always Detected                    | Detected during RUN Only | Ramp to Stop (Fault) | Coast to Stop (Fault) | Fast Stop (Fault) | Continuous Operation (Alarm Only) |
| 24      | x  | -    | x                                  | -                        | -                    | x                     | -                 | -                                 |
| 25      | -  | x    | x                                  | -                        | -                    | x                     | -                 | -                                 |
| 26      | x  | -    | -                                  | x                        | -                    | x                     | -                 | -                                 |
| 27      | -  | x    | -                                  | x                        | -                    | x                     | -                 | -                                 |
| 28      | x  | -    | x                                  | -                        | -                    | -                     | x                 | -                                 |
| 29      | -  | x    | x                                  | -                        | -                    | -                     | x                 | -                                 |
| 2A      | x  | -    | -                                  | x                        | -                    | -                     | x                 | -                                 |
| 2B      | -  | x    | -                                  | x                        | -                    | -                     | x                 | -                                 |
| 2C      | x  | -    | x                                  | -                        | -                    | -                     | -                 | x                                 |
| 2D      | -  | x    | x                                  | -                        | -                    | -                     | -                 | x                                 |
| 2E      | x  | -    | -                                  | x                        | -                    | -                     | -                 | x                                 |
| 2F      | -  | x    | -                                  | x                        | -                    | -                     | -                 | x                                 |

\*1 Set the terminal to N.O. (detects external fault when switched ON) or N.C. (detects external fault when switched OFF).

\*2 Set the drive to always detect each fault or to detect only during run.

### 30: PID Integrator Reset

| Setting Value | Function             | Description  |
|---------------|----------------------|--|
| 30            | PID Integrator Reset | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to reset and hold the PID control integral to 0 when the terminal is ON. |

**Note:**

Refer to [b5: PID control on page 502](#) for more information.

### 31: PID Integrator Hold

| Setting Value | Function            | Description  |
|---------------|---------------------|--|
| 31            | PID Integrator Hold | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to hold the integral value of the PID control while the terminal is activated. |

When you turn off the input terminal, PID control restarts the integral.

**Note:**

Refer to [b5: PID control on page 502](#) for more information.

### 32: Multi-Step Speed Reference 4

| Setting Value | Function                     | Description  |
|---------------|------------------------------|--|
| 32            | Multi-Step Speed Reference 4 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses speed references <i>d1-01</i> to <i>d1-16</i> to set a multi-step speed reference. |

**Note:**

Refer to [Setting Procedures for Multi-step Speed Operation on page 544](#) for more information.

### 34: PID Soft Starter Disable

| Setting Value | Function                 | Description  |
|---------------|--------------------------|--|
| 34            | PID Soft Starter Disable | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the PID soft starter function. |

#### ON : Disable

Disables *b5-17* [PID Accel/Decel Time].

#### OFF : Enabled

Enables *b5-17* [PID Accel/Decel Time].

**Note:**

Refer to [b5: PID control on page 502](#) for more information.



### 35: PID Input (Error) Invert

| Setting Value | Function                 | Description   |
|---------------|--------------------------|---|
| 35            | PID Input (Error) Invert | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the command to turn the terminal ON and OFF to switch the PID input level (polarity). |

**Note:**

Refer to [b5: PID control on page 502](#) for more information.

### 3E: PID Setpoint Selection 1

| Setting Value | Function                 | Description  |
|---------------|--------------------------|--|
| 3E            | PID Setpoint Selection 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Set this function and $H1-xx = 3F$ [PID Setpoint Selection 2] together. Sets the function to switch the PID setpoint to $b5-58$ to $b5-60$ [PID Setpoint 2 to 4]. |

Refer to [b5-58 to b5-60: PID Setpoints 2 to 4 on page 516](#) for more information.

### 3F: PID Setpoint Selection 2

| Setting Value | Function                 | Description  |
|---------------|--------------------------|--|
| 3F            | PID Setpoint Selection 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Set this function and $H1-xx = 3E$ [PID Setpoint Selection 1] at the same time. Sets the function to switch the PID setpoint to $b5-58$ to $b5-60$ [PID Setpoint 2 to 4]. |

Refer to [b5-58 to b5-60: PID Setpoints 2 to 4 on page 516](#) for more information.

### 40: Forward RUN (2-Wire)

| Setting Value | Function             | Description  |
|---------------|----------------------|--|
| 40            | Forward RUN (2-Wire) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Forward Run command for 2-wire sequence 1. Set this function and $H1-xx = 41$ [Reverse Run Command (2-Wire Seq)] at the same time. |

**ON : Forward Run**

**OFF : Run Stop**

**Note:**

- Turning ON the Forward Run command terminal and the Reverse Run command terminal will cause alarm *EF* [FWD/REV Run Command Input Error] and the motor will ramp to stop.
- Initialize the drive with a 2-wire sequence to set the Forward Run command to terminal S1.
- This function will not operate at the same time as  $H1-xx = 42, 43$  [Run Command/FWD/REV Command (2-Wire Seq 2)].

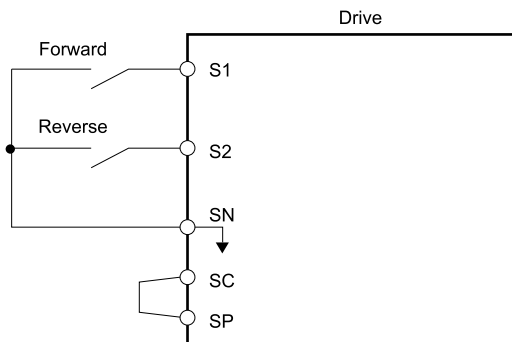


Figure 12.71 2-Wire Sequence Wiring Example

### 41: Reverse RUN (2-Wire)

| Setting Value | Function             | Description  |
|---------------|----------------------|--|
| 41            | Reverse RUN (2-Wire) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the Forward Run command for 2-wire sequence 1. Set this function and $H1-xx = 40$ [Forward Run Command (2-Wire Seq)] at the same time. |

**ON : Reverse Run**

**OFF : Run Stop**

## 12.8 H: Terminal Function Selection

**Note:**

- Turning ON the Forward Run command terminal and the Reverse Run command terminal will cause alarm EF [FWD/REV Run Command Input Error] and the motor will ramp to stop.
- Initialize the drive with a 2-wire sequence to set the Reverse Run command to terminal S2.
- This function will not operate at the same time as  $H1-xx = 42, 43$  [Run Command/FWD/REV Command (2-Wire Seq 2)].

### ■ 42: Run Command (2-Wire Sequence 2)

| Setting Value | Function                        | Description  |
|---------------|---------------------------------|--|
| 42            | Run Command (2-Wire Sequence 2) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the Run command for 2-wire sequence 2. Set this function and <math>H1-xx = 43</math> [FWD/REV Command (2-Wire Seq 2)] at the same time.</p> |

**ON :** Run

**OFF :** Stop

**Note:**

This function will not operate at the same time as  $H1-xx = 40, 41$  [Forward/Reverse Run Command (2-Wire Seq)].

### ■ 43: FWD/REV (2-Wire Sequence 2)

| Setting Value | Function                    | Description   |
|---------------|-----------------------------|---|
| 43            | FWD/REV (2-Wire Sequence 2) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the direction of motor rotation for 2-wire sequence 2. Set this function and <math>H1-xx = 42</math> [Run Command (2-Wire Sequence 2)] together.</p> |

**ON :** Reverse

**OFF :** Forward

**Note:**

- You must input the Run command to rotate the motor.
- This function will not operate at the same time as  $H1-xx = 40, 41$  [Forward/Reverse Run Command (2-Wire Seq)].

### ■ 44: Add Offset Frequency 1 (d7-01)

| Setting Value | Function                       | Description  |
|---------------|--------------------------------|--|
| 44            | Add Offset Frequency 1 (d7-01) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to add the offset frequency set in <math>d7-01</math> [Offset Frequency 1] to the frequency reference when the terminal activates.</p> |

**Note:**

Refer to [d7: Offset Frequency on page 558](#) for more information.

### ■ 45: Add Offset Frequency 2 (d7-02)

| Setting Value | Function                       | Description  |
|---------------|--------------------------------|--|
| 45            | Add Offset Frequency 2 (d7-02) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to add the offset frequency set in <math>d7-02</math> [Offset Frequency 2] to the frequency reference when the terminal activates.</p> |

**Note:**

Refer to [d7: Offset Frequency on page 558](#) for more information.

### ■ 46: Add Offset Frequency 3 (d7-03)

| Setting Value | Function                       | Description  |
|---------------|--------------------------------|--|
| 46            | Add Offset Frequency 3 (d7-03) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to add the offset frequency set in <math>d7-03</math> [Offset Frequency 3] to the frequency reference when the terminal activates.</p> |

**Note:**

Refer to [d7: Offset Frequency on page 558](#) for more information.

### ■ 47: Node Setup (CANopen)

| Setting Value | Function             | Description  |
|---------------|----------------------|--|
| 47            | Node Setup (CANopen) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function in CANopen communications to start the Node Setup function to set the drive node address from the host controller.</p> |

## 60: DC Injection Braking Command

| Setting Value | Function                     | Description  |
|---------------|------------------------------|--|
| 60            | DC Injection Braking Command | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the command to use DC Injection Braking to stop the motor. |

If you input the Run command or JOG command, it will cancel DC Injection Braking.

Figure 12.72 shows the time chart of the DC Injection Braking function.

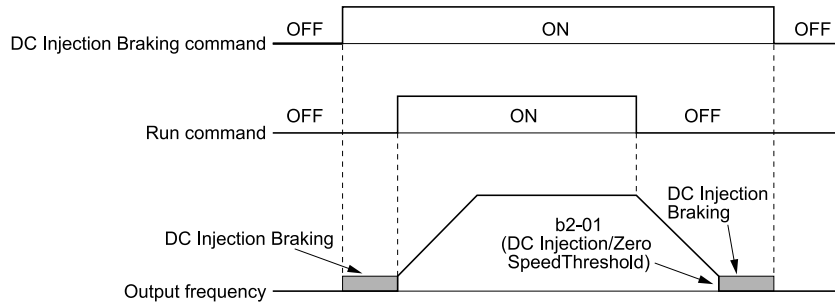


Figure 12.72 DC Injection Braking Time Chart

### Note:

- When  $A1-02 = 8$  [Control Method Selection = EZOLV], this function is available with a PM motor.
- Refer to [b2: DC Injection Braking and Short Circuit Braking on page 490](#) for more information.

## 61: Speed Search from Fmax

| Setting Value | Function               | Description   |
|---------------|------------------------|---|
| 61            | Speed Search from Fmax | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function to start speed search using an external reference although $b3-01 = 0$ [Speed Search Selection at Start = Disabled]. |

When the terminal is activated for  $b3-24 = 2$  [Speed Search Method Selection = Current Detection 2], the drive starts speed search from the maximum output frequency.

### Note:

- The drive will detect  $oPE03$  [Multi-Function Input Setting Err] if you set  $H1-xx = 61$  and  $62$  at the same time.
- Refer to [b3: Speed Search on page 493](#) for more information.

## 62: Speed Search from Fref

| Setting Value | Function               | Description  |
|---------------|------------------------|--|
| 62            | Speed Search from Fref | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function to use an external reference to start speed search although $b3-01 = 0$ [Speed Search Selection at Start = Disabled]. |

When the terminal is activated for  $b3-24 = 2$  [Speed Search Method Selection = Current Detection 2], the drive starts speed search from the frequency reference.

### Note:

- The drive will detect  $oPE03$  [Multi-Function Input Setting Err] if you set  $H1-xx = 61$  and  $62$  at the same time.
- Refer to [b3: Speed Search on page 493](#) for more information.

## 63: Field Weakening

| Setting Value | Function        | Description  |
|---------------|-----------------|--|
| 63            | Field Weakening | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function to send the Field Weakening Level and Field Weakening Frequency Limit commands set in $d6-01$ [Field Weakening Level] and $d6-02$ [Field Weakening Frequency Limit] when the input terminal is activated. |

### Note:

Refer to [d6: Field Weakening /Forcing on page 558](#) for more information.

## 65: KEB Ride-Thru 1 Activate (N.C.)

| Setting Value | Function                        | Description  |
|---------------|---------------------------------|--|
| 65            | KEB Ride-Thru 1 Activate (N.C.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets operation of the KEB1 function through the KEB Ride-Thru 1 (N.C.). |

**ON : Normal operation**

**OFF : Deceleration during momentary power loss**

When you enable KEB Ride-Thru 1, set L2-29 [KEB Method Selection]. The drive operates with the selected KEB method.

**Note:**

- If you set *KEB Ride-Thru 1* [H1-xx = 65, 66] and *KEB Ride-Thru 2* [H1-xx = 7A, 7B] at the same time, the drive will detect *oPE03* [Multi-Function Input Setting Err].
- Refer to [KEB Ride-Thru Function on page 675](#) for more information.

■ **66: KEB Ride-Thru 1 Activate (N.O.)**

| Setting Value | Function                        | Description  |
|---------------|---------------------------------|--|
| 66            | KEB Ride-Thru 1 Activate (N.O.) | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets operation of the KEB1 function through the KEB Ride-Thru 1 (N.O.). |

**ON : Deceleration during momentary power loss**

**OFF : Normal operation**

When you enable KEB Ride-Thru 1, set L2-29 [KEB Method Selection]. The drive operates with the selected KEB method.

**Note:**

- If you set *KEB Ride-Thru 1* [H1-xx = 65, 66] and *KEB Ride-Thru 2* [H1-xx = 7A, 7B] at the same time, the drive will detect *oPE03* [Multi-Function Input Setting Err].
- Refer to [KEB Ride-Thru Function on page 675](#) for more information.

■ **67: Communications Test Mode**

| Setting Value | Function                 | Description  |
|---------------|--------------------------|--|
| 67            | Communications Test Mode | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Set the function for the drive to self-test RS-485 serial communications operation. |

The Self-Diagnostics function connects the transmission terminal of the control terminal block to the reception terminal. The function transmits the data that the drive sent to make sure that the drive can communicate correctly.

**Note:**

Refer to [Self-Diagnostics on page 216](#) for more information.

■ **68: High Slip Braking (HSB) Activate**

| Setting Value | Function                         | Description   |
|---------------|----------------------------------|---|
| 68            | High Slip Braking (HSB) Activate | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the command to use high-slip braking to stop the motor. |

**Note:**

- When you restart the drive after you use high-slip braking, make sure that the drive fully stops the motor, then clear the high-slip braking input.
- Refer to [High Slip Braking \(HSB\) on page 716](#) for more information.

■ **6A: Drive Enable**

| Setting Value | Function     | Description   |
|---------------|--------------|---|
| 6A            | Drive Enable | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the function to show <i>dnE</i> [Drive Enabled] on the keypad and ignore Run commands when the terminal is OFF. |

If you input the Run command before you turn ON the Drive Enable terminal, you must input the Run command again to operate the drive. When you deactivate the terminal set for Drive Enable while the drive is operating, the drive will use the stopping method set in *b1-03* [Stopping Method Selection] to stop the motor.

**ON : Run command is accepted.**

**OFF : Run command is disabled. When the drive is running, it stops according to *b1-03* setting.**

■ **75: Up 2 Command**

| Setting Value | Function     | Description  |
|---------------|--------------|--|
| 75            | Up 2 Command | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the function to increase the frequency reference bias value to accelerate the motor when the terminal is activated. Set this function and <i>H1-xx = 76</i> [Down 2 Command] together. |

When you activate the terminal set for Up2 Command, the bias will increase. When you activate the terminal set for Down 2 Command, the bias will decrease. When you activate or deactivate the two commands, the drive will hold the frequency reference. Table 12.59 gives information about the relation between operation of the Up/Down 2 Command and *d4-01*, *d4-03*, and *4-05*.

**Note:**

- When you use this function, set the optimal bias limit values with *d4-08* and *d4-09* [*Up/Down 2 Bias Upper Limit/Lower Limit*].
- Refer to *d4: Frequency Ref Up/Down & Hold on page 552* for more information.

**Table 12.59 Up 2 Command, Down 2 Command**

| Function | Frequency Reference Source          | d4-03 | d4-05 | d4-01 | Operation  | Storing the Frequency Reference or Frequency Bias   |
|----------|-------------------------------------|-------|-------|-------|--|---|
| 1        | Multi-step speed reference          | 0.00  | 0     | 0     | <ul style="list-style-type: none"> <li>• When the Up 2 Command is active, the drive accelerates the motor (increases the bias value).</li> <li>• When the Down 2 Command is active, the drive decelerates the motor (decreases the bias value)</li> <li>• When the Up 2 Command and Down 2 Command are active or not active, the drive holds the output frequency. (holds the bias value).</li> <li>• When the frequency changes, it will reset the bias.</li> <li>• For all other statuses, the drive will follow the frequency reference.</li> </ul>   | Not stored.   |
| 2        |                                     |       |       | 1     |  | When the bias value and frequency reference are constant for 5 seconds after the frequency reference hold starts, the drive will add the bias value to the enabled frequency reference, then reset.   |
| 3        |                                     |       |       | -     |  | <ul style="list-style-type: none"> <li>• When the Up 2 Command is active, the drive accelerates the motor.</li> <li>• When the Down 2 Command is active, the drive decelerates the motor.</li> <li>• For all other statuses, the drive will follow the frequency reference.</li> </ul>  |
| 4        | Multi-step speed reference          | > 0   | -     | 0     | <ul style="list-style-type: none"> <li>• When the Up 2 Command is active, the drive accelerates the motor to "Frequency Reference + <i>d4-03</i>" (the bias value will increase to the value set in <i>d4-03</i>)</li> <li>• When the Down 2 Command is active, the drive decelerates the motor to "Frequency Reference - <i>d4-03</i>" (the bias value will decrease to the value set in <i>d4-03</i>).</li> <li>• When the Up 2 Command and Down 2 Command are active or not active, the drive holds the output frequency. (holds the bias value).</li> <li>• When the frequency changes, it will reset the bias.</li> <li>• For all other statuses, the drive will follow the frequency reference.</li> </ul> | Not stored.   |
| 5        |                                     |       |       | 1     |  | When the bias value and frequency reference are constant for 5 seconds after the frequency reference hold starts, the drive will add the bias value to the enabled frequency reference, then reset.   |
| 6        | Others (Analog input, transmission) | 0     | 0     | 0     | <ul style="list-style-type: none"> <li>• When the Up 2 Command is active, the drive accelerates the motor (increases the bias value).</li> <li>• When the Down 2 Command is active, the drive decelerates the motor (decreases the bias value)</li> <li>• When the Up 2 Command and Down 2 Command are active or not active, the drive holds the output frequency (holds the bias value).</li> <li>• During acceleration or deceleration, when the frequency reference increases or decreases more than <i>d4-07</i>, the drive holds the bias value until the output frequency and the actual frequency reference agree (speed agreement).</li> </ul>   | Not stored.   |
| 7        |                                     |       |       | 1     |  | When the bias value is constant for 5 seconds after the frequency reference hold starts, the drive will store the bias value in <i>d4-06</i> . You cannot rewrite the frequency reference is not possible. The drive will store only the bias value.  |
| 8        | Others (Analog input, transmission) | 0     | 1     | -     | <ul style="list-style-type: none"> <li>• When the Up 2 Command is active, the drive accelerates the motor (increases the bias value).</li> <li>• When the Down 2 Command is active, the drive decelerates the motor (decreases the bias value)</li> <li>• For all other statuses, the drive will follow the frequency reference.</li> </ul>  | Not stored.   |
| 9        |                                     |       |       | 0     |  | Not stored.   |
| 10       |                                     |       |       | 1     |  | <ul style="list-style-type: none"> <li>• When the Up 2 Command is active, the drive accelerates the motor to "Frequency Reference + <i>d4-03</i>" (the bias value will increase to the value set in <i>d4-03</i>)</li> <li>• When the Down 2 Command is active, the drive decelerates the motor to "Frequency Reference - <i>d4-03</i>" (the bias value will decrease to the value set in <i>d4-03</i>).</li> <li>• During acceleration or deceleration, when the frequency reference increases or decreases more than <i>d4-07</i>, the drive holds the bias value until the output frequency and the actual frequency reference agree (speed agreement).</li> </ul> |

### ■ 76: Down 2 Command

| Setting Value | Function       | Description   |
|---------------|----------------|---|
| 76            | Down 2 Command | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to decrease the frequency reference bias value to decelerate the motor when the terminal is activated. Set this function and <i>H1-xx = 75 [Up 2 Command]</i> at the same time.</p> |

When you activate the terminal set for Up2 Command, the bias will increase. When you activate the terminal set for Down 2 Command, the bias will decrease. When you activate or deactivate the two commands, the drive will hold the frequency reference.

**Note:**

- When you use this function, set the optimal bias limit values with *d4-08* and *d4-09 [Up/Down 2 Bias Upper Limit/Lower Limit]*.
- Refer to *d4: Frequency Ref Up/Down & Hold on page 552* for more information.

### ■ 77: ASR Gain (C5-03) Select

| Setting Value | Function                | Description   |
|---------------|-------------------------|---|
| 77            | ASR Gain (C5-03) Select | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to switch the ASR proportional gain set in <i>C5-01 [ASR Proportional Gain 1]</i> and <i>C5-03 [ASR Proportional Gain 1/2]</i>.</p> |

**ON : C5-03**

Switches the proportional gain to *C5-03 [ASR Proportional Gain 2]*.

**OFF : C5-01**

Switches the proportional gain to *C5-01 [ASR Proportional Gain 1]*.

**Note:**

- Refer to *C5: Auto Speed Regulator (ASR) on page 535* for more information.

### ■ 7A: KEB Ride-Thru 2 Activate (N.C.)

| Setting Value | Function                        | Description   |
|---------------|---------------------------------|---|
| 7A            | KEB Ride-Thru 2 Activate (N.C.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets operation of the KEB2 function through the KEB Ride-Thru 2 (N.C.).</p> |

**ON : Normal operation**

**OFF : Deceleration during momentary power loss**

When KEB Ride-Thru 2 is input, the drive will use Single Drive KEB Ride-Thru 2 for KEB operation. The *L2-29 [KEB Method Selection]* setting will not have an effect.

**Note:**

- If you set *KEB Ride-Thru 1 [H1-xx = 65, 66]* and *KEB Ride-Thru 2 [H1-xx = 7A, 7B]* at the same time, the drive will detect *oPE03 [Multi-Function Input Setting Err]*.
- Refer to *KEB Ride-Thru Function on page 675* for more information.

### ■ 7B: KEB Ride-Thru 2 Activate (N.O.)

| Setting Value | Function                        | Description   |
|---------------|---------------------------------|---|
| 7B            | KEB Ride-Thru 2 Activate (N.O.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets operation of the KEB2 function through the KEB Ride-Thru 2 (N.O.).</p> |

**ON : Deceleration during momentary power loss**

**OFF : Normal operation**

When KEB Ride-Thru 2 is input, the drive will use Single Drive KEB Ride-Thru 2 for KEB operation. The *L2-29 [KEB Method Selection]* setting will not have an effect.

**Note:**

- If you set *KEB Ride-Thru 1 [H1-xx = 65, 66]* and *KEB Ride-Thru 2 [H1-xx = 7A, 7B]* at the same time, the drive will detect *oPE03 [Multi-Function Input Setting Err]*.
- Refer to *KEB Ride-Thru Function on page 675* for more information.

### ■ 7C: Short Circuit Braking (N.O.)

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 7C            | Short Circuit Braking (N.O.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets operation of Short Circuit Braking (N.O.).</p> |

The drive will short circuit the three phases of a PM motor to cause braking torque in the spinning motor.

**Note:**

- When  $A1-02 = 8$  [Control Method Selection = EZOLV], this function is available only when you use a PM motor.
- Refer to [b2: DC Injection Braking and Short Circuit Braking on page 490](#) for more information.

**ON : Short Circuit Braking is enabled.**

**OFF : Normal operation**

### ■ 7D: Short Circuit Braking (N.C.)

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 7D            | Short Circuit Braking (N.C.) | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span style="background-color: #ccc;">AOLV/PM</span> <span style="background-color: #ccc;">EZOLV</span> </div> Sets operation of Short Circuit Braking (N.C.). |

The drive will short circuit the three phases of a PM motor to cause braking torque in the spinning motor.

**Note:**

- When  $A1-02 = 8$  [Control Method Selection = EZOLV], this function is available only when you use a PM motor.
- Refer to [b2: DC Injection Braking and Short Circuit Braking on page 490](#) for more information.

**ON : Normal operation**

**OFF : Short Circuit Braking is enabled.**

### ■ 7E: Reverse Rotation Identifier

| Setting Value | Function                    | Description  |
|---------------|-----------------------------|--|
| 7E            | Reverse Rotation Identifier | <div style="display: flex; gap: 5px;"> <span style="background-color: #ccc;">V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #ccc;">AOLV/PM</span> <span style="background-color: #ccc;">EZOLV</span> </div> Set the motor rotation direction when you use Simple Closed Loop V/f Control method. |

**ON : Reverse run**

The drive knows that the motor is rotating in the reverse direction.

**OFF : Forward run**

The drive knows that the motor is rotating in the forward direction.

### ■ 7F: PID Bi-Directional Enable

| Setting Value | Function                  | Description  |
|---------------|---------------------------|--|
| 7F            | PID Bi-Directional Enable | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span style="background-color: #ccc;">AOLV/PM</span> <span style="background-color: #ccc;">EZOLV</span> </div> Sets operation of the PID Bi-Directional function. |

**ON : Enabled**

**OFF : Disabled**

### ■ 90 to 96: DWEZ Digital Inputs 1 to 7

| Setting Value | Function                   | Description   |
|---------------|----------------------------|---|
| 90 - 96       | DWEZ Digital Inputs 1 to 7 | <div style="display: flex; gap: 5px;"> <span style="background-color: #ccc;">V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span style="background-color: #ccc;">AOLV/PM</span> <span style="background-color: #ccc;">EZOLV</span> </div> Sets digital inputs used with DriveWorksEZ. Refer to the DriveWorksEZ online manual for more information. |

**Note:**

You cannot set values 90 to 96 for inverse output.

### ■ 9F: DWEZ Disable

| Setting Value | Function     | Description  |
|---------------|--------------|--|
| 9F            | DWEZ Disable | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span style="background-color: #ccc;">AOLV/PM</span> <span style="background-color: #ccc;">EZOLV</span> </div> Sets operation of the DriveWorksEZ program saved in the drive. |

**Note:**

Set  $A1-07 = 2$  [DriveWorksEZ Function Selection = Digital input] to use this function.

**ON : Disabled**

**OFF : Enabled**

■ 101 to 19F: Inverse Input of 1 to 9F

| Setting Value | Function                 | Description   |
|---------------|--------------------------|---|
| 101 to 19F    | Inverse Input of 1 to 9F | Sets the function of the selected MFDI to operate inversely. To select the function, enter "1xx", where the "xx" is the function setting value. |

For example, to use the inverse input of *E* [*ASR Integral Reset*], set *H1-xx = 10E*.

**Note:**

You cannot use inverse input for all functions. Refer to [Table 12.55](#) for more information.

◆ H2: Digital Outputs

*H2 parameters* set the MFDO terminal functions.

■ H2-01 to H2-03 Terminal MA/MB-MC, P1-C1, P2-C2 Function Selection

The drive has four MFDO terminals. [Table 12.60](#) shows the default function settings for the terminals.

**Table 12.60 MFDO Terminals Default Function Settings**

| No.   | Name                                       | Default | Function      |
|-------|--|---------|---------------|
| H2-01 | Term MA/MB-MC Function Selection (Contact) | E       | Fault         |
| H2-02 | Term P1-C1 Function Selection              | 0       | During Run    |
| H2-03 | Term P2-C2 Function Selection              | 2       | Speed Agree 1 |

Refer to [Table 12.61](#) to set *H2-xx* [*MFDO Function Select*].

**Table 12.61 MFDO Setting Values**

| Setting Value | Function                        | Reference           | Setting Value | Function                         | Reference           |
|---------------|---------------------------------|---------------------|---------------|----------------------------------|---------------------|
| 0             | During Run                      | <a href="#">633</a> | 1A            | During reverse                   | <a href="#">639</a> |
| 1             | Zero Speed                      | <a href="#">633</a> | 1B            | During Baseblock (N.C.)          | <a href="#">640</a> |
| 2             | Speed Agree 1                   | <a href="#">633</a> | 1C            | Motor 2 Selection                | <a href="#">640</a> |
| 3             | User-Set Speed Agree 1          | <a href="#">634</a> | 1E            | Executing Auto-Restart           | <a href="#">640</a> |
| 4             | Frequency Detection 1           | <a href="#">634</a> | 1F            | Motor Overload Alarm (oL1)       | <a href="#">640</a> |
| 5             | Frequency Detection 2           | <a href="#">635</a> | 20            | Drive Overheat Pre-Alarm (oH)    | <a href="#">640</a> |
| 6             | Drive ready                     | <a href="#">635</a> | 21            | Safety Monitor Output Status     | <a href="#">641</a> |
| 7             | DC Bus Undervoltage             | <a href="#">635</a> | 22            | Mechanical Weakening Detection   | <a href="#">641</a> |
| 8             | During Baseblock (N.O.)         | <a href="#">636</a> | 2F            | Maintenance Notification         | <a href="#">641</a> |
| 9             | Frequency Reference from Keypad | <a href="#">636</a> | 30            | During Torque Limit              | <a href="#">641</a> |
| A             | Run Command Source              | <a href="#">636</a> | 37            | During Frequency Output          | <a href="#">641</a> |
| B             | Torque Detection 1 (N.O.)       | <a href="#">636</a> | 38            | Drive Enabled                    | <a href="#">642</a> |
| C             | Frequency Reference Loss        | <a href="#">636</a> | 39            | Watt Hour Pulse Output           | <a href="#">642</a> |
| D             | Braking Resistor Fault          | <a href="#">636</a> | 3C            | LOCAL Control Selected           | <a href="#">642</a> |
| E             | Fault                           | <a href="#">637</a> | 3D            | During Speed Search              | <a href="#">642</a> |
| F */          | Not Used                        | <a href="#">637</a> | 3E            | PID Feedback Low                 | <a href="#">642</a> |
| 10            | Alarm                           | <a href="#">637</a> | 3F            | PID Feedback High                | <a href="#">643</a> |
| 11            | Fault Reset Command Active      | <a href="#">637</a> | 4A            | During KEB Ride-Thru             | <a href="#">643</a> |
| 12            | Timer Output                    | <a href="#">637</a> | 4B            | During Short Circuit Braking     | <a href="#">643</a> |
| 13            | Speed Agree 2                   | <a href="#">637</a> | 4C            | During Fast Stop                 | <a href="#">643</a> |
| 14            | User-Set Speed Agree 2          | <a href="#">637</a> | 4D            | oH Pre-Alarm Time Limit          | <a href="#">643</a> |
| 15            | Frequency Detection 3           | <a href="#">638</a> | 4E            | Braking Transistor Fault (rr)    | <a href="#">643</a> |
| 16            | Frequency Detection 4           | <a href="#">638</a> | 4F            | Braking Resistor Overheat (rH)   | <a href="#">643</a> |
| 17            | Torque Detection 1 (N.C.)       | <a href="#">639</a> | 61            | Pole Position Detection Complete | <a href="#">644</a> |
| 18            | Torque Detection 2 (N.O.)       | <a href="#">639</a> | 62            | Modbus Reg 1 Status Satisfied    | <a href="#">644</a> |
| 19            | Torque Detection 2 (N.C.)       | <a href="#">639</a> | 63            | Modbus Reg 2 Status Satisfied    | <a href="#">644</a> |



| Setting Value | Function                  | Reference |
|---------------|---------------------------|-----------|
| 66            | Comparator1               | 644       |
| 67            | Comparator2               | 644       |
| 69            | External Power 24V Supply | 645       |
| 6A            | Data Logger Error         | 645       |

| Setting Value | Function   | Reference |
|---------------|--|-----------|
| 90 to 92      | DWEZ Digital Output 1 to 3   | 645       |
| 100 to 192    | Inverse output of 0 to 92<br>Sets an inverse output of the function for the MFDO. Put a 1 at the front of the function setting to set inverse output. For example, set 138 for inverse output of 38 [Drive Enabled]. | 645       |

\*1 Inverse output is not available.

### Extended MFDO1 to MFDO3 Function Selection

You can set MFDO functions to bit 0 to bit 2 [MEMOBUS MFDO1 to 3] of MEMOBUS register 15E0 (Hex.). Use H2-40 to H2-42 [Mbus Reg 15E0h bit0 to bit2 Output Func] to select the function.

 


Figure 12.73 Functional Block Diagram of MEMOBUS Multi-function Output

Table 12.62 MEMOBUS MFDO Registers

| Register number (Hex.) | Name |                |
|------------------------|------|----------------|
| 15E0                   | bit0 | MEMOBUS MFDO 1 |
|                        | bit1 | MEMOBUS MFDO 2 |
|                        | bit2 | MEMOBUS MFDO 3 |

**Note:**

- Refer to *MFDO Setting Values on page 632* for more information about MFDO setting values.
- When you do not set functions to H2-40 to H2-42, set them to F.

### Output of Logical Operation Results of MFDO

This enables the logical operation results of two MFDOs to be output to one MFDO terminal.

Use H2-60, H2-63, and H2-66 [Term MA,MB,MC Secondary Function, Terminal P1 Secondary Function, and Terminal P2 Secondary Function] to set the function of the output signal for which you will perform logical operations.

Use H2-61, H2-64, and H2-67 [Term MA,MB,MC Logical Operation, Terminal P1 Logical Operation, and Terminal P2 Logical Operation] to set the logical operation.

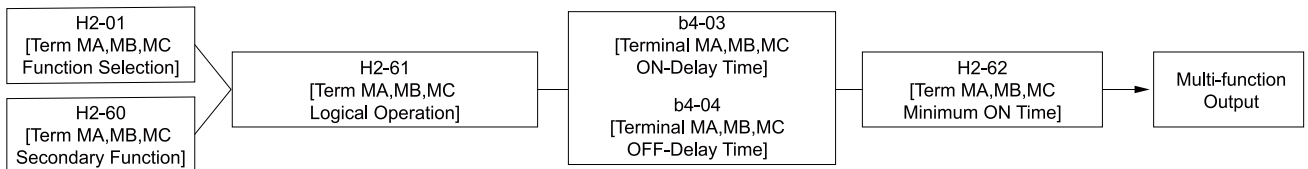


 
 
 
Figure 12.74 Functional Block Diagram of Logical Operation Output for MFDO 1

Table 12.63 MFDO Logical Operation Table

| Logical Operation Selection | Logical Operation Expression | Logical Operation Notation |
|-----------------------------|------------------------------|----------------------------|
| H2-61, H2-64, H2-67         |                              |                            |
| 0                           | A=B=1                        |                            |
| 1                           | A=1 or B=1                   |                            |
| 2                           | A=0 or B=0                   |                            |
| 3                           | A=B=0                        |                            |
| 4                           | A=B                          | A=B                        |

Parameter Details

## 12.8 H: Terminal Function Selection

| Logical Operation Selection | Logical Operation Expression | Logical Operation Notation  |
|-----------------------------|------------------------------|---|
| H2-61, H2-64, H2-67         |                              |   |
| 5                           | $A \neq B$                   |  |
| 6                           | $AND(A, \bar{B})$            |  |
| 7                           | $OR(A, \bar{B})$             |  |
| 8                           | -                            | On  |

**Note:**

- If you use the function to output logical calculation results, you cannot set  $H2-01$  to  $H2-03 = 1xx$  [Inverse Output of  $xx$ ]. If you do, the drive will detect  $oPE33$  [Digital Output Selection Error].
- When you do not use  $H2-60$ ,  $H2-63$ , and  $H2-66$ , set them to  $F$ . The through mode function is not supported.

### ◆ H2 MFDO Parameters

#### ■ H2-01: Term MA/MB-MC Function Selection

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| H2-01 (040B) | Term MA/MB-MC Function Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function set for MFDO terminal MA-MC or MB-MC. | E<br>(0 - 1FF)  |

**Note:**

Set this parameter to  $F$  when the terminal is not being used or to use the terminal in through mode.

#### ■ H2-02: Term P1-C1 Function Selection

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| H2-02 (040C) | Term P1-C1 Function Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function for MFDO terminal P1-C1. | 0<br>(0 - 1FF)  |

**Note:**

Set this parameter to  $F$  when the terminal is not being used or to use the terminal in through mode.

#### ■ H2-03: Term P2-C2 Function Selection

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| H2-03 (040D) | Term P2-C2 Function Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function for MFDO terminal P2-C2. | 2<br>(0 - 1FF)  |

**Note:**

Set this parameter to  $F$  when the terminal is not being used or to use the terminal in through mode.

#### ■ H2-06: Watt Hour Output Unit Selection

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| H2-06 (0437) | Watt Hour Output Unit Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the unit for the output signal when $H2-01$ to $H2-03 = 39$ [MFDO Function Selection = Watt Hour Pulse Output]. | 0<br>(0 - 4)    |

This output is input to the Watt hour meter or PLC through a 200 ms pulse signal. The drive triggers a 200 ms pulse each time the kWh data is at the value set in  $H2-06$ . This parameter sets the kWh unit for each pulse output.

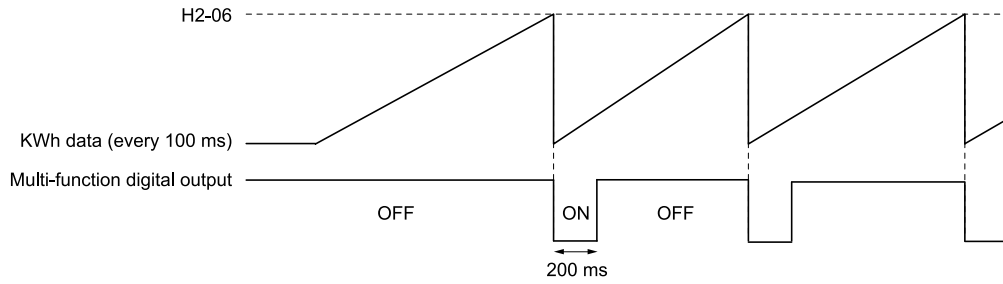


Figure 12.75 Example MFDO when Configured for Watt Hours

**Note:**

- When the power value is a negative value (regenerative state), the drive does not count Watt hours.
- When the control power supply to the drive is operating, the drive will keep the Watt hours. If a momentary power loss causes the drive to lose control power, the Watt hour count will reset.

- 0 : 0.1 kWh units
- 1 : 1 kWh units
- 2 : 10 kWh units
- 3 : 100 kWh units
- 4 : 1000 kWh units

■ **H2-07: Modbus Register 1 Address Select**

| No. (Hex.)   | Name                             | Description   | Default (Range)    |
|--------------|----------------------------------|---|--------------------|
| H2-07 (0B3A) | Modbus Register 1 Address Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the address of the MEMOBUS/Modbus register output to the MFDO terminal. | 0001 (0001 - 1FFF) |

Sets the address of the register that is output to *Modbus Reg 1 Status Satisfied* [H2-01 to H2-03 = 62] and uses the bit in H2-08 [Modbus Register 1 Bit Select].

■ **H2-08: Modbus Register 1 Bit Select**

| No. (Hex.)   | Name                         | Description   | Default (Range)    |
|--------------|------------------------------|---|--------------------|
| H2-08 (0B3B) | Modbus Register 1 Bit Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the bit of the MEMOBUS/Modbus register output to the MFDO terminal. | 0000 (0000 - FFFF) |

Sets the bit of the register that is output to *Modbus Reg 1 Status Satisfied* [H2-01 to H2-03 = 62] and uses the address in H2-07 [Modbus Register 1 Address Select].

■ **H2-09: Modbus Register 2 Address Select**

| No. (Hex.)   | Name                             | Description   | Default (Range)    |
|--------------|----------------------------------|---|--------------------|
| H2-09 (0B3C) | Modbus Register 2 Address Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the address of the MEMOBUS/Modbus register output to the MFDO terminal. | 0001 (0001 - 1FFF) |

Sets the address of the register that is output to *Modbus Reg 2 Status Satisfied* [H2-01 to H2-03 = 63] and uses the bit in H2-10 [Modbus Register 2 Bit Select].

■ **H2-10: Modbus Register 2 Bit Select**

| No. (Hex.)   | Name                         | Description   | Default (Range)    |
|--------------|------------------------------|---|--------------------|
| H2-10 (0B3D) | Modbus Register 2 Bit Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the bit of the MEMOBUS/Modbus register output to the MFDO terminal. | 0000 (0000 - FFFF) |

Sets the bit of the register that is output to *Modbus Reg 2 Status Satisfied* [H2-01 to H2-03 = 63] and uses the address in H2-09 [Modbus Register 2 Address Select].

■ H2-20: Comparator 1 Monitor Selection

| No. (Hex.)   | Name                           | Description  | Default (Range)    |
|--------------|--------------------------------|--|--------------------|
| H2-20 (1540) | Comparator 1 Monitor Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the monitor number for comparator 1. Set the x-xx part of the Ux-xx [Monitor]. For example, set H2-20 = 102 to monitor U1-02 [Output Frequency].</p> | 102<br>(000 - 999) |

**Note:**

- For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).
- The configurable monitor changes when the control method changes.

■ H2-21: Comparator 1 Lower Limit

| No. (Hex.)   | Name                     | Description  | Default (Range)        |
|--------------|--------------------------|--|------------------------|
| H2-21 (1541) | Comparator 1 Lower Limit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the lower limit detection level for comparator 1 when the full scale analog output for the monitor selected in H2-20 [Comparator 1 Monitor Selection] is the 100% value.</p> | 0.0%<br>(0.0 - 300.0%) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

■ H2-22: Comparator 1 Upper Limit

| No. (Hex.)   | Name                     | Description  | Default (Range)        |
|--------------|--------------------------|--|------------------------|
| H2-22 (1542) | Comparator 1 Upper Limit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the upper limit detection level for comparator 1 when the full scale analog output for the monitor selected in H2-20 [Comparator 1 Monitor Selection] is the 100% value.</p> | 0.0%<br>(0.0 - 300.0%) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

■ H2-23: Comparator 1 Hysteresis

| No. (Hex.)   | Name                    | Description   | Default (Range)       |
|--------------|-------------------------|---|-----------------------|
| H2-23 (1543) | Comparator 1 Hysteresis | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the hysteresis level for comparator 1 as a percentage of the full scale analog output for the monitor selected in H2-20 [Comparator 1 Monitor Selection].</p> | 0.0%<br>(0.0 - 10.0%) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

■ H2-24: Comparator 1 On-Delay Time

| No. (Hex.)   | Name                       | Description   | Default (Range)          |
|--------------|----------------------------|---|--------------------------|
| H2-24 (1544) | Comparator 1 On-Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the on-delay time for comparator 1.</p> | 0.0 s<br>(0.0 - 600.0 s) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

■ H2-25: Comparator 1 Off-Delay Time

| No. (Hex.)   | Name                        | Description  | Default (Range)          |
|--------------|-----------------------------|--|--------------------------|
| H2-25 (1545) | Comparator 1 Off-Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the off-delay time for comparator 1.</p> | 0.0 s<br>(0.0 - 600.0 s) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

## ■ H2-26: Comparator 2 Monitor Selection

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range) |
|-----------------|--------------------------------|---|--------------------|
| H2-26<br>(1546) | Comparator 2 Monitor Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the monitor number for comparator 2. Set the x-xx part of the Ux-xx [Monitor]. For example, set H2-26 = 103 to monitor U1-03 [Output Current]. | 103<br>(000 - 999) |

**Note:**

- The configurable monitor changes when the control method changes.
- When you use the terminal in through mode, set this parameter to 000 or 031. You can set the terminal output level from the PLC through MEMOBUS/Modbus communications or the communication option.
- For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

## ■ H2-27: Comparator 2 Lower Limit

| No.<br>(Hex.)   | Name                     | Description   | Default<br>(Range)     |
|-----------------|--------------------------|---|------------------------|
| H2-27<br>(1547) | Comparator 2 Lower Limit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the lower limit detection level for comparator 2 as a percentage of the full scale analog output for the monitor selected in H2-26 [Comparator 2 Monitor Selection]. | 0.0%<br>(0.0 - 300.0%) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

## ■ H2-28: Comparator 2 Upper Limit

| No.<br>(Hex.)   | Name                     | Description   | Default<br>(Range)     |
|-----------------|--------------------------|---|------------------------|
| H2-28<br>(1548) | Comparator 2 Upper Limit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the upper limit detection level for comparator 2 as a percentage of the full scale analog output for the monitor selected in H2-26 [Comparator 2 Monitor Selection]. | 0.0%<br>(0.0 - 300.0%) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

## ■ H2-29: Comparator 2 Hysteresis

| No.<br>(Hex.)   | Name                    | Description  | Default<br>(Range)    |
|-----------------|-------------------------|--|-----------------------|
| H2-29<br>(1549) | Comparator 2 Hysteresis | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the hysteresis level for comparator 2 as a percentage of the full scale analog output for the monitor selected in H2-26 [Comparator 2 Monitor Selection]. | 0.0%<br>(0.0 - 10.0%) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

## ■ H2-30: Comparator 2 On-Delay Time

| No.<br>(Hex.)   | Name                       | Description  | Default<br>(Range)       |
|-----------------|----------------------------|--|--------------------------|
| H2-30<br>(154A) | Comparator 2 On-Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the on-delay time for comparator 2. | 0.0 s<br>(0.0 - 600.0 s) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

## ■ H2-31: Comparator 2 Off-Delay Time

| No.<br>(Hex.)   | Name                        | Description   | Default<br>(Range)       |
|-----------------|-----------------------------|---|--------------------------|
| H2-31<br>(154B) | Comparator 2 Off-Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the off-delay time for comparator 2. | 0.0 s<br>(0.0 - 600.0 s) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

■ **H2-32: Comparator 1 Filter Time**

| No. (Hex.)   | Name                     | Description   | Default (Range)        |
|--------------|--------------------------|---|------------------------|
| H2-32 (159A) | Comparator 1 Filter Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time constant that is applied to the primary delay filter used for the analog output of the monitor selected with H2-20 [Comparator 1 Monitor Selection].</p> | 0.0s<br>(0.0 - 10.0 s) |

**Note:**

For information on the comparator function, refer to [66: Comparator1 on page 644](#) and [67: Comparator2 on page 644](#).

■ **H2-33: Comparator1 Protection Selection**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| H2-33 (159B) | Comparator1 Protection Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets drive operation when it detects CP1 [Comparator1 Limit Fault].</p> | 4<br>(0 - 4)    |

**0 : Ramp to Stop**

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**1 : Coast to Stop**

The output turns off and the motor coasts to stop. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**2 : Fast Stop (Use C1-09)**

The drive stops the motor in the deceleration time set in C1-09 [Fast Stop Time]. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**3 : Alarm Only**

The keypad shows CP1 and the drive continues operation at the current frequency reference.

**Note:**

The output terminal set to *Alarm [H2-01 to H2-03 = 10]* activates.

**4 : Digital Output Only**

■ **H2-34: Comparator 2 Filter Time**

| No. (Hex.)   | Name                     | Description   | Default (Range)        |
|--------------|--------------------------|---|------------------------|
| H2-34 (159C) | Comparator 2 Filter Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time constant that is applied to the primary delay filter used for the analog output of the monitor selected with H2-26 [Comparator 2 Monitor Selection].</p> | 0.0s<br>(0.0 - 10.0 s) |

■ **H2-35: Comparator2 Protection Selection**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| H2-35 (159D) | Comparator2 Protection Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets drive operation when it detects CP2 [Comparator2 Limit Fault].</p> | 4<br>(0 - 4)    |

**0 : Ramp to Stop**

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**1 : Coast to Stop**

The output turns off and the motor coasts to stop. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**2 : Fast Stop (Use C1-09)**

The drive stops the motor in the deceleration time set in C1-09 [Fast Stop Time]. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**3 : Alarm Only**

The keypad shows CP2 and the drive continues operation at the current frequency reference.

**Note:**

The output terminal set to *Alarm [H2-01 to H2-03 = 10]* activates.

## 4 : Digital Output Only

### ■ H2-36: Comparator 1 Ineffective Time

| No. (Hex.)   | Name                          | Description  | Default (Range)           |
|--------------|-------------------------------|--|---------------------------|
| H2-36 (159E) | Comparator 1 Ineffective Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time that CP1 [Comparator1 Limit Fault] is disabled. | 0.0 s<br>(0.0 - 1000.0 s) |

**Note:**

- After you enter a Run command and wait for the time set in this parameter, the drive will monitor operation and make sure that it is in the Comparator 1 range until you enter the Stop command.
- When CP1 detection is disabled, the drive will activate the output terminal set for *Comparator 1* [H2-xx = 66].

### ■ H2-37: Comparator 2 Ineffective Time

| No. (Hex.)   | Name                          | Description  | Default (Range)           |
|--------------|-------------------------------|--|---------------------------|
| H2-37 (159F) | Comparator 2 Ineffective Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time that CP2 [Comparator2 Limit Fault] is disabled. | 0.0 s<br>(0.0 - 1000.0 s) |

**Note:**

- After you enter a Run command and wait for the time set in this parameter, the drive will monitor operation and make sure that it is in the Comparator 2 range until you enter the Stop command.
- When CP2 detection is disabled, the drive will activate the output terminal set for *Comparator 2* [H2-xx = 67].

### ■ H2-40: Mbus Reg 15E0h bit0 Output Func

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| H2-40 (0B58) | Mbus Reg 15E0h bit0 Output Func | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the MFDO for bit 0 of MEMOBUS register 15E0 (Hex.). | F<br>(0 - 1FF)  |

### ■ H2-41: Mbus Reg 15E0h bit1 Output Func

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| H2-41 (0B59) | Mbus Reg 15E0h bit1 Output Func | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the MFDO for bit 1 of MEMOBUS register 15E0 (Hex.). | F<br>(0 - 1FF)  |

### ■ H2-42: Mbus Reg 15E0h bit2 Output Func

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| H2-42 (0B5A) | Mbus Reg 15E0h bit2 Output Func | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the MFDO for bit 2 of MEMOBUS register 15E0 (Hex.). | F<br>(0 - 1FF)  |

### ■ H2-60: Term MA,MB,MC Secondary Function

| No. (Hex.)             | Name                             | Description   | Default (Range) |
|------------------------|----------------------------------|---|-----------------|
| H2-60 (1B46)<br>Expert | Term MA,MB,MC Secondary Function | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the second function for terminal MA/MB-MC. Outputs the logical calculation results of the terminals set to functions by H2-01 [Term MA,MB,MC Function Selection]. | F<br>(0 - FF)   |

### ■ H2-61: Term MA,MB,MC Logical Operation

| No. (Hex.)             | Name                            | Description   | Default (Range) |
|------------------------|---------------------------------|---|-----------------|
| H2-61 (1B47)<br>Expert | Term MA,MB,MC Logical Operation | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the logical operation for the functions set in H2-01 [Term MA,MB,MC Function Selection] and H2-60 [Term MA,MB,MC Secondary Function]. | 0<br>(0 - 8)    |

**Note:**

Refer to [Output of Logical Operation Results of MFDO on page 625](#) for more information about the relation between parameter settings and logical operations.

■ **H2-62: Term MA,MB,MC Minimum ON Time**

| No. (Hex.)             | Name                          | Description  | Default (Range)         |
|------------------------|-------------------------------|--|-------------------------|
| H2-62 (1B48)<br>Expert | Term MA,MB,MC Minimum ON Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the minimum ON time that the drive uses to output the logical calculation results from terminal MA/MB-MC.</p> | 0.1 s<br>(0.0 - 25.0 s) |

■ **H2-63: Terminal P1 Secondary Function**

| No. (Hex.)             | Name                           | Description   | Default (Range) |
|------------------------|--------------------------------|---|-----------------|
| H2-63 (1B49)<br>Expert | Terminal P1 Secondary Function | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the second function for terminal P1-C1. Outputs the logical calculation results of the terminals set to functions by H2-02 [Term P1 Function Selection].</p> | F<br>(0 - FF)   |

■ **H2-64: Terminal P1 Logical Operation**

| No. (Hex.)             | Name                          | Description  | Default (Range) |
|------------------------|-------------------------------|--|-----------------|
| H2-64 (1B4A)<br>Expert | Terminal P1 Logical Operation | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the logical operation for the functions set in H2-02 [Term P1 Function Selection] and H2-63 [Terminal P1 Secondary Function].</p> | 0<br>(0 - 8)    |

**Note:**

Refer to [Output of Logical Operation Results of MFDO on page 625](#) for more information about the relation between parameter settings and logical operations.

■ **H2-65: Terminal P1 Minimum ON Time**

| No. (Hex.)             | Name                        | Description  | Default (Range)         |
|------------------------|-----------------------------|--|-------------------------|
| H2-65 (1B4B)<br>Expert | Terminal P1 Minimum ON Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the minimum ON time used to output the logical calculation results from terminal P1-C1.</p> | 0.1 s<br>(0.0 - 25.0 s) |

■ **H2-66: Terminal P2 Secondary Function**

| No. (Hex.)             | Name                           | Description  | Default (Range) |
|------------------------|--------------------------------|--|-----------------|
| H2-66 (1B4C)<br>Expert | Terminal P2 Secondary Function | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the second function for terminal P2-C2. Outputs the logical calculation results of the terminals assigned to functions by H2-03 [Term P2 Function Selection].</p> | F<br>(0 - FF)   |

■ **H2-67: Terminal P2 Logical Operation**

| No. (Hex.)             | Name                          | Description  | Default (Range) |
|------------------------|-------------------------------|--|-----------------|
| H2-67 (1B4D)<br>Expert | Terminal P2 Logical Operation | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the logical operation for the functions set in H2-03 [Term P2 Function Selection] and H2-66 [Terminal P2 Secondary Function].</p> | 0<br>(0 - 8)    |

**Note:**

Refer to [Output of Logical Operation Results of MFDO on page 625](#) for more information about the relation between parameter settings and logical operations.

■ **H2-68: Terminal P2 Minimum ON Time**

| No. (Hex.)             | Name                        | Description  | Default (Range)         |
|------------------------|-----------------------------|--|-------------------------|
| H2-68 (1B4E)<br>Expert | Terminal P2 Minimum ON Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the minimum ON time used to output the logical calculation results from terminal P2-C2.</p> | 0.1 s<br>(0.0 - 25.0 s) |

◆ **MFDO Setting Values**

Selects the function configured to MFDO.



■ 0: During Run

| Setting Value | Function   | Description  |
|---------------|------------|--|
| 0             | During Run | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal activates when you input a Run command and when the drive is outputting voltage. |

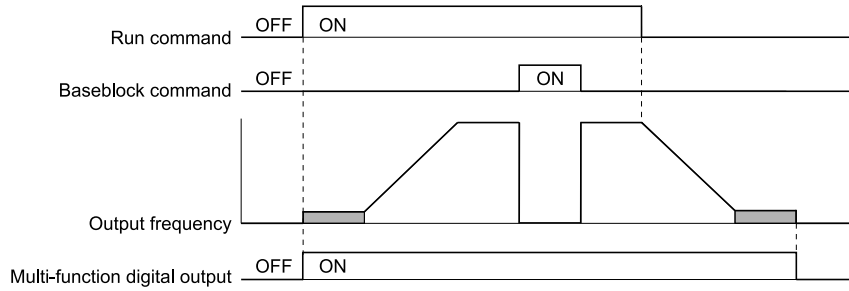


Figure 12.76 Drive Running Time Chart

**ON : Drive is running**

The drive is receiving a Run command or outputting voltage.

**OFF : Drive is stopping**

■ 1: Zero Speed

| Setting Value | Function   | Description   |
|---------------|------------|---|
| 1             | Zero Speed | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal turns on when the output frequency drops below the value of <i>E1-09</i> [Minimum Output Frequency] or <i>b2-01</i> [DC Injection/Zero SpeedThreshold]. |

**Note:**

Parameter *A1-02* [Control Method Selection] selects which parameter is the reference.

| A1-02 Setting | Control Method Selection | Parameter Used as the Reference |
|---------------|--------------------------|---------------------------------|
| 0             | V/f                      | <i>E1-09</i>                    |
| 2             | OLV                      | <i>b2-01</i>                    |
| 5             | OLV/PM                   | <i>E1-09</i>                    |
| 6             | AOLV/PM                  | <i>E1-09</i>                    |
| 8             | EZOLV                    | <i>E1-09</i>                    |

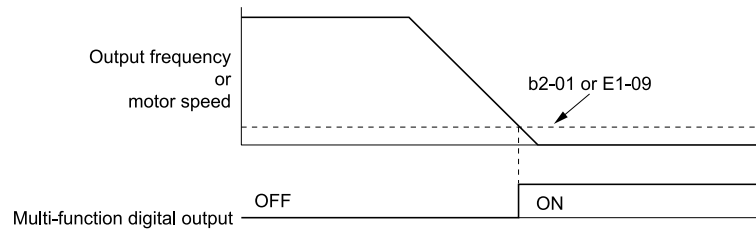


Figure 12.77 Zero Speed Time Chart

**ON : Output frequency < value of *E1-09* or *b2-01*.**

**OFF : Output frequency ≥ value of *E1-09* or *b2-01*.**

■ 2: Speed Agree 1

| Setting Value | Function      | Description  |
|---------------|---------------|--|
| 2             | Speed Agree 1 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>The terminal activates when the output frequency is in the range of the frequency reference ± <i>L4-02</i> [Speed Agree Detection Width]. |

**Note:**

The detection function operates in the two motor rotation directions.

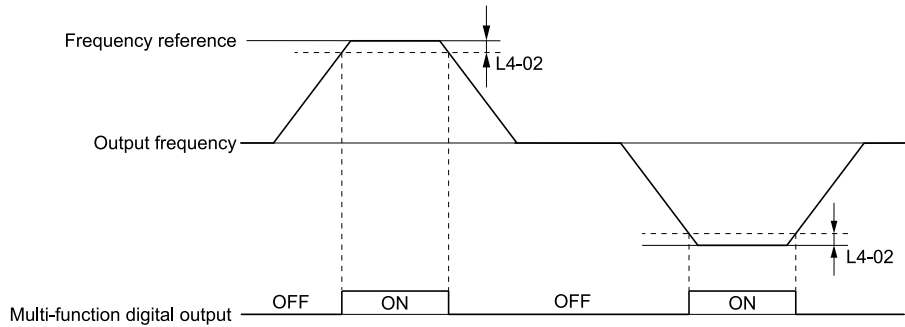


Figure 12.78 Speed Agree 1 Time Chart

**ON :** The output frequency is in the range of “frequency reference  $\pm L4-02$ ”.

**OFF :** The output frequency does not align with the frequency reference although the drive is running.

■ 3: User-Set Speed Agree 1

| Setting Value | Function               | Description  |
|---------------|------------------------|--|
| 3             | User-Set Speed Agree 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the output frequency is in the range of <math>L4-01</math> [Speed Agree Detection Level] <math>\pm L4-02</math> [Speed Agree Detection Width] and in the range of the frequency reference <math>\pm L4-02</math>.</p> |

**Note:**

The detection function operates in the two motor rotation directions. The drive uses the  $L4-01$  value as the forward/reverse detection level.

**ON :** The output frequency is in the range of “ $L4-01 \pm L4-02$ ” and the range of frequency reference  $\pm L4-02$ .

**OFF :** The output frequency is not in the range of “ $L4-01 \pm L4-02$ ” nor the range of frequency reference  $\pm L4-02$ .

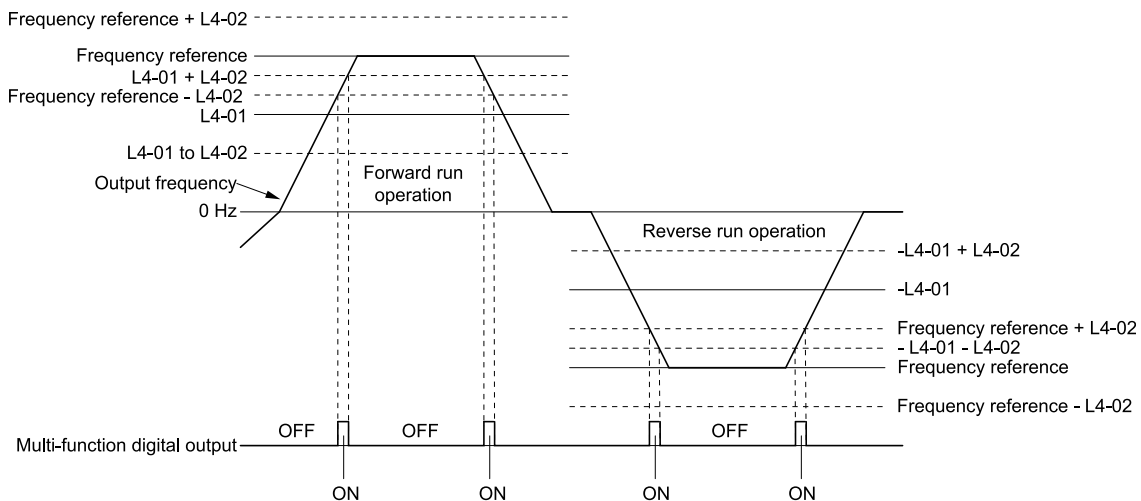


Figure 12.79 User-Defined Speed Agree 1 Time Chart

■ 4: Frequency Detection 1

| Setting Value | Function              | Description   |
|---------------|-----------------------|---|
| 4             | Frequency Detection 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal deactivates when the output frequency is higher than the value of <math>L4-01</math> [Speed Agree Detection Level] + <math>L4-02</math> [Speed Agree Detection Width]. After the terminal turns off, the terminal continues to remain off until the output frequency reaches the level set with <math>L4-01</math>.</p> |

**Note:**

The detection function operates in the two motor rotation directions. The drive uses the  $L4-01$  value as the forward/reverse detection level.

**ON :** The output frequency is less than the value of  $L4-01$  or does not exceed the value of  $L4-01 + L4-02$ .

**OFF :** The output frequency is higher than the value of  $L4-01 + L4-02$ .

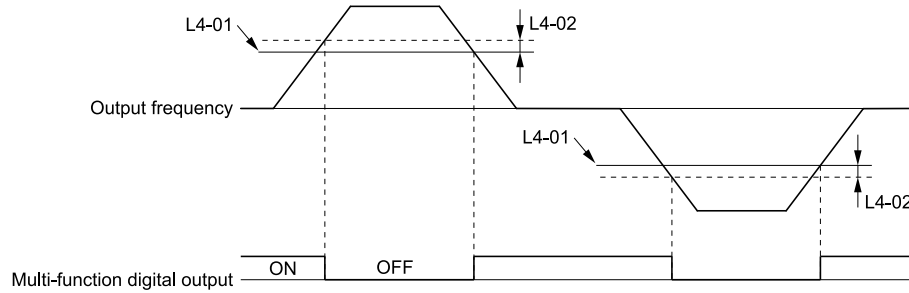


Figure 12.80 Frequency Detection 1 Time Chart

**Note:**

Figure 12.80 shows the result of the configuration when  $L4-07 = 1$  [Speed Agree Detection Selection = Detection Always Enabled]. The default setting of  $L4-07$  is 0 [No detection during baseblock]. When the speed agreement detection selection is “No Detection during Baseblock”, the terminal is deactivated when the drive output stops.

■ **5: Frequency Detection 2**

| Setting Value | Function              | Description  |
|---------------|-----------------------|--|
| 5             | Frequency Detection 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the output frequency is higher than the value of <math>L4-01</math> [Speed Agree Detection Level]. After the terminal activates, the terminal stays activated until the output frequency is at the value of <math>L4-01 - L4-02</math>.</p> |

**Note:**

The detection function operates in the two motor rotation directions. The drive uses the  $L4-01$  value as the forward/reverse detection level.

**ON :** The output frequency is higher than the value of  $L4-01$ .

**OFF :** The output frequency is less than the value of “ $L4-01 - L4-02$ ,” or it is not more than the value of  $L4-01$ .

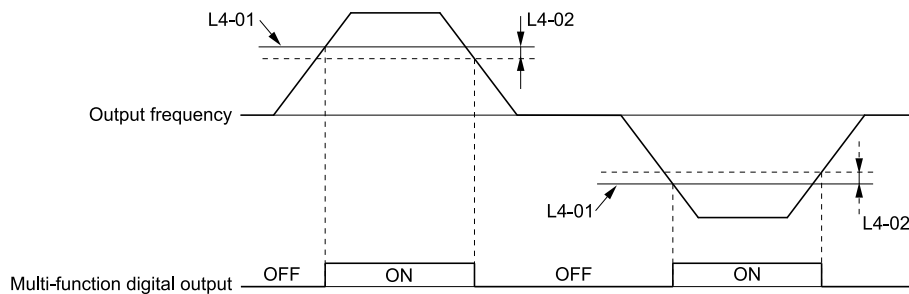


Figure 12.81 Frequency Detection 2 Time Chart

■ **6: Drive Ready**

| Setting Value | Function    | Description  |
|---------------|-------------|--|
| 6             | Drive Ready | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the drive is ready and running.</p> |

The terminal deactivates in these conditions:

- When the power supply is OFF
- During a fault
- When there is problem with the control power supply
- When there is a parameter setting error and the drive cannot operate although there is a Run command
- When you enter a Run command and it immediately triggers an overvoltage or undervoltage fault because the drive has an overvoltage or undervoltage fault during stop
- When the drive is in Programming Mode and will not accept a Run command
- When the Safe Disable function is active

■ **7: DC Bus Undervoltage**

| Setting Value | Function            | Description   |
|---------------|---------------------|---|
| 7             | DC Bus Undervoltage | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the DC bus voltage or control circuit power supply is at the voltage set in <math>L2-05</math> [Undervoltage Detection Lvl (<math>Uv1</math>)] or less. The terminal also activates when there is a fault with the DC bus voltage.</p> |

**ON** : The DC bus voltage is less than the setting value of *L2-05*.

**OFF** : The DC bus voltage is more than the setting value of *L2-05*.

■ **8: During Baseblock (N.O.)**

| Setting Value | Function                | Description  |
|---------------|-------------------------|--|
| 8             | During Baseblock (N.O.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage.</p> |

**ON** : During baseblock

**OFF** : The drive is not in baseblock.

■ **9: Frequency Reference from Keypad**

| Setting Value | Function                        | Description  |
|---------------|---------------------------------|--|
| 9             | Frequency Reference from Keypad | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Shows the selected frequency reference source.</p> |

**ON** : The keypad is the frequency reference source.

**OFF** : *b1-01* or *b1-15* [*Frequency Reference Selection 1 or 2*] is the frequency reference source.

■ **A: Run Command from Keypad**

| Setting Value | Function           | Description  |
|---------------|--------------------|--|
| A             | Run Command Source | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Shows the selected Run command source.</p> |

**ON** : The keypad is the Run command source.

**OFF** : *b1-02* or *b1-16* [*Run Command Selection 1 or 2*] is the Run command source.

■ **B: Torque Detection 1 (N.O.)**

| Setting Value | Function                  | Description  |
|---------------|---------------------------|--|
| B             | Torque Detection 1 (N.O.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the drive detects overtorque or undertorque.</p> |

**ON** : The output current/torque is more than *L6-02* [*Torque Detection Level 1*], or the level is less than *L6-02* for longer than *L6-03* [*Torque Detection Time 1*].

Note:

- When *L6-01*  $\geq 5$ , the drive will detect when the output current/torque is less than *L6-02* for longer than *L6-03*.
- Refer to *L6: Torque Detection on page 699* for more information.

■ **C: Frequency Reference Loss**

| Setting Value | Function                 | Description  |
|---------------|--------------------------|--|
| C             | Frequency Reference Loss | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the drive detects a loss of frequency reference.</p> |

Note:

Refer to *L4-05: Fref Loss Detection Selection on page 695* for more information.

■ **D: Braking Resistor Fault**

| Setting Value | Function               | Description  |
|---------------|------------------------|--|
| D             | Braking Resistor Fault | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the mounting-type braking resistor is overheating or when there is a braking transistor fault.</p> |

■ **E: Fault**

| Setting Value | Function | Description  |
|---------------|----------|--|
| E             | Fault    | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the drive detects a fault.</p> |

Note:

The terminal will not activate for *CPF00* and *CPF01* [*Control Circuit Error*] faults.

■ F: Not Used

| Setting Value | Function | Description  |
|---------------|----------|--|
| F             | Not Used | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Use this setting for unused terminals or to use terminals in through mode. Also use this setting as the PLC contact output via MEMOBUS/Modbus or the communication option. This signal does not function if signals from the PLC are not configured.</p> |

■ 10: Alarm

| Setting Value | Function | Description  |
|---------------|----------|--|
| 10            | Alarm    | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive detects a minor fault.</p> |

■ 11: Fault Reset Command Active

| Setting Value | Function                   | Description   |
|---------------|----------------------------|---|
| 11            | Fault Reset Command Active | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the drive receives the Reset command from the control circuit terminal, serial communications, or the communication option.</p> |

■ 12: Timer Output

| Setting Value | Function     | Description  |
|---------------|--------------|--|
| 12            | Timer Output | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>Use this setting when the drive uses the timer function as an output terminal.</p> |

Note:

Refer to *Timer Function Operation on page 501* for more information.

■ 13: Speed Agree 2

| Setting Value | Function      | Description  |
|---------------|---------------|--|
| 13            | Speed Agree 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency is in the range of the frequency reference <math>\pm L4-04</math> [Speed Agree Detection Width(+/-)].</p> |

Note:

The detection function operates in the two motor rotation directions.

**ON** : The output frequency is in the range of “frequency reference  $\pm L4-04$ ”.

**OFF** : The output frequency is not in the range of “frequency reference  $\pm L4-04$ ”.

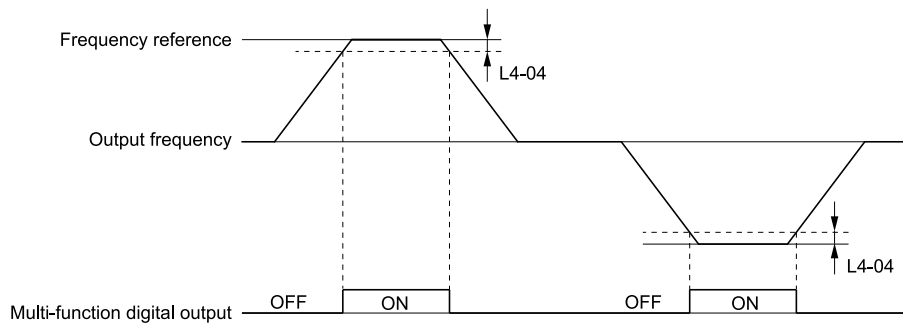


Figure 12.82 Speed Agree 2 Time Chart

■ 14: User-Set Speed Agree 2

| Setting Value | Function               | Description   |
|---------------|------------------------|---|
| 14            | User-Set Speed Agree 2 | <p><b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b></p> <p>The terminal activates when the output frequency is in the range of <math>L4-03</math> [Speed Agree Detection Level(+/-)] <math>\pm L4-04</math> [Speed Agree Detection Width(+/-)] and in the range of the frequency reference <math>\pm L4-04</math>.</p> |

Note:

The detection level set with  $L4-03$  is a signed value. The drive will only detect in one direction.

**ON** : The output frequency is in the range of “ $L4-03 \pm L4-04$ ” and the range of frequency reference  $\pm L4-04$ .”

**OFF** : The output frequency is not in the range of “ $L4-03 \pm L4-04$ ” nor the range of frequency reference  $\pm L4-04$ .

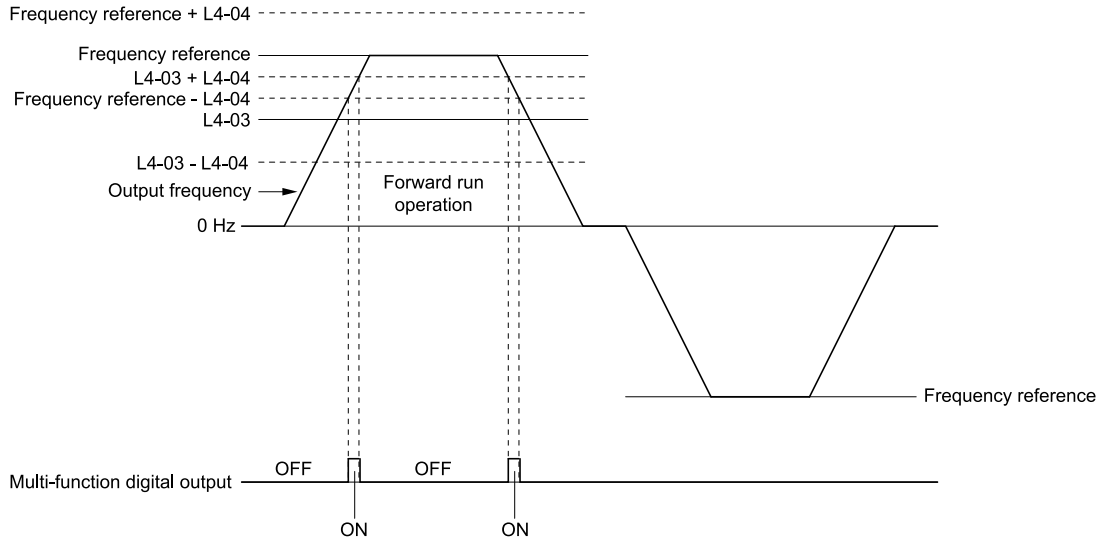


Figure 12.83 Example of User-set Speed Agree 2 (L4-03 Is Positive)

### 15: Frequency Detection 3

| Setting Value | Function              | Description   |
|---------------|-----------------------|---|
| 15            | Frequency Detection 3 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal deactivates when the output frequency is higher than the value of “<math>L4-03</math> [Speed Agree Detection Level(+/-)] + <math>L4-04</math> [Speed Agree Detection Width(+/-)]”. After the terminal deactivates, the terminal stays deactivated until the output frequency is at the value of <math>L4-03</math>.</p> |

**Note:**

The detection level set with  $L4-03$  is a signed value. The drive will only detect in one direction.

**ON** : The output frequency is less than the value of  $L4-03$  or it is not more than the value of  $L4-03 + L4-04$ .

**OFF** : The output frequency is higher than the value of  $L4-03 + L4-04$ .

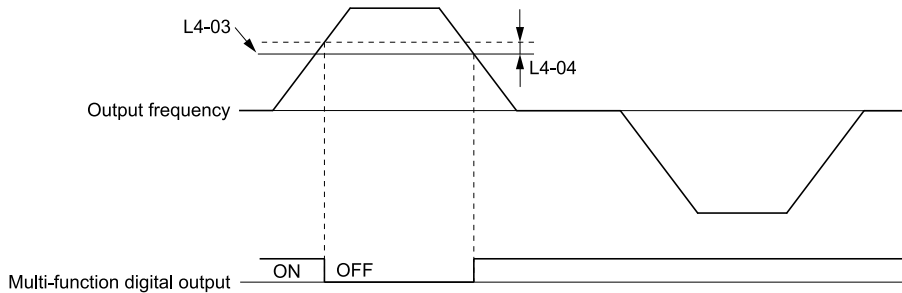


Figure 12.84 Example of Frequency Detection 3 (value of L4-03 Is Positive)

**Note:**

Figure 12.84 shows the result of the configuration when  $L4-07 = 1$  [Speed Agree Detection Selection = Detection Always Enabled]. The default setting of  $L4-07$  is 0 [No detection during baseblock]. When the speed agreement detection selection is “No Detection during Baseblock”, the terminal is deactivated when the drive output stops.

### 16: Frequency Detection 4

| Setting Value | Function              | Description   |
|---------------|-----------------------|---|
| 16            | Frequency Detection 4 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the output frequency is higher than the value of <math>L4-03</math> [Speed Agree Detection Level(+/-)]. After the terminal activates, the terminal stays activated until the output frequency is at the value of <math>L4-03 - L4-04</math>.</p> |

**Note:**

The detection level set with  $L4-03$  is a signed value. The drive will only detect in one direction.

**ON** : The output frequency is higher than the value of  $L4-03$ .

**OFF** : The output frequency is less than the value of “ $L4-03 - L4-04$ ,” or it is not more than the value of  $L4-03$ .

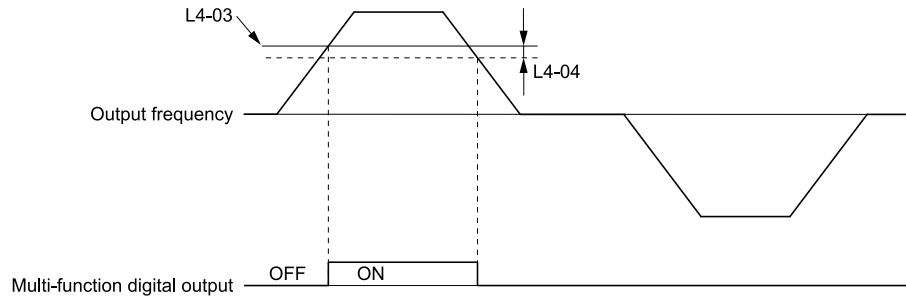


Figure 12.85 Example of Frequency Detection 4 (value of L4-03 is Positive)

### ■ 17: Torque Detection 1 (N.C.)

| Setting Value | Function                  | Description   |
|---------------|---------------------------|---|
| 17            | Torque Detection 1 (N.C.) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal deactivates when the drive detects overtorque or undertorque. |

Use the *L6 [Torque Detection]* parameters to set torque detection.

**OFF** : The output current/torque is more than *L6-02 [Torque Detection Level 1]*, or the level is less than *L6-02* for longer than *L6-03 [Torque Detection Time 1]*.

**Note:**

- When  $L6-01 \geq 5$ , the drive will detect when the output current/torque is less than *L6-02* for longer than *L6-03*.
- Refer to *L6: Torque Detection on page 699* for more information.

### ■ 18: Torque Detection 2 (N.O.)

| Setting Value | Function                  | Description   |
|---------------|---------------------------|---|
| 18            | Torque Detection 2 (N.O.) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when the drive detects overtorque or undertorque. |

Use the *L6 [Torque Detection]* parameters to set torque detection.

**ON** : The output current/torque is more than *L6-05 [Torque Detection Level 2]*, or the level is less than *L6-05* for longer than *L6-06 [Torque Detection Time 2]*.

**Note:**

- When  $L6-04 \geq 5$ , the drive will detect when the output current/torque is less than *L6-05* for longer than *L6-06*.
- Refer to *L6: Torque Detection on page 699* for more information.

### ■ 19: Torque Detection 2 (N.C.)

| Setting Value | Function                  | Description   |
|---------------|---------------------------|---|
| 19            | Torque Detection 2 (N.C.) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal deactivates when the drive detects overtorque or undertorque. |

Use the *L6 [Torque Detection]* parameters to set torque detection.

**OFF** : The output current/torque is more than *L6-05 [Torque Detection Level 2]*, or the level is less than *L6-05* for longer than *L6-06 [Torque Detection Time 2]*.

**Note:**

- When  $L6-04 \geq 5$ , the drive will detect when the output current/torque is less than *L6-05* for longer than *L6-06*.
- Refer to *L6: Torque Detection on page 699* for more information.

### ■ 1A: During Reverse

| Setting Value | Function       | Description   |
|---------------|----------------|---|
| 1A            | During Reverse | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when the motor operates in the reverse direction. |

**ON** : The motor is operating in the reverse direction.

**OFF** : The motor is operating in the forward direction or the motor stopped.

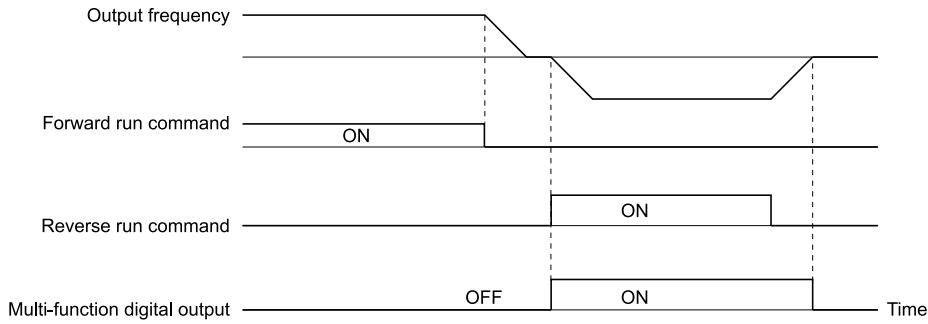


Figure 12.86 Reverse Operation Output Time Chart

■ 1B: During Baseblock (N.C.)

| Setting Value | Function                | Description  |
|---------------|-------------------------|--|
| 1B            | During Baseblock (N.C.) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal deactivates during baseblock. When the drive is in baseblock, the drive output transistor stops switching and does not make DC bus voltage.</p> |

ON : The drive is not in baseblock.

OFF : During baseblock

■ 1C: Motor 2 Selected

| Setting Value | Function         | Description  |
|---------------|------------------|--|
| 1C            | Motor 2 Selected | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when motor 2 is selected.</p> |

ON : Motor 2 Selection

OFF : Motor 1 Selection

■ 1E: Executing Auto-Restart

| Setting Value | Function               | Description   |
|---------------|------------------------|---|
| 1E            | Executing Auto-Restart | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the Auto Restart function is trying to restart after a fault.</p> |

The terminal deactivates when the Auto Restart function automatically resets a fault. The terminal deactivates when the Auto Restart function detects the fault again because there were too many restart attempts as specified by L5-01 [Number of Auto Restart Attempts].

Note:

Refer to L5: [Fault Restart on page 696](#) for more information.

■ 1F: Motor Overload Alarm (oL1)

| Setting Value | Function                   | Description   |
|---------------|----------------------------|---|
| 1F            | Motor Overload Alarm (oL1) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the electronic thermal protection value of the motor overload protective function is a minimum of 90% of the detection level.</p> |

Note:

Refer to L1-01: [Motor Overload \(oL1\) Protection on page 670](#) for more information.

■ 20: Drive Overheat Pre-Alarm (oH)

| Setting Value | Function                      | Description   |
|---------------|-------------------------------|---|
| 20            | Drive Overheat Pre-Alarm (oH) | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the drive heatsink temperature is at the level set with L8-02 [Overheat Alarm Level].</p> |

Note:

Refer to L8-02: [Overheat Alarm Level on page 707](#) for more information.



## ■ 21: Safe Torque OFF

| Setting Value | Function        | Description   |
|---------------|-----------------|---|
| 21            | Safe Torque OFF | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates (safety stop state) when the safety circuit and safety diagnosis circuit are operating correctly and when terminals H1-HC and H2-HC are OFF (Open).</p> |

**Note:**

EDM = External Device Monitor

### ON : Safety stop state

Terminals H1-HC and H2-HC are OFF (Open) (safety stop state).

### OFF : Safety circuit fault or RUN/READY

Terminal H1-HC or terminal H2-HC is OFF (Open) (safety circuit fault), or the two terminals are ON or have short circuited (RUN/READY).

## ■ 22: Mechanical Weakening Detection

| Setting Value | Function                       | Description  |
|---------------|--------------------------------|--|
| 22            | Mechanical Weakening Detection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the drive detects mechanical weakening.</p> |

**Note:**

Refer to [Mechanical Weakening Detection on page 700](#) for more information.

## ■ 2F: Maintenance Notification

| Setting Value | Function                 | Description  |
|---------------|--------------------------|--|
| 2F            | Maintenance Notification | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when drive components are at their estimated maintenance period.</p> |

Tells you about the maintenance period for these items:

- IGBT
- Cooling Fan
- Capacitor
- Soft charge bypass relay

**Note:**

Refer to [Maintenance on page 294](#) for more information.

## ■ 30: During Torque Limit

| Setting Value | Function            | Description  |
|---------------|---------------------|--|
| 30            | During Torque Limit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the torque reference is the torque limit set with <i>L7 parameters</i> or <i>H3-02</i> or <i>H3-10 [MFAI Function Selection]</i>.</p> |

**Note:**

Refer to [L7: Torque Limit on page 704](#) for more information.

## ■ 37: During Frequency Output

| Setting Value | Function                | Description   |
|---------------|-------------------------|---|
| 37            | During Frequency Output | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the drive outputs frequency.</p> |

**ON : The drive outputs frequency.**

**OFF : The drive does not output frequency.**

**Note:**

The terminal deactivates in these conditions:

- During Stop
- During baseblock
- During DC Injection Braking (initial excitation)
- During Short Circuit Braking

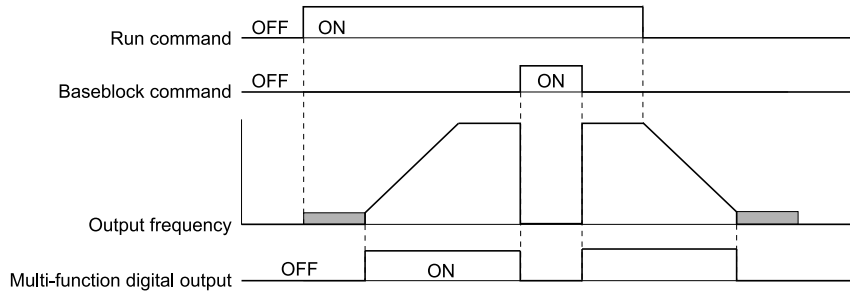


Figure 12.87 Active Frequency Output Time Chart

■ 38: Drive Enabled

| Setting Value | Function      | Description  |
|---------------|---------------|--|
| 38            | Drive Enabled | <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span style="background-color: black; color: white; padding: 2px;">OLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">AOLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span><br>This terminal activates when the H1-xx = 6A [Drive Enable] terminal activates. |

■ 39: Watt Hour Pulse Output

| Setting Value | Function               | Description  |
|---------------|------------------------|--|
| 39            | Watt Hour Pulse Output | <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span style="background-color: black; color: white; padding: 2px;">OLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">AOLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span><br>Outputs the pulse that shows the watt hours. |

Note:

Refer to [H2-06: Watt Hour Output Unit Selection on page 626](#) for more information.

■ 3D: During Speed Search

| Setting Value | Function            | Description  |
|---------------|---------------------|--|
| 3D            | During Speed Search | <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span style="background-color: black; color: white; padding: 2px;">OLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">AOLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span><br>The terminal activates when the drive is doing speed search. |

Note:

Refer to [b3: Speed Search on page 493](#) for more information.

■ 3C: LOCAL Control Selected

| Setting Value | Function               | Description  |
|---------------|------------------------|--|
| 3C            | LOCAL Control Selected | <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span style="background-color: black; color: white; padding: 2px;">OLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">AOLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span><br>The terminal activates when the Run command source or frequency reference source is LOCAL. |

ON : LOCAL

The keypad is the Run command source or the frequency reference source.

OFF : REMOTE

The Run command source or frequency reference source is an external source set with b1-01 [Frequency Reference Selection 1], b1-15 [Frequency Reference Selection 2], b1-02 [Run Command Selection 1], or b1-16 [Run Command Selection 2].

■ 3D: During Speed Search

| Setting Value | Function            | Description  |
|---------------|---------------------|--|
| 3D            | During Speed Search | <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span style="background-color: black; color: white; padding: 2px;">OLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">AOLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span><br>The terminal activates when the drive is doing speed search. |

Note:

Refer to [b3: Speed Search on page 493](#) for more information.

■ 3E: PID Feedback Low

| Setting Value | Function         | Description  |
|---------------|------------------|--|
| 3E            | PID Feedback Low | <span style="background-color: black; color: white; padding: 2px;">V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span style="background-color: black; color: white; padding: 2px;">OLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">AOLV/PM</span> <span style="background-color: black; color: white; padding: 2px;">EZOLV</span><br>The terminal activates when the drive detects FbL [PID Feedback Loss]. |

The drive detects *FbL* [*PID Feedback Loss*] when the PID feedback value < *b5-13* [*PID Feedback Loss Detection Lvl*] for longer than *b5-14* [*PID Feedback Loss Detection Time*].

**Note:**

Refer to [PID Feedback Loss Detection on page 505](#) for more information.

### ■ 3F: PID Feedback High

| Setting Value | Function          | Description  |
|---------------|-------------------|--|
| 3F            | PID Feedback High | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when the drive detects <i>FbH</i> [ <i>Excessive PID Feedback</i> ]. |

The drive detects *FbH* [*Excessive PID Feedback*] when the PID feedback value > *b5-36* [*PID High Feedback Detection Lvl*] for longer than *b5-37* [*PID High Feedback Detection Time*].

**Note:**

Refer to [PID Feedback Loss Detection on page 505](#) for more information.

### ■ 4A: During KEB Ride-Thru

| Setting Value | Function             | Description  |
|---------------|----------------------|--|
| 4A            | During KEB Ride-Thru | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The activates during KEB Ride-Thru. |

**Note:**

Refer to [KEB Ride-Thru Function on page 675](#) for more information.

### ■ 4B: During Short Circuit Braking

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 4B            | During Short Circuit Braking | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates during Short Circuit Braking. |

**Note:**

- When *A1-02* = 8 [*Control Method Selection* = *EZOLV*], this function is available only when you use a PM motor.
- Refer to [b2: DC Injection Braking and Short Circuit Braking on page 490](#) for more information.

### ■ 4C: During Fast Stop

| Setting Value | Function         | Description   |
|---------------|------------------|---|
| 4C            | During Fast Stop | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when the fast stop is in operation. |

### ■ 4D: oH Pre-Alarm Time Limit

| Setting Value | Function                | Description  |
|---------------|-------------------------|--|
| 4D            | oH Pre-Alarm Time Limit | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when <i>L8-03</i> = 4 [ <i>Overheat Pre-Alarm Selection</i> = <i>Operate at Reduced Speed (L8-19)</i> ] and <i>oH</i> [ <i>Heatsink Overheat</i> ] does not clear after the drive decreases the frequency for 10 cycles. |

**Note:**

Refer to [L8-03: Overheat Pre-Alarm Selection on page 707](#) for more information.

### ■ 4E: Braking Transistor Fault (rr)

| Setting Value | Function                      | Description  |
|---------------|-------------------------------|--|
| 4E            | Braking Transistor Fault (rr) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when the internal braking transistor overheats and the drive detects an <i>rr</i> [ <i>Dynamic Braking Transistor Fault</i> ] fault. |

### ■ 4F: Braking Resistor Overheat (rH)

| Setting Value | Function                       | Description  |
|---------------|--------------------------------|--|
| 4F            | Braking Resistor Overheat (rH) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when the braking resistor overheats and the drive detects an <i>rH</i> [ <i>Braking Resistor Overheat</i> ] fault. |

The braking resistor overheats when the deceleration time is short and there is too much motor regeneration energy.

■ 61: Pole Position Detection Complete

| Setting Value | Function                         | Description  |
|---------------|----------------------------------|--|
| 61            | Pole Position Detection Complete | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when drive receives a Run command and the drive detects the motor magnetic pole position of the PM motor.</p> |

■ 62: Modbus Reg 1 Status Satisfied

| Setting Value | Function                      | Description   |
|---------------|-------------------------------|---|
| 62            | Modbus Reg 1 Status Satisfied | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the bit specified by H2-08 [Modbus Register 1 Bit Select] for the MEMOBUS register address set with H2-07 [Modbus Register 1 Address Select] activates.</p> |

■ 63: Modbus Reg 2 Status Satisfied

| Setting Value | Function                      | Description   |
|---------------|-------------------------------|---|
| 63            | Modbus Reg 2 Status Satisfied | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates when the bit specified by H2-10 [Modbus Register 2 Bit Select] for the MEMOBUS register address set with H2-09 [Modbus Register 2 Address Select] activates.</p> |

■ 66: Comparator1

| Setting Value | Function    | Description  |
|---------------|-------------|--|
| 66            | Comparator1 | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates if the monitor value set with H2-20 [Comparator 1 Monitor Selection] is in range of the values of H2-21 [Comparator 1 Lower Limit] and H2-22 [Comparator 1 Upper Limit] for the time set in H2-24 [Comparator 1 On-Delay Time].</p> |

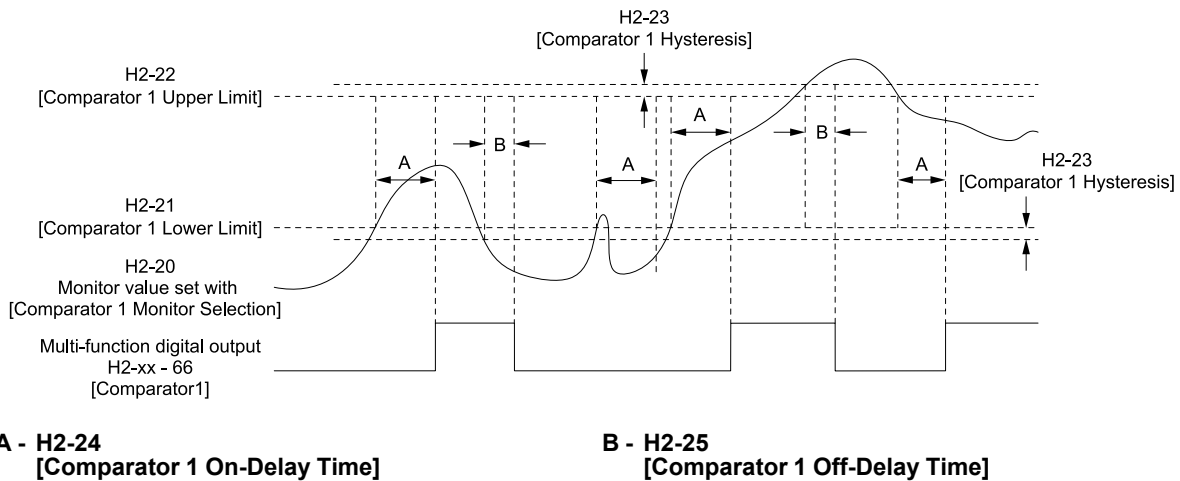


Figure 12.88 Comparator 1 Output Time Chart

Note:

The drive compares the monitors set with H2-20 as absolute values.

■ 67: Comparator2

| Setting Value | Function    | Description  |
|---------------|-------------|--|
| 67            | Comparator2 | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>The terminal activates if the monitor value set with H2-26 [Comparator 2 Monitor Selection] is not in the range of the values of H2-27 [Comparator 2 Lower Limit] and H2-28 [Comparator 2 Upper Limit] for the time set in H2-30 [Comparator 2 On-Delay Time].</p> |

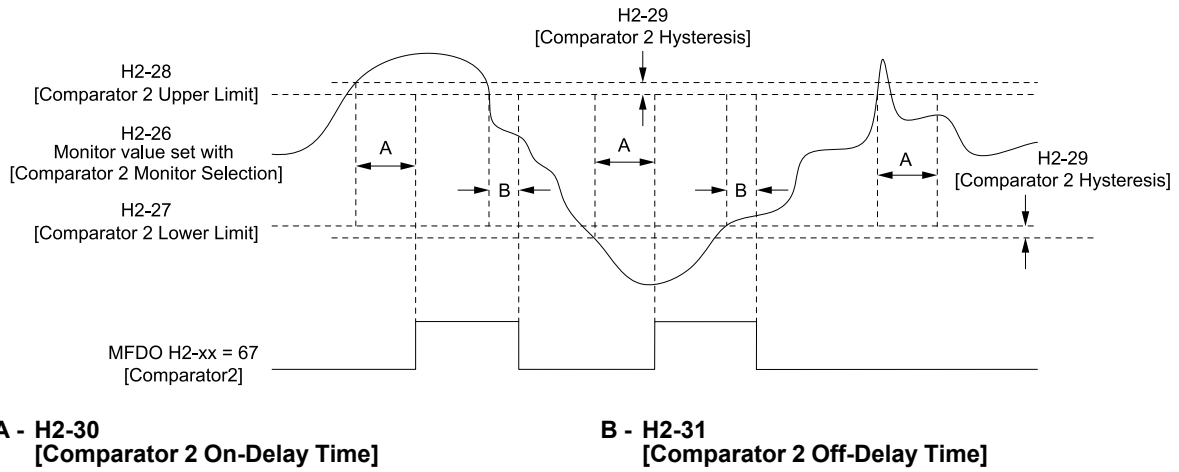


Figure 12.89 Comparator 2 Output Time Chart

**Note:**

The drive compares the monitors set with H2-26 as absolute values.

■ **69: External Power 24V Supply**

| Setting Value | Function                  | Description   |
|---------------|---------------------------|---|
| 69            | External Power 24V Supply | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when there is an external 24V power supply between terminals PS-AC. |

**ON :** An external 24V power supply supplies power.

**OFF :** An external 24V power supply does not supply power.

■ **6A: Data Logger Error**

| Setting Value | Function          | Description  |
|---------------|-------------------|--|
| 6A            | Data Logger Error | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>The terminal activates when the drive detects LoG [Com Error / Abnormal SD card]. |

■ **90 to 92: DWEZ Digital Output 1 to 3**

| Setting Value | Function                   | Description  |
|---------------|----------------------------|--|
| 90 - 92       | DWEZ Digital Output 1 to 3 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the DriveWorksEZ digital output. Refer to the DriveWorksEZ online manual for more information. |

■ **100 to 192: Inverse output of 0 to 92**

| Setting Value | Function                  | Description   |
|---------------|---------------------------|---|
| 100 - 192     | Inverse output of 0 to 92 | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Causes inverse output of the function for the selected MFDO. Uses the last two digits of 1xx to select which function to inversely output. |

For example, set H2-xx = 10E for the inverse output of E [Fault].

◆ **H3: Analog Inputs**

**WARNING!** Sudden Movement Hazard. Do test runs and examine the drive to make sure that the command references are correct. If you set the command reference incorrectly, it can cause damage to the drive or serious injury or death.

Drives have two analog input terminals: terminals A1 and A2. Use H3 parameters to set the functions to these analog input terminals and adjust signal levels.

Table 12.64 shows the functions that you can set to analog input terminals. Use H3-02 and H3-10 [MFAI Function Select] to set functions.

Table 12.64 Multi-Function Analog Input Terminal Settings

| Setting Value | Function            | Reference | Setting Value | Function                        | Reference |
|---------------|---------------------|-----------|---------------|---------------------------------|-----------|
| 0             | Frequency Reference | 650       | 2             | Auxiliary Frequency Reference 1 | 651       |
| 1             | Frequency Gain      | 650       | 3             | Auxiliary Frequency Reference 2 | 651       |

## 12.8 H: Terminal Function Selection

| Setting Value | Function                       | Reference |
|---------------|--------------------------------|-----------|
| 4             | Output Voltage Bias            | 651       |
| 5             | Accel/Decel Time Gain          | 651       |
| 6             | DC Injection Braking Current   | 652       |
| 7             | Torque Detection Level         | 652       |
| 8             | Stall Prevent Level during Run | 652       |
| 9             | Output Frequency Lower Limit   | 653       |
| B             | PID Feedback                   | 653       |
| C             | PID Setpoint                   | 653       |
| D             | Frequency Bias                 | 653       |
| E             | Motor Temperature (PTC Input)  | 653       |
| F             | Through Mode                   | 653       |

| Setting Value | Function                        | Reference |
|---------------|---------------------------------|-----------|
| 10            | Forward Torque Limit            | 654       |
| 11            | Reverse Torque Limit            | 655       |
| 12            | Regenerative Torque Limit       | 655       |
| 13            | Torque Reference / Torque Limit | 655       |
| 14            | Torque Compensation             | 655       |
| 15            | General Torque Limit            | 655       |
| 16            | PID DifferentialFdbk            | 655       |
| 1F            | Through Mode                    | 656       |
| 30            | DWEZ Analog Input 1             | 656       |
| 31            | DWEZ Analog Input 2             | 656       |

### Note:

All analog input scaling uses gain and bias for adjustment. Set the gain and bias values correctly.

| Example Analog Input Settings                                  | Terminal A1 Setting  | Frequency Reference   |
|--|--|---|
| Frequency Reference When You Adjust the Gain Setting           | <ul style="list-style-type: none"> <li>H3-02 = 0 [Terminal A1 Function Selection = Frequency Reference]</li> <li>H3-03 = 200.0 [Terminal A1 Gain Setting = 200%]</li> <li>H3-04 = 0.0 [Terminal A1 Bias Setting = 0.0%]</li> </ul> | <ul style="list-style-type: none"> <li>When you input a 10 V signal, the frequency reference will be 200%.</li> <li>When you input a 5 V signal, the frequency reference will be 100%.</li> </ul> <p>When you input a 5 V or more signal, <i>E1-04 [Maximum Output Frequency]</i> will limit the drive output and the frequency reference will be 100%.</p> <p style="text-align: center;">H3-01 = 0.1</p>  |
| Frequency Reference When You Set the Bias to a Negative Number | <ul style="list-style-type: none"> <li>H3-02 = 0 [Frequency Reference]</li> <li>H3-03 = 100.0 [100.0%]</li> <li>H3-04 = -25.0 [-25.0%]</li> </ul>  | <ul style="list-style-type: none"> <li>When you input a 0 V signal, the frequency reference will be -25%.</li> <li>When <i>H3-01 = 0 [Terminal A1 Signal Level Select = 0 V to 10 V (Lower Limit at 0)]</i> <ul style="list-style-type: none"> <li>When you input a 0 V to 2 V signal, the frequency reference will be 0%.</li> <li>When you input a 2 V to 10 V signal, the frequency reference will be 0% to 100%.</li> </ul> </li> <li>When <i>H3-01 = 1 [0 V to 10 V (Without Lower Limit)]</i> <ul style="list-style-type: none"> <li>When you input a 0 V to 2 V signal, it enables signals of positive and negative polarities and the motor rotates in reverse.</li> </ul> </li> </ul> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>H3-01 = 0</p> </div> <div style="text-align: center;"> <p>H3-01 = 1</p> </div> </div> |


### MEMOBUS/Modbus MFAI 1 to 3 Function Selection

You can set the MFAI function to MEMOBUS/Modbus register *15C1 to 15C3 (Hex.) [Mbus Reg 15C1h through 15C3h Input Function]*. Use *H3-40 to H3-42 [Mbus Reg 15C1h through 15C3h Input Function]* to set the function for each register and use *H3-43 [Mbus Reg Inputs FilterTime Const]* to set the input filter.

**Table 12.65 MEMOBUS Multi-Function AI Command Register**

| Register number (Hex.) | Name                          | Range <sup>*1</sup> | Parameter |
|------------------------|-------------------------------|---------------------|-----------|
| 15C1                   | Mbus Reg 15C1h Input Function | -32767 to +32767    | H3-40     |
| 15C2                   | Mbus Reg 15C2h Input Function | -32767 to +32767    | H3-41     |
| 15C3                   | Mbus Reg 15C3h Input Function | -32767 to +32767    | H3-42     |

\*1 Set as 100% = 4096.

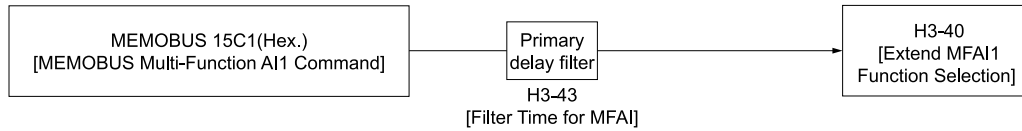

**Figure 12.90 Functional Block Diagram for MEMOBUS Multi-Function AI Command 1**

**Note:**

- Refer to *Multi-Function Analog Input Terminal Settings on page 650* for the analog input setting values.
- When you will not use the terminal, set H3-40 to H3-42 = F. Parameters H3-40 to H3-42 do not support the through mode.
- You cannot use H3-40 to H3-42 to set these MFAI functions:

| H3-xx Setting Value | Function                        |
|---------------------|---------------------------------|
| 0                   | Frequency Reference             |
| 1                   | Frequency Gain                  |
| 2                   | Auxiliary Frequency Reference 1 |
| 3                   | Auxiliary Frequency Reference 2 |
| 30                  | DWEZ Analog Input 1             |
| 31                  | DWEZ Analog Input 2             |

◆ **H3: MFAI Parameters**

■ **H3-01: Terminal A1 Signal Level Select**

| No. (Hex.)   | Name                            | Description  | Default (Range) |
|--------------|---------------------------------|--|-----------------|
| H3-01 (0410) | Terminal A1 Signal Level Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the input signal level for MFAI terminal A1. | 0<br>(0, 1)     |

**0 : 0 to 10V (Lower Limit at 0)**

The voltage signal is 0 Vdc to 10 Vdc. The minimum input level limit is 0%. The drive will read a negative input signal caused by gain and bias settings as 0%.

**1 : 0 V to 10 V (Without Lower Limit)**

The voltage signal is 0 Vdc to 10 Vdc. When this setting is used as the frequency reference, the motor runs reverse when the Forward run command is input, or runs forward when the Reverse run signal is input, while the signal is a negative number due to gain and bias.

■ **H3-02: Terminal A1 Function Selection**

| No. (Hex.)   | Name                           | Description  | Default (Range) |
|--------------|--------------------------------|--|-----------------|
| H3-02 (0434) | Terminal A1 Function Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function for MFAI terminal A1. | 0<br>(0 - 32)   |

■ **H3-03: Terminal A1 Gain Setting**

| No. (Hex.)          | Name                     | Description  | Default (Range)              |
|---------------------|--------------------------|--|------------------------------|
| H3-03 (0411)<br>RUN | Terminal A1 Gain Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain of the analog signal input to MFAI terminal A1. | 100.0%<br>(-999.9 - +999.9%) |

Parameter Details

## 12.8 H: Terminal Function Selection

This parameter sets the quantity of reference for the function set for terminal A1 as a percentage when 10 V (or 20 mA) is input.

Use this parameter and *H3-04 [Terminal A1 Bias Setting]* to adjust the characteristics of the analog input signal to terminal A1.

### ■ H3-04: Terminal A1 Bias Setting

| No. (Hex.)             | Name                     | Description  | Default (Range)            |
|------------------------|--------------------------|--|----------------------------|
| H3-04<br>(0412)<br>RUN | Terminal A1 Bias Setting | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the bias of the analog signal input to MFAI terminal A1. | 0.0%<br>(-999.9 - +999.9%) |

This parameter sets the bias for the function set for terminal A1 as a percentage when 0 V (4 mA or 0 mA) is input.

Use this parameter and *H3-03 [Terminal A1 Gain Setting]* to adjust the characteristics of the analog input signal to terminal A1.

### ■ H3-09: Terminal A2 Signal Level Select

| No. (Hex.)      | Name                            | Description  | Default (Range) |
|-----------------|---------------------------------|--|-----------------|
| H3-09<br>(0417) | Terminal A2 Signal Level Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the input signal level for MFAI terminal A2. | 2<br>(0 - 3)    |

#### 0 : 0-10V (LowLim=0)

The voltage signal is 0 Vdc to 10 Vdc. The minimum input level limit is 0%. The drive will read a negative input signal caused by gain and bias settings as 0%.

#### 1 : 0-10V (Without Lower Limit)

The voltage signal is 0 Vdc to 10 Vdc. When this setting is used as the frequency reference, the motor runs reverse when the Forward run command is input, or runs forward when the Reverse run signal is input, while the signal is a negative number due to gain and bias.

#### 2 : 4 to 20 mA

The current signal is 4 mA to 20 mA. The minimum input level is limited to 0%, so that a negative input signal due to gain and bias settings will be read as 0%.

#### 3 : 0 to 20 mA

The current signal is 0 mA to 20 mA. The minimum input level is limited to 0%, so that a negative input signal due to gain and bias settings will be read as 0%.

#### Note:

When *H3-09 = 0, 1*, set DIP switch S1 to the V side (voltage). When *H3-09 = 2, 3*, set DIP switch S1 to the I side (current). The default setting is the I side (current).

### ■ H3-10: Terminal A2 Function Selection

| No. (Hex.)      | Name                           | Description  | Default (Range) |
|-----------------|--------------------------------|--|-----------------|
| H3-10<br>(0418) | Terminal A2 Function Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function for MFAI terminal A2. | 0<br>(0 - 32)   |

### ■ H3-11: Terminal A2 Gain Setting

| No. (Hex.)             | Name                     | Description  | Default (Range)              |
|------------------------|--------------------------|--|------------------------------|
| H3-11<br>(0419)<br>RUN | Terminal A2 Gain Setting | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain of the analog signal input to MFAI terminal A2. | 100.0%<br>(-999.9 - +999.9%) |

When 10 V (or 20 mA) is input, this parameter sets the reference quantity for the function set for terminal A2 as a percentage.

Use this parameter and *H3-12 [Terminal A2 Bias Setting]* to adjust the characteristics of the analog input signal to terminal A2.



### ■ H3-12: Terminal A2 Bias Setting

| No.<br>(Hex.)          | Name                     | Description  | Default<br>(Range)         |
|------------------------|--------------------------|--|----------------------------|
| H3-12<br>(041A)<br>RUN | Terminal A2 Bias Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the bias of the analog signal input to MFAI terminal A2. | 0.0%<br>(-999.9 - +999.9%) |

When 0 V (4 mA or 0 mA) is input, this parameter sets the bias for the function set for terminal A2 as a percentage.

Use this parameter and *H3-11 [Terminal A2 Gain Setting]* to adjust the characteristics of the analog input signal to terminal A2.

### ■ H3-13: Analog Input FilterTime Constant

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range)        |
|-----------------|----------------------------------|--|---------------------------|
| H3-13<br>(041B) | Analog Input FilterTime Constant | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant for primary delay filters on MFAI terminals. | 0.03 s<br>(0.00 - 2.00 s) |

Apply the primary delay filter to the analog input to enable an analog input signal without the use of high-frequency noise components. An analog input filter prevents irregular drive control. Drive operation becomes more stable as the programmed time becomes longer, but it also becomes less responsive to quickly changing analog signals.

### ■ H3-14: Analog Input Terminal Enable Sel

| No.<br>(Hex.)   | Name                             | Description   | Default<br>(Range) |
|-----------------|----------------------------------|---|--------------------|
| H3-14<br>(041C) | Analog Input Terminal Enable Sel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the enabled terminal or terminals when $H1-xx = C$ [MFDI Function Select = Analog Terminal Enable Selection] is ON. | 7<br>(1, 2, 7)     |

Input signals do not have an effect on terminals not set as targets.

**1 : Terminal A1 only**

**2 : Terminal A2 only**

**7 : Terminals A1 and A2**

**Note:**

- The ON/OFF operation of terminal  $S_x$  set in *Analog Terminal Input Selection* [ $H1-xx = C$ ] has an effect on only the analog input terminal selected with *H3-14*.
- When  $H1-xx \neq C$ , the functions set to terminals A1 and A2 are always enabled.

### ■ H3-16: Terminal A1 Offset

| No.<br>(Hex.)   | Name               | Description   | Default<br>(Range) |
|-----------------|--------------------|---|--------------------|
| H3-16<br>(02F0) | Terminal A1 Offset | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the offset level for analog signals input to terminal A1. Usually it is not necessary to change this setting. | 0<br>(-500 - +500) |

Adds the offset value for the analog input value. For voltage input, this parameter will set the offset when a signal of 0 V is input.

### ■ H3-17: Terminal A2 Offset

| No.<br>(Hex.)   | Name               | Description   | Default<br>(Range) |
|-----------------|--------------------|---|--------------------|
| H3-17<br>(02F1) | Terminal A2 Offset | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the offset level for analog signals input to terminal A2. Usually it is not necessary to change this setting. | 0<br>(-500 - +500) |

Adds the offset value for the analog input value. For voltage input, this parameter will set the offset when a signal of 0 V is input. For current input, this parameter will set the offset when a signal of 4 mA [ $H3-09 = 2$ ] or 0 mA [ $H3-09 = 3$ ] is input.

■ **H3-40: Mbus Reg 15C1h Input Function**

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| H3-40 (0B5C) | Mbus Reg 15C1h Input Function | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the MEMOBUS AI1 function. | F<br>(4 - 2F)   |

You can use the MFAI function from MEMOBUS/Modbus communications. Use this parameter to set the function. Sets the function for MEMOBUS/Modbus register 15C1h.

Refer to [H3: Analog Inputs on page 645](#) for the setting values.

■ **H3-41: Mbus Reg 15C2h Input Function**

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| H3-41 (0B5F) | Mbus Reg 15C2h Input Function | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the MEMOBUS AI2 function. | F<br>(4 - 2F)   |

You can use the MFAI function from MEMOBUS/Modbus communications. Use this parameter to set the function. Sets the function for MEMOBUS/Modbus register 15C2h.

Refer to [H3: Analog Inputs on page 645](#) for the setting values.

■ **H3-42: Mbus Reg 15C3h Input Function**

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| H3-42 (0B62) | Mbus Reg 15C3h Input Function | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the MEMOBUS AI3 function. | F<br>(4 - 2F)   |

You can use the MFAI function from MEMOBUS/Modbus communications. Use this parameter to set the function. Sets the function for MEMOBUS/Modbus register 15C3h.

Refer to [H3: Analog Inputs on page 645](#) for the setting values.

■ **H3-43: Mbus Reg Inputs FilterTime Const**

| No. (Hex.)   | Name                             | Description   | Default (Range)           |
|--------------|----------------------------------|---|---------------------------|
| H3-43 (117F) | Mbus Reg Inputs FilterTime Const | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the time constant to apply a primary delay filter to the MEMOBUS analog input register values. | 0.00 s<br>(0.00 - 2.00 s) |

◆ **Multi-Function Analog Input Terminal Settings**

This section gives information about the functions set with *H3-02*, *H3-10*, and *H3-41* to *H3-43*.

■ **0: Frequency Reference**

| Setting Value | Function            | Description   |
|---------------|---------------------|---|
| 0             | Frequency Reference | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> The input value from the MFAI terminal set with this function becomes the master frequency reference. |

- You can copy the configuration to more than one of the analog input terminals A1 and A2. When you set more than one analog input terminal with the master frequency reference, the sum value becomes the frequency bias.
- If you use this function to set the analog input value as the master frequency reference, set  $b1-01 = 1$  [*Frequency Reference Selection 1 = Analog Input*]. This setting value is the default value for terminals A1 and A2.
- The frequency reference is the sum of the input values for terminals A1 and A2 when they are used at the same time. For example, when a 20% bias is input to terminal A2 while a frequency reference of 50% is input from terminal A1, the calculated frequency reference will be 70% of the maximum output frequency.

■ **1: Frequency Gain**

| Setting Value | Function       | Description  |
|---------------|----------------|--|
| 1             | Frequency Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> The drive multiplies the analog frequency reference with the input value from the MFAI set with this function. |

Example: When you set frequency gain for terminal A2

- $H3-10 = 1$  [Terminal A2 Function Selection = Frequency Gain]
- A 50% frequency gain is input to terminal A2
- A frequency reference of 80% is input from terminal A1

The calculated frequency reference is 40% of the maximum output frequency.

### 2: Auxiliary Frequency Reference 1

| Setting Value | Function                        | Description  |
|---------------|---------------------------------|--|
| 2             | Auxiliary Frequency Reference 1 | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets Reference 2 through multi-step speed reference to enable the command reference (Auxiliary Frequency Reference 1) from the analog input terminal set here. This value is a percentage where the Maximum Output Frequency setting is a setting value of 100%.</p> |

### 3: Auxiliary Frequency Reference 2

| Setting Value | Function                        | Description  |
|---------------|---------------------------------|--|
| 3             | Auxiliary Frequency Reference 2 | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets Reference 3 through multi-step speed reference to enable the command reference (Auxiliary Frequency Reference 2) from the analog input terminal set here. This value is a percentage where the Maximum Output Frequency setting is a setting value of 100%.</p> |

### 4: Output Voltage Bias

| Setting Value | Function            | Description  |
|---------------|---------------------|--|
| 4             | Output Voltage Bias | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Set this parameter to input a bias signal to amplify the output voltage.</p> |

The gain (%) for the MFAI terminals A1 and A2 is 100% of the voltage class standard, which is 200 V for 200 V class drives and 400 V for 400 V class drives. The bias (%) for MFAI terminals A1 and A2 is 100% of the voltage configured for *E1-05* [Maximum Output Voltage].

**Note:**

The gain for each terminal A1 and A2 is set independently with *H3-03* [Terminal A1 Gain Setting] and *H3-11* [Terminal A2 Gain Setting]. The bias for each terminal A1 and A2 is set independently with *H3-04* [Terminal A1 Bias Setting] and *H3-12* [Terminal A2 Bias Setting].

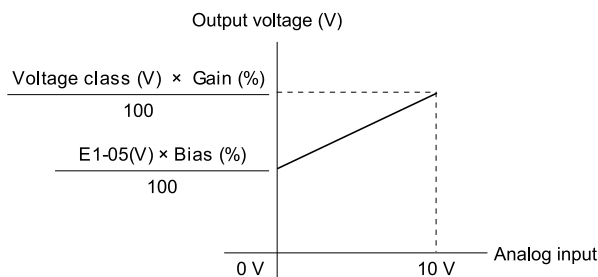


Figure 12.91 Output Voltage Bias through Analog Input

### 5: Accel/Decel Time Gain

| Setting Value | Function              | Description  |
|---------------|-----------------------|--|
| 5             | Accel/Decel Time Gain | <div style="display: flex; justify-content: space-between; border: 1px solid black; padding: 2px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Enters a signal to adjust the gain used for <i>C1-01</i> to <i>C1-08</i> [Acceleration/Deceleration Times 1 to 4] and <i>C1-09</i> [Fast Stop Time] when the full scale analog signal (10 V or 20 mA) is 100%.</p> |

When you enable *C1-01* [Acceleration Time 1], the acceleration time is:

$$\text{Acceleration Time 1} = \text{Setting value of } C1-01 \times \text{acceleration and deceleration time gain} / 100$$

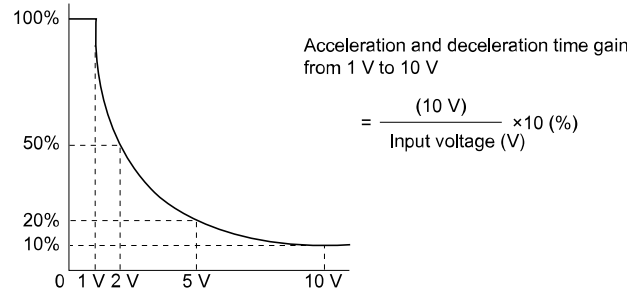


Figure 12.92 Acceleration/Deceleration Time Gain through Analog Input

■ 6: DC Injection Braking Current

| Setting Value | Function                     | Description   |
|---------------|------------------------------|---|
| 6             | DC Injection Braking Current | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Enters a signal to adjust the current level used for DC Injection Braking when the drive rated output current is 100%. |

**Note:**

When you set this function, it will disable the setting value of b2-02 [DC Injection Braking Current].

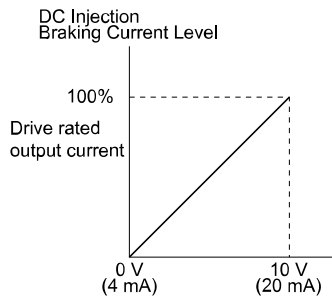


Figure 12.93 DC Injection Braking Current through Analog Input

■ 7: Torque Detection Level

| Setting Value | Function               | Description  |
|---------------|------------------------|--|
| 7             | Torque Detection Level | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Enters a signal to adjust the overtorque/undertorque detection level. |

When AI-02 = 0, 5 [Control Method Selection = V/f, OLV/PM], the drive rated current is 100%. When AI-02 = 2, 6, 8 [OLV, AOLV/PM, or EZOLV], the motor rated current is 100%.

**Note:**

Use this function with L6-01 [Torque Detection Selection 1]. This parameter functions as an alternative to L6-02 [Torque Detection Level 1].

■ 8: Stall Prevent Level during Run

| Setting Value | Function                       | Description  |
|---------------|--------------------------------|--|
| 8             | Stall Prevent Level during Run | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Enters a signal to adjust the stall prevention level during run if the drive rated current is 100%. |

**Note:**

The drive will use the smaller value of these values for Stall Prevent Level during Run:

- Multi-function analog input terminal analog input value
- L3-06 [Stall Prevent Level during Run]

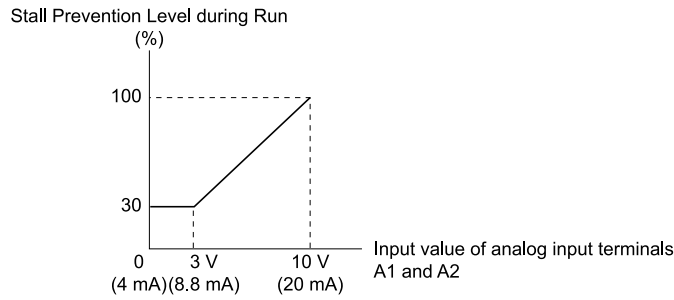


Figure 12.94 Stall Prevention Level during Run with Analog Input

### ■ 9: Output Frequency Lower Limit

| Setting Value | Function                     | Description  |
|---------------|------------------------------|--|
| 9             | Output Frequency Lower Limit | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Enters a signal to adjust the output frequency lower limit level as a percentage of the maximum output frequency. |

### ■ B: PID Feedback

| Setting Value | Function     | Description  |
|---------------|--------------|--|
| B             | PID Feedback | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Enter the PID feedback value as a percentage of the maximum output frequency. |

When you use this function, set  $b5-01 = 1$  to 8 [PID Mode Setting = Enabled].

### ■ C: PID Setpoint

| Setting Value | Function     | Description   |
|---------------|--------------|---|
| C             | PID Setpoint | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Enters the PID setpoint as a percentage of the maximum output frequency. |

When you use this function, set  $b5-01 = 1$  to 8 [PID Mode Setting = Enabled].

**Note:**

Configuring this function disables the frequency reference set with  $b1-01$  [Frequency Reference Selection 1].

### ■ D: Frequency Bias

| Setting Value | Function       | Description  |
|---------------|----------------|--|
| D             | Frequency Bias | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Enters the bias value added to the frequency reference as a percentage of the maximum output frequency. |

The drive adds the input value from the MFAI terminal set with this function to the frequency reference as the bias value.

**Note:**

When you select  $d1-01$  to  $d1-16$  or  $d1-17$  [Reference 1 to 16 or JOG Frequency Reference] as the frequency reference, it will disable this function.

### ■ E: Motor Temperature (PTC Input)

| Setting Value | Function                      | Description  |
|---------------|-------------------------------|--|
| E             | Motor Temperature (PTC Input) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Uses the motor Positive Temperature Coefficient (PTC) thermistor to prevent heat damage to the motor as a percentage of the current value when the 10 V analog signal is input. |

- You can use the Positive Temperature Coefficient (PTC) thermistor as an auxiliary or alternative detection function for  $oL1$  [Motor Overload] problems to help prevent heat damage to motors. If the PTC input signal is more than the overload alarm level,  $oH3$  [Motor Overheat (PTC Input)] will flash on the keypad.
- When the drive detects  $oH3$ , the motor stops with the setting in  $L1-03$ . When the drive detects  $oH4$ , the motor stops with the setting in  $L1-04$ . When the drive incorrectly detects motor overheating problems, set  $L1-05$ .

### ■ F: Not Used

| Setting Value | Function | Description   |
|---------------|----------|---|
| F             | Not Used | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Use this setting for unused terminals or to use terminals in through mode. |

When you set a terminal that is not in use to F, you can use the signal input to the terminal as PLC analog signal input through MEMOBUS/Modbus communications or the communication option. This input signal does not have an effect on drive operation. This functions the same as setting 1F (Through Mode).

**10: Forward Torque Limit**

| Setting Value | Function             | Description   |
|---------------|----------------------|---|
| 10            | Forward Torque Limit | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Enters the forward torque limit if the motor rated torque is 100%. |


**WARNING! Sudden Movement Hazard.** Set correct torque limits for applications, for example elevator applications. If you set torque limits incorrectly, motor torque that is not sufficient can cause damage to equipment and cause serious injury or death.

**Torque Limit Configuration Method**

Use one of these methods to set torque limits:

- Individually set the four torque limit quadrants using L7-01 to L7-04 [Torque Limit].
- Use MFAI to individually set the four torque limit quadrants. Set H3-02, H3-10 = 10, 11, 12 [MFAI Function Select = Forward/Reverse/Regenerative Torque Limit].
- Use MFAI to set all four torque limit quadrants together. Set H3-02, H3-10 = 15 [General Torque Limit].
- Use a communication option to set all four torque limit quadrants together.

Figure 12.95 shows the configuration method for each quadrant.

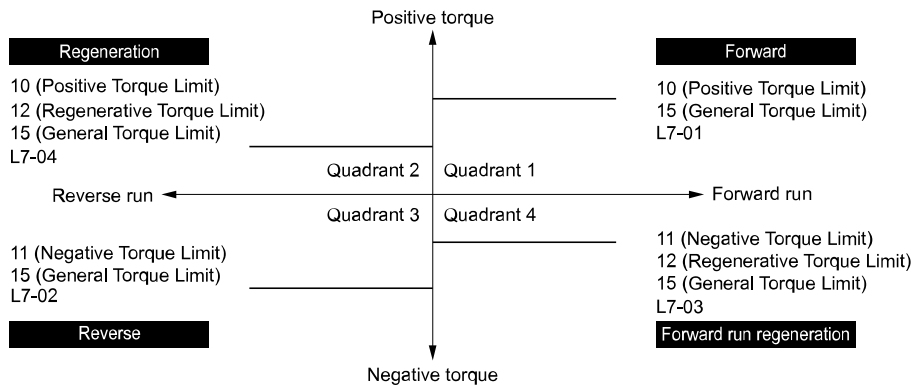

**Figure 12.95 Torque Limits and Analog Input Setting Parameters**

**Note:**

- When L7-01 to L7-04 and analog inputs or communication option torque limits set torque limits for the same quadrant, the lower value is enabled. In this example of parameter settings, the torque limit for quadrant 1 is 130% and the torque limit for quadrants 2, 3, and 4 is 150%. Settings: L7-01 = 130%, L7-02 to L7-04 = 200%, and MFAI torque limit = 150%
- The drive output current limits maximum output torque. The torque limit is 150% of the rated output current for HD and to 120% of the rated output current for ND. The actual output torque is not more than the limits of the drive rated output current when you set the torque limit to a high value.

If you use drives in applications where the vertical axis can fall, make sure that you know these items:

- Correctly configure drives and motors.
- Correctly set parameters.
- You can change parameter values after you do Auto-Tuning.
- Use a system that will not let the vertical axis fall if the drive fails.

Figure 12.96 shows the relation between torque limits from parameters and torque limits from analog input.

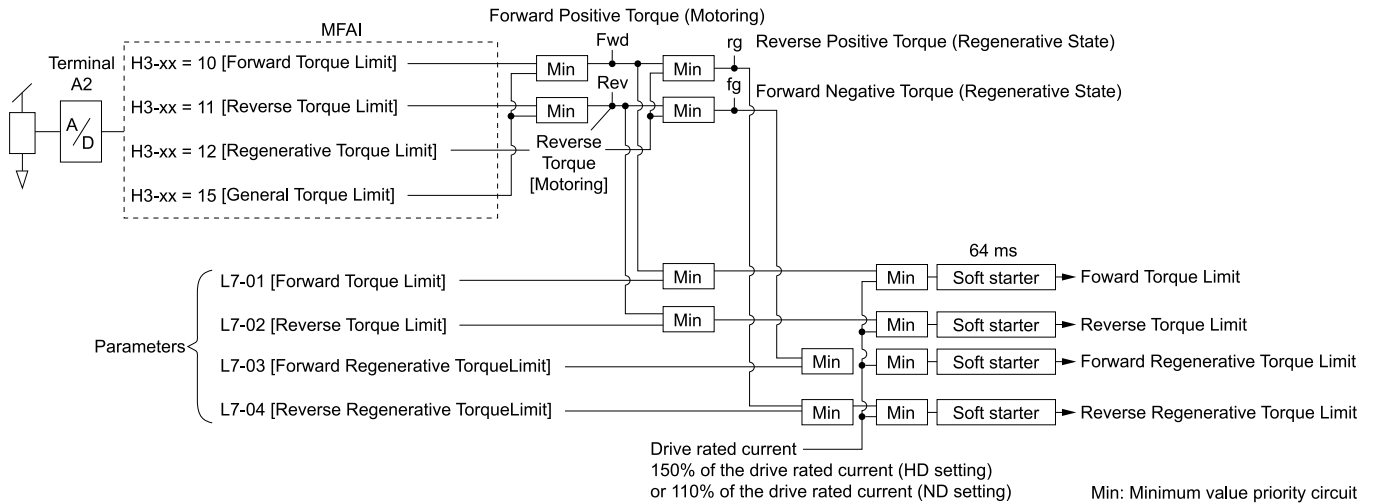


Figure 12.96 Torque Limits from Parameters and Analog Inputs

### 11: Reverse Torque Limit

| Setting Value | Function             | Description   |
|---------------|----------------------|---|
| 11            | Reverse Torque Limit | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the load torque limit if the motor rated torque is 100%. |

**Note:**

When you use L7-01 to L7-04 and analog inputs to set torque limits for the same quadrant, it will enable the lower torque limit.

### 12: Regenerative Torque Limit

| Setting Value | Function                  | Description   |
|---------------|---------------------------|---|
| 12            | Regenerative Torque Limit | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the regenerative torque limit if the motor rated torque is 100%. |

**Note:**

When you use L7-01 to L7-04 and analog inputs to set torque limits for the same quadrant, it will enable the lower torque limit.

### 13: Torque Reference / Torque Limit

| Setting Value | Function                        | Description  |
|---------------|---------------------------------|--|
| 13            | Torque Reference / Torque Limit | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the torque reference if the motor rated torque is 100%. This setting is the torque limit for speed control. |

**Note:**

When you use L7-01 to L7-04 and analog inputs to set torque limits for the same quadrant, it will enable the lower torque limit.

### 14: Torque Compensation

| Setting Value | Function            | Description   |
|---------------|---------------------|---|
| 14            | Torque Compensation | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the torque compensation value if the motor rated torque is 100%. |

### 15: General Torque Limit

| Setting Value | Function             | Description  |
|---------------|----------------------|--|
| 15            | General Torque Limit | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the torque limit that is the same for all quadrants for forward, reverse, and regenerative operation if the motor rated torque is 100%. |

### 16: Differential PID Feedback

| Setting Value | Function                  | Description   |
|---------------|---------------------------|---|
| 16            | Differential PID Feedback | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Enters the PID differential feedback value if the full scale analog signal (10 V or 20 mA) is 100%. |

The drive uses the deviation between the PID feedback and the differential feedback value signals to calculate the PID input.

■ 1F: Not Used

| Setting Value | Function | Description   |
|---------------|----------|---|
| 1F            | Not Used | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Use this setting for unused terminals or to use terminals in through mode. |

When you set a terminal that you do not use to 1F, you can use the signal that is input to that terminal as the PLC analog signal input from MEMOBUS/Modbus communications or the communication option. This input signal does not have an effect on drive operation. This signal functions the same as F (Through Mode).

■ 30: DWEZ Analog Input 1

| Setting Value | Function            | Description   |
|---------------|---------------------|---|
| 30            | DWEZ Analog Input 1 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Use with DriveWorksEZ. Refer to the DriveWorksEZ online manual for more information. |

■ 31: DWEZ Analog Input 2

| Setting Value | Function            | Description   |
|---------------|---------------------|---|
| 31            | DWEZ Analog Input 2 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Use with DriveWorksEZ. Refer to the DriveWorksEZ online manual for more information. |

◆ H4: Analog Outputs

H4 parameters set the drive analog monitors. These parameters select monitor parameters, adjust gain and bias, and select output signal levels.

■ Calibrate Meters Connected to MFAO Terminal AM

Use these parameters to calibrate meters connected to terminal AM:

- H4-02 [Terminal AM Analog Output Gain]
- H4-03 [Terminal AM Analog Output Bias]

Set these parameters where the output voltage of 10 V and output current of 20 mA are 100% of the signal level. Use jumper switch S5 and parameter H4-07 [Terminal AM Signal Level Select] to set the voltage output and current output.

| No.   | Name                            | Range                      | Default |
|-------|---------------------------------|----------------------------|---------|
| H4-02 | Terminal AM Analog Output Gain  | -999.9 - +999.9%           | 100.0%  |
| H4-03 | Terminal AM Analog Output Bias  | -999.9 - +999.9%           | 0.0%    |
| H4-07 | Terminal AM Signal Level Select | 0: 0 +10 VDC<br>2: 4-20 mA | 0       |

Figure 12.97 and Figure 12.98 show the gain and bias.

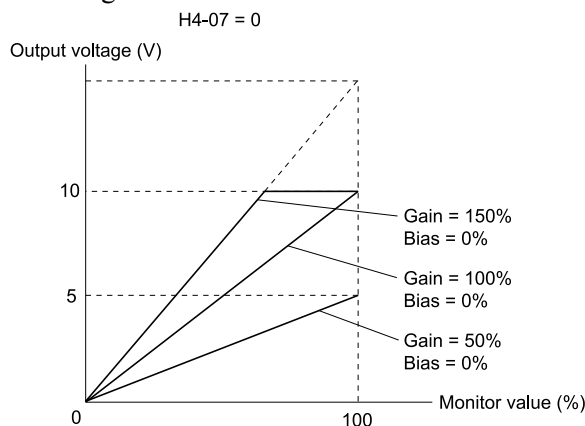


Figure 12.97 Analog Output Gain/Bias Configuration Example 1

For example, when the parameter value set to analog output is 0, and a 3 V signal is to be output to terminal AM, set H4-03 [AM Analog Output Bias] = 30%.



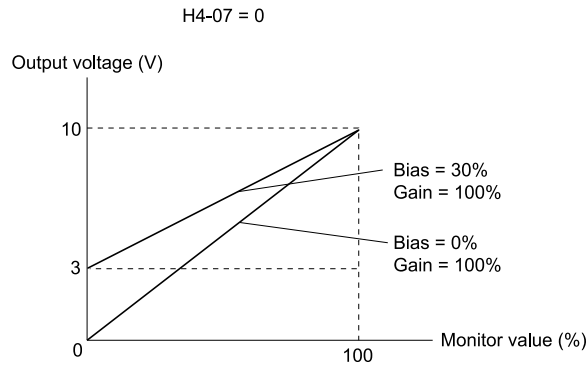


Figure 12.98 Analog Output Gain/Bias Configuration Example 2

**Calibrate Terminal AM**

Stop the drive to calibrate meters. Use this procedure to calibrate:

1. Show *H4-02 [Terminal AM Analog Output Gain]* on the keypad. Terminal AM outputs the analog signal when the monitor item that you set in *H4-01 [Terminal AM Analog Output Select]* is 100%.
2. Adjust *H4-02* while referencing the meter scale connected to terminal AM.
3. Show *H4-03 [Terminal AM Analog Output Bias]* on the keypad. The analog signal at the time when the monitor item selected with *H4-01* is 0% is output from terminal AM.
4. Adjust *H4-03* while referencing the meter scale connected to terminal AM.

**H4-01: Terminal AM Analog Output Select**

| No. (Hex.)   | Name                             | Description   | Default (Range)    |
|--------------|----------------------------------|---|--------------------|
| H4-01 (041D) | Terminal AM Analog Output Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the monitoring number to be output from the MFAO terminal AM. | 102<br>(000 - 999) |

Set the *x-xx* part of the *Ux-xx [Monitor]*. For example, set *H4-01 = 102* to monitor *U1-02 [Output Frequency]*.

**Note:**

- You cannot use all of the monitors in all of the control methods.
- When you use the terminal in through mode, set this parameter to *000* or *031*. You can set the terminal AM output level from the PLC through MEMOBUS/Modbus communications or the communication option.

**H4-02: Terminal AM Analog Output Gain**

| No. (Hex.)          | Name                           | Description  | Default (Range)              |
|---------------------|--------------------------------|--|------------------------------|
| H4-02 (041E)<br>RUN | Terminal AM Analog Output Gain | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain of the monitor signal that is sent from MFAO terminal AM. | 100.0%<br>(-999.9 - +999.9%) |

The analog signal output from the AM terminal is a maximum of 10 V (or 20 mA). Use *H4-07 [Terminal AM Signal Level Select]* to set the signal level.

**H4-03: Terminal AM Analog Output Bias**

| No. (Hex.)          | Name                           | Description  | Default (Range)            |
|---------------------|--------------------------------|--|----------------------------|
| H4-03 (041F)<br>RUN | Terminal AM Analog Output Bias | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the bias of the monitor signal that is sent from MFAO terminal AM. | 0.0%<br>(-999.9 - +999.9%) |

The analog signal output from the AM terminal is a maximum of 10 V (or 20 mA). Use *H4-07 [Terminal AM Signal Level Select]* to set the signal level.

**H4-07: Terminal AM Signal Level Select**

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| H4-07 (0423) | Terminal AM Signal Level Select | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the MFAO terminal AM output signal level. | 0<br>(0, 2)     |

## 12.8 H: Terminal Function Selection

### Note:

Set jumper S5 on the control circuit terminal block accordingly when changing these parameters.

**0 : 0-10V**

**2 : 4 to 20 mA**

### ■ H4-20: Analog Power Monitor 100% Level

| No. (Hex.)   | Name                            | Description   | Default (Range)               |
|--------------|---------------------------------|---|-------------------------------|
| H4-20 (0B53) | Analog Power Monitor 100% Level | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level at 10 V when U1-08 [Output Power] is set for analog output. | 0.00 kW<br>(0.00 - 650.00 kW) |

### Note:

- When H4-20 = 0.00 kW, the output power monitor 10 V level = motor rated power (kW). The setting changes when the A1-02 [Control Method Selection] value changes:
  - A1-02 = 0 [V/f]: E2-11 [Motor Rated Power]
  - A1-02 = 2 [OLV]: E2-11 [Motor Rated Power]
  - A1-02 = 5, 6 [OLV/PM, AOLV/PM]: E5-02 [PM Motor Rated Power]
  - A1-02 = 8 [EZOLV]: E9-07 [Motor Rated Power]

## ◆ H5: Memobus/Modbus Communication

H5 parameters configure the drive to use MEMOBUS/Modbus communications.

You can use the MEMOBUS/Modbus protocol over the RS-485 port (terminals D+ and D-) in the drive to use serial communication with programmable controllers (PLC).

### ■ H5-01: Drive Node Address

| No. (Hex.)   | Name               | Description   | Default (Range)  |
|--------------|--------------------|---|------------------|
| H5-01 (0425) | Drive Node Address | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the communication slave address for drives. | 1FH<br>(0 - FFH) |

### Note:

- Re-energize the drive or set H5-10 = 1 [Modbus Register 0025H Unit Sel = 1 V units] after you change the parameter setting.
- Setting 0 will not let the drive respond to MEMOBUS/Modbus communications.

To enable the drive to communicate with the controller (master) over MEMOBUS/Modbus communications, you must set the drive with a slave address. Set H5-01 ≠ 0.

Set a node address that is different from the master and other slave devices.

### ■ H5-02: Communication Speed Selection

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| H5-02 (0426) | Communication Speed Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the communications speed for MEMOBUS/Modbus communications. | 3<br>(0 - 8)    |

### Note:

Re-energize the drive or set H5-20 = 1 [Communication Parameters Reload = Reload Now] after you change the parameter setting.

**0 : 1200 bps**

**1 : 2400 bps**

**2 : 4800 bps**

**3 : 9600 bps**

**4 : 19.2 kbps**

**5 : 38.4 kbps**

**6 : 57.6 kbps**

**7 : 76.8 kbps**

**8 : 115.2 kbps**

### ■ H5-03: Communication Parity Selection

| No.<br>(Hex.)   | Name                           | Description  | Default<br>(Range) |
|-----------------|--------------------------------|--|--------------------|
| H5-03<br>(0427) | Communication Parity Selection | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the communications parity used for MEMOBUS/Modbus communications. | 0<br>(0 - 2)       |

**Note:**

Re-energize the drive or set  $H5-20 = 1$  [*Communication Parameters Reload = Reload Now*] after you change the parameter setting.

**0 : No parity**

**1 : Even parity**

**2 : Odd parity**

### ■ H5-04: Communication Error Stop Method

| No.<br>(Hex.)   | Name                            | Description   | Default<br>(Range) |
|-----------------|---------------------------------|---|--------------------|
| H5-04<br>(0428) | Communication Error Stop Method | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the motor Stopping Method when the drive detects <i>CE</i> [ <i>MEMOBUS/Modbus Communication Err</i> ] issues. | 3<br>(0 - 3)       |

**0 : Ramp to Stop**

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

**1 : Coast to Stop**

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

**2 : Fast Stop (Use C1-09)**

The drive stops the motor in the deceleration time set in  $C1-09$  [*Fast Stop Time*]. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

**3 : Alarm Only**

The keypad shows *CE* and the drive continues operation. The output terminal set for *Alarm* [ $H2-01$  to  $H2-03 = 10$ ] activates.

### ■ H5-05: Comm Fault Detection Selection

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range) |
|-----------------|--------------------------------|---|--------------------|
| H5-05<br>(0429) | Comm Fault Detection Selection | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the function that detects <i>CE</i> [ <i>Modbus Communication Error</i> ] issues during MEMOBUS/Modbus communications. | 1<br>(0, 1)        |

If the drive does not receive data from the master during the time set in  $H5-09$  [*CE Detection Time*], it will detect a *CE* error.

**0 : Disabled**

Does not detect *CE*. The drive continues operation.

**1 : Enabled**

Detects *CE*. If the drive detects *CE*, it will operate as specified by the setting of  $H5-04$  [*Communication Error Stop Method*].

### ■ H5-06: Drive Transmit Wait Time

| No.<br>(Hex.)   | Name                     | Description  | Default<br>(Range)  |
|-----------------|--------------------------|--|---------------------|
| H5-06<br>(042A) | Drive Transmit Wait Time | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the time to wait to send a response message after the drive receives a command message from the master. | 5 ms<br>(0 - 65 ms) |

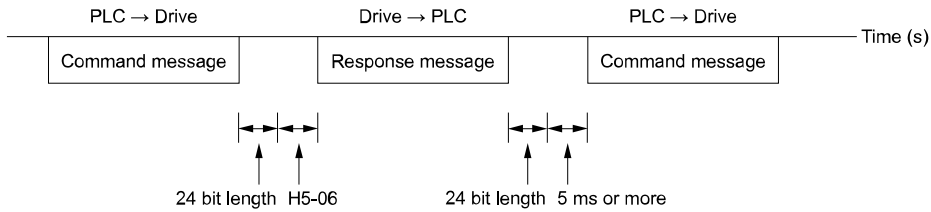


Figure 12.99 Drive Transmit Wait Time

■ H5-09: CE Detection Time

| No. (Hex.)   | Name              | Description   | Default (Range)         |
|--------------|-------------------|---|-------------------------|
| H5-09 (0435) | CE Detection Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the detection time for CE [Modbus Communication Error] issues when communication stops. | 2.0 s<br>(0.0 - 25.0 s) |

■ H5-10: Modbus Register 0025H Unit Sel

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| H5-10 (0436) | Modbus Register 0025H Unit Sel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the unit of measure used for the MEMOBUS/Modbus communications monitor register 0025H (output voltage reference monitor). | 0<br>(0, 1)     |

0 : 0.1 V units

1 : 1 V units

■ H5-11: Comm ENTER Command Mode

| No. (Hex.)       | Name                    | Description  | Default (Range) |
|------------------|-------------------------|--|-----------------|
| H5-11 (043C) RUN | Comm ENTER Command Mode | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to make the Enter command necessary to change parameters through MEMOBUS/Modbus communications. | 0<br>(0, 1)     |

0 : ENTER Command Required

Make all parameter changes then input the Enter command. You must use the Enter command to enable changes to parameters.

1 : ENTER Command Not Required

It is not necessary to input the Enter command to change parameters.

■ H5-12: Run Command Method Selection

| No. (Hex.)   | Name                         | Description   | Default (Range) |
|--------------|------------------------------|---|-----------------|
| H5-12 (043D) | Run Command Method Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the input method for the Run command when b1-02 = 2 [Run Command Selection 1 = Memobus/Modbus Communications] or b1-16 = 2 [Run Command Selection 2 = Memobus/Modbus Communications]. | 0<br>(0, 1)     |

0 : FWD/Stop, REV/Stop

The drive uses bit 0 in command data 0001H of the MEMOBUS register in the motor forward Run command (bit 0 = 1) and the stop command (bit 0 = 0). The drive uses bit 1 in the motor reverse Run command (bit 1 = 1) and the stop command (bit 1 = 0).

1 : Run/Stop, FWD/REV

The drive uses bit 0 in command data 0001H of the MEMOBUS register in the motor Run command (bit 0 = 1) and the stop command (bit 0 = 0). The drive uses bit 1 in the direction of motor rotation command (Forward run (bit1 = 0) or Reverse run (bit 1 = 1)).

### ■ H5-17: ENTER command response @CPU BUSY

| No. (Hex.)             | Name                             | Description   | Default (Range) |
|------------------------|----------------------------------|---|-----------------|
| H5-17 (11A1)<br>Expert | ENTER command response @CPU BUSY | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets operation when the EEPROM write command is sent without EEPROM write available. Usually it is not necessary to change this setting. | 0<br>(0, 1)     |

**0 : Ignore Command(No ROM/RAM Write)**

**1 : Write to RAM Only**

### ■ H5-18: Motor Speed Filter over Comms

| No. (Hex.)   | Name                          | Description  | Default (Range)      |
|--------------|-------------------------------|--|----------------------|
| H5-18 (11A2) | Motor Speed Filter over Comms | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the filter time constant used when monitoring motor speed during MEMOBUS/Modbus communications or with a communication option. | 0 ms<br>(0 - 100 ms) |

Sets the filter time constant when you monitor the output frequency or motor speed during MEMOBUS/Modbus communications or use of the communication option.

These are the MEMOBUS registers:

- 003EH (Output Frequency)
- 003FH (Output Frequency)
- 0044H (U1-05: Motor Speed)
- 00ACH (U1-05: Motor Speed)
- 00ADH (U1-05: Motor Speed)

### ■ H5-20: Communication Parameters Reload

| No. (Hex.)   | Name                            | Description  | Default (Range) |
|--------------|---------------------------------|--|-----------------|
| H5-20 (0B57) | Communication Parameters Reload | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to immediately enable updated MEMOBUS/Modbus communications parameters. | 0<br>(0, 1)     |

**0 : Reload at Next Power Cycle**

**1 : Reload Now**

**Note:**

- The setting value automatically returns to  $H5-20 = 0$  after you enable MEMOBUS/Modbus communications parameter changes.
- The setting values of these parameters are enabled:
  - H5-01 [Drive Node Address]
  - H5-02 [Communication Speed Selection]
  - H5-03 [Communication Parity Selection]
  - H5-06 [Drive Transmit Wait Time]

### ■ H5-22: Speed Search from MODBUS

| No. (Hex.)   | Name                     | Description   | Default (Range) |
|--------------|--------------------------|---|-----------------|
| H5-22 (11CF) | Speed Search from MODBUS | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Enables the MEMOBUS/Modbus communication register Speed Search function (bit0 of 15DFH). | 0<br>(0, 1)     |

**0 : Disabled**

**1 : Enabled**

If you set  $H5-22 = 1$  and  $H1-xx = 62$  [Speed Search from Fref] at the same time, the drive will detect *oPE03* [Multi-Function Input Setting Err].

■ H5-25: Function 5A Register 1 Selection

| No. (Hex.)       | Name                             | Description   | Default (Range)               |
|------------------|----------------------------------|---|-------------------------------|
| H5-25 (1589) RUN | Function 5A Register 1 Selection | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.</p> | 0044H (U1-05) (0000H - FFFFH) |

**Note:**

Refer to [Writing to More than One Holding Register/Reading the Indicated Register on page 213](#) for more information.

■ H5-26: Function 5A Register 2 Selection

| No. (Hex.)       | Name                             | Description   | Default (Range)               |
|------------------|----------------------------------|---|-------------------------------|
| H5-26 (158A) RUN | Function 5A Register 2 Selection | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.</p> | 0045H (U1-06) (0000H - FFFFH) |

**Note:**

Refer to [Writing to More than One Holding Register/Reading the Indicated Register on page 213](#) for more information.

■ H5-27: Function 5A Register 3 Selection

| No. (Hex.)       | Name                             | Description   | Default (Range)               |
|------------------|----------------------------------|---|-------------------------------|
| H5-27 (158B) RUN | Function 5A Register 3 Selection | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.</p> | 0042H (U1-03) (0000H - FFFFH) |

**Note:**

Refer to [Writing to More than One Holding Register/Reading the Indicated Register on page 213](#) for more information.

■ H5-28: Function 5A Register 4 Selection

| No. (Hex.)       | Name                             | Description   | Default (Range)               |
|------------------|----------------------------------|---|-------------------------------|
| H5-28 (158C) RUN | Function 5A Register 4 Selection | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Returns the contents of the specified MEMOBUS/Modbus communications register when responding to the master device.</p> | 0049H (U1-10) (0000H - FFFFH) |

**Note:**

Refer to [Writing to More than One Holding Register/Reading the Indicated Register on page 213](#) for more information.

◆ H6: Pulse Train Input/Output

H6 parameters set the drive pulse train input and pulse train monitor. These parameters select input and monitor parameters and adjust the pulse train frequency.

A pulse train signal with a maximum single pulse of 32 kHz can be input to the drive input terminal RP. You can use the pulse train signal as the frequency reference, PID feedback value, PID setpoint value, and speed feedback for V/f Control mode.

A pulse train signal with a maximum frequency of 32 kHz can be output from the drive output terminal MP as the monitor value. Sinking mode and sourcing mode are supported.

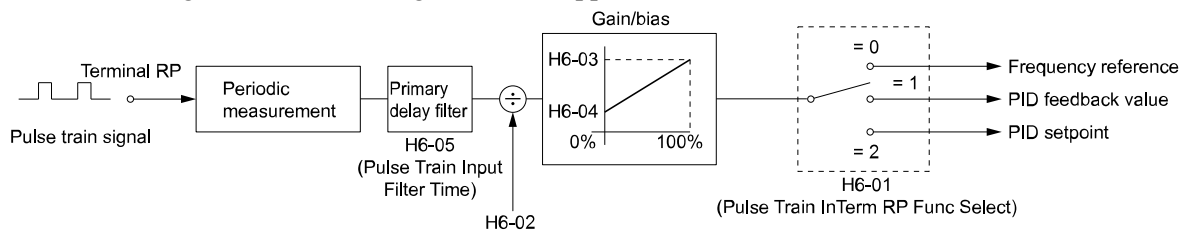


Figure 12.100 Pulse Train Input Block Diagram

## ■ H6-01: Terminal RP Pulse Train Function

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| H6-01 (042C) | Terminal RP Pulse Train Function | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for pulse train input terminal RP. | 0<br>(0 - 3)    |

### 0 : Frequency Reference

When  $b1-01$  [Frequency Reference Selection 1] or  $b1-15$  [Frequency Reference Selection 2] = 4 [Pulse Train Input], the drive inputs the frequency reference received from terminal RP.

### 1 : PID Feedback Value

The drive inputs the PID control feedback value received from terminal RP.

### 2 : PID Setpoint Value

The drive inputs the PID control target value received from terminal RP.

### 3 : Speed Feedback (V/f Control)

Select V/f Control method to enable simple encoder feedback.

Use motor speed feedback for better speed control precision. The drive compares the frequency reference to the motor speed feedback received from the encoder, and uses the ASR function to compensate for motor slip. You cannot use input terminal RP used for the simple encoder to detect the direction of motor rotation. Use a different method to detect motor rotation.

Use these methods to detect the direction of motor rotation.

- Use MFDI

Set MFDI  $H1-xx = 7E$  [Reverse Rotation Identifier]. When the configured terminal is activated, the motor operates in Reverse run. When the terminal is deactivated, the motor operates in Forward run.

Use an encoder that outputs 2-tracks (phase A, B) to detect the direction of motor rotation.

- Use the frequency reference

When you do not use the MFDI, the Forward/Reverse run command is the same as the direction of motor rotation.

Figure 12.101 shows speed control in Simple Closed Loop V/f Mode.

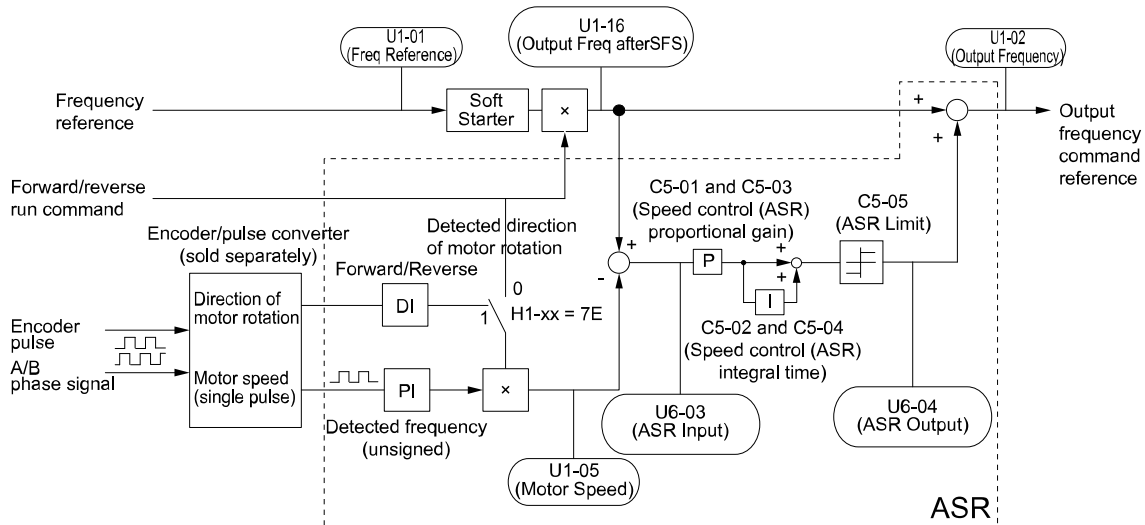


Figure 12.101 Simple Closed Loop Speed Control Block Diagram

### Enable Simple Closed Loop V/f Mode

1. Connect the encoder output pulse wiring to terminal RP.
2. Set  $A1-02 = 0$  [Control Method Selection = V/f Control].
3. Set  $H6-01 = 3$ .
4. Set  $H6-02$  [Terminal RP Frequency Scaling] to the speed feedback (pulse train input signal) frequency at the time when the frequency reference is 100%.  
Make sure that  $H6-04$  [Terminal RP Function Bias] = 0% and  $H6-03$  [Terminal RP Function Gain] = 100%.
5. Select the detection method for the direction of motor rotation.  
When you use an MFDI, set  $H1-xx = 7E$ .
6. Set  $C5$  parameters related to ASR gain and integral time to adjust responsiveness.

## 12.8 H: Terminal Function Selection

**Note:**

- Set  $A1-02 = 0$  and  $H6-01 = 3$  to show  $C5$  parameters.
- You cannot use Closed Loop V/f Control mode with the Motor Switch function.

### ■ H6-02: Terminal RP Frequency Scaling

| No. (Hex.)       | Name                          | Description  | Default (Range)             |
|------------------|-------------------------------|--|-----------------------------|
| H6-02 (042D) RUN | Terminal RP Frequency Scaling | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the frequency of the pulse train input signal used when the item selected with <math>H6-01</math> [Terminal RP Pulse Train Function] is input at 100%.</p> | 1440 Hz<br>(100 - 32000 Hz) |

### ■ H6-03: Terminal RP Function Gain

| No. (Hex.)       | Name                      | Description   | Default (Range)           |
|------------------|---------------------------|---|---------------------------|
| H6-03 (042E) RUN | Terminal RP Function Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain used when the function in <math>H6-01</math> [Terminal RP Pulse Train Function] is input to terminal RP.</p> | 100.0%<br>(0.0 - 1000.0%) |

### ■ H6-04: Terminal RP Function Bias

| No. (Hex.)       | Name                      | Description  | Default (Range)           |
|------------------|---------------------------|--|---------------------------|
| H6-04 (042F) RUN | Terminal RP Function Bias | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the bias used when the function in <math>H6-01</math> [Terminal RP Pulse Train Function] is input to terminal RP. Sets a value at the time when the pulse train is 0 Hz.</p> | 0.0%<br>(-100.0 - 100.0%) |

### ■ H6-05: Terminal RP Filter Time

| No. (Hex.)       | Name                    | Description  | Default (Range)           |
|------------------|-------------------------|--|---------------------------|
| H6-05 (0430) RUN | Terminal RP Filter Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time constant for the pulse train input primary delay filters.</p> | 0.10 s<br>(0.00 - 2.00 s) |

### ■ H6-06: Terminal MP Monitor Selection

| No. (Hex.)       | Name                          | Description  | Default (Range)   |
|------------------|-------------------------------|--|---|
| H6-06 (0431) RUN | Terminal MP Monitor Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets a function for pulse train monitor output terminal MP. Sets the "x-xx" part of the <math>Ux-xx</math> monitor.</p> | 102<br>(000, 031, 101, 102, 105, 116, 501, 502, 801 - 809, 821 - 825, 831 - 839, 851 - 855) |

**Note:**

To use in through mode or when terminal MP is not used, set this parameter to 000 or 031.

When you use the pulse train monitor, make sure that you connect peripheral devices as specified by these load conditions:

Incorrect connections can make the characteristics not sufficient or cause mechanical damage.

- Use the pulse train monitor as the sourcing output.

| Output Voltage VRL(V) | Load Impedance (kΩ) |
|-----------------------|---------------------|
| 5 V or more           | 1.5 kΩ or more      |
| 8 V or more           | 4.0 kΩ or more      |
| 10 V or more          | 10 kΩ or more       |



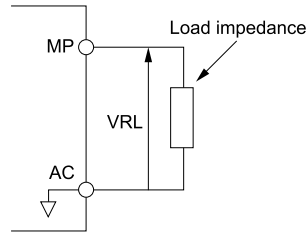


Figure 12.102 Circuit Diagram When Used as the Sourcing Output

- Use the pulse train monitor as the sinking input

|                           |                            |
|---------------------------|----------------------------|
| External Power Supply (V) | 12 VDC ± 10%, 15 VDC ± 10% |
| Sinking current (mA)      | 16 mA or less              |

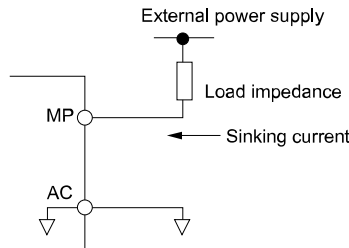


Figure 12.103 Circuit Diagram When Used as the Sinking Input

### ■ H6-07: Terminal MP Frequency Scaling

| No. (Hex.)       | Name                          | Description   | Default (Range)        |
|------------------|-------------------------------|---|------------------------|
| H6-07 (0432) RUN | Terminal MP Frequency Scaling | V/f   OLV   OLV/PM   AOLV/PM   EZOLV<br>Sets the frequency of the pulse train output signal used when the monitor set with H6-06 [Terminal MP Monitor Selection] is 100%. | 1440 Hz (0 - 32000 Hz) |

When H6-06 = 102 [Terminal MP Monitor Selection = Output Frequency] and H6-07 = 0, the pulse train output terminal MP outputs the same frequency as the drive output frequency.

### ■ H6-08: Terminal RP Minimum Frequency

| No. (Hex.)   | Name                          | Description   | Default (Range)          |
|--------------|-------------------------------|---|--------------------------|
| H6-08 (043F) | Terminal RP Minimum Frequency | V/f   OLV   OLV/PM   AOLV/PM   EZOLV<br>Sets the minimum frequency of the pulse train signal that terminal RP can detect. | 0.5 Hz (0.1 - 1000.0 Hz) |

- When you input a pulse train frequency that is less than the value of H6-08, the pulse train input is 0.0 Hz.
- Set H6-01 [Terminal RP Pulse Train Function] = 0 [Frequency Reference], 1 [PID Feedback Value], or 2 [PID Setpoint Value] to enable this parameter.
- When H6-01 = 3 [Speed Feedback (V/F Control)], the drive applies the setting of F1-14 [Encoder Open-Circuit Detect Time] to the minimum frequency.

### ◆ H7: Virtual MFIO Selection

The virtual I/O function performs the following.

- Inputs the result of the output from the MFDO terminal to the MFDI terminal without external wiring.
- Inputs the result of the output from the MFAO terminal to the MFAI terminal without external wiring.

**WARNING!** Sudden Movement Hazard. Before you do a test run, make sure that the setting values for virtual input and output function parameters are correct. Virtual input and output functions can have different default settings and operation than wired input and output functions. Incorrect function settings can cause serious injury or death.

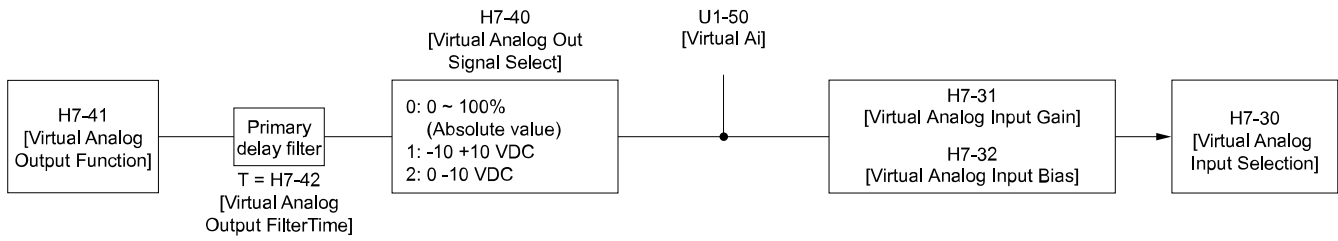


Figure 12.104 Virtual Analog I/O Functional Block Diagram

 


Figure 12.105 Virtual Digital I/O Functional Block Diagram

**Note:**

- Refer to *MFDI Setting Values on page 606* for more information on the virtual digital input functions.
- Refer to *MFDO Setting Values on page 632* for more information on the virtual digital output functions.
- Refer to *Multi-Function Analog Input Terminal Settings on page 650* for more information on the virtual analog input functions.
- Refer to *H4: Analog Outputs on page 656* for more information on the virtual analog output functions.
- You cannot set 0 [3-Wire Sequence] and 20 or 2F [External Fault] to H7-01 to H7-04 [Virtual Multi-Function Input 1 to 4].
- If you do not use virtual I/O, set H7-01 to H7-04 = F. This does not support the through mode.

■ **H7-00: Virtual MFIO selection**

| No. (Hex.)          | Name                   | Description  | Default (Range) |
|---------------------|------------------------|--|-----------------|
| H7-00 (116F) Expert | Virtual MFIO selection | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> <p>Sets the function to enable and disable the virtual I/O function. Set this parameter to 1 to operate the virtual I/O function.</p> | 0 (0, 1)        |

0 : Disabled

1 : Enabled

■ **H7-01: Virtual Multi-Function Input 1**

| No. (Hex.)          | Name                           | Description   | Default (Range) |
|---------------------|--------------------------------|---|-----------------|
| H7-01 (1185) Expert | Virtual Multi-Function Input 1 | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> <p>Sets the function that enters the virtual input set in H7-10 [Virtual Multi-Function Output 1].</p> | F (1 - 19F)     |

■ **H7-02: Virtual Multi-Function Input 2**

| No. (Hex.)          | Name                           | Description   | Default (Range) |
|---------------------|--------------------------------|---|-----------------|
| H7-02 (1186) Expert | Virtual Multi-Function Input 2 | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> <p>Sets the function that enters the virtual input set in H7-12 [Virtual Multi-Function Output 2].</p> | F (1 - 19F)     |

■ **H7-03: Virtual Multi-Function Input 3**

| No. (Hex.)          | Name                           | Description   | Default (Range) |
|---------------------|--------------------------------|---|-----------------|
| H7-03 (1187) Expert | Virtual Multi-Function Input 3 | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> <p>Sets the function that enters the virtual input set in H7-14 [Virtual Multi-Function Output 3].</p> | F (1 - 19F)     |

### ■ H7-04: Virtual Multi-Function Input 4

| No. (Hex.)                | Name                           | Description   | Default (Range) |
|---------------------------|--------------------------------|---|-----------------|
| H7-04<br>(1188)<br>Expert | Virtual Multi-Function Input 4 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function that enters the virtual input set in H7-16 [Virtual Multi-Function Output 4]. | F<br>(1 - 19F)  |

### ■ H7-10: Virtual Multi-Function Output 1

| No. (Hex.)                | Name                            | Description   | Default (Range) |
|---------------------------|---------------------------------|---|-----------------|
| H7-10<br>(11A4)<br>Expert | Virtual Multi-Function Output 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for virtual digital output 1. | F<br>(0 - 1A7)  |

### ■ H7-11: Virtual Output 1 Delay Time

| No. (Hex.)                | Name                        | Description  | Default (Range)         |
|---------------------------|-----------------------------|--|-------------------------|
| H7-11<br>(11A5)<br>Expert | Virtual Output 1 Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the minimum ON time for virtual digital output 1. | 0.1 s<br>(0.0 - 25.0 s) |

### ■ H7-12: Virtual Multi-Function Output 2

| No. (Hex.)                | Name                            | Description   | Default (Range) |
|---------------------------|---------------------------------|---|-----------------|
| H7-12<br>(11A6)<br>Expert | Virtual Multi-Function Output 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for virtual digital output 2. | F<br>(0 - 1A7)  |

### ■ H7-13: Virtual Output 2 Delay Time

| No. (Hex.)                | Name                        | Description  | Default (Range)         |
|---------------------------|-----------------------------|--|-------------------------|
| H7-13<br>(11A7)<br>Expert | Virtual Output 2 Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the minimum ON time for virtual digital output 2. | 0.1 s<br>(0.0 - 25.0 s) |

### ■ H7-14: Virtual Multi-Function Output 3

| No. (Hex.)                | Name                            | Description   | Default (Range) |
|---------------------------|---------------------------------|---|-----------------|
| H7-14<br>(11A8)<br>Expert | Virtual Multi-Function Output 3 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for virtual digital output 3. | F<br>(0 - 1A7)  |

### ■ H7-15: Virtual Output 3 Delay Time

| No. (Hex.)                | Name                        | Description  | Default (Range)         |
|---------------------------|-----------------------------|--|-------------------------|
| H7-15<br>(11A9)<br>Expert | Virtual Output 3 Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the minimum ON time for virtual digital output 3. | 0.1 s<br>(0.0 - 25.0 s) |

### ■ H7-16: Virtual Multi-Function Output 4

| No. (Hex.)                | Name                            | Description   | Default (Range) |
|---------------------------|---------------------------------|---|-----------------|
| H7-16<br>(11AA)<br>Expert | Virtual Multi-Function Output 4 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function for virtual digital output 4. | F<br>(0 - 1A7)  |

■ H7-17: Virtual Output 4 Delay Time

| No. (Hex.)             | Name                        | Description   | Default (Range)         |
|------------------------|-----------------------------|---|-------------------------|
| H7-17 (11AB)<br>Expert | Virtual Output 4 Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum ON time for virtual digital output 4. | 0.1 s<br>(0.0 - 25.0 s) |

■ H7-30: Virtual Analog Input Selection

| No. (Hex.)             | Name                           | Description  | Default (Range) |
|------------------------|--------------------------------|--|-----------------|
| H7-30 (1177)<br>Expert | Virtual Analog Input Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the virtual analog input function. | F<br>(0 - 32)   |

■ H7-31: Virtual Analog Input Gain

| No. (Hex.)                    | Name                      | Description  | Default (Range)             |
|-------------------------------|---------------------------|--|-----------------------------|
| H7-31 (1178)<br>RUN<br>Expert | Virtual Analog Input Gain | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the virtual analog input gain. | 100.0%<br>(-999.9 - 999.9%) |

■ H7-32: Virtual Analog Input Bias

| No. (Hex.)                    | Name                      | Description  | Default (Range)           |
|-------------------------------|---------------------------|--|---------------------------|
| H7-32 (1179)<br>RUN<br>Expert | Virtual Analog Input Bias | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the virtual analog input bias. | 0.0%<br>(-999.9 - 999.9%) |

■ H7-40: Virtual Analog Out Signal Select

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| H7-40 (1163) | Virtual Analog Out Signal Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the signal level of the virtual analog output. | 0<br>(0 - 2)    |

0 : 0 to 100% (Absolute Value)

1 : -100 to 100%

2 : 0 to 100% (Lower Limit at 0)

■ H7-41: Virtual Analog Output Function

| No. (Hex.)   | Name                           | Description  | Default (Range)  |
|--------------|--------------------------------|--|------------------|
| H7-41 (1164) | Virtual Analog Output Function | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the monitor to be output from the virtual analog output. | 102<br>(0 - 999) |

Set the *x-xx* part of the *Ux-xx* [Monitor]. For example, set *H7-41 = 102* to monitor *U1-02* [Output Frequency].

■ H7-42: Virtual Analog Output FilterTime

| No. (Hex.)   | Name                             | Description  | Default (Range)           |
|--------------|----------------------------------|--|---------------------------|
| H7-42 (1165) | Virtual Analog Output FilterTime | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant for a primary filter of the virtual analog output. | 0.00 s<br>(0.00 - 2.00 s) |

## 12.9 L: Protection Functions

*L* parameters set the following functions.

- Motor Overload Protection
- Operation During Momentary Power Loss
- Stall Prevention
- Speed Detection
- Auto Restart
- Detection of Overtorque/Undertorque
- Torque Limit
- Hardware Protection


### ◆ L1: Motor Protection

*L1* parameters set the motor overload protection function.

#### ■ Motor Protection Using Positive Temperature Coefficient (PTC) Thermistors

The temperature resistance characteristics of three PTC thermistors in the motor stator winding protect the motor from overheating.

A PTC thermistor must have the characteristics shown in [Figure 12.106](#) for each motor phase.

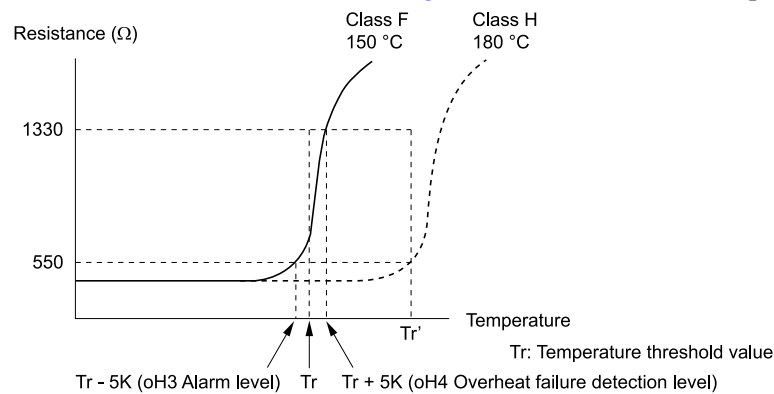

**Figure 12.106 PTC Thermistor Temperature and Resistance**

If the PTC input signal input to the drive is more than the overload alarm level, the drive detects *oH3* [*Motor Overheat (PTC Input)*]. The drive continues the operation set in *L1-03* [*Motor Thermistor oH Alarm Select*]. By default, the keypad shows *oH3* and the drive continues operation.


The overheat fault level triggers an *oH4* [*Motor Overheat Fault (PTC Input)*] fault, and outputs a fault signal. The drive outputs a fault signal and uses the stop method set in *L1-04* [*Motor Thermistor oH Fault Select*] to stop the motor.

**Note:**

PTC is an acronym for Positive Temperature Coefficient.

[Figure 12.107](#) shows the setting procedure when you use terminal A2.

1. Connect the PTC thermistor input from the motor to analog input terminal A2 on the drive.

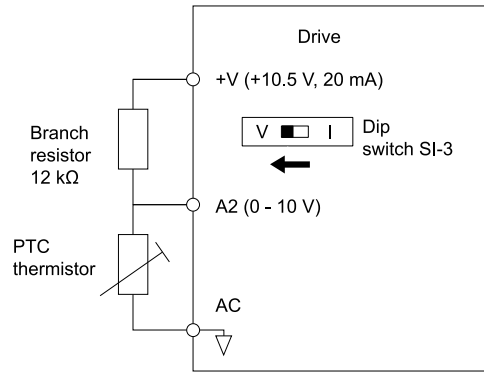

**Figure 12.107 Connect Motor to PTC Thermistor Input**

2. Set drive DIP switch S1-3 to V (voltage).
3. Set these MFAI terminals:
  - H3-09 = 0 [Terminal A2 Signal Level Select = 0-10V (LowLim=0)].
  - H3-10 = E [Terminal A2 Function Selection = Motor Temperature (PTC input)].
4. Set these L1 parameters:
  - L1-03 [Motor Thermistor oH Alarm Select]
  - L1-04 [Motor Thermistor oH Fault Select]
  - L1-05 [Motor Thermistor Filter Time]

**■ L1-01: Motor Overload (oL1) Protection**

| No. (Hex.)   | Name                            | Description   | Default (Range)             |
|--------------|---------------------------------|---|-----------------------------|
| L1-01 (0480) | Motor Overload (oL1) Protection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor overload protection with electronic thermal protectors. | Determined by A1-02 (0 - 6) |

This parameter enables and disables the motor overload protection with electronic thermal protectors. The cooling capability of the motor changes when the speed control range of the motor changes. Use an electronic thermal protector that aligns with the permitted load characteristics of the motor to select motor protection. The electronic thermal protector of the drive uses these items to calculate motor overload tolerance and supply overload protection for the motor:


- Output Current
- Output Frequency
- Motor thermal characteristics
- Time characteristics

If the drive detects motor overload, the drive will trigger an oL1 [Motor Overload] and stop the drive output. Set H2-01 = 1F [Term MA/MB-MC Function Selection = Motor Overload Alarm (oL1)] to set a motor overload alarm. If the motor overload level is more than 90% of the oL1 detection level, the output terminal activates and triggers an overload alarm.

**0 : Disabled**

Disable motor protection when motor overload protection is not necessary or when the drive is operating more than one motor.

Refer to [Figure 12.108](#) for an example of the circuit configuration to connect more than one motor to one drive.

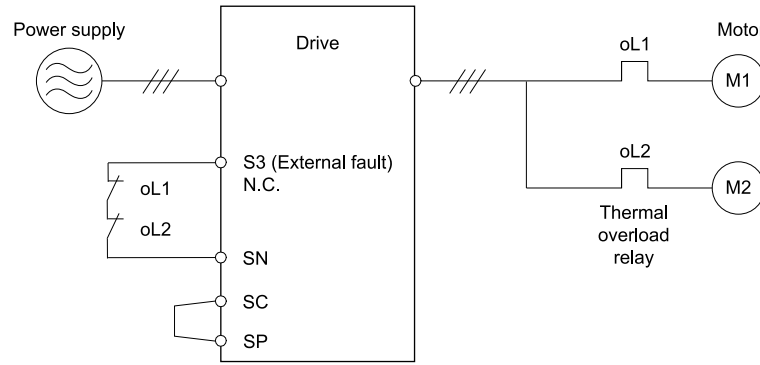

**Figure 12.108 Protection Circuit Configuration to Connect More than One Motor to One Drive**

**NOTICE:** When you connect more than one motor to one drive or when the motor amp rating is higher than the drive amp rating, set L1-01 = 0 [Motor Overload (oL1) Protection = Disabled] and install thermal overload relays for each motor. The electronic thermal protection of the drive will not function and it can cause damage to the motor.

**1 : Variable Torque**

Use this setting for general-purpose motors with a 60 Hz base frequency.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protector. This provides motor overheat protection from low speed to high speed across the full speed range.

| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)   |
|----------------|---|---|
|                | <p>This motor is designed to operate with commercial line power. Operate at a 60 Hz base frequency to maximize the motor cooling ability.</p> | <p>If the motor operates at frequencies less than 60 Hz, the drive will detect oL1. The drive triggers a fault relay output and the motor coasts to stop.</p> |

**2 : Constant Torque 10:1 Speed Range**

Use this setting for drive-dedicated motors with a speed range for constant torque of 1:10.

The speed control for this motor is 10% to 100% when at 100% load. Operating slower than 10% speed at 100% load will cause motor overload.

| Load Tolerance | Cooling Capability   | Overload Characteristics (at 100% motor load)   |
|----------------|--|---|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation in the low speed range (10% base frequency).</p> | <p>The motor operates continuously at 10% to 100% base frequency. Operating slower than 10% speed at 100% load will cause motor overload.</p> |

**3 : Constant Torque 100:1 SpeedRange**

Use this setting for vector motors with a speed range for constant torque of 1:100.

Parameter Details

## 12.9 L: Protection Functions

The speed control for this motor is 1% to 100% when at 100% load. Operating slower than 1% speed at 100% load will cause motor overload.

| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)   |
|----------------|---|---|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation in the low speed range (1% base frequency).</p> | <p>The motor operates continuously at 1% to 100% base frequency. Operating slower than 1% speed at 100% load will cause motor overload.</p> |

### 4 : PM Variable Torque

Use this setting for PM motors with derated torque characteristics.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protector. This provides motor overheat protection from low speed to high speed across the full speed range.

| Load Tolerance | Cooling Capability   | Overload Characteristics (at 100% motor load)  |
|----------------|--|--|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation at rated speed and rated torque.</p> | <p>If the motor operates continuously at lower speed than rated rotation speed at more than 100% torque, the drive will detect <i>oLI</i>. The drive triggers a fault relay output and the motor coasts to stop.</p> |

### 5 : PM Constant Torque

Use this setting with a PM motor for constant torque that has a speed range for constant torque of 1:500.

The speed control for this motor is 0.2% to 100% when at 100% load. Operating slower than 0.2% speed at 100% load will cause motor overload.

| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)  |
|----------------|---|--|
|                | <p>This motor is designed to withstand increased temperatures during continuous operation in the low speed range (0.2% base frequency).</p> | <p>The motor operates continuously at 0.2% to 100% rated speed. Operating slower than 0.2% speed at 100% load will cause motor overload.</p> |

### 6 : Variable Torque (50Hz)

Use this setting for general-purpose motors with a 50 Hz base frequency.

The overload tolerance decreases as motor speed decreases because the cooling fan speed decreases and the ability of the motor to cool decreases in the low speed range.

The overload tolerance characteristics of the motor change the trigger point for the electronic thermal protector. This provides motor overheat protection from low speed to high speed across the full speed range.



| Load Tolerance | Cooling Capability  | Overload Characteristics (at 100% motor load)  |
|----------------|---|--|
|                | <p>This motor is designed to operate with commercial line power. Operate at a 50 Hz base frequency to maximize the motor cooling ability.</p> | <p>If the motor operates at frequencies less than commercial line power, the drive will detect <i>oLI</i>. The drive triggers a fault relay output and the motor coasts to stop.</p> |

**L1-02: Motor Overload Protection Time**

| No. (Hex.)   | Name                           | Description   | Default (Range)         |
|--------------|--------------------------------|---|-------------------------|
| L1-02 (0481) | Motor Overload Protection Time | <p><b>V/F OLV OLV/PM AOLV/PM EZOLV</b></p> <p>Sets the operation time for the electronic thermal protector of the drive to prevent damage to the motor. Usually it is not necessary to change this setting.</p> | 1.0 min (0.1 - 5.0 min) |

Set the overload tolerance time to the length of time that the motor can operate at 150% load from continuous operation at 100% load.

When the motor operates at 150% load continuously for 1 minute after continuous operation at 100% load (hot start), the default setting triggers the electronic thermal protector.

Figure 12.109 shows an example of the electronic thermal protector operation time. Motor overload protection operates in the range between a cold start and a hot start.

This example shows a general-purpose motor operating at the base frequency with *L1-02* set to 1.0 min.

- Cold start  
Shows the motor protection operation time characteristics when the overload occurs immediately after starting operation from a complete stop.
- Hot start  
Shows the motor protection operation time characteristics when overload occurs from continuous operation below the motor rated current.

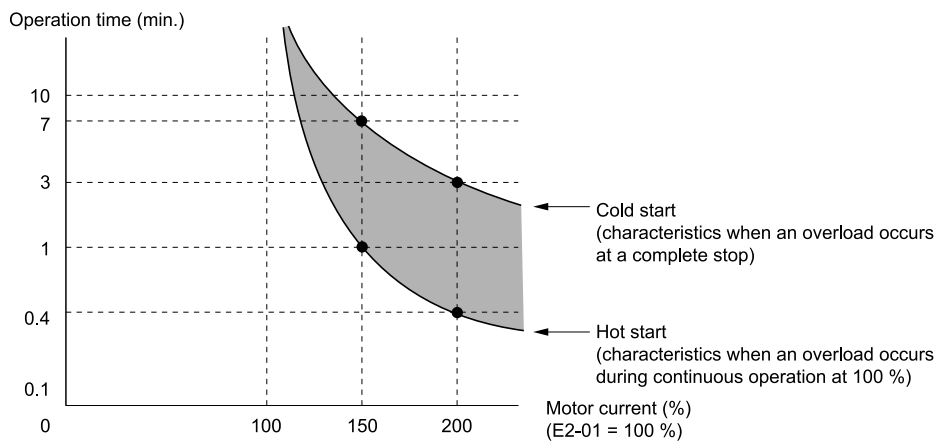


Figure 12.109 Protection Operation Time for a General-purpose Motor at Rated Output Frequency

**L1-03: Motor Thermistor oH Alarm Select**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| L1-03 (0482) | Motor Thermistor oH Alarm Select | <p><b>V/F OLV OLV/PM AOLV/PM EZOLV</b></p> <p>Sets drive operation when the PTC input signal entered into the drive is at the <i>oH3 [Motor Overheat Alarm]</i> detection level.</p> | 3 (0 - 3)       |

**0 : Ramp to Stop**

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**1 : Coast to Stop**

The output turns off and the motor coasts to stop. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**2 : Fast Stop**

The drive stops the motor in the deceleration time set in *C1-09 [Fast Stop Time]*. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**3 : Alarm Only**

The keypad shows *oH3* and the drive continues operation. The output terminal set for *Alarm [H2-01 to H2-03 = I0]* activates.

**■ L1-04: Motor Thermistor oH Fault Select**

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| L1-04 (0483) | Motor Thermistor oH Fault Select | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the drive operation when the PTC input signal to the drive is at the <i>oH4 [Motor Overheat Fault (PTC Input)]</i> detection level.</p> | 1 (0 - 2)       |

**0 : Ramp to Stop**

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**1 : Coast to Stop**

The output turns off and the motor coasts to stop. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**2 : Fast Stop**

The drive stops the motor in the deceleration time set in *C1-09 [Fast Stop Time]*. The output terminal set for *Fault [H2-01 to H2-03 = E]* activates.

**■ L1-05: Motor Thermistor Filter Time**

| No. (Hex.)   | Name                         | Description  | Default (Range)         |
|--------------|------------------------------|--|-------------------------|
| L1-05 (0484) | Motor Thermistor Filter Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the primary delay time constant for the PTC input signal entered to the drive. This parameter prevents accidental motor overheat faults.</p> | 0.20 s (0.00 - 10.00 s) |

**■ L1-08: oL1 Current Level**

| No. (Hex.)   | Name              | Description   | Default (Range)   |
|--------------|-------------------|---|---|
| L1-08 (1103) | oL1 Current Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the reference current for the motor 1 thermal overload detection. When the current level &gt; 0.0 A, you cannot set this value &lt; 10% of drive rated current.</p> | 0.0 A (0.0 A or 10% to 150% of the drive rated current) |

When *L1-08 = 0.0 A*, the drive uses *E2-01 [Motor Rated Current (FLA)]* to detect the motor overload protection. In PM control mode, the drive uses *E5-03 [PM Motor Rated Current (FLA)]* to detect the motor overload protection.

When *L1-08 ≠ 0.0 A*, the set value is the reference for motor overload protection.

**Note:**

- Display is in these units:  
 -0.01 A: B001 to B018, 2001 to 2042, 4001 to 4023  
 -0.1 A: 2056 to 2082, 4031 to 4060
- When the current level > 0.0 A, you cannot set this value < 10% of drive rated current.

**■ L1-09: oL1 Current Level for Motor 2**

| No. (Hex.)   | Name                          | Description   | Default (Range)  |
|--------------|-------------------------------|---|--|
| L1-09 (1104) | oL1 Current Level for Motor 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the reference current for the motor 2 thermal overload detection. When the current level &gt; 0.0 A, you cannot set this value &lt; 10% of drive rated current.</p> | 0.0 A (0.0 A or 10 to 150% of the drive rated current) |

When  $L1-09 = 0.0 A$ , the drive uses  $E4-01$  [Motor 2 Rated Current] to detect the motor overload protection.  
 When  $L1-09 \neq 0.0 A$ , the set value is the reference for motor overload protection.

**Note:**

- Display is in these units:  
 –0.01 A: B001 to B018, 2001 to 2042, 4001 to 4023  
 –0.1 A: 2056 to 2082, 4031 to 4060
- When the current level > 0.0 A, you cannot set this value < 10% of drive rated current.

### ■ L1-13: Motor Overload Memory Selection

| No.<br>(Hex.)   | Name                            | Description   | Default<br>(Range) |
|-----------------|---------------------------------|---|--------------------|
| L1-13<br>(046D) | Motor Overload Memory Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function that keeps the current electronic thermal protector value when the drive stops receiving power. | 1<br>(0, 1)        |

**0 : Disabled**

**1 : Enabled**

Sets if the drive will calculate the motor again when the drive is energized again.

### ■ L1-22: Leakage Current Filter Time1

| No.<br>(Hex.)          | Name                         | Description  | Default<br>(Range)                    |
|------------------------|------------------------------|--|---------------------------------------|
| L1-22<br>(0768)<br>RUN | Leakage Current Filter Time1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the leakage current detection reduction filter time constant during constant speed run. | Determined by C6-02<br>(0.0 - 60.0 s) |

**Note:**

You can set this parameter when  $C6-02 = B$  [Carrier Frequency Selection = Leakage Current Detection Reduction Rate PWM].

If incorrect detection of alarms, for example  $oL1$  [Motor Overload], occur or errors occur in the values on the current monitor because of a leakage current, increase the setting value.

### ■ L1-23: Leakage Current Filter Time2

| No.<br>(Hex.)          | Name                         | Description   | Default<br>(Range)                    |
|------------------------|------------------------------|---|---------------------------------------|
| L1-23<br>(0769)<br>RUN | Leakage Current Filter Time2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the leakage current detection reduction filter time constant during acceleration/deceleration. | Determined by C6-02<br>(0.0 - 60.0 s) |

**Note:**

- You can set this parameter when  $C6-02 = B$  [Carrier Frequency Selection = Leakage Current Detection Reduction Rate PWM].
- When the setting value increases, the current monitor will start up slowly. Examine the relevant sequence for problems.

If errors occur in the values on the current monitor during acceleration/deceleration, increase the setting value.

## ◆ L2: Power Loss Ride Through

$L2$  parameters set the drive operation during momentary power loss and the KEB Ride-Thru function method of operation.

### ■ KEB Ride-Thru Function

KEB is an acronym for Kinetic Energy Backup. If the drive detects a power loss or momentary power loss, it will quickly decelerate the motor. The drive uses regenerative energy from the motor to keep the main circuit operating. When you return power during motor deceleration, the drive returns operation to the status before the power loss. The KEB Ride-Thru function is different than other functions for continuous operation. If the drive detects momentary power loss, the motor will ramp to stop. It will not coast to stop. This function is applicable for applications in which it is necessary to prevent materials from running out, for example control for film and fiber lines.

The KEB Ride-Thru function has 4 methods of operation. Parameter  $L2-29$  [Kinetic Energy Backup Method] sets the method.

When you use the KEB Ride-Thru function with one drive, set  $L2-29 = 0, 1$  [Single Drive KEB Ride-Thru 1, Single Drive KEB Ride-Thru 2].

If deceleration in coordination with more than one drive is necessary, for example textile machinery line systems, set  $L2-29 = 2, 3$  [System KEB Ride-Thru 1, System KEB Ride-Thru 2].

**Table 12.66 KEB Ride-Thru Function Operation Method**

| L2-29 | Kinetic Energy Backup Method | Operation  | Configuration Precautions  |
|-------|------------------------------|--|--|
| 0     | Single Drive KEB Ride-Thru 1 | The drive uses regenerative energy from the motor to keep the DC bus voltage at the level set in $L2-11$ [KEB DC Bus Voltage Setpoint] while it adjusts the rate of deceleration.<br>The KEB operation continues while the drive adjusts the deceleration rate with the setting of $C1-09$ [Fast Stop Time]. | <ul style="list-style-type: none"> <li>Set <math>C1-09</math> correctly to prevent <math>Uv1</math> [DC Bus Undervoltage] and <math>ov</math> [Overvoltage].</li> <li>If the drive detects <math>Uv1</math> during the KEB operation, decrease the value set in <math>C1-09</math>.</li> <li>If the drive detects <math>ov</math> during the KEB operation, increase the value set in <math>C1-09</math>.</li> </ul> |
| 1     | Single Drive KEB Ride-Thru 2 | The drive uses information about the inertia of the connected machinery to find the deceleration rate necessary to keep the DC bus voltage at the level set in parameter $L2-11$ .<br>The drive uses system inertia to calculate the deceleration time. You cannot adjust this value.                        | <ul style="list-style-type: none"> <li>If the drive detects <math>Uv1</math> during the KEB operation, increase the setting value of <math>L3-20</math> [DC Bus Voltage Adjustment Gain] and <math>L3-21</math> [OV Suppression Accel/Decel P Gain].</li> <li>If the drive detects <math>ov</math> during the KEB operation, decrease the setting values of <math>L3-20</math> and <math>L3-21</math>.</li> </ul>    |
| 2     | System KEB Ride-Thru 1       | The drive does not monitor the DC bus voltage. The drive decelerates at the KEB deceleration time set in $L2-06$ .<br>Use $L2-06$ to set the time necessary to decelerate from the current frequency reference to 0 Hz. More than one drive can decelerate and keep a constant speed ratio between drives.   | Use the dynamic braking option with System KEB Ride-Thru 1.  |
| 3     | System KEB Ride-Thru 2       | The drive uses the KEB deceleration time set in $L2-06$ to decelerate and it also monitors the DC bus voltage.<br>If the voltage level increases, the drive momentarily holds the frequency to prevent an $ov$ before it continues to decelerate.  | If you cannot use the dynamic braking option, use System KEB Ride-Thru 2.  |

■ **KEB Ride Thru Start**


When  $L2-01 = 3, 4, 5$  [Power Loss Ride Through Select = Kinetic Energy Backup: L2-02, Kinetic Energy Backup: CPU Power, Kinetic Energy Backup: DecelStop], the drive starts the KEB operation immediately after it detects a momentary power loss. When one of these conditions occur, the drive will activate KEB Ride-Thru:

- KEB Ride-Thru 1 set for the MFDI terminal becomes enabled (terminal is deactivated when  $H1-xx = 65$  or terminal is activated when  $H1-xx = 66$ ).  
The drive uses the mode selected  $L2-29$  [Kinetic Energy Backup Method] to start KEB operation.
- KEB Ride-Thru 2 set for the MFDI terminal becomes enabled (terminal is deactivated when  $H1-xx = 7A$  or terminal is activated when  $H1-xx = 7B$ ).  
The drive automatically starts Single KEB Ride-Thru 2 and it ignores the setting of  $L2-29$ .
- The DC bus voltage is less than the level set in  $L2-05$  [Undervoltage Detection Lvl ( $Uv1$ )].  
The KEB operation will start as specified in  $L2-29$ .

**Note:**

If you try to set KEB Ride-Thru 1 and 2 to the MFDI terminals at the same time, it will trigger  $oPE03$  [Multi-Function Input Setting Err].

In this example, the drive detects that the DC bus voltage is less than the level set in  $L2-05$  and starts the KEB operation. When you return power during KEB operation, the drive will continue KEB operation when the KEB Ride-Thru is input, although the time set in  $L2-10$  [Minimum KEB Time] expired. The motor accelerates again after you cancel the KEB Ride-Thru.

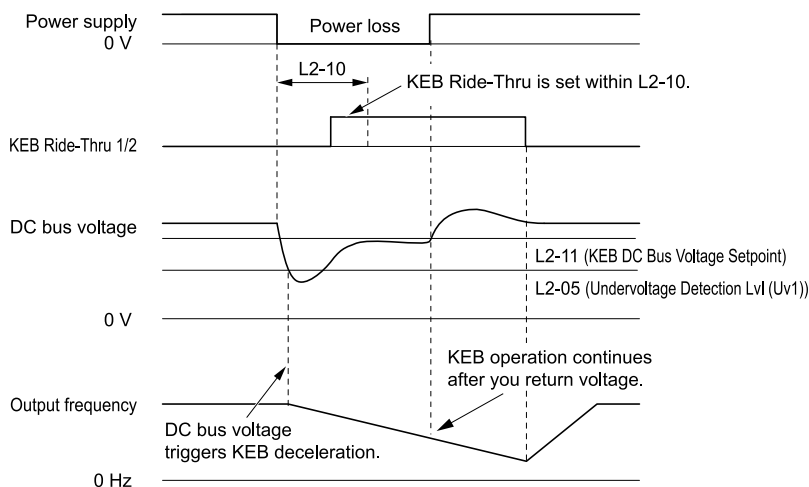

**Figure 12.110 KEB Operation through KEB Ride-Thru Input**

## ■ KEB Ride-Thru End Detection

Parameter *L2-01 [Power Loss Ride Through Select]* and a digital input programmed for KEB set the KEB function end detection.


### Use the Momentary Power Loss Ride-Thru Time to Cancel KEB Operation

shows an example with this configuration:

- *L2-01 = 3 [Kinetic Energy Backup: L2-02]* is set.
- KEB Ride-Thru is not used.

The drive starts deceleration through KEB operation. When the time set in *L2-10 [Minimum KEB Time]* expires, the drive stops the KEB operation and then it accelerates the motor again until it is at the frequency reference value used before the power loss.

If you do not return the DC bus voltage in the time set in *L2-02 [Power Loss Ride Through Time]*, the drive detects *Uv1 [DC Bus Undervoltage]* and the drive turns off its output.

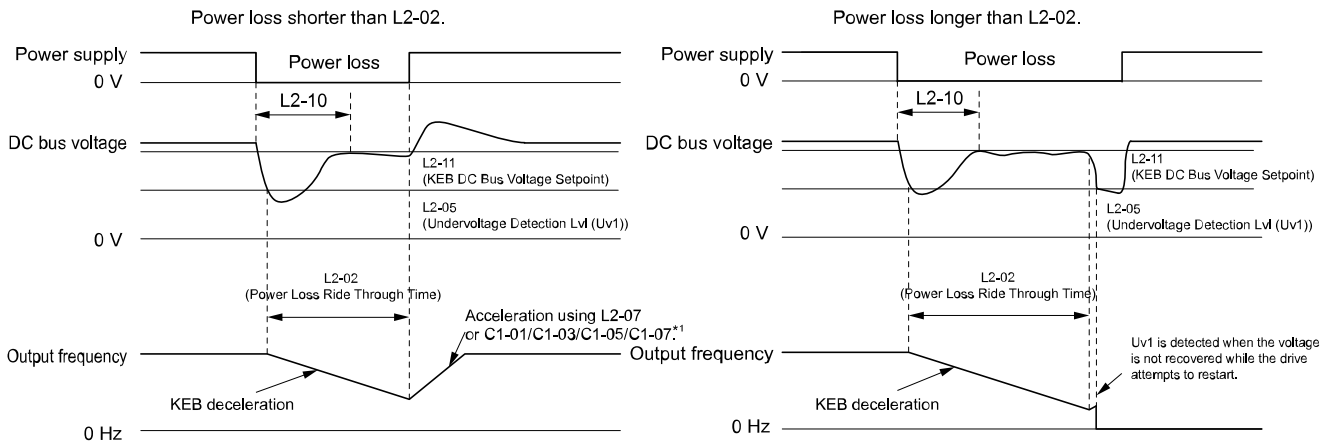

**Figure 12.111 Cancel the KEB Operation after the Momentary Power Loss Ride-Thru Time Is Expired without KEB Ride-Thru**


- \*1 When *L2-07 = 0.00 [Kinetic Energy Backup Accel Time = 0.00 s]*, the drive accelerates again as specified by the applicable *Acceleration Time [C1-01, C1-03, C1-05, C1-07]*, and usual operation continues.

### Use the Momentary Power Loss Ride-Thru Time and KEB Ride-Thru to Cancel KEB Operation

shows an example with this configuration:

- *L2-01 = 3*.
- Use *KEB Ride-Thru 1 [H1-xx = 65, 66]* or *KEB Ride-Thru 2 [H1-xx = 7A, 7B]*.

The drive starts deceleration through KEB operation. The drive decelerates for the time set in parameter *L2-10*, then it measures the DC bus voltage and the status of the digital input terminal set for KEB Ride-Thru. When the DC bus voltage is less than the level set in *L2-11 [KEB DC Bus Voltage Setpoint]*, or if the KEB digital input is active, KEB deceleration continues. When the DC bus voltage is more than the level set in *L2-11*, the drive ends KEB operation. The drive accelerates the motor to the frequency reference value before the power loss, and usual operation continues. If the time set in *L2-02* is expired, the drive detects *Uv1*. When you cancel the KEB Ride-Thru, the motor accelerates again, and usual operation continues.

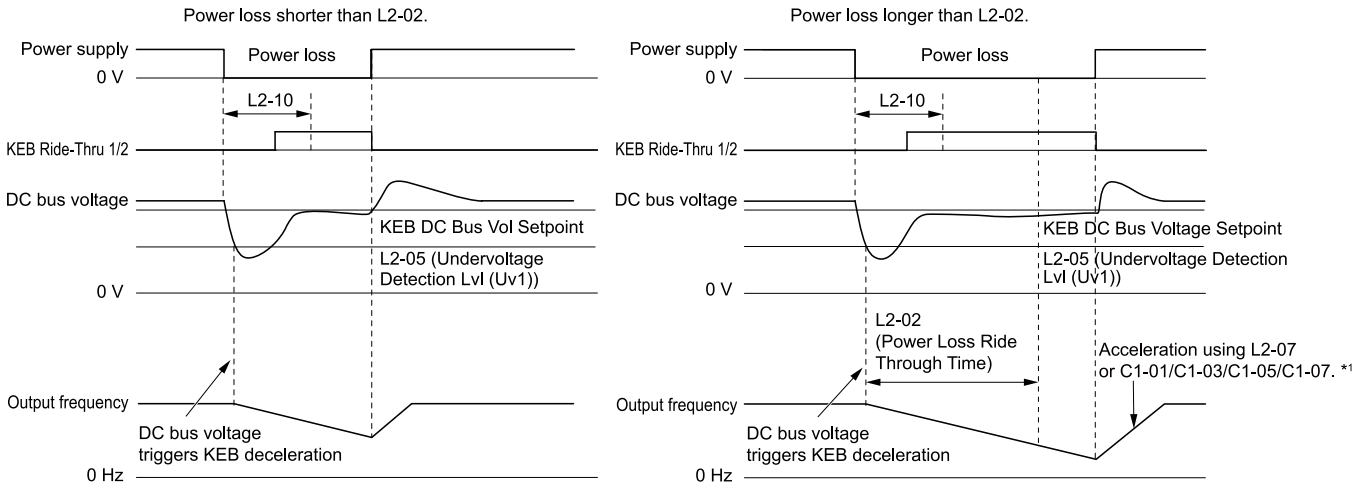

**Figure 12.112 Use the Momentary Power Loss Ride-Thru Time and KEB Ride-Thru to Cancel KEB Operation**


\*1 When L2-07 = 0.00, the drive accelerates again as specified by the applicable *Acceleration Time* [C1-01, C1-03, C1-05, C1-07], and usual operation continues.

**Cancel KEB Operation When Restoration of Power Occurs while the Control Power (Power Supply to the Control Board) is Maintained**

shows an example with this configuration:

- L2-01 = 4 [Kinetic Energy Backup: CPU Power] is set.
- KEB Ride-Thru is not used.

The drive starts deceleration through KEB operation. The drive decelerates for the time set in parameter L2-10, and then measures the DC bus voltage level. When the DC bus voltage is lower than the level set in L2-11, the drive uses the KEB Ride-Thru function to continue deceleration. When the DC bus voltage is more than the level set in L2-11, usual operation continues. The drive accelerates the motor to the frequency reference value before the power loss, and usual operation continues.

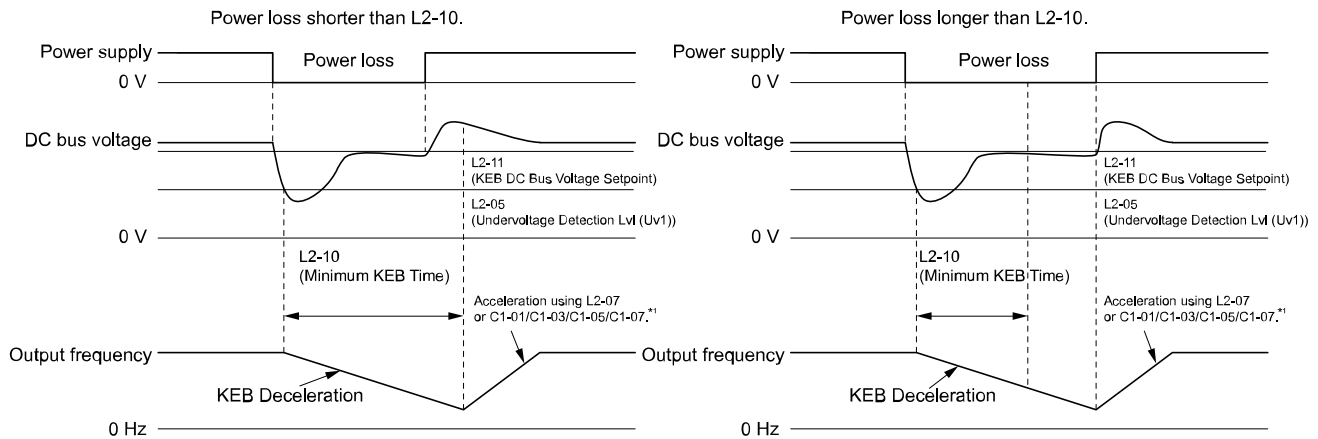

**Figure 12.113 Cancel KEB Operation without Using the KEB Ride-Thru if Restoration of Power Occurs while the Control Power (Power Supply to the Control Board) is Maintained**

\*1 When L2-07 = 0.00 s, the drive accelerates again as specified by the applicable *Acceleration Time* [C1-01, C1-03, C1-05, C1-07], and usual operation continues.


**Use the KEB Ride-Thru to Cancel KEB Operation when Restoration of Power Occurs while the Control Power (Power Supply to the Control Board) is Maintained**

shows an example with this configuration:

- L2-01 = 4.
- Use *KEB Ride-Thru 1* [H1-xx = 65, 66] or *KEB Ride-Thru 2* [H1-xx = 7A, 7B].

The drive starts deceleration through KEB operation. When the motor decelerates for the time set in L2-10, the drive measures the DC bus voltage and the status of the digital input set for KEB Ride-Thru. When the DC bus voltage is less than the level set in L2-11, or if the digital input set to KEB Ride-Thru is active, deceleration continues. When the DC bus voltage is more than the level set in L2-11, the drive ends KEB operation. The drive accelerates the motor to the frequency reference value before the power loss, and usual operation continues. When the KEB Ride-Thru continues to be input after the time set in L2-02 is expired, the drive uses the KEB Ride-Thru

function to continue to decelerate. When you cancel the KEB Ride-Thru, the motor accelerates again, and usual operation continues.

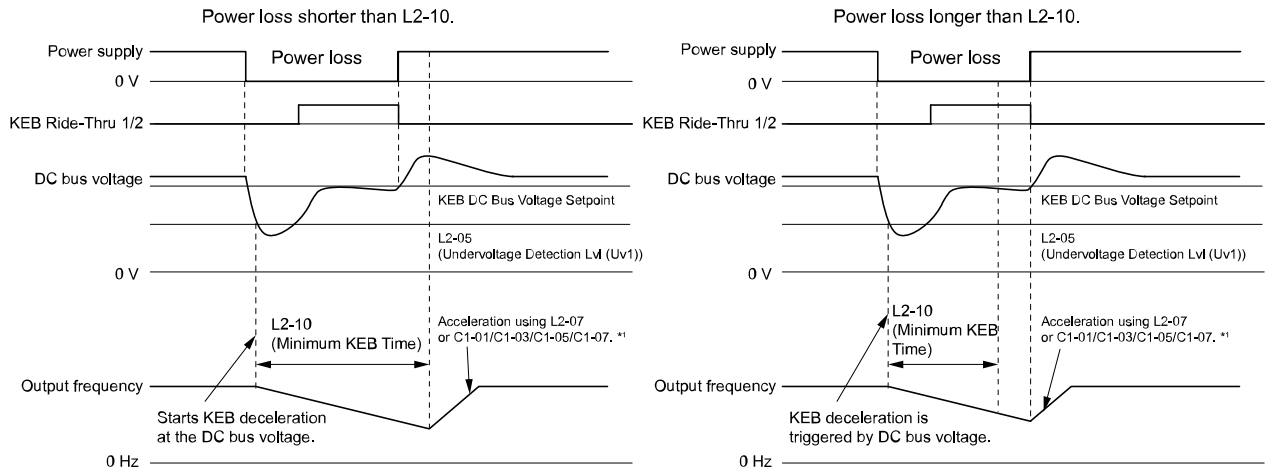

**Figure 12.114 Use the KEB Ride-Thru to Cancel KEB Operation when Restoration of Power Occurs while the Control Power (Power Supply to the Control Board) is Maintained**

\*1 When  $L2-07 = 0.00\text{ s}$ , the drive accelerates again as specified by the applicable *Acceleration Time* [C1-01, C1-03, C1-05, C1-07], and usual operation continues.

**KEB Operation when L2-01 = 5 [Kinetic Energy Backup: DecelStop]**


The drive starts deceleration through KEB operation. If you do not input the Run command, the motor cannot restart. The drive will continue to decelerate until the motor comes to the minimum output frequency or a complete stop. If you return power during deceleration, the drive continues to decelerate.

**KEB Operation Wiring Example**

Figure 12.115 shows an example that uses an undervoltage relay to trigger the KEB Ride-Thru at power loss. When a power loss occurs, the undervoltage relay triggers *KEB Ride-Thru* [H1-06 = 65, 66, 7A, 7B] at terminal S6.

**Note:**

- Configure the drive to turn ON the Run command while the KEB function is operating. If you turn off the Run command, the drive will not accelerate back to speed when you return power.
- A dynamic braking option is necessary for *System KEB Ride-Thru 1* [L2-29 = 2].

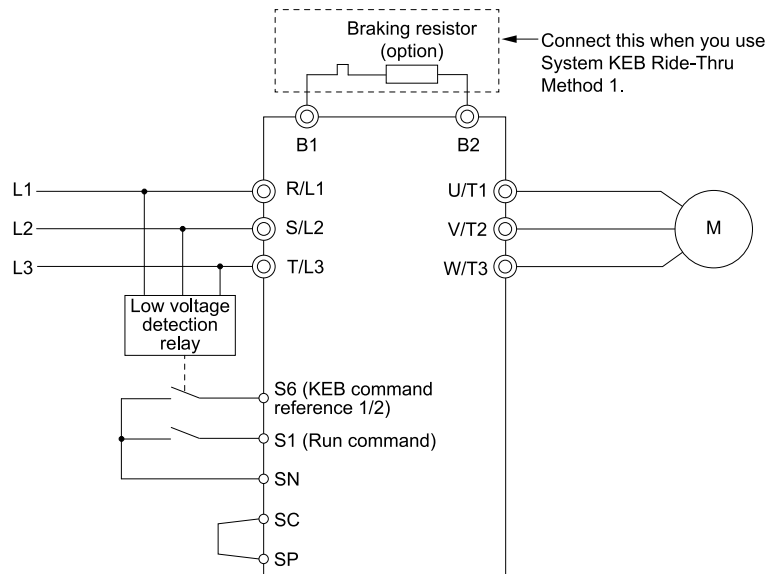

**Figure 12.115 KEB Function Wiring Example**

**Parameters for KEB Ride-Thru**

Table 12.67 shows the parameters that adjust the KEB Ride-Thru function. Parameter settings are different for the different KEB methods set in L2-29 [Kinetic Energy Backup Method].

**Table 12.67 Parameters for KEB Ride-Thru**

| No.   | Name                             | Configuring Settings   | L2-29 [Kinetic Energy Backup Method] |      |      |      |
|-------|----------------------------------|--|--------------------------------------|------|------|------|
|       |                                  |  | 0                                    | 1    | 2    | 3    |
| C1-09 | Fast Stop Time                   | <ul style="list-style-type: none"> <li>If <i>ov</i> [Overvoltage] occurs during KEB deceleration, increase the setting value.</li> <li>If <i>Uv1</i> [DC Bus Undervoltage] occurs during KEB deceleration, decrease the setting value.</li> </ul>  | x *1                                 | -    | -    | -    |
| C2-03 | S-Curve Time @ Start of Decel    | <ul style="list-style-type: none"> <li>If <i>ov</i> occurs immediately after you start KEB deceleration, increase the setting value.</li> <li>If <i>Uv1</i> occurs immediately after you start KEB deceleration, decrease the setting value.</li> </ul>  | x                                    | -    | x    | x    |
| L2-05 | Undervoltage Detection Lvl (Uv1) | If <i>Uv1</i> occurs immediately after you start KEB deceleration, increase the setting value to detect power loss more quickly.   | x                                    | x    | x    | x    |
| L2-06 | Does KEB Tuning.                 | <ul style="list-style-type: none"> <li>Kinetic Energy Backup Decel Time</li> <li>If <i>ov</i> or <i>Uv1</i> occur during KEB deceleration after KEB Tuning, set <i>L2-06</i> in these conditions:                             <ul style="list-style-type: none"> <li>If <i>ov</i> occurs, increase the setting value</li> <li>If <i>Uv1</i> occurs, decrease the setting value.</li> </ul> </li> </ul> | -                                    | -    | x *2 | x *2 |
| L2-07 | Kinetic Energy Backup Accel Time | Sets the acceleration time to return to the frequency reference value before a power loss, after you cancel the KEB operation. When <i>L2-07</i> = 0, the drive uses the standard acceleration times set in <i>C1-01</i> , <i>C1-03</i> , <i>C1-05</i> , and <i>C1-07</i> [Acceleration Time].   | x                                    | x    | x    | x    |
| L2-08 | Frequency Gain at KEB Start      | <ul style="list-style-type: none"> <li>If <i>ov</i> occurs immediately after you start operation, decrease the setting value.</li> <li>If <i>Uv1</i> occurs immediately after you start operation, increase the setting value.</li> </ul>  | x                                    | -    | x    | x    |
| L2-10 | Minimum KEB Time                 | <ul style="list-style-type: none"> <li>With KEB Ride-Thru<br/>There is <i>Uv1</i> because you set a digital input for KEB Ride-Thru and the device that controls the input operated too slowly after power loss.</li> <li>Without KEB Ride-Thru<br/>If the DC bus voltage overshoots immediately after KEB Ride-Thru starts, increase <i>L2-10</i> to longer than the overshoot.</li> </ul>            | x                                    | x    | x    | x    |
| L2-11 | KEB DC Bus Voltage Setpoint      | <ul style="list-style-type: none"> <li>Single Drive KEB Ride-Thru 2<br/>Set to approximately 1.22 x input voltage.</li> <li>Single Drive KEB Ride-Thru 1, System KEB Ride-Thru 1, or System KEB Ride-Thru 2<br/>Set to approximately 1.4 x input voltage.</li> </ul>   | x                                    | x    | x    | x    |
| L3-20 | DC Bus Voltage Adjustment Gain   | <ul style="list-style-type: none"> <li>If <i>ov</i> or <i>Uv1</i> occurs at the start of deceleration when you use KEB operation, increase this value in 0.1-unit increments.</li> <li>If there is torque ripple during deceleration when you use KEB Ride-Thru, decrease the value.</li> </ul>  | -                                    | x    | -    | -    |
| L3-21 | OVSuppression Accel/Decel P Gain | If there is large speed or current ripple, decrease the value in 0.05 unit increments.<br><b>Note:</b><br>If the setting value is too low, then the drive will have unsatisfactory DC bus voltage control response. The drive can detect <i>ov</i> or <i>Uv1</i> .   | -                                    | x    | -    | -    |
| L3-24 | Motor Accel Time @ Rated Torque  | Set the motor acceleration time to the maximum frequency at the motor rated torque.  | -                                    | x    | -    | -    |
| L3-25 | Load Inertia Ratio               | Sets the ratio between motor inertia and machine inertia.  | -                                    | x *3 | -    | -    |

- \*1 When *L2-29* = 0 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 1] and you do KEB Auto-Tuning, the drive will automatically set *C1-09*. If you must not change the Fast Stop time, do not do KEB Tuning.
- \*2 If you do KEB Tuning when *L2-29* = 1, 2, or 3 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 2, System KEB Ride-Thru 1, or System KEB Ride-Thru 2], the drive will automatically set *L2-06* [Kinetic Energy Backup Decel Time].
- \*3 The drive sets this value automatically when KEB Tuning completes correctly.

**■ L2-01: Power Loss Ride Through Select**

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| L2-01 (0485) | Power Loss Ride Through Select | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the drive operation after a momentary power loss. | 0<br>(0 - 5)    |

The drive detects momentary power loss when the drive DC bus voltage is less than the value set in *L2-05* [Undervoltage Detection Lvl (Uv1)].

**0 : Disabled**

A momentary power loss triggers *Uv1* [DC Bus Undervoltage].

If you do not restore power in 15 ms, a *Uv1* is triggered and the drive shuts off the output. The motor coasts to stop.

**1 : Enabled for L2-02 Time**

When power returns in the time set in *L2-02* [Power Loss Ride Through Time], the drive will restart. If power does not return in the time set in *L2-02*, the drive will detect *Uv1*.



The drive momentarily turns OFF its output after a power loss. If the power returns in the time set to *L2-02*, the drive will do Speed Search and try to continue operation.

If the DC bus voltage is less than or equal to the *Uv1* detection level for the time set in *L2-02*, the drive will detect *Uv1* and output a fault signal.

**Note:**

- The necessary time for the drive to restart after power returns is different for different drive capacities.
- The upper limit of the possible momentary power loss Ride-Thru time is different for different drive models.

## 2 : Enabled while CPU Power Active

When power returns and the drive control circuit has power, the drive will restart. This will not trigger *Uv1*.

When there is a momentary power loss, the drive output will turn OFF. If the power returns and the drive control circuit has power, the drive will do Speed Search and try to continue operation. This will not trigger a *Uv1*. This function lets the drive lose power for longer than when *L2-01 = 1*.

## 3 : Kinetic Energy Backup: L2-02

If power does not return in the time set in *L2-02*, the drive will detect *Uv1*.

If the drive detects momentary power loss, the drive will use regenerative energy from the motor and ramp to stop. When you return power in the time set in *L2-02*, the drive will accelerate to the frequency reference value that the drive used before the power loss. If you do not return power in the time set to *L2-02*, the drive will detect *Uv1* and the drive output will turn OFF. *L2-29 [Kinetic Energy Backup Method]* sets the type of KEB operation.

## 4 : Kinetic Energy Backup: CPU Power

When power returns and the drive control circuit has power, the drive will restart.

The drive decelerates using regenerative energy from the motor until the power returns and then restarts when a momentary power loss is detected. When power is restored during deceleration, the drive accelerates the motor again to the frequency reference value used before the power loss. If the motor comes to a stop before the power returns, the drive loses control power and the drive output shuts off. A *Uv1* is not triggered when power is restored while power to the CPU in the drive is maintained. *L2-29* sets the type of KEB operation.

## 5 : Kinetic Energy Backup: DecelStop

When power returns, the drive will continue to decelerate until the motor fully stops.


If the drive detects momentary power loss, the drive will use regenerative energy from the motor and ramp to stop. When you return power to the drive, the drive will continue to decelerate until the motor comes to a full stop. After you return power, the drive will ramp to stop in the set deceleration time. *L2-29* sets the type of KEB operation.

**Note:**

When you set *L2-01*, make sure that you know these items:

- You can use a Momentary Power Loss Unit on models 2001 to 2042 and 4001 to 4023 for a longer momentary power loss ride through time. A Momentary Power Loss Unit makes it possible to continue operation of the drive after a maximum of 2 seconds of power loss.
- When you set *L2-01 = 1 to 4*, keep the magnetic contactor on the drive input side ON and keep the control signal while the drive does KEB operation.
- When *L2-01 = 1 to 5*, *Uv [DC Bus Undervoltage]* will flash on the keypad while the drive is attempting to recover from a momentary power loss. The drive will not output a fault signal at this time.
- When you use a magnetic contactor between the motor and the drive, keep the magnetic contactor closed while the drive does KEB operation or tries to restart with Speed Search.
- Keep the Run command active during KEB operation. The drive cannot accelerate back to the frequency reference when the power returns.
- When *L2-01 = 3 to 5*, if the control power supply voltage is less than the CPU operation level during KEB Ride-Thru, it will trigger *Uv1*.

## ■ L2-02: Power Loss Ride Through Time

| No. (Hex.)      | Name                         | Description  | Default (Range)                              |
|-----------------|------------------------------|--|--|
| L2-02<br>(0486) | Power Loss Ride Through Time |  Sets the maximum time that the drive will wait until trying to restart after power loss. | Determined by o2-04, C6-01<br>(0.0 - 25.5 s) |

This function is applicable when *L2-01 = 1, 3 [Power Loss Ride Through Select = Enabled for L2-02 Time, Kinetic Energy Backup: L2-02]*. If power loss operation is longer than the time set in this parameter, the drive will detect *Uv1 [DC Bus Undervoltage]*, turn OFF output, and the motor will coast to stop.

**Note:**

- The length of time that the drive can recover after a power loss changes when drive capacity changes.
- The upper limit of the possible momentary power loss Ride-Through time changes when drive capacity changes.

■ **L2-03: Minimum Baseblock Time**

| No. (Hex.)   | Name                   | Description  | Default (Range)                             |
|--------------|------------------------|--|---|
| L2-03 (0487) | Minimum Baseblock Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the minimum time to continue the drive output block (baseblock) after a baseblock. | Determined by o2-04, C6-01<br>(0.1 - 5.0 s) |

Sets the length of time that the drive will wait for the residual voltage in the motor to dissipate in estimation to the secondary circuit time constant of the motor. If *oC* [Overcurrent] or *ov* [DC Bus Overvoltage] occur at the start of Speed Search, after power returns, or during DC Injection Braking, increase this setting.

■ **L2-04: Powerloss V/f Recovery Ramp Time**

| No. (Hex.)   | Name                             | Description  | Default (Range)                             |
|--------------|----------------------------------|--|---|
| L2-04 (0488) | Powerloss V/f Recovery Ramp Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time for the drive output voltage to go back to correct voltage after completing speed searches. | Determined by o2-04, C6-01<br>(0.0 - 5.0 s) |

Sets the time for voltage to recover from 0 V to the value set in *E1-05* [Maximum Output Voltage].

■ **L2-05: Undervoltage Detection Lvl (Uv1)**

| No. (Hex.)   | Name                             | Description   | Default (Range)  |
|--------------|----------------------------------|---|--|
| L2-05 (0489) | Undervoltage Detection Lvl (Uv1) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the voltage at which a <i>Uv1</i> [DC Bus Undervoltage] fault is triggered or at which the KEB function is activated. Usually it is not necessary to change this setting. | Determined by o2-04 and E1-01<br>(200 V Class: 150 - 210 V,<br>400 V Class: 300 - 420 V) |

**NOTICE: Damage to Equipment.** When you set this parameter to a value lower than the default, you must install an AC reactor on the input side of the power supply. If you do not install an AC reactor, it will cause damage to the drive circuitry.

**Note:**

If the low voltage detection level is near the lower limit value of *L2-05*, the drive will detect *Uv1* during KEB Ride-Through operation. Do not set the value too low when you use the KEB Ride-Through function.

■ **L2-06: Kinetic Energy Backup Decel Time**

| No. (Hex.)          | Name                             | Description  | Default (Range)           |
|---------------------|----------------------------------|--|---------------------------|
| L2-06 (048A) Expert | Kinetic Energy Backup Decel Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the deceleration time during KEB operation used to decrease the maximum output frequency to 0. | 0.0 s<br>(0.0 - 6000.0 s) |

Set *L2-29* = 2 or 3 [Kinetic Energy Backup Method = System KEB Ride-Through 1 or System KEB Ride-Through 2] to enable this function. When *L2-29* = 1, 2, 3 [Kinetic Energy Backup Method = Single Drive KEB Ride-Through 2, System KEB Ride-Through 1, System KEB Ride-Through 2] and you do KEB Auto-Tuning, the drive will automatically set this value.

Sets the deceleration time necessary to decelerate from the frequency reference to 0 Hz when the drive detects a momentary power loss. If a *Uv1* [DC Bus Undervoltage] fault occurs during KEB operation, decrease the deceleration time. If an *ov* [Overvoltage] fault occurs, increase the deceleration time.

• *L2-06* = 0

The drive automatically decreases *C1-09* [Fast Stop Time] to the base value to keep the DC bus voltage above the low voltage detection level. The drive ignores *L2-02* [Momentary Power Loss Ride-Through Time] in this condition.

• *L2-06* ≠ 0

As shown in Figure 12.116, the frequency reference decelerates to the KEB frequency level as specified by the deceleration rate set in *L2-06* and then returns to the initial frequency reference as specified by *C1-01* [Acceleration Time 1]. The drive uses the setting value of the KEB frequency rate as shown in the this formula to set the KEB frequency level:

$$\text{KEB frequency level} = \text{Output frequency before power loss} \times (1 - (L2-02) / (L2-06))$$

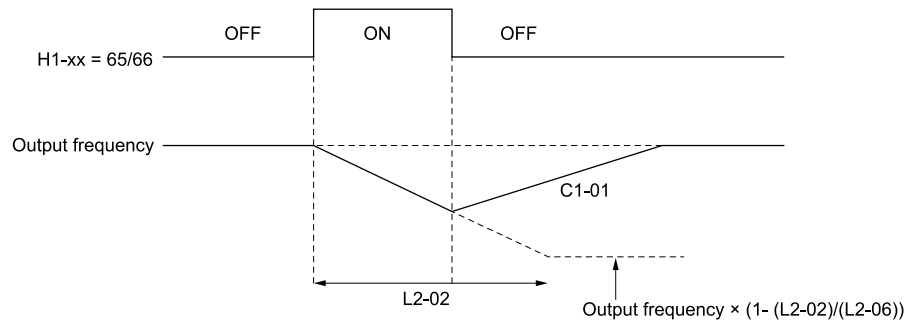


Figure 12.116 Kinetic Energy Backup Decel Time

### ■ L2-07: Kinetic Energy Backup Accel Time

| No. (Hex.)                | Name                             | Description   | Default (Range)           |
|---------------------------|----------------------------------|---|---------------------------|
| L2-07<br>(048B)<br>Expert | Kinetic Energy Backup Accel Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the acceleration time to return the frequency to the frequency reference before a power loss after canceling KEB operation. | 0.0 s<br>(0.0 - 6000.0 s) |

Set this parameter to 0.0 to disable the function. The drive uses the acceleration time in *C1-01*, *C1-03*, *C1-05*, and *C1-07* to accelerate again after KEB operation completes.

### ■ L2-08: Frequency Gain at KEB Start

| No. (Hex.)                | Name                        | Description  | Default (Range)    |
|---------------------------|-----------------------------|--|--------------------|
| L2-08<br>(048C)<br>Expert | Frequency Gain at KEB Start | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the quantity of output frequency reduction used when KEB operation starts as a percentage of the motor rated slip before starting KEB operation. | 100%<br>(0 - 300%) |

Decreases the output frequency in steps to quickly set the motor to a regenerative condition. Use this formula to calculate the value:

$$\text{Output frequency reduction} = \text{Motor rated slip before KEB operation} \times (L2-08/100) \times 2$$

### ■ L2-09: KEB Minimum Frequency Level

| No. (Hex.)                | Name                        | Description   | Default (Range)   |
|---------------------------|-----------------------------|---|-------------------|
| L2-09<br>(048D)<br>Expert | KEB Minimum Frequency Level | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the quantity of output frequency reduction used as a percentage of <i>E2-02</i> [Motor Rated Slip] when KEB operation starts. | 20%<br>(0 - 100%) |

These conditions set the quantity of decrease:

- Motor rated slip  $\times (L2-09/100)$
- The larger value between the value calculated with *L2-08* and the value calculated with *L2-09*

### ■ L2-10: Minimum KEB Time

| No. (Hex.)                | Name             | Description   | Default (Range)         |
|---------------------------|------------------|---|-------------------------|
| L2-10<br>(048E)<br>Expert | Minimum KEB Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the minimum length of time to operate the KEB after the drive detects a momentary power loss. | 50 ms<br>(0 - 25500 ms) |

When you return power while KEB is operating, the drive continues KEB operation until the time set in *L2-10* is expired. When the DC bus voltage is less than the level of *L2-05* [Undervoltage Detection Lvl (*Uv1*)] in one of these conditions, KEB operation continues until the time set in *L2-10* is expired:

- *L2-01* = 3 [Power Loss Ride Through Select = Kinetic Energy Backup: *L2-02*]
- *L2-01* = 4 [Kinetic Energy Backup: CPU Power]
- *L2-01* = 5 [Kinetic Energy Backup: DecelStop]
- KEB Ride-Thru 1/2 [*H1-xx* = 65, 66, 7A, or 7B] is input into the drive.

When you input KEB Ride-Thru, KEB operation continues after the time set in *L2-10* is expired. When you cancel KEB Ride-Thru, the motor accelerates again. When you do not input KEB Ride-Thru during the time set in

*L2-10*, the drive accelerates to the frequency reference that the drive had before power loss in the applicable acceleration time.

When *L2-01* = 3, 4, or 5, and the DC bus voltage is a minimum of the value of *L2-11* [*KEB DC Bus Voltage Setpoint*], the drive accelerates again after the time set in *L2-10* is expired. When the DC bus voltage is less than the *L2-11* value, KEB operation continues after the time set in *L2-10* is expired.

**Note:**

- When *L2-01* = 0, 1, or 2 [*Disabled, Enabled for L2-02 Time, or Enabled while CPU Power Active*], increase the value of *L2-10*. Set *L2-10* to cancel KEB operation if the KEB Ride-Thru is not input.
- Setting *L2-10* to 0 ms disables the function of *L2-10*.

■ **L2-11: KEB DC Bus Voltage Setpoint**

| No. (Hex.)          | Name                        | Description  | Default (Range)                           |
|---------------------|-----------------------------|--|---|
| L2-11 (0461) Expert | KEB DC Bus Voltage Setpoint | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the target value that controls the DC bus voltage to a constant level in Single Drive KEB Ride-Thru 2. Sets the DC bus voltage level that completes the KEB operation for all other KEB methods.</p> | Determined by E1-01 (Determined by E1-01) |

■ **L2-29: Kinetic Energy Backup Method**

| No. (Hex.)          | Name                         | Description  | Default (Range) |
|---------------------|------------------------------|--|-----------------|
| L2-29 (0475) Expert | Kinetic Energy Backup Method | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the KEB function operation mode.</p> | 0 (0 - 3)       |

Set *L2-01* = 3, 4, or 5 [*Momentary Power Loss Ope Select = KEB Mode, KEB Stop Mode, or KEB Decel to Stp*] or *KEB Ride-Thru 1/2* [*H1-xx = 65, 66, 7A, or 7B*], to enable the KEB function.

**0 : Single Drive KEB Ride-Thru 1**

The drive monitors the DC bus voltage and uses regenerative energy from the motor to hold the DC bus voltage at the level set in *L2-11* [*KEB DC Bus Voltage Setpoint*].

The KEB operation continues and the deceleration rate changes as specified by *C1-09* [*Fast Stop Time*].

**Note:**

- If the drive detects *Uv1* [*DC Bus Undervoltage*] during KEB operation, decrease the value of *C1-09*.
- If the drive detects *ov* [*Overvoltage*] during KEB operation, increase the value of *C1-09*.

**1 : Single Drive KEB Ride-Thru 2**

The drive does KEB operation and automatically calculates the deceleration rate to make sure that the main circuit electrical energy and main current voltage from motor regenerative energy is equal to *L2-11* [*DC Bus Vol Setpoint during KEB*].

**2 : System KEB Ride-Thru 1**

The drive does not monitor the DC bus voltage and decelerates as specified by the KEB deceleration time set in *L2-06*.

Set *L2-06* to the time necessary to decelerate from the frequency reference to 0 Hz when the drive detects a momentary power loss. The drive can decelerate and keep constant deceleration rates for more than one drive.

**Note:**

If you keep constant deceleration rates for more than one drive, it can trigger *ov* faults. Use the dynamic braking option with System KEB Ride-Thru 1 to prevent *ov* faults.

**3 : System KEB Ride-Thru 2**

The drive monitors the DC bus voltage and decelerates for the deceleration time set in *L2-06*.

If the DC bus voltage increases, the drive momentarily holds the frequency to prevent *ov* while deceleration continues.

**Note:**

When you cannot use a dynamic braking option, use System KEB Ride-Thru.

## ■ L2-30: KEB Zero Speed Operation

| No. (Hex.)             | Name                     | Description  | Default (Range) |
|------------------------|--------------------------|--|-----------------|
| L2-30 (045E)<br>Expert | KEB Zero Speed Operation | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the operation when the output frequency decreases below the zero level (DC braking injection starting frequency) during KEB deceleration when L2-01 = 3 to 5 [Power Loss Ride Through Select = Kinetic Energy Backup: L2-02, Kinetic Energy Backup: CPU Power, or Kinetic Energy Backup: DecelStop].</p> | 0<br>(0, 1)     |

### 0 : Baseblock

### 1 : DC/SC Braking

Does DC injection braking and short circuit braking as specified by b2-04 [DC Inject Braking Time at Stop] and b2-13 [Short Circuit Brake Time @ Stop].

## ■ L2-31: KEB Start Voltage Offset Level

| No. (Hex.)             | Name                           | Description   | Default (Range)   |
|------------------------|--------------------------------|---|---|
| L2-31 (045D)<br>Expert | KEB Start Voltage Offset Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the KEB start voltage offset.</p> | Determined by A1-02<br>(200 V Class: 0 - 100 V, 400 V Class: 0 - 200 V) |

The drive uses this formula to calculate the KEB start voltage:

$$\text{KEB start voltage} = L2-05 [\text{Undervoltage Detect Level (Uv1)}] + L2-31$$

## ◆ L3: Stall Prevention

L3 parameters set the Stall Prevention function and overvoltage suppression function.

### ■ Stall Prevention

If the load is too heavy or the acceleration and deceleration times are too short, the motor can slip too much because it cannot work at the same rate as the frequency reference. If the motor stalls during acceleration, current increases as the slip increases to cause an oC [Overcurrent], oL2 [Drive Overload], or oL1 [Motor Overload] and the drive will stop. If the motor stalls during deceleration, too much regenerative power will flow back into the DC bus capacitors, and cause the drive to fault out from ov [Overvoltage] and the drive will stop.

The stall prevention function will let the motor get to the set speed without stalling and it is not necessary for you to change the acceleration or deceleration time settings. You can set a separate stall prevention functions for acceleration, operating at constant speeds, and deceleration.

### ■ Overvoltage Suppression Function

Decreases the regenerative torque limit and increases the output frequency when the DC bus voltage increases to prevent ov. This function can drive loads with cyclic regenerative operation, for example punch presses or other applications with repeated crank movements. When you use this function, set L3-11 = 1 [Overvoltage Suppression Select = Enabled].

The drive adjusts the regenerative torque limit and the output frequency during overvoltage suppression to make sure that the DC bus voltage is not more than the level set in L3-17 [DC Bus Regulation Level].

Set these parameters as necessary when you use the overvoltage suppression function:

- L3-20 [DC Bus Voltage Adjustment Gain]
- L3-21 [OVSuppression Accel/Decel P Gain]
- L3-24 [Motor Accel Time @ Rated Torque]
- L3-25 [Load Inertia Ratio]

#### Note:

- When overvoltage suppression is triggered, the motor speed is more than the frequency reference. Do not use overvoltage suppression for applications where the frequency reference and the motor speed must align.
- When you use a braking resistor, set L3-11 = 0 [Disabled].
- The overvoltage suppression function is enabled only when you operate immediately below the maximum frequency. Overvoltage suppression does not increase the output frequency to more than the maximum frequency. Make sure that the motor and machine specifications are correct for the application, then increase the maximum frequency.
- If there is a sudden increase to a regenerative load, ov can occur.

■ **L3-01: Stall Prevention during Accel**

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| L3-01 (048F) | Stall Prevention during Accel | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the method of the Stall Prevention During Acceleration. | 1 (0 - 3)       |

**Note:**

When  $A1-02 = 5$  [Control Method Selection = OLV/PM], the setting range is 0 and 1.

Stall prevention during acceleration prevents the stalling and stopping of motors when the drive detects  $oC$  [Overcurrent],  $oL2$  [Drive Overloaded], or  $oL1$  [Motor Overload] when you apply a large load during acceleration or when you set sudden acceleration times related to load inertia.

**0 : Disable**


The Stall Prevention function does not operate during acceleration, and acceleration occurs for the set acceleration time. If the acceleration time is too short, the motor does not fully accelerate during the set time, which causes the drive to detect  $oL1$  or  $oL2$  and the motor to stop.

**1 : Enabled**

Enables the Stall Prevention During Acceleration function. Operation is different for different control methods.

• **V/f Control, Open Loop Vector Control, or EZ Open Loop Vector Control**

When the output current is more than the value set in  $L3-02$  [Stall Prevent Level during Accel], the drive stops acceleration. The drive stops deceleration when the output current is less than  $L3-02 - 15\%$ . The Stall Prevention function level automatically decreases for constant output ranges.

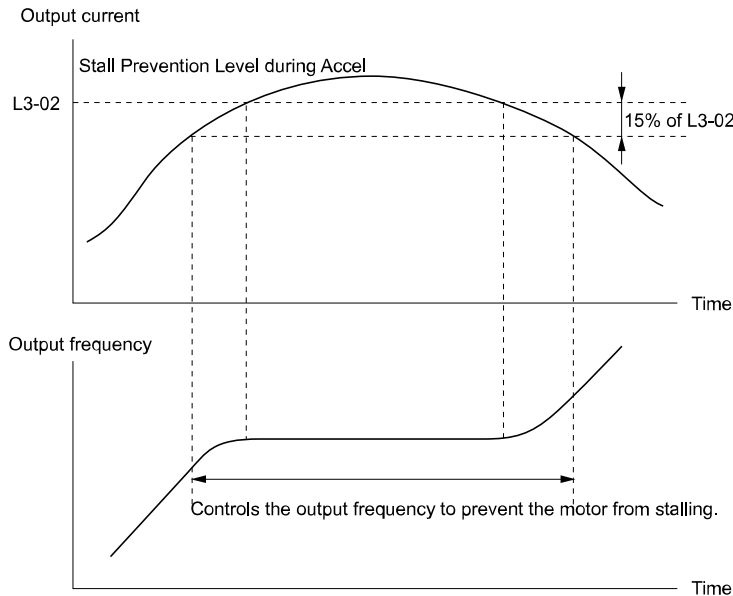

**Figure 12.117 Stall Prevention During Acceleration when Using Induction Motors**

• **Open Loop Vector Control for PM**

When the output current is more than  $L3-02$ , the drive stops acceleration. When the time set in  $L3-27$  [Stall Prevention Detection Time] is expired and the output current =  $L3-02$ , the drive will start deceleration as specified by the value set in  $L3-22$  [PM Stall Prevention Decel Time]. The drive starts acceleration again when the output current is less than  $L3-02 - 15\%$ . When the time set in  $L3-27$  is expired, the drive starts acceleration again.

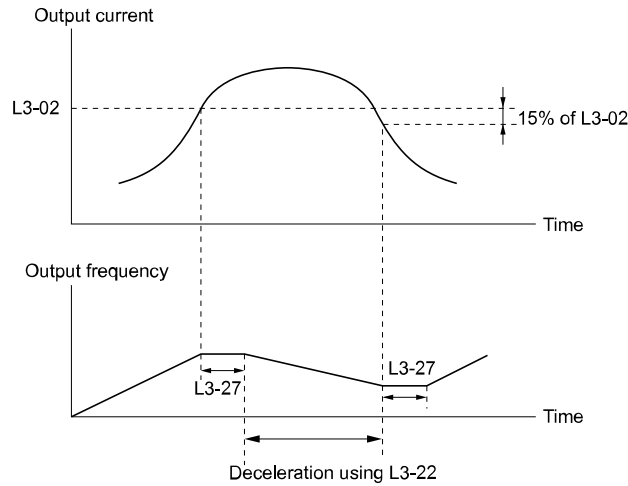


Figure 12.118 Stall Prevention During Acceleration Function in OLV/PM

**2 : Intelligent (Ignore Accel Ramp)**

The drive ignores the acceleration time setting and the drive starts to accelerate in the minimum length of time. The drive automatically adjusts the acceleration rate to make sure that the output current is not more than L3-02.

**3 : Current Limit Acceleration**

This function uses the L3-02 value to limit the output current and automatically adjust the acceleration rate. When the load (output current) increases to more than the current limit level during acceleration, the drive automatically adjusts the acceleration rate.

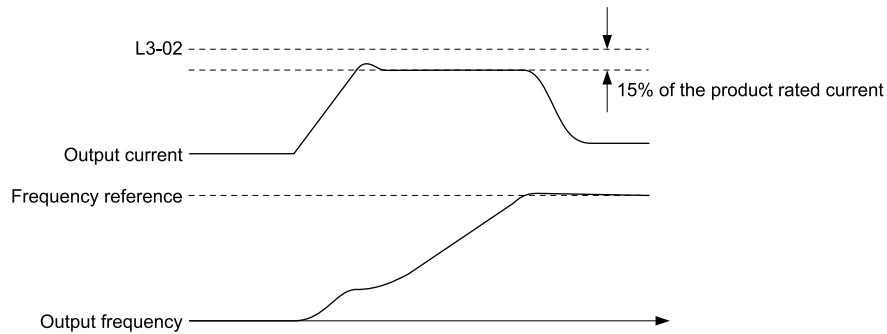


Figure 12.119 Current Limit Acceleration

**■ L3-02: Stall Prevent Level during Accel**

| No. (Hex.)   | Name                             | Description  | Default (Range)                |
|--------------|----------------------------------|--|--------------------------------|
| L3-02 (0490) | Stall Prevent Level during Accel | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOL/PM <input type="checkbox"/> EZOLV<br>Sets the output current level at which the Stall Prevention function operates during acceleration where the drive rated output current is 100%. | Determined by C6-01 (0 - 150%) |

**Note:**

- If you use a motor that is small compared to the drive and the motor stalls, decrease the setting value.
- When you operate the motor in the constant power range, set L3-03 [Stall Prevent Limit during Accel].
- The upper limit to the setting range changes when the setting for C6-01 [Normal / Heavy Duty Selection] changes.
  - 150% when C6-01 = 0 [Heavy Duty Rating]
  - 120% when C6-01 = 1 [Normal Duty Rating]

**■ L3-03: Stall Prevent Limit during Accel**

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| L3-03 (0491) | Stall Prevent Limit during Accel | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOL/PM <input type="checkbox"/> EZOLV<br>Sets the lower limit for the stall prevention level used in the constant output range as a percentage of the drive rated output current. | 50% (0 - 100%)  |

The stall prevention level set in L3-02 [Stall Prevent Level during Accel] is automatically reduced when the motor is running within the constant output range. Parameter L3-03 is the limit value used to prevent the stall prevention level during constant output ranges to fall below the minimum required level.

**Note:**

The function to automatically reduce the stall prevention level does not operate when  $L3-01 = 3$  [Stall Prevention during Accel = Current Limit Method].

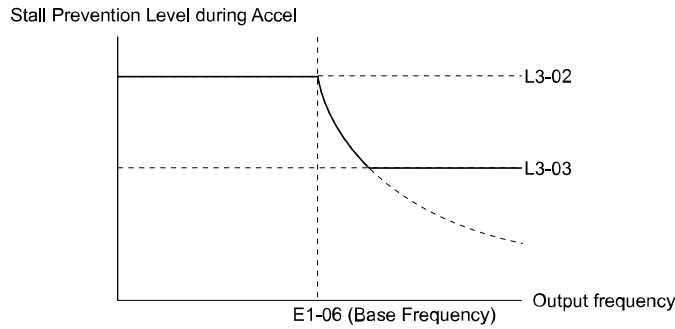


Figure 12.120 Stall Prevent Level during Accel/Limit

■ **L3-04: Stall Prevention during Decel**

| No. (Hex.)   | Name                          | Description  | Default (Range)         |
|--------------|-------------------------------|--|-------------------------|
| L3-04 (0492) | Stall Prevention during Decel | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV | 1 (Determined by A1-02) |

**Note:**

- To connect a dynamic braking option (braking resistor or braking resistor unit) to the drive, set this parameter to 0 or 3. Parameter settings 1, 2, 4, 5, and 7 will enable Stall Prevention function during deceleration, and the dynamic braking option will not function.
- The setting range changes when the A1-02 [Control Method Selection] value changes:
  - When A1-02 = 5 [OLV/PM], the setting range is 0 to 2.
  - When A1-02 = 6 or 8 [AOLV/PM or EZOLV], the setting range is 0 or 1.

Stall Prevention during deceleration controls the deceleration as specified by the DC bus voltage and does not let high inertia or fast deceleration cause *ov* [Overvoltage] faults.

**0 : Disable**

The drive decelerates as specified by the deceleration time. If the deceleration time is too short, the drive can detect an *ov* fault.

**Note:**

If an *ov* fault occurs, connect a dynamic braking option to the drive. If an *ov* fault occurs when you connect a dynamic braking option and A1-02 = 0 or 2 [Control Method Selection = V/f or OLV] and L3-04 = 0, set L3-04 = 3.

**1 : General Purpose**

The drive decelerates as specified by the deceleration time. When the DC bus voltage is more than the Stall Prevention level, the drive stops deceleration until the DC bus voltage is less than the Stall Prevention Level. The drive then starts to decelerate at the set deceleration time. Frequent use of Stall Prevention will help prevent *ov* faults when the deceleration time is shorter than the drive can usually accept.

**Note:**

The Decel Stall Prevention function will increase the deceleration time to stop and the deceleration time will be longer than the setting. This function is not applicable for conveyor applications because the precision of the stop position is very important. As an alternative, use a dynamic braking option in these applications.

The input voltage setting of E1-01 [Input AC Supply Voltage] sets the DC bus voltage level for Stall Prevention.

Table 12.68 Stall Prevention Level during Deceleration

| Drive Input Voltage | Stall Prevention Level during Deceleration |
|---------------------|--|
| 200 V Class         | 377 V                                      |
| 400 V Class         | 754 V                                      |

Figure 12.121 shows the Stall Prevention during deceleration function.



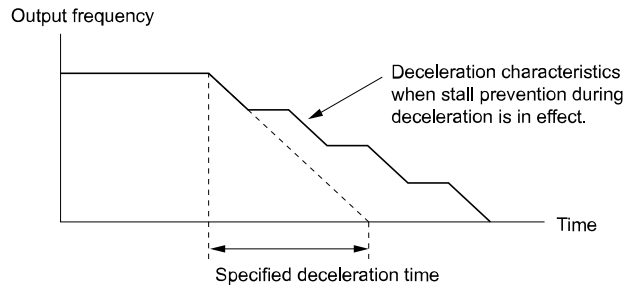


Figure 12.121 Stall Prevention Operation during Deceleration

**2 : Intelligent (Ignore Accel Ramp)**

The drive adjusts the deceleration rate to keep the DC bus voltage at the L3-17 [DC Bus Regulation Level] level. This makes the shortest possible deceleration time and will not let the motor stall. The drive ignores the selected deceleration time and the possible deceleration time cannot be less than 1/10 of the set deceleration time.

This function uses these parameters to adjust the deceleration rate:

- L3-20 [DC Bus Voltage Adjustment Gain]
- L3-21 [OVSuppression Accel/Decel P Gain]
- L3-24 [Motor Accel Time @ Rated Torque]
- L3-25 [Load Inertia Ratio]

**Note:**

The deceleration time is not constant. For applications where the precision of the stop position is very important, use a dynamic braking option and set L3-04 = 0. If an ov occurs, set L3-04 = 3.

**3 : General Purpose w/ DB resistor**

A braking resistor is necessary for this setting. The braking resistor and the drive work together for the Stall Prevention during deceleration function.

**4 : Overexcitation/High Flux 1**

Enables Overexcitation/High Flux and enables a shorter deceleration time than when L3-04 = 0.

**Note:**

- If the overexcitation time is long and you decelerate frequently, the drive can detect oL1 [Motor Overload] faults. If the drive detects oL1, decrease the deceleration time or install a braking resistor to the drive.
- The deceleration time during Overexcitation Deceleration changes when the motor characteristics and machine inertia change. Adjust the n3-13 [OverexcitationBraking (OEB) Gain] and n3-23 [Overexcitation Braking Operation] levels. Refer to [Overexcitation Deceleration on page 717](#) for more information.

**5 : Overexcitation/High Flux 2**

Enables Overexcitation/High Flux 2. This function decreases the possible deceleration time more than *Overexcitation/High Flux*.

The drive decreases motor speed and tries to keep the DC bus voltage at the L3-17 level.

If the drive detects oL1, decrease the values set in n3-13 and n3-21. If the drive detects ov, increase the values set in C1-02, C1-04, C1-06, and C1-08 [Deceleration Times].

**Note:**

- During Overexcitation/High Flux 2, the drive disables Hunting Prevention in V/f Control and also disables Speed Control that uses torque limit in OLV Control.
- Refer to [Overexcitation Deceleration on page 717](#) for more information.

**7 : Overexcitation/High Flux 3**

If you set L3-04 = 7 [Overexcitation Braking 3], the overexcitation increases compared with 4 [Overexcitation/High Flux]. This can decrease the deceleration time.

**Note:**

When L3-04 = 7, the overexcitation current increases as compared with 4. Motor load becomes larger, and it can cause oL1 [Motor Overload]. When you can use L3-04 = 4 to operate the drive, set L3-04 = 4.

■ **L3-05: Stall Prevention during RUN**

| No. (Hex.)   | Name                        | Description  | Default (Range)                               |
|--------------|-----------------------------|--|---|
| L3-05 (0493) | Stall Prevention during RUN | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to enable and disable Stall Prevention During Run. | Determined by A1-02 (0 - Determined by A1-02) |

Stall Prevention function during run prevents the motor from stalling by automatically reducing the speed when an *oLI* [Motor Overload] occurs while the motor is running at constant speed.

**Note:**

- An output frequency less than 6 Hz disables Stall Prevention during Run. The setting values of L3-05 and L3-06 [Stall Prevent Level during Run] do not have an effect.
- The setting range changes when the A1-02 [Control Method Selection] value changes:  
 –A1-02 = 0, 5 [V/f, OLV/PM] : 0 to 2  
 –A1-02 = 8 [EZOLV] : 0, 3

**0 : No**

The drive runs at the set frequency reference. A heavy load can cause the motor to stall and trip the drive with *oC* [Overcurrent] or *oLI*.

**1 : Deceleration Time 1 (C1-02)**

The drive will decelerate for the time set in C1-02 [Deceleration Time 1] when the current is more than the Stall Prevention level set in L3-06. When the current level is less than the “L3-06 setting value - 2%” for 100 ms, the drive accelerates again for the acceleration time applicable at that time until it is at the set frequency.

**2 : Deceleration Time 2 (C1-04)**

This setting functions the same as Setting 1 [Deceleration Time 1 (C1-02)]. When you enable the Stall Prevention function, the drive decelerates in the time set in C1-04 [Deceleration Time 2].

**3 : Intelligent (Ignore Decel Ramp)**

Enabled when A1-02 = 8 [EZOLV]. The drive operates with the largest possible output current to prevent motor stalling.

**■ L3-06: Stall Prevent Level during Run**

| No. (Hex.)   | Name                           | Description  | Default (Range)                |
|--------------|--------------------------------|--|--------------------------------|
| L3-06 (0494) | Stall Prevent Level during Run | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span>AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the output current level at which the Stall Prevention function is enabled during run when the drive rated output current is 100%. | Determined by C6-01 (5 - 150%) |

**Note:**

- This parameter is applicable when L3-05 = 1, 2 [Stall Prevention during RUN = Deceleration Time 1 (C1-02), Deceleration Time 2 (C1-04)].
- When L3-23 = 1 [Stall P Reduction at Constant HP = Automatic Reduction @ CHP Region], the drive will automatically decrease the level in the constant output range.
- The upper limit to the setting range changes when the setting for C6-01 [Normal / Heavy Duty Selection] changes.  
 –150% when C6-01 = 0 [Heavy Duty Rating]  
 –120% when C6-01 = 1 [Normal Duty Rating]

**Use an Analog Input to Change the Stall Prevent Level during Run**

When H3-xx = 8 [MFAI Function Select = Stall Prevent Level During Run], you can use the input gain and bias settings for terminals A1 and A2 to change the stall prevention level during run.

If you set the input level for terminals A1 and A2 [H3-xx = 8] and L3-06, the drive will use the smaller value for Stall Prevent Level during Run.

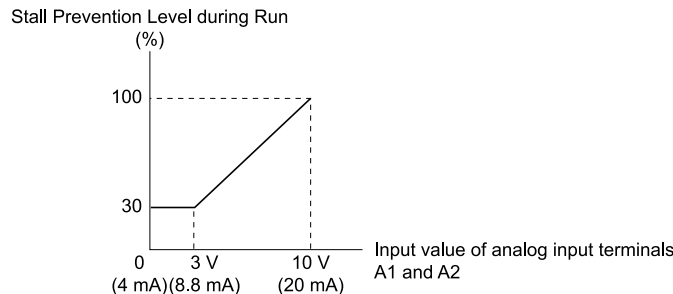


Figure 12.122 Stall Prevention Level during Run with Analog Input

**■ L3-11: Overvoltage Suppression Select**

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| L3-11 (04C7) | Overvoltage Suppression Select | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span>AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> Sets the overvoltage suppression function. | 0 (0, 1)        |

**0 : Disabled**

The drive does not adjust the regenerative torque limit or the output frequency. If you apply a regenerative load, the drive can detect an *ov* [Overvoltage] fault. Use this setting with a dynamic braking option.

**1 : Enabled**

When a regenerative load increases the DC bus voltage, the drive decreases the regenerative torque limit and increases the output frequency to prevent *ov*

**■ L3-17: DC Bus Regulation Level**

| No. (Hex.)      | Name                    | Description  | Default (Range)  |
|-----------------|-------------------------|--|--|
| L3-17<br>(0462) | DC Bus Regulation Level | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the target value for the DC bus voltage when the overvoltage suppression function and the Decel Stall Prevention function (Intelligent Stall Prevention) are active. | 200 V Class: 375 V, 400 V:<br>750 V<br>(200 V Class: 150 to 400 V,<br>400 V Class: 300 to 800 V) |

**Note:**

This value is initialized when *E1-01* [Input AC Supply Voltage] is changed.

Sets this parameter for any of the following circumstances.

- *L3-11* = 1 [OV Suppression Function Select = Enabled].
- *L3-04* = 2 [Decel Stall Prevention Selection = Automatic Decel Reduction].

**■ L3-20: DC Bus Voltage Adjustment Gain**

| No. (Hex.)                | Name                           | Description   | Default (Range)                      |
|---------------------------|--------------------------------|---|--------------------------------------|
| L3-20<br>(0465)<br>Expert | DC Bus Voltage Adjustment Gain | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the proportional gain used to control the DC bus voltage. | Determined by A1-02<br>(0.00 - 5.00) |

Set one of these parameters to enable L3-20:

- *L2-29* = 1 [KEB Method Selection = Single Drive KEB Ride-Thru 2]
- *L3-04* = 2 [Decel Stall Prevention Selection = Automatic Decel Reduction]
- *L3-11* = 1 [OV Suppression Function Select = Enabled]
- *H1-xx* = 7A or 7B [MFDD Function Select = KEB Ride-Thru 2 (N.O./N.C.)]

**Note:**

- If stall prevention during deceleration function causes *ov* [Overvoltage] and *Uv1* [DC Bus Undervoltage] faults when you start deceleration and *L2-29* = 1, *H1-xx* = 7A or 7B, or *L3-04* = 2, gradually increase this parameter in 0.1-unit increments. If the setting value is too high, it can cause large speed or current ripples.
- If sudden increases in the regenerative load cause *ov* faults and *L3-11* = 1, gradually increase this parameter in 0.1-unit increments. If the setting value is too high, it can cause large speed or current ripples.

**■ L3-21: OVSsuppression Accel/Decel P Gain**

| No. (Hex.)                | Name                              | Description   | Default (Range)                       |
|---------------------------|-----------------------------------|---|---------------------------------------|
| L3-21<br>(0466)<br>Expert | OVSsuppression Accel/Decel P Gain | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the proportional gain to calculate acceleration and deceleration rates. | Determined by A1-02<br>(0.10 - 10.00) |

Set one of these parameters to enable L3-21:

- *L2-29* = 1 [KEB Method Selection = Single Drive KEB Ride-Thru 2]
- *L3-04* = 2 [Decel Stall Prevention Selection = Automatic Decel Reduction]
- *L3-11* = 1 [OV Suppression Function Select = Enabled]
- *H1-xx* = 7A or 7B [MFDD Function Select = KEB Ride-Thru 2 (N.O./N.C.)]

**Note:**

- If stall prevention during deceleration function causes large speed or current ripples and *L2-29* = 1, *H1-xx* = 7A or 7B, or *L3-04* = 2, gradually decrease this parameter in 0.05-unit increments. If the drive detects *ov* [Overvoltage] or *oC* [Overcurrent], decrease this parameter. If you decrease the gain too much, it can cause a delay in control in the DC bus voltage or the deceleration time could be longer than the best deceleration time.
- If sudden increases in the regenerative load cause *ov* faults and *L3-11* = 1, gradually increase this parameter in 0.1-unit increments. If there are large speed ripples, gradually decrease this parameter in 0.05-unit increments.

■ **L3-22: PM Stall Prevention Decel Time**

| No. (Hex.)   | Name                           | Description  | Default (Range)           |
|--------------|--------------------------------|--|---------------------------|
| L3-22 (04F9) | PM Stall Prevention Decel Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the momentary deceleration time that the drive will use when it tries to accelerate a PM motor and detected motor stalls. This function is applicable when L3-01 = 1 [Stall Prevent Select duringAccel = General Purpose].</p> | 0.0 s<br>(0.0 - 6000.0 s) |

Set this parameter to 0.0 s to disable this function. The drive will decelerates in the deceleration time applicable at the time when a motor stall occurs.

■ **L3-23: Stall P Reduction at Constant HP**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| L3-23 (04FD) | Stall P Reduction at Constant HP | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to automatically decrease the Stall Prevention Level during Run for constant output ranges.</p> | 0<br>(0, 1)     |

**0 : Use L3-06 for Entire Speed Range**

The drive uses the level set in L3-06 [Stall Prevent Level during Run] through the full speed range.

**1 : Automatic Reduction @ CHP Region**

The drive decreases the Stall Prevention level during run in the constant power range. The lower limit is 40% of L3-06 value.

■ **L3-24: Motor Accel Time @ Rated Torque**

| No. (Hex.)             | Name                            | Description   | Default (Range)  |
|------------------------|---------------------------------|---|--|
| L3-24 (046E)<br>Expert | Motor Accel Time @ Rated Torque | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the motor acceleration time to reach the maximum frequency at the motor rated torque for stopped single-drive motors.</p> | Determined by o2-04, C6-01, E2-11, and E5-01<br>(0.001 - 10.000 s) |

Set one of these parameters to enable L3-20:

- L2-29 = 1 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 2]
- L3-04 = 2 [Stall Prevention during Decel = Intelligent (Ignore Decel Ramp)]
- L3-11 = 1 [Overvoltage Suppression Select = Enabled]
- H1-xx = 7A or 7B [MFDI Function Select = KEB Ride-Thru 2 Activate (N.O./N.C.)]

**Note:**

When Auto-Tuning changes the value of E2-11 [Motor Rated Power (kW)], the drive will automatically set this parameter to the value for a Yaskawa standard motor (4 poles). When you use a PM motor, the drive uses the value in E5-01 [PM Motor Code Selection] to change L3-24.

■ **L3-25: Load Inertia Ratio**

| No. (Hex.)             | Name               | Description  | Default (Range)       |
|------------------------|--------------------|--|-----------------------|
| L3-25 (046F)<br>Expert | Load Inertia Ratio | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the ratio between motor inertia and machine inertia.</p> | 1.0<br>(0.1 - 1000.0) |

Set one of these parameters to enable L3-20:

- L2-29 = 1 [Kinetic Energy Backup Method = Single Drive KEB Ride-Thru 2]
- L3-04 = 2 [Stall Prevention during Decel = Intelligent (Ignore Decel Ramp)]
- L3-11 = 1 [Overvoltage Suppression Select = Enabled]
- H1-xx = 7A or 7B [MFDI Function Select = KEB Ride-Thru 2 Activate (N.O./N.C.)]

**Note:**

- If you set this value incorrectly when L2-29 = 1, H1-xx = 7A or 7B, or L3-11 = 1, it can cause large current ripples and ov [Overvoltage], Uv1 [DC Bus Undervoltage], or oC [Overcurrent] faults.
- KEB Tuning will automatically set this value.

### ■ L3-26: Additional DC Bus Capacitors

| No. (Hex.)             | Name                         | Description   | Default (Range)                   |
|------------------------|------------------------------|---|-----------------------------------|
| L3-26 (0455)<br>Expert | Additional DC Bus Capacitors | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the capacity for external main circuit capacitors. Usually it is not necessary to change this setting. Sets this parameter when you use the KEB Ride-Thru function. | 0 $\mu$ F<br>(0 to 65000 $\mu$ F) |

### ■ L3-27: Stall Prevention Detection Time

| No. (Hex.)   | Name                            | Description  | Default (Range)        |
|--------------|---------------------------------|--|------------------------|
| L3-27 (0456) | Stall Prevention Detection Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a delay time between reaching the Stall Prevention level and starting the Stall Prevention function. | 60 ms<br>(0 - 5000 ms) |

### ■ L3-34: Torque Limit Delay Time

| No. (Hex.)             | Name                    | Description   | Default (Range)                          |
|------------------------|-------------------------|---|--|
| L3-34 (016F)<br>Expert | Torque Limit Delay Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the filter time constant that returns the torque limit to its initial value when KEB operation operates in Single Drive KEB Ride-Thru mode. | Determined by A1-02<br>(0.000 - 1.000 s) |

When vibration occurs during operation of Single Drive KEB Ride-Thru 2, increase this parameter in 0.010-unit increments.

**Note:**

The Single Drive KEB Ride-Thru 2 mode operates when  $L2-29 = 1$  [*KEB Method Selection = Single Drive KEB Ride-Thru 2*] and  $H1-xx = 7A$  or  $7B$  [*Terminal Sx Function Selection = KEB Ride-Thru 2 (N.C./N.O.)*].

### ■ L3-35: Speed Agree Width for Auto Decel

| No. (Hex.)             | Name                             | Description   | Default (Range)             |
|------------------------|----------------------------------|---|-----------------------------|
| L3-35 (0747)<br>Expert | Speed Agree Width for Auto Decel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the width for speed agreement when $L3-04 = 2$ [ <i>Decel Stall Prevention Selection = Automatic Decel Reduction</i> ]. Usually it is not necessary to change this setting. | 0.00 Hz<br>(0.00 - 1.00 Hz) |

Set this parameter when hunting occurs while you use a frequency reference through an analog input.

### ■ L3-36: Current Suppression Gain@Accel

| No. (Hex.)   | Name                           | Description   | Default (Range)                      |
|--------------|--------------------------------|---|--------------------------------------|
| L3-36 (11D0) | Current Suppression Gain@Accel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the gain to suppress current and motor speed hunting during operation when $L3-01 = 3$ [ <i>Stall Prevention during Accel = Current Limit Method</i> ]. Usually it is not necessary to change this setting. | Determined by A1-02<br>(0.0 - 100.0) |

If there is vibration in the output current during acceleration, increase the setting value.

**Note:**

Set  $L3-01 = 3$  [*Stall Prevention during Accel = Current Limit Method*] to enable this function.

### ■ L3-37: Current Limit P Gain @ Accel

| No. (Hex.)             | Name                         | Description  | Default (Range)      |
|------------------------|------------------------------|--|----------------------|
| L3-37 (11D1)<br>Expert | Current Limit P Gain @ Accel | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Suppresses current hunting during acceleration. Usually it is not necessary to change this setting. | 5 ms<br>(0 - 100 ms) |

**Note:**

Set  $L3-01 = 3$  [*Stall Prevention during Accel = Current Limit Method*] to enable this function.

■ **L3-38: Current Limit I Time @ Accel**

| No. (Hex.)          | Name                         | Description   | Default (Range)    |
|---------------------|------------------------------|---|--------------------|
| L3-38 (11D2) Expert | Current Limit I Time @ Accel | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Suppresses current hunting and overshooting that occurs when the drive stalls during acceleration. Usually it is not necessary to change this setting. | 10.0 (0.0 - 100.0) |

**Note:**

Set L3-01 = 3 [Stall Prevention during Accel = Current Limit Method] to enable this function.

■ **L3-39: Current Limit Filter Time @Accel**

| No. (Hex.)   | Name                             | Description  | Default (Range)            |
|--------------|----------------------------------|--|----------------------------|
| L3-39 (11D3) | Current Limit Filter Time @Accel | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the time constant to adjust the acceleration rate when L3-01 = 3 [Stall Prevention during Accel = Current Limit Method]. Usually it is not necessary to change this setting. | 100.0 ms (1.0 - 1000.0 ms) |

**Note:**

Set L3-01 = 3 [Stall Prevention during Accel = Current Limit Method] to enable this function.

■ **L3-40: Current Limit S-Curve @ Acc/Dec**

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| L3-40 (11D4) | Current Limit S-Curve @ Acc/Dec | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to enable and disable the best S-curve characteristic used for current-limited acceleration. | 0 (0, 1)        |

Makes the best motor acceleration rate for start up. If you set this parameter to 1, it will make acceleration smoother, but it can also increase the acceleration time to be longer than the set time. If the drive detects *oC* [Overcurrent] faults immediately after acceleration starts, set this parameter.

**0 : No**

**1 : Yes**

**Note:**

Set L3-01 = 3 [Stall Prevention during Accel = Current Limit Method] to enable this function.

◆ **L4: Speed Detection**

L4 parameters set the output of signals to the MFDO terminals, for example frequency agree and speed detection.

■ **L4-01: Speed Agree Detection Level**

| No. (Hex.)   | Name                        | Description   | Default (Range)                           |
|--------------|-----------------------------|---|---|
| L4-01 (0499) | Speed Agree Detection Level | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the level to detect speed agree or motor speed. | Determined by A1-02 (Determined by A1-02) |

Sets the level to detect speed agree or motor speed when H2-01 to H2-03 = 2, 3, 4, 5 [MFDO Function Selection = Speed Agree 1, User-set Speed Agree 1, Frequency Detection 1, Frequency Detection 2].

■ **L4-02: Speed Agree Detection Width**

| No. (Hex.)   | Name                        | Description   | Default (Range)                           |
|--------------|-----------------------------|---|---|
| L4-02 (049A) | Speed Agree Detection Width | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the width to detect speed agree or motor speed. | Determined by A1-02 (Determined by A1-02) |

Sets the width to detect speed agree or motor speed when H2-01 to H2-03 = 2, 3, 4, 5 [MFDO Function Selection = Speed Agree 1, User-set Speed Agree 1, Frequency Detection 1, Frequency Detection 2].

■ **L4-03: Speed Agree Detection Level(+/-)**

| No. (Hex.)   | Name                             | Description   | Default (Range)                           |
|--------------|----------------------------------|---|---|
| L4-03 (049B) | Speed Agree Detection Level(+/-) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the level to detect speed agree or motor speed. | Determined by A1-02 (Determined by A1-02) |

Sets the level to detect speed agree or motor speed when *H2-01 to H2-03 = 13, 14, 15, 16* [MFDO Function Selection = Speed Agree 2, User-set Speed Agree 2, Frequency Detection 3, Frequency Detection 4].

■ **L4-04: Speed Agree Detection Width(+/-)**

| No. (Hex.)   | Name                             | Description   | Default (Range)                           |
|--------------|----------------------------------|---|---|
| L4-04 (049C) | Speed Agree Detection Width(+/-) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the width to detect speed agree or motor speed. | Determined by A1-02 (Determined by A1-02) |

Sets the width to detect speed agree or motor speed when *H2-01 to H2-03 = 13, 14, 15, 16* [MFDO Function Selection = Speed Agree 2, User-set Speed Agree 2, Frequency Detection 3, Frequency Detection 4].

■ **L4-05: Fref Loss Detection Selection**

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| L4-05 (049D) | Fref Loss Detection Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the operation when the drive detects a loss of frequency reference. | 0 (0, 1)        |

Enables the detection of a loss of an analog frequency reference when MFAI terminals (A1 and A2) input the frequency reference. Set *H2-01 to H2-03 = C* [MFDO Function Selection = Frequency Reference Loss] to enable this function.

If the frequency reference is less than 10% in 400 ms, the drive detects frequency reference loss.

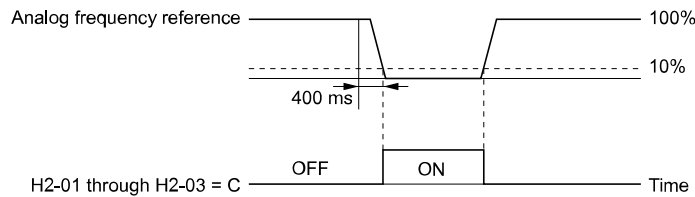


Figure 12.123 Detection of Frequency Reference Loss

**0 : Stop**

The drive follows the frequency reference and stops the motor.

**1 : Run at (L4-06 x Last Reference)**

The drive continues to operate at the frequency reference value set in *L4-06* [FreqReference at Reference Loss]. When you return the external frequency reference value, the drive continues to operate with the frequency reference.

■ **L4-06: Frequency Reference @Loss of Ref**

| No. (Hex.)   | Name                             | Description   | Default (Range)      |
|--------------|----------------------------------|---|----------------------|
| L4-06 (04C2) | Frequency Reference @Loss of Ref | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the frequency reference as a percentage to continue drive operation after it detects a frequency reference loss. The value is a percentage of the frequency reference before the drive detected the loss. | 80.0% (0.0 - 100.0%) |

Set *L4-05 = 1* [FreqReference Loss Detect Select = Run@L4-06PrevRef] to enable this parameter.

■ **L4-07: Speed Agree Detection Selection**

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| L4-07 (0470) | Speed Agree Detection Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the condition that activates speed detection. | 0 (0, 1)        |

**0 : No Detection during Baseblock**

Detects the frequency while the drive is operating. When the drive turns off its output, it will not detect frequency.

**1 : Detection Always Enabled**

**■ L4-08: Speed Agree Source Selection**

| No. (Hex.)   | Name                         | Description  | Default (Range) |
|--------------|------------------------------|--|-----------------|
| L4-08 (047F) | Speed Agree Source Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the drive to use the soft starter output frequency or the motor speed (estimation value) for speed detection.</p> | 1 (0, 1)        |

**0 : Softstarter Output (Reference)**

**1 : Motor Speed (Actual Speed)**

The setting for L4-08 has an effect:

- When you set detection conditions for oL3 [Overtorque 1], oL3 [Overtorque Detection 1], oL4 [Overtorque 2], and oL4 [Overtorque Detection 2]:
  - L6-01 = 1, 3, 5, 7 [Torque Detection Selection 1 = UL @ Speed Agree]
  - L6-04 = 1, 3, 5, 7 [Torque Detection Selection 2 = UL @ Speed Agree]
- When you use speed agreement with DriveWorksEZ.
- When the MFDI terminals set for H1-xx = 75, 76 [Up/Down 2 command] activate.
- When you set H2-xx [MFDO Function Select] to these functions:

| Setting Value | Function               |
|---------------|------------------------|
| 2             | Speed Agree 1          |
| 3             | User-Set Speed Agree 1 |
| 4             | Frequency Detection 1  |
| 5             | Frequency Detection 2  |

| Setting Value | Function               |
|---------------|------------------------|
| 13            | Speed Agree 2          |
| 14            | User-Set Speed Agree 2 |
| 15            | Frequency Detection 3  |
| 16            | Frequency Detection 4  |

- When you use these functions for MEMOBUS monitor data:

| Register No. | Description   |
|--------------|---|
| 002CH        | Drive Status 2  |
|              | bit2 Speed agreement<br>1: During agreement               |
|              | bit3 User-defined speed agreement<br>1: During agreement  |
|              | bit4 Frequency Detection 1<br>1: Output frequency ≤ L4-01 |
|              | bit5 Frequency Detection 2<br>1: Output frequency ≥ L4-01 |
| 004BH        | U1-12 [Drive Status]                                      |
|              | bit4 1: During speed agreement                            |

- When you use these functions for monitor parameters:

| No. (Hex.)   | Name         | Description                   |
|--------------|--------------|-------------------------------|
| U1-12 (004B) | Drive Status | bit 4: During speed agreement |

**◆ L5: Fault Restart**

The Auto Restart function tries to keep machines operating when the drive detects a transient fault.

The drive can do a self-diagnostic check and continue the operation after a fault. If the cause of the fault goes away, the drive does speed search and restarts. It will not stop and the drive will not record a fault history. Use L5-02 [Fault Contact at Restart Select] to select the operation of fault relay signals during Auto Restart operation.



Sets if the drive will do Auto Restart and the number of times the drive will try to do Auto Restart in a set time. If the number of Auto Restart tries is more than the set value during the set time, drive output shuts off and operation stops. If this happens, remove the cause of the fault and manually restart the drive.

**WARNING! Sudden Movement Hazard.** Do not use the fault restart function in hoist or lifting applications. Failure to obey can cause death or serious injury.

The drive can do Auto Restart when these faults occur:

**Note:**

You can disable Auto Restart for some faults if you must not restart the machine after the fault with parameters L5-07 and L5-08.

**Table 12.69 List of Faults during which Auto Restart is Available**

| Fault | Name                   | Parameters to Disable Auto Restart | Fault | Name                              | Parameters to Disable Auto Restart |
|-------|------------------------|------------------------------------|-------|-----------------------------------|------------------------------------|
| GF    | Ground Fault           | L5-08                              | ov    | Overvoltage                       | L5-08                              |
| LF    | Output Phase Loss      | -                                  | PF    | Input Phase Loss                  | -                                  |
| oC    | Overcurrent            | -                                  | rH    | Braking Resistor Overheat         | -                                  |
| oH1   | Heatsink Overheat      | L5-08                              | rr    | Dynamic Braking Transistor Fault  | -                                  |
| oL1   | Motor Overload         | L5-07                              | STPo  | Motor Step-Out Detected           | -                                  |
| oL2   | Drive Overload         | L5-07                              | Uv1   | DC Bus Undervoltage <sup>*1</sup> | L5-08                              |
| oL3   | Overtorque Detection 1 | L5-07                              |       |                                   |                                    |
| oL4   | Overtorque Detection 2 | L5-07                              |       |                                   |                                    |

\*1 Uv1 is the target for the auto restart process when L2-01 = 1, 2, 3, or 4 [Power Loss Ride Through Select = Enabled for L2-02 Time, Enabled while CPU Power Active, Kinetic Energy Backup: L2-02, or Kinetic Energy Backup: CPU Power].

**■ L5-01: Number of Auto-Restart Attempts**

| No. (Hex.)   | Name                            | Description  | Default (Range)     |
|--------------|---------------------------------|--|---------------------|
| L5-01 (049E) | Number of Auto-Restart Attempts | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the number of times that the drive will try to restart. | 0<br>(0 - 10 times) |

The drive resets the number of Auto Restart attempts to 0 in these conditions:

- The drive operates correctly for 10 minutes after a fault restart.
- When you manually clear a fault after the drive triggers protective functions.
- When you re-energize the drive.

**■ L5-02: Fault Contact at Restart Select**

| No. (Hex.)   | Name                            | Description  | Default (Range) |
|--------------|---------------------------------|--|-----------------|
| L5-02 (049F) | Fault Contact at Restart Select | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the function that sends signals to the MFDO terminal set for Fault [H2-xx = E] while the drive is automatically restarting. | 0<br>(0, 1)     |

**0 : Active Only when Not Restarting**

**1 : Always Active**

**■ L5-04: Interval Method Restart Time**

| No. (Hex.)   | Name                         | Description  | Default (Range)           |
|--------------|------------------------------|--|---------------------------|
| L5-04 (046C) | Interval Method Restart Time | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the time interval between each Auto Restart attempt. This function is enabled when L5-05 = 1 [Auto Restart Operation Selection = Use L5-04 Time]. | 10.0 s<br>(0.5 - 600.0 s) |

**■ L5-05: Auto-Restart Method**

| No. (Hex.)   | Name                | Description   | Default (Range) |
|--------------|---------------------|---|-----------------|
| L5-05 (0467) | Auto-Restart Method | <input checked="" type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input checked="" type="checkbox"/> EZOLV<br>Sets the count method for the Auto Restart operation. | 0<br>(0, 1)     |

**0 : Continuous/Immediate Attempts**

Counts the number of successful fault resets through Auto Restart.

When this value > L5-01, the drive will send a fault signal and fault code to the keypad and the motor will coast to stop.

**1 : Interval/Attempt after L5-04 sec**

Counts the number of all fault resets (successful and unsuccessful) through Auto Restart. The drive repeats the Auto Restart process in the intervals set in L5-04 [Interval Method Restart Time].

When this value > L5-01, the drive will send a fault signal and fault code to the keypad and the motor will coast to stop.

**■ L5-07: Fault Reset Enable Select Grp1**

| No. (Hex.)   | Name                           | Description  | Default (Range)    |
|--------------|--------------------------------|--|--------------------|
| L5-07 (0B2A) | Fault Reset Enable Select Grp1 | <br>Use these 4 digits to set the Auto Restart function for oL1 to oL4. From left to right, the digits set oL1, oL2, oL3, and oL4, in order. | 1111 (0000 - 1111) |

0000 : Disabled

0001 : Enabled (—/—/—/oL4)

0010 : Enabled (—/—/oL3/—)

0011 : Enabled (—/—/oL3/oL4)

0100 : Enabled (—/oL2/—/—)

0101 : Enabled (—/oL2/—/oL4)

0110 : Enabled (—/oL2/oL3/—)

0111 : Enabled (—/oL2/oL3/oL4)

1000 : Enabled (oL1/—/—/—)

1001 : Enabled (oL1/—/—/oL4)

1010 : Enabled (oL1/—/oL3/—)

1011 : Enabled (oL1/—/oL3/oL4)

1100 : Enabled (oL1/oL2/—/—)

1101 : Enabled (oL1/oL2/—/oL4)

1110 : Enabled (oL1/oL2/oL3/—)

1111 : Enabled (oL1/oL2/oL3/oL4)

 


Figure 12.124 Setting Digits and Fault Code

**■ L5-08: Fault Reset Enable Select Grp2**

| No. (Hex.)   | Name                           | Description  | Default (Range)    |
|--------------|--------------------------------|--|--------------------|
| L5-08 (0B2B) | Fault Reset Enable Select Grp2 | <br>Use these 4 digits to set the Auto Restart function for Uv1, ov, oH1, and GF. From left to right, the digits set Uv1, ov, oH1, and GF, in order. | 1111 (0000 - 1111) |

0000 : Disabled

0001 : Enabled (—/—/—/GF)

0010 : Enabled (—/—/oH1/—)

0011 : Enabled (—/—/oH1/GF)

0100 : Enabled (—/ov/—/—)

0101 : Enabled (—/ov/—/GF)

0110 : Enabled (—/ov/oH1/—)

0111 : Enabled (—/ov/oH1/GF)

1000 : Enabled (Uv1/—/—/—)

1001 : Enabled (Uv1/—/—/GF)

- 1010 : Enabled (Uv1/–/oH1/–)**  
**1011 : Enabled (Uv1/–/oH1/GF)**  
**1100 : Enabled (Uv1/ov/–/–)**  
**1101 : Enabled (Uv1/ov/–/GF)**  
**1110 : Enabled (Uv1/ov/oH1/–)**  
**1111 : Enabled (Uv1/ov/oH1/GF)**

 


Figure 12.125 Setting Digits and Fault Code

## ◆ L6: Torque Detection

The overtorque/undertorque detection function prevents damage to machinery and loads.

Overtorque is when there is too much load on the machine. If the motor current or output torque is at the overtorque detection level for the overtorque detection time, the drive will output an alarm and turn off the output.

Undertorque is when a load suddenly decreases. When the motor current or output torque is at the undertorque detection level for the undertorque detection time, the drive will output an alarm and turn off the output.

You can use the undertorque detection function to detect these conditions, for example:

- Machine belt cuts
- Unusual operation of the electromagnetic contactor on the drive output side
- Clogged output side air filters in fans and blowers
- Damage to blade tips and broken string

### Note:

If there is *oC* [Overcurrent] or *oLI* [Motor Overload], the drive can stop during overtorque conditions. Use torque detection to identify overload conditions before the drive detects *oC* or *oLI* and stops. Use this function to detect issues that occur in the application.

## ■ Parameter Settings

You can individually set the two overtorque/undertorque detection functions with the drive. Use the information in [Table 12.70](#) to set the parameters.

Table 12.70 Overtorque/Undertorque Detection Parameters

| Configuration Parameter   | Overtorque/Undertorque Detection 1                               | Overtorque/Undertorque Detection 2                               |
|---|--|--|
| MFDO Function Select  | H2-01, H2-02, and H2-03 = B<br>N.O.: Activated when detected     | H2-01, H2-02, and H2-03 = 18<br>N.O.: Activated when detected    |
| • Terminal MA-MC<br>• Terminal P1-C1<br>• Terminal P2-C2        | H2-01, H2-02, and H2-03 = 17<br>N.C.: Disactivated when detected | H2-01, H2-02, and H2-03 = 19<br>N.C.: Disactivated when detected |
| Detection conditions and selection of operation after detection | L6-01  | L6-04  |
| Detection Level   | L6-02<br>Analog Input Terminal <sup>*1</sup><br>H3-xx = 7        | L6-05<br>-   |
| Detection Time  | L6-03  | L6-06  |

\*1 You can also use an analog input terminal to supply the torque detection level. To enable this function, set *H3-xx = 7* [MFAI Function Selection = Overtorque/Undertorque DetectLv]. If both *L6-02* and *H3-xx = 7* are set, the analog input has priority and the setting of *L6-02* is disabled.

You cannot use Overtorque/Undertorque Detection 2 to set the detection level for the analog input terminals.

### Note:

In V/f Control, the drive uses the current level (100% of the drive rated output current) to detect overtorque/undertorque. In vector control, the drive uses the motor torque (100% of the motor rated torque) to detect overtorque/undertorque. When you enable the mechanical weakening detection function, the overtorque/undertorque detection level for all control modes is the current level (100% of the drive rated output current).

## ■ Time Chart for Detection of Overtorque/Undertorque

### Overtorque Detection Time Chart

When you use Overtorque/Undertorque Detection 1, the drive detects overtorque if the motor current or motor torque is at the detection level set in *L6-02 [Torque Detection Level 1]* for the time set in *L6-03 [Torque Detection Time 1]*. Parameter *L6-01 [Torque Detection Selection 1]* sets the operation after detection.

When you use Overtorque/Undertorque Detection 2, set *L6-04 [Torque Detection Selection 2]*, *L6-05 [Torque Detection Level 2]*, and *L6-06 [Torque Detection Time 2]*.

Set the terminal that outputs the alarm in *H2-01 to H2-03 [MFDO Function Select]*.

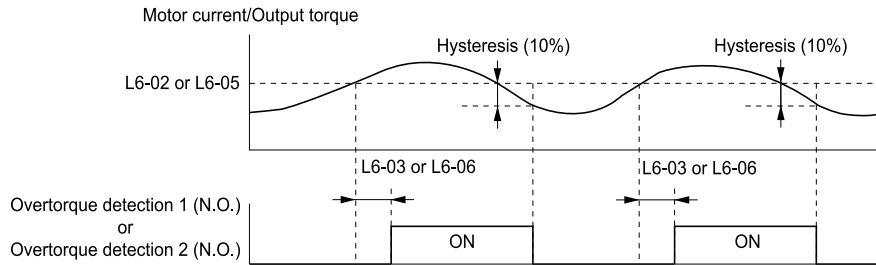


Figure 12.126 Overtorque Detection Time Chart

#### Note:

The drive applies a hysteresis of approximately 10% of the drive rated output current or the motor rated torque to the overtorque/undertorque detection function.

### Undertorque Detection Time Chart

When you use Overtorque/Undertorque Detection 1, the drive detects undertorque if the motor current or motor torque is less than or equal to the detection level set in *L6-02* for the time set in *L6-03*. Parameter *L6-01* sets the operation after detection.

When you use Overtorque/Undertorque Detection 2, set the operation in *L6-04*, *L6-05*, and *L6-06*.

Set the terminal that outputs an alarm in *H2-01 to H2-03*.

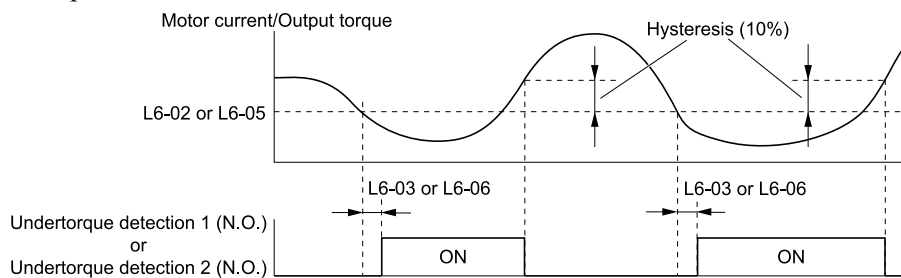


Figure 12.127 Undertorque Detection Time Chart

#### Note:

The drive applies a hysteresis of approximately 10% of the drive rated output current or the motor rated torque to the overtorque/undertorque detection function.

## ■ Mechanical Weakening Detection

The Mechanical Weakening Detection function detects the mechanical weakening of a machine that can cause overtorque or undertorque because of motor speed and total drive operation time.

The drive activates the function if the drive total operation time is longer than the time set in *L6-11 [Mech Fatigue Hold Off Time]*. You can use *U4-01 [Cumulative Ope Time]* to monitor the total operation time.

### Parameter Settings

If overtorque or undertorque occur during the speed range set in *L6-08 [Mechanical Fatigue Detect Select]* and *L6-09 [Mech Fatigue Detect Speed Level]* for the length of time set in *L6-10 [Mech Fatigue Detect Delay Time]*, the drive will detect Mechanical Weakening. The drive uses *L6-01 to L6-03 [Torque Detection 1 Setting Parameter]* to detect *oL5 [Mechanical Weakening Detection 1]* or *UL5 [Mechanical Weakening Detection 2]*. Parameter *L6-08* sets the operation after detection.

Set the terminal that outputs the fault in *H2-01 to H2-03 [MFDO Function Selection]*.

Table 12.71 Mechanical Weakening Detection Settings Parameters

| Configuration Parameter             |  | Mechanical Deterioration Detection |
|-------------------------------------|--|------------------------------------|
| MFDO Function Select                | <ul style="list-style-type: none"> <li>• Terminal MA-MC</li> <li>• Terminal P1-C1</li> <li>• Terminal P2-C2</li> </ul> | H2-01, H2-02, and H2-03 = 22       |
| Operation Selection after Detection |  | L6-08                              |
| Detection Start Time                |  | L6-11                              |
| Speed Range                         | Detection Criteria   | L6-08                              |
|                                     | Detection Level  | L6-09                              |
|                                     | Detection Time   | L6-10                              |
| Overtorque                          | Detection Criteria   | L6-01                              |
|                                     | Detection Level  | L6-02                              |
|                                     | Detection Time   | L6-03                              |

### ■ L6-01: Torque Detection Selection 1

| No.<br>(Hex.)   | Name                            | Description   | Default<br>(Range) |
|-----------------|---------------------------------|---|--------------------|
| L6-01<br>(04A1) | Torque Detection Selection<br>1 | <div style="display: flex; gap: 5px;"> <span>V/F</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the speed range that detects overtorque and undertorque and the operation of drives (operation status) after detection.</p> | 0<br>(0 - 8)       |

The drive detects overtorque if the motor current or output torque is more than the level set in *L6-02 [Torque Detection Level 1]* for the length of time set in *L6-03 [Torque Detection Time 1]*. The drive detects undertorque if the motor current or output torque is less than the level set in *L6-02* for the length the time set in *L6-03*.

#### 0 : Disabled

The drive will not detect overtorque or undertorque.

#### 1 : oL @ Speed Agree - Alarm only

The drive detects overtorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs an *oL3 [Overtorque Detection 1]* and operation continues.

#### 2 : oL @ RUN - Alarm only

When the Run command is enabled, the drive constantly detects overtorque. The drive outputs an *oL3* and operation continues.

#### 3 : oL @ Speed Agree - Fault

The drive detects overtorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs an *oL3 [Overtorque Detection 1]* and operation stops.

#### 4 : oL @ RUN - Fault

When the Run command is enabled, the drive constantly detects overtorque. The drive outputs an *oL3* and operation stops.

#### 5 : UL @ Speed Agree - Alarm only

The drive detects undertorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs a *UL3 [Undertorque Detection 1]* and operation continues.

#### 6 : UL @ RUN - Alarm only

When the Run command is enabled, the drive constantly detects undertorque. The drive outputs a *UL3* and operation continues.

#### 7 : UL @ Speed Agree - Fault

The drive detects undertorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs a *UL3* and operation stops.

#### 8 : UL @ RUN - Fault

When the Run command is enabled, the drive constantly detects undertorque. The drive outputs a *UL3* and operation stops.

### ■ L6-02: Torque Detection Level 1

| No. (Hex.)   | Name                     | Description  | Default (Range)    |
|--------------|--------------------------|--|--------------------|
| L6-02 (04A2) | Torque Detection Level 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the detection level for Overtorque/Undertorque Detection 1. In V/f control, drive rated output current = 100% value. In vector control, motor rated torque = 100% value.</p> | 150%<br>(0 - 300%) |

**Note:**

- Set the torque detection level as a percentage of the drive rated output current in all control methods to set the mechanical weakening detection level.
- You can also use an analog input terminal to supply the torque detection level. To enable this function, set  $H3-xx = 7$  [MFAI Function Select = Overtorque/Undertorque DetectLvl]. If you set L6-02 and  $H3-x = 7$ , the analog input is most important and the drive disables L6-02.

### ■ L6-03: Torque Detection Time 1

| No. (Hex.)   | Name                    | Description  | Default (Range)         |
|--------------|-------------------------|--|-------------------------|
| L6-03 (04A3) | Torque Detection Time 1 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the detection time for Overtorque/Undertorque Detection 1.</p> | 0.1 s<br>(0.0 - 10.0 s) |

### ■ L6-04: Torque Detection Selection 2

| No. (Hex.)   | Name                         | Description   | Default (Range) |
|--------------|------------------------------|---|-----------------|
| L6-04 (04A4) | Torque Detection Selection 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the speed range that detects overtorque and undertorque and the operation of drives (operation status) after detection.</p> | 0<br>(0 - 8)    |

The drive detects overtorque if the motor current or output torque is more than the level set in L6-05 [Torque Detection Level 2] for the length of time set in L6-06 [Torque Detection Time 2]. The drive detects undertorque if the motor current or output torque is less than the level set in L6-05 for the length the time set in L6-06.

#### 0 : Disabled

The drive will not detect overtorque or undertorque.

#### 1 : oL @ Speed Agree - Alarm only

The drive detects overtorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs an oL4 [Overtorque Detection 2] and operation continues.

#### 2 : oL @ RUN - Alarm only

When the Run command is enabled, the drive constantly detects overtorque. The drive outputs an oL4 and operation continues.

#### 3 : oL @ Speed Agree - Fault

The drive detects overtorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs an oL4 [Overtorque Detection 2] and operation stops.

#### 4 : oL @ RUN - Fault

When the Run command is enabled, the drive constantly detects overtorque. The drive outputs an oL4 and operation stops.

#### 5 : UL @ Speed Agree - Alarm only

The drive detects undertorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs a UL4 [Undertorque Detection 2] and operation continues.

#### 6 : UL @ RUN - Alarm only

When the Run command is enabled, the drive constantly detects undertorque. The drive outputs a UL4 and operation continues.

#### 7 : UL @ Speed Agree - Fault

The drive detects undertorque when the output frequency aligns with the frequency reference. Detection does not occur during acceleration/deceleration. The drive outputs a UL4 and operation stops.

#### 8 : UL @ RUN - Fault

When the Run command is enabled, the drive constantly detects undertorque. The drive outputs a *UL4* and operation stops

### ■ L6-05: Torque Detection Level 2

| No. (Hex.)   | Name                     | Description  | Default (Range)    |
|--------------|--------------------------|--|--------------------|
| L6-05 (04A5) | Torque Detection Level 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the detection level for Overtorque/Undertorque Detection 2. In V/f control, drive rated output current = 100% value. In vector control, motor rated torque = 100% value. | 150%<br>(0 - 300%) |

#### Note:

Overtorque/Undertorque Detection 2 cannot set the detection level for the analog input terminal.

### ■ L6-06: Torque Detection Time 2

| No. (Hex.)   | Name                    | Description  | Default (Range)         |
|--------------|-------------------------|--|-------------------------|
| L6-06 (04A6) | Torque Detection Time 2 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the detection time for Overtorque/Undertorque Detection 2. | 0.1 s<br>(0.0 - 10.0 s) |

### ■ L6-07: Torque Detection Filter Time

| No. (Hex.)   | Name                         | Description  | Default (Range)       |
|--------------|------------------------------|--|-----------------------|
| L6-07 (04E5) | Torque Detection Filter Time | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time constant for a primary filter to the torque reference or to the output current used to detect overtorque/undertorque. | 0 ms<br>(0 - 1000 ms) |

### ■ L6-08: Mechanical Fatigue Detect Select

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| L6-08 (0468) | Mechanical Fatigue Detect Select | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the speed where the drive detects mechanical deterioration and how the drive operates (operation status) after detection. | 0<br>(0 - 8)    |

The drive detects mechanical weakening through overtorque or undertorque as specified by the conditions set in L6-08 to L6-11 [*Mechanical Deterioration Detection Settings Parameters*]. Set overtorque/undertorque detection conditions in L6-01 to L6-03 [*Torque Detection 1 Settings Parameters*]. The drive disables the operation selection set in L6-01 [*Torque Detection Selection 1*].

#### 0 : Disabled

The drive does not detect mechanical weakening.

#### 1 : oL5 @ Speed > L6-09 - Alarm

When the speed (signed)  $\geq$  L6-09 [*Mech Fatigue Detect Speed Level*], the drive detects mechanical weakening. The drive will detect oL5 [*Mechanical Weakening Detection 1*] and continue operation.

#### 2 : oL5 @ |Speed| > L6-09 - Alarm

When the speed (absolute value)  $\geq$  L6-09, the drive detects mechanical weakening. The drive will detect oL5 and continue operation.

#### 3 : oL5 @ Speed > L6-09 - Fault

When the speed (signed)  $\geq$  L6-09, the drive detects mechanical weakening. The drive will detect oL5 and stop operation.

#### 4 : oL5 @ |Speed| > L6-09 - Fault

When the speed (absolute value)  $\geq$  L6-09, the drive detects mechanical weakening. The drive will detect oL5 and stop operation.

#### 5 : UL5 @ Speed < L6-09 - Alarm

When the speed (signed)  $\leq$  L6-09, the drive detects mechanical weakening. The drive will detect UL5 [*Mechanical Weakening Detection 2*] and continue operation.

#### 6 : UL5 @ |Speed| < L6-09 - Alarm

When the speed (absolute value)  $\leq$  L6-09, the drive detects mechanical weakening. The drive will detect UL5 and continue operation.

#### 7 : UL5 @ Speed < L6-09 - Fault

When the speed (signed)  $\leq L6-09$ , the drive detects mechanical weakening. The drive will detect *UL5* and stop operation.

**8 : UL5 @ |Speed| < L6-09 - Fault**

When the speed (absolute value)  $\leq L6-09$ , the drive detects mechanical weakening. The drive will detect *UL5* and stop operation.

**■ L6-09: Mech Fatigue Detect Speed Level**

| No. (Hex.)   | Name                            | Description  | Default (Range)             |
|--------------|---------------------------------|--|-----------------------------|
| L6-09 (0469) | Mech Fatigue Detect Speed Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the speed level where the drive will operate the mechanical deterioration detection function, as a percentage of the Maximum Output Frequency.</p> | 110.0%<br>(-110.0 - 110.0%) |

Parameters *L6-01 to L6-03 [Torque Detection 1 Settings Parameters]* set the overtorque/undertorque detection conditions.

When *L6-08 = 2, 4, 6, 8 [Mechanical Fatigue Detect Select = Speed : unsigned]*, the setting value of *L6-09* is the absolute value. When *L6-09* is set to a negative number, the drive processes this value as a positive number.

**■ L6-10: Mech Fatigue Detect Delay Time**

| No. (Hex.)   | Name                           | Description  | Default (Range)         |
|--------------|--------------------------------|--|-------------------------|
| L6-10 (046A) | Mech Fatigue Detect Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time for mechanical deterioration detection.</p> | 0.1 s<br>(0.0 - 10.0 s) |

When the detection conditions set in *L6-08 [Mechanical Weakening Detect Ope]* continue for the time set in *L6-10*, the drive will detect mechanical weakening.

**■ L6-11: Mech Fatigue Hold Off Time**

| No. (Hex.)   | Name                       | Description  | Default (Range)      |
|--------------|----------------------------|--|----------------------|
| L6-11 (046B) | Mech Fatigue Hold Off Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time that the drive will start mechanical deterioration detection triggered by the cumulative operation time of the drive.</p> | 0 h<br>(0 - 65535 h) |

When the total operation time of the drive is more than the value set in *L6-11*, the drive will detect mechanical weakening. Use *U4-01 [Cumulative Ope Time]* to monitor the drive total operation time.

**◆ L7: Torque Limit**

The torque limit function limits the internal torque reference for the drive to and keeps the torque from the motor constant. This function limits the torque applied to loads and regenerative torque to a value less than a set quantity. This function also prevents damage to machinery and increases the reliability of continuous operation. You can set torque limits individually for the four quadrants, which include torque direction (motoring/regeneration) and direction of motor rotation (forward/reverse). When the torque reference value is at the set torque limit, the MFDO terminal set for *During Torque Limit [H2-xx = 30]* activates.

**Note:**

- The drive output current limits maximum output torque. The drive limits torque to 150% of the rated output current for Heavy Duty Rating (HD) and to 110% of the rated output current for Normal Duty Rating (ND). The actual output torque is not more than the limits of the drive rated output current when you set the torque limit to a high value.
- When you use torque limits for lifting applications, do not lower the torque limit value too much. When the torque limit function is triggered, falls and rollbacks can occur because of sudden acceleration stops and stalls of the motor.

**■ Configuring Settings**

Use one of these methods to set torque limits:

- Individually set the four torque limit quadrants using *L7-01 to L7-04 [Torque Limit]*.
- Use MFAI to individually set the four torque limit quadrants. Set *H3-02, H3-10 = 10, 11, 12 [MFAI Function Select = Forward Torque Limit, Reverse Torque Limit, Regenerative Torque Limit]*.
- Use MFAI to set all four torque limit quadrants together. Set *H3-02, H3-10 = 15 [General Torque Limit]*.
- Use a communication option to set all four torque limit quadrants together.

Figure 12.128 shows the configuration method for each quadrant.



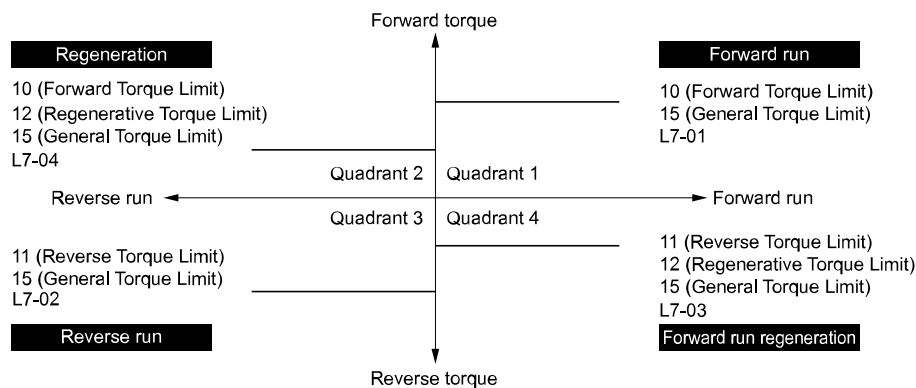


Figure 12.128 Torque Limits and Analog Input Setting Parameters

**Note:**

- When L7-01 to L7-04 and analog inputs or communication option torque limits set torque limits for the same quadrant, the drive enables the lowest value.  
In this example of parameter settings, the torque limit for quadrant 1 is 130% and the torque limit for quadrants 2, 3, and 4 is 150%.  
Settings: L7-01 = 130%, L7-02 to L7-04 = 200%, and MFAI torque limit = 150%
- The drive output current limits maximum output torque. The torque limit is 150% of the rated output current for HD and to 120% of the rated output current for ND. The actual output torque is not more than the limits of the drive rated output current when you set the torque limit to a high value.

■ **L7-01: Forward Torque Limit**

| No. (Hex.)       | Name                 | Description  | Default (Range) |
|------------------|----------------------|--|-----------------|
| L7-01 (04A7) RUN | Forward Torque Limit | V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/><br>Sets the torque limit value for forward motoring as a percentage, where motor rated torque is the 100% value. | 200% (0 - 300%) |

**Note:**

- The lower torque limit is enabled when you set the torque limit by the following method.  
–Set H3-02 or H3-10 = 10, 15 [MFAI Function Select = Forward Torque Limit, General Torque Limit].  
–Use a communication option to set the torque limits
- You must think about drive capacity when a large quantity of torque is necessary. If you set the value too high, the drive can detect oC [Overcurrent].
- If you set the value too low with large loads, the motor can stall.

■ **L7-02: Reverse Torque Limit**

| No. (Hex.)       | Name                 | Description   | Default (Range) |
|------------------|----------------------|---|-----------------|
| L7-02 (04A8) RUN | Reverse Torque Limit | V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/><br>Sets the torque limit value for reversed motoring as a percentage, where motor rated torque is the 100% value. | 200% (0 - 300%) |

**Note:**

- The lower torque limit is enabled when you set the torque limit by the following method.  
–Set H3-02 or H3-10 = 10, 15 [MFAI Function Select = Forward, Reverse/Regenerative Torque Limit].  
–Use a communication option to set the torque limits
- You must think about drive capacity when a large quantity of torque is necessary. If you set the value too high, the drive can detect oC [Overcurrent].
- If you set the value too low with large loads, the motor can stall.

■ **L7-03: Forward Regenerative Trq Limit**

| No. (Hex.)       | Name                           | Description   | Default (Range) |
|------------------|--------------------------------|---|-----------------|
| L7-03 (04A9) RUN | Forward Regenerative Trq Limit | V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV <input type="checkbox"/><br>Sets the torque limit value for forward regenerative conditions as a percentage of the motor rated torque. | 200% (0 - 300%) |

**Note:**

- The lower torque limit is enabled when you set the torque limit by the following method.
  - Set H3-02 or H3-10 = 10, 15 [MFAI Function Select = Forward, Reverse/Regenerative Torque Limit].
  - Use a communication option to set the torque limits
- You must think about drive capacity when a large quantity of torque is necessary. If you set the value too high, the drive can detect *oC* [Overcurrent].
- If you set the value too low with large loads, the motor can stall.

■ **L7-04: Reverse Regenerative Trq Limit**

| No. (Hex.)       | Name                           | Description  | Default (Range) |
|------------------|--------------------------------|--|-----------------|
| L7-04 (04AA) RUN | Reverse Regenerative Trq Limit | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the torque limit value for reversed regenerative conditions as a percentage of the motor rated torque. | 200% (0 - 300%) |

**Note:**

- Use this method to set the torque limit and enable the lower torque limit:
  - Set H3-02 or H3-10 = 10, 15 [MFAI Function Select = Forward, Reverse/Regenerative Torque Limit].
  - Use a communication option to set the torque limits
- You must think about drive capacity when a large quantity of torque is necessary. If you set the value too high, the drive can detect *oC* [Overcurrent].
- If you set the value too low with large loads, the motor can stall.

■ **L7-06: Torque Limit Integral Time**

| No. (Hex.)   | Name                       | Description   | Default (Range)       |
|--------------|----------------------------|---|-----------------------|
| L7-06 (04AC) | Torque Limit Integral Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the integral time constant for the torque limit function. | 200 ms (5 - 10000 ms) |

Decrease the setting value to increase torque limit responsiveness when you use torque limits and L7-07 = 1 [Torque Limit during Accel/Decel = Proportional & Integral control].

If there is hunting when torque limits are active, increase the setting value.

■ **L7-07: Torque Limit during Accel/Decel**

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| L7-07 (04C9) | Torque Limit during Accel/Decel | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the torque limit function during acceleration and deceleration. | 0 (0, 1)        |

**0 : Proportional only**

The torque limit function works with proportional control during acceleration and deceleration, and switches to integral control at constant speed. Use this setting when quickly reaching the target speed is more important than the torque limit during speed changes.

**1 : Proportional & Integral control**

The torque limit function always uses integral control. Use this setting when a very accurate torque limit is necessary during speed changes, for example in winding machine applications.

If you make the torque limit the most important, it can:

- Increase the acceleration and deceleration times.
- Not let the motor speed reach the frequency reference value during run at constant speed.

■ **L7-16: Torque Limit Process at Start**

| No. (Hex.)   | Name                          | Description   | Default (Range) |
|--------------|-------------------------------|---|-----------------|
| L7-16 (044D) | Torque Limit Process at Start | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span style="background-color: black; color: white; padding: 2px;">OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Assigns a time filter to allow the torque limit to build at start. | 1 (0, 1)        |

**0 : Disabled**

There is torque limit at start without a delay time.

Use this setting to maximize the response time when sudden acceleration or deceleration at start is necessary.

**1 : Enabled**

There is a delay time of 64 ms at start to build the torque limit.

## ◆ L8: Drive Protection

L8 parameters set protective functions that prevent faults such as overheating, phase loss, and ground faults.

### ■ L8-01: 3% ERF DB Resistor Protection

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| L8-01 (04AD) | 3% ERF DB Resistor Protection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to enable braking resistor protection with a Yaskawa ERF series braking resistor (3% ED) installed on the heatsink. | 0<br>(0, 1)     |

#### 0 : No

Disables braking resistor protection. Use this setting for dynamic braking options that are not Yaskawa ERF series braking resistors.

#### 1 : Yes

Enables protection for Yaskawa ERF series braking resistors.

##### Note:

Set  $L8-01 = 1$  and  $H2-01$  to  $H2-03 = D$  [MFDO Function Select = Braking Resistor Fault]. Use a sequence to turn OFF power with MFDO.

### ■ L8-02: Overheat Alarm Level

| No. (Hex.)   | Name                 | Description   | Default (Range)                             |
|--------------|----------------------|---|---|
| L8-02 (04AE) | Overheat Alarm Level | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the <i>oH</i> detection level in temperature. | Determined by o2-04, C6-01<br>(50 - 150 °C) |

If the heatsink temperature is more than the temperature set in this parameter, the drive detects an overheat pre-alarm. To enable this function, set one of  $H2-01$  to  $H2-03$  [MFDO Function Select] to 20 [Drive Overheat Pre-Alarm (*oH*)].

If the temperature increases to the overheat fault level, the drive will trigger an *oH1* [Heatsink Overheat] fault and stop operation.

### ■ L8-03: Overheat Pre-Alarm Selection

| No. (Hex.)   | Name                         | Description  | Default (Range) |
|--------------|------------------------------|--|-----------------|
| L8-03 (04AF) | Overheat Pre-Alarm Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the operation of drives when an <i>oH</i> alarm is detected. | 3<br>(0 - 4)    |

#### 0 : Ramp to Stop

The drive ramps the motor to stop in the deceleration time. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

#### 1 : Coast to Stop

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

#### 2 : Fast Stop (Use C1-09)

The drive stops the motor in the deceleration time set in  $C1-09$  [Fast Stop Time]. The output terminal set for *Fault* [ $H2-01$  to  $H2-03 = E$ ] activates.

#### 3 : Alarm Only

The keypad shows *oH* and the drive continues operation. The output terminal set for *Alarm* [ $H2-01$  to  $H2-03 = 10$ ] activates.

#### 4 : Operate at Reduced Speed (L8-19)

The drive decelerates to the level set in  $L8-19$  [Freq Reduction @ *oH* Pre-Alarm] and continues operation. *oH* flashes on the keypad.

*oH* flashes on the keypad. When the alarm is output, the drive decelerates each 10 seconds. If the drive decelerates 10 times and the alarm continues to be output, the output terminal set for *oH Pre-Alarm Reduction Limit* [ $H2-01$

to  $H2-03 = 4D$ ] activates. When the alarm is not output during deceleration, the drive accelerates until it is at the frequency reference that was applicable before the alarm was turned off. Figure 12.129 shows the output of the alarm and the drive operation at a decreased output frequency.

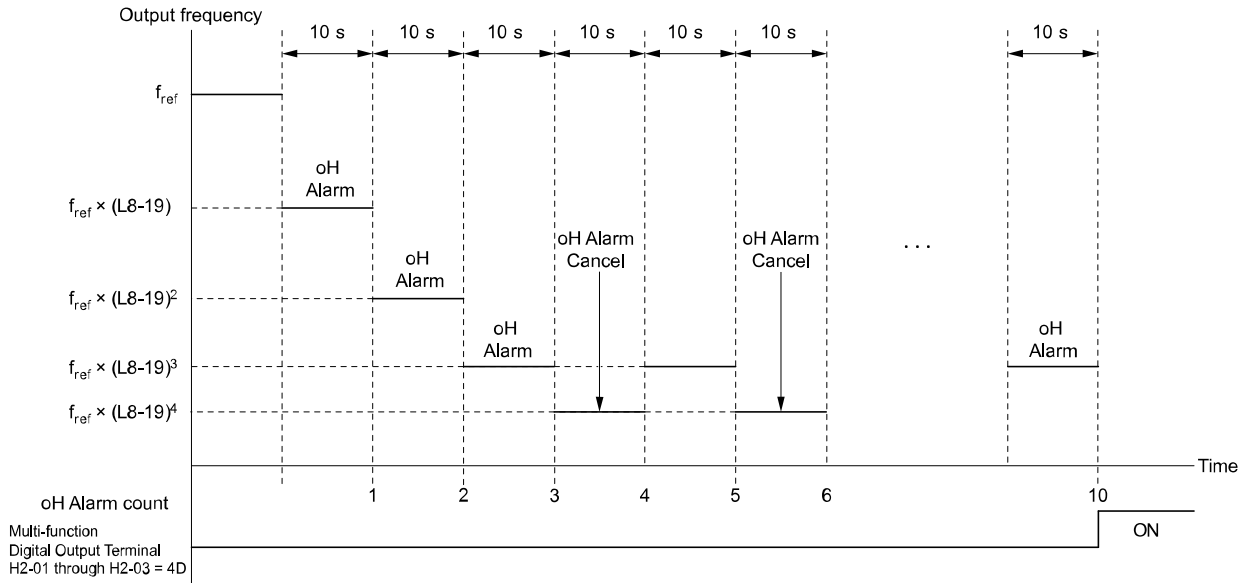


Figure 12.129 Drive Operation at a Decreased Output Frequency when the Overheat Alarm is Output

### ■ L8-05: Input Phase Loss Protection Sel

| No. (Hex.)   | Name                            | Description  | Default (Range) |
|--------------|---------------------------------|--|-----------------|
| L8-05 (04B1) | Input Phase Loss Protection Sel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to enable and disable input phase loss detection. | 1 (0, 1)        |

0 : Disable

1 : Enabled

The drive measures ripples in DC bus voltage to detect input phase loss.

The drive detects phase loss when power supply phase loss occurs or the main circuit capacitor becomes unusable, which causes *PF [Input Phase Loss]* to show on the keypad.

Disable the detection of the input power supply phase loss function in these conditions:

- During deceleration
- The run command is not input
- The output current is less than 30% of the drive rated current.

### ■ L8-07: Output Phase Loss Protection Sel

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| L8-07 (04B3) | Output Phase Loss Protection Sel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to enable and disable output phase loss detection. The drive starts output phase loss detection when the output current decreases to less than 5% of the drive rated current. | 0 (0 - 2)       |

**Note:**

The drive can incorrectly start output phase loss detection in these conditions:

- The motor rated current is very small compared to the drive rating.
- The drive is operating a PM motor with a small load.

0 : Disabled

1 : Fault when one phase is lost

If the drive loses one output phase, it will trigger *LF [Output Phase Loss]*.

The output turns off and the motor coasts to stop.

2 : Fault when two phases are lost

If the drive loses more than one output phase, it will trigger *LF [Output Phase Loss]*.

The output turns off and the motor coasts to stop.

## ■ L8-09: Output Ground Fault Detection

| No. (Hex.)   | Name                          | Description  | Default (Range)            |
|--------------|-------------------------------|--|----------------------------|
| L8-09 (04B5) | Output Ground Fault Detection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function to enable and disable ground fault protection. | Determined by o2-04 (0, 1) |

### 0 : Disable

The drive will not detect ground faults.

### 1 : Enabled

If there is high leakage current or a ground short circuit in one or two output phases, the drive will detect *GF* [Ground Fault].

#### Note:

If the ground path impedance is low, the drive can detect *oC* [Overcurrent], *SC* [Out Short Circuit or IGBT Fault], or *ov* [DC Bus Overvoltage] instead of *GF*.

## ■ L8-10: Heatsink Fan Operation Selection

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| L8-10 (04B6) | Heatsink Fan Operation Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets operation of the heatsink cooling fan. | 0 (0 - 2)       |

### 0 : During Run, w/ L8-11 Off-Delay

The drive turns on the fan when a Run command is active.

### 1 : Always On

The fan turns on when you supply power to the drive. When you release the Run command and the delay time set in *L8-11* [HeatsinkCoolingFan Off DelayTime] is expired, the fan stops. his setting extends the fan lifetime.

### 2 : On when Drive Temp Reaches L8-64

The fan turns on when the drive detects that the main circuit is overheating.

## ■ L8-11: Heatsink Fan Off-Delay Time

| No. (Hex.)   | Name                        | Description   | Default (Range)  |
|--------------|-----------------------------|---|------------------|
| L8-11 (04B7) | Heatsink Fan Off-Delay Time | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the length of time that the drive will wait before it stops the cooling fan after it cancels the Run command when <i>L8-10</i> = 0 [Heatsink Cooling Fan Ope Select = Dur Run (OffDly)]. | 60 s (0 - 300 s) |

## ■ L8-12: Ambient Temperature Setting

| No. (Hex.)   | Name                        | Description  | Default (Range)         |
|--------------|-----------------------------|--|-------------------------|
| L8-12 (04B8) | Ambient Temperature Setting | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the ambient temperature of the drive installation area. | 40 °C (-10 °C - +60 °C) |

#### Note:

The setting range changes when the *L8-35* [Installation Method Selection] value changes:

- 0 [IP20/UL Open Type]: -10 °C to +60 °C
- 1 [Side-by-Side Mounting]: -10 °C to +50 °C
- 2 [IP20/UL Type 1]: -10 °C to +50 °C
- 3 [External Heatsink]: -10 °C to +50 °C

The drive automatically adjusts the drive rated current to the best value as specified by the set temperature. Set the ambient temperature of the area where you install the drive to a value that is more than the drive rating.

Refer to [Derating Depending on Ambient Temperature on page 326](#) for information about derating as specified by ambient temperature.

■ **L8-15: Drive oL2 @ Low Speed Protection**

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| L8-15 (04BB) | Drive oL2 @ Low Speed Protection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to decrease drive overload at low speeds to prevent damage to the main circuit transistor during low speed operation (at 6 Hz or slower) to prevent oL2 [Drive Overloaded].</p> | 1<br>(0, 1)     |

**Note:**

Contact Yaskawa or your nearest sales representative for consultation before disabling this function at low speeds. Frequent operation of drives under conditions of high output current in low speed ranges may shorten the service life of the drive IGBT due to heat stress.

**0 : Disabled (No Additional Derate)**

The drive does not decrease the overload protection level.

**1 : Enabled (Reduced oL2 Level)**

When the drive detects oL2 during low speed operation, it automatically decreases the overload detection level.

At zero speed, the drive derates the overload by 50%.

■ **L8-18: Software Current Limit Selection**

| No. (Hex.)   | Name                             | Description  | Default (Range) |
|--------------|----------------------------------|--|-----------------|
| L8-18 (04BE) | Software Current Limit Selection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Set the software current limit selection function to prevent damage to the main circuit transistor caused by too much current.</p> | 0<br>(0, 1)     |

**0 : Disabled**

When the output current is at the software current limit value, the drive does not restrict the output voltage.

**Note:**

The drive may detect an oC [Overcurrent] when loads are particularly heavy or the acceleration time is particularly short.

**1 : Enabled**

When the output current is at the software current limit value, the drive decreases output voltage to decrease output current.

When the output current decreases to the software current limit level, the drive starts usual operation.

■ **L8-19: Freq Reduction @ oH Pre-Alarm**

| No. (Hex.)   | Name                          | Description   | Default (Range)    |
|--------------|-------------------------------|---|--------------------|
| L8-19 (04BF) | Freq Reduction @ oH Pre-Alarm | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the ratio at which the drive derates the frequency reference during an oH alarm.</p> | 0.8<br>(0.1 - 0.9) |

When these two conditions are correct, this function is enabled:

- L8-03 = 4 [Overheat Pre-Alarm Ope Selection = Run@L8-19 Rate]
- oH alarm is output

■ **L8-27: Overcurrent Detection Gain**

| No. (Hex.)   | Name                       | Description   | Default (Range)           |
|--------------|----------------------------|---|---------------------------|
| L8-27 (04DD) | Overcurrent Detection Gain | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the PM motor overcurrent detection level as a percentage of the motor rated current value.</p> | 300.0%<br>(0.0 - 1000.0%) |

**Note:**

- If the setting value for L8-27 is the same or almost the same as the setting value for L7-xx [Torque Limit], the drive can detect oC2 [Overcurrent2].
- On drives with software versions PRG:1022 and later, this function is disabled when you set L8-27 = 0.0. Under usual circumstances, do not set L8-27 = 0.0. The "PRG" column on the nameplate on the right side of the drive identifies the software version. You can also use U1-25 [Software Number] to identify the software version.
- If the drive rated current is much higher than the motor rated current, PM motor magnets can demagnetize when current flows at the drive overcurrent detection level. When you set a low overcurrent detection level to prevent PM motor demagnetization, make sure that you adjust L8-27.

### ■ L8-29: Output Unbalance Detection Sel

| No.<br>(Hex.)   | Name                           | Description  | Default<br>(Range) |
|-----------------|--------------------------------|--|--------------------|
| L8-29<br>(04DF) | Output Unbalance Detection Sel | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to detect <i>LF2</i> . | 1<br>(0, 1)        |

This function prevents damage to PM motors. Current unbalance can heat a PM motor and demagnetize the magnets. When the current is unbalanced, the drive will detect *LF2* to stop the motor and prevent damage to the motor.

**0 : Disabled**

**1 : Enabled**

### ■ L8-31: LF2 Detection Time

| No.<br>(Hex.)   | Name               | Description   | Default<br>(Range) |
|-----------------|--------------------|---|--------------------|
| L8-31<br>(04E1) | LF2 Detection Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the LF2 [Output Current Imbalance] detection time. | 3<br>(1 – 100)     |

When the output current is unbalanced for longer than the time set in *L8-31*, the drive detects *LF2*.

**Note:**

- Set *L8-29* = 1 [*Output Unbalance Detection Sel* = Enabled] to enable *L8-31*.
- If the drive incorrectly detects *LF2*, increase *L8-31* in 5-unit increments.
- The keypad shows *L8-31* when *E9-01* = 1 [*Motor Type Selection* = Permanent Magnet (PM)] in EZ Vector Control.

### ■ L8-35: Installation Method Selection

| No.<br>(Hex.)   | Name                          | Description  | Default<br>(Range) |
|-----------------|-------------------------------|--|--------------------|
| L8-35<br>(04EC) | Installation Method Selection | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the type of drive installation. | 0<br>(0 - 3)       |

**Note:**

- Parameter *A1-03* [*Initialize Parameters*] does not initialize this parameter.
- This parameter is set to the correct value when the drive is shipped. Change the value only in these conditions:
  - Side-by-Side installation
  - When you install a UL Type 1 kit on an IP20/UL Open Type drive to convert the drive to an IP20/UL Type 1 drive.
  - Mounting a standard drive with the heatsink outside the enclosure panel.

The overload protection detection level for the drive is automatically adjusted to the optimal value in accordance with the setting value. Refer to [Derating Depending on Ambient Temperature on page 326](#) for information about derating as specified by ambient temperature.

#### **0 : IP20/UL Open Type**

Use this setting to install IP20/UL Open Type drives.

Make sure that there is 30 mm (1.18 in) minimum of space between drives or between the drive and side of the enclosure panel.

#### **1 : Side-by-Side Mounting**

Use this setting to install more than one drive side-by-side.

#### **2 : IP20/UL Type 1**

Use this setting to install IP20/UL Type 1 or IP55 drives.

#### **3 : External Heatsink**

Use this setting when the heatsink (cooling fin) is outside the control panel.

### ■ L8-40: Carrier Freq Reduction Off-Delay

| No.<br>(Hex.)   | Name                             | Description  | Default<br>(Range)                     |
|-----------------|----------------------------------|--|--|
| L8-40<br>(04F1) | Carrier Freq Reduction Off-Delay | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time until the automatically reduced carrier frequency returns to the condition before the reduction. | Determined by A1-02<br>(0.00 - 2.00 s) |

Set  $L8-40 \neq 0.00$  to enable the carrier frequency reduction function during start-up. When operation starts, the drive automatically decreases the carrier frequency. When the time set in  $L8-40$  is expired, the carrier frequency returns to the value set in  $C6-02$  [*Carrier Frequency Selection*].

■ **L8-41: High Current Alarm Selection**

| No. (Hex.)   | Name                         | Description   | Default (Range) |
|--------------|------------------------------|---|-----------------|
| L8-41 (04F2) | High Current Alarm Selection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function to cause an <i>HCA</i> [<i>Current Alarm</i>] when the output current is more than 150% of the drive rated current.</p> | 0<br>(0, 1)     |

**0 : No**

The drive will not detect *HCA*.

**1 : Yes**

If the output current is more than 150% of the drive rated current, the drive will detect *HCA*.

The MFDO terminal set for an *Alarm* [ $H2-01$  to  $H2-03 = 10$ ] activates.

■ **L8-51: STPo I Detection Level**

| No. (Hex.)             | Name                   | Description   | Default (Range)        |
|------------------------|------------------------|---|------------------------|
| L8-51 (0471)<br>Expert | STPo I Detection Level | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the <i>STPo</i> [<i>Motor Step-Out Detected</i>] detection level as a percentage of the motor rated current.</p> | 0.0%<br>(0.0 - 300.0%) |

**Note:**

The detection level is automatically calculated when  $L8-51 = 0$ .

■ **L8-52: STPo Integration Level**

| No. (Hex.)             | Name                   | Description  | Default (Range)    |
|------------------------|------------------------|--|--------------------|
| L8-52 (0472)<br>Expert | STPo Integration Level | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the detection level for <i>STPo</i> [<i>Motor Step-Out Detected</i>] related to the ACR integral value.</p> | 1.0<br>(0.1 - 2.0) |

■ **L8-53: STPo Integration Time**

| No. (Hex.)             | Name                  | Description  | Default (Range)         |
|------------------------|-----------------------|--|-------------------------|
| L8-53 (0473)<br>Expert | STPo Integration Time | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the length of time until the drive detects <i>STPo</i> after it is more than the value of <math>L8-51</math> [<i>STPo I Detection Level</i>].</p> | 1.0 s<br>(1.0 - 10.0 s) |

■ **L8-54: STPo Id Diff Detection**

| No. (Hex.)             | Name                   | Description  | Default (Range) |
|------------------------|------------------------|--|-----------------|
| L8-54 (0474)<br>Expert | STPo Id Diff Detection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the Id deviation detection function for <i>STPo</i> [<i>Motor Step-Out Detected</i>].</p> | 1<br>(0, 1)     |

**0 : Disabled**

**1 : Enabled**

■ **L8-55: Internal DB TransistorProtection**

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| L8-55 (045F) | Internal DB TransistorProtection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the protection function for the internal braking transistor.</p> | 1<br>(0, 1)     |

**0 : Disable**

Disables braking transistor protection.

Use this setting, if enabling the braking transistor can cause an *rF* [*Braking Resistor Fault*] in these conditions:



- With a regenerative converter, for example D1000.
- With a regenerative unit, for example R1000.
- When connecting braking resistor options to the drive, for example CDBR units.
- Without an internal braking transistor.

### 1 : Protection Enabled

Protects internal braking transistor when using a braking transistor or optional braking resistors.

#### ■ L8-56: Stall P @ Accel Activation Time

| No. (Hex.)                | Name                            | Description   | Default (Range)            |
|---------------------------|---------------------------------|---|----------------------------|
| L8-56<br>(047D)<br>Expert | Stall P @ Accel Activation Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length time that the acceleration stall prevention function can continue to operate before the drive detects an <i>STPo</i> [Motor Step-Out Detected]. | 5000 ms<br>(100 - 5000 ms) |

**Note:**

If this value is too small, it can cause incorrect detection of *STPo*. If this value is too large, the drive will not detect *STPo*.

#### ■ L8-57: Stall Prevention Retry Counts

| No. (Hex.)                | Name                          | Description   | Default (Range)      |
|---------------------------|-------------------------------|---|----------------------|
| L8-57<br>(047E)<br>Expert | Stall Prevention Retry Counts | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the number of times the acceleration stall prevention function can operate until speeds agree before the drive detects an <i>STPo</i> [Motor Step-Out Detected]. | 10<br>(1 - 10 times) |

**Note:**

If this value is too small, it can cause incorrect detection of *STPo*. If this value is too large, the drive will not detect *STPo*.

#### ■ L8-90: STPo Detection Level (Low Speed)

| No. (Hex.)                | Name                             | Description  | Default (Range)                         |
|---------------------------|----------------------------------|--|---|
| L8-90<br>(0175)<br>Expert | STPo Detection Level (Low Speed) | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input checked="" type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the detection level that the control fault must be equal to or more than to cause an <i>STPo</i> [Motor Step-Out Detected]. | Determined by A1-02<br>(0 - 5000 times) |

This function detects when PM motors are not synchronized.

The drive cannot detect when motors are not synchronized because the frequency reference is low during start up and the motor is locked. If fault detection is necessary in these conditions, set the control fault detection level to enable detection of desynchronization because of motor locking. Increase the setting in 5-unit increments.

#### ■ L8-93: Low Speed Pull-out DetectionTime

| No. (Hex.)                | Name                             | Description   | Default (Range)         |
|---------------------------|----------------------------------|---|-------------------------|
| L8-93<br>(073C)<br>Expert | Low Speed Pull-out DetectionTime | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time the drive will wait to start baseblock after detecting <i>LSo</i> [Low Speed Motor Step-Out]. | 1.0 s<br>(0.0 - 10.0 s) |

Set this parameter to 0.0 to disable the function.

#### ■ L8-94: Low Speed Pull-out Detect Level

| No. (Hex.)                | Name                            | Description  | Default (Range) |
|---------------------------|---------------------------------|--|-----------------|
| L8-94<br>(073D)<br>Expert | Low Speed Pull-out Detect Level | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the detection level for <i>LSo</i> [Low Speed Motor Step-Out] as a percentage of <i>E1-04</i> [Maximum Output Frequency]. | 3%<br>(0 - 10%) |

#### ■ L8-95: Low Speed Pull-out Amount

| No. (Hex.)                | Name                      | Description   | Default (Range)      |
|---------------------------|---------------------------|---|----------------------|
| L8-95<br>(077F)<br>Expert | Low Speed Pull-out Amount | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the average count of <i>LSo</i> [Low Speed Motor Step-Out] detections. | 10<br>(1 - 50 times) |

## 12.10 n: Special Adjustment

*n* parameters set these functions:

- Function to prevent hunting
- High-slip braking
- Motor line-to-line resistance online tuning
- Fine-tune the parameters that adjust motor control

### ◆ n1: Hunting Prevention

The Hunting Prevention function will not let low inertia or operation with a light load cause hunting. Hunting frequently occurs when you have a high carrier frequency and an output frequency less than 30 Hz.

#### ■ n1-01: Hunting Prevention Selection

| No. (Hex.)      | Name                         | Description   | Default (Range) |
|-----------------|------------------------------|---|-----------------|
| n1-01<br>(0580) | Hunting Prevention Selection | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to prevent hunting. | 0<br>(0, 1)     |

**Note:**

When you replace a V1000-series drive with a GA500 drive, set  $n1-01 = 1$  [*Hunting Prevention Selection = Enabled*].

When drive response is more important than the decrease of motor vibration, disable this function.

**0 : Disable**

**1 : Enabled**

#### ■ n1-02: Hunting Prevention Gain Setting

| No. (Hex.)                | Name                            | Description  | Default (Range)       |
|---------------------------|---------------------------------|--|-----------------------|
| n1-02<br>(0581)<br>Expert | Hunting Prevention Gain Setting | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the performance of the hunting prevention function. Usually it is not necessary to change this parameter. | 1.00<br>(0.00 - 2.50) |

Adjust this parameter in these conditions:

- When  $n1-01 = 1$  [*Hunting Prevention Selection = Enabled (Normal)*], if oscillation occurs when you operate a motor with a light load, increase the setting value in 0.1-unit increments.
- When  $n1-01 = 2$ , if the motor stalls, decrease the setting value in 0.1-unit increments.

#### ■ n1-03: Hunting Prevention Time Constant

| No. (Hex.)                | Name                             | Description  | Default (Range)                     |
|---------------------------|----------------------------------|--|-------------------------------------|
| n1-03<br>(0582)<br>Expert | Hunting Prevention Time Constant | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the primary delay time constant of the hunting prevention function. Usually it is not necessary to change this parameter. | Determined by o2-04<br>(0 - 500 ms) |

Adjust this parameter in these conditions:

- Load inertia is large: Increase the setting value. If the setting value is too high, response will be slower. Also, there will be oscillation when the frequency is low.
- Oscillation occurs at low frequencies: Decrease the setting value.

#### ■ n1-05: Hunting Prevent Gain in Reverse

| No. (Hex.)                | Name                            | Description  | Default (Range)       |
|---------------------------|---------------------------------|--|-----------------------|
| n1-05<br>(0530)<br>Expert | Hunting Prevent Gain in Reverse | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the performance of the hunting prevention function. This parameter adjusts Reverse run. Usually it is not necessary to change this parameter. | 0.00<br>(0.00 - 2.50) |

**Note:**

When you set  $n1-05 = 0$ , the value set in  $n1-02$  [*Hunting Prevention Gain Setting*] is effective when the motor rotates in reverse.

Adjust this parameter in these conditions:

- When  $n1-01 = 1$  [*Hunting Prevention Selection = Enabled (Normal)*], if oscillation occurs when you operate a motor with a light load, increase the setting value in 0.1-unit increments.
- When  $n1-01 = 2$ , if the motor stalls, decrease the setting value in 0.1-unit increments.

### ■ n1-13: DC Bus Stabilization Control

| No. (Hex.)                | Name                         | Description   | Default (Range) |
|---------------------------|------------------------------|---|-----------------|
| n1-13<br>(1B59)<br>Expert | DC Bus Stabilization Control | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the oscillation suppression function for the DC bus voltage. | 0<br>(0, 1)     |

**0 : Disabled**

**1 : Enabled**

**Note:**

If the DC bus voltage does not become stable with light loads and the drive detects *ov* [*Overvoltage*], set this parameter to 1.

### ■ n1-14: DC Bus Stabilization Time

| No. (Hex.)                | Name                      | Description  | Default (Range)               |
|---------------------------|---------------------------|--|-------------------------------|
| n1-14<br>(1B5A)<br>Expert | DC Bus Stabilization Time | <input checked="" type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Adjusts the responsiveness of the oscillation suppression function for the DC bus voltage. Set $n1-13 = 1$ [ <i>DC Bus Stabilization Control = Enabled</i> ] to enable this parameter. | 100.0 ms<br>(50.0 - 500.0 ms) |

**Note:**

Adjust this parameter in 100 ms increments.

## ◆ n2: Auto Freq Regulator (AFR)

The speed feedback detection reduction function (or AFR: Automatic Frequency Regulator) helps the speed become stable when you suddenly apply or remove a load.

**Note:**

Before you change *n2-xx parameters*, do one of these procedures:

- Set the motor parameters and V/f pattern correctly.
- Do Rotational Auto-Tuning.

### ■ n2-01: Automatic Freq Regulator Gain

| No. (Hex.)      | Name                          | Description   | Default (Range)        |
|-----------------|-------------------------------|---|------------------------|
| n2-01<br>(0584) | Automatic Freq Regulator Gain | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the gain of the AFR function as a magnification value. Usually it is not necessary to change this setting. | 1.00<br>(0.00 - 10.00) |

Adjust this parameter in these conditions:

- If hunting or oscillation occurs with light loads, increase the setting value in 0.05-unit increments and examine the response.
- When torque is not sufficient with heavy loads or to make the torque or speed response better, decrease the setting value in 0.05-unit increments and examine the response.

### ■ n2-02: Automatic Freq Regulator Time 1

| No. (Hex.)      | Name                            | Description   | Default (Range)        |
|-----------------|---------------------------------|---|------------------------|
| n2-02<br>(0585) | Automatic Freq Regulator Time 1 | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the time constant that sets the rate of change for the AFR function. Usually it is not necessary to change this setting. | 50 ms<br>(0 - 2000 ms) |

Adjust this parameter in these conditions:

- If there is hunting or oscillation with a light load, increase the setting value in 50 ms increments and examine the response. If the load inertia is large, increase the setting value in 50 ms increments and examine the response.
- If torque is not sufficient with a heavy load or if you must increase torque or speed responsiveness, decrease the setting value in 10 ms increments and examine the response.

**Note:**

- Set  $n2-02 \leq n2-03$  [Automatic Freq Regulator Time 2]. If  $n2-02 > n2-03$ , the drive will detect *oPE08* [Parameter Selection Error].
- When you change the value in  $n2-02$ , also change the value in  $C4-02$  [Torque Compensation Delay Time] by the same ratio.

■ **n2-03: Automatic Freq Regulator Time 2**

| No. (Hex.)   | Name                            | Description  | Default (Range)      |
|--------------|---------------------------------|--|----------------------|
| n2-03 (0586) | Automatic Freq Regulator Time 2 | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span><b>OLV</b></span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the time constant that sets the speed difference of the AFR function. Use this parameter for speed searches or regeneration. Usually it is not necessary to change this setting. | 750 ms (0 - 2000 ms) |

Adjust this parameter in these conditions:

- If the drive detects *ov* [Overvoltage] when acceleration stops under high-inertia loads, increase the setting value in 50 ms increments.  
If the drive detects *ov* when the load changes suddenly, increase the setting value in 50 ms increments.
- To increase the responsiveness of torque and speed, decrease the setting value in 10 ms increments and examine the response.

**Note:**

- Set  $n2-02 \leq n2-03$  [Automatic Freq Regulator Time 2]. If  $n2-02 > n2-03$ , the drive will detect *oPE08* [Parameter Selection Error].
- When you change the value in  $n2-03$ , also change the value in  $C4-06$  [Motor 2 Torque Comp Delay Time] by the same ratio.


◆ **n3: High Slip Braking (HSB) and Overexcitation Braking**

$n3$  parameters configure High Slip Braking and Overexcitation Deceleration.

■ **High Slip Braking (HSB)**

High slip braking quickly decelerates motors without braking resistors.

This lets you stop a motor more quickly than with the ramp to stop processes. This function is best for applications that do not frequently stop the motor, for example the fast stop function for high-inertia loads. Braking starts when the MFDI for *High Slip Braking (HSB) Activate* [ $H1-xx = 68$ ] activates.

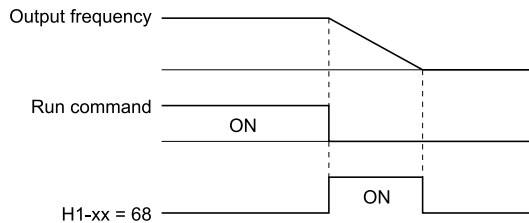

**Figure 12.130 High Slip Braking Time Chart**

An induction motor is necessary to use high slip braking. Set  $A1-02 = 0$  [Control Method Selection = V/f Control] to enable high slip braking:

**Principles of Operation**

HSB increases motor slip by significantly decreasing the frequency supplied to the motor at the same time that deceleration starts. A large quantity of current flows through the motor to increase the motor loss, and the motor decelerates while the motor windings consume the regenerative energy.

The drive keeps the motor current at a constant level during deceleration to prevent overvoltage and do automatic braking and it also keeps a slip level that causes the maximum quantity of deceleration torque.

**High Slip Braking Precautions**

- Do not use the high slip braking function in these applications:
  - Frequent deceleration
  - Deceleration time differences
  - Continuous regenerative loads
  - It is necessary to accelerate again during deceleration
- Motor loss increases during high slip braking. Use this function when the duty time factor is 5% ED or less and the braking time is 90 seconds or less. The load inertia and motor characteristics have an effect on the braking time.

- The drive ignores the configured deceleration time during high slip braking. To stop motors in the configured deceleration time, set  $L3-04 = 4$  [*Stall Prevention during Decel = Overexcitation/High Flux*].
- You cannot use high slip braking to decelerate deceleration at user-defined speeds. To decelerate at user-defined speeds, use the overexcitation deceleration function.
- You cannot accelerate the motor again during high slip braking until you fully stop the motor and input the Run command again.
- You cannot use high slip braking and the KEB Ride-Thru function at the same time. If you enable those two functions, the drive will detect  $oPE03$  [*Multi-Function Input Setting Err*].

### ■ Overexcitation Deceleration

Overexcitation deceleration quickly decelerates motors without braking resistors.

This lets you stop a motor more quickly than with the ramp to stop processes.

Overexcitation deceleration increases excitation current during deceleration to cause a large quantity of braking torque through motor overexcitation.

You can set the deceleration speed to adjust the deceleration time for overexcitation deceleration. Overexcitation deceleration lets you accelerate the motor again during deceleration. Enter the Run command during overexcitation deceleration to cancel overexcitation deceleration and accelerate the drive to the specified speed. To enable this function, set  $L3-04 = 4, 5$  [*Stall Prevention during Decel = Overexcitation/High Flux, Overexcitation/High Flux 2*].

When  $L3-04 = 4$ , the motor will decelerate for the *Deceleration Times* [ $C1-02, C1-04, C1-06, \text{ or } C1-08$ ]. If the drive detects  $ov$  [*Overvoltage*], increase the deceleration time.

When  $L3-04 = 5$ , the drive uses the value in  $C1-02, C1-04, C1-06, \text{ or } C1-08$  to decelerate and it adjusts the deceleration rate to keep the DC bus voltage at the level set in  $L3-17$  [*DC Bus Regulation Level*]. The load inertia and motor characteristics have an effect on the braking time.

#### Notes on Overexcitation Deceleration

- Do not use Overexcitation Deceleration with a braking resistor.
- Do not use Overexcitation Deceleration for these applications. Connect a braking resistor to the drive as an alternative to Overexcitation Deceleration.
  - Frequent sudden decelerations
  - Continuous regenerative loads
  - Low inertia machines
  - Machines that have no tolerance for torque ripples
- Motor loss increases during overexcitation deceleration. Use this function when the duty time factor is 5% ED or less and the braking time is 90 seconds or less. The load inertia and motor characteristics have an effect on the braking time.
- You can use overexcitation deceleration in OLV control, but this control method decreases the precision of torque control and braking efficiency. Use V/f control for the best results.
- The drive disables these functions during braking with Overexcitation Deceleration 2:
  - Hunting Prevention Function (V/f Control)
  - Torque Limit Speed Control (OLV Control)

### ■ n3-01: HSB Deceleration Frequency Width

| No.<br>(Hex.)             | Name                                | Description  | Default<br>(Range) |
|---------------------------|-------------------------------------|--|--------------------|
| n3-01<br>(0588)<br>Expert | HSB Deceleration<br>Frequency Width | <div style="display: flex; gap: 5px;"> <span style="border: 1px solid black; padding: 2px;">V/f</span> <span style="border: 1px solid black; padding: 2px;">OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span style="border: 1px solid black; padding: 2px;">EZOLV</span> </div> <p>Sets the amount by which the output frequency is to be lowered during high-slip braking, as a percentage of <math>E1-04</math> [<i>Maximum Output Frequency</i>], which represents the 100% value.</p> | 5%<br>(1 - 20%)    |

When you must detect  $ov$  [*DC Bus Overvoltage*] during high-slip braking, set this parameter to a large value.

### ■ n3-02: HSB Current Limit Level

| No. (Hex.)                | Name                    | Description   | Default (Range)                   |
|---------------------------|-------------------------|---|-----------------------------------|
| n3-02<br>(0589)<br>Expert | HSB Current Limit Level | <div style="display: flex; gap: 5px;"> <span style="background-color: #cccccc; padding: 2px;">V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">AOLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the maximum current output during high-slip braking as a percentage, where <i>E2-01 [Motor Rated Current (FLA)]</i> is 100%. Also set the current suppression to prevent exceeding drive overload tolerance.</p> | Determined by C6-01<br>(0 - 150%) |

#### Note:

The upper limit to the setting range changes when the setting for *C6-01 [Normal / Heavy Duty Selection]* changes.

- 150% when *C6-01 = 0 [Heavy Duty Rating]*
- 120% when *C6-01 = 1 [Normal Duty Rating]*

When you decrease the setting value for current suppression, it will make the deceleration time longer.

- When you must detect *ov [DC Bus Overvoltage]* during high-slip braking, set this parameter to a low value.
- If the motor current increases during high-slip braking, decrease the setting value to prevent burn damage in the motor.
- The overload tolerance for the drive is 150% for Heavy Duty Rating (HD) and 110% for Normal Duty Rating (ND).

### ■ n3-03: HSB Dwell Time at Stop

| No. (Hex.)                | Name                   | Description  | Default (Range)         |
|---------------------------|------------------------|--|-------------------------|
| n3-03<br>(058A)<br>Expert | HSB Dwell Time at Stop | <div style="display: flex; gap: 5px;"> <span style="background-color: #cccccc; padding: 2px;">V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">AOLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the dwell time, a length of time when high-slip braking is ending and during which the motor speed decreases and runs at a stable speed. For a set length of time, the drive will hold the actual output frequency at the minimum output frequency set in <i>E1-09</i>.</p> | 1.0 s<br>(0.0 - 10.0 s) |

If there is too much inertia or when the motor is coasting to a stop after high-slip braking is complete, increase the setting value. If the setting value is too low, machine inertia can cause the motor to rotate after high-slip braking is complete.

### ■ n3-04: HSB Overload Time

| No. (Hex.)                | Name              | Description  | Default (Range)       |
|---------------------------|-------------------|--|-----------------------|
| n3-04<br>(058B)<br>Expert | HSB Overload Time | <div style="display: flex; gap: 5px;"> <span style="background-color: #cccccc; padding: 2px;">V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">AOLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the time used to detect <i>oL7 [High Slip Braking Overload]</i>, which occurs when the output frequency does not change during high-slip braking. Usually it is not necessary to change this parameter.</p> | 40 s<br>(30 - 1200 s) |

If a force on the load side is rotating the motor or if there is too much load inertia connected to the motor, the drive will detect *oL7*.

The current flowing to the motor from the load can overheat the motor and cause burn damage to the motor. Set this parameter to prevent burn damage to the motor.

### ■ n3-13: OverexcitationBraking (OEB) Gain

| No. (Hex.)      | Name                             | Description   | Default (Range)       |
|-----------------|----------------------------------|---|-----------------------|
| n3-13<br>(0531) | OverexcitationBraking (OEB) Gain | <div style="display: flex; gap: 5px;"> <span style="background-color: #cccccc; padding: 2px;">V/f</span> <span style="background-color: #cccccc; padding: 2px;">OLV</span> <span style="background-color: #cccccc; padding: 2px;">OLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">AOLV/PM</span> <span style="background-color: #cccccc; padding: 2px;">EZOLV</span> </div> <p>Sets the gain value that the drive multiplies by the V/f pattern output value during overexcitation deceleration to calculate the overexcitation level.</p> | 1.10<br>(1.00 - 1.40) |

The V/f pattern output value goes back to its usual level after the motor stops or accelerates again to the frequency reference speed.

The best value of this parameter changes when the flux saturation characteristics of the motor change.

- Gradually increase the value of *n3-13* to 1.25 or 1.30 to increase the braking power of Overexcitation Deceleration. If the gain is too much, the motor can have flux saturation and cause a large quantity of current to flow.
- This can increase the deceleration time. Decrease the setting value if flux saturation causes overcurrent. If you increase the setting value, the drive can detect *oC [Overcurrent]*, *oL1 [Motor Overload]*, and *oL2 [Drive Overload]*. Decrease the value of *n3-21 [HSB Current Suppression Level]* to prevent *oC* and *oL*.
- If you use overexcitation deceleration frequently or if you use overexcitation deceleration for an extended period of time, it can increase motor temperature. Decrease the setting value in these conditions.

- If *ov* [Overvoltage] occurs, increase the deceleration time.

### ■ n3-14: OEB High Frequency Injection

| No.<br>(Hex.)             | Name                         | Description  | Default<br>(Range) |
|---------------------------|------------------------------|--|--------------------|
| n3-14<br>(0532)<br>Expert | OEB High Frequency Injection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that injects harmonic signals during overexcitation deceleration. | 0<br>(0, 1)        |

Enable this parameter to set a shorter deceleration time.

#### Note:

- If you frequently use overexcitation deceleration on a motor, the motor loss will increase the risk of burn damage.
- When you set this parameter to 1, the motor can make a loud excitation sound during overexcitation deceleration. If the excitation sound is unwanted, set this parameter to 0 to disable the function.

#### 0 : Disabled

#### 1 : Enabled

The drive injects harmonic signals at the time of overexcitation deceleration. You can decrease the deceleration time because motor loss increases.

### ■ n3-21: HSB Current Suppression Level

| No.<br>(Hex.)   | Name                          | Description  | Default<br>(Range) |
|-----------------|-------------------------------|--|--------------------|
| n3-21<br>(0579) | HSB Current Suppression Level | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the upper limit of the current that is suppressed at the time of overexcitation deceleration as a percentage of the drive rated current. | 100%<br>(0 - 150%) |

If flux saturation during Overexcitation Deceleration makes the motor current become more than the value set in this parameter, the drive will automatically decrease the overexcitation gain. If *oC* [Overcurrent], *oL1* [Motor Overload], or *oL2* [Drive Overloaded] occur during overexcitation deceleration, decrease the setting value.

If repetitive or long overexcitation deceleration cause the motor to overheat, decrease the setting value.

### ■ n3-23: Overexcitation Braking Operation

| No.<br>(Hex.)   | Name                             | Description   | Default<br>(Range) |
|-----------------|----------------------------------|---|--------------------|
| n3-23<br>(057B) | Overexcitation Braking Operation | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the direction of motor rotation where the drive will enable overexcitation. | 0<br>(0 - 2)       |

#### 0 : Disabled

#### 1 : Enabled Only when Rotating FWD

#### 2 : Enabled Only when Rotating REV

#### Note:

When *n3-23* = 1, 2, the drive enables overexcitation only in the direction of motor rotation in which a regenerative load is applied. Increased motor loss can decrease *ov* [Overvoltage] faults.

## ◆ n5: Feed Forward Control

Feed forward control increases the responsiveness of acceleration and deceleration as specified by the speed reference.

Increase the values set in *C5-01* and *C5-03* [ASR Proportional Gain] to apply feed forward control to machines that have low rigidity and are possible to have hunting and vibration or to machines that have a large quantity of inertia. Refer to [Figure 12.131](#) for more information about parameters related to feed forward control.

Set *A1-02* = 6 [Control Method Selection = Advanced Open Loop Vector Control for PM] to enable feed forward control.

#### Note:

- You cannot use feed forward control to increase responsiveness in applications where you apply loads externally during run at constant speed.
- You cannot use feed forward control with motor 2.

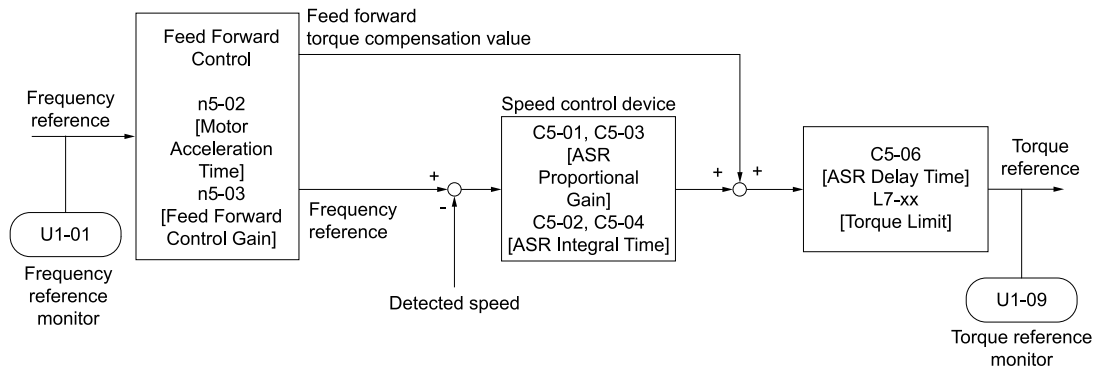


Figure 12.131 Configure Feed Forward Control

■ Before You Use Feed Forward Control

Do one of these procedures before you use feed forward control.

- Run Auto-Tuning to set motor parameters. When you cannot do Auto-Tuning, manually set motor parameters with the information on the motor nameplate or test reports. Set the *E2 parameters* for induction motors. Set the *E5 parameters* for PM motors.
- Set *C5 parameters [Automatic Speed Regulator (ASR)]* individually to adjust the speed control loop (ASR).
- If you can connect a motor to a machine and rotate it during Auto-Tuning, do Inertia Tuning. The drive automatically adjusts feed forward parameters during Inertia Tuning.
- If you cannot do Inertia Tuning, refer to Figure 12.131 and set the parameters related to feed forward control individually.

■ n5-01: Feed Forward Control Selection

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| n5-01 (05B0) | Feed Forward Control Selection | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the feed forward function. | 0 (0, 1)        |

0 : Disabled

1 : Enabled

■ n5-02: Motor Inertia Acceleration Time

| No. (Hex.)   | Name                            | Description   | Default (Range)  |
|--------------|---------------------------------|---|--|
| n5-02 (05B1) | Motor Inertia Acceleration Time | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input checked="" type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the length of time for the motor to accelerate from the stopped to the maximum frequency with a single motor at the rated torque. Inertia Tuning automatically sets the motor acceleration time. | Determined by C6-01, E5-01, and o2-04 (0.001 - 10.000 s) |

If you cannot do Inertia Tuning, calculate the motor acceleration time as shown here or measure the motor acceleration time and set *n5-02* to this value.

Calculate the Motor Acceleration Time

Use this formula to find the motor acceleration time:

$$n5-02 = \frac{2\pi \cdot J_{\text{Motor}} \cdot n_{\text{rated}}}{60 \cdot T_{\text{rated}}}$$

- $J_{\text{Motor}}$  = Moment of inertia of motor (kg m<sup>2</sup>)
- $n_{\text{rated}}$  = Motor rated speed (min<sup>-1</sup>, r/min)
- $T_{\text{rated}}$  = Motor rated torque (N m)

You can also use this formula to find the motor acceleration time:

$$n5-02 = \frac{4\pi \cdot J_{\text{Motor}} \cdot f_{\text{rated}}}{p \cdot T_{\text{rated}}}$$

- $f_{\text{rated}}$  = Motor rated frequency (Hz)
- $p$  = Number of motor poles



### Calculate the Motor Acceleration Time

Use this procedure to calculate the motor acceleration time:

1. Use *A1-02 [Control Method Selection]* to set the control method.
2. Disconnect the motor and load.
3. Run Auto-Tuning to set motor parameters.  
When you cannot do Auto-Tuning, manually set motor parameters with the information on the motor nameplate or test reports. Set the *E2 parameters* for induction motors. Set the *E5 parameters* for PM motors.
4. Set *C5 parameters [Automatic Speed Regulator (ASR)]*.
5. Set *C1-01 [Acceleration Time 1] = 0*.
6. Set *L7-01 [Forward Torque Limit]* to 100%.
7. Set the frequency reference to the same value as the motor rated speed.
8. Measure the length of time for the motor to reach the rated speed.  
Show *U1-05 [Motor Speed]* on the keypad and enter the Run command (forward run).
9. Stop the motor.
10. Set *n5-02* to the measured motor acceleration time value.

Reset all of the parameters that you changed to the previous setting values.

### ■ n5-03: Feed Forward Control Gain

| No. (Hex.)      | Name                      | Description   | Default (Range)         |
|-----------------|---------------------------|---|-------------------------|
| n5-03<br>(05B2) | Feed Forward Control Gain | <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span><br>Sets the ratio between load inertia and motor inertia. Inertia Tuning automatically sets the Feedforward Control Gain value. | 1.00<br>(0.00 - 100.00) |

When you cannot do Inertia Tuning, use this procedure to set n5-03:

Set *n5-02 [Motor Inertia Acceleration Time]*.

1. Connect the motor and load.
2. Set *C1-01 [Acceleration Time 1] = 0*.
3. Use *L7-01 to L7-04 [Torque Limit]* to set the expected test run torque limit levels.
4. Set the frequency reference as specified by the high speed range of the machine.
5. Measure the length of time for the motor to reach the command reference speed.  
Show *U1-05 [Motor Speed]* on the keypad and enter the Run command.
6. Stop the motor.
7. Replace the values in the this formula and set *n5-03* to the value of the formula.

$$n5-03 = \frac{t_{\text{accel}} \cdot T_{\text{Lim\_Test}} \cdot f_{\text{rated}}}{n5-02 \cdot f_{\text{ref\_Test}} \cdot 100} - 1$$

- $t_{\text{accel}}$  = Acceleration time (s)
- $f_{\text{rated}}$  = Motor rated frequency (Hz)
- $T_{\text{Lim\_Test}}$  = Test run torque limit (%)
- $f_{\text{ref\_Test}}$  = Test run frequency reference (Hz)

**WARNING!** *Sudden Movement Hazard. Machinery can accelerate suddenly. Do not use this function with machinery that must not accelerate suddenly. Sudden starts can cause serious injury or death.*

Reset all of the parameters that you changed to the previous setting values.

#### Note:

- If response to the speed reference is slow, increase the value set in *n5-03*.
- Increase the value set in *n5-03* when response to the speed reference is slow.
  - The speed is overshooting.
  - A negative torque reference is output when acceleration ends.

### ■ n5-04: Speed Response Frequency

| No. (Hex.)                       | Name                     | Description   | Default (Range)                           |
|----------------------------------|--------------------------|---|---|
| n5-04<br>(05B3)<br>RUN<br>Expert | Speed Response Frequency | <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span><br>Sets the response frequency for the speed reference. Usually it is not necessary to change this parameter. | Determined by A1-02<br>(0.00 - 500.00 Hz) |

If you set *n5-03 [Feed Forward Control Gain]* too high, the motor speed will momentarily increase to more than the set frequency.

## ◆ n6: Online Tuning

*n6 parameters* are used to set the online tuning function for motor line-to-line resistance.

The Online Tuning for motor line-to-line resistance is used to prevent degradation of speed control accuracy due to motor temperature fluctuation and motor stalls due to insufficient torque.

### ■ n6-01: Online Tuning Selection

| No. (Hex.)      | Name                    | Description   | Default (Range) |
|-----------------|-------------------------|---|-----------------|
| n6-01<br>(0570) | Online Tuning Selection | <input type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the type of motor data that Online Tuning uses for OLV control. | 0<br>(0 - 2)    |

**0 : Disabled**

#### 1 : Line-to-Line Resistance Tuning

The drive adjusts the motor line-to-line resistance during run. This procedure is applicable for speed values 6 Hz and less. It also adjusts the motor resistance value to increase the overload capacity in the low speed range.

#### 2 : Voltage Correction Tuning

The drive adjusts the output voltage during run to increase overload tolerance and minimize the effects of high temperatures on speed precision.

**Note:**

Setting 2 is enabled only when *b8-01 = 0 [Energy Saving Control Selection = Disabled]*.

### ■ n6-05: Online Tuning Gain

| No. (Hex.)                | Name               | Description   | Default (Range)     |
|---------------------------|--------------------|---|---------------------|
| n6-05<br>(05C7)<br>Expert | Online Tuning Gain | <input type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the compensation gain when <i>n6-01 = 2 [Online Tuning Selection = Voltage Correction Tuning]</i> . Usually it is not necessary to change this parameter. | 1.0<br>(0.1 - 50.0) |

When you use a motor that has a large secondary circuit time constant, decrease the setting value.

If the drive detects *oL1 [Motor Overload]*, increase the setting value in 0.1-unit increments.

## ◆ n7: EZ Drive

The *n7 parameters* provide special adjustments for EZ Vector Control.

### ■ n7-01: Damping Gain for Low Frequency

| No. (Hex.)                | Name                           | Description   | Default (Range)     |
|---------------------------|--------------------------------|---|---------------------|
| n7-01<br>(3111)<br>Expert | Damping Gain for Low Frequency | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input checked="" type="radio"/> EZOLV<br>Sets the oscillation suppression gain for the low speed range. | 1.0<br>(0.1 - 10.0) |

**Note:**

- If oscillation occurs in the low speed range, increase the acceleration time or increase the setting value in 0.5-unit increments.
- To get starting torque with the setting for *C4-01 [Torque Compensation Gain]*, decrease the setting value in 0.3-unit increments.

### ■ n7-05: Response Gain for Load Changes

| No. (Hex.)                | Name                           | Description   | Default (Range)   |
|---------------------------|--------------------------------|---|-------------------|
| n7-05<br>(3115)<br>Expert | Response Gain for Load Changes | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input checked="" type="radio"/> EZOLV<br>Sets the response gain related to changes in the load. | 50<br>(10 - 1000) |

**Note:**

To make tracking related to load changes better, increase the setting value in 5-unit increments. If oscillation occurs during load changes, decrease the setting value in 5-unit increments.

### ■ n7-07: Speed Calculation Gain1

| No. (Hex.)                | Name                    | Description  | Default (Range)            |
|---------------------------|-------------------------|--|----------------------------|
| n7-07<br>(3117)<br>Expert | Speed Calculation Gain1 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the speed calculation gain during usual operation. Usually it is not necessary to change this setting. | 15.0 Hz<br>(1.0 - 50.0 Hz) |

### ■ n7-08: Speed Calculation Gain2

| No. (Hex.)                | Name                    | Description   | Default (Range)            |
|---------------------------|-------------------------|---|----------------------------|
| n7-08<br>(3118)<br>Expert | Speed Calculation Gain2 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the speed calculation gain during a speed search. | 25.0 Hz<br>(1.0 - 50.0 Hz) |

**Note:**

When you increase the setting value, you can do a speed search of a motor rotating at a high frequency. If the setting value is too high, the calculated speed will oscillate and a restart will fail. Decrease the setting value in these conditions.

### ■ n7-10: Pull-in Current Switching Speed

| No. (Hex.)                | Name                            | Description   | Default (Range)         |
|---------------------------|---------------------------------|---|-------------------------|
| n7-10<br>(311A)<br>Expert | Pull-in Current Switching Speed | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the speed range to operate with the pull-in current command. Drive rated frequency = 100% value. If there is a large quantity of oscillation when you operate in the low speed range, increase the setting value. | 10.0%<br>(0.0 - 100.0%) |

**Note:**

- When the drive accelerates, it enables these settings:
  - Motor speed  $\leq n7-10 + n7-11$  [*Drv Mode Switch Hysteresis Band*]: *n8-51 [Pull-in Current @ Acceleration]*
  - Motor speed  $> n7-10 + n7-11$ : *b8-01 [Energy Saving Control Selection]*
- When the drive decelerates, it enables these settings:
  - Motor speed  $\leq n7-10$ : *n8-51 [Pull-in Current @ Acceleration]*
  - Motor speed  $> n7-10$ : *b8-01 [Energy Saving Control Selection]*
- If there is a large quantity of oscillation when you operate in the low speed range, increase the setting value.
- When it is most important to save energy in the low speed range, decrease the setting value.

### ■ n7-17: Resistance TemperatureCorrection

| No. (Hex.)      | Name                             | Description  | Default (Range) |
|-----------------|----------------------------------|--|-----------------|
| n7-17<br>(3122) | Resistance TemperatureCorrection | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the function to adjust for changes in the motor resistance value caused by changes in the temperature. | 1<br>(0 to 2)   |

**0 : Invalid**

**1 : Valid (Only 1 time)**

**2 : Valid (Every time)**

**Note:**

- For settings 1 and 2, the adjustment time can cause a delay before startup.
- For settings 1 and 2, the drive can set the line-to-line resistance value of *E9-10 [Motor Line-to-Line Resistance]*.
- When the temperature will change at startup, use setting 2.
- To decrease the startup time, set this parameter to 0, then do line-to-line resistance tuning.
- If you will start from coasting, set this parameter to 0, then do line-to-line resistance tuning.

### ■ n7-19: Flux Error Compensation Gain

| No. (Hex.)                | Name                         | Description  | Default (Range)       |
|---------------------------|------------------------------|--|-----------------------|
| n7-19<br>(3128)<br>Expert | Flux Error Compensation Gain | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #333; color: white; padding: 2px;">EZOLV</span> </div> Sets the gain for magnetic flux compensation. Usually it is not necessary to change this setting. | 5000%<br>(0 - 50000%) |

## ◆ n8: PM Motor Control Tuning

*n8* parameters are used to make adjustments when controlling PM motors.

### ■ n8-01: Pole Position Detection Current

| No. (Hex.)                | Name                            | Description  | Default (Range)   |
|---------------------------|---------------------------------|--|-------------------|
| n8-01<br>(0540)<br>Expert | Pole Position Detection Current | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets, as a percentage, the Initial Rotor Position Estimated Current, taking the <i>E5-03 [Motor Rated Current (FLA)]</i> as the 100% value. Usually it is not necessary to change this setting.</p> | 50%<br>(0 - 100%) |

The drive uses the Initial Rotor Position Estimated Current to detect the initial position of rotors.

Use the "Si" value on the motor nameplate, if available.

### ■ n8-02: Pole Alignment Current Level

| No. (Hex.)                | Name                         | Description   | Default (Range)   |
|---------------------------|------------------------------|---|-------------------|
| n8-02<br>(0541)<br>Expert | Pole Alignment Current Level | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the current at the time of polar attraction as a percentage where <i>E5-03 [motor rated current]</i> is 100%. Usually it is not necessary to change this setting.</p> | 80%<br>(0 - 150%) |

The drive uses the polar pull-in current to attract the rotor after it detects the initial rotor position. When you increase the value of *n8-02*, the starting torque also increases.

- If the motor does not track correctly at the time of the polar attraction, increase the value in 10% increments.
- If the motor oscillates at the time of the polar attraction, decrease the value in 10% increments.

### ■ n8-11: Observer Calculation Gain 2

| No. (Hex.)      | Name                        | Description  | Default (Range)                       |
|-----------------|-----------------------------|--|---------------------------------------|
| n8-11<br>(054A) | Observer Calculation Gain 2 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain for speed estimation. Usually it is not necessary to change this setting.</p> | Determined by n8-72<br>(0.0 - 1000.0) |

#### Note:

When *n8-72 = 0 [Speed Estimation Method Select = Method 1]*, the default value is 50.0. When *n8-72 = 1 [Method 2]*, the default value is 150.0.

### ■ n8-14: Polarity Compensation Gain 3

| No. (Hex.)                | Name                         | Description  | Default (Range)           |
|---------------------------|------------------------------|--|---------------------------|
| n8-14<br>(054D)<br>Expert | Polarity Compensation Gain 3 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain for speed estimation. Usually it is not necessary to change this setting.</p> | 1.000<br>(0.000 - 10.000) |

### ■ n8-15: Polarity Compensation Gain 4

| No. (Hex.)                | Name                         | Description  | Default (Range)           |
|---------------------------|------------------------------|--|---------------------------|
| n8-15<br>(054E)<br>Expert | Polarity Compensation Gain 4 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain for speed estimation. Usually it is not necessary to change this setting.</p> | 0.500<br>(0.000 - 10.000) |

### ■ n8-21: Motor Back-EMF (Ke) Gain

| No. (Hex.)                | Name                     | Description  | Default (Range)       |
|---------------------------|--------------------------|--|-----------------------|
| n8-21<br>(0554)<br>Expert | Motor Back-EMF (Ke) Gain | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain for speed estimation. Usually it is not necessary to change this setting.</p> | 0.90<br>(0.80 - 1.00) |

## ■ n8-35: Initial Pole Detection Method

| No. (Hex.)   | Name                          | Description  | Default (Range)             |
|--------------|-------------------------------|--|-----------------------------|
| n8-35 (0562) | Initial Pole Detection Method | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets how the drive detects the position of the rotor when the motor starts. | Determined by A1-02 (0 - 2) |

### Note:

- When you use an SPM motor, set  $n8-35 = 0$ . When you use an IPM motor, set  $n8-35 = 0$  to  $2$ .
- When you set  $n8-35 = 1$ , do High Frequency Injection Auto-Tuning.
- When you set  $n8-35 = 0$  or  $2$ , always evaluate the drive with the equipment being used for the application. If the drive incorrectly detects the polarity, the motor can rotate in the direction opposite of the Run command.

## 0 : Pull-in

Starts the rotor with pull-in current.

## 1 : High Frequency Injection

Injects high frequency to detect the rotor position. This setting can cause a loud excitation sound when the motor starts.

### Note:

When you set  $1$ , do High Frequency Injection Auto-Tuning.

## 2 : Pulse Injection

Inputs the pulse signal to the motor to detect the rotor position.

## ■ n8-36: HFI Frequency Level for L Tuning

| No. (Hex.)   | Name                             | Description   | Default (Range)        |
|--------------|----------------------------------|---|------------------------|
| n8-36 (0563) | HFI Frequency Level for L Tuning | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the injection frequency for high frequency injection. | 500 Hz (200 - 1000 Hz) |

### Note:

- Set  $n8-35 = 1$  [Initial Pole Detection Method = High Frequency Injection] or  $n8-57 = 1$  [HFI Overlap Selection = Enabled] to enable this parameter.
- The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.

## ■ n8-37: HFI Voltage Amplitude Level

| No. (Hex.)             | Name                        | Description   | Default (Range)     |
|------------------------|-----------------------------|---|---------------------|
| n8-37 (0564)<br>Expert | HFI Voltage Amplitude Level | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the high frequency injection amplitude as a percentage where 200 V = 100% for 200 V class drives and 400 V = 100% for a 400 V class drives. Usually it is not necessary to change this setting. | 20.0% (0.0 - 50.0%) |

### Note:

- Set  $n8-35 = 1$  [Initial Pole Detection Method = High Frequency Injection] or  $n8-57 = 1$  [HFI Overlap Selection = Enabled] to enable this parameter.
- The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.

## ■ n8-39: HFI LPF Cutoff Freq

| No. (Hex.)   | Name                | Description  | Default (Range)      |
|--------------|---------------------|--|----------------------|
| n8-39 (0566) | HFI LPF Cutoff Freq | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the low-pass filter shut-off frequency for high frequency injection. | 250 Hz (0 - 1000 Hz) |

### Note:

- Set  $n8-35 = 1$  [Initial Pole Detection Method = High Frequency Injection] or  $n8-57 = 1$  [HFI Overlap Selection = Enabled] to enable this parameter.
- The drive automatically calculates this value when High Frequency Injection Auto-Tuning completes successfully.

■ **n8-41: HFI P Gain**

| No. (Hex.)                | Name       | Description  | Default (Range)        |
|---------------------------|------------|--|------------------------|
| n8-41<br>(0568)<br>Expert | HFI P Gain | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the response gain for the high frequency injection speed estimation. | 2.5<br>(-10.0 - +10.0) |

**Note:**

- Set  $n8-35 = 1$  [Initial Pole Detection Method = High Frequency Injection] or  $n8-57 = 1$  [HFI Overlap Selection = Enabled] to enable this parameter.
- When  $A1-02 = 6$  [Control Method Selection = AOLV/PM] and you do High Frequency Injection Auto-Tuning, the drive automatically sets this parameter.
- Set  $n8-41 > 0.0$  for IPM motors.

Set this parameter as follows.

- If there is oscillation or hunting, decrease the setting in units of 0.5.
- When it is necessary to track load changes, increase the setting in units of 0.5.

■ **n8-42: HFI I Time**

| No. (Hex.)                | Name       | Description   | Default (Range)           |
|---------------------------|------------|---|---------------------------|
| n8-42<br>(0569)<br>Expert | HFI I Time | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the integral time constant for the high frequency injection speed estimation. Usually it is not necessary to change this setting. | 0.10 s<br>(0.00 - 9.99 s) |

**Note:**

Set  $n8-35 = 1$  [Initial Pole Detection Method = High Frequency Injection] or  $n8-57 = 1$  [HFI Overlap Selection = Enabled] to enable this parameter.

■ **n8-45: Speed Feedback Detection Gain**

| No. (Hex.)      | Name                          | Description   | Default (Range)        |
|-----------------|-------------------------------|---|------------------------|
| n8-45<br>(0538) | Speed Feedback Detection Gain | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the internal speed feedback detection reduction unit gain as a magnification value. Usually it is not necessary to change this setting. | 0.80<br>(0.00 - 10.00) |

Adjust this parameter in these conditions:

- If vibration or hunting occur, increase the setting value in 0.05 unit increments.
- If the responsiveness of torque and speed is unsatisfactory, decrease the setting value 0.05 unit increments and examine the response.

■ **n8-47: Pull-in Current Comp Filter Time**

| No. (Hex.)      | Name                             | Description  | Default (Range)          |
|-----------------|----------------------------------|--|--------------------------|
| n8-47<br>(053A) | Pull-in Current Comp Filter Time | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the time constant the drive uses to align the pull-in current reference value with the actual current value. Usually it is not necessary to change this setting. | 5.0 s<br>(0.0 - 100.0 s) |

Adjust this parameter in these conditions:

- If the time for the reference value of the pull-in current to align with the target value is too long, increase the setting value.
- If vibration or hunting occur, decrease the setting value in 0.2 unit increments.
- If the motor stalls during run at constant speed, decrease the setting value in 0.2 unit increments.

■ **n8-48: Pull-in/Light Load Id Current**

| No. (Hex.)             | Name                          | Description  | Default (Range)   |
|------------------------|-------------------------------|--|-------------------|
| n8-48<br>(053B)<br>RUN | Pull-in/Light Load Id Current | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> On the basis that parameter $E5-03$ [Motor Rated Current (FLA)] is the 100% value, this parameter sets the d-axis current that flows to the motor during run at constant speed as a percentage. | 30%<br>(0 - 200%) |

Adjust in the following situations.

- Slightly reduce this value if there is too much current when driving a light load at a constant speed.
- Increase the setting value in steps of 5% when hunting or vibration occurs during run at constant speed.
- Increase the setting value in steps of 5% if the motor stalls during run at constant speed.

**n8-49: Heavy Load Id Current**

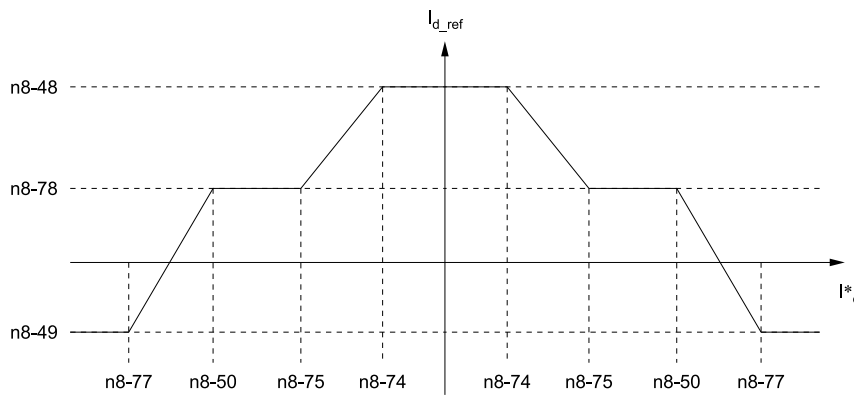
| No. (Hex.)                       | Name                  | Description   | Default (Range)                           |
|----------------------------------|-----------------------|---|---|
| n8-49<br>(053C)<br>RUN<br>Expert | Heavy Load Id Current | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the d-axis current to that the drive will supply to the motor to run it at a constant speed with a heavy load. Considers E5-03 [PM Motor Rated Current (FLA)] to be 100%. Usually it is not necessary to change this setting.</p> | Determined by E5-01<br>(-200.0 - +200.0%) |

When you use an IPM motor, you can use the reluctance torque of the motor to make the motor more efficient and help conserve energy.

When you operate an SPN motor, set this parameter to 0.

Adjust in the following situations.

- If the load is large and motor rotation is not stable, decrease the setting value.
- When you change the E5 parameters [PM Motor Settings], set n8-49 = 0, then adjust this parameter.



**n8-50: Medium Load Iq Level (High)**

| No. (Hex.)                | Name                        | Description  | Default (Range)   |
|---------------------------|-----------------------------|--|-------------------|
| n8-50<br>(053D)<br>Expert | Medium Load Iq Level (High) | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the load current level at which heavy load control starts where E5-03 [Motor Rated Current (FLA)] is 100%. Usually it is not necessary to change this setting.</p> | 80%<br>(50 - 255) |

**n8-51: Pull-in Current @ Acceleration**

| No. (Hex.)      | Name                           | Description  | Default (Range)                   |
|-----------------|--------------------------------|--|-----------------------------------|
| n8-51<br>(053E) | Pull-in Current @ Acceleration | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #ccc;">EZOLV</span> </div> <p>Sets the pull-in current allowed to flow during acceleration/deceleration as a percentage of the motor rated current.</p> | Determined by A1-02<br>(0 - 200%) |

Adjust in the following situations.

- When the motor does not smoothly because of large loads, increase the setting value in 5% increments.
- If too much current flows during acceleration, decrease the setting value.

**Note:**

When A1-02 = 8 [Control Method Selection = EZOLV], this parameter will always be in effect for speed ranges less than n7-10 [Pull-in Current Switching Speed].

**n8-54: Voltage Error Compensation Time**

| No. (Hex.)                | Name                            | Description  | Default (Range)            |
|---------------------------|---------------------------------|--|----------------------------|
| n8-54<br>(056D)<br>Expert | Voltage Error Compensation Time | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #ccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time constant that the drive uses when adjusting for voltage errors.</p> | 1.00 s<br>(0.00 - 10.00 s) |

Adjust this parameter in these conditions:

- If oscillation occurs at the time of start up, increase the setting value.
- If hunting occurs when operating at low speed, increase the setting value.
- If fast changes in the load cause hunting, increase the setting value in 0.1-unit increments. If you cannot stop hunting, set *n8-51 [Pull-in Current @ Acceleration]* to 0% and set *n8-54* to 0.00 s, and disable compensation for voltage errors.

### ■ n8-55: Motor to Load Inertia Ratio

| No. (Hex.)   | Name                        | Description  | Default (Range) |
|--------------|-----------------------------|--|-----------------|
| n8-55 (056E) | Motor to Load Inertia Ratio | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the ratio between motor inertia and machine inertia. | 0<br>(0 - 3)    |

Sets the ratio between motor inertia and machine inertia to adjust the ACR.

Adjust in the following situations.

- If torque and speed response are unsatisfactory, gradually increase the setting from 0.
- If the motor does not run smoothly, gradually increase the setting from 0.
- If the motor stalls during run at constant speed, gradually increase the setting from 0.
- If there is vibration or hunting, decrease the setting.

**Note:**

- If the value too low, the drive will detect *STPo [Motor Step-Out Detected]*.
- If you use one motor or more than motor at low inertia and the value is too high, there can be vibration in the motor.

#### 0 : Below 1:10

Use this setting in these conditions:

- The ratio between the motor inertia and machine inertia is less than 1:10
- There are large current ripples

#### 1 : Between 1:10 and 1:30

Use this setting in these conditions:

- The ratio between the motor inertia and machine inertia is approximately 1:10 to 1:30
- Parameter *n8-55 = 0* and the drive detects *STPo* because of an impact load or sudden acceleration/deceleration.

#### 2 : Between 1:30 and 1:50

Use this setting in these conditions:

- The ratio between the motor inertia and machine inertia is approximately 1:30 to 1:50
- Parameter *n8-55 = 1* and the drive detects *STPo* because of an impact load or sudden acceleration/deceleration.

#### 3 : Beyond 1:50

Adjust this parameter in these conditions:

- The ratio between the motor inertia and machine inertia is more than 1:50
- Parameter *n8-55 = 2* and the drive detects *STPo* because of an impact load or sudden acceleration/deceleration.

### ■ n8-57: HFI Overlap Selection

| No. (Hex.)   | Name                  | Description  | Default (Range) |
|--------------|-----------------------|--|-----------------|
| n8-57 (0574) | HFI Overlap Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the function that detects motor speed with high frequency injection. | 0<br>(0, 1)     |

**Note:**

- When you set *n8-57 = 1*, do High Frequency Injection Auto-Tuning.
- When there is high frequency injection, the motor will make an excitation sound.
- When you use Zero Speed Control, set *E1-09 = 0.0 [Minimum Output Frequency = 0.0 Hz]*.

#### 0 : Disabled

Use this setting with SPM motors. The speed control range is approximately 1:20.

When *n8-57 = 0*, you cannot set *E1-09 [Minimum Output Frequency]*  $\leq 1/20$  of the value of *E1-06 [Base Frequency]*.

#### 1 : Enabled



The speed control range is 1:100. It gives sufficient speed detection at low speeds.

**Note:**

- It is not available with an SPM motor.
- The speed control range 1:100 is the momentary operation area. When you operate the motor continuously, make sure that the drive capacity and motor capacity are acceptable.

### ■ n8-62: Output Voltage Limit Level

| No. (Hex.)             | Name                       | Description   | Default (Range)  |
|------------------------|----------------------------|---|--|
| n8-62 (057D)<br>Expert | Output Voltage Limit Level | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the output voltage limit to prevent saturation of the output voltage. Usually it is not necessary to change this parameter. | 200 V Class: 200.0 V, 400 V: 400.0 V<br>(200 V Class: 0.0 to 230.0 V, 400 V Class: 0.0 to 460.0 V) |

Set this parameter lower than the input power supply voltage.

### ■ n8-63: Output Voltage Limit P Gain

| No. (Hex.)             | Name                        | Description   | Default (Range)         |
|------------------------|-----------------------------|---|-------------------------|
| n8-63 (057E)<br>Expert | Output Voltage Limit P Gain | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the proportional gain for output voltage control. Usually it is not necessary to change this setting. | 1.00<br>(0.00 - 100.00) |

### ■ n8-65: Speed Fdbk Gain @ oV Suppression

| No. (Hex.)             | Name                             | Description   | Default (Range)        |
|------------------------|----------------------------------|---|------------------------|
| n8-65 (065C)<br>Expert | Speed Fdbk Gain @ oV Suppression | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the gain of internal speed feedback detection suppression while the overvoltage suppression function is operating as a magnification value. Usually it is not necessary to change this parameter. | 1.50<br>(0.00 - 10.00) |

Adjust this parameter in these conditions:

- If there is resonance or hunting when you use the overvoltage suppression function, increase the setting value.
- If motor response is low when you use the overvoltage suppression function, decrease the setting value in 0.05-unit increments.

### ■ n8-69: Speed Observer Control P Gain

| No. (Hex.)             | Name                          | Description   | Default (Range)        |
|------------------------|-------------------------------|---|------------------------|
| n8-69 (065D)<br>Expert | Speed Observer Control P Gain | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Usually it is not necessary to change this setting. Sets the Proportional gain that the drive uses for speed estimation. | 1.00<br>(0.00 - 20.00) |

### ■ n8-72: Speed Estimation Method Select

| No. (Hex.)             | Name                           | Description   | Default (Range) |
|------------------------|--------------------------------|---|-----------------|
| n8-72 (0655)<br>Expert | Speed Estimation Method Select | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Selects the speed estimation method. Usually it is not necessary to change this setting. | 1<br>(0, 1)     |

0 : Method 1

1 : Method 2

### ■ n8-74: Light Load Iq Level

| No. (Hex.)             | Name                | Description   | Default (Range)   |
|------------------------|---------------------|---|-------------------|
| n8-74 (05C3)<br>Expert | Light Load Iq Level | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Set n8-48 [Pull-in/Light Load Id Current] to the percentage of load current (q-axis current) that you will apply, where E5-03 [Motor Rated Current (FLA)] = a setting value of 100%. | 30%<br>(0 - 255%) |

**Note:**

- If  $n8-74 > n8-75$  [Medium Load Iq Level (low)], the drive will detect *oPE08* [Parameter Selection Error].
- The change is linear between  $n8-74$  and  $n8-75$  and the level of the pull-in current from  $n8-48$  to  $n8-78$  [Medium Load Id Current].

■ **n8-75: Medium Load Iq Level (low)**

| No. (Hex.)                | Name                       | Description  | Default (Range)   |
|---------------------------|----------------------------|--|-------------------|
| n8-75<br>(05C4)<br>Expert | Medium Load Iq Level (low) | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Set $n8-78$ [Medium Load Id Current] to the percentage of load current (q-axis current) that you will apply, where $E5-03$ [Motor Rated Current (FLA)] = a setting value of 100%. | 50%<br>(0 - 255%) |

**Note:**

- If  $n8-74$  [Light Load Iq Level]  $> n8-75$ , the drive will detect *oPE08* [Parameter Selection Error].
- The change is linear between  $n8-74$  and  $n8-75$  and the level of the pull-in current from  $n8-48$  to  $n8-78$  [Medium Load Id Current].

■ **n8-76: Id Switching Filter Time**

| No. (Hex.)                | Name                     | Description  | Default (Range)      |
|---------------------------|--------------------------|--|----------------------|
| n8-76<br>(05CD)<br>Expert | Id Switching Filter Time | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the filter time constant for the d-axis current reference. Usually it is not necessary to change this setting. | 200 ms<br>(0 - 5000) |

■ **n8-77: Heavy Load Iq Level**

| No. (Hex.)                | Name                | Description   | Default (Range)   |
|---------------------------|---------------------|---|-------------------|
| n8-77<br>(05CE)<br>Expert | Heavy Load Iq Level | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Set $n8-49$ [Heavy Load Id Current] to the percentage of load current (q-axis current) that you will apply, where $E5-03$ [Motor Rated Current (FLA)] = a setting value of 100%. | 90%<br>(0 - 255%) |

**Note:**

The change is linear between  $n8-75$  [Medium Load Iq Level (low)] and  $n8-77$  and the level of the pull-in current from  $n8-78$  [Medium Load Id Current] to  $n8-49$  [Heavy Load Id Current].

■ **n8-78: Medium Load Id Current**

| No. (Hex.)                       | Name                   | Description  | Default (Range)  |
|----------------------------------|------------------------|--|------------------|
| n8-78<br>(05F4)<br>RUN<br>Expert | Medium Load Id Current | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the level of the pull-in current as a percentage, where $E5-03$ [PM Motor Rated Current (FLA)] = 100%. | 0%<br>(0 - 255%) |

■ **n8-79: Pull-in Current @ Deceleration**

| No. (Hex.)      | Name                           | Description  | Default (Range)   |
|-----------------|--------------------------------|--|-------------------|
| n8-79<br>(05FE) | Pull-in Current @ Deceleration | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the pull-in current that can flow during deceleration as a percentage of the $E5-03$ [PM Motor Rated Current (FLA)]. | 50%<br>(0 - 200%) |

If overcurrent occurs during deceleration, slowly decrease the setting in 5% increments.

**Note:**

When  $n8-79 = 0$ , the drive will use the value set in  $n8-51$  [Pull-in Current @ Acceleration].

■ **n8-84: Polarity Detection Current**

| No. (Hex.)                | Name                       | Description  | Default (Range)    |
|---------------------------|----------------------------|--|--------------------|
| n8-84<br>(02D3)<br>Expert | Polarity Detection Current | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span style="background-color: #cccccc;">OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the current that the drive uses to estimate the initial motor magnetic pole as a percentage where $E5-03$ [PM Motor Rated Current (FLA)] = 100%. | 100%<br>(0 - 150%) |

**WARNING! Sudden Movement Hazard.** Make sure that the polarity is correct before you send a Run command. If the drive incorrectly detects the polarity, the drive can rotate in the direction opposite of the Run command and cause serious injury or death.

When you use a Yaskawa motor, check the motor nameplate for an "Si" value and set this parameter  $\geq "Si \times 2"$ . Consult the motor manufacturer for information about maximum setting values.

### Find the Polarity of Magnetic Poles

When you start operation, the drive estimates the magnetic poles and finds the polarity of the magnetic poles.

Use *U6-57 [PolePolarityDeterVal]* to make sure that the magnetic pole estimate was correct.

When you do High Frequency Injection Auto-Tuning, the drive automatically sets *n8-84*.

## ■ n8-87: Output Voltage Limit Selection

| No. (Hex.)   | Name                        | Description   | Default (Range) |
|--------------|-----------------------------|---|-----------------|
| n8-87 (02BC) | Output Voltage Limit Method | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the method of output voltage limit. If there is vibration in the constant output range, set Feedforward Method. Usually it is not necessary to change this setting. | 0<br>(0, 1)     |

0 : Feedback Method

1 : Feedforward Method

## ■ n8-88: Vout Limit Switching Level

| No. (Hex.)   | Name                       | Description  | Default (Range)    |
|--------------|----------------------------|--|--------------------|
| n8-88 (02BD) | Vout Limit Switching Level | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the current level at which output voltage limit sequence selection occurs as a percentage where the motor rated current is 100%. Normally there is no need to change this setting. | 400%<br>(0 - 400%) |

## ■ n8-89: Vout Limit Switching Hysteresis

| No. (Hex.)   | Name                            | Description  | Default (Range)  |
|--------------|---------------------------------|--|------------------|
| n8-89 (02BE) | Vout Limit Switching Hysteresis | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the hysteresis width of the current level at which output voltage limit sequence selection occurs as a percentage where the motor rated current is 100%. Normally there is no need to change this setting. | 3%<br>(0 - 400%) |

## ■ n8-90: Output Control Speed Selection

| No. (Hex.)   | Name                       | Description   | Default (Range)    |
|--------------|----------------------------|---|--------------------|
| n8-90 (02BF) | Vout Limit Switching Speed | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the speed level at which output voltage limit sequence selection occurs as a percentage where the maximum output frequency is 100%. Usually it is not necessary to change this setting. | 200%<br>(0 - 200%) |

## ■ n8-91: Id Limit at Voltage Saturation

| No. (Hex.)   | Name                           | Description   | Default (Range)     |
|--------------|--------------------------------|---|---------------------|
| n8-91 (02F7) | Id Limit at Voltage Saturation | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the limit value of feedback output voltage limit Id operation. Enabled when <i>n8-87 = 0</i> [ <i>Output Voltage Control Selection = Speed Feedback Form</i> ]. Usually it is not necessary to change this setting. | -50%<br>(-200 - 0%) |

## ■ n8-94: Flux Position Estimation Method

| No. (Hex.)             | Name                            | Description  | Default (Range) |
|------------------------|---------------------------------|--|-----------------|
| n8-94 (012D)<br>Expert | Flux Position Estimation Method | V/f OLV <b>OLV/PM</b> AOLV/PM EZOLV<br>Sets the criteria that the drive uses to find changes in speed or load. Usually it is not necessary to change this setting. | 1<br>(0, 1)     |

0 : Softstarter

1 : Speed Feedback

Set *n8-57 = 1* [*HFI Overlap Selection = Enabled*] to enable this parameter. Increases the stability when the speed or load suddenly change, for example with rapid acceleration/deceleration or impact loads.

■ **n8-95: Flux Position Est Filter Time**

| No. (Hex.)             | Name                          | Description  | Default (Range)       |
|------------------------|-------------------------------|--|-----------------------|
| n8-95 (012E)<br>Expert | Flux Position Est Filter Time | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the time constant of the filter used for the recognition criteria value for speed and load changes. Usually it is not necessary to change this setting.</p> | 30 ms<br>(0 - 100 ms) |

**Note:**

Enabled when  $n8-94 = 1$  [*Flux Position Estimation Method = Speed Feedback*].

◆ **nA: PM Motor Control Tuning**

*nA parameters* make adjustments for controlling PM motors.

■ **nA-01: Observer Calc Gain 3**

| No. (Hex.)             | Name                 | Description   | Default (Range)        |
|------------------------|----------------------|---|------------------------|
| nA-01 (3129)<br>Expert | Observer Calc Gain 3 | <div style="display: flex; justify-content: space-between; font-size: small;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span style="background-color: #cccccc;">AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the gain for speed estimation. Usually it is not necessary to change this setting.</p> | 30.0<br>(0.0 - 1000.0) |

## 12.11 o: Keypad-Related Settings

*o* parameters set keypad functions.

### Note:

You cannot use the optional LED keypad to set these parameters.

**Table 12.72 Parameters You Cannot Set with the LED Keypad**

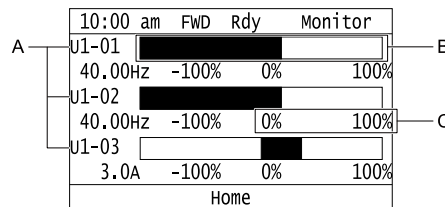
| No.            | Name  | No.            | Name                            |
|----------------|---|----------------|---------------------------------|
| o1-05          | LCD Contrast Adjustment                     | o3-04          | Select Backup/Restore Location  |
| o1-24 to o1-35 | Custom Monitor 1 to 12                      | o3-05          | Select Items to Backup/Restore  |
| o1-36          | LCD Backlight Brightness                    | o3-06          | Auto Parameter Backup Selection |
| o1-37          | LCD Backlight ON/OFF Selection              | o3-07          | Auto Parameter Backup Interval  |
| o1-38          | LCD Backlight Off-Delay                     | o4-22          | Time Format                     |
| o1-39          | Show Initial Setup Screen                   | o4-23          | Date Format                     |
| o1-40          | Home Screen Display Selection               | o4-24          | bAT Detection Selection         |
| o1-41 to o1-46 | 1st to 3rd Monitor Area Selections/Settings | o5-01          | Log Start/Stop Selection        |
| o1-47 to o1-51 | Trend Plot 1 or 2 Scale Settings            | o5-02          | Log Sampling Interval           |
| o1-55 to o1-56 | Analog Gauge Area Selection/Setting         | o5-03 to o5-12 | Log Monitor Data 1 to 10        |
| o2-27          | bCE Detection Selection                     |                |                                 |

### ◆ o1: Keypad Display Selection

*o1* parameters select the parameters shown on the initial keypad screen and to configure the parameter setting units and display units. These parameters also adjust the backlight and contrast of the LCD display.


#### ■ Home Screen Display Format

*o1-40* [Home Screen Display Selection] changes the display of the monitor shown on the Home screen. You can show numerical values or one of these three displays on the Home screen monitor:




- A** - Set *Ux-xx* [Monitors] to *o1-24*, *o1-25*, and *o1-26*. **C** - Set display ranges to *o1-42*, *o1-44*, and *o1-46*.  
**B** - Set display regions to *o1-41*, *o1-43*, and *o1-45*.

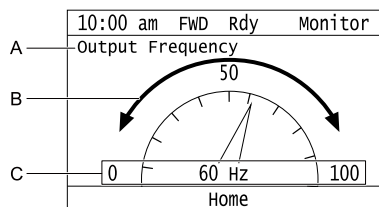**Figure 12.132 Bar Graph Display**



- A** - Set *Ux-xx* [Monitors] to *o1-24*. **C** - Set display ranges to *o1-55*.  
**B** - Set display regions to *o1-56*.

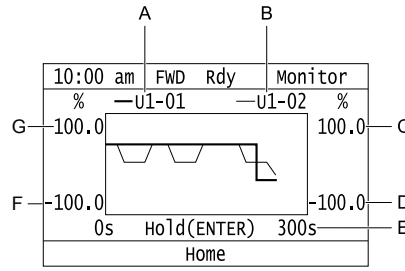**Figure 12.133 Analog Gauge Display**



- A - Set *Ux-xx* [Monitors] (Monitor 1) to *o1-24*.
- B - Set *Ux-xx* [Monitors] (Monitor 2) to *o1-25*.
- C - Set the maximum value of Monitor 2 to *o1-50*.
- D - Set the minimum value of Monitor 2 to *o1-49*.
- E - Set the time scale to *o1-51*.
- F - Set the minimum value of Monitor 1 to *o1-47*.
- G - Set the maximum value of Monitor 1 to *o1-48*.

Figure 12.134 Trend Plot Display

### ■ o1-01: User Monitor Selection

| No. (Hex.)             | Name                   | Description   | Default (Range)    |
|------------------------|------------------------|---|--------------------|
| o1-01<br>(0500)<br>RUN | User Monitor Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the <i>U</i> monitor for the Drive Mode. This parameter is only available when you use an LED keypad.</p> | 106<br>(104 - 855) |

When the drive is in Drive Mode, push on the keypad to cycle through this data: frequency reference → rotational direction → output frequency → output current → *o1-01* selection.

Set the *x-xx* part of *Ux-xx* that is shown in the fifth position in Drive Mode. For example, to show *U1-05* [Motor Speed], set *o1-01* = 105.

**Note:**

The monitors that you can select are different for different control methods.

### ■ o1-02: Monitor Selection at Power-up

| No. (Hex.)             | Name                          | Description  | Default (Range) |
|------------------------|-------------------------------|--|-----------------|
| o1-02<br>(0501)<br>RUN | Monitor Selection at Power-up | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the monitor item that the keypad screen shows after energizing the drive. Refer to “U: Monitors” for information about the monitor items that the keypad screen can show. This parameter is only available when you use an LED keypad.</p> | 1<br>(1 - 5)    |

- 1 : Frequency Reference (U1-01)
- 2 : Direction
- 3 : Output Frequency (U1-02)
- 4 : Output Current (U1-03)
- 5 : User Monitor (o1-01)

Shows the monitor item selected in *o1-01* [User Monitor Selection].

### ■ o1-03: Frequency Display Unit Selection

| No. (Hex.)      | Name                             | Description   | Default (Setting Range)        |
|-----------------|----------------------------------|---|--------------------------------|
| o1-03<br>(0502) | Frequency Display Unit Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the display units for the frequency reference and output frequency.</p> | Determined by A1-02<br>(0 - 3) |

**Note:**

- Select the setting unit of these parameters:
  - d1-01 to d1-17 [Reference 1 to 17]
  - U1-01 [Frequency Reference]
  - U1-02 [Output Frequency]
  - U1-05 [Motor Speed]
  - U1-16 [SFS Output Frequency]
  - U4-14 [PeakHold Output Freq]
- For monitor 2, the setting value is always 0 [Hz Unit].

**0 : 0.01Hz units****1 : 0.01% units**

The maximum output frequency is 100%.

**2 : Revolutions Per Minute (RPM)**

The drive uses the maximum output frequency and number of motor poles calculate this value automatically.

**Note:**

When you set  $o1-03 = 2$  [r/min], make sure that you set the number of motor poles in these parameters:

- E2-04 [Motor Pole Count]
- E4-04 [Motor 2 Motor Poles]
- E5-04 [PM Motor Pole Count]
- E9-08 [Number of Poles]

**3 : User Units**

Uses  $o1-10$  and  $o1-11$  to set the unit of measure. The value of parameter  $o1-10$  is the value when you remove the decimal point from the maximum output frequency. Parameter  $o1-11$  is to the number of digits after the decimal point in the maximum output frequency.

To display a maximum output frequency of 100.00, set parameters to these values:

- $o1-10 = 10000$
- $o1-11 = 2$  [User Units Decimal Position = 2 Dec (XXX.XX)]

**■ o1-04: V/f Pattern Display Unit**

| No. (Hex.)      | Name                     | Description  | Default (Range)               |
|-----------------|--------------------------|--|-------------------------------|
| o1-04<br>(0503) | V/f Pattern Display Unit | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the setting unit for parameters that set the V/f pattern frequency. | Determined by A1-02<br>(0, 1) |

**Note:**

- Select the units for these parameters:
  - E1-04 [Maximum Output Frequency]
  - E1-06 [Base Frequency]
  - E1-07 [Mid Point A Frequency]
  - E1-09 [Minimum Output Frequency]
  - E1-11 [Mid Point B Frequency]
  - E9-02 [Maximum Speed]
  - E9-04 [Base Frequency]
- For motor 2, the settings are always 0 [in Hz unit].

**0 : Hz****1 : min<sup>-1</sup> (r/min) unit**

When you set  $o1-04 = 1$  [min<sup>-1</sup>(r/min) unit], you must also use these parameters to set the motor pole count:

- E2-04 [Motor Pole Count]
- E5-04 [PM Motor Pole Count]
- E9-08 [Motor Pole Count]

**■ o1-05: LCD Contrast Adjustment**

| No. (Hex.)             | Name                    | Description   | Default (Range) |
|------------------------|-------------------------|---|-----------------|
| o1-05<br>(0504)<br>RUN | LCD Contrast Adjustment | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the contrast of the LCD display on the keypad. | 5<br>(0 - 10)   |

When you decrease the setting value, the contrast of the LCD display decreases. When you increase the setting value, the contrast increases.

**■ o1-10: User Units Maximum Value**

| No. (Hex.)      | Name                     | Description  | Default (Range)                    |
|-----------------|--------------------------|--|------------------------------------|
| o1-10<br>(0520) | User Units Maximum Value | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the value that the drive shows as the maximum output frequency. | Determined by o1-03<br>(1 - 60000) |

## 12.11 o: Keypad-Related Settings

To display a maximum output frequency of 100.00, set parameters to these values:

- $o1-10 = 10000$
- $o1-11 = 2$  [User Units Decimal Position = 2 Dec (XXX.XX)]

**Note:**

Set  $o1-03 = 3$  [Frequency Display Unit Selection = User Units ( $o1-10$  &  $o1-11$ )] before you set  $o1-10$  and  $o1-11$ .

### ■ o1-11: User Units Decimal Position

| No. (Hex.)      | Name                        | Description  | Default (Range)                |
|-----------------|-----------------------------|--|--------------------------------|
| o1-11<br>(0521) | User Units Decimal Position | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the number of decimal places for frequency reference and monitor values. | Determined by o1-03<br>(0 - 3) |

**0 : No Decimal Places (XXXXX)**

**1 : One Decimal Places (XXXX.X)**

**2 : Two Decimal Places (XXX.XX)**

**3 : Three Decimal Places (XX.XXX)**

**Note:**

Set  $o1-03 = 3$  [Frequency Display Unit Selection = User Units ( $o1-10$  &  $o1-11$ )] before you set  $o1-10$  [User Units Maximum Value] and  $o1-11$ .

### ■ o1-24 to o1-35: Custom Monitor 1 to 12

| No. (Hex.)                              | Name                   | Description   | Default (Range)   |
|---|------------------------|---|---|
| o1-24 to o1-35:<br>(11AD - 11B8)<br>RUN | Custom Monitor 1 to 12 | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets a maximum of 12 monitors as user monitors. This parameter is only available when using an LCD keypad. | o1-24: 101<br>o1-25: 102<br>o1-26: 103<br>o1-27 to o1-35: 0<br>(0, 101 - 999) |

These parameters save the monitor items selected by the LCD keypad [Custom Monitor].

**Note:**

- You can show a maximum of three selected monitors on one LCD keypad screen.
  - When you select only one monitor, the text size of this monitor increases. For example, when  $o1-25$  to  $o1-35 = 0$ , the text size of the monitor saved in  $o1-24$  increases.
  - When you select two monitors, the text size of these monitors increase.
  - When you select four or more monitors, the fourth monitor and all additional monitors are shown on the next screens.
- Monitors selected with  $o1-24$  to  $o1-26$  can be displayed as a bar graph, analog gauge, or trend plot.
  - Bar graph display: 3 monitors maximum  
Select with  $o1-24$ ,  $o1-25$ , and  $o1-26$ .
  - Analog gauge display: 1 monitor  
Select with  $o1-24$ .
  - Trend plot display: 2 monitors  
Select with  $o1-24$  and  $o1-25$ .
- You can only set parameters  $o1-24$  to  $o1-26$  with analog output monitors.
- You can set all monitors to parameters  $o1-27$  to  $o1-35$ .

### ■ o1-36: LCD Backlight Brightness

| No. (Hex.)             | Name                     | Description  | Default (Range) |
|------------------------|--------------------------|--|-----------------|
| o1-36<br>(11B9)<br>RUN | LCD Backlight Brightness | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the intensity of the LCD keypad backlight. | 3<br>(1 - 5)    |

When you decrease the setting value, the intensity of the backlight decreases.

### ■ o1-37: LCD Backlight ON/OFF Selection

| No. (Hex.)             | Name                           | Description  | Default (Range) |
|------------------------|--------------------------------|--|-----------------|
| o1-37<br>(11BA)<br>RUN | LCD Backlight ON/OFF Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the automatic shut off function for the LCD backlight. | 1<br>(0, 1)     |




**Note:**

Use *o1-36 [LCD Backlight Brightness]* to adjust the intensity of the LCD backlight.

**0 : OFF****1 : ON**

Enables the automatic shut off function. The backlight will automatically turn off after the time set in *o1-38 [LCD Backlight Off-Delay]* is expired.






**Note:**

When *o1-37 = 1* and the backlight is OFF, the drive disables the keys other than .

When the backlight is off, push a key on the keypad to temporarily turn the backlight on. Push any key to start keypad operation, Push

 to turn the backlight on, then push  again to enter a Run command to the drive.






**o1-38: LCD Backlight Off-Delay**

| No. (Hex.)             | Name                    | Description   | Default (Range)      |
|------------------------|-------------------------|---|----------------------|
| o1-38<br>(11BB)<br>RUN | LCD Backlight Off-Delay |     <br>Sets the time until the LCD backlight automatically turns off. | 60 s<br>(10 - 300 s) |

When *o1-37 = 0 [LCD Backlight ON/OFF Selection = OFF]*, the backlight will automatically turn off after the time set in *o1-38* expires.

When the backlight is off, push a key on the keypad to temporarily turn the backlight on. After the backlight turns on, it will turn off automatically after the time set in *o1-38* is expired.

**o1-39: Show Initial Setup Screen**

| No. (Hex.)             | Name                      | Description   | Default (Range) |
|------------------------|---------------------------|---|-----------------|
| o1-39<br>(11BC)<br>RUN | Show Initial Setup Screen |     <br>Sets the function to show the LCD keypad initial setup screen each time the drive is energized. This parameter is only available when using an LCD keypad. | 1<br>(0, 1)     |

The initial setup screen shows a menu where you can select the display language, set the date, time, and other basic settings. When you set this parameter to 0, the drive will not show this screen each time you energize the drive.






**0 : No**

The drive will not show the initial setup display screen each time you energize the drive. The drive will show the Home screen.

**1 : Yes**

When you input the Run command before you energize the drive or when you turn on the Run command while the drive shows the initial setup screen, the drive will replace the initial setup screen with the Home screen.

**o1-40: Home Screen Display Selection**

| No. (Hex.)             | Name                          | Description  | Default (Range) |
|------------------------|-------------------------------|--|-----------------|
| o1-40<br>(11BD)<br>RUN | Home Screen Display Selection |     <br>Sets the monitor display mode for the Home screen. This parameter is only available when using an LCD keypad. | 0<br>(0 - 3)    |

**0 : Custom Monitor****1 : Bar Graph****2 : Analog Gauge****3 : Trend Plot**

### ■ o1-41: 1st Monitor Area Selection

| No.<br>(Hex.)          | Name                       | Description   | Default<br>(Range) |
|------------------------|----------------------------|---|--------------------|
| o1-41<br>(11C1)<br>RUN | 1st Monitor Area Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal range used to display the monitor set in o1-24 [Custom Monitor 1] as a bar graph. This parameter is only available when using an LCD keypad. | 0<br>(0 - 2)       |

0 : +/- Area ( - o1-42 ~ o1-42 )

1 : + Area ( 0 ~ o1-42 )

2 : - Area ( - o1-42 ~ 0 )

### ■ o1-42: 1st Monitor Area Setting

| No.<br>(Hex.)          | Name                     | Description  | Default<br>(Range)       |
|------------------------|--------------------------|--|--------------------------|
| o1-42<br>(11C2)<br>RUN | 1st Monitor Area Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis value used to display the monitor set in o1-24 [Custom Monitor 1] as a bar graph. This parameter is only available when using an LCD keypad. | 100.0%<br>(0.0 - 100.0%) |

### ■ o1-43: 2nd Monitor Area Selection

| No.<br>(Hex.)          | Name                       | Description  | Default<br>(Range) |
|------------------------|----------------------------|--|--------------------|
| o1-43<br>(11C3)<br>RUN | 2nd Monitor Area Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Selects the horizontal range used to display the monitor set in o1-25 [Custom Monitor 2] as a bar graph. This parameter is only available when using an LCD keypad. | 0<br>(0 - 2)       |

0 : +/- Area ( - o1-44 ~ o1-44 )

1 : + Area ( 0 ~ o1-44 )

2 : - Area ( - o1-44 ~ 0 )

### ■ o1-44: 2nd Monitor Area Setting

| No.<br>(Hex.)          | Name                     | Description  | Default<br>(Range)       |
|------------------------|--------------------------|--|--------------------------|
| o1-44<br>(11C4)<br>RUN | 2nd Monitor Area Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis value used to display the monitor set in o1-25 [Custom Monitor 2] as a bar graph. This parameter is only available when using an LCD keypad. | 100.0%<br>(0.0 - 100.0%) |

### ■ o1-45: 3rd Monitor Area Selection

| No.<br>(Hex.)          | Name                       | Description   | Default<br>(Range) |
|------------------------|----------------------------|---|--------------------|
| o1-45<br>(11C5)<br>RUN | 3rd Monitor Area Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal range used to display the monitor set in o1-26 [Custom Monitor 3] as a bar graph. This parameter is only available when using an LCD keypad. | 0<br>(0 - 2)       |

0 : +/- Area ( - o1-46 ~ o1-46 )

1 : + Area ( 0 ~ o1-46 )

2 : - Area ( - o1-46 ~ 0 )

### ■ o1-46: 3rd Monitor Area Setting

| No.<br>(Hex.)          | Name                     | Description  | Default<br>(Range)       |
|------------------------|--------------------------|--|--------------------------|
| o1-46<br>(11C6)<br>RUN | 3rd Monitor Area Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis value used to display the monitor set in o1-26 [Custom Monitor 3] as a bar graph. This parameter is only available when using an LCD keypad. | 100.0%<br>(0.0 - 100.0%) |

### ■ o1-47: Trend Plot 1 Scale Minimum Value

| No.<br>(Hex.)          | Name                             | Description   | Default<br>(Range)            |
|------------------------|----------------------------------|---|-------------------------------|
| o1-47<br>(11C7)<br>RUN | Trend Plot 1 Scale Minimum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis minimum value used to display the monitor set in o1-24 [Custom Monitor 1] as a trend plot. This parameter is only available when using an LCD keypad. | -100.0%<br>(-300.0 - +300.0%) |

### ■ o1-48: Trend Plot 1 Scale Maximum Value

| No.<br>(Hex.)          | Name                             | Description   | Default<br>(Range)           |
|------------------------|----------------------------------|---|------------------------------|
| o1-48<br>(11C8)<br>RUN | Trend Plot 1 Scale Maximum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis maximum value used to display the monitor set in o1-24 [Custom Monitor 1] as a trend plot. This parameter is only available when using an LCD keypad. | 100.0%<br>(-300.0 - +300.0%) |

### ■ o1-49: Trend Plot 2 Scale Minimum Value

| No.<br>(Hex.)          | Name                             | Description   | Default<br>(Range)            |
|------------------------|----------------------------------|---|-------------------------------|
| o1-49<br>(11C9)<br>RUN | Trend Plot 2 Scale Minimum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis minimum value used to display the monitor set in o1-25 [Custom Monitor 2] as a trend plot. This parameter is only available when using an LCD keypad. | -100.0%<br>(-300.0 - +300.0%) |

### ■ o1-50: Trend Plot 2 Scale Maximum Value

| No.<br>(Hex.)          | Name                             | Description   | Default<br>(Range)           |
|------------------------|----------------------------------|---|------------------------------|
| o1-50<br>(11CA)<br>RUN | Trend Plot 2 Scale Maximum Value | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the horizontal axis maximum value used to display the monitor set in o1-25 [Custom Monitor 2] as a trend plot. This parameter is only available when using an LCD keypad. | 100.0%<br>(-300.0 - +300.0%) |

### ■ o1-51: Trend Plot Time Scale Setting

| No.<br>(Hex.)          | Name                          | Description  | Default<br>(Range)    |
|------------------------|-------------------------------|--|-----------------------|
| o1-51<br>(11CB)<br>RUN | Trend Plot Time Scale Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time scale (horizontal axis) to display the trend plot. When you change this setting, the drive automatically adjusts the data sampling time. This parameter is only available when using an LCD keypad. | 300 s<br>(1 - 3600 s) |

### ■ o1-55: Analog Gauge Area Selection

| No.<br>(Hex.)          | Name                        | Description  | Default<br>(Range) |
|------------------------|-----------------------------|--|--------------------|
| o1-55<br>(11EE)<br>RUN | Analog Gauge Area Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the range used to display the monitor set in o1-24 [Custom Monitor 1] as an analog gauge. This parameter is only available when using an LCD keypad. | 1<br>(0, 1)        |

0 : +/- Area ( - o1-56 ~ o1-56 )

1 : + Area ( 0 ~ o1-56 )

### ■ o1-56: Analog Gauge Area Setting

| No.<br>(Hex.)          | Name                      | Description  | Default<br>(Range)       |
|------------------------|---------------------------|--|--------------------------|
| o1-56<br>(11EF)<br>RUN | Analog Gauge Area Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the value used to display the monitor set in o1-24 [Custom Monitor 1] as an analog meter. This parameter is only available when using an LCD keypad. | 100.0%<br>(0.0 - 100.0%) |

### ■ o1-58: Motor Power Unit Selection

| No.<br>(Hex.)   | Name                       | Description   | Default<br>(Range) |
|-----------------|----------------------------|---|--------------------|
| o1-58<br>(3125) | Motor Power Unit Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the setting unit for parameters that set the motor rated power. | 0<br>(0, 1)        |

The drive shows these parameter values in the set units:

## 12.11 o: Keypad-Related Settings

- E2-11 [Motor Rated Power]
- E4-11 [Motor 2 Rated Power]
- E5-02 [PM Motor Rated Power]
- E9-07 [Motor Rated Power]
- T1-02 [Motor Rated Power]
- T2-04 [PM Motor Rated Power]
- T4-08 [Motor Rated Capacity]

### 0 : kW




 


Shows the motor output in kW units.

### 1 : HP

Shows the motor output in HP units.

## ◆ o2: Keypad Operation



### ■ o2-01: LO/RE Key Function Selection

| No.<br>(Hex.)   | Name                         | Description  | Default<br>(Range) |
|-----------------|------------------------------|--|--------------------|
| o2-01<br>(0505) | LO/RE Key Function Selection |     <br>Sets the function that lets you use  to switch between LOCAL and REMOTE Modes. | 1<br>(0, 1)        |

#### 0 : Disabled

You cannot use  to switch between LOCAL and REMOTE Modes.


#### 1 : Enabled

You can use  to switch between LOCAL and REMOTE Modes when the drive is stopped. When LOCAL Mode is selected,  on the keypad will come on.







**WARNING! Sudden Movement Hazard.** If you change the control source when b1-07 = 1 [LOCAL/REMOTE Run Selection = Accept Existing RUN Command], the drive can start suddenly. Before you change the control source, remove all personnel from the area around the drive, motor, and load. Sudden starts can cause serious injury or death.

**WARNING! Sudden Movement Hazard.** Fully examine all mechanical and electrical connections before you change o2-01 [LO/RE Key Function Selection] or b1-07 [LOCAL/REMOTE Run Selection]. Sudden starts can cause serious injury or death. If b1-07 = 1 [Accept Existing RUN Command] and there is an active Run command when you switch from LOCAL to REMOTE Mode, the drive can start suddenly.

Table 12.73 Function Settings with o2-01 and b1-07


|  Function Selection | LOCAL/REMOTE Run Selection                 | Switching from LOCAL Mode to REMOTE Mode  | Switching from REMOTE Mode to LOCAL Mode                         |
|--|--|---|--|
| o2-01 = 0 [Disabled]   | b1-07 = 0 [Disregard Existing RUN Command] | The drive will not switch modes.  | The drive will not switch modes.                                 |
|  | b1-07 = 1 [Accept Existing RUN Command]    |   |  |
| o2-01 = 1 [Enabled]  | b1-07 = 0 [Disregard Existing RUN Command] | The drive will not start operating although the Run command is active. When you set Run command to active again, the drive will start to run. | The drive cannot operate because the Run command is not enabled. |
|  | b1-07 = 1 [Accept Existing RUN Command]    | When the Run command is active, the drive will start to run immediately when the mode switches from LOCAL to REMOTE.                          | The drive cannot operate because the Run command is not enabled. |


### ■ o2-02: STOP Key Function Selection

| No.<br>(Hex.)   | Name                        | Description  | Default<br>(Setting Range) |
|-----------------|-----------------------------|--|----------------------------|
| o2-02<br>(0506) | STOP Key Function Selection |     <br>Sets the function to use  on the keypad to stop the drive when the Run command source for the drive is REMOTE (external) and not assigned to the keypad. | 1<br>(0, 1)                |






#### 0 : Disabled

#### 1 : Enabled

 stays enabled when the Run command source has not been assigned to the keypad.

To start the drive again after you push  to stop operation, turn the external Run command OFF and ON again.

### ■ o2-03: User Parameter Default Value

| No. (Hex.)   | Name                         | Description  | Default (Range) |
|--------------|------------------------------|--|-----------------|
| o2-03 (0507) | User Parameter Default Value |     <br>Sets the function to keep the settings of changed parameters as user parameter defaults to use during initialization. | 0<br>(0 - 2)    |


When you set  $o2-03 = 1$  [Set defaults], the drive saves changed parameter settings as user parameter setting values in a part of the memory that is isolated from drive parameters.

When you set  $A1-03 = 1110$  [Initialize Parameters = User Initialization] to initialize the drive, the drive resets the internal parameter setting values to those user parameter setting values.

#### 0 : No change


#### 1 : Set defaults

Saves changed parameter setting values as user default settings.






Set  $o2-03 = 1$  then push  to save the user parameter setting values. After the drive saves the setting value,  $o2-03$  automatically resets to 0.

#### 2 : Clear all

Deletes all of the saved user parameter setting values.

Set  $o2-03 = 2$  then push  to clear the user parameter setting values. The drive will automatically reset  $o2-03$  to 0. If you delete the user parameter setting values, you cannot set  $A1-03 = 1110$  to initialize parameters.

### ■ o2-04: Drive Model (KVA) Selection

| No. (Hex.)   | Name                        | Description   | Default (Setting Range)        |
|--------------|-----------------------------|---|--------------------------------|
| o2-04 (0508) | Drive Model (KVA) Selection |     <br>Sets the Drive Model code. Set this parameter after replacing the control board. | Determined by the drive<br>(-) |

**NOTICE:** Set  $o2-04$  [Drive Model Selection] correctly. If you set this parameter incorrectly, it will decrease drive performance, cause the protection function to operate incorrectly, and cause damage to the drive.

#### Note:

When the setting value of  $o2-04$  changes, related parameter setting values also change. Refer to [Defaults by Drive Model and Duty Rating ND/HD on page 436](#) for more information.

Table 12.74 lists the relation between  $o2-04$  setting values and drive models.

Table 12.74 Drive Models and o2-04 Settings


| Drive Model | o2-04 Setting | Drive Model | o2-04 Setting |
|-------------|---------------|-------------|---------------|
| B001        | 30            | 2021        | 68            |
| B002        | 31            | 2030        | 91            |
| B004        | 32            | 2042        | 92            |
| B006        | 33            | 2056        | 93            |
| B010        | 34            | 2070        | 94            |
| B012        | 35            | 2082        | 95            |
| B018        | 37            | 4001        | 96            |
| 2001        | 60            | 4002        | 97            |
| 2002        | 61            | 4004        | 99            |
| 2004        | 62            | 4005        | 6A            |
| 2006        | 63            | 4007        | 6B            |
| 2008        | 64            | 4009        | 6D            |
| 2010        | 65            | 4012        | 6E            |
| 2012        | 66            | 4018        | 6F            |
| 2018        | 67            | 4023        | 9A            |

## 12.11 o: Keypad-Related Settings


| Drive Model | o2-04 Setting |
|-------------|---------------|
| 4031        | 9C            |
| 4038        | 9D            |

| Drive Model | o2-04 Setting |
|-------------|---------------|
| 4044        | 9E            |
| 4060        | 9F            |




### ■ o2-05: Home Mode Freq Ref Entry Mode

| No. (Hex.)   | Name                          | Description   | Default (Setting Range) |
|--------------|-------------------------------|---|-------------------------|
| o2-05 (0509) | Home Mode Freq Ref Entry Mode | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function that makes it necessary to push  to use the keypad to change the frequency reference value while in Drive Mode.</p> | 0<br>(0, 1)             |

#### 0 : ENTER Key Required

You must push  to use the keypad to change the frequency reference value.

#### 1 : Immediate / MOP-style

The frequency reference changes when you enter it with the keypad. This then changes the output frequency. It is not necessary to push . The drive keeps the frequency reference for 5 seconds after you use  and  on the keypad to change the frequency reference value.

### ■ o2-06: Keypad Disconnect Detection

| No. (Hex.)   | Name                        | Description   | Default (Range) |
|--------------|-----------------------------|---|-----------------|
| o2-06 (050A) | Keypad Disconnect Detection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the function that stops the drive if you disconnect the keypad connection cable from the drive or if you damage the cable while the keypad is the Run command source.</p> | 0<br>(0, 1)     |

This parameter continues to operate if the keypad installed to the drive becomes disconnected.

This parameter is enabled in these conditions:

- When  $b1-02 = 0$  [Run Command Selection 1 = Keypad] or  $b1-16 = 0$  [Run Command Selection 2 = Keypad]
- In LOCAL Mode

#### 0 : Disabled

The drive continues operation when it detects a keypad disconnection.

#### 1 : Enabled

The drive stops operation, detects *oPr* [Keypad Connection Fault], and the motor coasts to stop when the drive detects a keypad disconnection.

### ■ o2-07: Keypad RUN Direction @ Power-up

| No. (Hex.)   | Name                            | Description   | Default (Range) |
|--------------|---------------------------------|---|-----------------|
| o2-07 (0527) | Keypad RUN Direction @ Power-up | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the direction of motor rotation when the drive is energized and the keypad is the Run command source.</p> | 0<br>(0, 1)     |

This parameter is enabled in these conditions:

- When  $b1-02 = 0$  [Run Command Selection 1 = Keypad] or  $b1-16 = 0$  [Run Command Selection 2 = Keypad]
- In LOCAL Mode

#### 0 : Forward

#### 1 : Reverse

### ■ o2-09: Region Code

| No. (Hex.)   | Name     | Description | Default (Range) |
|--------------|----------|-------------|-----------------|
| o2-09 (050D) | Reserved | -           | -               |

### ■ o2-19: Parameter Write during Uv

| No.<br>(Hex.)             | Name                      | Description  | Default<br>(Range) |
|---------------------------|---------------------------|--|--------------------|
| o2-19<br>(061F)<br>Expert | Parameter Write during Uv | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Lets you change parameters during Uv [ <i>Undervoltage</i> ]. | 0<br>(0, 1)        |

**0 : Disable**

**1 : Enabled**

### ■ o2-23: External 24V Powerloss Detection

| No.<br>(Hex.)          | Name                             | Description   | Default<br>(Setting Range) |
|------------------------|----------------------------------|---|----------------------------|
| o2-23<br>(11F8)<br>RUN | External 24V Powerloss Detection | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function to give a warning if the backup external 24 V power supply turns off when the main circuit power supply is in operation. | 0<br>(0, 1)                |

**Note:**

The drive will not run when it is operating from one 24-V external power supply.

**0 : Disable**

The drive does not detect the loss of the 24-V external power supply.

**1 : Enabled**

The keypad shows the *L24v* [*Loss of External Power 24 Supply*] indicator if the drive detects the loss of the 24-V external power supply.

**Note:**

A minor fault signal is not output from *H2-xx = 10* [*MFDO Function Selection = Minor Fault*].

### ■ o2-26: Alarm display at ext. 24V power

| No.<br>(Hex.)   | Name                            | Description   | Default<br>(Range) |
|-----------------|---------------------------------|---|--------------------|
| o2-26<br>(1563) | Alarm display at ext. 24V power | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>When you connect a backup external 24 V power supply, this parameter sets the function to trigger an alarm when the main circuit power supply voltage decreases. | 0<br>(0, 1)        |

**0 : Disable**

The drive will not detect *EP24v* [*External Power 24V Supply*] if the main circuit power supply voltage decreases. The [Ready] light on the LED Status Ring flashes quickly to identify that drive operation is not possible.

**1 : Enabled**

The drive detects *EP24v* when the main circuit power supply voltage decreases.

**Note:**

A minor fault signal is not output from *H2-xx = 10* [*MFDO Function Selection = Minor Fault*].

### ■ o2-27: bCE Detection Selection

| No.<br>(Hex.)   | Name                    | Description   | Default<br>(Range) |
|-----------------|-------------------------|---|--------------------|
| o2-27<br>(1565) | bCE Detection Selection | <b>V/F</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets drive operation if the Bluetooth device is disconnected when you operate the drive in Bluetooth Mode. | 3<br>(0 - 4)       |

**0 : Ramp to Stop**

**1 : Coast to Stop**

**2 : Fast Stop (Use C1-09)**

**3 : Alarm Only**

**4 : No Alarm Display**

### ◆ o3: Copy Function

*o3* parameters set the operation of the parameter backup function.

### ■ o3-01: Copy Keypad Function Selection

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range) |
|-----------------|--------------------------------|---|--------------------|
| o3-01<br>(0515) | Copy Keypad Function Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the function that saves and copies drive parameters to a different drive with the keypad. | 0<br>(0 - 4)       |

#### 0 : Copy Select

##### 1 : Backup (drive → keypad)

The parameter setting values are read from the drive and saved in the keypad.

##### 2 : Restore (keypad → drive)

Copies the parameter setting values saved in the keypad to a different drive.

##### 3 : Verify (check for mismatch)

Makes sure that the parameter setting values in the drive agree with the parameters saved in the keypad.

##### 4 : Erase (backup data of keypad)

Deletes the parameter setting values saved in the keypad.

### ■ o3-02: Copy Allowed Selection

| No.<br>(Hex.)   | Name                   | Description  | Default<br>(Range) |
|-----------------|------------------------|--|--------------------|
| o3-02<br>(0516) | Copy Allowed Selection | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the copy function when o3-01 = 1 [Copy Keypad Function Selection = Backup (drive → keypad)]. | 0<br>(0, 1)        |

#### Note:

When you select [Parameter Backup] on the keypad menu screen to do the backup function, the drive automatically sets o3-02 = 1.

#### 0 : Disabled

#### 1 : Enabled

### ■ o3-04: Select Backup/Restore Location

| No.<br>(Hex.)   | Name                           | Description   | Default<br>(Range) |
|-----------------|--------------------------------|---|--------------------|
| o3-04<br>(0B3E) | Select Backup/Restore Location | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the storage location for drive parameters when you back up and restore parameters. This parameter is only available when using an LCD keypad. | 0<br>(0 - 3)       |

You can use the LCD keypad to make a maximum of 4 parameter backup sets.

#### 0 : Memory Location 1

#### 1 : Memory Location 2

#### 2 : Memory Location 3

#### 3 : Memory Location 4

### ■ o3-05: Select Items to Backup/Restore

| No.<br>(Hex.)   | Name                           | Description  | Default<br>(Range) |
|-----------------|--------------------------------|--|--------------------|
| o3-05<br>(0BDA) | Select Items to Backup/Restore | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets which parameters are backed up, restored, and referenced. This parameter is only available when using an LCD keypad. | 0<br>(0, 1)        |

#### 0 : Standard Parameters

#### 1 : Standard + DWEZ Parameters

#### Note:

- Parameters qx-xx [DriveWorksEZ Parameters] and rx-xx [DriveWorksEZ Connections] show when A1-07 = 1 or 2 [DriveWorksEZ Function Selection = DWEZ Enabled or Enabled/Disabled wDigital Input].
- The password for DriveWorksEZ PC software is necessary to back up qx-xx and rx-xx. If you enter an incorrect password, the drive detects PWEr [DWEZ Password Mismatch].



### ■ o3-06: Auto Parameter Backup Selection

| No. (Hex.)   | Name                            | Description  | Default (Range) |
|--------------|---------------------------------|--|-----------------|
| o3-06 (0BDE) | Auto Parameter Backup Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the function that automatically backs up parameters. This parameter is only available when using an LCD keypad. | 1<br>(0, 1)     |

When you connect the drive and keypad, parameters set to the drive are automatically backed up to the keypad as specified by the setting of parameters *o3-06* and *o3-07*.

**0 : Disabled**

**1 : Enabled**

**Note:**

When you replace the LCD keypad then energize the drive, the keypad shows the restore operation screen automatically to restore the drive configuration with the parameters backed up to the LCD keypad. If you connect an LCD keypad that does not have parameter backup data, the keypad will not show the restore operation screen.

### ■ o3-07: Auto Parameter Backup Interval

| No. (Hex.)   | Name                           | Description   | Default (Range) |
|--------------|--------------------------------|---|-----------------|
| o3-07 (0BDF) | Auto Parameter Backup Interval | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the interval at which the automatic parameter backup function saves parameters from the drive to the keypad. | 1<br>(0 - 3)    |

The drive saves parameter settings to the keypad at these times:

1. After you energize the drive and the auto backup period passes.
2. When you use ROM enter or the keypad to change parameters, the drive saves those changes in the drive, waits for the auto backup period to pass, then saves those parameters in the keypad.

**Note:**

The drive can write data to the keypad a maximum of 100,000 times. If you write data to the keypad more than 100,000 times, you must replace the keypad.

**0 : Every 10 minutes**

**1 : Every 30 minutes**

**2 : Every 60 minutes**

**3 : Every 12 hours**

## ◆ o4: Maintenance Mon Settings

*o4 parameters* set the expected service life to help you know when to replace parts. The drive will show an alarm to tell you when the replacement part interval is near.

### ■ o4-01: Elapsed Operating Time Setting

| No. (Hex.)   | Name                           | Description   | Default (Range)     |
|--------------|--------------------------------|---|---------------------|
| o4-01 (050B) | Elapsed Operating Time Setting | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the initial value of the cumulative drive operation time in 10-hour units. | 0 h<br>(0 - 9999 h) |

When you select *o4-01* on the keypad, it will show the current value of *U4-01* in units of 10 hours (h). When you change the setting of *o4-01* through the monitor, the *U4-01* count starts again as specified by the setting of *o4-01*.

**Note:**

Set this parameter in 10-hour (h) units. When  $o4-01 = 30$ ,  $U4-01 [Cumulative Ope Time] = 300 h$ .

### ■ o4-02: Elapsed Operating Time Selection

| No. (Hex.)   | Name                             | Description   | Default (Range) |
|--------------|----------------------------------|---|-----------------|
| o4-02 (050C) | Elapsed Operating Time Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the condition that counts the cumulative operation time. | 0<br>(0, 1)     |

**0 : U4-01 Shows Total Power-up Time**

Counts the time from when the drive is energized to when it is de-energized.

**1 : U4-01 Shows Total RUN Time**

Counts the time that the drive outputs voltage.

**■ o4-03: Fan Operation Time Setting**

| No. (Hex.)      | Name                       | Description   | Default (Range)     |
|-----------------|----------------------------|---|---------------------|
| o4-03<br>(050E) | Fan Operation Time Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the value from which to start the cumulative drive cooling fan operation time in 10-hour units. | 0 h<br>(0 - 9999 h) |

Use monitor *U4-03 [Cooling Fan Ope Time]* to view the total operation time of the cooling fan. When you replace a cooling fan, set *o4-03 = 0* to reset *U4-03*. Select *o4-03* on the keypad to show the current value of *U4-03* in 10-hour (h) units. If you use the monitor to change *o4-03*, the recount of *U4-03* starts with the *o4-03* setting.

**Note:**

The drive sets *o4-03* in 10-hour (h) units. When *o4-03 = 30*, *U4-03 [Cooling Fan Ope Time]* will show “300 h”.

**■ o4-05: Capacitor Maintenance Setting**

| No. (Hex.)      | Name                          | Description  | Default (Range)  |
|-----------------|-------------------------------|--|------------------|
| o4-05<br>(051D) | Capacitor Maintenance Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the <i>U4-05 [CapacitorMaintenance]</i> monitor value. | 0%<br>(0 - 150%) |

When you replace a drive, set *o4-05 = 0* to reset *U4-05*. When the *o4-05* setting changes, the count of *U4-05* starts again as specified by the setting of *o4-05*. After you complete the configuration, *o4-05* automatically resets to 0.

**Note:**

The maintenance period changes for different operating environments.

**■ o4-07: Softcharge Relay Maintenance Set**

| No. (Hex.)      | Name                             | Description  | Default (Range)  |
|-----------------|----------------------------------|--|------------------|
| o4-07<br>(0523) | Softcharge Relay Maintenance Set | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the <i>U4-06 [PreChargeRelayMainte]</i> monitor value. | 0%<br>(0 - 150%) |

When you replace a drive, set *o4-07 = 0* to reset *U4-06*. When the *o4-07* setting changes, the count of *U4-06* starts again as specified by the setting of *o4-07*. After you complete the configuration, *o4-07* automatically resets to 0.

**Note:**

The maintenance period changes for different operating environments.

**■ o4-09: IGBT Maintenance Setting**

| No. (Hex.)      | Name                     | Description  | Default (Range)  |
|-----------------|--------------------------|--|------------------|
| o4-09<br>(0525) | IGBT Maintenance Setting | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the <i>U4-07 [IGBT Maintenance]</i> monitor value. | 0%<br>(0 - 150%) |

When you replace a drive, set *o4-09 = 0* to reset *U4-07*. When the *o4-09* setting changes, the count of *U4-07* starts again as specified by the setting of *o4-09*. After you complete the configuration, *o4-09* automatically resets to 0.

**Note:**

The maintenance period changes for different operating environments.

**■ o4-11: Fault Trace/History Init (U2/U3)**

| No. (Hex.)      | Name                             | Description   | Default (Range) |
|-----------------|----------------------------------|---|-----------------|
| o4-11<br>(0510) | Fault Trace/History Init (U2/U3) | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Resets the records of Monitors <i>U2-xx [Fault Trace]</i> and <i>U3-xx [Fault History]</i> . | 0<br>(0, 1)     |

**Note:**

When you initialize the drive with *A1-03 [Initialize Parameters]*, the drive will not reset the records for *U2-xx* and *U3-xx*.

**0 : Disabled**

Keeps the records of Monitors *U2-xx* and *U3-xx*.

**1 : Enabled**

Resets the records for Monitors *U2-xx* and *U3-xx*. After the reset, the drive automatically resets *o4-11* to 0.

**■ o4-12: kWh Monitor Initialization**

| No. (Hex.)      | Name                       | Description   | Default (Range) |
|-----------------|----------------------------|---|-----------------|
| o4-12<br>(0512) | kWh Monitor Initialization | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Resets the monitor values for <i>U4-10</i> [ <i>kWh, Lower 4 Digits</i> ] and <i>U4-11</i> [ <i>kWh, Upper 5 Digits</i> ]. | 0<br>(0, 1)     |

**Note:**

When you initialize the drive with *A1-03* [*Initialize Parameters*], the drive will not reset *U4-10* and *U4-11*.

**0 : No Reset**

Keeps the monitor values for *U4-10* and *U4-11*.

**1 : Reset**

Resets the values of *U4-10* and *U4-11*. After the reset, the drive automatically resets *o4-12* to 0.

**■ o4-13: RUN Command Counter @ Initialize**

| No. (Hex.)      | Name                             | Description  | Default (Range) |
|-----------------|----------------------------------|--|-----------------|
| o4-13<br>(0528) | RUN Command Counter @ Initialize | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Resets the monitor values for <i>U4-02</i> [ <i>Num of Run Commands</i> ], <i>U4-24</i> [ <i>Number of Runs (Low)</i> ], and <i>U4-25</i> [ <i>Number of Runs (High)</i> ]. | 0<br>(0, 1)     |

**0 : No Reset**

Keeps the monitor values for *U4-02*, *U4-24*, and *U4-25*.

**1 : Reset**

Resets the values of *U4-02*, *U4-24*, and *U4-25*. After the reset, the drive automatically resets *o4-13* to 0.

**■ o4-22: Time Format**

| No. (Hex.)             | Name        | Description   | Default (Range) |
|------------------------|-------------|---|-----------------|
| o4-22<br>(154F)<br>RUN | Time Format | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the time display format. This parameter is only available when using an LCD keypad. | 0<br>(0 - 2)    |

Sets the display of the time shown in the upper-left of the LCD keypad screen.

**0 : 24 Hour Clock****1 : 12 Hour Clock****2 : 12 Hour JP Clock****■ o4-23: Date Format**

| No. (Hex.)             | Name        | Description   | Default (Range) |
|------------------------|-------------|---|-----------------|
| o4-23<br>(1550)<br>RUN | Date Format | <b>V/f</b> <b>OLV</b> <b>OLV/PM</b> <b>AOLV/PM</b> <b>EZOLV</b><br>Sets the date display format. This parameter is only available when using an LCD keypad. | 0<br>(0 - 2)    |

Sets the date format that the drive uses for the fault history and other records.

**0 : YYYY/MM/DD****1 : DD/MM/YYYY****2 : MM/DD/YYYY**

■ **o4-24: bAT Detection Selection**

| No. (Hex.)       | Name                    | Description   | Default (Range) |
|------------------|-------------------------|---|-----------------|
| o4-24 (310F) RUN | bAT Detection Selection | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the operation when the drive detects <i>bAT</i> [Keypad Battery Low Voltage] and <i>TiM</i> [Keypad Time Not Set]. This parameter is only available when you use an LCD keypad.</p> | 0 (0 - 2)       |

**0 : Disable**

The drive will not detect *bAT* or *TiM*.

**1 : Enable (Alarm Detected)**

The keypad shows *bAT* or *TiM* and the drive continues operation. The output terminal set to *Alarm* [H2-01 to H2-03 = 10] activates.

**2 : Enable (Fault Detected)**

The output turns off and the motor coasts to stop. The output terminal set for *Fault* [H2-01 to H2-03 = E] activates.

◆ **o5: Log Function**

The data log function saves drive status information as a CSV file in the micro SD memory card in the keypad. *Monitors Ux-xx* are the source of data log information. You can record a maximum of 10 monitors.

Change the LCD keypad screen from the main menu to the Diagnostic Tools screen and select the data log function. Set the number of the monitor to record and the sampling time, then start to record the data log.

**Table 12.75 Setting Parameters for Data Log Items**

| No.   | Name                | Default | Data Log Monitors           |
|-------|---------------------|---------|-----------------------------|
| o5-03 | Log Monitor Data 1  | 101     | U1-01 [Frequency Reference] |
| o5-04 | Log Monitor Data 2  | 102     | U1-02 [Output Frequency]    |
| o5-05 | Log Monitor Data 3  | 103     | U1-03 [Output Current]      |
| o5-06 | Log Monitor Data 4  | 107     | U1-07 [DC Bus Voltage]      |
| o5-07 | Log Monitor Data 5  | 108     | U1-08 [Output Power]        |
| o5-08 | Log Monitor Data 6  | 000     | Not selected                |
| o5-09 | Log Monitor Data 7  | 000     | Not selected                |
| o5-10 | Log Monitor Data 8  | 000     | Not selected                |
| o5-11 | Log Monitor Data 9  | 000     | Not selected                |
| o5-12 | Log Monitor Data 10 | 000     | Not selected                |

**Note:**

- Failure to obey can cause the log function to fail after you restore power or connect the keypad. Do not de-energize the drive or disconnect the keypad from the drive during log transfer communication.
- You can use a Micro SDHC card a maximum of 32 GB capacity.

■ **Log File Specifications**

| Item                    | Specification  |
|-------------------------|--|
| File storage location   | A folder called [Log_File] is created in the root directory of the micro SD card.  |
| Filename                | GLOG0xxx.csv<br><b>Note:</b><br>[xxx] identifies a 3-digit decimal number  |
| Maximum number of files | 999 (GLOG0001.csv to GLOG0999.csv)   |
| Character code          | ASCII code   |
| Line break code         | <CR><LF>   |
| Separating character    | [ , ] (Commas)   |
| Header Rows             | First Row: Drive information including Drive Model, software version, control method, and sampling time<br>Second Row: Log data information including the monitor number, number decimal points, and unit code |



## 12.11 o: Keypad-Related Settings

| No.      | Item              | Number of Characters | Description   |
|----------|-------------------|----------------------|---|
| 22       | Monitor number 10 | 4                    | Monitor number (Dec.) selected by o5-12 [Log Monitor Data 10]                   |
| 23       | Monitor Unit 10   | 4                    | Unit code and number of decimal places used for the monitor selected with o5-12 |
| 24 to 27 | Reserved          | 4                    | -   |
| 28       | Row number        | 6                    | Row number (Hex.) in the data log file  |

\*1 If there is no data log monitor selected, the text string of [0000] is generated.

\*2 Refer to Table 12.76 for information about unit codes.

**Table 12.76 Unit Codes**

| Unit Code (Hex.) | Unit | Unit Code (Hex.) | Unit | Unit Code (Hex.) | Unit | Unit Code (Hex.) | Unit |
|------------------|------|------------------|------|------------------|------|------------------|------|
| 00               | –    | 08               | PPR  | 10               | H    | 18               | 0H   |
| 01               | Hz   | 09               | kW   | 11               | V    | 19               | –    |
| 02               | RPM  | 0A               | Ω    | 12               | us   | 1A               | –    |
| 03               | %    | 0B               | ms   | 13               | min  | 1B               | –    |
| 04               | VAC  | 0C               | kHz  | 14               | °C   | 1C               | –    |
| 05               | VDC  | 0D               | PSI  | 15               | W    | 1D               | –    |
| 06               | A    | 0E               | MPM  | 16               | kWH  | 1E               | –    |
| 07               | sec  | 0F               | FPM  | 17               | MWH  | 1F               | –    |

### Third and Subsequent Rows: Log Data

This example shows the data text strings and data generated for the third row of log data.

Example of generated data:

02,0012,160107111239,1770,1770,00BE,0118,0028,0000,0000,0000,0000,0000,0000,0000,0000,00000C

| No. | Item                | Number of Characters | Description   |
|-----|---------------------|----------------------|---|
| 1   | Attribute           | 2                    | [02] shows that the record is a monitor data record.  |
| 2   | File number         | 4                    | Generates the [xxx] part (a 3-digit decimal number) of the [GLOG0xxx.csv] filename of the log data in hexadecimal format.   |
| 3   | Time stamp          | 12                   | Data log data was retrieved (YYMMDDHHMMSS)  |
| 4   | Log Monitor Data 1  | 4                    | Log monitor data (Hex.) of the monitor selected with o5-03 [Log Monitor Data 1]   |
| 5   | Log Monitor Data 2  | 4                    | Log monitor data (Hex.) of the monitor selected with o5-04 [Log Monitor Data 2]   |
| :   | :                   | :                    | :   |
| 13  | Log Monitor Data 10 | 4                    | Log monitor data (Hex.) of the monitor selected with o5-12 [Log Monitor Data 10]  |
| 14  | Reserved            | 4                    | -   |
| 15  | Encoding data       | 4                    | Log Monitor Data 1 to 10 Code Data (Hex.)<br>Bits 0 through 9 show the encoding of log monitor data 1 through 10. A bit value of 1 shows that the data represents a negative value. (Log monitor data 1 through 10 is absolute value data without encoding)<br>Example when log monitor data 2, 5, and 8 show negative values: Bits 1, 4, and 7 have values of 1, and the encoding data = 0010010010 (Bin.) = 0092 (Hex.) |
| 16  | Row number          | 6                    | Row number (Hex.) in the data log file  |

### ■ o5-01: Log Start/Stop Selection

| No. (Hex.)             | Name                     | Description   | Default (Range) |
|------------------------|--------------------------|---|-----------------|
| o5-01<br>(1551)<br>RUN | Log Start/Stop Selection | <br>Sets the data log function. This parameter is only available when using an LCD keypad. | 0<br>(0 - 1)    |

#### 0 : OFF

Stops the data log.

#### 1 : ON

Starts the data log as specified by the sampling cycle set in o5-02 [Log Sampling Interval].

### ■ o5-02: Log Sampling Interval

| No. (Hex.)             | Name                  | Description   | Default (Range)             |
|------------------------|-----------------------|---|-----------------------------|
| o5-02<br>(1552)<br>RUN | Log Sampling Interval | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the data log sampling cycle. This parameter is only available when using an LCD keypad. | 1000 ms<br>(100 - 60000 ms) |

### ■ o5-03: Log Monitor Data 1

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-03<br>(1553)<br>RUN | Log Monitor Data 1 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the data log monitor. This parameter is only available when using an LCD keypad. | 101<br>(000, 101 - 999) |

**Note:**

Set the number of the *U monitor* to record the data log.

For example, to show *U1-01 [Frequency Reference]*, set *o5-03 = 101*. When it is not necessary to set data log monitors, set this parameter to *000*. You cannot set *U2 monitor [Fault Trace]* or *U3 Monitor [Fault History]*.

### ■ o5-04: Log Monitor Data 2

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-04<br>(1554)<br>RUN | Log Monitor Data 2 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the data log monitor. This parameter is only available when using an LCD keypad. | 102<br>(000, 101 - 999) |

**Note:**

Set the *U monitor* number you will log.

For example, to show *U1-02 [Output Frequency]*, set *o5-04 = 102*. When it is not necessary to set data log monitor, set this parameter to *000*.

### ■ o5-05: Log Monitor Data 3

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-05<br>(1555)<br>RUN | Log Monitor Data 3 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the data log monitor. This parameter is only available when using an LCD keypad. | 103<br>(000, 101 - 999) |

**Note:**

Sets the number of the *U monitor* you will log.

For example, to show *U1-03 [Output Current]*, set *o5-05 = 103*. When it is not necessary to set data log monitors, set this parameter to *000*. You cannot select *U2 monitor [Fault Trace]* or *U3 Monitor [Fault History]*.

### ■ o5-06: Log Monitor Data 4

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-06<br>(1556)<br>RUN | Log Monitor Data 4 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the data log monitor. This parameter is only available when using an LCD keypad. | 107<br>(000, 101 - 999) |

**Note:**

Sets the number of the *U monitor* you will log.

For example, to show *U1-07 [DC Bus Voltage]*, set *o5-06 = 107*. When it is not necessary to set data log monitors, set this parameter to *000*. You cannot select *U2 monitor [Fault Trace]* or *U3 Monitor [Fault History]*.

### ■ o5-07: Log Monitor Data 5

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-07<br>(1557)<br>RUN | Log Monitor Data 5 | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the data log monitor. This parameter is only available when using an LCD keypad. | 108<br>(000, 101 - 999) |

**Note:**

Sets the number of the *U monitor* you will log.

For example, to show *U1-08 [Output Power]*, set *o5-07 = 108*. When it is not necessary to set data log monitors, set this parameter to *000*. You cannot select *U2 monitor [Fault Trace]* or *U3 Monitor [Fault History]*.

### ■ o5-08: Log Monitor Data 6

| No. (Hex.)             | Name               | Description  | Default (Setting Range) |
|------------------------|--------------------|--|-------------------------|
| o5-08<br>(1558)<br>RUN | Log Monitor Data 6 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the data log monitor. This parameter is only available when using an LCD keypad.</p> | 000<br>(000, 101 - 999) |

**Note:**

Set the *U monitor* number you want to log.

For example, to display *U1-01 [Frequency Reference]*, set *o5-08 = 101*. When it is not necessary to set a data log monitor, set this parameter to *000*. You cannot set *U2 Monitors [Fault Trace]* or *U3 Monitors [Fault History]*.

### ■ o5-09: Log Monitor Data 7

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-09<br>(1559)<br>RUN | Log Monitor Data 7 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the data log monitor. This parameter is only available when using an LCD keypad.</p> | 000<br>(000, 101 - 999) |

**Note:**

Set the *U monitor* number you will log.

For example, to show *U1-01 [Frequency Reference]*, set *o5-09 = 101*. When it is not necessary to set data log monitor, set this parameter to *000*.

### ■ o5-10: Log Monitor Data 8

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-10<br>(155A)<br>RUN | Log Monitor Data 8 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the data log monitor. This parameter is only available when using an LCD keypad.</p> | 000<br>(000, 101 - 999) |

**Note:**

Sets the number of the *U monitor* you will log.

For example, to show *U1-01 [Frequency Reference]*, set *o5-10 = 101*. When it is not necessary to set data log monitors, set this parameter to *000*. You cannot select *U2 monitor [Fault Trace]* or *U3 Monitor [Fault History]*.

### ■ o5-11: Log Monitor Data 9

| No. (Hex.)             | Name               | Description  | Default (Range)         |
|------------------------|--------------------|--|-------------------------|
| o5-11<br>(155B)<br>RUN | Log Monitor Data 9 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the data log monitor. This parameter is only available when using an LCD keypad.</p> | 000<br>(000, 101 - 999) |

**Note:**

Sets the number of the *U monitor* you will log.

For example, to show *U1-01 [Frequency Reference]*, set *o5-11 = 101*. When it is not necessary to set data log monitors, set this parameter to *000*. You cannot select *U2 monitor [Fault Trace]* or *U3 Monitor [Fault History]*.

### ■ o5-12: Log Monitor Data 10

| No. (Hex.)             | Name                | Description  | Default (Range)         |
|------------------------|---------------------|--|-------------------------|
| o5-12<br>(155C)<br>RUN | Log Monitor Data 10 | <div style="display: flex; gap: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> <p>Sets the data log monitor. This parameter is only available when using an LCD keypad.</p> | 000<br>(000, 101 - 999) |

**Note:**

Sets the number of the *U monitor* you will log.

For example, to show *U1-01 [Frequency Reference]*, set *o5-12 = 101*. When it is not necessary to set data log monitors, set this parameter to *000*. You cannot select *U2 monitor [Fault Trace]* or *U3 Monitor [Fault History]*.






 

## 12.12 T: Auto-Tuning

Numbers identifying the *T parameters* are displayed when an LED keypad is used. The names of the parameters are displayed on the LCD screen of the LCD keypad. Set the following.

- Induction Motor Auto-Tuning
- PM Motor Auto-Tuning
- ASR and Inertia Tuning

### ◆ T0: Tuning Mode Selection

#### ■ T0-00: Tuning Mode Selection

| No.<br>(Hex.)   | Name                  | Description  | Default<br>(Range) |
|-----------------|-----------------------|--|--------------------|
| T0-00<br>(1197) | Tuning Mode Selection |     <br>Sets the type of Auto-Tuning. | 0<br>(0, 1)        |

When your control method supports Control Tuning, use the Setup Wizard to set the parameters in this order.

1. *T0-00* to set the tuning mode.
2. *T1-00* [*Motor 1/Motor 2 Selection*] to set the motor you will tune.
3. *T2-01* [*PM Auto-Tuning Selection*] or *T3-00* [*Control Loop Tuning Selection*] to set the tuning mode.

**Note:**

The available tuning modes are different for different control methods.

### 0 : Motor Parameter Tuning

#### 1 : Control Tuning






### ◆ T1: Induction Motor Auto-Tuning

*T1 parameters* set the Auto-Tuning input data for induction motor tuning.

**Note:**

- The base frequency of drive dedicated motors and special motors for use with vector control may be lower than the base frequency of general-purpose motors, which is 50 Hz or 60 Hz. In such cases, this lower frequency is used as the value for *E1-06* [*Base Frequency*] and *E1-04* [*Maximum Output Frequency*] after Auto-Tuning completes. If the maximum output frequency is too low and causes problems, change the setting of *E1-04* after Auto-Tuning completes.
- The following induction motor parameters are set automatically.
  - E1-xx* [*V/f Pattern for Motor 1*]
  - E2-xx* [*Motor Parameters*]
  - E3-xx* [*V/f Pattern for Motor 2*]
  - E4-xx* [*Motor 2 Parameters*]

#### ■ T1-00: Motor 1/Motor 2 Selection

| No.<br>(Hex.)   | Name                      | Description  | Default<br>(Range) |
|-----------------|---------------------------|--|--------------------|
| T1-00<br>(0700) | Motor 1/Motor 2 Selection |     <br>Sets which motor to tune when motor 1/2 switching is enabled. | 1<br>(1, 2)        |

**Note:**

Set *H1-xx = 16* [*Motor 2 Selection*] to enable this parameter. When *H1-xx ≠ 16* the keypad will not show this parameter.

#### 1 : Motor 1

Auto-Tuning automatically sets parameters *E1-xx* and *E2-xx* for motor 1.

#### 2 : Motor 2

Auto-Tuning automatically sets parameters *E3-xx* and *E4-xx* for motor 2. Make sure that you connect motor 2 to the drive for Auto-Tuning.

## ■ T1-01: Auto-Tuning Mode Selection

| No. (Hex.)      | Name                  | Description   | Default (Range)                              |
|-----------------|-----------------------|---|--|
| T1-01<br>(0701) | Tuning Mode Selection | <input checked="" type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the type of Auto-Tuning. | Determined by A1-02<br>(Determined by A1-02) |

### 0 : Rotational Auto-Tuning

#### 1 : Stationary Auto-Tuning 1

#### 2 : Stationary Line-Line Resistance

## ■ T1-02: Motor Rated Power

| No. (Hex.)      | Name              | Description   | Default (Range)                                  |
|-----------------|-------------------|---|--|
| T1-02<br>(0702) | Motor Rated Power | <input checked="" type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Uses the units set in o1-58 [Motor Power Unit Selection] to set the motor rated output power. | Determined by o2-04, C6-01<br>(0.00 - 650.00 kW) |

## ■ T1-03: Motor Rated Voltage

| No. (Hex.)      | Name                | Description   | Default (Range)   |
|-----------------|---------------------|---|---|
| T1-03<br>(0703) | Motor Rated Voltage | <input checked="" type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the rated voltage (V) of the motor. Enter the base speed voltage for constant output motors. | Determined by o2-04, C6-01<br>(200 V Class: 0.0 - 255.5 V,<br>400 V Class: 0.0 - 511.0 V) |

If you do Auto-Tuning on a drive-dedicated motor or a specialized motor for vector control, the voltage or frequency can be lower than that of a general-purpose motor. Always compare the data from the nameplate or test report with the Auto-Tuning results and check for differences. Enter the voltage necessary to operate the motor in no-load conditions at rated speed for better control precision around rated speed. If the motor test report or the motor nameplate is not available, enter approximately 90% of the motor rated voltage.

If the drive input power supply voltage is low, enter approximately 90% of the input voltage. When the input power supply voltage is low, the current will increase. Make sure that the main power supply capacity is correct and use a molded-case circuit breaker for the drive.

## ■ T1-04: Motor Rated Current

| No. (Hex.)      | Name                | Description  | Default (Range)   |
|-----------------|---------------------|--|---|
| T1-04<br>(0704) | Motor Rated Current | <input checked="" type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the rated current (A) of the motor. | Determined by o2-04<br>(10% to 200% of the drive rated current) |

Set the motor rated current between 50% and 100% of the drive rated current for the best performance. Enter the current at the motor base speed.

## ■ T1-05: Motor Base Frequency

| No. (Hex.)      | Name                 | Description  | Default (Range)             |
|-----------------|----------------------|--|-----------------------------|
| T1-05<br>(0705) | Motor Base Frequency | <input checked="" type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the base frequency (Hz) of the motor. | 50.0 Hz<br>(0.0 - 590.0 Hz) |

When Auto-Tuning is carried out, the value of T1-05 is set to E1-04 [Maximum Output Frequency]. If T1-05 < 40 Hz, E1-04 = 40 Hz. If you operate the drive at a speed that is higher than the base frequency, or if you operate in the field weakening range, set E1-04 (E3-04 for motor 2) to the maximum output frequency after you complete Auto-Tuning.

## ■ T1-06: Number of Motor Poles

| No. (Hex.)      | Name                  | Description   | Default (Range) |
|-----------------|-----------------------|---|-----------------|
| T1-06<br>(0706) | Number of Motor Poles | <input checked="" type="radio"/> V/f <input checked="" type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the number of motor poles. | 4<br>(2 to 120) |

### ■ T1-07: Motor Base Speed

| No. (Hex.)   | Name             | Description  | Default (Range)   |
|--------------|------------------|--|---|
| T1-07 (0707) | Motor Base Speed | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the motor base speed for Auto-Tuning (min <sup>-1</sup> (r/min)). | 1450 min <sup>-1</sup> (r/min)<br>(0 - 35400 min <sup>-1</sup> (r/min)) |

### ■ T1-09: Motor No-Load Current

| No. (Hex.)   | Name                  | Description  | Default (Range)                   |
|--------------|-----------------------|--|-----------------------------------|
| T1-09 (0709) | Motor No-Load Current | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the no-load current of the motor. | -<br>(0A - T1-04; max. of 2999.9) |

**Note:**

The display units are different for different models:

•0.01 A: B001 - B018, 2001 - 2042, 4001 - 4023

•0.1 A: 2056 - 2082, 4031 - 4060

The value shown is the no-load current that the drive automatically calculates from the values set in *T1-02 [Motor Rated Power]* and *T1-04 [Motor Rated Current]*. Set the no-load current shown on the motor test report. If the motor test report is not available, do not change this parameter.

### ■ T1-10: Motor Rated Slip Frequency

| No. (Hex.)   | Name                       | Description  | Default (Range)          |
|--------------|----------------------------|--|--------------------------|
| T1-10 (070A) | Motor Rated Slip Frequency | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets motor rated slip. | -<br>(0.000 - 20.000 Hz) |

Shows 0.000 Hz as the default value. Set the rated slip shown on the motor test report. If the motor test report is not available, do not change this parameter.

### ■ T1-11: Motor Iron Loss

| No. (Hex.)   | Name            | Description  | Default (Range)                              |
|--------------|-----------------|--|--|
| T1-11 (070B) | Motor Iron Loss | <input type="checkbox"/> V/f <input type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the iron loss for calculating the energy-saving coefficient. | Determined by E2-11 or E4-11<br>(0 - 6535 W) |

**Note:**

The default setting is different for different motor codes and motor parameter settings.

The value shown is the *E2-10 [Motor Iron Loss]* or *E4-10 [Motor 2 Iron Loss]* for the motor output set in *T1-02 [Motor Rated Power]*. If the motor test report is available, enter the motor iron loss value to *T1-11*.

### ■ T1-12: Test Mode Selection

| No. (Hex.)   | Name                | Description  | Default (Range) |
|--------------|---------------------|--|-----------------|
| T1-12 (0BDB) | Test Mode Selection | <input type="checkbox"/> V/f <input checked="" type="checkbox"/> OLV <input type="checkbox"/> OLV/PM <input type="checkbox"/> AOLV/PM <input type="checkbox"/> EZOLV<br>Sets the function to enable Test Mode after Stationary Auto-Tuning. When you can operate the motor with a light load attached after Stationary Auto-Tuning is complete, enable this parameter. | 0<br>(0, 1)     |

**0 : No**

**1 : Yes**

After Auto-Tuning, the drive automatically sets *E2-02 [Motor Rated Slip]* and *E2-03 [Motor No-Load Current]* when you operate the motor for the first time in Drive Mode.

**Note:**

After Auto-Tuning is complete and you set the drive to Drive Mode, operate the motor in these conditions:

- Make sure that you connect all wiring between the drive and motor
- Make sure that a mechanical brake on the motor shaft is not locked
- Keep the motor-load ratio at 30%
- Hold constant speed for longer than 1 second at a minimum of 30% of the speed set in *E1-06 [Base Frequency]* (the default setting is the same as the maximum frequency).

■ **T1-13: No-load voltage**

| No. (Hex.)   | Name            | Description  | Default (Range)   |
|--------------|-----------------|--|---|
| T1-13 (0BDC) | No-load voltage | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the no-load voltage of the motor. When the no-load voltage at rated speed is available, for example on the motor test report, set the voltage in this parameter. If the no-load voltage is not available, do not change this parameter. | T1-03 × 0.9<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) |

**Note:**

To get the same qualities as a Yaskawa 1000-series drive or previous series drive, set this parameter =  $T1-03$  [Motor Rated Voltage].

◆ **T2: PM Motor Auto-Tuning**

*T2* parameters set the Auto-Tuning input data for PM motor tuning.

**Note:**

The drive automatically sets these PM motor parameters:

- E1-xx [V/f Pattern for Motor 1]
- E5-xx [V/f Pattern for Motor 1]

■ **T2-01: PM Auto-Tuning Selection**

| No. (Hex.)   | Name                     | Description   | Default (Range)            |
|--------------|--------------------------|---|----------------------------|
| T2-01 (0750) | PM Auto-Tuning Selection | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the type of Auto-Tuning for PM motors. | 0<br>(Determined by A1-02) |

**Note:**

Yaskawa recommends Rotational (Ld, Lq, R, back-EMF) for specialized motors. Rotational Auto-Tuning rotates the motor to measure the actual induction voltage constants for more accurate control than Stationary Auto-Tuning.

**0 : PM Motor Parameter Settings**

**1 : Stationary (Ld, Lq, R)**

**2 : Stationary (R Only)**

**4 : Rotational (Ld, Lq, R, back-EMF)**

**5 : High Frequency Injection**

■ **T2-02: PM Motor Code Selection**

| No. (Hex.)   | Name                    | Description   | Default (Range)                                |
|--------------|-------------------------|---|--|
| T2-02 (0751) | PM Motor Code Selection | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> If the drive is operating an SMRD, SMRA, or SSR1 series Yaskawa PM motor, enter the PM motor code in to align with the rotation speed and motor output. | Determined by A1-02 and 02-04<br>(0000 - FFFF) |

Enter the motor code to automatically set parameters *T2-03* to *T2-14*. When you are operating a specialized motor or a non-Yaskawa motor, set *T2-02* = *FFFF* and enter the data from the motor nameplate or the motor test report.

You can only enter the permitted PM motor codes. Different drive control methods will accept different PM motor codes.

■ **T2-03: PM Motor Type**

| No. (Hex.)   | Name          | Description   | Default (Range) |
|--------------|---------------|---|-----------------|
| T2-03 (0752) | PM Motor Type | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span>EZOLV</span> </div> Sets the type of PM motor the drive will operate. | 1<br>(0, 1)     |

**0 : IPM motor**

IPM motors have magnets in the rotor, and  $Ld \neq Lq$ .

**1 : SPM motor**

SPM motors have magnets attached to the surface of the rotor with adhesive material, and  $Ld = Lq$ .

### ■ T2-04: PM Motor Rated Power

| No.<br>(Hex.)   | Name                 | Description   | Default<br>(Range)                               |
|-----------------|----------------------|---|--|
| T2-04<br>(0730) | PM Motor Rated Power | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Uses the units set in o1-58 [Motor Power Unit Selection] to set the PM motor rated output power. | Determined by o2-04, C6-01<br>(0.00 - 650.00 kW) |

### ■ T2-05: PM Motor Rated Voltage

| No.<br>(Hex.)   | Name                   | Description   | Default<br>(Range)   |
|-----------------|------------------------|---|--|
| T2-05<br>(0732) | PM Motor Rated Voltage | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the rated voltage (V) of the motor. | 200 V Class: 200.0 V, 400 V: 400.0 V<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) |

### ■ T2-06: PM Motor Rated Current

| No.<br>(Hex.)   | Name                   | Description   | Default<br>(Range)  |
|-----------------|------------------------|---|---|
| T2-06<br>(0733) | PM Motor Rated Current | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the rated current (A) of the motor. | Determined by o2-04<br>(10% to 200% of the drive rated current) |

### ■ T2-07: PM Motor Base Frequency

| No.<br>(Hex.)   | Name                    | Description   | Default<br>(Range)          |
|-----------------|-------------------------|---|-----------------------------|
| T2-07<br>(0753) | PM Motor Base Frequency | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the base frequency (Hz) of the motor. | 87.5 Hz<br>(0.0 - 590.0 Hz) |

### ■ T2-08: Number of PM Motor Poles

| No.<br>(Hex.)   | Name                     | Description  | Default<br>(Range) |
|-----------------|--------------------------|--|--------------------|
| T2-08<br>(0734) | Number of PM Motor Poles | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the number of motor poles. | 6<br>(2 - 48)      |

### ■ T2-09: PM Motor Base Speed

| No.<br>(Hex.)   | Name                | Description   | Default<br>(Range)  |
|-----------------|---------------------|---|---|
| T2-09<br>(0731) | PM Motor Base Speed | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the motor base speed (min <sup>-1</sup> (r/min)). | 1750 min <sup>-1</sup> (r/min)<br>(0 - 34500 min <sup>-1</sup> (r/min)) |

### ■ T2-10: PM Motor Stator Resistance

| No.<br>(Hex.)   | Name                       | Description   | Default<br>(Range)                        |
|-----------------|----------------------------|---|---|
| T2-10<br>(0754) | PM Motor Stator Resistance | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the stator resistance for each motor phase. | Determined by T2-02<br>(0.000 - 65.000 Ω) |

**Note:**

This parameter does not set line-to-line resistance.

### ■ T2-11: PM Motor d-Axis Inductance

| No.<br>(Hex.)   | Name                       | Description  | Default<br>(Range)                        |
|-----------------|----------------------------|--|---|
| T2-11<br>(0735) | PM Motor d-Axis Inductance | <div style="display: flex; justify-content: space-between; align-items: center;"> <span>V/f</span> <span>OLV</span> <span style="border: 1px solid black; padding: 2px;">OLV/PM</span> <span style="border: 1px solid black; padding: 2px;">AOLV/PM</span> <span>EZOLV</span> </div> Sets the d-axis inductance of the motor on a per phase basis. | Determined by T2-02<br>(0.00 - 600.00 mH) |

### ■ T2-12: PM Motor q-Axis Inductance

| No. (Hex.)   | Name                       | Description  | Default (Range)                        |
|--------------|----------------------------|--|--|
| T2-12 (0736) | PM Motor q-Axis Inductance | <input type="radio"/> V/f <input type="radio"/> OLV <input checked="" type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the q-Axis inductance of the motor on a per phase basis. | Determined by T2-02 (0.00 - 600.00 mH) |

### ■ T2-13: Back-EMF Units Selection

| No. (Hex.)   | Name                     | Description  | Default (Range) |
|--------------|--------------------------|--|-----------------|
| T2-13 (0755) | Back-EMF Units Selection | <input type="radio"/> V/f <input type="radio"/> OLV <input checked="" type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the units that the drive uses to set the induced voltage constant. | 1 (0, 1)        |

0 : mV/(rev/min)

1 : mV/(rad/s)

**Note:**

- When  $T2-13 = 0$ , the drive will use  $E5-24$  [PM Back-EMF L-L Vrms (mV/rpm)] and will automatically set  $E5-09$  [PM Back-EMF Vpeak (mV/(rad/s))] = 0.0.
- When  $T2-13 = 1$ , the drive will use  $E5-09$  and will automatically set  $E5-24 = 0.0$ .

### ■ T2-14: Back-EMF Voltage Constant (Ke)

| No. (Hex.)   | Name                           | Description  | Default (Range)                    |
|--------------|--------------------------------|--|------------------------------------|
| T2-14 (0737) | Back-EMF Voltage Constant (Ke) | <input type="radio"/> V/f <input type="radio"/> OLV <input checked="" type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the motor induced voltage constant (Ke). | Determined by T2-13 (0.0 - 2000.0) |

### ■ T2-15: Pull-In Current Level

| No. (Hex.)   | Name                  | Description   | Default (Range) |
|--------------|-----------------------|---|-----------------|
| T2-15 (0756) | Pull-In Current Level | <input type="radio"/> V/f <input type="radio"/> OLV <input checked="" type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the level of the pull-in current as a percentage of $E5-03$ [PM Motor Rated Current (FLA)]. Usually it is not necessary to change this setting. | 30% (0 - 120%)  |

If the load inertia is high, increase the setting value.

## ◆ T3: ASR and Inertia Tuning

### ■ T3-00: Control Loop Tuning Selection

| No. (Hex.)   | Name                          | Description  | Default (Range) |
|--------------|-------------------------------|--|-----------------|
| T3-00 (1198) | Control Loop Tuning Selection | <input checked="" type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input type="radio"/> EZOLV<br>Sets the type of Control Auto-Tuning. | 2 (2, 3)        |

2 : Deceleration Rate Tuning

3 : KEB Tuning

## ◆ T4: EZ Tuning

Use  $T4$  parameters to input the data necessary for motor parameter Auto-Tuning when  $A1-02 = 8$  [Control Method Selection = EZ Vector Control]. These two modes are available:

| T4-01 Setting | Operational overview  | Items input for tuning   | Items tuned   |
|---------------|---|--|---|
| 0             | Follow the instructions in the setup wizard on the keypad to manually enter the necessary motor parameters. | <ul style="list-style-type: none"> <li>T4-02 [Motor Type Selection]</li> <li>T4-03 [Motor Max Revolutions]</li> <li>T4-04 [Motor Rated Revolutions]</li> <li>T4-05 [Motor Rated Frequency] <sup>*/</sup></li> <li>T4-06 [Motor Rated Voltage]</li> <li>T4-07 [Motor Rated Current]</li> <li>T4-08 [Motor Rated Capacity]</li> <li>T4-09 [Number of Poles]</li> </ul> | <ul style="list-style-type: none"> <li>E9-01 [Motor Type Selection]</li> <li>E9-02 [Maximum Speed]</li> <li>E9-03 [Rated Speed]</li> <li>E9-04 [Base Frequency]</li> <li>E9-05 [Base Voltage]</li> <li>E9-06 [Motor Rated Current (FLA)]</li> <li>E9-07 [Motor Rated Power]</li> <li>E9-08 [Motor Pole Count]</li> <li>E9-09 [Motor Rated Slip]</li> <li>E9-10 [Motor Line-to-Line Resistance]</li> </ul> |
| 1             | Do only line-to-line resistance tuning.   | Motor Rated Current  | E9-10 [Motor Line-to-Line Resistance]   |

\*1 When you use a PM motor or a synchronous reluctance motor, it is not necessary to enter the rated frequency. The drive will use the rated rotation speed and number of motor poles to automatically calculate the rated frequency.

## ■ T4-01: EZ Tuning Mode Selection

| No. (Hex.)      | Name                     | Description  | Default (Range) |
|-----------------|--------------------------|--|-----------------|
| T4-01<br>(3130) | EZ Tuning Mode Selection | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input checked="" type="radio"/> EZOLV<br>Sets the type of Auto-Tuning for EZOLV control. | 0<br>(0, 1)     |

### 0 : Motor Parameter Setting

### 1 : Line-to-Line Resistance

## ■ T4-02: Motor Type Selection

| No. (Hex.)      | Name                 | Description  | Default (Range) |
|-----------------|----------------------|--|-----------------|
| T4-02<br>(3131) | Motor Type Selection | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input checked="" type="radio"/> EZOLV<br>Sets the type of motor. | 0<br>(0, 1, 2)  |

### 0 : Induction (IM)

### 1 : Permanent Magnet (PM)

### 2 : Synchronous Reluctance (SynRM)

## ■ T4-04: Motor Rated Revolutions

| No. (Hex.)      | Name                    | Description   | Default (Range)                         |
|-----------------|-------------------------|---|---|
| T4-04<br>(3133) | Motor Rated Revolutions | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input checked="" type="radio"/> EZOLV<br>Sets rated rotation speed (min <sup>-1</sup> ) of the motor. | -<br>((40 Hz to 120 Hz) × 60 × 2/E9-08) |

## ■ T4-05: Motor Rated Frequency

| No. (Hex.)      | Name                  | Description  | Default (Range)                                    |
|-----------------|-----------------------|--|--|
| T4-05<br>(3134) | Motor Rated Frequency | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input checked="" type="radio"/> EZOLV<br>Sets the rated frequency (Hz) of the motor. | Determined by E9-01 and o2-04<br>(40.0 - 120.0 Hz) |

#### Note:

When T4-02 = 1, 2 [Motor Type Selection = PM, SynRM], input is not necessary because it assumes: Motor Rated Revolutions/60 × Number of Motor Poles/2.

## ■ T4-06: Motor Rated Voltage

| No. (Hex.)      | Name                | Description   | Default (Range)  |
|-----------------|---------------------|---|--|
| T4-06<br>(3135) | Motor Rated Voltage | <input type="radio"/> V/f <input type="radio"/> OLV <input type="radio"/> OLV/PM <input type="radio"/> AOLV/PM <input checked="" type="radio"/> EZOLV<br>Sets the rated voltage (V) of the motor. | 200 V Class: 200.0 V, 400 V: 400.0 V<br>(200 V Class: 0.0 - 255.0 V, 400 V Class: 0.0 - 510.0 V) |

### ■ T4-07: Motor Rated Current

| No. (Hex.)      | Name                | Description   | Default (Range)  |
|-----------------|---------------------|---|--|
| T4-07<br>(3136) | Motor Rated Current | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the rated current (A) of the motor. | Determined by o2-04, C6-01<br>(10% to 200% of the drive rated current) |

**Note:**

The value set here becomes the base value for motor protection, the torque limit, and torque control.

### ■ T4-08: Motor Rated Capacity

| No. (Hex.)      | Name                 | Description   | Default (Range)                           |
|-----------------|----------------------|---|---|
| T4-08<br>(3137) | Motor Rated Capacity | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the motor rated power in the units set in o1-58 [Motor Power Unit Selection]. | Determined by E9-10<br>(0.10 - 650.00 kW) |

### ■ T4-09: Number of Poles

| No. (Hex.)      | Name            | Description  | Default (Range)                 |
|-----------------|-----------------|--|---------------------------------|
| T4-09<br>(3138) | Number of Poles | <div style="display: flex; justify-content: space-between; border-bottom: 1px solid black; margin-bottom: 5px;"> <span>V/f</span> <span>OLV</span> <span>OLV/PM</span> <span>AOLV/PM</span> <span style="background-color: #cccccc;">EZOLV</span> </div> Sets the number of motor poles. | Determined by E9-01<br>(2 - 48) |



# Index

## Symbols

## Numerics

24 V power supply

Power supply input terminals ..... 81

## A

AC reactor

Wiring ..... 96

Acceleration and deceleration times

Switching by external input ..... 524

Switching by output frequency ..... 525

Switching by Motor 2 Selection commands ..... 525

Acceleration time

Parameter ..... 524

Unit of measurement setting ..... 527

Adjustment of control functionality ..... 139

AER ..... 260

AFR

Parameter ..... 715

Alarm ..... 238, 260

Altitude

Derating ..... 327

Environment ..... 29

Ambient humidity ..... 29

Ambient Temperature Setting ..... 29

Derating ..... 326

Parameter ..... 709

Analog input

Function selection for terminals A1 and A2 ..... 645

Analog Output

Gain/Bias Adjustment ..... 656

Monitor Parameter Selection ..... 656

Signal Level Selection ..... 656

Terminal AM Monitor Selection ..... 657

Application Preset ..... 465

Operation ..... 129

ASR

Fine tuning ..... 537

Parameter ..... 535

Vector Control Adjustment Procedure ..... 536

Auto-Tuning ..... 130, 133

ASR and Inertia Tuning Parameters ..... 758

Induction Motor ..... 130

Induction Motor Parameters ..... 753

PM Motor Parameters ..... 756

PM motors ..... 131

Precautions ..... 134

Rotational Auto-Tuning Precautions ..... 135

Stationary Auto-Tuning for Line-to-Line Resistance

precautions ..... 135

Stationary Auto-Tuning Precautions ..... 135

Stator resistance Auto-Tuning precautions ..... 135

Auto-Tuning Error ..... 238, 275

## B

Backup

Parameters (drive to keypad) ..... 126

Backup function ..... 743

Base frequency

Parameter ..... 566

Base Frequency

Motor 2 Parameters ..... 571

Base voltage

Motor 2 parameters ..... 572

Parameter ..... 567

Basic operation

Get started ..... 118

bAT

Fault ..... 244

Minor Fault ..... 260

bb ..... 260

bCE

Fault ..... 244

Minor Fault ..... 260

Bi-Directional function ..... 556

boL

Fault ..... 244

Minor Fault ..... 260

Braking Resistor

Protection Functions ..... 707

Wiring ..... 91

bUS

Detection condition settings ..... 592

Detection conditions ..... 589

Fault ..... 244

Minor Fault ..... 260

Operation Selection after Detection ..... 588

bUSy ..... 261

## C

CALL ..... 261

Capacitor Maintenance Setting ..... 746

Carrier frequency ..... 541

Derating ..... 324

Parameter ..... 540

CE

Detection Selection ..... 659

Detection time ..... 660

Fault ..... 244

Minor Fault ..... 261

Operation Selection after Detection ..... 659

CF ..... 245

Checklist

Test run ..... 144

Circulation Fan

Replacement ..... 296

CoF ..... 245

Communication option

Parameter ..... 582

Control circuit terminal block

Replacement ..... 301

Control circuit terminals

Configuration of terminal block ..... 82

I/O terminals function selection switches ..... 84

Terminal functions ..... 79

Wire gauge ..... 82

Wiring ..... 78

Wiring procedure for terminal block ..... 83

Control method

Selection ..... 462

Cooling Fan

Activation Conditions Setting ..... 709

Estimated Lifespan ..... 294

Off Delay Timer ..... 709

Replacement ..... 296

Copy Function Error ..... 238, 279

CP1

Fault ..... 245

Minor Fault ..... 261

CP2

Fault ..... 245

Minor Fault ..... 262

CPEr ..... 279

|  |          |
|--|----------|
| CPF00                                      | 246      |
| CPF01                                      | 246      |
| CPF02                                      | 246      |
| CPF03                                      | 246      |
| CPF06                                      | 246      |
| CPF08                                      | 246      |
| CPF11 to CPF14                             | 246      |
| CPF16 to CPF24                             | 246      |
| CPF25                                      | 246      |
| CPF38                                      | 246      |
| CPyE                                       | 279      |
| Crimp ferrule                              | 82       |
| CrST                                       | 262      |
| CSEr                                       | 279      |
| Cumulative Operation TimeSetting           | 745      |
| Current Detection Speed Search             | 494      |
| CyC  | 262      |
| CyPo                                       | 262      |
| <b>D</b>                                   |          |
| DC Injection Braking                       |          |
| Parameter                                  | 490      |
| DC reactor                                 |          |
| Wiring                                     | 96       |
| dCE1                                       | 246      |
| dCE2                                       | 246      |
| Deceleration time                          |          |
| Parameter                                  | 524      |
| Unit of measurement setting                | 527      |
| Delete                                     |          |
| Delete Backed-up Parameters                | 128      |
| Derating                                   |          |
| Altitude                                   | 327      |
| Ambient Temperature Setting                | 326, 709 |
| Carrier frequency                          | 324      |
| Enclosure Type                             | 711      |
| External Cooling Fin                       | 711      |
| Side-by-side                               | 711      |
| dEv  |          |
| Detection level                            | 582      |
| Detection time                             | 582      |
| Fault                                      | 246      |
| Minor Fault                                | 262      |
| Operation Selection after Detection        | 581      |
| dFPS                                       | 279      |
| Diagnosing and Resetting Faults            | 281      |
| Digital character                          | 124      |
| DIP switch                                 | 84       |
| Disposal                                   |          |
| Drive                                      | 309–310  |
| Packing material                           | 309–310  |
| dnE  | 262      |
| Down 2 command                             |          |
| Parameter                                  | 552, 556 |
| Down command                               | 610–611  |
| Parameter                                  | 552, 556 |
| Drive                                      |          |
| Control Circuit Terminal Block Replacement | 301      |
| Disposal                                   | 309–310  |
| Exterior Dimension Diagram (IP20)          | 328–329  |
| Exterior Dimensions Diagram (IP20)         | 331      |
| Initialization                             | 463      |
| Initialize Parameters                      | 463      |
| Inspection                                 | 292      |
| Long-Term Storage                          | 305      |
| Rating (400 V)                             | 319      |
| Rating (Single-phase 200 V)                | 314      |
| Rating (Three-phase 200 V)                 | 315      |

|  |           |
|--|-----------|
| Drive mode                               | 114       |
| Drive Mode Unit Monitor Select           | 734       |
| Drive Model Selection                    | 741       |
| Drive watt loss                          | 34–37, 39 |
| dv7                                      | 246       |
| dWA2                                     | 262       |
| dWA3                                     | 262       |
| dWAL                                     | 262       |
| Dwell function                           |           |
| Parameter                                | 519       |
| dWF1                                     | 247       |
| dWF2                                     | 247       |
| dWF3                                     | 247       |
| dWFL                                     | 247       |
| <b>E</b>                                 |           |
| E5                                       |           |
| Fault                                    | 247       |
| Minor Fault                              | 262       |
| Operation Selection after Detection      | 592       |
| EF                                       | 263       |
| EF0                                      |           |
| Detection conditions                     | 588       |
| Detection conditions setting (DeviceNet) | 594       |
| Fault                                    | 247       |
| Minor Fault                              | 263       |
| Operation Selection after Detection      | 589       |
| EF1                                      |           |
| Fault                                    | 247       |
| Minor Fault                              | 263       |
| EF2                                      |           |
| Fault                                    | 247       |
| Minor Fault                              | 263       |
| EF3                                      |           |
| Fault                                    | 248       |
| Minor Fault                              | 263       |
| EF4                                      |           |
| Fault                                    | 248       |
| Minor Fault                              | 263       |
| EF5                                      |           |
| Fault                                    | 248       |
| Minor Fault                              | 263       |
| EF6                                      |           |
| Fault                                    | 248       |
| Minor Fault                              | 264       |
| EF7                                      |           |
| Fault                                    | 248       |
| Minor Fault                              | 264       |
| Elapsed Operating Time Selection         | 745       |
| Electrolytic Capacitor                   |           |
| Estimated Lifespan                       | 294       |
| Enclosure Type                           |           |
| Derating                                 | 711       |
| Encoder option                           |           |
| Parameter                                | 580       |
| End1                                     | 275       |
| End2                                     | 275       |
| End3                                     | 275       |
| End4                                     | 275       |
| End5                                     | 275       |
| End6                                     | 275       |
| End7                                     | 275       |
| End8                                     | 276       |
| End9                                     | 276       |
| Energy-saving control                    |           |
| Parameter                                | 520       |
| Enter command                            | 215       |
| EP24v                                    | 264       |

|                                    |          |                                       |               |
|------------------------------------|----------|---------------------------------------|---------------|
| Er-01                              | 276      | Switching between LOCAL/REMOTE        | 480, 487, 544 |
| Er-02                              | 276      | Upper and lower frequency limits      | 550           |
| Er-03                              | 276      | Frequency reference bias              |               |
| Er-04                              | 277      | Parameter                             | 552, 556      |
| Er-05                              | 277      | Frequency reference hold function     |               |
| Er-08                              | 277      | Parameter                             | 552, 556      |
| Er-09                              | 277      | Fuse rating                           | 100           |
| Er-10                              | 277      | <b>G</b>                              |               |
| Er-11                              | 277      | Gateway Mode                          | 583           |
| Er-12                              | 278      | Getting set up                        | 118           |
| Er-13                              | 278      | GF                                    | 249           |
| Er-14                              | 278      | Protection Functions                  | 709           |
| Er-15                              | 278      | Ground                                |               |
| Er-16                              | 278      | Drive                                 | 70            |
| Er-17                              | 278      | Ground Fault Detection                |               |
| Er-18                              | 278      | Protection Functions                  | 709           |
| Er-19                              | 278      | <b>H</b>                              |               |
| Er-20                              | 278      | HCA                                   | 264           |
| Er-25                              | 278      | Alarm Settings                        | 712           |
| ERF type braking resistor          |          | HD                                    | 313           |
| Protection Functions               | 707      | Heavy Duty Rating                     | 313           |
| Wiring                             | 91       | High-Slip Braking                     |               |
| Err                                | 248      | Parameter                             | 716           |
| Error Code List                    | 239      | Horsepower                            | 739           |
| Exterior and mounting dimensions   |          | How to read the model number          | 21            |
| Installation dimensions            | 45       | Humidity                              |               |
| Panel cut out dimensions           | 45       | Environment                           | 29            |
| Exterior Dimension Diagram (IP20)  |          | <b>I</b>                              |               |
| Drive                              | 328–329  | iFEr                                  | 279           |
| Exterior Dimensions Diagram (IP20) |          | IGBT Maintenance Setting              | 746           |
| Drive                              | 331      | Induction Motor                       |               |
| External 24 V power supply         |          | Auto-Tuning                           | 130           |
| Power supply input terminals       | 81       | Motor parameters                      | 568           |
| External Cooling Fin               |          | Input Phase Detection                 |               |
| Derating                           | 711      | Protection Functions                  | 708           |
| <b>F</b>                           |          | Input voltage                         |               |
| Fan Operation Time Setting         | 746      | Parameter                             | 561           |
| Fast Stop Time                     |          | Inspection                            |               |
| Parameter                          | 527      | Drive                                 | 292           |
| Fault                              | 238, 244 | Installation                          |               |
| Fault code                         |          | Front cover                           | 41            |
| MEMOBUS/Modbus                     | 230      | Keypad                                | 43            |
| Fault Code List                    | 239      | Installation dimensions               | 45            |
| Fault Reset                        | 281      | Installation environment              | 29            |
| Fault Restart                      |          | Interlock                             |               |
| Parameter                          | 696      | Circuit example                       | 90            |
| FbH                                |          | Internal Drive Braking Transistor     |               |
| Fault                              | 248      | Protection Functions                  | 712           |
| Minor Fault                        | 264      | <b>J</b>                              |               |
| FbL                                |          | Jog command                           | 549           |
| Fault                              | 249      | Jump frequency                        |               |
| Minor Fault                        | 264      | Parameter                             | 550           |
| Feed Forward Control               |          | Jumper switch                         | 84            |
| Parameter                          | 719      | <b>K</b>                              |               |
| Field Forcing                      |          | KEB ride-thru function                |               |
| Parameter                          | 558      | Compensation Time                     | 681           |
| Field weakening                    |          | Operation during momentary power loss | 680           |
| Parameter                          | 558      | Parameter                             | 675           |
| Fine tuning                        | 139      | KEB Ride-Thru Function                |               |
| Firmware update lock               | 478      | KEB Method Selection                  | 684           |
| Freq Ref Setting Method Select     | 742      | Single Drive KEB Method               | 684           |
| Frequency Agreement                |          | System KEB Method                     | 684           |
| Parameter                          | 694      | Keypad                                |               |
| Frequency reference                |          | Application Preset                    | 129           |
| Command source correlation diagram | 544      | Installation                          | 43            |
| LOCAL/REMOTE Run selection         | 480, 544 |                                       |               |
| Offset frequency addition          | 558      |                                       |               |

|   |     |   |          |
|---|-----|---|----------|
| Language selection .....                  | 461 | Setting for termination resistor .....                  | 88       |
| LED status .....                          | 109 | Mid point B frequency .....                             |          |
| Method of operation .....                 | 109 | Motor 2 parameters .....                                | 572      |
| Remove .....                              | 43  | Parameter .....   | 567      |
| Keypad Display .....                      | 733 | Mid point B voltage .....                               |          |
| Keypad Display Selection .....            | 734 | Motor 2 parameters .....                                | 572      |
| Keypad Operation .....                    | 740 | Parameter .....   | 567      |
| Keypad-related settings .....             | 733 | Middle Output Frequency .....                           |          |
| kWh Monitor Initialization .....          | 747 | Motor 2 Parameters .....                                | 571      |
| <b>L</b>                                  |     | Parameter .....   | 566      |
| L24v .....                                | 265 | Middle Output Frequency Voltage .....                   |          |
| Language selection .....                  | 461 | Motor 2 Parameters .....                                | 571      |
| LCD contrast adjustment .....             | 735 | Parameter .....   | 567      |
| Leakage current .....                     | 675 | Minimum output frequency .....                          |          |
| LED display .....                         | 124 | Parameter .....   | 567      |
| LF .....                                  | 249 | Minimum Output Frequency .....                          |          |
| Protective function .....                 | 708 | Motor 2 Parameters .....                                | 571      |
| LF2 .....                                 | 249 | Minimum Output Voltage .....                            |          |
| Protection Functions .....                | 711 | Motor 2 Parameters .....                                | 572      |
| LKEB type braking resistor unit .....     |     | Parameter .....   | 567      |
| Wiring .....                              | 91  | Minor Fault .....                                       | 238, 260 |
| Load Inertia Ratio .....                  |     | Minor fault code .....                                  |          |
| Parameter .....                           | 692 | MEMOBUS/Modbus .....                                    | 232      |
| LOCAL/REMOTE indicator .....              | 109 | Minor Fault Code List .....                             | 239      |
| LoG .....                                 | 265 | Modbus .....  |          |
| LO/RE Key Function Selection .....        | 740 | Broadcast Messages .....                                | 230      |
| LSo .....                                 | 250 | Command data .....                                      | 217      |
| Protective function .....                 | 713 | Communication error code .....                          | 232      |
| LT-1 .....                                | 265 | Communication specifications .....                      | 206      |
| LT-2 .....                                | 265 | Enter command .....                                     | 215      |
| LT-3 .....                                | 265 | Fault code .....  | 230      |
| LT-4 .....                                | 265 | Loopback test .....                                     | 212      |
| <b>M</b>                                  |     | Minor fault code .....                                  | 232      |
| Main circuit terminals .....              |     | Monitor data .....                                      | 219      |
| Configuration of terminal block .....     | 53  | Register reading .....                                  | 211      |
| Line voltage drop .....                   | 62  | Register writing .....                                  | 212      |
| Wire gauge .....                          | 62  | Self-diagnosis .....                                    | 216      |
| Wiring .....                              | 53  | Wiring .....  | 206      |
| Wiring procedure for terminal block ..... | 74  | Molded-case circuit breaker .....                       | 93       |
| Maintenance Period .....                  | 745 | Momentary Power Loss .....                              |          |
| Maximum Output Frequency .....            |     | KEB Compensation Time .....                             | 681      |
| Motor 2 Parameters .....                  | 571 | Monitors .....  |          |
| Parameter .....                           | 566 | Display procedure .....                                 | 124      |
| Maximum Output Voltage .....              |     | Motor .....   |          |
| Motor 2 Parameters .....                  | 571 | Positive Temperature Coefficient (PTC) Thermistor ..... | 669      |
| Parameter .....                           | 566 | Wiring .....  | 53       |
| MCCB .....                                | 93  | Wiring distance .....                                   | 70       |
| Mechanical Weakening Detection .....      |     | Motor 2 .....   |          |
| Parameter .....                           | 700 | Base Frequency .....                                    | 571      |
| MEMOBUS .....                             |     | Base voltage .....                                      | 572      |
| Broadcast Messages .....                  | 230 | Control mode settings .....                             | 571      |
| Command data .....                        | 217 | Leakage Inductance .....                                | 574      |
| Communication error code .....            | 232 | Line-to-Line Resistance .....                           | 573      |
| Communication specifications .....        | 206 | Maximum Output Frequency .....                          | 571      |
| Enter command .....                       | 215 | Maximum Output Voltage .....                            | 571      |
| Fault code .....                          | 230 | Mid point B frequency .....                             | 572      |
| Loopback test .....                       | 212 | Mid point B voltage .....                               | 572      |
| Minor fault code .....                    | 232 | Middle Output Frequency .....                           | 571      |
| Monitor data .....                        | 219 | Middle Output Frequency Voltage .....                   | 571      |
| Register reading .....                    | 211 | Minimum Output Frequency .....                          | 571      |
| Register writing .....                    | 212 | Minimum Output Voltage .....                            | 572      |
| Self-diagnosis .....                      | 216 | Motor Iron Loss .....                                   | 574      |
| Wiring .....                              | 206 | Motor Iron-Core Saturation Coefficient 1 .....          | 574      |
| MEMOBUS/Modbus Communications .....       |     | Motor Iron-Core Saturation Coefficient 2 .....          | 574      |
| Parameter .....                           | 658 | Motor rated power (kW) .....                            | 574      |
| Serial communication terminals .....      | 81  | No-load Current .....                                   | 573      |
|   |     | Number of motor poles .....                             | 573      |

|  |          |  |          |
|--|----------|--|----------|
| Rated current .....                                  | 572      | Fault .....  | 252      |
| Rated Slip .....                                     | 573      | Minor Fault .....                                    | 265      |
| V/f Pattern .....                                    | 570      | oH1 .....  | 252      |
| Motor Code Selection .....                           | 575      | oH2 .....  | 266      |
| Motor Overheating                                    |          | Alarm Settings .....                                 | 707      |
| Operation During Detection of Alarms .....           | 192, 673 | oH3  |          |
| Operation During Detection of Faults (PTC Input) ... | 193, 674 | Fault .....  | 252      |
| Motor Overload                                       |          | Minor Fault .....                                    | 266      |
| Electric Thermal Protection Operation Time .....     | 192, 673 | Operation During Detection of Alarms .....           | 192, 673 |
| Protection Functions .....                           | 189, 670 | oH4 .....  | 253      |
| Motor parameters .....                               | 568      | Operation During Detection of Faults (PTC Input) ... | 193, 674 |
| Motor 2 .....  | 572      | oL1 .....  | 253      |
| Motor 2 Iron-Core Saturation Coefficient 1 .....     | 574      | oL2 .....  | 254      |
| Motor 2 Iron-Core Saturation Coefficient 2 .....     | 574      | Protective function .....                            | 710      |
| Motor 2 number of motor poles .....                  | 573      | oL3  |          |
| Motor 2 rated power (kW) .....                       | 574      | Fault .....  | 254      |
| Motor Parameters .....                               | 560      | Minor Fault .....                                    | 266      |
| Motor 2 Iron Loss .....                              | 574      | oL4  |          |
| Motor 2 Leakage Inductance .....                     | 574      | Fault .....  | 255      |
| Motor 2 Line-to-Line Resistance .....                | 573      | Minor Fault .....                                    | 266      |
| Motor 2 No-load Current .....                        | 573      | oL5  |          |
| Motor 2 rated Current .....                          | 572      | Fault .....  | 255      |
| Motor 2 Rated Slip .....                             | 573      | Minor Fault .....                                    | 266      |
| Motor parameters (induction motors) .....            | 568      | oL7 .....  | 255      |
| Leakage Inductance .....                             | 569      | On-Delay Timer .....                                 | 501      |
| Line-to-Line Resistance .....                        | 569      | Ope Select @Keypad is Disconnect .....               | 742      |
| Motor Iron Loss .....                                | 570      | oPE01 .....  | 270      |
| Motor Iron-Core Saturation Coefficient 1 .....       | 569      | oPE02 .....  | 270      |
| Motor Iron-Core Saturation Coefficient 2 .....       | 569      | oPE03 .....  | 270      |
| Motor rated power (kW) .....                         | 570      | oPE05 .....  | 271      |
| No-load Current .....                                | 568      | oPE07 .....  | 272      |
| Number of motor poles .....                          | 569      | oPE08 .....  | 272      |
| Rated current .....                                  | 188, 568 | oPE09 .....  | 273      |
| Rated Slip .....                                     | 568      | oPE10 .....  | 273      |
| Motor Power Unit Selection .....                     | 739      | oPE11 .....  | 273      |
| MotorDirect@PowUpWhenUsingKeypad .....               | 742      | oPE13 .....  | 273      |
| Multi-step speed operation .....                     | 544      | oPE16 .....  | 273      |
| Setting procedure .....                              | 544      | oPE33 .....  | 274      |
| Multiple-unit connection .....                       | 583      | Operation During Momentary Power Loss                |          |
| <b>N</b>   |          | KEB ride-thru function .....                         | 675      |
| Nameplate .....                                      | 21       | Operation method selection .....                     | 680      |
| ND .....   | 313      | Parameter .....                                      | 680      |
| ndAT .....   | 279      | Speed Search function .....                          | 493      |
| No-Load Voltage                                      |          | oPr .....  | 255      |
| Parameter .....                                      | 568      | Option card  |          |
| Noise filter   |          | Parameter .....                                      | 580      |
| Wiring .....   | 98       | Options .....  | 333      |
| Normal Duty Rating .....                             | 313      | oS   |          |
| nSE .....  | 250      | Detection level .....                                | 581      |
| NumOfRunCommands Counter Initial .....               | 747      | Detection time .....                                 | 582      |
| <b>O</b>   |          | Fault .....  | 255      |
| oC .....   | 250      | Minor Fault .....                                    | 267      |
| Overcurrent Detection Gain .....                     | 710      | Operation Select at Overspeed .....                  | 580      |
| oC2 .....  | 251      | Output Control .....                                 | 731      |
| oFA00 .....  | 251      | Output Phase Loss Detection                          |          |
| oFA01 .....  | 251      | Protective function .....                            | 708      |
| oFA03 to oFA06 .....                                 | 251      | ov   |          |
| oFA10 .....  | 252      | Fault .....  | 255      |
| oFA11 .....  | 252      | Minor Fault .....                                    | 267      |
| oFA12 to oFA17 .....                                 | 252      | ovEr .....   | 267      |
| oFA30 to oFA43 .....                                 | 252      | Overexcitation deceleration                          |          |
| Off-Delay Timer .....                                | 501      | Parameter .....                                      | 717      |
| Offset frequency                                     |          | Overtorque detection                                 |          |
| Parameter .....                                      | 558      | Parameter .....                                      | 699      |
| oH   |          | <b>P</b>   |          |
| Alarm Settings .....                                 | 707      | Panel cut out dimensions .....                       | 45       |
|  |          | Parameter  |          |

|   |           |  |          |
|---|-----------|--|----------|
| Access Level Selection .....                            | 461       | oC .....   | 710      |
| Automatic selection .....                               | 478       | oH .....   | 707      |
| Backup (drive to keypad).....                           | 126       | oH2 .....  | 707      |
| Changing setting values.....                            | 125       | oH3 .....  | 192, 673 |
| Checking modified parameters .....                      | 124       | oH4 .....  | 193, 674 |
| Delete Backed-up Parameters.....                        | 128       | Output Current Overload .....                          | 712      |
| Restore (keypad to drive).....                          | 127       | Overcurrent.....                                       | 710      |
| Setup mode .....  | 125       | PF .....   | 708      |
| User-set .....  | 478       | rr .....   | 712      |
| Verify (keypad and drive) .....                         | 127       | Software Current Limit Selection .....                 | 710      |
| Parameter Change .....                                  | 743       | Uv1 .....  | 682      |
| Parameter Setting Errors .....                          | 238, 270  | Protective function .....                              |          |
| PASS .....  | 267       | Desynchronization.....                                 | 713      |
| Password .....  |           | LF .....   | 708      |
| Setting.....  | 464       | Low Speed Desynchronization .....                      | 713      |
| Verification .....                                      | 464       | LSo .....  | 713      |
| PC .....  |           | oL2.....   | 710      |
| Connection procedure.....                               | 89        | Output Phase Loss Detection .....                      | 708      |
| PE1 .....   | 256       | Overload .....   | 710      |
| PE2 .....   | 256       | Pulse Train Input .....                                |          |
| Peripheral Devices .....                                | 333       | Terminal RP Function Selection.....                    | 663      |
| PF .....  | 256, 267  | Pulse Train Input/Output .....                         |          |
| Protection Functions .....                              | 708       | Parameter .....  | 662      |
| PGo .....   |           | Pulse train output .....                               |          |
| Detection time.....                                     | 582       | Terminal MP function selection .....                   | 664      |
| Fault .....   | 257       | Wiring specifications.....                             | 86       |
| Minor Fault.....  | 268       | PWEr.....  | 279      |
| Operation Selection after Detection.....                | 580       | <b>R</b> .....   |          |
| Phase Order Selection .....                             | 487       | Rating (400 V) .....                                   |          |
| PID control .....                                       | 502       | Drive.....   | 319      |
| control block diagram.....                              | 505       | Rating (Single-phase 200 V) .....                      |          |
| Feedback value input.....                               | 504       | Drive.....   | 314      |
| fine tuning .....                                       | 506       | Rating (Three-phase 200 V) .....                       |          |
| Parameter .....   | 508       | Drive.....   | 315      |
| PID feedback loss detection.....                        | 505       | rdEr.....  | 279      |
| PID Sleep .....   | 506       | Remove .....   |          |
| Setpoint input .....                                    | 503       | Front cover .....                                      | 41       |
| PM motor parameters.....                                | 575       | Keypad .....   | 43       |
| d-Axis inductance .....                                 | 576       | RESET key .....  | 109      |
| Induced voltage constant 1 .....                        | 576       | Residual Current Monitor/Residual Current Device ..... |          |
| Induced voltage constant 2 .....                        | 577       | RCM/RCD.....   | 93       |
| Motor rated current.....                                | 189, 575  | Wiring.....  | 93       |
| Motor rated power (kW).....                             | 575       | Restore .....  |          |
| Number of motor poles .....                             | 576       | Parameters (keypad to drive).....                      | 127      |
| q-Axis inductance .....                                 | 576       | Reverse Operation Selection .....                      | 485      |
| Stator resistance.....                                  | 576       | rF .....   | 257      |
| PM motors .....   |           | rH .....   | 257      |
| Auto-Tuning.....  | 131       | RJ-45 connector .....                                  | 109      |
| PM Motors .....   |           | Rotational Auto-Tuning .....                           |          |
| Fine Adjustment .....                                   | 724, 732  | Induction Motor.....                                   | 130      |
| Motor Code Selection.....                               | 575       | PM motors .....  | 131      |
| Motor parameters.....                                   | 575       | Precautions .....                                      | 135      |
| Positive Temperature Coefficient (PTC) Thermistor ..... | 669       | rr .....   | 257      |
| Power loss .....  | 34–37, 39 | Protection Functions .....                             | 712      |
| Programming mode .....                                  | 114       | rUn .....  | 268      |
| Protection Functions .....                              |           | Run command .....                                      |          |
| DC bus undervoltage .....                               | 682       | LOCAL/REMOTE Run selection .....                       | 482      |
| Drive Overheating.....                                  | 707       | Switching between LOCAL/REMOTE.....                    | 482      |
| GF.....   | 709       | Run Command at Power Up .....                          | 490      |
| Ground Fault Detection.....                             | 709       | Run Command Selection 2 .....                          |          |
| HCA .....   | 712       | Switching between LOCAL/REMOTE.....                    | 489      |
| Input Phase Detection .....                             | 708       | RUN indicator .....                                    | 109      |
| Internal Drive Braking Transistor .....                 | 712       | RUN key.....   | 109      |
| LF2 .....   | 711       | <b>S</b> .....   |          |
| Motor Overheating .....                                 | 192, 673  | S-curve characteristics .....                          |          |
| Motor Overheating (PTC Input).....                      | 193, 674  | Parameter .....  | 529      |
| Motor Overload.....                                     | 189, 670  |  |          |

|  |         |                                       |          |
|--|---------|---------------------------------------|----------|
| SC   | 257     | TiM                                   |          |
| SCF  | 258     | Fault                                 | 258      |
| Screen   | 124     | Minor Fault                           | 268      |
| SE   | 268     | Timer function                        |          |
| SEr  | 258     | Parameter                             | 501      |
| Serial communication terminals                     |         | Torque Compensation                   |          |
| MEMOBUS/Modbus Communications                      | 81      | Parameter                             | 534      |
| Short Circuit Braking                              |         | Torque limit function                 |          |
| Parameter  | 490     | Parameter                             | 704      |
| Side-by-side                                       |         | Troubleshooting                       |          |
| Derating   | 711     | Code Displayed                        | 239      |
| Slip compensation                                  |         | No Code Displayed                     | 282      |
| Parameter  | 530     | Troubleshooting without Fault Display | 282      |
| Softcharge Relay Maintenance Set                   | 746     | TrPC                                  | 268      |
| Software Current Limit Selection                   |         | Tuning                                | 524      |
| Protection Functions                               | 710     | <b>U</b>                              |          |
| Speed Agreement                                    |         | U2, U3 Initialization                 | 746      |
| Parameter  | 694     | UL3                                   |          |
| Speed Detection                                    | 696     | Fault                                 | 258      |
| Parameter  | 694     | Minor Fault                           | 268      |
| Speed Estimation Speed Search                      | 494     | UL4                                   |          |
| Speed Search function                              |         | Fault                                 | 258      |
| Operation during momentary power loss              | 680     | Minor Fault                           | 268      |
| Parameter  | 493     | UL5                                   |          |
| Stall Prevention function                          |         | Fault                                 | 259      |
| Parameter  | 685     | Minor Fault                           | 268      |
| Stationary Auto-Tuning                             |         | Undertorque detection                 |          |
| Induction Motor                                    | 130     | Parameter                             | 699      |
| PM motors  | 131     | Unit of measurement setting           |          |
| Precautions  | 135     | Acceleration and deceleration times   | 527      |
| Stationary Auto-Tuning for Line-to-Line Resistance | 130     | Unit selector                         | 739      |
| Precautions  | 135     | Up 2 command                          |          |
| Stator resistance Auto-Tuning                      | 131     | Parameter                             | 552, 556 |
| Precautions  | 135     | Up command                            | 610–611  |
| SToF   | 268     | Parameter                             | 552, 556 |
| Stop command                                       |         | USB port                              | 109      |
| LOCAL/REMOTE Run selection                         | 482     | Connecting a PC                       | 89       |
| STOP key   | 109     | User Monitor Select afterPowerUp      | 734      |
| STOP Key Function Selection                        | 740     | User Parameter Default Value          | 741      |
| Stop with Constant Distance                        | 556–557 | User-Set Display Units Max Value      | 735      |
| Stopping Method Selection                          | 482     | User-SetDisplayUnits Dec Display      | 736      |
| STPo   | 258     | Uv                                    | 269, 743 |
| Surge protective device                            |         | Speed Search Selection at Start       | 500      |
| Connection   | 97      | Uv1                                   | 259      |
| <b>T</b>   |         | Detection level settings              | 682      |
| Temperature  |         | Uv2                                   | 259      |
| Environment  | 29      | Uv3                                   | 259      |
| Terminal block                                     | 82      | <b>V</b>                              |          |
| Configuration of main circuit terminal block       | 53      | vAEr                                  | 280      |
| Control circuit terminal block functions           | 79      | V/f Pattern                           | 560      |
| I/O terminals function selection switches          | 84      | Second Motor                          | 570      |
| Terminal function selection                        | 87      | V/f Pattern Display Unit              | 735      |
| Terminal A2  | 84, 87  | Verify                                |          |
| Terminal AM  | 84, 88  | Parameters (keypad and drive)         | 127      |
| Termination resistor                               |         | vFyE                                  | 280      |
| Setting switch                                     | 88      | Vibration-resistant                   | 29       |
| Test run   |         | Voltage Limit                         | 731      |
| Checklist  | 144     | Voltage Saturation                    | 731      |
| Fine tuning  | 139     | <b>W</b>                              |          |
| Procedure  | 118     | WEEE                                  | 310      |
| Procedure for no-load test run                     | 137     | Wire gauge                            |          |
| Procedure for test run with actual load            | 137     | Control circuit terminals             | 82       |
| Thermal overload relay                             |         | Main circuit terminals                | 62       |
| Connection   | 94      | Voltage drop                          | 62       |
| Tightening torque                                  |         | Wiring                                | 93       |
| Control circuit terminals                          | 82      | AC reactor                            | 96       |
| Main circuit terminals                             | 62      |                                       |          |

---

|                                      |     |
|--------------------------------------|-----|
| Braking Resistor .....               | 91  |
| Checklist .....                      | 102 |
| Control circuit terminal block ..... | 83  |
| Control circuit terminals .....      | 78  |
| DC reactor .....                     | 96  |
| Main circuit terminal block .....    | 74  |
| Main circuit terminals .....         | 53  |
| MEMOBUS/Modbus .....                 | 206 |
| Motor .....                          | 53  |
| Noise filter .....                   | 98  |
| Thermal overload relay .....         | 94  |
| Wiring distance                      |     |
| Drive and motor .....                | 70  |
| <b>Z</b>                             |     |
| Z pulse Auto-Tuning .....            | 131 |



---

## Revision History

| Date of Publication | Revision Number | Section | Revised Content  |
|---------------------|-----------------|---------|--|
| December 2019       | 1               | All     | Revision: Reviewed and corrected entire documentation.<br>Addition: CIPR-GA50x2008 and 2018 added along with corresponding data. |
|                     |                 | 2       | Addition: "Install the Drive Horizontally"   |
| March 2019          | -               | -       | First Edition  |

# GA500

## Technical Manual

**YASKAWA EUROPE GmbH**

Hauptstr. 185, 65760 Eschborn,  
Germany  
Phone: +49-6196-569-300  
E-mail: [support@yaskawa.eu.com](mailto:support@yaskawa.eu.com)  
<http://www.yaskawa.eu.com>

**YASKAWA AMERICA, INC.**

2121, Norman Drive South, Waukegan,  
IL 60085, U.S.A.  
+1-800-YASKAWA (927-5292)  
<http://www.yaskawa.com>

**DRIVE CENTER (INVERTER PLANT)**

2-13-1, Nishimiyaichi, Yukuhashi,  
Fukuoka, 824-8511, Japan  
Phone: +81-930-25-2548  
<https://www.yaskawa.co.jp>

 
In the event that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply.

Specifications are subject to change without notice for ongoing product modifications and improvements.

Original Instructions

© 2019 YASKAWA Electric Corporation

YASKAWA ELECTRIC CORPORATION



\*SIEPC71061753\*

SIEPC71061753  
Revision: B <1>-0  
December 2019  
Published in Japan  
19-5-9\_YEU

# YASKAWA

When performing motor auto tuning with this GA500 drive the multi-function outputs perform differently than stated in Section 3 of the Technical Manual, Precautions for Auto Tuning.

| Auto Tuning Type            | Mode       |   | Digital Input | Digital Output (as described in Technical Manual) | Digital Input (actual)  | Digital Output (actual)  |
|-----------------------------|------------|---|---------------|---|---|--|
| Induction Motor Auto-Tuning | Rotational | Rotational Auto-Tuning                          | Disabled      | Functions the same as during usual operation      | Digital inputs react as in normal operation if one of the parameter setting conditions listed below becomes true:<br><br>1. H1-21 to H1-28 are not set to F<br>2. H1-40 to H1-42 are not set to F<br>3. H3-40 to H3-42 are not set to F<br>4. H7-01 to H7-04 are not set to F and H7-00 = 1<br>5. H7-30 is not set to F<br><br>In all other case digital inputs are disabled. | Functions the same as during usual operation.  |
|                             | Stationary | Stationary Auto-Tuning                          | Disabled      | Keeps the status at the start of Auto-Tuning      |   | See below under <*>  |
|                             |            | Line-to-Line Resistance                         | Disabled      | Keeps the status at the start of Auto-Tuning      |   |  |
| PM Motor Auto-Tuning        | Rotational | PM Motor Code Selection                         | Disabled      | Functions the same as during usual operation      |   | Functions the same as during usual operation.  |
|                             | Stationary | Manual Entry w/ Motor Data Sheet                | Disabled      | Disabled  |   | <*><br>Digital outputs react as in normal operation if one of the parameter setting conditions listed below becomes true:<br><br>1. H2-01 to H2-04 are not set to F<br>2. H2-40 to H2-42 are not set to F<br>3. H2-60/63/66 are not set to F<br>4. H7-10/12/14/16 are not set to F and H7-00 = 1<br>5. F5-01 to F5-08 are not set to F and F5-09 = 2<br><br>In all other cases digital outputs keep the state that was present at the start of Auto - Tuning |
|                             |            | PM Stationary Auto-Tuning                       | Disabled      | Keeps the status at the start of Auto-Tuning.     |   |  |
|                             |            | PM Stationary Auto-Tuning for Stator Resistance | Disabled      | Keeps the status at the start of Auto-Tuning      |   |  |
| High Frequency Injection    | Disabled   | Keeps the status at the start of Auto-Tuning    |               |   |   |  |
| EZ Tuning                   | Stationary | Motor Parameter Setting                         | Disabled      | Disabled  |   |  |
|                             |            | Line-to-Line Resistance                         | Disabled      | Keeps the status at the start of Auto-Tuning      |   |  |
| ASR and Inertia Tuning      | Rotational | Deceleration Rate Tuning                        | Disabled      | Functions the same as during usual operation      |   |  |
|                             |            | KEB Tuning                                      | Disabled      | Functions the same as during usual operation      |   |  |

### IMPORTANT!

Before performing Auto-Tuning make sure, the actual behavior of the digital inputs/outputs as shown above does not lead to any malfunction or potentially dangerous or unsafe machine condition. In doubt disable the digital inputs/outputs or disconnect wires to digital inputs/outputs of the drive prior to performing Auto-Tuning.